

Lenovo ThinkCentre M70q and M80q Setup Manual


Think Centre M70q, M80q


Contents

1 Setup Guide
2 Initial Setup
3 Overview
4 Customer Replaceable Units (CRUs)
5 Additional information
5.1 European Union — compliance with the Radio Equipment Directive
6 E-manual
7 Related Posts

Setup Guide


Initial Setup

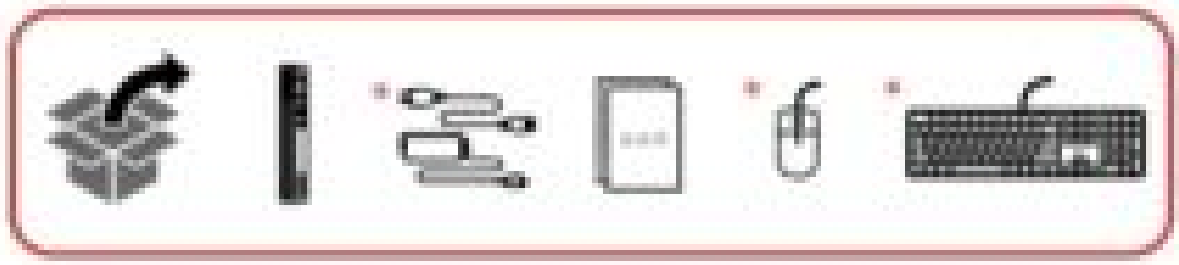

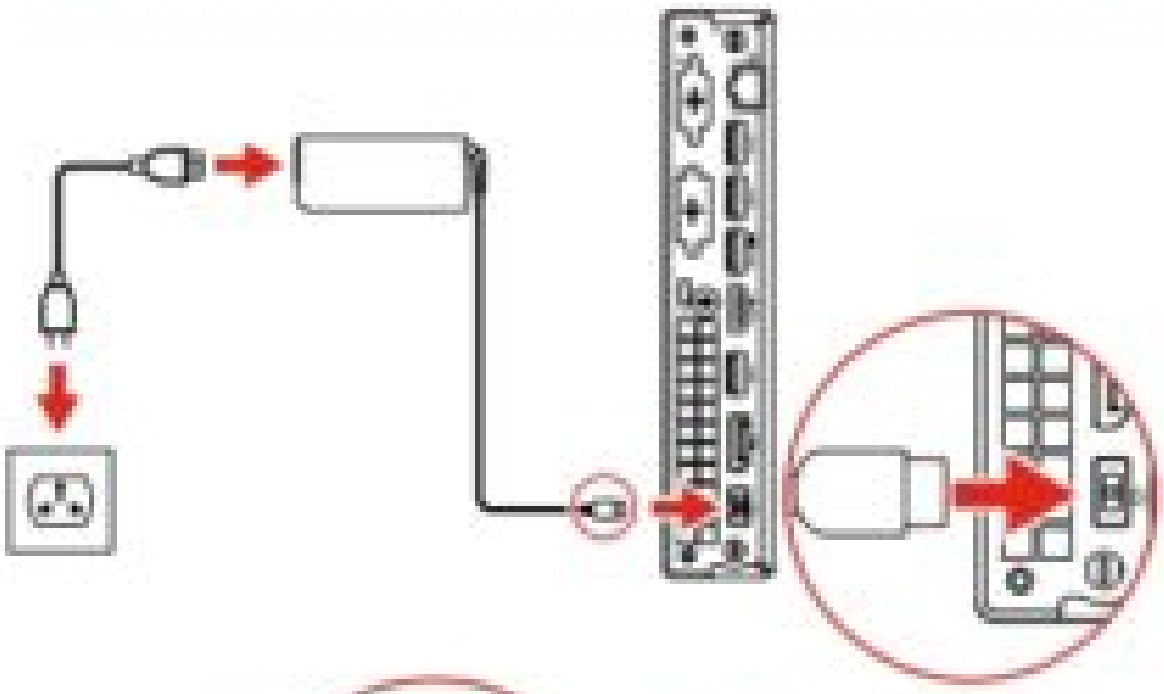



Overview

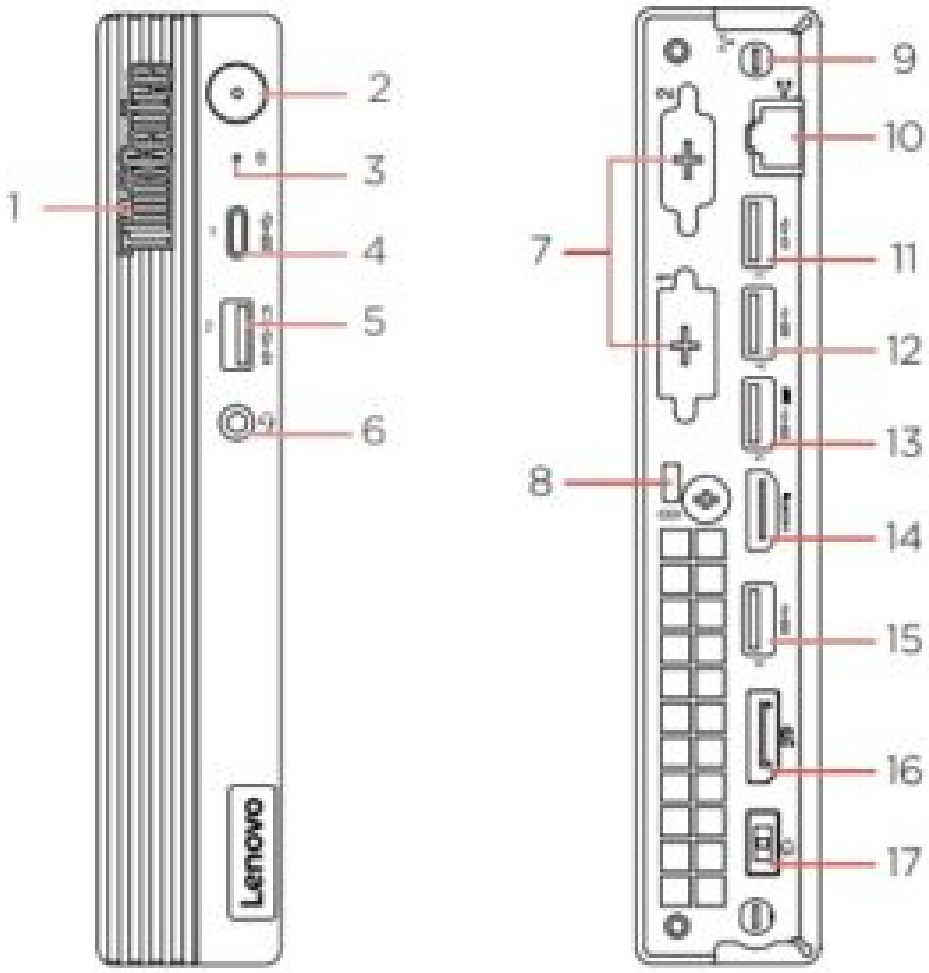

1. ThinkCentre® LED
2. Power button
3. Storage drive activity indicator
4. USB-C™ (3.2 Gen 1) connector
5. Always On USB 3.2 connector Gen 2
6. Headset connector
7. Optional connectors
8. Security-lock slot
9. Wi-Fi® antenna slot
10. Ethernet connector
11. USB 3.2 connector Gen 2
12. USB 3.2 connector Gen 1 (M70q) / Gen 2 (M80q)
13. USB 3.2 connector Gen 1
14. HDMI™ 1.4 out connector
15. USB 3.2 connector Gen 1
16. Display Port® 1.4 out connector
17. Power adapter connector

Read the statement on USB transfer rate in the User Guide. Refer to the Safety and Warranty Guide for accessing the User Guide.

Customer Replaceable Units (CRUs)

- Bottom cover
- Coin-cell battery
- Computer cover
- Dust shield
- External optical drive
- Internal speaker
- Kensington-style cable lock
- Keyboard
- M.2 solid-state drive
- Memory module
- Mouse
- Power adapter
- Power adapter bracket
- Power cord
- Rear Wi-Fi antenna
- Storage drive
- Storage drive bracket
- System fan
- Thumb screw
- Vertical stand
- VESA mount bracket
- Wi-Fi card
- Wi-Fi card shield

Refer to User Guide for the detailed definition.

Additional information

European Union — compliance with the Radio Equipment Directive

Hereby, Lenovo (Singapore) Pte. Ltd., declares that the radio equipment type ThinkCentre M70q and ThinkCentre M80q are in compliance with Directive 2014/53/EU. The full text of the system EU declaration of conformity is available at the following Internet address:
https://www.lenovo.com/us/en/compliance/eudoc
This radio equipment operates with the following frequency bands and maximum radio-frequency power:

Technology	Frequency band [MHz]	Maximum transmit power
WLAN 802.11b/g/n/ax	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm

Usage of all the radio devices is limited to indoor in the band 5150 MHz to 5350 MHz (channels 36, 40, 44, 48, 52, 56, 60, 64).

E-manual

First Edition (May 2020)
© Copyright Lenovo 2020.
LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.
Reduce I Reuse I Recycle

Lenovo ThinkCentre M70q and M80q Setup Manual – **Optimized PDF**
Lenovo ThinkCentre M70q and M80q Setup Manual – **Original PDF**

Manuals+,