Auto On-Off Water Removal Pool Cover Pump

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.


Operating Instructions and Parts Manual — WAPC250

SPECIFICATIONS	
POWER SUPPLY REQUIREMENTS	120 V, 60 Hz
MOTOR	Single Phase, Auto ON/OFF
HORSEPOWER	1/4 HP
CIRCUIT REQUREMENT	15 A (minimum)
LIQUID TEMPERATURE RANGE	40° F- 120° F

CONSTRUCTION	
MOTOR HOUSING	Thermoplastic
MOTOR SHAFT	Stainless Steel
IMPELLER	Thermoplastic
VOLUTE	Thermoplastic
PUMP DISCHARGE	1-1/4 in. with Check Valve & 3/4 in. Hose Threads


PERFORMANCE

Model	HP	Discharge Head	0 ft.	5 ft.	10ft.	15 ft.
WAPC250	1/4	Gal/hr	3000	2350	1600	900

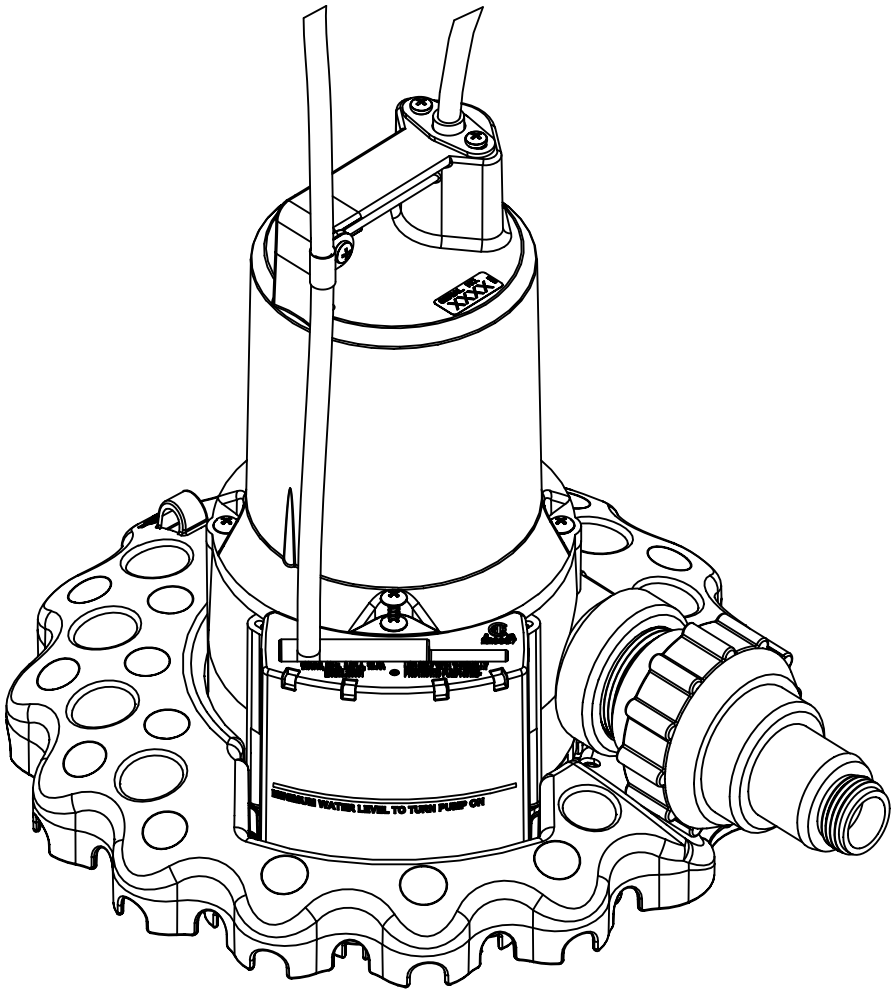


© 2018, WAYNE/Scott Fetzer Company

STEP 1 - VERIFY PACKAGE CONTENTS

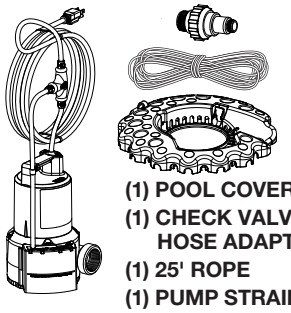


(1) POOL COVER PUMP
(1) CHECK VALVE/
HOSE ADAPTER
(1) 25' ROPE
(1) PUMP STRAINER


STEP 2 - INSTALL CHECK VALVE

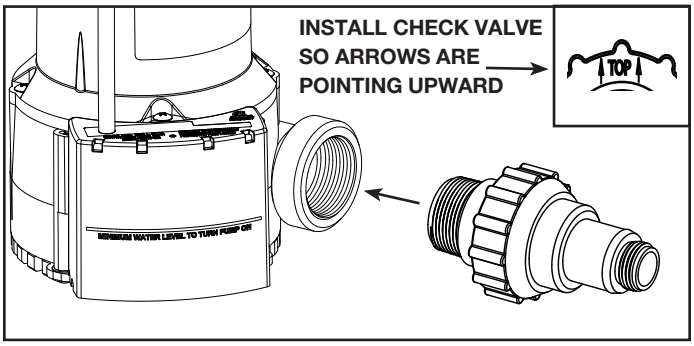


STEP 3 - ATTACH STRAINER

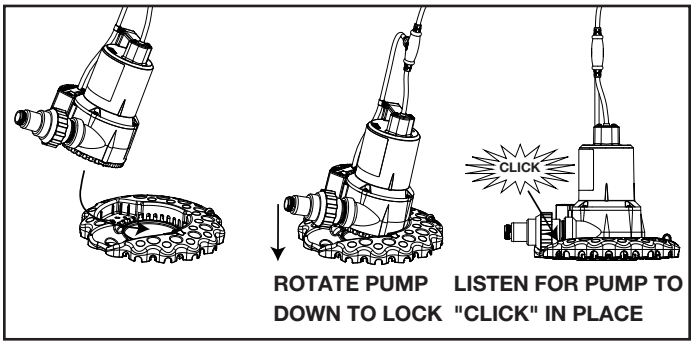


STEP 4 - CONNECT GARDEN HOSE

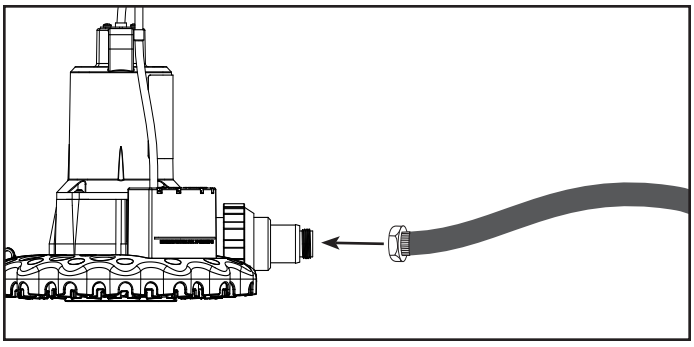


STEP 5 - SECURE ROPE TO STRAINER

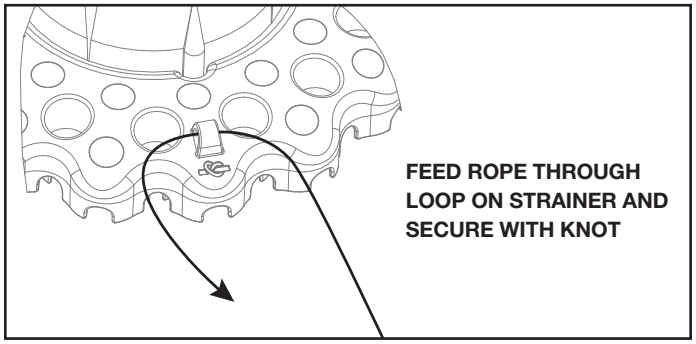

STEP 6 - POSITION ON POOL COVER

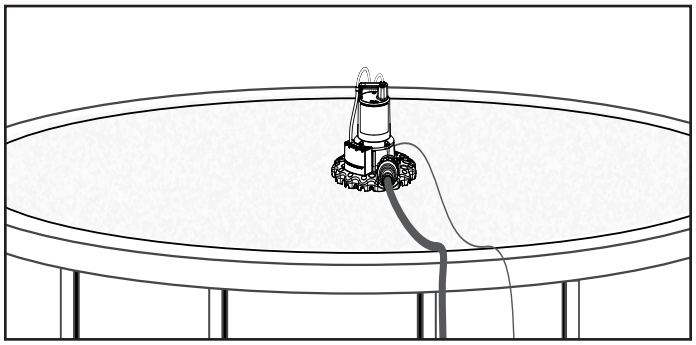

STEP 7 - PLUG INTO GFCI OUTLET

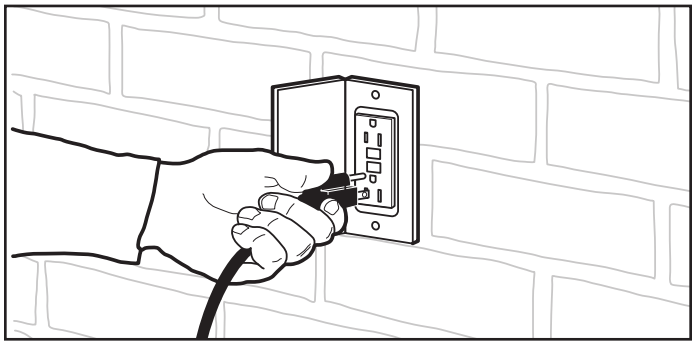

FOR FURTHER PLACEMENT TECHNIQUES AND DETAILED INSTALLATION FOR INGROUND AND ABOVE GROUND POOL APPLICATIONS, REFER TO PAGES 5 and 7- FIGURES (A-E).

The most common cause for the pump not removing water can be resolved by following step 6 of the troubleshooting section. (Page 9)

DESCRIPTION

This portable, Auto On-Off Pool Cover pump is designed for automatic removal of water, from a pool or spa cover. The units are equipped with a 25 ft. 3-prong grounding type power cord (WAPC250) or GFCI Protected Power Cord (WAPC250G). The provided discharge check valve prevents short cycling and it's 3/4 in. adapter can be used for convenient attachment to a standard garden hose.

UNPACKING

Inspect this unit before it is used. Occasionally, products are damaged during shipment. If the pump or components are damaged, contact Customer Support at 1-800-237-0987.

SAFETY SIGNAL WORDS

This manual contains information that is very important to know and understand. This information is provided for SAFETY and to PREVENT EQUIPMENT PROBLEMS. To help recognize this information, observe
the following symbols.

⚠ DANGER ***Danger indicates an imminently hazardous situation which, if NOT avoided, WILL result in death or serious injury.***

⚠ DANGER ***La mention Danger indique une situation dangereuse imminente qui, si elle n'est pas évitée, ENTRAÎNE la mort ou des blessures graves.***

⚠ WARNING ***Warning indicates a potentially hazardous situation which, if NOT avoided, COULD result in death or serious injury.***

⚠ AVERTISSEMENT ***La mention avertissement indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, risque d'entraîner des lésions corporelles graves ou même la mort.***

⚠ CAUTION ***Caution indicates a potentially hazardous situation which, if NOT avoided, MAY result in minor or moderate injury.***

⚠ *MISE EN GARDE* ***La mention mise en garde indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, pourrait entraîner des blessures mineures ou modérées.***

NOTICE ***Notice indicates important information, that if NOT followed, MAY cause damage to equipment.***

This is the safety alert symbol. It is used to alert you to potential bodily injury hazards. Obey all safety messages that follow this symbol to avoid possible harm.

NOTE: Information that requires special attention.

GENERAL SAFETY INFORMATION

CALIFORNIA PROPOSITION 65

⚠ WARNING

This product can expose you to chemicals, including DEHP, which is known to the State of California to cause cancer, birth defects and reproductive harm. For more information, go to www.P65Warnings.ca.gov.

⚠ AVERTISSEMENT

Ce produit peutvous exposer à des produits chimiques, notamment du DOP, reconnus par l'État de Californie comme étant cancérigènes et à l'origine d'anomalies congénitales et de problèmes de l'appareil reproductif. Pour plus de renseignements, visiter le site www.P65Warnings.ca.gov.

GENERAL SAFETY



- Read all manuals included with this product carefully. Be thoroughly familiar with the controls and the proper use of the equipment. Follow all instructions.
- Only persons well acquainted with these rules of safe operation should be allowed to use the unit. Keep away from children.



⚠ DANGER ***This pump is NOT rated for use with flammable/combustible liquids, vapors, or dusts. Do NOT use to pump flammable/combustible liquids, vapors, or dusts. Do NOT use in a flammable and/or explosive atmosphere. Pump SHOULD be used to pump clear water ONLY. Failure to follow these instructions WILL result in bodily injury or death, and will void warranty.***

⚠ DANGER ***Cette pompe N'est PAS homologuée pour être utilisée avec des vapeurs, des poussières, des liquides inflammables ou combustibles. NE PAS utiliser pour pomper des vapeurs liquides ou des poussières inflammables ou combustibles. NE PAS utiliser dans un environnement inflammable et/ou explosif. L'usage de la pompe est EXCLUSIVEMENT LIMITÉ au pompage de l'eau claire. Le non-respect de ces instructions risque d'entraîner des blessures corporelles ou la mort, et annulera la garantie.***

⚠ DANGER ***Electric shock hazard! GFCI receptacles will provide protection against line to ground faults only. The ground fault receptacle does NOT limit the magnitude of fault current and will NOT prevent an electrical shock. Replace damaged cord immediately.***

REMINDER: Keep your dated proof of purchase for warranty purposes! Attach it to this manual or file it for safekeeping.

GENERAL SAFETY INFORMATION (CONT'D)

⚠ DANGER ***Risque de choc électrique! Le disjoncteur de fuite à la terre fournira une protection uniquement contre les défauts entre les lignes et les fuites à la terre. Le boîtier du disjoncteur de fuite à la terre ne limite PAS l'amplitude du courant de défaut et n'empêchera PAS les chocs électriques. Remplacer immédiatement tout cordon endommagé.***

⚠ DANGER ***Risk of electric shock. This pump has NOT been tested for use in marine areas. NEVER place pump in pools while people are in the water. Do NOT handle pump with wet hands or when standing in water or on a damp surface. Pump is designed to be used in closed and covered pools only. Water accumulated on pool cover can cause injury or death. Proper installation of pool cover pump and periodic maintenance is recommended. Failure to follow COULD result in death or serious injury.***

⚠ DANGER ***Risque de choc électrique. Cette pompe n'a PAS été testée pour une utilisation dans les aires marines. NE JAMAIS placer la pompe dans les piscines pendant que les gens sont dans l'eau. NE PAS manipuler la pompe avec les mains humides ou debout dans l'eau ou sur une surface humide. La pompe est conçue pour être utilisée uniquement dans les piscines fermées et couvertes. L'eau accumulée sur la couverture de la piscine peut causer des blessures ou la mort. Une installation correcte de la pompe de couverture de piscine et un entretien périodique sont recommandés. Le non respect de ces instructions POURRAIT entraîner la mort ou des blessures graves.***



⚠ DANGER ***Do NOT disassemble or alter this product in any way. Failure to follow these instructions WILL result in serious injury or death and will void warranty.***

⚠ DANGER ***NE PAS démonter ou modifier ce produit de quelque manière que ce soit. Le non-respect de ces instructions ENTRAÎNERA de graves blessures ou la mort, et annulera la garantie.***



PERSONAL SAFETY

1. Wear safety glasses at all times when working with pumps.
2. The unit MUST be plugged into a properly grounded GFCI outlet. Consult with a qualified electrician for proper installation of a GFCI OUTLET.

⚠ CAUTION ***Do not move, position, retrieve, or carry pump using the power cord or the discharge hose, damage to the pump or power cord may occur. Use the handle supplied on the pump or attach a string to the strainer to position as instructed.***

⚠ *MISE EN GARDE* ***Ne bougez pas, de position, de récupération ou de transporter la pompe à l'aide du cordon d'alimentation ou le tuyau de refoulement, des dommages à la pompe ou le cordon d'alimentation peut se produire. Utiliser la poignée fournie sur la pompe ou attacher un fil à la passoire de position comme indiqué.***

APPLICATION AND OPERATION

⚠ DANGER ***Do NOT use pump if any part of the housing switch or probe is cracked, broken, or missing.***

⚠ DANGER ***NE PAS utiliser la pompe si une partie quelconque du commutateur de boîtier ou de la sonde de capteur est fissurée, brisée ou manquante.***

⚠ DANGER ***Always disconnect electric supply before attempting to install, service, relocate, or perform any maintenance. If the power source is out of sight, lock and tag in open (off) position to prevent unexpected power application. Failure to do so WILL result in fatal electrical shock!***

⚠ DANGER ***Toujours couper le courant avant d'essayer d'installer, de réparer, de déplacer ou d'effectuer toute opération de maintenance. Si la source d'alimentation est hors de vue, verrouiller et étiqueter en position ouverte (off) pour éviter tout rétablissement inattendu de l'électricité. Ne pas le faire ENTRAÎNERA un choc électrique mortel!***

⚠ DANGER ***If using an extension cord, do NOT allow pump cord/extension cord connection to fall into swimming pool or come in contact with water. Pump/extension cord connection must be kept dry and away from moisture. Do NOT handle plug connector near water. Failure to follow these instructions WILL result in death or serious injury.***

⚠ DANGER ***Si une rallonge est utilisée, NE PAS LAISSER le cordon/la rallonge d'alimentation de la pompe tomber dans la piscine ou entrer en contact avec l'eau. Le cordon/la rallonge d'alimentation de la pompe doivent être gardés au sec et à l'abri de l'humidité. NE PAS manipuler le connecteur près de l'eau. Le non-respect de ces instructions ENTRAÎNERA de graves blessures ou la mort.***

⚠ WARNING ***This unit is NOT designed for use as a sump pump or in sump applications. This unit is NOT designed for use in septic tanks or underground vaults to pump raw sewage or effluents. NEVER use in hazardous or explosive locations.***

⚠ AVERTISSEMENT ***Cette unité n'est PAS conçue pour être utilisée comme pompe de puisard ou dans des applications de puisard. Cette unité n'est PAS conçue pour être utilisée dans des fosses septiques ou des enceintes souterraines pour pomper les eaux usées ou les effluents. Ne JAMAIS utiliser dans des environements dangereux ou explosifs.***

⚠ WARNING ***Risk of electric shock – This pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce the risk of electric shock, be certain that it is connected only to a properly grounded, grounding-type receptacle.***

⚠ AVERTISSEMENT ***Risque de choc électrique - Cette pompe est fournie avec un conducteur de mise à la terre et une fiche de connexion de type mise à la terre. Pour réduire le risque de choc électrique, assurez-vous qu'il n'est connecté qu'à une prise correctement mise à la terre***

APPLICATION AND OPERATION (CONT'D)

This unit is not designed for use as a sump pump or in sump applications. This unit is not designed for use in septic tanks or underground vaults to pump raw sewage or effluents. Never use in hazardous or explosive locations.

PUMPING HEIGHT

When water is pumped to an elevated position, any volume that has not reached the discharge outlet can flow back through the pump when the pump shuts off. This back-flow can cause the water level in small areas to rise enough to re-start the pump. The check valve/hose adapter included is required in this situation. For proper operation, make certain the check valve is oriented as instructed on check valve body.

NOTICE ***In small areas a check valve is required to prevent backflow. Without a check valve the pump may cycle continuously and potentially wear out the pump components.***

1. This pump has been designed with 1-1/4 in. NPT discharge connection size. Attach pipe or fitting to the discharge or use the supplied garden hose adapter/check valve. Thread the female end of the garden hose to the male end of the garden hose adapter/check valve.
2. Use a hose washer (not included) on the garden hose for correct pump operation.
3. For best pump performance, unwind the hose before starting the pump. This will help remove any kinks or binds in the hose and allow the unit to pump with less restriction.

NOTICE ***DO NOT place the pump on a weak, damaged, or leaking pool cover. Placing the pump on a damaged pool cover could cause the cover to give way, or could allow the pump to remove treated swimming water from the pool in addition to rainwater.***

4. Install the "snap-on" debris strainer. Begin by lining up the pump base profile with the profile of the strainer base using the switch housing as a guide. Tilt the pump back and guide the rear of the pump (opposite the discharge) into the strainer base. Once the rear of the pump is in place, gently rotate the pump down until the latch engages.
5. To remove debris strainer release latch and guide pump out of strainer in the reverse motion of installation.
6. With pump unplugged set the pump on the pool cover, where water will collect. Do not set the pump directly on mud, sand surfaces or in leaves. For best results make sure the pump strainer is making full contact with a clean area of the pool cover. This will allow the strainer to properly filter debris and help prevent clogging of the pump. If necessary clear an area of the pool cover before placing the pump. For further placement techniques see (Figures A-E).

DROP-IN PUMP APPLICATION

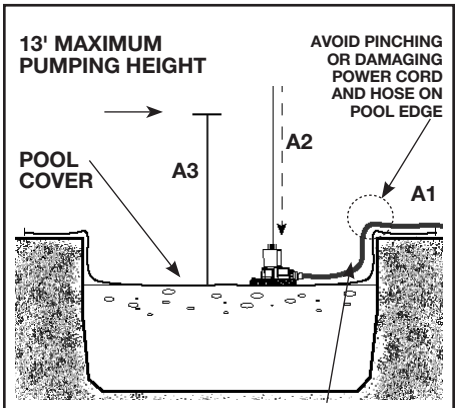


Figure A - In-Ground Pool Installation
(cut-away view)

A1. Connect discharge hose to pump check valve and place hose end away from pool, where water will be displaced.

A2. Attach provided 25 ft. rope to handle of pump, and lower pump onto pool cover where water will collect.

A3. Do NOT exceed the 13 ft. maximum pumping height for this pump or switch may not function properly. Plug in pump to allow for automatic operation.

For removal unplug pump and retrieve using rope.

ABOVE GROUND PUMP INSTALLATION

To aid in pump placement on pool cover, secure provided 25 ft. rope to the pull to shore loop (Figure B).

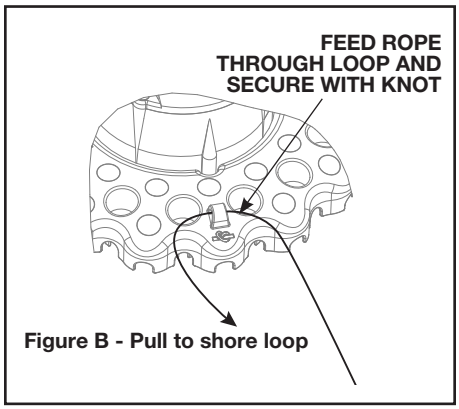


Figure B - Pull to shore loop

Connect provided 25 ft. rope to pull to shore loop (see Figure B) and discharge hose to the pump.

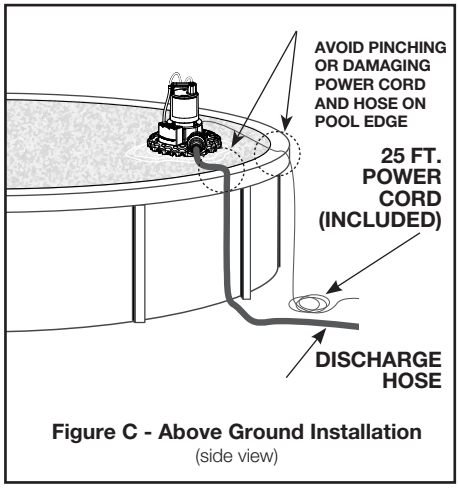


Figure C - Above Ground Installation
(side view)

Place pump on pool cover near edge of pool (see Figure C). If floatation device is used under the pool cover, place pump at the lowest point on the pool cover where water will collect.

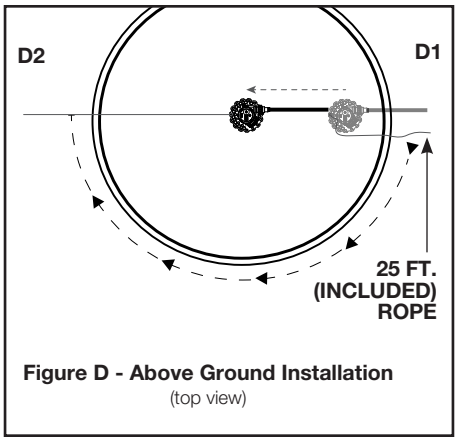


Figure D - Above Ground Installation
(top view)

D1. Holding the provided 25 ft. rope, walk around pool until you are even with the pump on the opposite side.

D2. Pull the 25 ft. rope towards you until the pump is in the center of the pool cover where water will collect. Secure rope for easy removal (see Figure E) when weather permits. Plug in pump to allow for automatic operation.

NOTICE ***Always use debris strainer when placing pump on a pool cover. The strainer helps protect the pool cover from damage, filters debris, and increases pump stability.***

ABOVE GROUND – PUMP REMOVAL

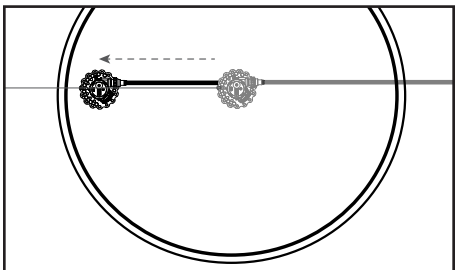


Figure E - Above Ground Pump Removal
(top view)

Disconnect power to pump. Using the included 25 ft. rope, safely pull pump to edge of pool, disconnect discharge hose and remove.

⚠ DANGER ***Do NOT handle pump with wet hands or when standing in water or on a damp surface when the unit is operating or fails to operate. ALWAYS disconnect pump power cord from power source before handling. Do NOT bury cord. Visually locate cord to prevent damage caused by lawn mowers, hedge trimmers and other equipment. Failure to do so WILL result in fatal electrical shock.***



⚠ DANGER ***NE PAS manipuler la pompe avec les mains humides ou debout dans l'eau ou sur une surface humide lorsque l'appareil fonctionne ou ne fonctionne pas corectement. TOUJOURS débrancher le cordon d'alimentation de la pompe de la source de courant avant toute manipulation. Ne PAS enterrer le cordon. Repérer visuellement le cordon pour éviter les dommages causés par les tondeuses à gazon, les taille-haies et autres équipements. Ne pas le faire ENTRAÎNERA un choc électrique mortel.***

7. The water level must be at least 2-1/8 inches for the pump to cycle, prime, and operate. Water levels less than 2-1/8 inches will not allow the impeller to contact water therefore no water will be pumped.
8. Plug the pump into a properly grounded 120 volt GFCI protected outlet. The pump will start automatically when the water reaches a depth of 2-1/8 inches. A priming delay of 2 seconds is programmed into the control to allow time for air to escape from the pumping chamber.
9. The pump will stop automatically once water has been removed to a depth of approximately 3/4 of an inch. The pump will not restart until the water depth rises to 2-1/8 inches or greater.
10. The pump will not allow itself to run dry. Once the pump detects that water is no longer being removed, it will shut down automatically. The pump must remain upright at all times in order for the water detection to function. Do not allow the pump to operate on its side or inverted The shaft seal depends on water for lubrication, allowing the pump to remain in any other orientation than upright could cause shaft seal failure or pump failure.

NOTICE ***Do not alter the pump to override the automatic water detector. The shaft seal depends on water for lubrication. Overriding this pump feature can cause the pump to run dry and may damage the shaft seal and cause pump failure, and will void warranty.***

⚠ WARNING ***Pump starts automatically. Always disconnect electric supply before attempting to install, service, relocate, or perform any maintenance.***

⚠ AVERTISSEMENT ***La pompe démarre automatiquement. Toujours couper le courant avant d'essayer d'installer, de réparer, de déplacer ou d'effectuer toute opération de maintenance.***

NOTE: Minimal service is required for this pump. The motor housing of the pump is completely sealed and requires no internal service or lubrication.

MAINTENANCE

1. Periodic cleaning is required to maintain performance of the pump. Follow the cleaning steps listed below:
   a. Disconnect pump from power source.
   b. Remove the strainer.
   c. Remove the four (4) base screws (Figure 1).
   d. Remove the base and impeller plate.
   e. Remove the debris and make sure the impeller turns freely.
   f. Reinstall impeller plate, base, screws, and strainer.
   g. Use a pin or paperclip to clean the priming hole and air escape channel.

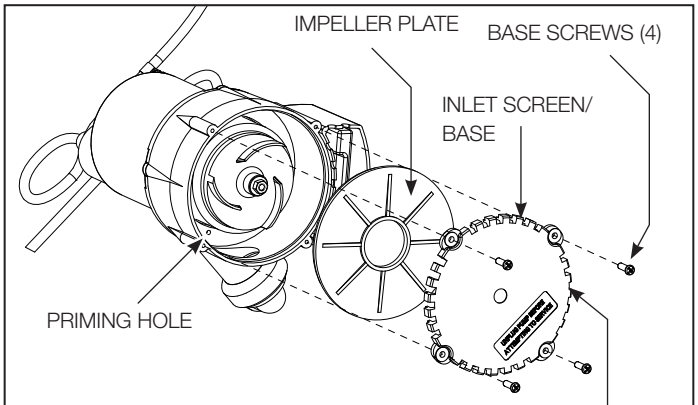


Figure 1 - Priming Hole Location

TROUBLESHOOTING

1. Verify pumping height does NOT exceed 13 feet (See Figure A). If pumping height is greater than 13 feet, this pumps automatic feature will not operate correctly.
2. Verify water depth is 2-1/8 inches or greater.
3. To verify pump is operating correctly.
   a. Disconnect pump from power source.
   b. Connect hose adapter/check valve and discharge hose to pump.
   c. Immerse pump in a bucket or tub of water at least 2-1/8 inches
   in depth.
   d. Place the other end of the discharge hose outside the bucket, so the water will pump out.
   e. Plug power cord into a grounded 120 volt GFCI power outlet. The pump should start after 2 seconds of detecting water. Once the pump removes the water to a depth of 3/4 inch, the pump will stop automatically.
   f. If pump does NOT operate, unplug power cord and proceed to maintenance –refer to cleaning instructions.
4. To verify discharge hose is free from a blockage.
   a. Connect hose to another water source such as a faucet. If water flows through hose, return to step 3a. If water is restricted, verify discharge hose is unwound. Remove all kinks, bends, or obstructions in hose.
   b. If pump is still NOT operating, refer to cleaning instructions
5. If pump runs continuously, unplug the unit. Once unplugged, remove the strainer and check for debris stuck inside the sensor body (Figure 2). Remove any trapped leaves, debris or dirt.

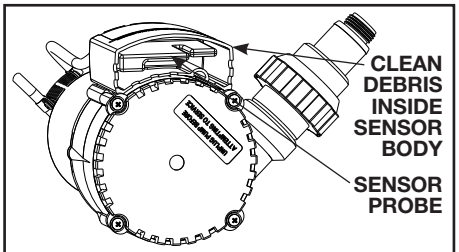


Figure 2 - Remove Debris From Sensor

TROUBLESHOOTING (CONT'D)

6. If the pump cycles on and off too often the electronic switch may need cleaning. Disconnect pump from power source, remove the strainer and turn the pump upside down. The sensor probe will be visible inside the switch housing. Clean inside the housing gently scrubbing with a small brush using soapy water. Then rinse thoroughly with clean water.

7. When temperatures drop below freezing remove pump from service and store indoors to protect pump from damage due to ice. The pump has a unique protection circuit to protect the motor from a locked impeller condition possibly caused by debris buildup or from a "frozen" impeller situation caused by ice formation. When the pump is activated and a locked impeller condition is detected the unit will automatically shutdown to protect the motor from overheating. The pump will continue this on/off cycle for a period of time to attempt to "free" the impeller until eventually the unit will remain off for a period of 12 hours checking twice a day for a "freed" impeller. Once the pump is able to operate correctly the pump will resume normal operation. To reset this delay without waiting 12 hours momentarily unplug the pump.

⚠ DANGER ***Do NOT use pump if any part of the switch housing or probe is cracked, broken or missing.***

⚠ DANGER ***Ne PAS utiliser la pompe si une partie du boîtier de l'interrupteur ou de la sonde est fissuré, cassé ou manquant.***

TROUBLESHOOTING CHART

Symptom	Possible Cause(s)	Corrective Action
Pump will not start or run	1. Tripped home electrical breaker 2. GFCI tripped 3. Low supply voltage 4. Defective motor 5. Dirty switch 6. Impeller obstructed 7. Inlet screen or strainer clogged 8. Priming hole plugged	1. Reset breaker 2. Check for damaged wiring or moisture 3. Contact electrician 4. Replace pump 5. Rinse out switch with clean water (Figure 2) 6. Remove strainer, base, and impeller plate (Figure1) check for debris; clean 7. Clean inlet screen and debris strainer (Figure 1) 8. Clean hole, inside volute housing, with a pin or paper clip (Figure 1)
Pump starts and stops too often	1. Backflow of water from piping 2. Dirty switch 3. Priming hole plugged 4. Pump is sitting uneven on pool or spa cover	1. Install or replace check valve 2. Rinse out switch with clean water (Figure 2) 3. Clean hole, inside volute housing, with a pin or paper clip (Figure 1) 4. Reposition pump so pump sits level on cover
Pump will not shut off or runs continuously	1. Debris in switch 2. Discharge height exceeds capability	1. Rinse out switch with clean water (Figure 2) 2. Reduce discharge height
Pump operates but delivers little or no water	1. Impeller obstructed 2. Priming hole plugged 3. Obstructed hose 4. Discharge height exceeds capability 5. Strainer clogged	1. Remove strainer, base, and impeller plate (Figure 1), check for debris; clean 2. Clean hole, inside volute housing, with a pin or paper clip (Figure 1) 3. Check for kinks, reposition hose or check for debris 4. Reduce discharge height 5. Unplug pump. Remove strainer and rinse with clean water to remove debris


For Replacement Parts or Customer Support, Call 1-800-237-0987

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

Address parts correspondence to:

Wayne Water Systems
101 Production Drive
Harrison, OH 45030 U.S.A.

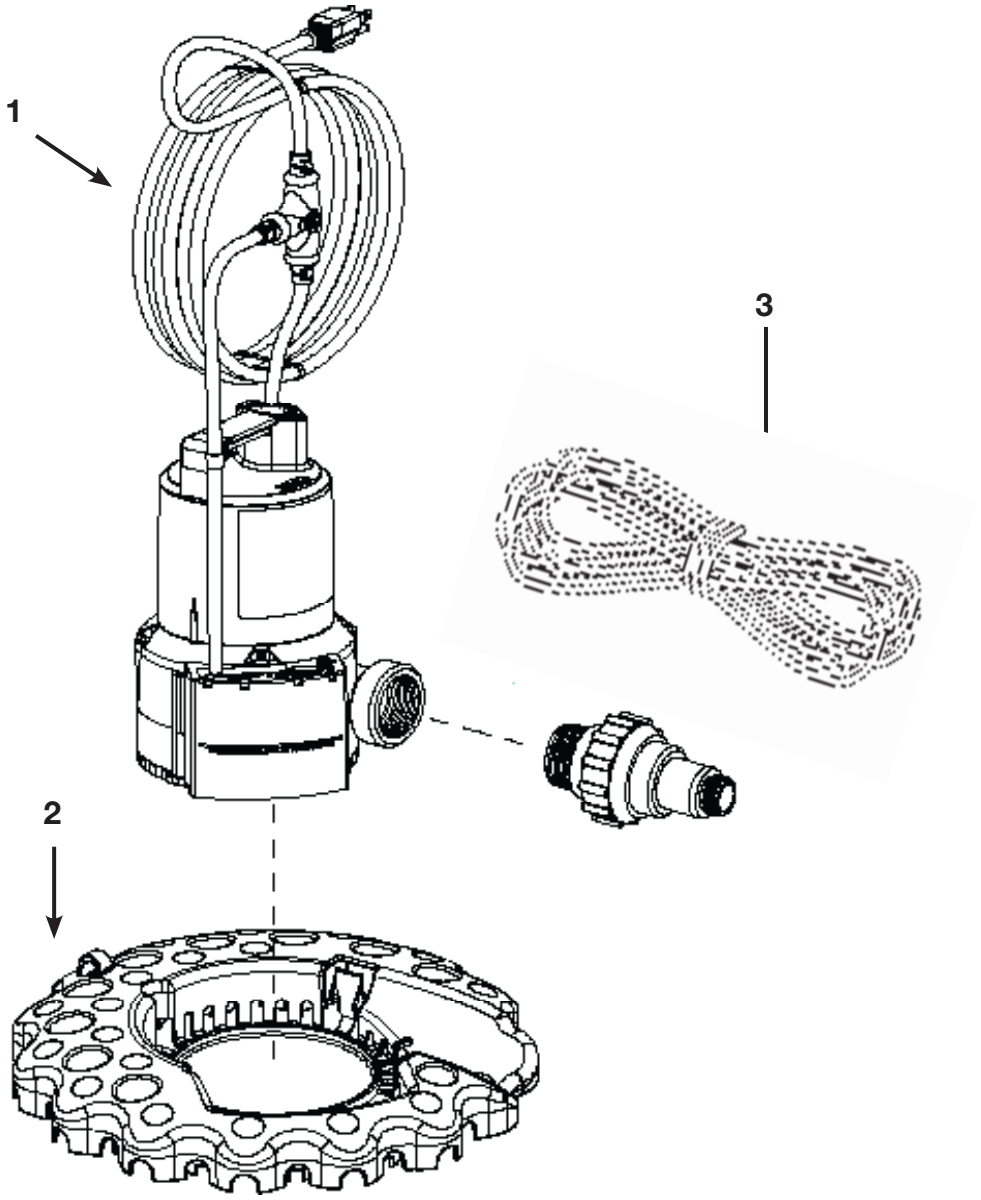

Ref. No.	Description	Order No.	Quantity
1	Check valve / garden hose adapter	62061-WYN1	1
2	Strainer	62067-WYN1	1
3	25' Rope	67152-WYN1	1

LIMITED WARRANTY

For three years for WAPC250 model from the date of purchase, from an authorized dealer, Wayne Water Systems will repair or replace, at its option for the original purchaser, any part or parts of its Pool Cover Pump or Water Pumps ("Product") found upon examination by Wayne Water Systems to be defective in materials or workmanship. Please call Wayne Water Systems (800-237-0987) for warranty instructions. Be prepared to provide the model number and the serial number when exercising this warranty. All transportation charges on Products or parts submitted for repair or replacement must be paid by purchaser.

This Limited Warranty does not cover Products which have been damaged as a result of accident, abuse, misuse, neglect, improper installation, improper maintenance, or failure to operate in accordance with Wayne Water Systems' written instructions.

THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, OBLIGATIONS OR AGREEMENTS, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, AND ANY RIGHTS OR REMEDIES AGAINST ANY PERSON OR ENTITY UNDER THE UNIFORM COMMERCIAL CODE OR OTHERWISE WITH RESPECT TO THE SALE OF THE PRODUCT. THE REMEDIES AND OBLIGATIONS STATED IN THIS WARRANTY ARE THE SOLE AND EXCLUSIVE REMEDIES OF AND OBLIGATIONS TO THE OWNER FOR ANY AND ALL MATTERS ARISING WITH RESPECT TO OR IN ANY WAY CONNECTED WITH THE PRODUCT, REGARDLESS OF THE SOURCE OR PROVIDER OF SUCH GOODS. IN NO EVENT, WHETHER AS A RESULT OF BREACH OF CONTRACT, WARRANTY TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, SHALL WAYNE WATER SYSTEMS OR ANY AFFILIATE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

You *MUST* retain your purchase receipt along with this form. In the event you need to exercise a warranty claim, you *MUST* send a *copy* of the purchase receipt along with the material or correspondence. Please call Wayne Water Systems (800-237-0987) for return authorization and instructions.

DO NOT MAIL THIS FORM TO Wayne Water Systems. **Use this form only to maintain your records.**

MODEL NO._____ SERIAL NO._____ INSTALLATION DATE _____

ATTACH YOUR RECEIPT HERE

NOTES