
USER GUIDE

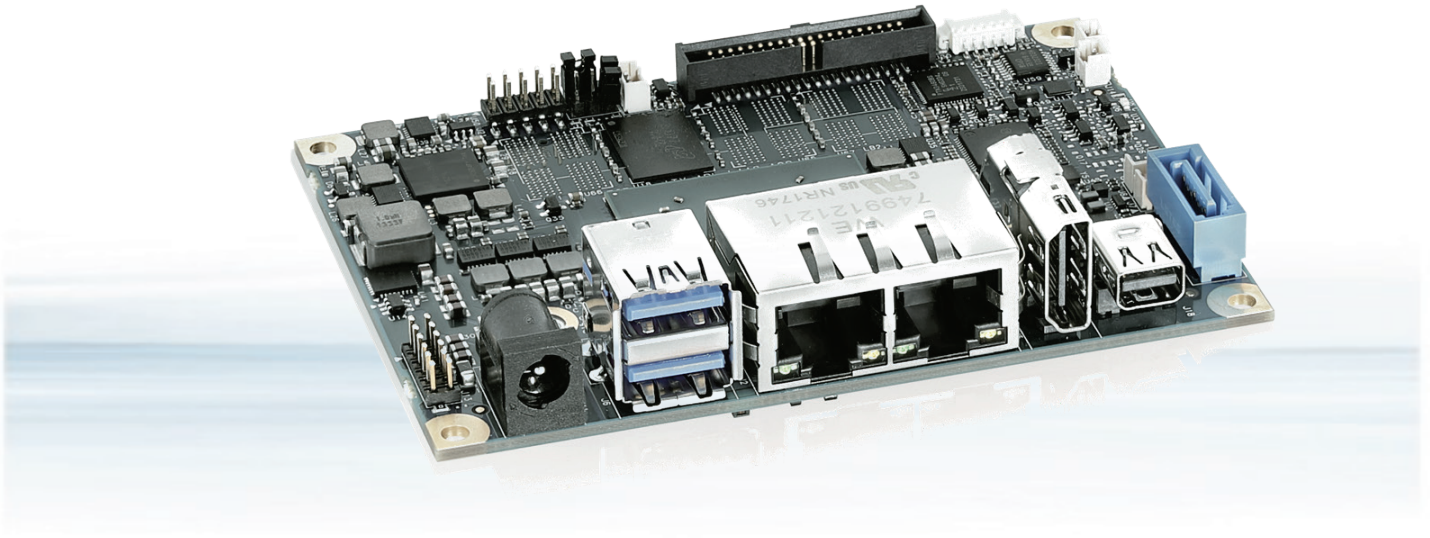

pITX-APL V2.0

Doc. Rev. 1.6

Doc-ID: 1065-6365

POSSIBILITIES START HERE kontron S&T Group

This page has been intentionally left blank

PITX-APL V2.0 – USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this manual may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the manual or any product characteristics set out in the manual. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this manual only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This manual is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this manual is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this manual only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2021 by Kontron Europe GmbH

Kontron Europe GmbH

Gutenbergstraße 2
85737 Ismaning
Germany
www.kontron.com

Revision History

Revision	Brief Description of Changes	Date of Issue	Author
1.0	Initial Issue	02. March 2020	hjs
1.1	BSP Win7 removed	06. April 2020	hjs
1.2	Voltage pin 7 changed to 5 V in chapter 6.14, M.2 issues updated in chapter 6.17	21. July 2020	hjs
1.3	Intel N4200 SKU added, Power Connector in chapter 6.8 changed, Standby Current inserted	17. August 2020	hjs
1.4	3-pin power supply recommended on page 47	30. September 2020	hjs
1.5	new DC Jack in Table 2	26. October 2020	hjs
1.6	Notice " GPIO Ports for internal purpose"	01. February 2021	hjs

Intended Use

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

⚠CAUTION

Handling and operation of the product is permitted only for trained personnel within a work place that is access controlled. Please follow the "General Safety Instructions for IT Equipment" supplied with the system.

Customer Support

Find Kontron contacts by visiting: http://www.kontron.com/support.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit http://www.kontron.com/support-and-services/services.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact Kontron support. Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit http://www.kontron.com/terms-and-conditions.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit http://www.kontron.com/terms-and-conditions.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website CONTACT US.

Symbols

The following symbols may be used in this manual

⚠DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
⚠WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
⚠CAUTION	CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.
NOTICE	NOTICE indicates a property damage message.
	Electric Shock! This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of them. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material. Please refer also to the "High-Voltage Safety Instructions" portion below in this section.
	ESD Sensitive Device! This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.
	HOT Surface! Do NOT touch! Allow to cool before servicing.
	Laser! This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.
	This symbol indicates general information about the product and the user manual. This symbol also indicates detail information about the specific product configuration.
	This symbol precedes helpful hints and tips for daily use.

Table of Contents

Symbols 6
Table of Contents 7
List of Tables 8
List of Figures 9
1/ Introduction 11
2/ Description 12
2.1. Configurations 13
2.2. Accessories List 14
3/ Installation procedure 15
3.1. Installing the Board 15
3.2. Requirements IEC60950-1 16
3.3. Lithium battery precautions 16
4/ System specifications 17
4.1. Block Diagram 17
4.2. Component Main Data 18
5/ Jumpers and Connectors 23
5.1. Hardware Configuration Setting 23
5.1.1. Jumpers and Connectors 23
5.2. Mainboard Placement and Rear I/O locations 24
5.2.1. Rear Side 26
6/ Pin Definitions 27
6.1. Processor Support 28
6.2. System Memory Support 28
6.3. MicroSD and MicroSIM 29
6.4. Ethernet Connectors (I/O area) 30
6.5. USB Connectors (I/O area) 31
6.6. Fan Connector (internal, J23) 33
6.7. DC Power Jack Connector (12 Vin Ext., J11) 34
6.8. Internal Power Connector (Vin Int., J4) 35
6.9. Front Panel (FP) internal (J21) 35
6.10. USB internal (J7, J8) 36
6.11. SBC Connector (GPIO and Ext. Battery) (internal, J13)) 36
6.12. Jumper Load BIOS Default and Clear CMOS (J15) 37
6.13. Jumper Autostart (J3) 38
6.14. LVDS (internal, J19) 38
6.15. SATA (Serial ATA) Disk Interfaces (internal, J9) 40
6.16. Mini DisplayPort 41
6.17. M.2 B-Key Slot Connector (J1) 42
6.18. Serial COM (J20) 44
6.19. Front Panel Audio Connector (J22) 44
6.20. BIOS Recovery Connector (J12) 45
6.21. S/PDIF Connector (J14) 45
7/ Installation and Power Considerations 46
7.1. Hardware Monitor 46
7.2. Real-Time Clock 46
7.3. Onboard Power Supply 46
7.4. External Power Supply 47

7.5. Power Management 47
8/ uEFI BIOS 49
8.1. Starting the uEFI BIOS 49
8.2. Setup Menus 50
8.2.1. Main Setup Menu 50
8.2.2. Advanced Setup Menu 52
8.2.3. Chipset Setup Menu 57
8.2.4. Security Setup Menu 60
8.2.4.1. Remember the Password 61
8.2.5. Boot Setup Menu 62
8.2.6. Exit Setup Menu 64
8.3. The uEFI Shell 65
8.3.1. Basic Operation of the uEFI Shell 65
8.3.1.1. Entering the uEFI Shell 65
8.3.1.2. Exiting the uEFI Shell 65
8.4. uEFI Shell Scripting 66
8.4.1. Startup Scripting 66
8.4.2. Create a Startup Script 66
8.4.3. Examples of Startup Scripts 66
8.4.3.1. Execute Shell Script on other Harddrive 66
8.5. Firmware Update 66
8.5.1. Updating Procedure 66
9/ Technical Support 68
9.1. Warranty 68
9.2. Returning Defective Merchandise 68
List of Acronyms 70
About Kontron 71

List of Tables

Table 1: Component Product Numbers 13
Table 2: List of Accessories 14
Table 3: List of Cooling Solutions 14
Table 4: List of Miscellaneous Parts 14
Table 5: Component Main Data 18
Table 6: Environmental Conditions 21
Table 7: Connector Definitions 27
Table 8: Processor Support 28
Table 9: Memory Support 28
Table 10: Pin Assignment MicroSIM 29
Table 11: Pin Assignment MicroSD 29
Table 12: Pin Assignment 30
Table 13: Signal Description 31
Table 14: Pin Assignment 31
Table 15: Signal Description 31
Table 16: 3-pin Mode 33
Table 17: Signal Description 33
Table 18: Internal Power Connector 35
Table 19: FP Connection 35
Table 20: USB Internal Connection 36
Table 21: Pinout SBC Connector 36
Table 22: CMOS Internal Connection 37

Table 23: Always ON Internal Connection 38
Table 24: LVDS Pin Assignment 38
Table 25: Pin Assignment 40
Table 26: Signal Description 40
Table 27: MiniDisplay Port 41
Table 28: Pin Assignment mPCIe 42
Table 29: Pin Assignment Serial COM 44
Table 30: Pin Assignment Audio Connector 44
Table 31: BIOS Recovery Connector 45
Table 32: S/PDIF Connector 45
Table 33: Power Management 47
Table 34: Navigation Hot Keys Available in the Legend Bar 49
Table 35: Main Setup Menu Sub-screens 51
Table 36: Advanced Setup menu Sub-screens and Functions 53
Table 37: Chipset Setup menu Sub-screens and Functions 57
Table 38: Security Setup Menu Functions 60
Table 39: Boot Setup Menu Functions 62
Table 40: Save and Exit Setup Menu Functions 64

List of Figures

Figure 1: pITX-APL V2.0 board 11
Figure 2: Premounted System with Pigtail Modul 13
Figure 3: Block Diagram 17
Figure 4: Front Side and Interfaces 24
Figure 5: Rear Side 26
Figure 6: Pigtail Battery 26
Figure 7: Combo Connector for MicroSD and MicroSIM 29
Figure 8: Ethernet Connector 30
Figure 9: USB 2.0/3.0 socket 31
Figure 10: USB 2.0 High Speed Cable 32
Figure 11: USB 3.0 High Speed Cable 32
Figure 12: 3-pin Fan Connector 33
Figure 13: Power Jack Connector 34
Figure 14: Internal Power Connector 35
Figure 15: FP Connector 35
Figure 16: USB Internal Connector 36
Figure 17: SBC Connector 36
Figure 18: CMOS Internal Connector 37
Figure 19: Autostart 38
Figure 20: LVDS Connector 38
Figure 21: SATA Connector 40
Figure 22: Available Cable Kits 40
Figure 23: Mini DisplayPort 41
Figure 24: M.2 Slot Connector 42
Figure 25: Serial COM 44
Figure 26: Audio Connector 44
Figure 27: BIOS Recovery Connector 45
Figure 28: S/PDIF Connector 45
Figure 29: Real-Time Clock 46
Figure 30: Recommended Power Supply 47
Figure 31: Main Setup Menu Initial Screen 50
Figure 32: Advanced Setup Menu Initial Screen 52
Figure 33: Chipset Setup Menu Initial Screen 57
Figure 34: Security Setup Menu Initial Screen 60
Figure 35: Boot Setup Menu Initial Screen 62

Figure 36: Save and Exit Setup Menu Initial Screen 64

1/ Introduction

This manual describes the pico-ITX board with Intel CPU. This board will also be denoted pITX-APL V2.0 within this Users Guide.


The use of this Users Guide implies a basic knowledge of PC hard- and software. This manual is focussed on describing the pITX-APL V2.0 board's special features and is not intended to be a standard PC textbook.

New users are recommended to study the short installation procedure stated in the following chapter before switching-on the power.

All configuration and setup of the CPU board is either done automatically or manually by the user via the BIOS setup menus.

Latest revision of this manual, datasheet, BIOS, drivers, BSPs (Board Support Packages) can be downloaded from Kontron Web Page.

Figure 1: pITX-APL V2.0 board

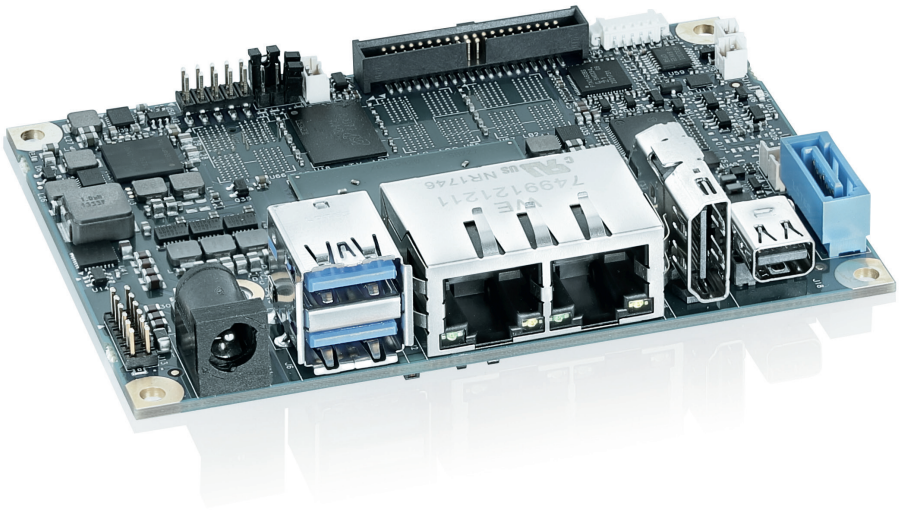

2/ Description

The board is based on the Intel System on Chip (SoC) and is mechanically compliant to the Pico-ITX (pITX) specification. Board key features are:

- 4x channel LPDDR4, support maximum memory size up to 16 GB
- 1x Mini DisplayPort Rear Connector
- 1x HDMI
- 1x 24-bit Dual-Channel LVDS Converter for External Display with 12 V Backlight power output support
- 2x 10/100/1000 Gigabit LAN Rear Port
- 1x Dual-Stacked USB 3.0 Rear Port
- 2x Internal USB 2.0 headers
- 1x M.2 B-Key half-size connector for 2242 and 3042 modules
- 1x SATA Gen3 (up to 6 GB/s) connector
- 1x 2-wire RS-232 Serial Port internal header
- 1x Internal SPI Interface for external device
- HD Audio with Microphone, Stereo Line-in & Stereo Line-out internal header, S/PDIF
- 1x Internal Front Panel Header for LEDs, Power Buttons and PC Speaker
- WIBU Secure Element (optional)
- TPM 2.0
- 1x Internal Header for up to 10 configurable GPIOs
- 1x Fan connector for CPU
- Temperature Sensor
- +12 V DC Input via locking barrel-type connector or Internal Power Header
- pITX form factor
- 1x Pigtail RTC battery

The pITX-APL V2.0 is part of the Security Solution Product Line. The motherboard is prepared for Application Protection, License Creation, Delivery, Management and Tracking, Implementation of license models as well as the assignment of privileges and access levels.

Typical Applications:

- POS/POI: Higher Graphics and CPU core performance, Low power, multi display support,
- Medical/Connectivity: Higher Graphics and CPU core performance
- Industrial Automation: Wide range of I/Os, compact size, longevity
- Digital signage: Multi display support, low power, wide range of I/Os
- Future-oriented Devices: Display Port and LVDS, low power, compact size
- Kiosk and PoS applications

2.1. Configurations

Kontron offers the pITX-APL V2.0 in different configurations. The products can be ordered in different flavors.


Table 1: Component Product Numbers

Product Number	Description	MTBF (hours)
44012-0200-23-2	Intel® Mobile Celeron® N3350 2C 2.3 GHz, 6 W, Commercial temp, 2 GB RAM ,Entry	1,571,585
44012-0800-20-4	Intel® Atom™ x7 E3950 4C 2.0 GHz, 13 W, Industrial temp, 8 GB RAM, High	1,577,287
44012-0400-18-4	Intel® Atom™ x5 E3940 4C 1.8 GHz, 9,5W, Industrial temp, 4 GB RAM, Intermediate	1,577,287
44012-0200-18-2	Intel® Atom™ x5 E3930 2C 1.8 GHz, 6,5W, Industrial temp, 2 GB RAM, Entry	1,577,287
44012-0800-15-4	Intel® Celeron® J3455 4C 2.3 GHz, 10 W, Commercial Temp, 8 GB RAM, Entry	1,571,585
44012-1600-15-5	Intel® Celeron® J3455 4C 2.3 GHz, 6 W, Commercial, 16 GB RAM, Entry	1,571,585
44012-0800-25-4	Intel® Pentium® Processor N4200 4C 2.5 GHz, 6 W, Commercial, 8 GB RAM, Entry	1,571,585

⚠WARNING

Warning: If changing the premounted cooling system, then the system might get overheated resulting in instable system or defects if the cooling system is insufficient.

Figure 2: Premounted System with Pigtail Modul

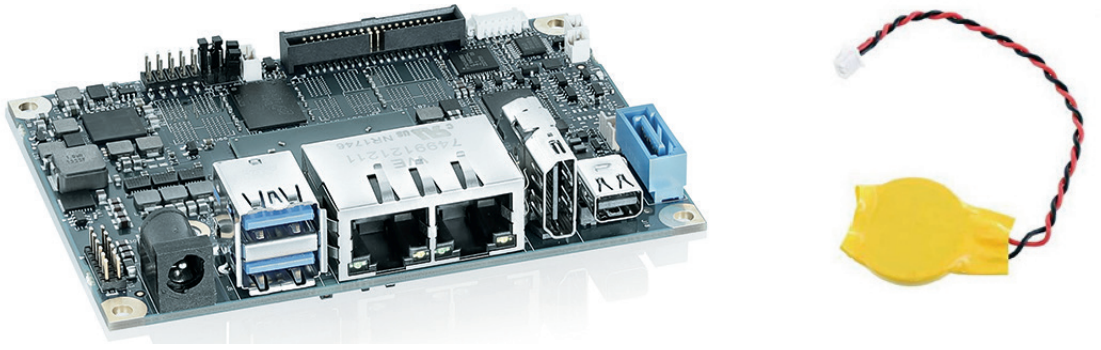

2.2. Accessories List

Table 2: List of Accessories

Connector (RefDes)	On-Board Connectors		Mating Connectors/Cables	
	Manufacturer	Part No.	Manufacturer	Part No.
Fan (J23)	Molex	53047-0310	Molex	51021-0300
			Kontron	1060-9200
SATA (J9)	Lotes	ABA-SAT-010-K08	Kontron	96079-0000-00-1
Audio (J22)	Molex	53261-0671	Molex	51021-0600
			Kontron	96063-0000-00-1
DC Jack (J11)	Kycon	KLDHCX-0202-A-LT	Kycon	KLDX-PA-0202-A-LT
Internal Power (J4)	Molex	105313-1102	Molex	1053071202
LVDS (J19)	Samtec	SHF-120-01-F-D-SM-K-TR	Don Connex	A32-40-C-G-B-1
	Pinrex	53C-90-40GBE0	Pinrex	977-31-403204
			Kontron	1067-3534
Serial COM (J20)	Molex	53261-0571	Molex	51021-0500
			Kontron	1055-8059
SPI (J12)	Molex	53261-0971	Molex	51021-0900
GPIO (Battery Module)	Molex	53261-1071	Molex	51021-1000
			Kontron	1055-8063
GPIO (J13)	Molex	87758-1216	Molex	79107-7205
			Kontron	1055-7645
Front Panel (J21)	Molex	87759-1014	Molex	51110-1050
	Amphenol-FCI	57202-F52-06LF	Kontron	1055-8065
USB2.0 (J7, J8)	Molex	53047-0410	Molex	51021-0400
			Kontron	96054-0000-00-2
RTC (J10)	MOLEX	53047-0210	Contacthings Solution	CONT2032

Table 3: List of Cooling Solutions

Cooling Solutions	Part No.
Active Cooling Solution (MTG1-4)	1064-7834
Passive Cooling Solution (MTG1-4)	1065-0044

Table 4: List of Miscellaneous Parts

Miscellaneous Parts	Part No.
Custom Y-cable for 2.5" drives (5V/GND, J7,J8)	1066-8838

3/ Installation procedure

3.1. Installing the Board



ESD Sensitive Device!

Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry.

- Wear ESD-protective clothing and shoes
- Wear an ESD-preventive wrist strap attached to a good earth ground
- Check the resistance value of the wrist strap periodically (OK: 1 MΩ to 10 MΩ)
- Transport and store the board in its antistatic bag
- Handle the board at an approved ESD workstation
- Handle the board only by the edges

To get the board running follow these steps. If the board shipped from Kontron has already components like RAM and CPU cooler mounted, then relevant steps below can be skipped.

1. Turn off the PSU (Power Supply Unit)

NOTICE

Turn off PSU (Power Supply Unit) completely (no mains power connected to the PSU) or leave the Power Connectors unconnected while configuring the board. Otherwise components (RAM, LAN cards etc.) might get damaged. Make sure to use +12 V single supply only. Alternatively use a standard ATX PSU with suitable cable kit and PS_ON# active.

2. Insert the memory module
   Be careful to push it in the slot(s) before locking the tabs. For a list of approved memory modules contact your Distributor or FAE. See also chapter "System Memory Support". Use memory modules with the same density in all sockets!
3. Cooler Installation
   Normally the cooler is premounted, but in case not, then make sure that the heat paste etc. on the cooler is intact and cover the full area of the SoC. Connect cooler fan electrically to the FAN_CPU connector.
4. Connecting Interfaces
   Insert all external cables for hard disk, keyboard etc. A monitor must be connected in order to change BIOS settings.
5. Connect and turn on PSU
   Connect PSU to the board by the ATX +12 V power adapter to the rear DC jack.
6. BIOS Setup
   Enter the BIOS setup by pressing the <DEL> key during boot up.

   Enter "Exit Menu" and load Setup Defaults.

   Refer to the "BIOS Configuration/Setup" section of this manual for details on BIOS setup.



To clear all BIOS settings, including Password protection, activate "Load Default BIOS Settings" Jumper for > 10 sec (without power connected).

7. Mounting the board in chassis

NOTICE

When mounting the board to chassis etc. please notice that the board contains components on both sides of the PCB which can easily be damaged if board is handled without reasonable care. A damaged component can result in malfunction or no function at all.

When fixing the Motherboard on a chassis it is recommended to use screws with integrated washer and a diameter of > 7 mm. Do not use washers with teeth, as they can damage the PCB and cause short circuits.

3.2. Requirements IEC60950-1

Take care when designing chassis interface connectors in order to fulfil the IEC60950-1 standard. Users of pITX-APL V2.0 must evaluate the end product to ensure compliance the requirements of the IEC60950-1 safety standard are met:

- The motherboard must be installed in a suitable mechanical, electrical and fire enclosure.
- The system in its enclosure must be evaluated for temperature and air flow considerations.
- The motherboard must be powered by a CSA or UL approved power supply that limits the maximum input current to 6 A to an external 12 V locking barrel-type DC jack or to an internal 12 V 2-pin DC power connector.
- For interfaces having a power pin such as external power or fan, ensure that the connectors and wires are suitably rated. All connections from/to the product shall be with SELV circuits only.
- Wires have suitable rating to withstand the maximum available power.
- The enclosure of the peripheral device fulfils the fire protecting requirements of IEC60950-1.

3.3. Lithium battery precautions

⚠CAUTION

Danger of explosion if the lithium battery is incorrectly replaced.

- Replace only with the same or equivalent type recommended by the manufacturer
- Dispose of used batteries according to the manufacturer's instructions

VORSICHT! Explosionsgefahr bei unsachgemäßem Austausch der Batterie.

- Ersatz nur durch denselben oder einen vom Hersteller empfohlenen Typ
- Entsorgung gebrauchter Batterien nach Angaben des Herstellers

ATTENTION! Risque d'explosion avec l'échange inadéquat de la batterie.

- Remplacement seulement par le même ou un type équivalent recommandé par le producteur
- L'évacuation des batteries usagées conformément à des indications du fabricant

PRECAUCION! Peligro de explosión si la batería se sustituye incorrectamente.

- Sustituya solamente por el mismo o tipo equivalente recomendado por el fabricante
- Disponga las baterías usadas según las instrucciones del fabricante

ADVARSEL! Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.

- Udskiftning må kun ske med batteri af samme fabrikat og type
- Levér det brugte batteri tilbage til leverandøren.

ADVARSEL! Eksplosjonsfare ved feilaktig skifte av batteri.

- Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten.
- Brukte batterier kasseres i henhold til fabrikantens instruksjoner

VARNING! Explosionsfara vid felaktigt batteribyte.

- Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
- Kassera använt batteri enligt fabrikantens instruktion.


VAROITUS! Paristo voi räjähtää, jos se on virheellisesti asennettu.

- Vaihda paristo ainoastaan lalteval- mistajan suosittelemaan tyyppiln
- Hävitä käytetty paristo valmistajan ohjeiden mukaisesti

4/ System specifications

4.1. Block Diagram

Figure 3: Block Diagram

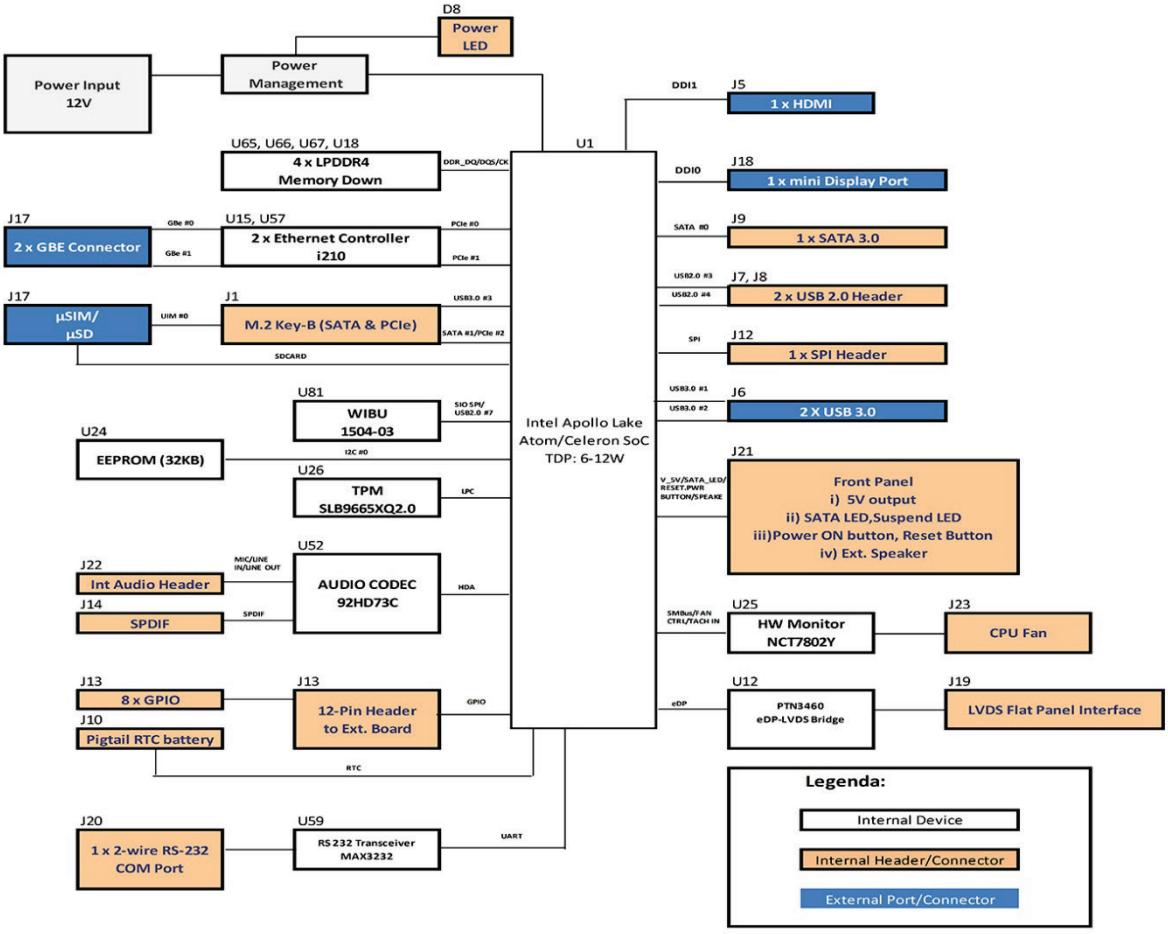

4.2. Component Main Data

The table below summarizes the features of the pITX-APL V2.0 embedded motherboard.

Table 5: Component Main Data

Motherboard pITX-APL	
Form factor	Pico-ITX (100 mm by 72 mm by 1.6 mm/Length x Width x Thickness)
Mechanical Dimensions with cooling solution	100 mm x 72 mm x 41 mm (Length x Width x Height)
Processor	Onboard CPU variants Intel® Processor line, 14 nm SoC ▶ Intel® Atom™ x7 E3950 4C 2.0 GHz, 13 W ▶ Intel® Atom™ x5 E3940 4C 1.8 GHz, 9.5 W ▶ Intel® Atom™ x5 E3930 2C 1.8 GHz, 6.5 W ▶ Intel® Celeron® N3350 2C 2.3 GHz, 6 W ▶ Intel® Celeron® Processor J3455 2.3GHz, 10 W ▶ Intel® Pentium® Processor N4200, 4 Cores, 2.5 GHz, 6 W
BIOS	AMI Aptio V
EEPROM	Atmel AT24C32 for board information
Memory	4x channel LPDDR4, support maximum memory size up to 16 GB
Flash Memory	The pITX-APL V2.0 board supports microSD cards via onboard microSD/microSIM combo connector. The microSD card interface is sharing a combo connector with the micro SIM card.
Storage	The pITX-APL V2.0 supports one SATA Gen 3 port.
Wake On	Wake on LAN, USB, Power button (S3 to S5)
Hardware Status Monitor	The hardware monitoring chip NCT7802Y is connected via SMBus and incorporates the following features: ▶ CPU Temperature Monitoring ▶ Voltages Level ▶ Fan Control
TPM	Infineon SLB9665XQ2.0
Power management	ACPI 5.0 support: ▶ Processor Core C-States (CC0, CC1, CC6) ▶ Processor Core/Package States support (C0, C1, C1E, C6, C6L, C7, C8, C9, C10) ▶ Processor Module States (MC0-CC0, MC0-CC6, MC7) ▶ Display States support (D0, D1, D2, D3, D4, D5, D9) ▶ Graphics States (RC0, RC1, RC6) ▶ System Sleep States (S0, S0ix, S3, S4, S5) ▶ Dynamic I/O power reduction (disabling sense amps on input buffers, tri-stating output buffers) ▶ Active power-down of Display links
Battery	BR2032 Pigtail Battery See Safety Instructions below this table!
Expansion	1x M.2 for 2242 and 3042 modules (PCIe Rev 2.0), SATA Gen 3.0

Operating System Support	Six different Board Support Packages are offered: ▶ BSP1: Windows 10 IOT Enterprise 64 bit, eMMC Boot ▶ BSP2: Windows 10 IOT Core, Redstone 64 bit ▶ BSP3: Linux 64 bit, Yocto ▶ BSP4: VxWorks 7.x or newer (optional) ▶ API: KEAPI 3 for all OS (except for VxWorks)
External I/O	
LAN, USB3.0	2x RJ-45 LAN Ports and dual USB3.0
Graphics	1x Mini DisplayPort Rear Connector, 1x HDMI
Power	12 V DC-IN Power Jack
Internal I/O	
SATA	1x SATA Gen 3 straight with Locking Latch
USB 2.0	2x USB 2.0 4-pin header
Serial Peripheral Interface (SPI)	1x internal 9-pin header
LVDS	1x 24-bit Dual-Channel LVDS Converter for External Display with 3.3 V/5 V Backlight power output support
M.2 B-Key	1x M.2 B-Key for 2242 and 3042 modules half-size connector with SIM Card Interface, NGFF SATA SSD and USB3.0/2.0
Audio	HD Audio with Microphone, Stereo Line-in & Stereo Line-out internal header, SPDIF
Serial	1x RS232
Internal Header	
Power	Locking barrel-type DC Power Jack internal 2-pin Power connector (optional)
CPU Fan	1x 1.25 mm 3-pin CPU Fan connector
CMOS Clear/Autostart	2x (1x 3) 2 mm pin-header
Front Panel	1x (2x 5) 2 mm pin connector
MicroSD/microSIM	microSD & microSIM combo socket adapter

Display	
Display Interface	1x HDMI, 1x miniDisplay Port and 1x LVDS internal Note: Three independent Displays Max.
Resolution	max 4096x2304 @ 60 Hz, 24 bpp (One panel display)
Ethernet	
Controller	Intel i210/i211
Interface	IEEE 802.3 10BASE-T / 100BASE-TX / 1000BASE-T compliant
Audio	
Universal Audio Architecture (UAA)	The onboard audio codec supports High Definition Audio with UAA (Universal Audio Architecture). The following connections are available via an internal header: ▶ Stereo Line-Out ▶ Stereo Line-in ▶ Mono Microphone-in
Power	
External Power Supply	The pITX-APL V2.0 is operated by a single 12 V DC supply via a locking Barrel-type jack or through an internal 2-pin header.

⚠CAUTION

Danger of explosion if the lithium battery is incorrectly replaced.

- Replace only with the same or equivalent type recommended by the manufacturer
- Dispose of used batteries according to the manufacturer's instructions

Table 6: Environmental Conditions

Operating	It is the customer's responsibility to provide sufficient airflow around each of the components to keep them within allowed temperature range. The board has two temperature ranges: ▶ commercial grade: 0°C to +60°C (32°F~140°F) operating temperature (forced cooling). ▶ extended grade: -25°C to +75°C (-13°F~167°F) operating temperature (SKU Dependent and with standard cooler running at maximum speed) ▶ DC Voltage Limits: ±5 % of nominal voltage. 10 % to 95 % relative humidity non-condensing at temperature of 25°C to 30°C
Storage	-40°C to 85°C (-40°F to 185°F); lower limit of storage temperature is defined by specification restriction of on-board BR2032 battery. Up to 95 % relative humidity (temperature 25°C to 30°C) ▶ Thermal ramps: 4 cycles between limits at a rate of ≤ 20°C per hour ▶ Temperature extremes: 36 nonconsecutive hours at high limit ▶ 24 nonconsecutive hours at low limit
Radiated Emissions (EMI)	All Peripheral interfaces intended for connection to external equipment are EMI protected. Compliant to the requirements of: ▶ EN55032 Class B radiated and conducted
Immunity	Includes following tests accordingly: ▶ IEC 61000 PT4-2, (EN 61000-4-2) Electrostatic discharge immunity ESD ▶ IEC 61000 PT4-3, (EN 61000-4-3 and ENV 50204) Radiated Field ▶ IEC 61000 PT4-4, (EN 61000-4-4) Electrical fast transient/burst (EFT) BURST ▶ IEC 61000 PT4-5, (EN 61000-4-5) Surge immunity test ▶ IEC 61000 PT4-6, (EN 61000-4-6) Immunity to conducted disturbances ▶ IEC 61000 PT4-8, (EN 61000-4-8) Immunity to magnetic fields (LOW)
REACH	Regulation (EC) No 1907/2006
Safety	IEC 62368-1: Safety for information technology equipment including electrical business equipment
Shock	Conducted in standard available ATX chassis. Test is following Standard IEC 60068-2-27, half-sine wave, Acceleration 2 g, Pulse duration : 11 ms. Number of shocks: 600 shocks (100 shocks for each face.)
Bump	IEC 60068-2-27: Half Sine Waveform Acceleration 2 g; Pulse Duration 11 ms. Number of shocks: 600 shocks (100 shocks for each face.)
Vibration	AW IEC 60068-2-64, test Fh, Random Vibration, 90 min per axis, 3 axes at 1.9 grms, with PSD: 10-20Hz: 0.05 g^2/Hz and 20-500Hz:- 3dB/octave.
MTBF	43.800 hours depending on processor type and according to Telcordia standard SR-332 Issue 3 at 30°C
Restriction of Hazardous Substances (RoHS II)	The product will comply to the European Council Directive on the approximation of the laws of the member states relating to Directive 20011/65/EU or the last status thereof.
Altitude	2000 m max., optionally 3000 m

Cooler	The Cooler heatspreader is active on the pITX-APL V2.0, so the cooler has integrated fan (UL-approved) with the following specifications: Supply Voltage: 4.5 V to 5.5 V Startup Voltage: 4.0 V Rotation Speed, rated: 5000 RPM Noise level, maximum: 27.0 dB(A) MTBF: 70000 Hours @ 40°C Operating Temperature: -25°C to +90°C

5/ Jumpers and Connectors

5.1. Hardware Configuration Setting

This chapter gives the definitions and shows the positions of jumpers, headers and connectors. All of the configuration jumpers on the board are in the proper position. The default settings shipped from factory are marked with an asterisk (*).


In general, jumpers on the board are used to select options for certain features. Some of the jumpers are designed to be user-configurable, allowing for system enhancement. The others are for testing purpose only and should not be altered. To select any option, cover the jumper cap over (SHORT) or remove (NC) it from the jumper pins according to the following instructions. Here, NC stands for “Not Connect”.


5.1.1. Jumpers and Connectors

Jumper	Function	Remark
CLR_CMOS (J15)	Clear CMOS	1x 3-pin header
AUTOSTART (J3)	Always on	1x 3-pin header
Connector	**Function**	**Remark**
CPU_FAN1 (J23)	CPU FAN Connector	1x 3-pin connector
Front Panel (J21)	Front Panel Connector	2x 5-pin header
LVDS (J19)	LVDS Connector	2x 20-pin connector
ATX 2-pin (J4)	ATX Power Connector	1x 4-pin connector
DC Jack (J11)	Power Connector	Jack
M.2 (J1)	M.2 Connector	Standard
SATA (J9)	SATA3.0 Connector	Standard
S/PDIF (J14)	S/PDIF Connector	1x 2-pin connector
RS232 (J20)	RS232 Connector	1x 5-pin connector
BIOS Recovery (J12)	BIOS Recovery Connector	1x 9-pin connector
GPIO (J13)	GPIO Connector	2x 6-pin header
USB 2.0 internal (J7, J8)	USB 2.0 internal	2x 4-pin connector
Front Panel Audio (J22)	Audio Connector	1x 6-pin Header

5.2. Mainboard Placement and Rear I/O locations

Figure 4: Front Side and Interfaces

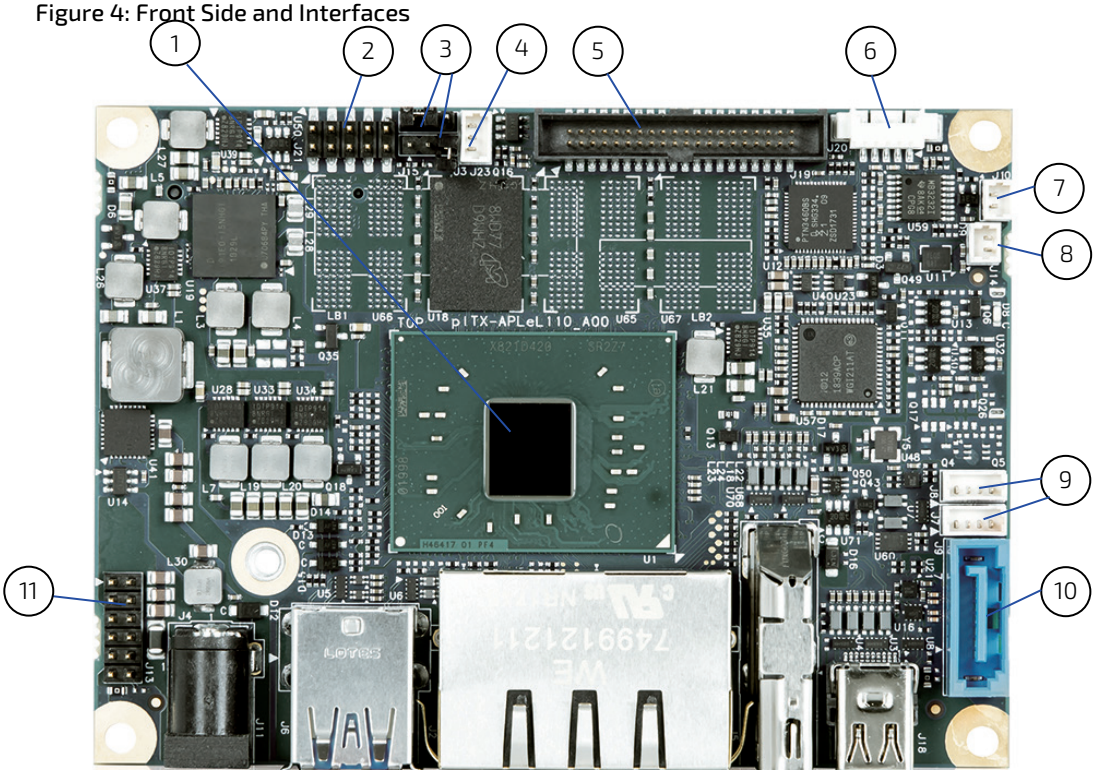


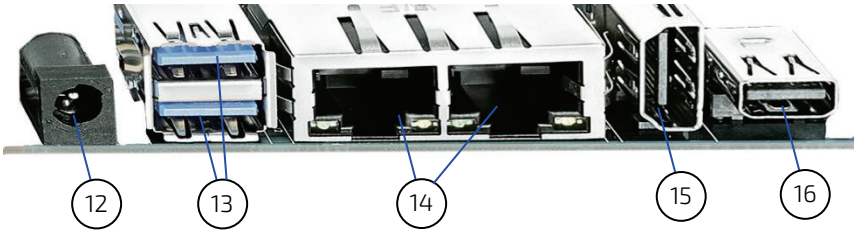

1 CPU
2 Front Panel header (J21)
3 Load BIOS Default Jumper (J15, down)
Autostart Jumper (J3, up)
4 CPU fan (J23)
5 LVDS connector (J19)
6 RS232 connector (J20)
7 Pigtail battery (J10)
8 S/PDIF (J14)
9 USB internal or custom Y- cable for 2.5" SSD (J7, J8)
10 SATA connector (J9)
11 GPIO (8x GPIOs, 1x 3.3 V 2x GND, 1x ext Bat)) (J13)
12 DC Power Jack (J11)
13 Dual USB 3.0
14 Dual Ethernet
15 HDMI
16 Mini DisplayPort

5.2.1. Rear Side

Figure 5: Rear Side

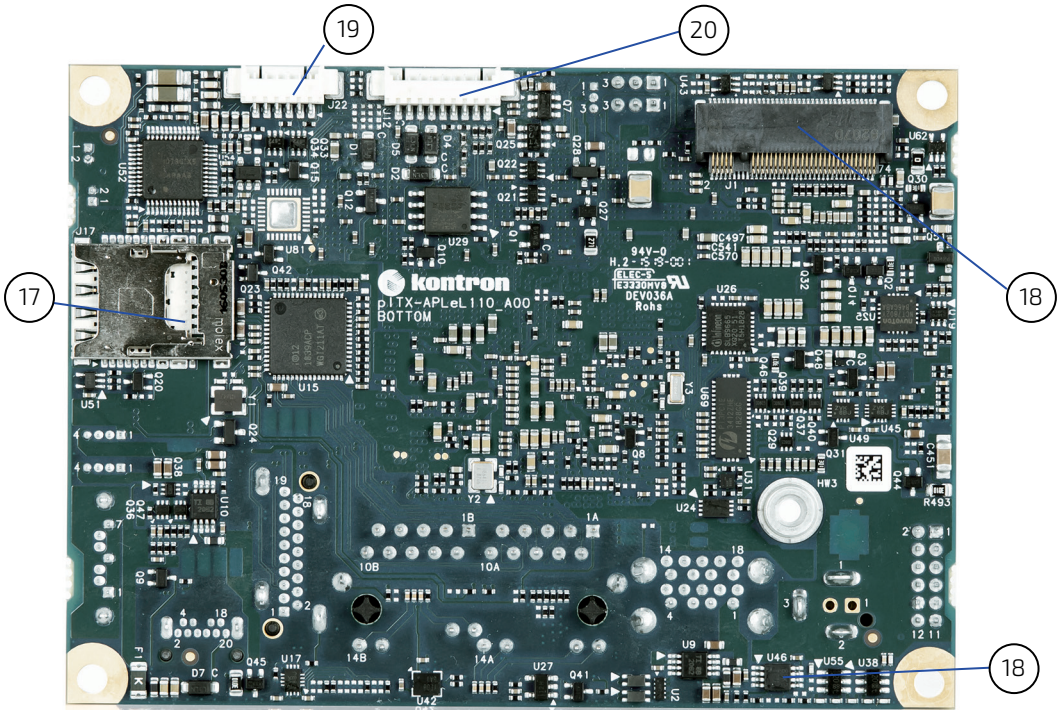

17 MicroSIM/MicroSD Combo adapter


18 M.2 B-Keyconnector for 2242 and 3042 modules

19 Front Panel Audio connector (J22)

20 BIOS recovery (J12)

21 Temperature Sensor (U46)

Figure 6: Pigtail Battery

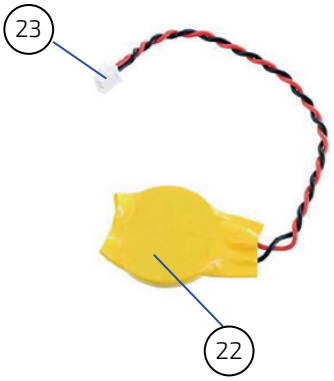

22 BR2032 battery

23 2-pin Header

6/ Pin Definitions

The following sections provide pin definitions and detailed description of all on-board connectors.
The connector definitions follow the following notation:

Table 7: Connector Definitions

Column Name	Description
Pin	Shows the pin-numbers in the connector. The graphical layout of the connector definition tables is made similar to the physical connectors.
Signal	The mnemonic name of the signal at the current pin. The notation "XX#" states that the signal "XX" is active low.
Type	AI: Analog Input. AO: Analog Output. I: Input, TTL compatible if nothing else stated. IO: Input / Output. TTL compatible if nothing else stated. IOT: Bi-directional tristate IO pin. IS: Schmitt-trigger input, TTL compatible. IOC: Input / open-collector Output, TTL compatible. IOD: Input / Output, CMOS level Schmitt-triggered. (Open drain output) NC: Pin not connected. O: Output, TTL compatible. OC: Output, open-collector or open-drain, TTL compatible. OT: Output with tri-state capability, TTL compatible. LVDS: Low Voltage Differential Signal. PWR: Power supply or ground reference pins.
	Ioh: Typical current in mA flowing out of an output pin through a grounded load, while the output voltage is > 2.4 V DC (if nothing else stated). Iol: Typical current in mA flowing into an output pin from a VCC connected load, while the output voltage is < 0.4 V DC (if nothing else stated).
Pull U/D	On-board pull-up or pull-down resistors on input pins or open-collector output pins.
Note	Special remarks concerning the signal.
Designation	Type and number of item described
see Section	Number of section in this manual containing detailed description

6.1. Processor Support

The Intel BGA1296 14 nm is a SoC architecture with integrated Memory and Graphics Controller. The system supports the following embedded Stockkeeping Units (SKUs):

- Intel® Atom™ x7 E3950 4C 2.0 GHz, 12 W
- Intel® Atom™ x5 E3940 4C 1.8 GHz, 9.5 W
- Intel® Atom™ x5 E3930 2C 1.8 GHz, 6.5 W
- Intel® Celeron® N3350 2C 2.3 GHz, 6 W
- Intel® Celeron® J3455, 2.3 GHz, 10 W
- Intel® Pentium® N4200, 4 Cores, 2.5 GHz, 6 W

Kontron has defined the board versions as listed in the following table, so far all based on Embedded CPUs.

Table 8: Processor Support

Name	Product number	Speed	Embed.	Cache	TDP / Tj
Atom x7 E3950 4C	1065-1605	2.0 GHz	Yes	2 MB	12 W/110°C
Atom x5 E3940 4C	1065-1555	1.8 GHz	Yes	2 MB	9.5 W/85°C
Atom x5 E3930 4C	1065-1604	1.8 GHz	Yes	2 MB	6.5 W/110°C
Intel® Celeron® N3350 2C	1065-1723	2.3 GHz	Yes	2 MB	6 W/105°C
Intel® Celeron® J3455	1066-9192	2.3 GHz	Yes	2 MB	10 W/105°C
Intel® Pentium® N4200	1065-1724	2.5 GHz	Yes	2 MB	6 W/105°C

6.2. System Memory Support

The pITX-APL V2.0 board supports up to 4x LPDDR4 NON ECC Memory Down. The integrated memory controller can support memory speeds of 2400 MHz. 2400 MHz except for E3930 and E3940: These processors only support up to 2133 MHz. Maximum memory supported is 16 GB.



If using 32 Bit OS, less than 4 GB are displayed in the system (Shared Video Memory/PCI resources are subtracted).

Kontron offers the following memory module:

Table 9: Memory Support

Memory Module Description
4x LPDDR4 NON ECC Memory Down, support maximum memory size up to 16 GB

6.3. MicroSD and MicroSIM

Figure 7: Combo Connector for MicroSD and MicroSIM

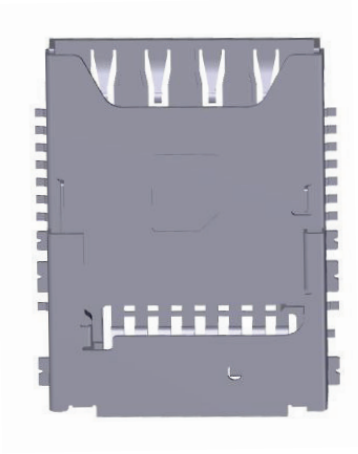


Table 10: Pin Assignment MicroSIM

Pin	Type
1	V_VCC
2	RST
3	CLK_S3
4	RSVD_S4
5	GND_S5
6	V_VPP
7	I/O
8	RSVD_S8

Table 11: Pin Assignment MicroSD

Pin	Type
1	DAT2
2	CD/DAT3
3	CMD
4	V_VDD
5	CLK_T5
6	VSS/GND
7	DAT0
8	DAT1
SW	CARD_DETECT

6.4. Ethernet Connectors (I/O area)

The pITX-APL V2.0 supports three channels of 10/100/1000 Mbit/s Ethernet (LAN1, LAN2).

In order to achieve the specified performance of the Ethernet port, Category 5 twisted pair cables must be used with 10/100 MByte/s and Category 5E, 6 or 6E with 1 Gbit/s LAN networks.

Figure 8: Ethernet Connector

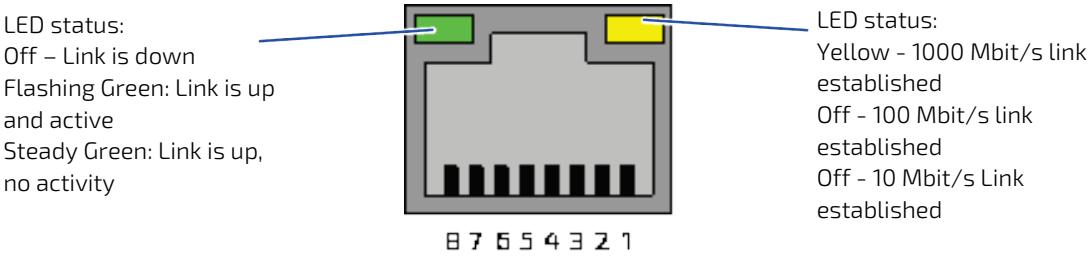


Table 12: Pin Assignment

Pin	Signal	Ethernet 10 BaseT/100BaseT	Gigabit-Ethernet
1	MDI0+	TX+	D1+
2	MDI0-	TX-	D1-
3	MDI1+	RX+	D2+
4	MDI1-		D3+
5	MDI2+		D3-
6	MDI2-	RX-	D2-
7	MDI3+		D4+
8	MDI3-		D4-

Table 13: Signal Description

Signal	Description
MDI[0]+ / MDI[0]-	In MDI mode, this is the first pair in 1000Base-T, i.e. the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX.
MDI[1]+ / MDI[1]-	In MDI mode, this is the second pair in 1000Base-T, i.e. the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX.
MDI[2]+ / MDI[2]-	In MDI mode, this is the third pair in 1000Base-T, i.e. the BI_DC+/- pair. In MDI crossover mode, this pair acts as the BI_DD+/- pair.
MDI[3]+ / MDI[3]-	In MDI mode, this is the fourth pair in 1000Base-T, i.e. the BI_DD+/- pair. In MDI crossover mode, this pair acts as the BI_DC+/- pair.

6.5. USB Connectors (I/O area)

The pITX-APL V2.0 board contains support for two USB3.0/2.0 in the IO area. Two internal USB2.0 ports are available via internal 4-pin connectors. USB 2.0 ports allowing data transfers up to 480 Mb/s. The USB 3.0 port allowing data transfers up to 5 Gb/s.

Figure 9: USB 2.0/3.0 socket

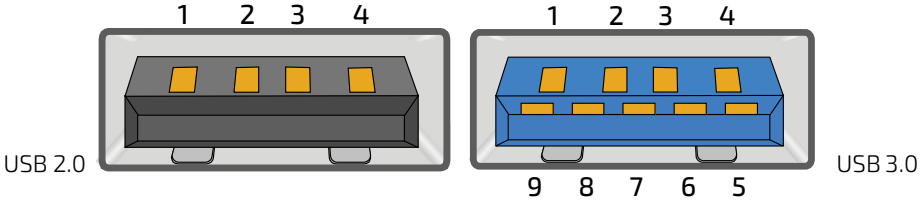


Table 14: Pin Assignment

Pin	Type	Signal	Note
1	PWR	GND	USB2.0 / 3.0
2	IO	USB n+	USB2.0 / 3.0
3	IO	USB n-	USB2.0 / 3.0
4	PWR	5 V / SB 5 V	USB2.0 / 3.0
5	IO	TXn+	USB3.0
6	IO	TXn-	USB3.0
7	PWR	GND	USB3.0
8	IO	RXn+	USB3.0
9	IO	RXn-	USB3.0


Table 15: Signal Description

Signal	Description
USBn+ USBn-	Differential pair works as serial differential receive/transmit data lines.

Signal	Description
RXn+ RXn- TXn+ TXn-	Change to: USB2.0 (n=0,1,2,3), USB3.0 (n=0,1)
5 V / SB5 V	5 V supply for external devices. SB5 V is supplied during power-down to allow wakeup on USB device activity. Protected by a 2A current limiting IC (1A for each port).


For USB2.0 cabling it is required to use only HiSpeed USB cable, specified in USB2.0 standard:

Figure 10: USB 2.0 High Speed Cable

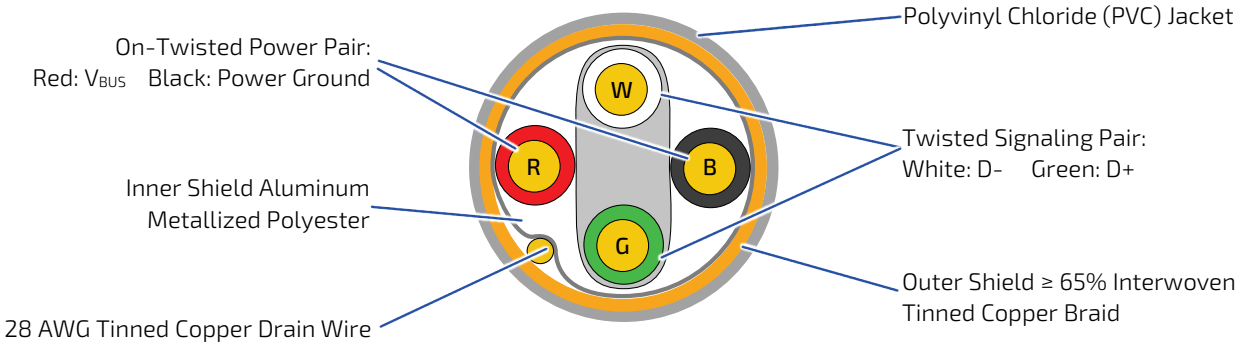

For USB3.0 cabling it is required to use only HiSpeed USB cable, specified in USB3.0 standard:

Figure 11: USB 3.0 High Speed Cable

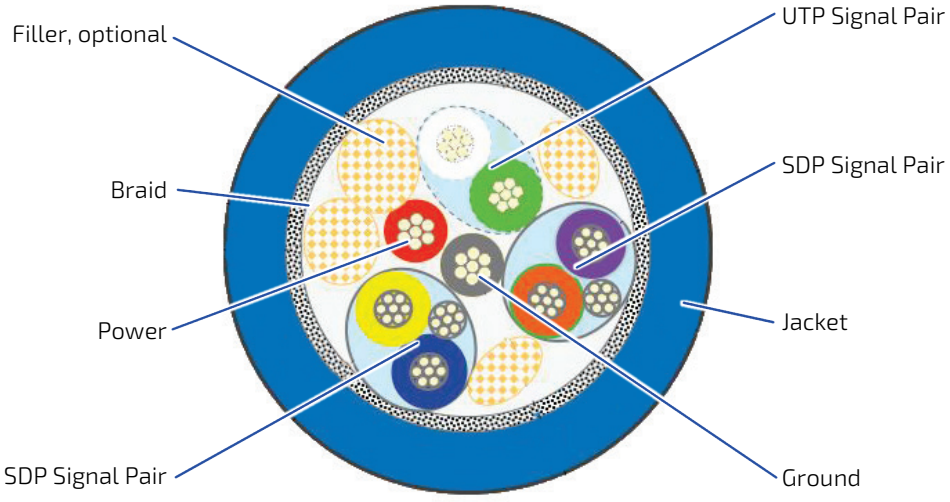

6.6. Fan Connector (internal, J23)

The Fan can be used to actively cool the heatsink mounted on the board. The fan rotation speed can be monitored and the fan speed controlled by the temperature of the PCB (near SoC).

Figure 12: 3-pin Fan Connector

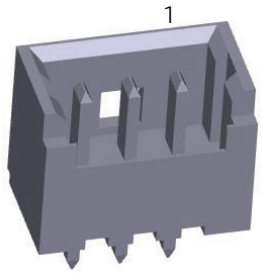


Table 16: 3-pin Mode


Pin	Signal	Description	Type
1	TACHO	Rotation speed	I
2	PWM	PWM output	0-5V
3	GND	Ground	PWR

Table 17: Signal Description

Signal	Description
GND	Power Supply GND signal
TACHO	Tacho input signal from the fan, for rotation speed supervision RPM (Rotations Per Minute).
PWM	Output signal for FAN speed control.

6.7. DC Power Jack Connector (12 Vin Ext., J11)

Figure 13: Power Jack Connector

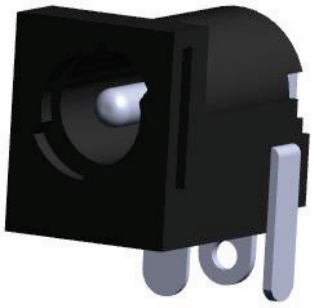

Either the DC Power Jack Connector (12 Vin Ext.) or the "12 Vin Int. (J4)" connector must be used to supply the board with +12 V +/-5 %.

The 12 Vin Ext. power connector has Vin to the center pin and mates with Ø 6.3 mm DC Power jack with Ø 2.0 mm pin hole. (DC Connector RA 2 mm locking type). Maximum allowed current is 5 A.

⚠CAUTION

The board can be supplied via the AC/DC adapter plugged into the power jack. Such adapters have usually no connection to protective earth. Consequently, the potential of the conductive parts on the board may drift. If a human touches such a part, this may lead to an electric shock. The board must be grounded separately, if the unit is supplied via power jack.

⚠WARNING

Hot Plugging power supply is not supported.
Hot plugging might damage the board.

NOTICE

To protect the external power lines of peripheral devices make sure that

- the wires have the right diameter to withstand the maximum available current.
- to enclosure of the peripheral device fulfills the fire-protecting conditions of IEC/EN 60950.

6.8. Internal Power Connector (Vin Int., J4)

Figure 14: Internal Power Connector

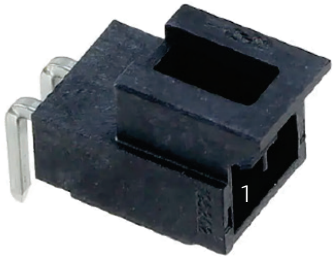


Table 18: Internal Power Connector

Header	Pin	Signal	Description
1	GND	Power Ground	PWR
2	+12 V	+12 V Power input	PWR

Maximum allowed current on each pin is 3 A.

6.9. Front Panel (FP) internal (J21)

Figure 15: FP Connector

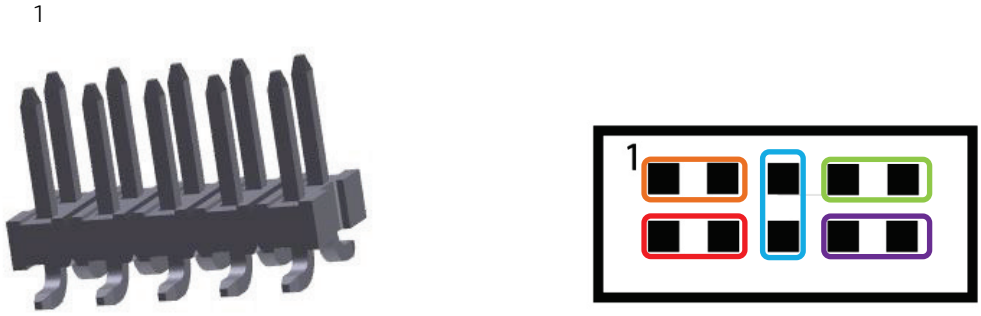


Table 19: FP Connection

Pin	Description	Pin	Description
1	Ext_Reset	2	Ext_PWRBTN
3	GND	4	GND
5	Ext_SPKR	6	Ext_V_5V0_S0
7	Ext_3V3_S5_P7	8	Ext_V_3V3_S5_P8
9	Ext_SATA_LED#	10	Ext_SUS_LED

6.10. USB internal (J7, J8)

Figure 16: USB Internal Connector

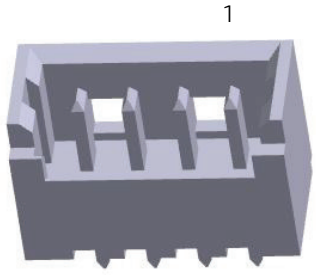


Table 20: USB Internal Connection

Pin	Description	Pin	Description
1	GND	2	USBn+
3	USBn-	4	5 V/SB 5 V

6.11. SBC Connector (GPIO and Ext. Battery) (internal, J13))

Figure 17: SBC Connector

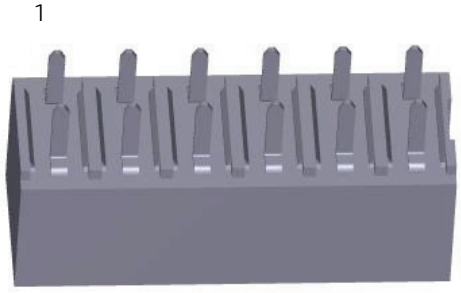


Table 21: Pinout SBC Connector

Pin	Description	Pin	Description
1	V_3V3_S5	2	FGPIO0
3	FGPIO1	4	FGPIO2
5	FGPIO3	6	FGPIO4
7	FGPIO5	8	FGPIO6
9	FGPIO7	10	GND
11	GND	12	EXT_BAT

NOTICE

The GPIO Ports are recommended for internal purpose. The usage on outside a Chassis can cause EMV Problems.

6.12. Jumper Load BIOS Default and Clear CMOS (J15)

Figure 18: CMOS Internal Connector

1

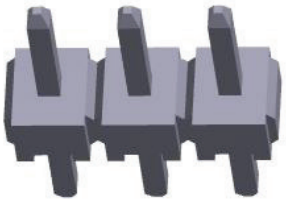


Table 22: CMOS Internal Connection

Pin	Description
1	Clear CMOS#
2	GND
3	DIS_SECCMOS

Function:

Pin 1-2: Clear CMOS

Pin 2-3: Load BIOS Default

Pin 3-X: Default

6.13. Jumper Autostart (J3)

Figure 19: Autostart

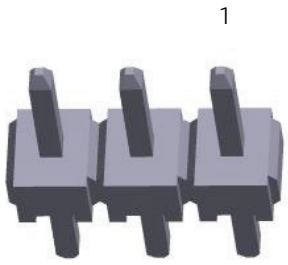


Table 23: Always ON Internal Connection

Pin	Description
1	GND
2	POWERBTNIN#
3	NC

Function:

Pin1-2: Always ON

Pin2-3: Default Position

6.14. LVDS (internal, J19)

Figure 20: LVDS Connector

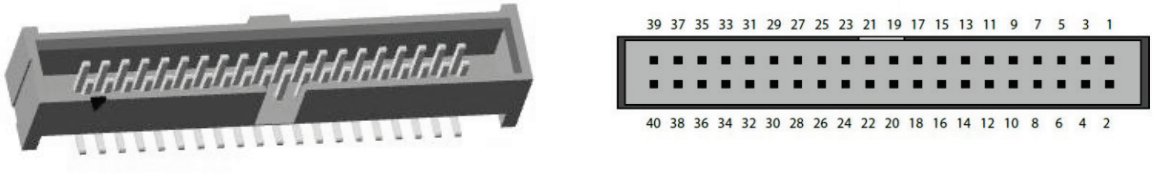


Table 24: LVDS Pin Assignment

Pin	Description	Pin	Description
1	12 V	2	12 V
3	12 V	4	12 V
5	12 V	6	GND
7	5 V	8	GND
9	V_LVDS	10	V_LVDS
11	LVDS_DDC_CLK	12	LVDS_DDC_DATA
13	LVDS_EDP_BKLT_CTRL	14	LVDS_EDP_VDD_EN
15	LVDS_BKLT_EN_OUT	16	GND

Pin	Description	Pin	Description
17	LVDS_A_DATA0-	18	LVDS_A_DATA0+
19	LVDS_A_DATA1-	20	LVDS_A_DATA1+
21	LVDS_A_DATA2-	22	LVDS_A_DATA2+
23	LVDS_A_CLK-	24	LVDS_A_CLK+
25	LVDS_A_DATA3-	26	LVDS_A_DATA3+
27	GND	28	GND
29	LVDS_B_DATA0-	30	LVDS_B_DATA0+
31	LVDS_B_DATA1-	32	LVDS_B_DATA1+
33	LVDS_B_DATA2-	34	LVDS_B_DATA2+
35	LVDS_B_CLK-	36	LVDS_B_CLK+
37	LVDS_B_DATA3-	38	LVDS_B_DATA3+
39	GND	40	GND

6.15. SATA (Serial ATA) Disk Interfaces (internal, J9)

Figure 21: SATA Connector

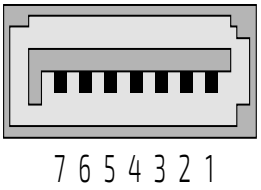


Table 25: Pin Assignment

Pin	Signal	Type
1	GND	PWR
2	SATA* TX+	
3	SATA* TX-	
4	GND	PWR
5	SATA* RX-	
6	SATA* RX+	
7	GND	PWR

Table 26: Signal Description

Signal	Description
SATA0 RX+ / RX-	Host transmitter differential signal pair
SATA0 TX+ / TX-	Host receiver differential signal pair

Figure 22: Available Cable Kits



6.16. Mini DisplayPort

The external Display Port 1.2 at rear I/O space are supporting Active/Passive HDMI 1.4a and DVI adapters.

Figure 23: Mini DisplayPort



Table 27: MiniDisplay Port

Pin	Signal	Description
1	GND	Ground
2	HOT_PLUG	Hot Plug Detect
3	ML_Lane 0+	Lane 0 (positive)
4	CONFIG1	DDIO_DDC_AUX_SEL
5	ML_Lane 0–	Lane 0 (negative)
6	CONFIG2	connected to Ground
7	GND_7	Ground
8	GND_8	Ground
9	ML_Lane 1+	Lane 1 (positive)
10	ML_Lane 3+	Lane 3 (positive)
11	ML_Lane 1 –	Lane 1 (negative)
12	ML_Lane 3-	Lane 3 (negative)
13	GND_13	Ground
14	GND_14	Ground
15	ML_Lane 2+	Lane 2 (positive)
16	AUX CH–	Auxiliary Channel (positive)
17	ML_Lane 2 –	Lane 2 (negative)
18	AUX CH–	Auxiliary Channel (negative)
19	GND_19	Ground
20	DP_PWR	Power for connector (3.3 V 500 mA)

6.17. M.2 B-Key Slot Connector (J1)

NOTICE

The Slot connector detects the mounted card technology (e.g. 2242 and 3042 modules) with autosensing. So there is no need for further configuration.

Figure 24: M.2 Slot Connector

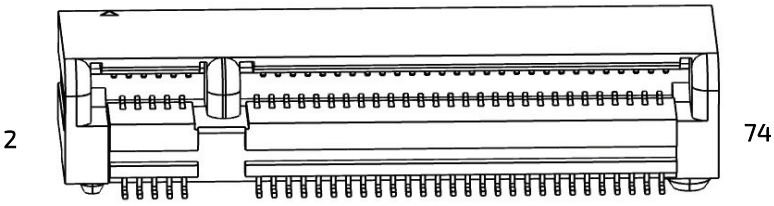


Table 28: Pin Assignment mPCIe

Pin	Signal
1	CONFIG_3#
2	V_3V3_2
3	GND_3
4	V_3V3_4
5	GND_5
6	FULL_CARD_POWER_OFF#
7	USB_D+
8	W_DISABLE#1
9	USB_D-
10	GPIO_9/DAS/DSS#/LED1#
11	GND_11
12	CONNECTOR-KEY_12
13	CONNECTOR-KEY_13
14	CONNECTOR-KEY_14
15	CONNECTOR-KEY_15
16	CONNECTOR-KEY_16
17	CONNECTOR-KEY_17
18	CONNECTOR-KEY_18
19	CONNECTOR-KEY_19
20	GPIO_5
21	CONFIG_0
22	GPIO_6
23	GPIO_11
24	GPIO_7
25	DPR

Pin	Signal
26	GPIO_10
27	GND_27
28	GPIO_8
29	PERN1/USB3_RX-/SSIC_RXN
30	UIM_RESET
31	PERP1/USB3_RX+/SSIC_RXP
32	UIM_CLOCK
33	GND_33
34	UIM_DATA
35	PETN1/USB3_TX-/SSIC_TXN
36	UIM_PWR
37	PETP1/USB3_TX+/SSIC_TxP
38	DEVSLP
39	GND_39
40	GPIO_0/SMB_CLK
41	PERN0/SATA_B+
42	GPIO_1/SMB_DATA
43	PERP0/SATA_B-
44	GPIO_2/ALERT#
45	GND_45
46	GPIO_3
47	PETN0/SATA_A-
48	GPIO_4
49	PETP0/SATA_A+
50	PERST#

Pin	Signal
51	GND_51
52	CLKREQ#
53	REFCLKN
54	PEWAKE#
55	REFCLKP
56	NC_56
57	GND_57
58	NC_58
59	ANTCTL0
60	COEX3
61	ANTCTL1
62	COEX2
63	ANTCTL2

Pin	Signal
64	COEX1
65	ANTCTL3
66	SIM_DETECT
67	RESET#
68	SUSCLK
69	CONFIG_1
70	V_3V3_70
71	GND_71
72	V_3V3_72
73	GND_73
74	V_3V3_74
75	CONFIG_2

6.18. Serial COM (J20)

Figure 25: Serial COM

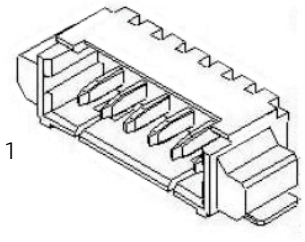


Table 29: Pin Assignment Serial COM

Pin	Signal
1	RS232_TXD
2	RS232_RXD
3	RS232_RTS#
4	RS232_CTS#
5	GND

6.19. Front Panel Audio Connector (J22)

Figure 26: Audio Connector

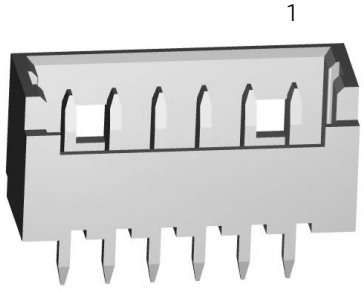


Table 30: Pin Assignment Audio Connector

Pin	Signal
1	LINE_OUT_R_HEADER
2	GND
3	LINE_OUT_L_HEADER
4	LINE_IN_R_HEADER
5	MIC_IN_HEADER
6	LINE_IN_L_HEADER

6.20. BIOS Recovery Connector (J12)

Figure 27: BIOS Recovery Connector



Table 31: BIOS Recovery Connector

Pin	Signal
1	GND
2	SPI_MISO_HEADER
3	SPI_MOSI_HEADER
4	SPI_CS_HEADER#
5	SPI_CLK_HEADER
6	V_3V3_SPI
7	V_3V3_SPI_EXT
8	SPI_ADDIN
9	SPI_ISOLATE#

6.21. S/PDIF Connector (J14)

Figure 28: S/PDIF Connector

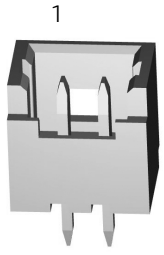


Table 32: S/PDIF Connector

Pin	Signal
1	F_SPDIF_OUT
2	GND

7/ Installation and Power Considerations

7.1. Hardware Monitor


The hardware monitoring chip NCT7802Y is connected via SMBus and incorporates the following features:

- CPU Temperature Monitoring
- Voltages Level
- Fan Control

7.2. Real-Time Clock

A battery maintains power to the real time clock (RTC) when in a mechanical off state. A BR2032 battery is connected using Pigtail battery.

Figure 29: Real-Time Clock

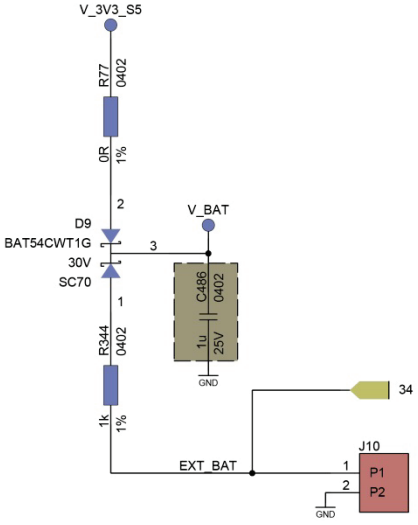

7.3. Onboard Power Supply

All used power rails are generated internal by a highly integrated DC/DC power unit.

- Voltage Ripple specification max ±5 % peak to peak 0-20 MHz
- Rise Time specification 2 to 20ms from input voltage <10 % to nominal VCC
- Max Standby Current < 0.3 A
- Max allowed Inrush Current from G3/S5 to S0

7.4. External Power Supply

The pITX-APL V2.0 is operated by a single 12V DC supply via a locking Barrel-type jack or through an internal 2-pin header.

1. Not recommend to use Power Adapter with 2 pin.
2. Recommend to use Power Adapter with 3 pin.

Figure 30: Recommended Power Supply



7.5. Power Management

ACPI 5.0 support:

- Processor Core C-States (CC0, CC1, CC6)
- Processor Core/Package States support (C0, C1, C1E, C6, C6L, C7, C8, C9, C10)
- Processor Module States (MC0-CC0, MC0-CC6, MC7)
- Display States support (D0, D1, D2, D3, D4, D5, D9)
- Graphics States (RC0, RC1, RC6)
- System Sleep States (S0, S0ix, S3, S4, S5)
- Dynamic I/O power reduction (disabling sense amps on input buffers, tri-stating output buffers)
- Active power-down of Display links

NOTICE

If any of the supply voltages drops below the allowed operating level longer than the specified hold-up time, all the supply voltages should be shut down and left OFF for a time long enough to allow the internal board voltages to discharge sufficiently.
If the OFF time is not observed, parts of the board or attached peripherals may work incorrectly or even suffer a reduction of MTBF.
The minimum OFF time depends on the implemented PSU model and other electrical factors and needs to be measured individually for each case.

Table 33: Power Management

State	Description
G0/S0/C0	**FULL ON:** Processor operating. Individual devices may be shut down to save power. The different processor operating levels are defined by Cx states.
G0/S0/Cx	**Cx State**: Processor manages C-State itself.
G1/S3*	**Suspend-To-RAM (STR):** The system context is maintained in system DRAM, but power is shut off to non-critical circuits. Memory is retained and refreshes continue. All external clocks stop except RTC.

G1/S4	**Suspend-To-Disk (STD):** The context of the system is maintained on the disk. All of the power is shut down except power for the logic to resume. The S4 and S5 states are treated the same.
G2/S5	**Soft-Off:** System context is not maintained. All of the power is shut down except power for the logic to restart. A full boot is required to restart. A full boot is required when waking. The S4 and S5 states are treated the same.
G3	**Mechanical OFF**: System content is not maintained. All power shutdown except for the RTC. No "Wake" events are possible, because the system does not have any power. When system power returns, transition will depend on the state just prior to the entry to G3.

*G1/S3 is only supported in Non-Connected Standby mode.

Power features:

- Reset Button behavior : Board will reset but do not keep reset state as long as reset button is pressed
- Automatic Power On Features: Board can power on automatically in single supply operation with VCC connected if Auto Start is activated.

8/ uEFI BIOS

8.1. Starting the uEFI BIOS

The pITX-APL V2.0 is provided with a Kontron-customized, pre-installed and configured version of American Megatrends, Inc. (AMI). It is based on the Unified Extensible Firmware Interface (uEFI) specification and the Intel® Platform Innovation Framework for EFI. This uEFI BIOS provides a variety of new and enhanced functions specifically tailored to the hardware features of the pITX-APL V2.0.

The BIOS version covered in this document might not be the latest version. The latest version might have certain differences to the BIOS options and features described in this chapter.

The uEFI BIOS comes with a Setup program which provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The Setup program allows the accessing of various menus which provide functions or access to sub-menus with more specific functions of their own.

To start the uEFI BIOS Setup program, follow the steps below:

1. Power on the board.
2. Wait until the first characters appear on the screen (POST messages or splash screen).
3. Press the <DEL> key.
4. If the uEFI BIOS is password-protected, a request for password will appear. Enter either the User Password or the Supervisor Password (see Security menu), press <RETURN>, and proceed with step 5.
5. A Setup menu will appear.

The pITX-APL V2.0 uEFI BIOS Setup program uses a hot key-based navigation system. A hot key legend bar is located on the bottom of the Setup screens.

Table 34: Navigation Hot Keys Available in the Legend Bar

Hotkeys	Description
<F1>	The <F1> key is used to invoke the General Help window.
<->	The<Minus> key is used to select the next lower value within a field.
<+>	The <Plus> key is used to select the next higher value within a field.
<F4>	The <F4> key is used to Exit saving Changes.
<F3>	The <F3> key is used to load Optimized Defaults.
<→> or <←>	The <Left/Right> arrows are used to select major Setup menus on the menu bar. For example: Main screen, Advanced screen, Security screen, etc.
<↑> or <↓>	The <Up/Down> arrows are used to select fields in the current menu. For example a Setup function or a sub-screen.
<ESC>	The <ESC> key is used to exit a Setup menu.
<ENTER>	The <ENTER> key is used to execute a command or select a submenu.

8.2. Setup Menus

The Setup utility features a selection bar at the top of the screen that lists the available menus:

1. Main
2. Advanced
3. Chipset
4. Security
5. Boot
6. Save & Exit


The currently active menu and the currently active uEFI BIOS Setup item are highlighted in white. Use the left and right arrow keys to select the Setup menus.

Each Setup menu provides two main frames. The left frame displays all available functions. Configurable functions are displayed in blue. Functions displayed in black provide information about the status or the operational configuration. The right frame displays a Help window providing an explanation of the respective function.

8.2.1. Main Setup Menu

On entering the uEFI BIOS, the Setup program displays the Main Setup menu. This screen lists basic system and board information.

Figure 31: Main Setup Menu Initial Screen

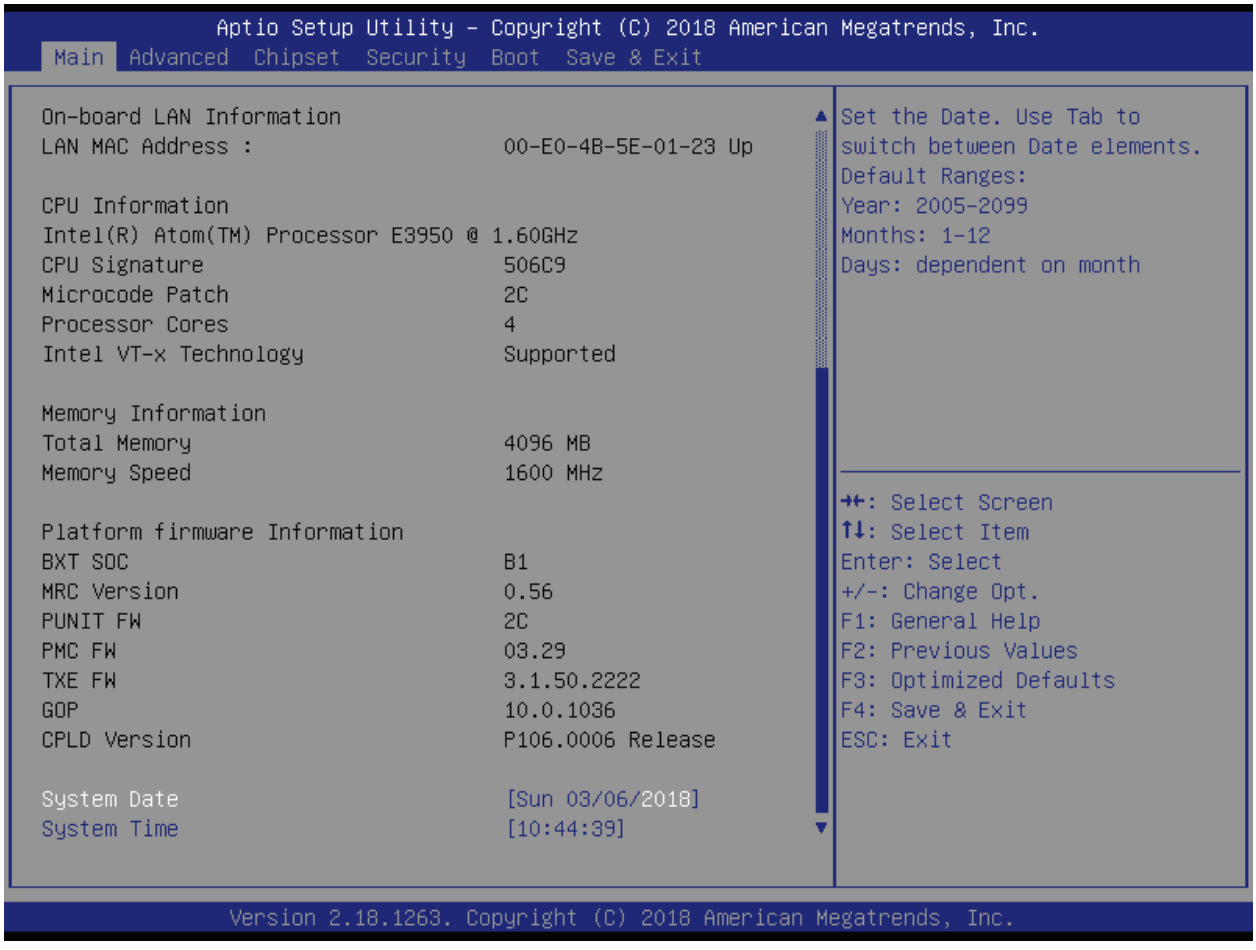

The following table shows Main sub-screens and functions, and describes the content. Default settings are in **bold**.

Table 35: Main Setup Menu Sub-screens


Sub-Screen	Function	Second level Sub-Screen / Description
BIOS Information	Read only field	
	Displays BIOS Information	
	Board Vendor, BIOS Version, Build Date and Time, Access Level	
Board Information	Read only field	
	Displays Board Information	
	Manufacturer, Product Name, PCB Version, Serial Number, Part Number, Boot Count	
On-board LAN Information	Read only field	
	Displays LAN MAC Address	
CPU Information	Read only field	
	Displays CPU Information	
Memory Information	Read only field	
	Displays Memory Information	
Platform firmware Information	Read only field	
	Displays Platform firmware Information	
System Date>	Sets the system date	
	[mm/dd/yyyy]	
System Time>	Sets the system time	
	[hh:mm:ss]	

8.2.2. Advanced Setup Menu

The Advanced Setup menu provides sub-screens and second level sub-screens with functions, for advanced configuration and Kontron specific configurations.

NOTICE Setting items, on this screen, to incorrect values may cause system malfunctions.

Figure 32: Advanced Setup Menu Initial Screen

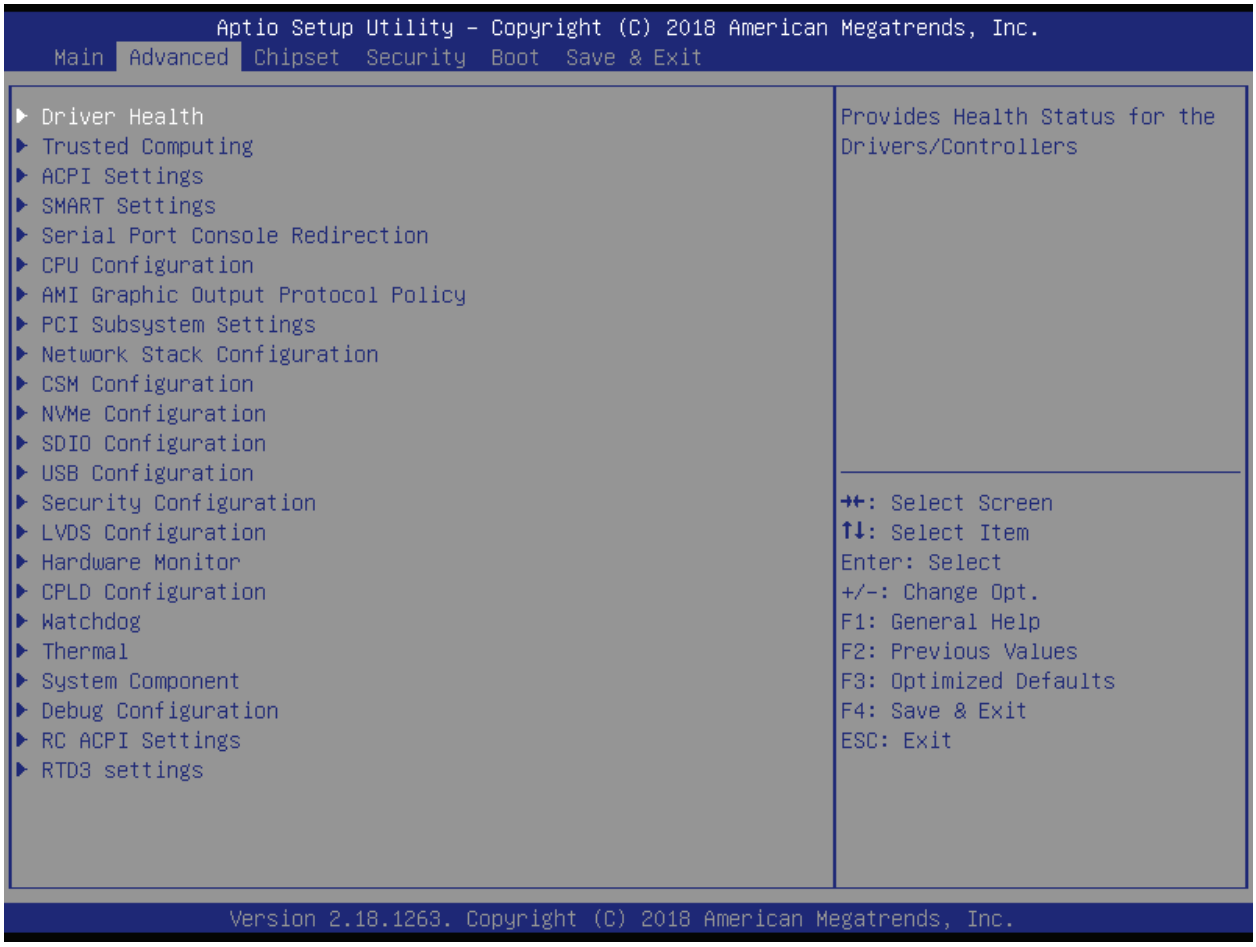

The following table shows the Advanced sub-screens and functions and describes the content. Default settings are in **bold** and some functions include additional information. The function / submenu in *italic* indicate either status display or submenu string that cannot be selected. The underlined statement indicates the condition for the availability of the second-level submenu in reference to submenu.

Table 36: Advanced Setup menu Sub-screens and Functions

Sub-Screen	Function	Second level Sub-Screen / Description
Trusted Computing	*TPM20 Device Status, Vendor and Firmware Version.* Security Device Support **[Enable]**	<u>When set to Enable:</u> *Active PCR banks* *Available PCR banks*
		SHA-1 PCR Bank **[Enabled]**
		SHA256 PCR Bank **[Enabled]**
		Pending operation **[None]**
		Platform Hierarchy **[Enabled]**
		Storage Hierarchy **[Enabled]**
		Endorsement Hierarchy **[Enabled]**
		TPM2.0 UEFI Spec Version **[TCG_2]**
		Physical Presence Spec Version **[1.3]**
		TPM 20 InterfaceType [TIS]
		Device Select **[Auto]**
ACPI Settings	Enable ACPI Auto Configuration **(Disabled)**	<u>When set to Disable:</u> Enable Hibernation **[Enabled]** ACPI Sleep State **[S3 (Suspend to RAM)]** Lock Legacy Resources **[Disabled]**
SMART Settings	SMART Self Test **[Disabled]**	
Serial Port Console Redirection	Console Redirection (COM0) > **[Disabled]**	<u>When set to Enabled:</u> Console Redirection Settings Terminal Type **[ANSI]** Bits per second **[115200]** Data Bits **[None]** Stop Bits **[1]** Flow Control **[None]** VT-UTF8 Combo Key Support **[Enabled]** Recorder Mode **[Disabled]** Resolution 100x31 **[Disabled]** Legacy OS Redirection Resolution **[80x24]** Putty KeyPad **[VT100]**
	Legacy Console Redirection Settings >	Legacy Serial Redirection Port [COM0]
	Serial Port for Out-of-Band Management / Windows Emergency Management Services (EMS) Console Redirection > **[Disabled]**	<u>When set to Enabled:</u> Console Redirection Settings > Out-of-Band Mgmt Port [COM0] Terminal Type **[VT-UTF8]** Bits per second **[115200]** Flow Control **[None]** Data Bits **[8]** Parity **[None]** Stop Bits **[1]**
CPU	Turbo Mode **[Enabled]**	

Sub-Screen	Function	Second level Sub-Screen / Description
Configuration	Intel Virtualization Technology **[Enabled]**	
	VT-d **[Disabled]**	
	Monitor Mwait **[Disabled]**	
AMI Graphic Output Control Policy	*Intel ® Graphics Controller* *Intel ® GOP Driver* Output select **[DP1]**	
PCI Subsystem Settings	*AMI PCI Driver Version* Above 4G Decoding BME DMA Mitigation **[Disabled]**	
	Hot-Plug Support **[Enabled]**	
USB Configuration	Legacy USB Support **[Enabled]**	
	XHCI Hand-off **[Enabled]**	
	USB Mass Storage Driver Support **[Enabled]**	
	USB transfer time-out **[20 sec]**	
	Device reset time-out **[20 sec]**	
	Device power-up delay **[Auto]**	
Network Stack Configuration	Network Stack **[Disabled]**	
CSM Configuration	CSM Support **[Enabled]**	<u>When set to Enabled:</u> *CSM16 Module Version 07.79* GateA20 Active **[Upon Request]** INT19 Trap Response **[Immediate]** Boot option filter **[UEFI and Legacy]** *Option ROM execution* Network **[UEFI]** Storage **[UEFI]** Video **[UEFI]** Other PCI devices **[UEFI]**
NVMe Configuration	*NVME controller and Drive information*	
SDIO Configuration	SDIO Access Mode **[Auto]** *Mass Storage Devices:*	
Security Configuration	TXE HMRFPO **[Disabled]**	
	TXE EOP Message **[Enabled]**	

Sub-Screen	Function	Second level Sub-Screen / Description
LVDS Configuration	LVDS Flat Panel Display Support **[Disabled]**	When set to Enabled: Panel Type **[Standard]** Resolution **[1024 x 768]** Panel Color Depth **[24-Bit VESA]** Panel Voltage **[3.3V]** Channel **[Dual]** Bus Swapping **[Normal]** Clock Frequency Center Spread **[Disabled]** Differential Output Swing Level **[300 mV]** Backlight **[Enable]** Backlight Signal Inversion **[Disable]** Backlight PWM Frequency **[200 Hz]** Brightness Level **[80%]**
Hardware Monitor	Hardware Monitoring: CPU Core Temperature (CPU MSR) CPU Outer Temperature (TD1) HW Monitoring IC Temperature (LTD) PCB Temperature (I2C0 LM75) RTC Voltage (VCORE) DDR Voltage (VSENS2) Input Voltage (VSENS3)	
	CPU Fan: CPU Fan Pulse CPU Fan Control Mode **[SMART FAN IV]** Fan Trip Point Trip Point Speed	
Watchdog	Stage 1 mode **[Disabled]**	
Thermal	Automatic Thermal Reporting **[Disabled]**	When set to Disabled: Passive Trip Point **[95 C]** Passive TC1 value 1 Passive TC2 value 5 Passive TSP value 10
SMBus CMI Setting	SMBUs CMI Setting	SMBus device ACPI mode [Normal]
System Component	OS Reset Select **[Cold Reset]**	
	Spread Spectrum Clocking Configuration	
	DDR SSC **[Enable]**	When set to Enable: DDR SSC Selection Table **[-0.5%]**
	DDR SSC Bending Selection Table **[0% (No Clock Bending)]**	
	HighSpeed SerialIO SSC **[Enable]**	When set to Enable: HighSpeed SerialIO SSC Selection Table **[-0.5%]**
Debug	*Kernel Debugger Configuration*	

Sub-Screen	Function	Second level Sub-Screen / Description
Configuration	Kernel Debugger Enable **[Disabled]**	
	APEI BERT Configuration APEI BERT **[Enable]**	
	ACPI Memory Debug Switch ACPI Memory Debug **[Disable]**	
	TXE Debug Option End of Post **[Disable]** Lock Directory **[Disable]**	
	PTT Debug Option Suppress PTT Commands **[Disable]**	
	TDO GPIO Pin Switch TDO GPIO Pin **[Enable]** Max Memory 2G **[Disable]** Persistent RAM Size **[Disable]**	
	OS DnX OS DnX focus entry **[Disable]**	
	Processor Trace Configuration Processor Trace memory allocation **[Disable]**	
	CSE Data Clear Option CSE Data Clear (Yes / No)	
	Option to clear Data region during IFWI Update Capsule Data Clear **[Enable]**	
	NPK Debug Configuration >	North Peak Enable **[Auto]** FW Trace Enable **[Enable]** FW Trace Destination **[PTI]** NPK Recovery Dump **[Disable]** Memory Region 0 Buffer Size **[None]** Memory Region 0 Buffer WrapAround **[Wrap]** Memory Region 1 Buffer Size **[None]** Memory Region 1 Buffer WrapAround **[Wrap]** PTI Mode **[X4]** PTI Training **[Off]** PTI Speed **[Quarter Speed]** Punit Message Level **[LEVEL LOW]** PMC Message Level **[LEVEL LOW]**

Sub-Screen	Function	Second level Sub-Screen / Description
RC ACPI Settings	Native PCIE Enable **[Enable]**	
	Native ASPM **[Enable]**	
RTD3 Settings	RTD3 Support **[Disable]**	

8.2.3. Chipset Setup Menu

The Chipset Setup menu provides sub-screens, second level and third level sub-screens with functions, for Intel Chipset configurations.

Figure 33: Chipset Setup Menu Initial Screen



Table 37: Chipset Setup menu Sub-screens and Functions

Sub-Screen	Function	Second level Sub-Screen / Description
North Bridge	Max TOLUD **[2 GB]** PCIE VGA Workaround **[Disable]**	
South Bridge	Serial IRQ Mode **[Continuous]**	
	SMBus Support **[Enabled]**	
	OS Selection **[Windows 10 (Ver>=167)]**	
	PCI Clock Run **[Enable]**	
	Real Time Option **[RT Disable]**	


Sub-Screen	Function	Second level Sub-Screen / Description
Uncore Configuration	*GOP Configuration* GOP Driver **[Enable]** Intel Graphics Pei Display PEIM **[Disable]** GOP Brightness Level **[140]**	
	IGD Configuration Integrated Graphics Device **[Enable]** Primary Display **[IGD]** RC6 (Render Standby) **[Enable]** GTT Size **[8MB]** Aperture Size **[256MB]** DVMT Pre-Allocated **[64M]** DVMT Total Gfx Mem **[256M]** Cd Clock Frequency **[624 MHz]** GT PM Support **[Enable]** PAVP Enable **[Enable]**	
	IGD – LCD Control BIA **[Auto]** ALS Support **[Enable]** IGD Flat Panel **[Auto]** IGD Boot Type **[Auto]** Panel scaling **[Auto]** GMCH BLC Control **[PWM-Inverted]**	
South Cluster Configuration	*HD-Audio Configuration >*	HD-Audio Support **[Enable]**
	LPSS Configuration >	*Low Power Sub System* LPSS HSUART #3 Support (D24:F2) **[Enable]** LPSS SPI #1 Support (D25:F0) **[Enable]** LPSS IOSF PMCTL SOix Enable **[Enable]**
	PCI Express Configuration >	*PCI Express Configuration* PCI Express Clock Gating **[Enable]** Port8xh Decode **[Disable]** Peer Memory Write Enable **[Disable]** Compliance Mode **[Disable]** > PCIe #0 BDF[00:13:00] LAN 1 > PCIe #1 BDF[00:13:01] LAN 2 <u>When PCIE #X is enabled:</u> PCIe #X BDF[XX:XX:XX] **[Auto]** ASPM **[Disable]** L1 Substates **[L1.1 & L1.2]** ACS **[Enable]** URR **[Disable]** FER **[Disable]** NFER **[Disable]** CER **[Disable]** CTO **[Default Setting]** SEFE **[Disable]** SENFE **[Disable]** SECE **[Disable]** PME SCI **[Enable]** Hot Plug **[Disable]** PCIE Speed **[Auto]** Transmitter Half Swing **[Disable]** *Extra Bus Reserved 0* *Reserved Memory 10* *Reserved I/O 4* PCH PCIE LTR **[Enable]** Snoop Latency Override **[Auto]** Non Snoop Latency Override **[Auto]** PCIE LTR Lock **[Disable]**

Sub-Screen	Function	Second level Sub-Screen / Description
		PCIE Selectable De-emphasis **[Enable]**
	SATA Drives >	*SATA Drives* *Chipset-SATA Controller Configuration* *SATA Port 0* Port 0 **[Enable]** SATA Port 0 Hot Plug Capability **[Disable]** *SATA Port 1 (mSATA)* Port 0 **[Enable]** SATA Port 0 Hot Plug Capability **[Disable]**
	SCC Configuration >	SCC SD Card Support (D27:F0) **[Enable]**
	USB Configuration >	USB Port Disable Override **[Disable]** XHCI Disable Compliance Mode **[FALSE]**
	Miscellaneous Configuration >	State After G3 **[S5 State]** Power Button Debounce Mode **[Enable]** Wake on LAN **[Disable]** BIOS Lock **[Enable]** RTC Lock **[Enable]** TCO Lock **[Disable]** DCI Enable (HDCIEN) **[Disable]** DCI Auto Detect Enable **[Enable]** GPIO Lock **[Disable]**

8.2.4. Security Setup Menu

The Security Setup menu provides information about the passwords and functions for specifying the security settings. The passwords are case-sensitive.

Figure 34: Security Setup Menu Initial Screen

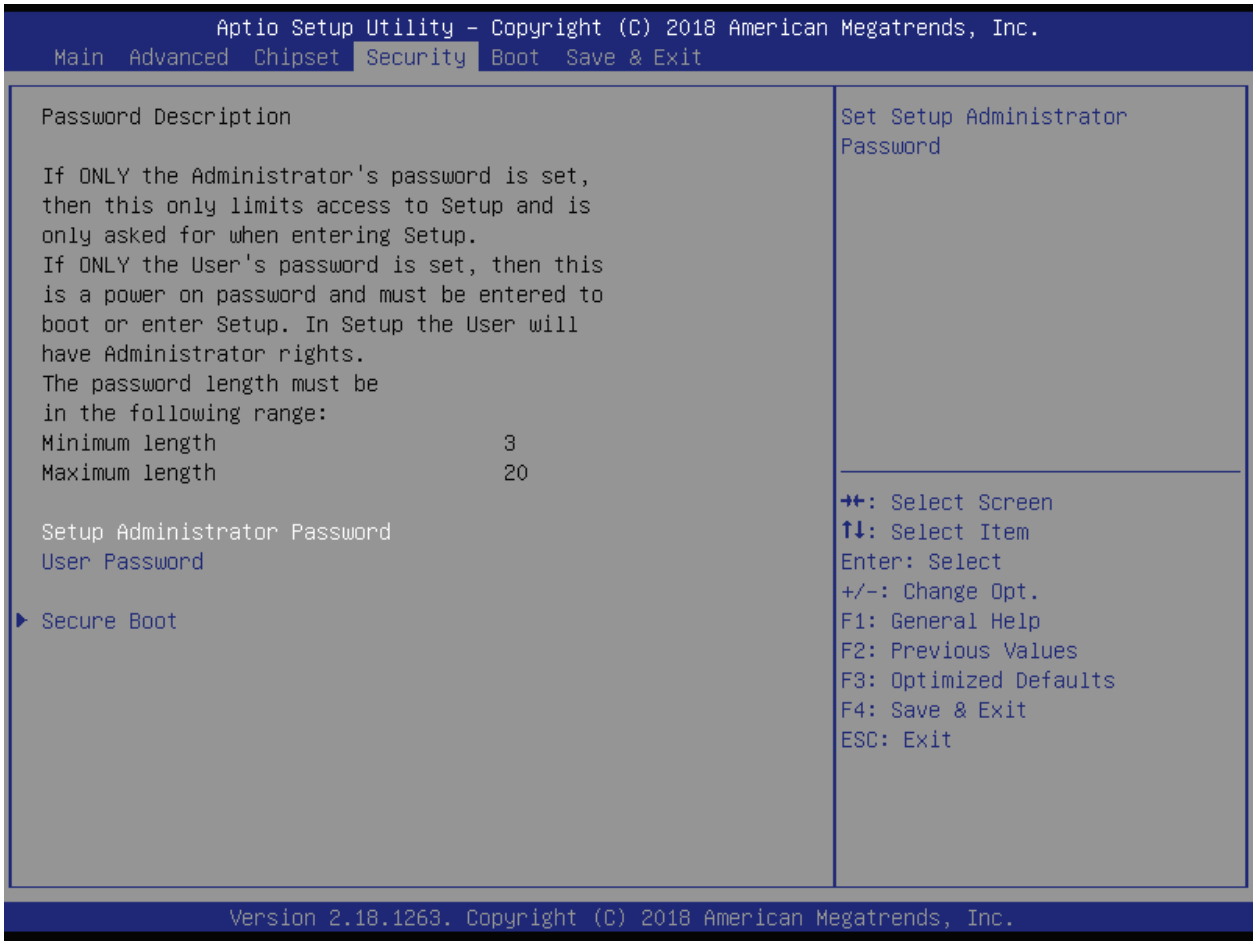

The following table shows Security sub-screens and functions.

Table 38: Security Setup Menu Functions

Function	Description
Setup Administrator Password User Password	Create / change password to enter Setup
HDD Security Configuration	Create / change password to allow access to Set, Modify and Clear HardDisk User and Master Passwords for Enabling Security.
Attempt Secure Boot **[Disable]**	Enable or Disable the Secure Boot support. Please also set Secure Boot Mode to "Standard" to install standard Microsoft Platform Key (PK).
Secure Boot Mode	Set Secure Boot Mode to "Standard" to boot standard Windows or Linux boot loader signed with Microsoft's platform key. Select "Customized" mode only if you have a custom OS with OS boot loader signed with your own platform key. Kontron provide services for Customized Secure Boot, visit Kontron SEC-Line home

Function	Description
	page https://www.kontron.com/products/solutions/security/sec-line.html for more information.
Key Management	Enables expert users to modify Secure Boot Policy Variables without full authentication.



If only the administrator's password is set, then only access to the setup is limited and is requested when entering the setup.
If the user's password is set, then the password is a power on password and must be entered to boot or enter setup. In the setup the user has restricted rights.

8.2.4.1. Remember the Password


It is highly recommended to keep a record of all passwords in a safe place. Forgotten passwords result in the user being locked out of the system.

If the system cannot be booted because the User Password or the Supervisor Password are not known, contact Kontron Support for further assistance.

8.2.5. Boot Setup Menu

The Boot Setup menu lists dynamically generated boot device priority order.

Figure 35: Boot Setup Menu Initial Screen

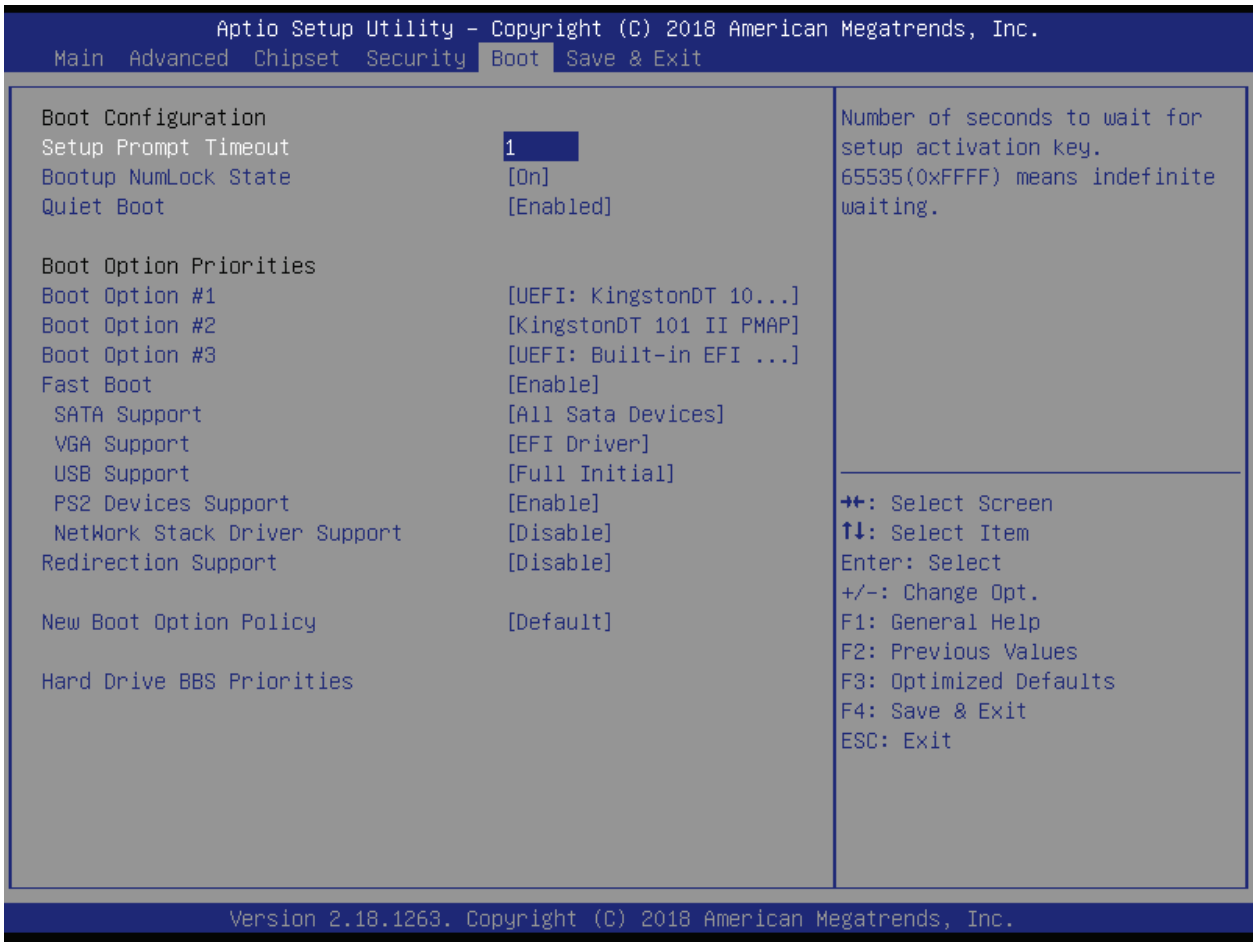

The following table shows Boot sub-screens and functions, and describes the content. Default settings are in **bold**.

Table 39: Boot Setup Menu Functions

Function	Description
Boot Configuration Setup Prompt Timeout **1** Bootup NumLock State **[On]** Quiet Boot **[Enabled]**	
Boot Option Priorities Boot Option #1 Boot Option #2 Boot Option #3 Boot Option #4 Fast Boot **[Enable]** SATA Support VGA Support USB Support	To set the system boot order. Use +/- keys to change option. When Fast Boot is Enabled, SATA, VGA, USB, PS2 support, devices initialization, Network Stack driver can be customized.


Function	Description
PS2 Support Network Stack Driver Support Redirection Support	
New Boot Option Policy	Controls the placement of newly detected UEFI boot options
Hard Drive BBS Priotities	Sets the placement of legacy boot options

8.2.6. Exit Setup Menu

The Save and Exit Setup menu provides functions for handling changes made to the uEFI BIOS settings and exiting the Setup program.

If system cannot boot or work properly due to incorrect setting, shorting Pin-1 and Pin-2 on J15 jumper will load the default setting of BIOS upon power cycle. Once safely booted with default setting, you may undo the jumper setting to save new changes on BIOS Setup Menu.

Figure 36: Save and Exit Setup Menu Initial Screen

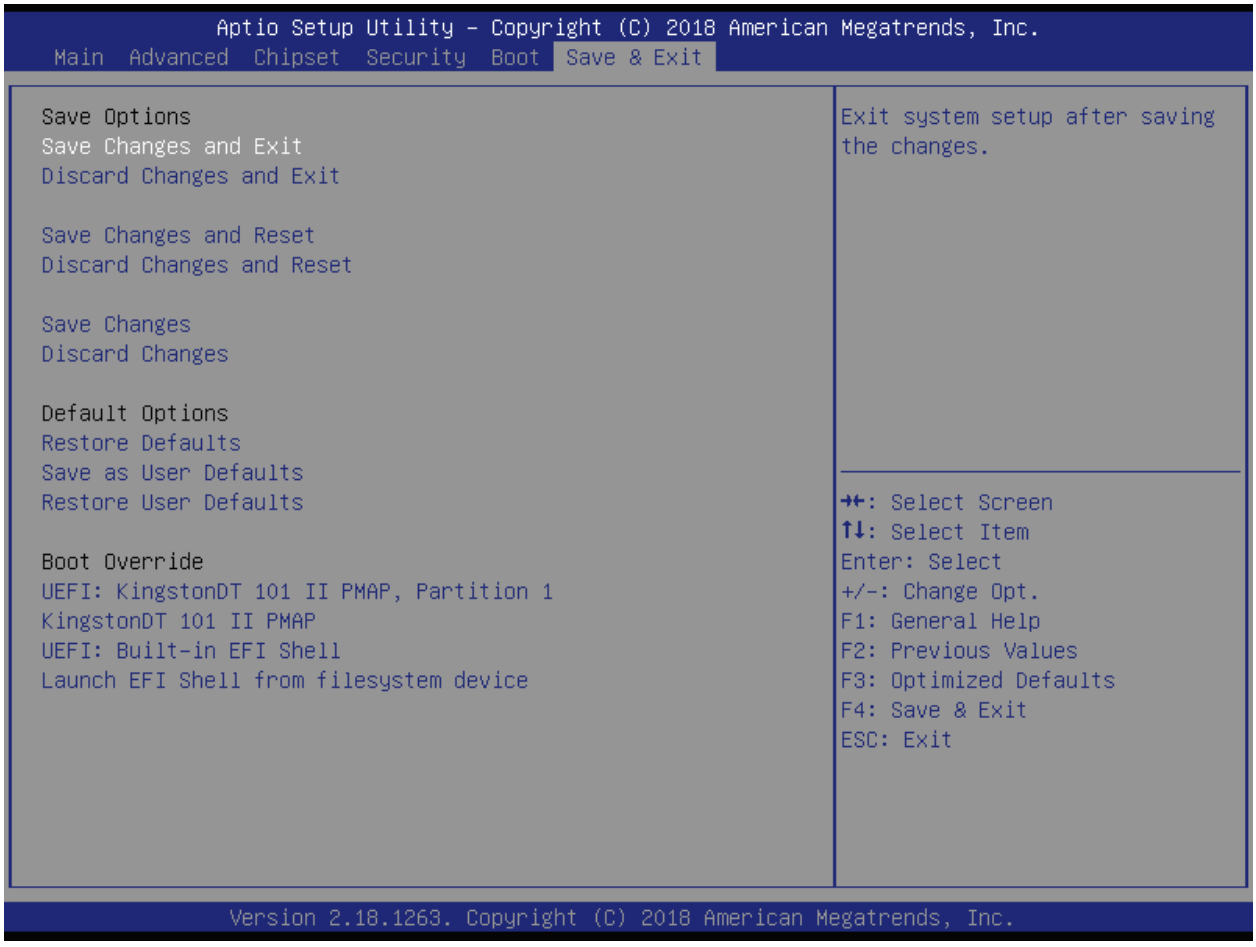

The following table shows the Exit menu sub-screens and functions, and describes the content.

Table 40: Save and Exit Setup Menu Functions

Function	Description
Save Options Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset *Default Options* Restore Defaults Save as User Defaults	

Function	Description
Restore User Defaults	
Boot Override UEFI: Built-in EFI Shell Launce EFI Shell from filesystem device	

8.3. The uEFI Shell

The Kontron uEFI BIOS features a built-in and enhanced version of the uEFI Shell. For a detailed description of the available standard shell scripting, refer to the EFI Shell User Guide. For a detailed description of the available standard shell commands, refer to the EFI Shell Command Manual. Both documents can be downloaded from the EFI and Framework Open Source Community homepage (http://sourceforge.net/projects/efi-shell/files/documents/).

Kontron uEFI BIOS does not provide all shell commands described in the EFI Shell Command Manual. If Secure Boot is enabled, the UEFI shell may not be able to be entered.

8.3.1. Basic Operation of the uEFI Shell

8.3.1.1. Entering the uEFI Shell

To enter the uEFI Shell, follow the steps below:

1. Power on the board.
2. Press the <F7> key (instead of <DEL>) to display a choice of boot devices.
3. Choose 'UEFI: Built-in EFI Shell'.

```
EFI Shell version 2.50 [5.12]
Current running mode 1.1.2
Device mapping table
fs0              :Removable HardDisk – Alias hd18c0b blk0
    PciRoot(0x0)/Pci(0x15,0x0)/USB(0x2,0x0)/HD(1,MBR,0x0002B27D,0x3F,0x785BEC)
blk0    :Removable HardDisk – Alias hd18c0b fs0
    PciRoot(0x0)/Pci(0x15,0x0)/USB(0x2,0x0)/HD(1,MBR,0x0002B27D,0x3F,0x785BEC)
blk1    :Removable BlockDevice – Alias (null)
    PciRoot(0x0)/Pci(0x15,0x0)/USB(0x2,0x0)
```

Press the ESC key within 5 seconds to skip startup.nsh, and any other key to continue.

4. The output produced by the device-mapping table can vary depending on the board's configuration.
5. If the ESC key is pressed before the 5 second timeout elapses, the shell prompt is shown:

```
Shell>
```

8.3.1.2. Exiting the uEFI Shell

To exit the uEFI Shell, follow one of the steps below:

1. Use the **exit** uEFI Shell command to select the boot device, in the Boot menu, that the OS will boot from.
2. Reset the board using the **reset** uEFI Shell command.

8.4. uEFI Shell Scripting

8.4.1. Startup Scripting

If the ESC key is not pressed and the timeout has run out then the uEFI Shell tries to execute some startup scripts automatically. It searches for scripts and executes them in the following order:

1. Initially searches for Kontron flash-stored startup script.
2. If there is no Kontron flash-stored startup script present then the uEFI-specified **startup.nsh** script is used. This script must be located on the root of any of the attached FAT formatted disk drive.
3. If none of the startup scripts are present or the startup script terminates then the default boot order is continued.

8.4.2. Create a Startup Script

Startup scripts can be created using the uEFI Shell built-in editor edit or under any OS with a plain text editor of your choice. To create a startup shell script, simply save the script on the root of any FAT-formatted drive attached to the system.

8.4.3. Examples of Startup Scripts

8.4.3.1. Execute Shell Script on other Harddrive

This example (s**tartup.nsh**) executes the shell script named **bootme.nsh** located in the root of the first detected disc drive (**fs0**).

```
fs0:
bootme.nsh
```

8.5. Firmware Update

Firmware updates are typically delivered as a ZIP archive containing only the firmware images. The content of the archive with the directory structure must be copied onto a data storage device with FAT partition.

8.5.1. Updating Procedure

BIOS can be updated with the Intel tool fpt64.efi using the procedure below:

1. Copy these files to an USB stick.
   - flash.nsh or flash_with_fpt.nsh (if available)
   - fpt.efi
   - fparts.txt
   - pITX_APL_BIOS_Ver_<xxx>……bin (where xxx stands for the version #)
2. Start the system into the uEFI shell (see chapter 8.3.1.1 “Entering the uEFI Shell”).
3. Change to the drive representing the USB stick.

   ```
   fsx:  (x = 0,1,2,etc. represents the USB stick)
   ```

   Change to the directory where you copied the flash tool.

   ```
   cd <your_directory>
   ```

4. Start flash.nsh or flash_with_fpt.nsh (if available)

OR type

```
fpt –y –f pITX_APL_BIOS_Ver_<xxx>……bin
```

5. Wait until flashing is successful and then power cycle the board.

Do not switch off the power during the flash process!

9/ Technical Support

For technical support contact our Support department:

E-mail: support@kontron.com
Phone: +49-821-4086-888

Make sure you have the following information available when you call:

Product ID Number (PN),
Serial Number (SN)

The serial number can be found on the Type Label, located on the product's rear side.

Be ready to explain the nature of your problem to the service technician.

9.1. Warranty

Due to their limited service life, parts that by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law. This applies to the CMOS battery, for example.

If there is a protection label on your product, then the warranty is lost if the product is opened.

9.2. Returning Defective Merchandise

All equipment returned to Kontron must have a Return of Material Authorization (RMA) number assigned exclusively by Kontron. Kontron cannot be held responsible for any loss or damage caused to the equipment received without an RMA number. The buyer accepts responsibility for all freight charges for the return of goods to Kontron's designated facility. Kontron will pay the return freight charges back to the buyer's location in the event that the equipment is repaired or replaced within the stipulated warranty period. Follow these steps before returning any product to Kontron.

1. Visit the RMA Information website:

   http://www.kontron.com/support-and-services/support/rma-information

   Download the RMA Request sheet for **Kontron Europe GmbH** and fill out the form. Take care to include a short detailed description of the observed problem or failure and to include the product identification Information (Name of product, Product number and Serial number). If a delivery includes more than one product, fill out the above information in the RMA Request form for each product.

2. Send the completed RMA-Request form to the fax or email address given below at Kontron Europe GmbH. Kontron will provide an RMA-Number.

   Kontron Europe GmbH
   RMA Support
   Phone: +49 (0) 821 4086-0

Fax: +49 (0) 821 4086 111
Email: service@kontron.com

3. The goods for repair must be packed properly for shipping, considering shock and ESD protection.



Goods returned to Kontron Europe GmbH in non-proper packaging will be considered as customer caused faults and cannot be accepted as warranty repairs.

4. Include the RMA-Number with the shipping paperwork and send the product to the delivery address provided in the RMA form or received from Kontron RMA Support.

List of Acronyms

DP	Display Port
DVI	Digital Video Interface
EDP	Embedded DisplayPort
EMI	Electromagnetic Interference
ESD	Electrostatic Discharge
FCBGA	Flip Chip Ball Grid Array
FWH	Firmware Hub
HDMI	High Definition Multimedia Interface
LPC	Low Pin Count
LVDS	Low Voltage Differential Signaling
MPCIE	Mini PCI Express
MSATA	Mini Serial ATA
PCBA	Printed Circuit Board Assembly
PEG	PCI Express Graphics
RTC	Real Time Clock
SATA	Serial ATA
SDVO	Serial Digital Video Out
SMBUS	System Management Bus
SOC	System on Chip
SPI	Serial Peripheral Interface
TPM	Trusted Platform Module
ULV	Ultra-low Voltage
USB	Universal Serial Bus

About Kontron

Kontron is a global leader in IoT/Embedded Computing Technology (ECT). As a part of technology group S&T, Kontron, together with its sister company S&T Technologies, offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall. For more information, please visit: **http://www.kontron.com/**

Global Headquarters

Kontron Europe GmbH

Gutenbergstraße 2
85737 Ismaning
Germany
Tel.: + 49 821 4086-0
Fax: + 49 821 4086-111
info@kontron.com