Rackmount Installation

To rack-mount the switch in any standard 19-inch wide, 1U high rack:

1) Place the switch on a hard flat surface with the front panel facing you.
2) Using the supplied screws, attach rack-mount brackets to either side of the switch and secure tightly.



Attaching the brackets

3) After the brackets are attached, use supplied screws to securely attach the brackets to any standard 19-inch rack.



Mounting in Rack

Technical Support, Regulatory, Safety and Warranty

Information about Linksys Business Products can be found at www.linksys.com/support

Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Linksys or any of its affiliates and any other company.

©2021 Linksys Holdings, Inc. and/or its affiliates. All rights reserved.

8820-03073 Rev. B00

LINKSYS®

LGS310C / LGS310MPC
LGS328C / LGS328MPC / LGS328PC
LGS352C / LGS352MPC

Managed Switches Quick Start Guide

網管交換機快速入門指南
以太网交换机快速入门指南



Package Contents

Linksys Managed Switch
Quick Start Guide
Power Cord (LGS352MPC/LGS328MPC/LGS328PC/LGS352C/LGS328C)
Power Adapter (LGS310MPC/LGS310C)
Rack-Mount Kits (LGS352MPC/LGS328MPC/LGS328PC/ LGS352C/LGS328C)
Wall-Mount Kits (LGS310MPC/LGS310C)

Device Setup

Connect the AC power cord or adapter to the back of the switch and a power source. The green Power LED will blink.
If the Power LED is not on, check that the power cord or power adapter is connected on both ends.

Before using the web-based setup, you must know the IP address of the switch. The switch is an acting DHCP client by default. If there is no DHCP server on your network, the default IP address of the switch is 192.168.1.251/255.255.255.0.

To access the switch's browser-based setup:

1) Use Cat5e cables to connect to the switch and your computer to the network
2) Set up your computer with an IP address if there is no DHCP server on your network. Choose a unique (not already in use) IP address in the range of 192.168.1.1-192.168.1.254) and assigned to your computer.
3) Open a web browser on your computer. Enter the IP address of your switch.
4) Type in the default username: admin, and password: admin.
5) Click login to continue.

For product specification, please refer to the following links for details.


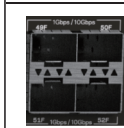
For Non-PoE Switch

https://downloads.linksys.com/downloads/datasheet/en/LGS310C_LGS328C_LGS352C_Datasheet_English.pdf

For PoE Switch

https://downloads.linksys.com/downloads/datasheet/en/Linksys_Managed_Gigabit_PoE%2B_DataSheet_LGS310MPC_LGS328MPC_LGS352MPC.pdf

Product Overview

	Power LED (Green). A solid green LED indicates the switch is powered on and operating normally. Blinking green means the switch is booting up or in self-test mode. Off indicates the switch is not powered on.
	Fault LED (Amber). A solid amber LED indicates there is a hardware failure.
	PoE Max LED (Amber). For PoE SKUs, a solid amber LED means the switch has achieved the maximum PoE budget.
	Mode Button. Toggles the Port LEDs to display status either LAN Mode or PoE Mode.
	LAN Mode LED (Green). Indicates Port LEDs have been set to LAN mode. When set to LAN mode the Port LEDs will display Ethernet speed.
	PoE Mode LED (Green). Indicates Port LEDs have been set to PoE mode. When set to PoE mode the Port LEDs will display active PoE connections.
	LAN Mode Port LED (Green). A solid green LED indicates ports are connected at 1000 Mbps. Off indicates ports may be connected at 10/100 Mbps or are not connected.
	PoE Mode Port LED (Green). A solid green LED indicates ports are actively connected to PoE devices and providing power. Blinking green means an error has occurred. Off indicates there is no power transmitting.
	Link/Act LED (Green). A solid green LED indicates ports are connected. Blinking green LED indicates transmit or receive activity. Off indicates there is no link.
	Press and hold for less than 10 seconds to reboot the switch. Press and hold for more than 10 seconds to reset the switch to factory settings.
	Auto-sensing Ethernet ports detect the speed of the device connected to them (10 Mbps, 100 Mbps, or 1000 Mbps), and adjust port speed and duplex accordingly.
	A connection point for an SFP/SFP+ (miniGBIC) expansion module that allows for the switch to be uplinked via fiber to another switch. The SFP/SFP+ port provides a link to a high-speed network segment or individual workstation at 1G/10G speeds.

包裝隨附內容

Linksys 網管網路交換機快速入門指南
電源線 (LGS352MPC/LGS328MPC/LGS328PC/LGS352C/LGS328C)
電源轉換器 (LGS310MPC/LGS310C)
機架式安裝套件 (LGS352MPC/LGS328MPC/LGS328PC/ LGS352C/LGS328C)
掛牆式安裝套件 (LGS310MPC/LGS310C)

裝置設定

將 AC 電源線或轉換器與交換機背面及電源連接起來。 綠色電源 LED 指示燈將閃爍。
如果電源 LED 指示燈不亮，請檢查電源線或電源轉換器是否已將兩端成功連接。

在使用網路為本的設定之前，你須知曉交換機的 IP 位址。在默認情況下，交換機是代理 DHCP 用戶端。如果你的網路上沒有 DHCP 伺服器，則交換機的默認 IP 位址為 192.168.1.251/255.255.255.0.

訪問交換機網頁瀏覽器為本的設定：

1) 使用 Cat5e 電纜將交換機及你的電腦連接上網
2) 如果你的網路上沒有 DHCP 伺服器，請為你的電腦設定一個 IP 位址。在以下範圍內選擇一個獨有 (尚未使用) 的 IP 位址 (192.168.1.1-192.168.1.254) 並分配給你的電腦。
3) 在電腦上打開一個網頁瀏覽器。輸入交換機的 IP 位址。在電腦上打開一個網頁瀏覽器。輸入交換器的 IP 位址。
4) 輸入預設使用者姓名：admin，以及密碼：admin
5) 點擊「登入」繼續。

機架安裝

可在任何 19 英吋寬、1U 高標準機架上安裝此款網路交換機：

1) 請將交換機放在硬平面上，前置面板朝向你。
2) 使用隨附的螺絲在交換機的兩側接上支架並將之固定。
3) 接上支架後，使用隨附的螺絲將支架連接到 19 英吋標準機架上並固定好。

技術支援、規管、安全性與保養

有關 Linksys 商務產品的資訊請瀏覽 www.linksys.com/support

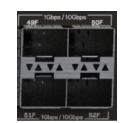
所述的第三方商標均為其各自所有者的財產。
使用合作夥伴一詞並不意味著與任何其他公司之間存在合作關係 Linksys 或其任何附屬公司與任何其他公司之間存在合作關係。
© 2021 Linksys Holdings, Inc. 和/或其附屬公司。版權所有

限用物質含有情況標示聲明, 其紀載於網址如下：

甲類產品 https://downloads.linksys.com/support/assets/others/MAN_LNKPG-00730_RevD00_SMB_ClassA_Regulatory_All_Regions.pdf
乙類產品 https://downloads.linksys.com/support/assets/others/MAN_LNKPG-00731_RevD00_SMB_ClassB_Regulatory_All_Regions.pdf

甲類產品: LGS310MPC, LGS328C, LGS328MPC, LGS352C, LGS352MPC
警告使用者此為甲類資訊技術設備，在居住環中使用時，可能會造成射頻干擾，在此種情況下，使用者會被要求採取某些適當的對策

產品概覽

POWER	電源 LED 指示燈 (綠色)。綠色 LED 指示燈恆亮代表交換機已通電並正常運行。綠色指示燈閃爍代表交換機正在啟動或處於自檢模式。指示燈熄滅代表交換機未開啟電源。
FAULT	故障 LED 指示燈 (琥珀色)。琥珀色 LED 指示燈恆亮代表出現固件故障。
PoE MAX	PoE 最大值 LED 指示燈 (琥珀色)。對於 PoE SKU ，琥珀色 LED 指示燈恆亮代表交換機已達到最大 PoE 預算。
LED MODE	模式按鈕。切換端口 LED 指示燈以顯示 LAN 模式或 PoE 模式狀態。
LAN MODE	LAN 模式 LED 指示燈 (綠色)。代表端口 LED 指示燈已設定為 LAN 模式。當設定為 LAN 模式時，端口 LED 指示燈將顯示乙太網速度。
PoE MODE	PoE 模式 LED 指示燈 (綠色)。代表端口 LED 指示燈已設定為 PoE 模式。當設定為 PoE 模式時，端口 LED 指示燈將顯示活躍的 PoE 已連接。
	LAN 模式端口 LED 指示燈 (綠色)。綠色 LED 指示燈恆亮代表端口以 1000 Mbps 的速度連線。指示燈熄滅代表端口可能以 10/100 Mbps 的速度連線或未連線。
	PoE 模式端口 LED 指示燈 (綠色)。綠色 LED 指示燈恆亮代表端口已連接到 PoE 裝置並提供電源。綠色指示燈閃爍代表發生錯誤。熄滅代表沒有電力傳輸。
	Link/ACT LED 指示燈 (綠色)。綠色 LED 指示燈恆亮代表端口已連線。綠色指示燈閃爍代表數據正在傳輸。熄滅代表未連線。
RESET	長按不超過 10 秒以重啟交換器。長按 10 秒以上以恢復交換機至原廠設定。
	自動感應乙太網端口可偵測與其連線的裝置的速度 (10 Mbps、100 Mbps 或 1000 Mbps)，並相應地調整端口速度及雙工模式。
	SFP/SFP+ (miniGBIC) 擴展模塊的連接點，允許交換機透過光纖上行連接另一台交換機。SFP/SFP+ 端口以 1G/10G 的速度提供到高速網段或個別工作站的連結。

包装内容

Linksys 以太网交换机快速入门指南
电源线 (LGS352MPC/LGS328MPC/LGS328PC/LGS352C/LGS328C)
电源适配器 (LGS310MPC/LGS310C)
机架式安装套件 (LGS352MPC/LGS328MPC/LGS328PC/ LGS352C/LGS328C)
壁挂式安装套件 (LGS310MPC/LGS310C)

设备设置

将交流电源线或适配器连接到交换机背面和电源。绿色电源 LED 指示灯将闪烁。
如果电源 LED 指示灯未亮起，请检查电源线或电源适配器的两端是否连接。

在使用基于 Web 的设置之前，您必须知晓交换机的 IP 地址。默认情况下，交换机是代理 DHCP 客户端。如果您的网络上没有 DHCP 服务器，交换机的默认 IP 地址将为 192.168.1.251/255.255.255.0.

访问交换机基于浏览器的设置：

1) 使用 Cat5e 线缆将交换机和计算机连接到网络。
2) 如果您的网络上没有 DHCP 服务器，请使用 IP 地址设置计算机。在 192.168.1.1-192.168.1.254 的范围内选择一个唯一的 (尚未使用的) IP 地址。
3) 在计算机上打开 Web 浏览器。输入交换机的 IP 地址。
4) 输入默认用户名 (admin) 和密码 (admin)。
5) 单击“登录”以继续。

机架式安装

将交换机以机架方式安装在任何标准机架 (宽度为 19 英寸、高度为 1U) 中：

1) 将交换机放置在坚硬、平坦的表面上，使前面板朝向您的方向。
2) 使用附带的螺钉，将机架式安装托架安装到交换机的两侧并拧紧。
3) 安装托架后，使用附带的螺钉将托架牢固地安装到任何标准 19 英寸机架上。

技术支持、监管、安全和保修

有关 Linksys 商用产品的信息，可访问 www.linksys.com/support

所提及的第三方商标是其各自所有者的财产。
使用“合作伙伴”一词并非暗指合作伙伴关系Linksys或其任何附属公司与任何其他公司的关系
©2021 Linksys Holdings, Inc. 和/或其附属公司。保留所有权利

产品概览

POWER	电源 LED 指示灯 (绿色)。绿色 LED 指示灯常亮表示交换机已通电并正常运行。闪烁绿色灯表示交换机正在启动或处于自检模式。熄灭表示交换机未通电。
FAULT	故障 LED 指示灯 (琥珀色)。琥珀色 LED 指示灯常亮表示存在硬件故障。
PoE MAX	PoE Max LED 指示灯 (琥珀色)。对于 PoE SKU ，琥珀色 LED 指示灯常亮表示交换机已达到最大 PoE 预算。
LED MODE	模式按钮。切换端口 LED 指示灯，显示 LAN 模式或 PoE 模式的状态。
LAN MODE	LAN 模式 LED 指示灯 (绿色)。表示端口 LED 指示灯已设置为 LAN 模式。设置为 LAN 模式时，端口 LED 指示灯将显示以太网速度。
PoE MODE	PoE 模式 LED 指示灯 (绿色)。表示端口 LED 指示灯已设置为 PoE 模式。设置为 PoE 模式时，端口 LED 指示灯将显示 PoE 已连接。
	LAN 模式端口 LED 指示灯 (绿色)。绿色 LED 指示灯常亮表示端口的连接速度是 1000 Mbps。熄灭表示端口的连接速度可能是 10/100 Mbps 或未连接。
	PoE 模式端口 LED 指示灯 (绿色)。绿色 LED 指示灯常亮表示端口已连接到 PoE 设备并提供电源。闪烁绿色灯表示发生了错误。熄灭表示未传输电源。
	链路/活动 LED 指示灯 (绿色)。绿色 LED 指示灯常亮表示端口已连接。绿色 LED 指示灯闪烁表示数据正在传输。熄灭表示无链路。
RESET	长按不超过 10 秒可重新启动交换机。长按 10 秒以上可将交换机重置为出厂设置。
	自动感应以太网端口检测与其连接的设备的速度 (10 Mbps、100 Mbps 或 1000 Mbps)，并相应地调整端口速度和双工传输。
	SFP/SFP+ (miniGBIC) 扩展模块的连接点，允许交换机通过光纤向上传输到另一台交换机。SFP/SFP+ 端口以 1G/10G 的速度提供到高速网段或单个工作站的链路。