KÄRCHER

makes a difference

KA 4

简体中文. 5
繁體中文. 11
Engl i sh. 15

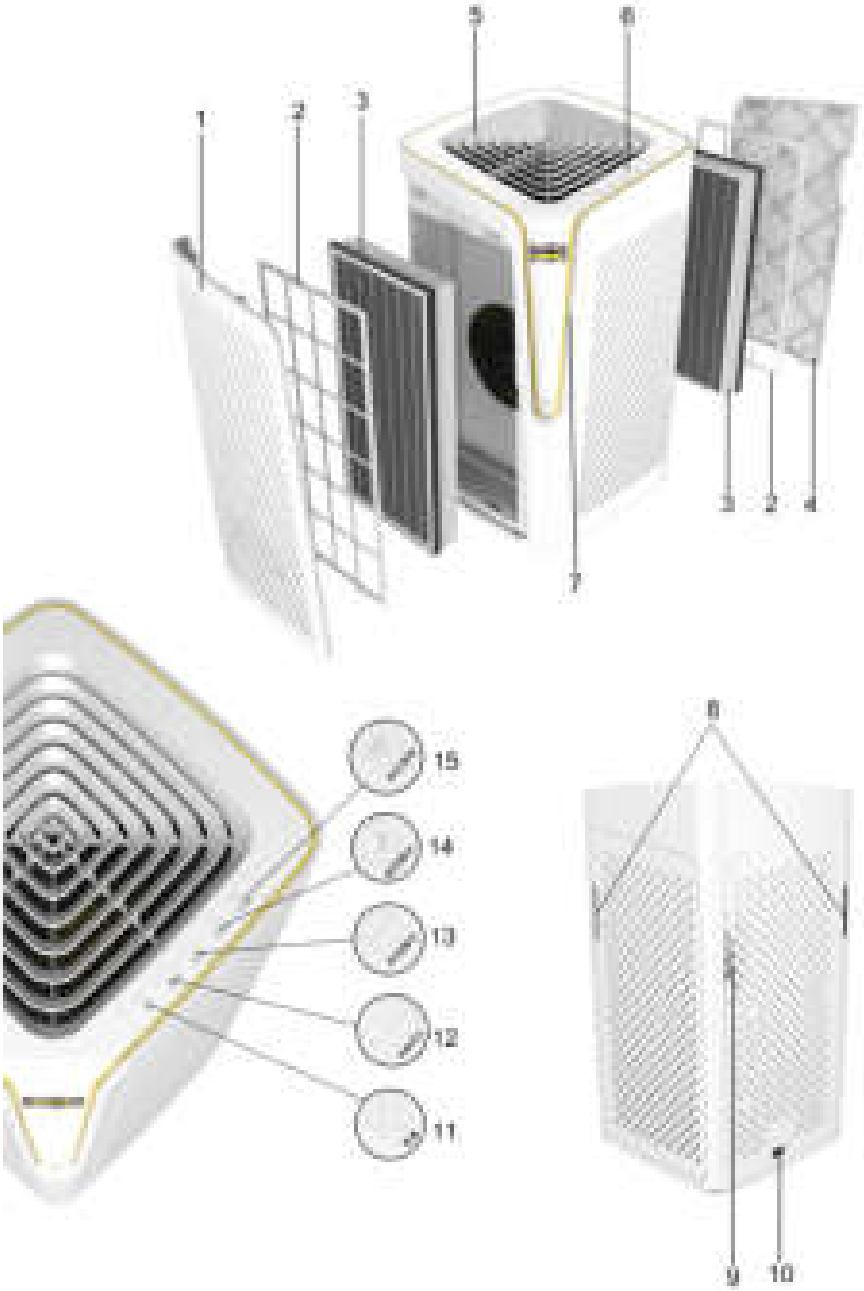


Register and win!
www.kaercher.com/register-and-win

合格证

KÄRCHER

97650170 10/17


1
2
3
5
6
7
3
2
4
15
14
13
12
11
8
9
10


1
1.
2.
2
2.
1.
2.
1.
3
1
2

目录

目录	ZH	5
一般提示：	ZH	5
安全说明	ZH	5
设备说明	ZH	6
设备调试 / 运行	ZH	6
保养与维护	ZH	7
故障排除	ZH	8
特殊附件	ZH	8
产品规格 / 参数	ZH	8

一般提示：

亲爱的客户：


在您初次使用本产品前，请仔细阅读本说明书，并请妥善保存以便日后查阅。

合乎规定的使用

根据本操作说明书中所作的描述和安全提示，本设备用作空气净化器。

该设备开发用于私家用途，并非设计满足工商业使用要求。

– 本设备仅限室内使用。
– 防止机器受到雨淋。不要存放在室外区域内。

对于由于执行未规定的使用或错误的操作造成的可能的损失，制造商将不承担任何责任。

环境保护


包装材料可以回收利用。请不要把包装材料与普通垃圾放在一起处理，而应妥善安排回收。


旧的设备中含有宝贵的可再利用的材料，应加以回收利用。请通过适当的收集系统处理您的旧设备。

电气和电子设备通常包含使用不当或错误处理时可能对人身健康和环境带来潜在危险的组成部分。然而这些组成部分是设备正常运行所必需的。使用该符号标记的设备不得与生活垃圾一起处理。

清理滤网

用过的过滤器可以作为生活垃圾废弃处理。处理完使用过的滤网之后，请清洗双手。

质量保证

我们的质量保证条款适用于全球各分公司。在质量保证期内，如果您的产品发生了任何故障，我们都将为您提供免费维修，但是这种故障应当是由于机身材料或制造上的缺陷造成的。请您向经销商或者与您距离最近的经过授权的客户服务处联系，提出保修请求，并提供相应的产品购买证明文件。

客户服务

如有疑问或产生故障，我们 KARCHER 公司的分公司将乐于继续帮助您。

订购备件和选装配件

向当地经销商或向当地 KARCHER 公司分公司购买备件和附件。

安全说明

⚠ *危险*

– *本设备只能连接交流电源。电压必须满足设备铭牌上的数据要求。*
– *请勿用湿手接触插头和插座。*
– *不要通过拉动电线将电源插头从插座上拔下。*
– *每次使用前检查电线包括电源插头是否受损。损坏的连接导线应立即让已授权的客户服务人员／电气专业人员进行更换。*
– *为了避免发生触电事故，我们建议使用带前置漏电保护开关的插座（最大额定触发电流强度为 30 mA）。*
– *在对设备进行维修与维护之前，必须关闭设备并拔下电源插头。*
– *只能由经过授权的客户服务中心维修。*

⚠ *警告*

– *本设备不得让那些身体能力有限、感官能力弱或理解能力差或者缺乏经验和／或缺乏知识的人员使用，除非他们有专人监督或接受专人指导如何操作设备并了解其可能产生的危险。*
– *超过 8 岁的孩子在有监护人监督或获得使用设备的指导*

并了解其可能产生的危险的前提下可以使用该设备。
- *儿童不得玩耍本设备。*
- *照看好儿童，以确保他们不用设备玩耍。*
- *儿童未受看管不得进行清洁和用户保养。*
- *不可遮盖进风口和出风口。*
- *让儿童远离包装薄膜，否则会有窒息危险！*
- *在每次使用后和在每次清洁／保养前关闭设备。*
- *禁止在存在爆炸危险的空间内运行本设备。*
- *不要将设备放置在热源附近。*

⚠ *小心*
- *本设备无法取代通风设备。*
- *设备应稳固地安置在平整的底座上并对齐。*
- *请只使用 Kärcher 的原始备件。*
- *请不要在潮湿环境或是高温室内 （例如浴室、厨房）使用本设备。*

危险程度

⚠ *危险*
提示会导致人员重伤或死亡的直接威胁性危险。
⚠ *警告*
提示可能导致人员重伤或死亡的危险状况。
⚠ *小心*
提示可能导致轻度伤害的危险状况。
注意
提示可能产生财产损失的危险状况。

设备说明

在打开产品包装的同时，请确认设备附件没有缺失，箱内物品没有损坏。如果您发现运输途中造成损坏，请联系经销商。
图片参见折叠式插页！



1 过滤器前盖
2 初效滤网
3 高效滤网
4 过滤器后盖
5 出风口
6 控制面板
7 空气质量指示灯
8 过滤器盖把手
9 空气质量传感器盖板
10 电源线插口
11 开／关操作按键
12 手动模式操作按键
13 自动模式操作按键
14 夜间模式操作按键
15 滤网更换指示灯

设备调试 / 运行

注意
始终在装有初效滤网和高效滤网的情况下运行本设备。

设备调试

➔ 将电源线插到设备上
➔ 将电源插头插到插座中。
控制面板上的所有操作按键和空气质量指示灯短暂亮起，然后熄灭。
➔ 按下开／关操作按键，启动设备。

提示
- 设备启动后，内置的空气质量传感器会自动检测室内的空气质量。
- 在操作面板上按下相关按键以设置所需的模式。

操作区

自动模式

若激活了自动模式，设备会针对所检测到的空气质量自动选择合适的风速。

➔ 按下开／关操作按键，启动设备。
➔ 按下自动模式操作按键。
➔ 该按键高亮。

提示

– 内置的传感器检测空气质量并自动选择合适的风速，以确保室内空气尽量达到最佳。
– 空气净化完成时，设备会以一档低速运行。

手动模式

若激活了手动模式，则可手动调节风速。

➔ 按下开 / 关操作按键，启动设备。
➔ 按下手动模式操作按键。
➔ 该按键高亮。

提示

– 多次触碰按键，可以在 3 个档位间自由切换不同风速。

显示	风速
I	低速
II	中速
III	高速

夜间模式

如果激活了夜间模式，则只有操作面板的照明会熄灭，设备仍维持运转。
如果触碰操作面板，操作面板照明就会重新激活。

➔ 按下开 / 关操作按键，启动设备。
➔ 按下夜间模式操作按键。
➔ 该按键高亮。

过滤器更换指示灯

当过滤器更换指示灯亮起时：
参见维护和保养。

提示

– 如果滤网的寿命少于 72 小时，滤网更换指示灯就会以 2 Hz 的频率闪烁。
– 如果滤网的寿命已尽，滤网更换指示灯将保持常亮，设备仍继续工作。
– 为了在更换滤网后使滤网更换指示灯复位，需要在待机模式下将滤网指示灯按住 5 秒，即可完成复位。
– 只有在滤网寿命少于 72 小时的情况下滤网更换指示灯才会闪烁/常亮。
– 当感觉到滤芯有讨厌的异臭味时，请取出滤芯，用吸尘器或者吹风机将其表面聚积的灰尘清理干净，然后将其置于阳光下暴晒3-5小时后再放回，若仍然无法清除异臭味，请更换滤芯。

空气质量指示灯

➔ 按下开 / 关操作按键，启动设备。

空气质量指示灯亮起：

蓝色：空气质量非常好
黄色：空气质量中等
红色：空气质量差

结束运行

➔ 按下开 / 关操作按键，关断设备。

设备保管

➔ 将电源连接导线和配件整齐放在设备上。设备保管在干燥的室内。

保养与维护

定期以干布清洁设备外壳，以免灰尘堆积。

➔ 在设备上进行工作前需先拔下电源插头。
➔ 用柔软的干布擦拭设备。
➔ 用柔软的干布擦拭过滤器盖和排气口。

更换过滤器

当滤网更换指示灯亮起时：

图**1**

➔ 在把手处打开并取下过滤器盖。
➔ 将上部初效滤网解锁并取下。
➔ 清洁初效滤网。
➔ 将高效滤网沿标签处从设备中拉出并更换。

提示

– 清洁时需同时清洁两边的滤网。
– 初效滤网是可清洗的。
– 更换时需同时更换两边的滤网。

图**2**

➔ 拆下高效滤网的包装。
➔ 将高效滤网装入设备中。需可从外部看到标签。
➔ 将初效滤网的导向前缘插入下方的凹槽中。
➔ 将初效滤网由上往下小心卡入，同时注意侧面是否位置正确。
➔ 将过滤器盖的导向前缘插入下方的凹槽中。
➔ 关闭上方的过滤器盖。

空气质量传感器

空气质量传感器应每两个月清洁一次，以确保最佳功能。如果在含大量灰尘的环境中使用设备，应提高清洁频率。

提示

在湿度非常高时，可能会在空气质量传感器上形成冷凝水。LED 空气质量指示灯可能会因此显示空气质量为差，即使空气质量良好。在此情况下，请清洁空气质量传感器，或是选择手动模式。

图**3**

➔ 按压空气质量传感器盖的中央以开启盖子。
➔ 用略微沾湿的棉棒清洁空气质量传感器和进出风口。
➔ 用干的棉棒将空气质量传感器擦干。
➔ 按压空气质量传感器盖的中央关闭盖子。

故障排除

设备不运作

➔ 插入电源线。
➔ 关闭过滤器盖。
➔ 如果故障依然存在：
不得再操作开 / 关操作按键。
请联系客户服务中心。

空气质量指示灯持续亮红灯

➔ 清洁空气质量传感器。

无法改善空气质量

➔ 请确认是否所有过滤器均安装正确。

出风口气流不再强烈

➔ 清洁初效滤网。

特殊附件

滤网类型	零件编号	应用
Universal Pure滤芯	2.863-246.0	主要用于去除PM2.5，花粉和甲醛
Smog Pure滤芯	2.863-247.0	主要用于去除PM2.5和花粉
TVOC Pure滤芯	2.863-248.0	主要用于去除挥发性有机物（TVOC）和甲醛
Pet Pure滤芯	2.863-249.0	主要用于去除宠物毛发，挥发性有机物（TVOC），二手烟和宠物异味（尤指氨气）

产品规格 / 参数

电源电压	220-240	V
频率	50-60	Hz
最大功率	45	W
外形尺寸		
长度	380	mm
宽度	380	mm
高度	713	mm
重量（不含附件）	11，1	Kg
声功率级L_{WA}	60	dB(A)

滤网名称	Basic Pure
目标污染物	颗粒物
洁净空气量 (m^3/h)	500
累计净化量(mg)	P4
净化能效 $m^3/h*w$	11.1
净化能效等级 颗粒物≥5.00	高效级
净化能效等级 气态污染物≥1.00	/
适用面积 (m^2)	35-60
备注	标配

规格若有变更，恕不另行通知。

保修卡

尊敬的用户：

非常感谢您选用Kärcher公司产品，我们愿竭力为您提供优质的服务。《保修卡》是保修产品的重要凭证，请您仔细填写此卡并妥善保存。如产品需要维修时，请提供此保修卡和发票原件。

购 买 日 期：_____ 产 品 型 号：_____

用 户 电 话：_____ 产品序列号：_____

用 户 地 址：_____ 经销商盖章：_____

服务热线：400-880-1060
服务邮箱：service@karcher.cn
官网地址：www.karcher.cn


扫一扫
关注官方微信


扫一扫获取
更多服务商信息

KÄRCHER

makes a difference

《保修卡》涂改无效，遗失不补。

保修条款

本条款所属内容是依据《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》及其它相关规定编写，仅适用于Kärcher公司在中国大陆销售的家用系列产品。

为了维护您的合法权益，请在购机时索要发票（即财税部门统一监制的发票）及相关凭证。

1. 本产品在正确使用、操作的情况下，如产品确实存在由于材料、设计和制造引起的质量问题，本公司提供保修，自购机之日起，保修期为12个月。
2. 用户申请保修服务时，需携带有效发票原件及保修卡原件，将产品及原装附件一起送至Kärcher授权服务点进行保修。
3. 如果下述任何一种情况发生，消费者将不能享受保修服务（即本保修条款不予适用），但可享受Kärcher公司授权之服务点提供的有偿服务：
   1）超过保修有效期的；
   2）无有效发票原件或保修凭证的，或保修凭证（或发票）与产品实物不符，或保修凭证（或发票）经涂改的；
   3）非按产品使用说明书要求使用、维护、保养产品而造成损坏的；
   4）产品的自然磨损及易损易耗件（包括但不限于外壳、高压管、密封件、喷枪、喷嘴、单向阀、柱塞、吸尘管、刷子、扒头、过滤器、尘袋、传动皮带、齿轮、电池等）；
   5）产品售出后由于运输或搬运造成损坏的；
   6）未经Kärcher公司同意而对产品自行拆卸或自行修理而造成损坏的；
   7）因电压、水源、使用环境不当而导致故障的；
   8）因使用不正确的清洁介质而造成故障的；
   9）由于不可抗力等自然因素造成故障的；
   10）一切未经Kärcher公司许可对产品进行改造的；
   11）产品无原厂标识，或原厂标贴上的订货号、序列号与Kärcher公司所提供的产品订货号、序列号不一致的；
   12）其它因用户原因造成产品故障的。
4. Kärcher公司的家用产品只适用于家庭用途，凡用于非家庭场所，如商用或工业用途等的，将不能享受免费保修服务。
5. 往返Kärcher授权服务点的一切费用由用户自行承担（销售时，经销商有另外承诺的除外），家用系列产品不提供免费上门保修服务。
6. 保修期内，所有因维修被替换下来的零件、部件和附件等归Kärcher公司所有。
7. 保修期内，如所维修的部件已停产或淘汰，Kärcher公司有权使用同档次或更高档次的产品进行替换。
8. Kärcher公司对产品的保修义务，无论本保修条款或其它书面说明可能隐含或默认的保修义务，都应当被理解为已经包含在本保修条款所列的保修范围和保修期限内。
9. 保修期内、用户按本保修条款享受保修服务，此为用户因产品缺陷所受损失的唯一补救措施；换言之，Kärcher 公司对用户的其它直接或间接损失（包括但不限于数据的丢失、期待的利益等）不承担任何责任。
10. Kärcher公司的经销商或其代理人以及Kärcher公司授权的服务点均无权代表Kärcher公司承担超出本保修条款范畴的义务，亦无权放弃Kärcher公司在本保修条款下的任何权力。
11. 中国有关法律的强制性规定适用于本保修条款。
12. Kärcher公司保留调整有关保修信息、产品功能及规范等的权利，恕不另行通知。

凯驰（上海）清洁系统有限公司
2016年08月16日

目錄

目錄	TW	5
一般提示	TW	5
安全提示	TW	5
設備說明	TW	6
調試 / 操作	TW	6
維護和保養	TW	7
故障說明	TW	8
特殊配件	TW	8
技術參數	TW	8

一般提示

親愛之客戶：


在您第一次使用您的設備前，請先閱讀並遵守本操作說明書原件，為日後使用或其他所有者使用方便請妥善保管本說明書。

按規定使用

依照本作業說明書之說明和安全提示，本設備用作空氣淨化器。
該裝置專為家庭使用而開發，不適合工業應用要求。

– 本設備之設計僅適用於室內。
– 裝置要防雨。不要置於室外。

製造廠商對可能由違規使用或錯誤作業造成之損害概不負責。

環境防護


包裝材料可以回收利用。請不要把包裝材料與普通垃圾放在一起處理，而應妥善安排回收。


舊的設備中含有寶貴的可再利用的材料，應加以利用。請通過適當的收集系統清理舊設備。

電氣和電子設備通常包含使用不當或錯誤處理時可能對人身健康和環境帶來潛在危險的組成部分。然而這些組成部分是設備正常運行所必需的。使用該符號標記的設備不得與生活垃圾一起處理。

濾網的廢物處理

使用過的濾芯可作為一般垃圾處理。
處理完使用過的濾網之後，請清洗雙手。

品質保證

我們的主管銷售公司所發佈的品質保證條件每個國家均適用。在品質保證期內，如果您的產品發生了任何故障，我們都將為您提供免費維修，但是這種故障應當是由於機身材料或製造上的缺陷造成的。如屬品質保證情況，請憑發票聯繫貴方經銷商或就近聯繫獲得授權的客戶服務點。

客戶服務處

存在疑問或出現故障時，我們之 KÄRCHER 分公司非常願意為您答疑解難。

備件和特殊配件之訂購

請向經銷廠商或 KÄRCHER 分公司購買備件和配件。

安全提示

⚠ *危險*

– *設備只能連接到交流電上。電壓必須跟設備型號標牌上給出之電壓一致。*
– *絕不能用濕手觸及電源插頭或者插座。*
– *不要透過拉拽聯結導線之方式拔出插座上之電源插頭。*
– *每次運行前都要測試一下帶插頭之連接導線是否有損壞。損壞之連接導線應即刻讓已授權之客戶服務處／電氣專業人員進行更換，避免出現危險。*
– *為了避免電氣事故，我們建議使用帶前置故障電流防護開關之插座 （最大額定跳閘電流強度為 30 mA）。*
– *在進行所有維護和保養工作前關閉本設備並拔下電源線。*
– *只允許接受過授權之客戶服務人員進行維修工作和在電氣零部件上進行工作。*

⚠ *警告*

– *本設備不得讓那些身體能力有限、感官能力弱或理解能力差或者缺乏經驗和／或缺乏知識的人員使用，除非他們有專人監督或接受專人指導如何操作設備並瞭解其可能產生的危險。*

– *8 歲以上之兒童只有在負責安全之人員監視下，或獲得裝置使用說明並理解由此產生之危險時，才允許使用裝置。*
– *兒童不得玩耍本設備。*
– *照看好兒童，以確保他們不用設備玩耍.。*
– *未受監督的兒童不得執行清潔和使用維護。*
– *不可遮蓋進風口和出風口。*
– *讓兒童遠離包裝薄膜，否則會有窒息危險!*
– *每次使用後和每次清洗／維護前均要關閉裝置。*
– *禁止在有爆炸危險之區域內運行本設備。*
– *不要將設備放置在熱源附近。*

⚠ *小心*

– *本設備無法取代通風設備。*
– *將設備穩固地對齊安放在平坦地面上。*
– *請只使用 KÄRCHER 的原始備件。*
– *請不要在潮溼環境或是高溫室內 （例如浴室、廚房）使用本設備。*

危險等級

⚠ *危險*

提示會導致人員重傷或死亡的直接威脅性危險。

⚠ *警告*

提示可能導致人員重傷或死亡的危險狀況。

⚠ *小心*

提示可能導致輕度傷害的危險狀況。

注意

提示可能產生財產損失的危險狀況。

設備說明

打開包裹內物品時，檢查配件是否缺失或損壞。若存在運輸損壞，請通知您之經銷廠商。

圖片參見折疊頁!



1 過濾器前蓋
2 初效濾網
3 高效濾網
4 過濾器後蓋
5 出風口
6 控制面板
7 空氣品質指示燈
8 過濾器蓋把手
9 空氣品質感測器蓋
10 電源線插口
11 「開／關」操作按鍵
12 手動模式操作按鍵
13 自動模式操作按鍵
14 夜間模式操作按鍵
15 濾網更換指示燈

調試／操作

注意

始終在裝有初效濾網和高效濾網的情況下運行本設備。

調試

➔ 將電源線插到設備上
➔ 將電源插頭插到插座中。
所有控制面板上的操作按鍵和空氣品質顯示短暫發亮，然後熄滅。
➔ 按下 「開／關」操作按鍵開啟設備。

提示

– 設備起動後，內建的空氣品質感測器會自動偵測室內的空氣品質。
– 在控制面板上按下所需模式的按鍵以完成設定。

控制面板

自動模式

若開啟了自動模式，設備會針對所偵測到的空氣品質自動選擇合適的送風速度。

➔ 按下 「開／關」操作按鍵開啟設備。
➔ 按下自動模式操作按鍵。
➔ 該按鍵高亮。

提示

– 內建的空氣品質感測器會偵測空氣品質，並且自動選擇合適的速段，以確保室內空氣儘量達到最佳品質。
– 空氣淨化完成時，設備會以一檔低速運行。

手動模式

若開啟了手動模式，您可以以手動方式調節風速。

➔ 按下 「開 / 關」操作按鍵開啟設備。
➔ 按下手動模式操作按鍵。
➔ 該按鍵高亮。

提示

– 多次觸碰按鍵，可以在 3 個檔位間自由切換不同風速。

顯示	風速
I	低速
II	中速
III	高速

夜間模式

若開啟了夜間模式，則只有操作介面的照明會熄滅，設備仍維持運轉。
若觸碰操作介面，操作介面照明就會重新開啟。

➔ 按下 「開 / 關」操作按鍵開啟設備。
➔ 按下夜間模式操作按鍵。
➔ 該按鍵高亮。

濾芯更換指示燈

當濾芯更換指示燈亮起時：
請參閱維護和保養。

提示

– 如果濾網的壽命少於72小時，濾網更換指示燈就會以2Hz的頻率閃爍。
– 如果濾網的壽命已盡，濾網更換指示燈將保持常亮，設備仍繼續工作。
– 為了在更換濾網後使濾網更換指示燈复位，需在待機模式下將濾網更換指示燈按住5秒鐘，即可完成複位。
– 只有在濾網壽命少於 72 小時的情況下濾網更換指示燈才會閃爍 / 常亮。
– 當感覺到濾芯有討厭的異臭味時，請取出濾芯，用吸塵器或者吹風機將其表面聚積的灰塵清理乾淨，然後將其置於陽光下暴晒3-5小時後再放回，若仍然無法清除異臭味，請更換濾芯。

空氣品質指示燈

➔ 按下 「開 / 關」操作按鍵開啟設備。

空氣品質指示燈持續發亮：

藍：空氣品質非常好
黃：空氣品質中等
紅：空氣品質差

結束運行

➔ 按下 「開 / 關」操作按鍵以關閉設備。

設備保管

➔ 將電源連接導線和配件整齊放在設備上。在乾燥室內保管裝置。

維護和保養

定期以乾布清潔設備外殼，以免灰塵堆積。
➔ 在進行設備上的工作之前，應關閉設備且拔出電源插頭。
➔ 用柔軟的乾布擦拭設備。
➔ 用柔軟的乾布擦拭過濾器蓋和出風口。

更換濾網

當濾網更換指示燈亮起時：

圖**1**
➔ 在把手處打開並取下過濾器蓋。
➔ 將上方前置濾網解鎖並移除。
➔ 清潔初效濾網。
➔ 將高效濾網沿標籤處從設備中拉出並更換。

提示

– 每次都必須清潔兩個前置濾網。
– 前置濾網可清洗。
– 每次都必須更換兩個精密濾網。

圖 **2**

➔ 移除濾網的包裝。
➔ 將高效濾網裝入設備中須可從外部看到標籤。
➔ 將初效濾網的導向前緣插入下方的凹槽中。
➔ 將前置濾網由上往下小心地卡入，同時注意側面是否位置正確。
➔ 將過濾器蓋的導向前緣插入下方的凹槽中。
➔ 關上上方的過濾器蓋。

空氣品質感測器

空氣品質感測器應每兩個月清潔一次，以確保最佳功能。若在含大量灰塵的環境中使用設備，應提高清潔頻率。

提示

若溼度非常高時，可能會在空氣品質感測器上形成冷凝水。LED 空氣品質指示燈可能會因此顯示空氣品質為差，即使空氣品質良好。在此情況下，請清潔空氣品質感測器，或是選擇手動模式。

圖 **3**

➔ 按壓空氣品質感測器蓋的中央以開啟蓋子。
➔ 用消微沾溼的棉花棒清潔空氣品質感測器和空氣出口。
➔ 用乾的棉花棒將空氣品質感測器擦乾。
➔ 按壓空氣品質感測器蓋的中央關閉蓋子。

故障說明

設備無法運轉

➔ 插入電源線。
➔ 關閉過濾器蓋。
➔ 如果故障依然存在：
不得再操作開/關操作按鍵。
請聯繫客戶服務中心。

空氣品質指示燈持續亮紅燈

➔ 清潔空氣品質感測器。

無法改善空氣品質

➔ 請確認是否所有濾網均安裝正確。

出風口氣流不再強烈

➔ 清潔初效濾網。

特殊配件

濾網類型	零件編號	適用範圍
Universal Pure濾芯	2.863-246.0	主要用於去除PM2.5，花粉和甲醛
Smog Pure濾芯	2.863-247.0	主要用於去除PM2.5和花粉
TVOC Pure濾芯	2.863-248.0	主要用於去除揮發性有機物（TVOC）和甲醛
Pet Pure濾芯	2.863-249.0	主要用於去除寵物毛髮，揮發性有機物（TVOC），二手煙和寵物異味（尤指氨氣）

技術參數

電源電壓	220-240	V
頻率	50-60	Hz
最大功率	45	W
外形尺寸		
長度	380	mm
寬度	380	mm
高度	713	mm
重量（不含附件）	11，1	Kg
聲功率級L_{WA}	60	dB(A)

濾網名稱	Basic Pure
目標污染物	顆粒物
潔淨空氣量 (m^3/h)	500
累計淨化量(mg)	P4
淨化能效 $m^3/h*w$	11.1
淨化能效等級 顆粒物≥5.00	高效级
淨化能效等級 氣態污染物≥1.00	/
適用面積 (m^2)	35-60
備註	標配

保留技術更改權！

Contents

Contents	EN	5
General notes	EN	5
Safety instructions	EN	5
Description of the Appliance	EN	7
Commissioning and operation	EN	7
Care and maintenance	EN	8
Troubleshooting	EN	8
Special accessories	EN	8
Technical specifications	EN	8

General notes

Dear Customer,



Please read and comply with these original instructions prior to the initial operation of your appliance and store them for later use or subsequent owners.

Proper use

In accordance with the descriptions and the safety information in these operating instructions the device is intended for use as an air purifier.
This appliance has been designed for use in private households and is not intended for commercial use.

– This unit is only to be used indoors.
– Protect the unit from rain. Do not store outside.

The manufacturer is not responsible for any damages that may occur on account of improper use or wrong operations.

Environmental protection



The packaging material can be recycled. Please do not place the packaging into the ordinary refuse for disposal, but arrange for the proper recycling.



Old appliances contain valuable materials that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection systems.
Electrical and electronic devices often contain components which could potentially pose a danger to human health and the environment if handled or disposed of incorrectly. However, these components are necessary for the proper operation of the device. Devices marked with this symbol must not be disposed of with regular household rubbish.

Disposal of filters

The used filter can be disposed of along with regular household waste.
Please wash your hands after you have disposed of the used filter.

Warranty

The warranty terms published by the relevant sales company are applicable in each country. We will repair potential failures of your appliance within the warranty period free of charge, provided that such failure is caused by faulty material or defects in manufacturing. In the event of a warranty claim please contact your dealer or the nearest authorized Customer Service centre. Please submit the proof of purchase.

Customer Service

Our KÄRCHER branch will be pleased to help you further in the case of questions or faults.

Ordering spare parts and special attachments

You can procure the spare parts and the attachments from your dealer or your KÄRCHER branch office.

Safety instructions

⚠ *DANGER*

– *The appliance may only be connected to alternating current. The voltage must correspond with the type plate on the appliance.*
– *Never touch the mains plug and the socket with wet hands.*
– *Do not pull the plug from the socket by pulling on the connecting cable.*
– *Check the power cord with mains plug for damage before every use. To avoid risks, arrange immediately the exchange by an authorized customer service or a skilled electrician, if the power cord is damaged.*
– *To avoid accidents due to electrical faults we recommend the use of sockets with a line-side current-limiting circuit breaker (max. 30 mA nominal tripping current).*
– *Turn off the appliance and remove the mains plug prior to any care and maintenance work.*
– *Repair works may only be performed by the authorised customer service.*

⚠ ***WARNING***

– *This appliance is not intended for use by persons with limited physical, sensory or mental capacities or lacking experience and/or skills, unless such persons are accompanied and supervised by a person in charge of their safety or they have received precise instructions on the use of this appliance and have understood the resulting risks.*
– *Children may only use this appliance if they are over the age of 8 and supervised by a person in charge of their safety, or if they have received instructions on the use of this appliance and have understood the resulting risks.*
– *Children must not play with this appliance.*
– *Supervise children to prevent them from playing with the appliance.*
– *Cleaning and user maintenance must not be performed by children without supervision.*
– *It is prohibited to cover the air inlet and outlet.*
– *Keep packaging film away from children - risk of suffocation!*
– *Switch the appliance off after every use and prior to every cleaning/maintenance procedure.*
– *The appliance may not be used in areas where a risk of explosion is present.*
– *Do not install the device near a heat source.*

⚠ ***CAUTION***

– *The device is not a replacement for appropriate ventilation.*
– *Park the device on even, stable ground and align it.*
– *Use only original KÄRCHER spare parts.*
– *Do not use the device in damp conditions or in rooms with high ambient temperatures, e.g. bathroom, kitchen.*

Hazard levels

⚠ ***DANGER***

Pointer to immediate danger, which leads to severe injuries or death.

⚠ ***WARNING***

Pointer to a possibly dangerous situation, which can lead to severe injuries or death.

⚠ ***CAUTION***

Pointer to a possibly dangerous situation, which can lead to minor injuries.

ATTENTION

Pointer to a possibly dangerous situation, which can lead to property damage.

Description of the Appliance

When unpacking the product, make sure that no accessories are missing and that none of the package contents have been damaged. If you detect any transport damages please contact your dealer.

Illustrations on fold-out page!



1 Filter cover, front
2 Pre-filter
3 Fine filter
4 Filter cover, rear
5 Air outlet
6 Operating field
7 Air quality display
8 Filter cover handle
9 Air quality sensor cover
10 Main Supply
11 On/off operation button
12 Manual mode operation button
13 Automatic mode operation button
14 Night mode operation button
15 Change filter indicator

Commissioning and operation

ATTENTION

Always operate the device with pre-filters and fine filters installed.

Start up

➔ Plug the mains connection into the device
➔ Insert the mains plug into a socket.
All operation buttons on the control panel and the air quality display light up briefly and go out again.
➔ Press the on/off operation button in order to switch the device on.

Note

– When the device is switched on, the integrated air quality sensor automatically measures the air quality in the room.
– Set the desired mode by pressing the appropriate operation button on the control panel.

Operating field

Automatic mode

When automatic mode is activated, the device selects the appropriate fan speed for the measured air quality.

➔ Press the on/off operation button in order to switch the device on.
➔ Press the automatic mode operation button.
➔ The corresponding button lights up.

Note

– The integrated air quality sensor measures the air quality and automatically selects the right speed level to ensure the best possible air quality in the room.
– As soon the air is clean, the device switches to low fan speed.

Manual mode

When manual mode is activated, you can manually set the fan speed.

➔ Press the on/off operation button in order to switch the device on.
➔ Press the manual mode operation button.
➔ The corresponding button lights up.

Note

– By pressing the button several times, the fan speed can be set in three speeds.

Display	Fan speed
I	low
II	medium
III	high

Night mode

When night mode is activated, the control panel lighting goes out, but the device remains in operation.
The control panel lighting is re-activated by touching the control panel.

➔ Press the on/off operation button in order to switch the device on.
➔ Press the night mode operation button.
➔ The corresponding button lights up.

Change filter indicator

If the filter change indicator lights up:
see care and service.

Note

– The filter change indicator flashes at 2 Hz if the filter service life is less than 72 hours.
– The filter change indicator lights up continuously when the end of the filter service life is reache, The appliance continues to work.
– In order to reset the filter change indicator following a filter change, press it for 5 seconds in standby mode.
– The filter change indicator only flashes/lights up when the filter service life is less than 72 hours.
– When there's a nasty smell, please take out the filter, clean the dust on the surface of filter by using a vacuum cleaner or a hair dryer, then exposure the filter in sunshine about 3-5 hours, and put it back in unit, if the nasty smell still exist, please replace the filter.

Air quality display

➔ Press the on/off operation button in order to switch the device on.

Air quality display is lit:
Blue: Very good air quality
Yellow: Mediocre air quality
Red: Poor air quality

Finish operation

➔ Press the on/off operation button to switch the device off.

Storing the appliance

➔ Stow away the mains cable and accessory at the machine. Store the appliance in a dry room.

Care and maintenance

Regularly dry clean the machine casing so that no dust can collect on it.

➔ First remove the mains plug before doing any job on the device
➔ Wipe off the device with a dry soft cloth.
➔ Wipe the filter covers and air outlet with a dry soft cloth.

Filter replacement

If the filter change indicator lights up:

Illustration **1**

➔ Open and remove the filter covers with the handles.
➔ Unlock and remove the pre-filter.
➔ Clean pre-filter.
➔ Remove the fine filter at the label from the device.

Note

– Both pre-filters always have to be cleaned.
– The pre-filter is washable.
– Both fine filters always have to be renewed.

Illustration **2**

➔ Remove packaging from the filters.
➔ Insert the fine filter in the device. The label should be visible from the outside.
➔ Insert the guide noses of the pre-filter in the lower recesses.
➔ Carefully lock the pre-filter at the top and ensure correct positioning at the sides.
➔ Insert the guide noses of the filter cover in the lower recesses.
➔ Close the filter cover from above.

Air quality sensor

The air quality sensor should be cleaned every two months in order ensure ideal functioning. If the device is to be operated in a dusty environment, it should be cleaned more often.

Note

If the humidity is very high, condensation may form on the air quality sensor. Due to this, the air quality LED display may indicate poor air quality, even if it is good. If this occurs, clean the air quality sensor or select manual mode.

Illustration **3**

➔ Press the air quality sensor cover in the middle and open it.
➔ Clean the air quality sensor and the air openings with a damp cotton swab.
➔ Dry the air quality sensor with a dry cotton swab.
➔ Press the air quality sensor cover in the middle and close it.

Troubleshooting

Appliance is not running

➔ Plug in the power cord.
➔ Close the filter cover.
➔ Should the error continue to exist:
Do not press the on/off operation button again.
Contact customer service.

Air quality sensor display lights up red continuously.

➔ Clean the air quality sensor.

Air quality does not improve

➔ Make sure that all filters have been inserted correctly.

Airflow from the air outlet is no longer so strong

➔ Clean pre-filter.

Special accessories

Filter type	Part number	Application
Universal Pure Filter	2.863-246.0	For air pollution, especially for fine dust (PM2.5), formaldehyde and pollen
Smog Pure Filter	2.863-247.0	For air pollution, especially for fine dust (PM2.5) and pollen
TVOC Pure Filter	2.863-248.0	For volatile organic compounds (TVOC and formaldehyde
Pet Pure Filter	2.867-249.0	For volatile organic compounds (TVOC), smoke, pet hair and smell especially for ammonia

Technical specifications

Mains voltage	220-240	V
Frequency	50-60	Hz
Maxim um power	45	W
Dimensions		
Length	380	mm
Width	380	mm
Height	713	mm
Weight(without accessories)	11，1	Kg
Sound power level L_{WA}	60	dB(A)

Filter name	Basic Pure
Target Pollutant	Particulate
CADR (m^3/h)	500
CCM (mg)	P4
Cleaning energy efficiency (m^3/h*w)	11.1
Particulate energy efficiency grade:⩾5.00	High-efficiency grade
Formaldehyde energy efficiency grade:⩾1.00	/
Effective room size (m^2)	35-60
Remark	Standard

Subject to technical modifications!



http://www.kaercher.com/dealersearch

