深圳市信华翰科技有限公司
SHENZHEN XIN HUA HAN SCIENCE AND TECHNOLOGY CO.,LTD.
地址：深圳市福田区深南中路 3007 号国际科技大厦 11 楼
电话：0755-83981612;0755-83981617；传真：0755-83558013
展销部：深圳市华强北赛格大厦 7106 室
网址： www.scanshop.cn

公司简介

深圳市信华翰科技有限公司成立于 2006 年，注册资金 500 万，办公室位于深圳市商业中心，华强北商圈的国际科技大厦 11 楼，办公面积 320 平方。是 Honeywell 金牌代理商、 Newland 新大陆金牌代理商、摩托罗拉讯宝 SYMBOL 战略合作伙伴、优尼泰克授权服务商。我司共代理有十几个品牌的条码设备，为客户提供优质丰富的条码相关产品和系统集成专业服务。

扫描网是深圳市信华翰科技有限公司斥资 100 万打造的扫描枪的网上商城。信华翰为了让中国的条码事业走得更好更快，让大众都能享受条码带来的便利，特此为全国商户带来质优价廉的各类扫描枪，扫描网所售的所有扫描枪均是厂家授权，均经过"三测"（出厂检测，到货检测，出货检测）的优良产品。

买扫描枪上扫描网！

服务热线：400-609-8831

新大陆 Newland



新大陆 HR1030 手持式扫描枪

inspiry



北京意锐 RC532 二维码扫描平台

MOTOROLA



摩托罗拉 C11 一维扫描枪

Honeywell



霍尼韦尔 1900GHD 二维码扫描枪

合作伙伴

Honeywell　新大陆 Newland　CIPHERLAB Smarter　TSC

MOTOROLA　unitech　inspiry　zebex

CLEVER CAT 靈貓　ZEBRA　YOUJIE　OPTICON

MINDEO™　立象科技 ARGOX　cino　旭龙物联 SUNLUX IOT

DATALOGIC™

QuickScan™ Mobile



Reference Manual

Datalogic Scanning, Inc.
959 Terry Street
Eugene, Oregon 97402
USA
Telephone: (541) 683-5700
Fax: (541) 345-7140

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written per-mission of Datalogic Scanning, Inc. or its subsidiaries or affiliates ("Datalogic" or “Datalogic Scanning”). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.
Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.scanning.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice. Datalogic is a registered trademark of Datalogic S.p.A. in many countries and the Datalogic logo is a trademark of Datalogic S.p.A. all licensed to Datalogic Scanning, Inc. All other trademarks and trade names referred to herein are property of their respective owners.

CONTENTS

1 INTRODUCTION 1

2 INSTALLATION 3

3 CONFIGURATION 9

RS-232 PARAMETERS 20
Baud Rate 21
Parity 22
Data Bits 22
Stop Bits 23
Handshaking 23
Ack/Nack Protocol 24
Fifo 24
Inter-character Delay 25
Rx Timeout 25
Serial Trigger Lock 26

USB PARAMETERS 27
Handshaking 28
Ack/Nack Protocol 28
Fifo 29
Inter-character Delay 29
Rx Timeout 30
Serial Trigger Lock 30
Keyboard Nationality 31
Fifo 32
Inter-character Delay 32
Inter-code Delay 33
Control Character Emulation 33
USB Keyboard Speed 34

WEDGE PARAMETERS 35
Keyboard Nationality 36
Caps Lock 37
Caps Lock Auto-Recognition (IBM AT compatible only) 37
Num Lock 38
Inter-character Delay 38
Inter-code Delay 39
Keyboard Setting 40
Control Character Emulation 42

PEN EMULATION 43
Operating Mode 44
Minimum Output Pulse 45
Conversion to Code 39 and Code 128 46
Overflow 47
Output Level 47
Idle Level 48
Inter-Block Delay 48

IBM 46xx 49
IBM Data Formatting 50

DATA FORMAT 51
Code Identifier 54
Custom Code Identifier 55
Header 56
Terminator 57
Special Keys 58
Field Adjustment 59
Field Adjustment Character 60
Code Length Tx 60
Character Replacement 61
Address Stamping 63
Address Delimiter 63

READING PARAMETERS 64
Hand-Held Operation 65
Stand Operation 65
Hardware Trigger Mode 66
Trigger-off Timeout 66
Flash Mode 67
Reads per Cycle 67
Safety Time 68
Beeper Intensity 68
Beeper Tone 69
Beeper Type 69
Beeper Length 69
Stand Recognition Beep 70

DECODING PARAMETERS 71
Ink Spread 72
Overflow Control 72
Interdigit Control 73
Decoding Safety 73
Puzzle Solver™ 74

CODE SELECTION **75**
EAN/UPC Family 77
2/5 Family 84
Code 39 Family 85
Code 128 Family 87
Code 93 88
Codabar Family 89
MSI 91
Plessey 92
Telepen 93
Delta IBM 94
Code 11 95
Code 16K 96
Code 49 96
GS1 DataBar™ 97

ADVANCED FORMATTING **98**
Concatenation 99
Advanced Formatting 102

RADIO PARAMETERS **117**
Radio Protocol Timeout 118
Power-Off Timeout 118
Beeper Control for Radio Response 119
Single Store 120
Batch Mode 121

4 REFERENCES **122**

5 TECHNICAL FEATURES **145**

A HOST CONFIGURATION STRINGS **150**

B CODE IDENTIFIER TABLE **163**

C HEX AND NUMERIC TABLE **166**

GENERAL VIEW

QUICKSCAN® MOBILE READERS





1 INTRODUCTION


The QuickScan® family provides a valuable solution for users seeking an affordable handheld device without compromise in performance.
The extensive range of models and options of this family can easily meet any specific challenges required by retail, and commercial data collections applications.
The QuickScan® Mobile is the ideal solution for retail and commercial environments where continuous and multi-tasking activities are keys to optimum productivity, lower cost of ownership and profitable business.

1.1 READING ANGLE


QuickScan® Mobile readers automatically scan barcodes **at a distance**. Simply aim and pull the trigger. Code scanning is performed along the center of the light bar emitted from the reading window. This bar must cover the entire code.

Successful scanning is obtained by tilting the reader with respect to the barcode to avoid direct reflections, which could impair the reading performance. See the figures below.

Successful reading is obtained by an audible tone.

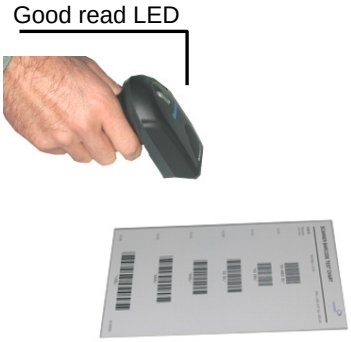

OK

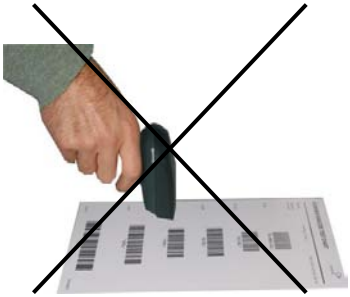

Not Advised

1.2 HANDS-FREE USE

When using the QuickScan® Mobile on the cradle, remember to lock the reader by pushing up the locking system as indicated in the following figure.



2 INSTALLATION

2.1 USING YOUR QUICKSCAN® MOBILE READING SYSTEM

Follow the procedure below to start using your QuickScan® Mobile reading system:

1. Connect a QuickScan® Mobile cradle to the Host.
2. Insert the QuickScan® Mobile reader into the cradle to start the battery charging. A full charge of the Lithium battery takes 3.5 – 6 hours.

NOTE *To achieve the best battery life, it is recommended to perform a full battery charge before using the reader **in hand-held mode**.*

In hands-free use, you can immediately start using the reader, since it is powered by the cradle.

3. Configure the QuickScan® Mobile reader.
4. Configure the QuickScan® Mobile cradle.

2.2 CHANGING THE BATTERIES

To change the battery of your reader, you must:

1. Unscrew the battery cover screw (Figure 1).
2. Unplug the white connector and remove the old battery (Figure 2).
3. Insert the new battery and plug in the white connector.

NOTE *When inserting the new battery into the handle pay attention to position the battery and the connector just as shown in Figure 3.*



Figure 1



Figure 2



Figure 3

4. Insert the cover in the handle and screw it back into place.



Figure 4

WARNING	***Do not incinerate, disassemble, short terminals or expose to high temperature. Risk of fire, explosion. Use specified charger only. Risk of explosion if the battery is replaced by an incorrect type. Dispose of the batteries as required by the relevant laws in force.***


2.3 SYSTEM CONNECTIONS

CAUTION

Connections should always be made with power OFF!

You can connect the QuickScan® Mobile cradle to the Host through the dedicated connector, using the cable corresponding to the desired interface type.

1. Connect the appropriate interface cable to the cradle by simply plugging it into the Host connector on the base of the cradle.

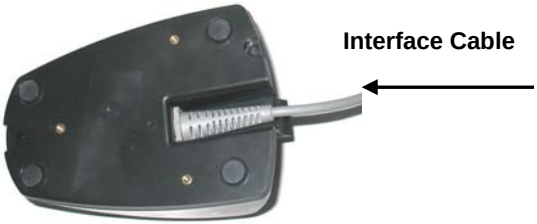

QuickScan® Mobile Cradle - Bottom View

To disconnect the cable, insert a paper clip or other similar object into the hole corresponding to the connector on the base of the cradle. Push down on the clip while unplugging the cable. Refer to the following figure:



Disconnecting the Cable


2.4 RS-232 CONNECTION




2.5 USB




2.6 IBM USB POS

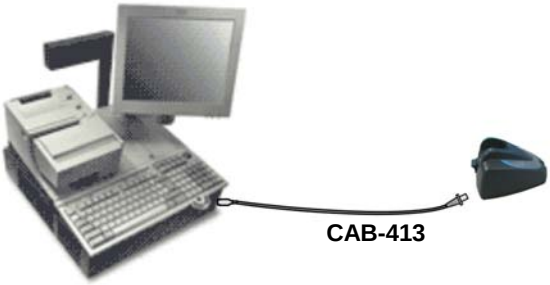


2.7 WEDGE CONNECTION (only for Quickscan M2 Type:130)

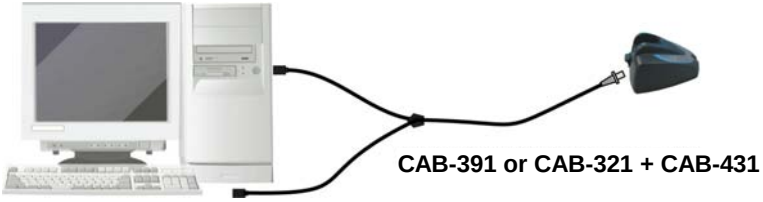

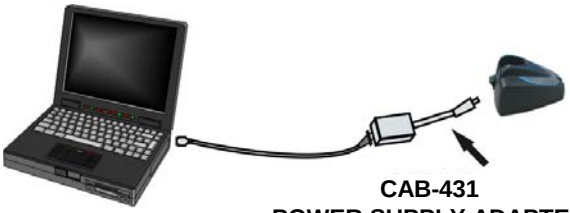

CAB-431
POWER SUPPLY ADAPTER

2.8 IBM PORT9B / IBM PORT 5B (only for Quickscan M2 Type:110)

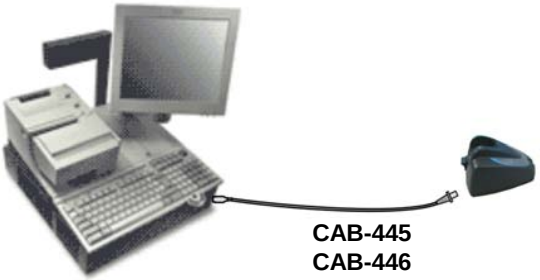


CAB-445
CAB-446

2.9 PEN EMULATION CONNECTION



CAB-431
POWER SUPPLY ADAPTER

2.10 SINGLE READER LAYOUT

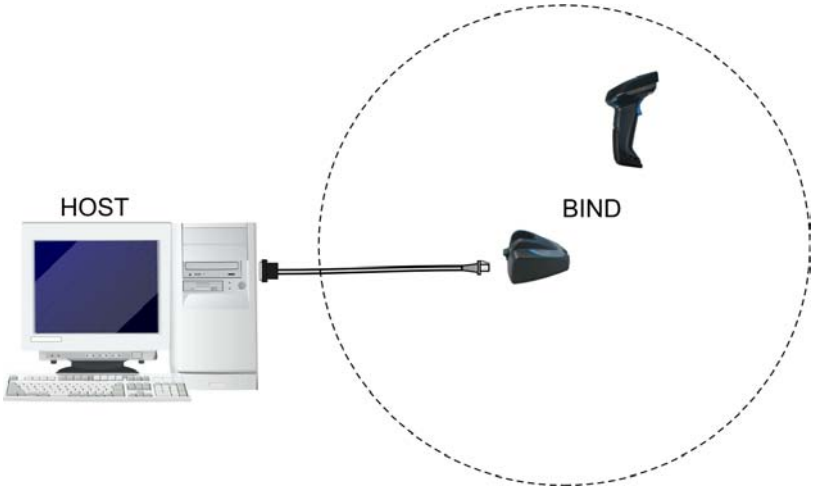

3 CONFIGURATION

3.1 CONFIGURATION METHODS

3.1.1 Reading Configuration Barcodes

This manual can be used for complete setup and configuration of your reader by following the setup procedures in this chapter.

If you wish to change the default settings, this manual provides complete configuration of your reader in an easy way.

To configure your reader:

1. Open the folded page in Appendix **C** with the hex-numeric table and keep it open during the device configuration.
2. Read the **Enter Configuration** code ONCE, available at the top of each page of configuration.
3. Modify the desired parameters in one or more sections following the procedures given for each group.
4. Read the **Exit and Save Configuration** code ONCE, available at the top of each page of configuration.

Reference notes describing the operation of the more complex parameters are given in chapter 4.

3.1.2 Datalogic Aladdin™

Datalogic Aladdin™ is a multi-platform utility program that allows device configuration using a PC. It provides RS-232 interface configuration as well as configuration barcode printing.

3.1.3 Copy Command

A previously configured device (Master), can be used to send its configuration directly to other devices of the same type (Slaves). The particular procedure for each device is given.

3.1.4 Sending Configuration Strings from Host

An alternative configuration method is provided in Appendix A using the RS-232 or USB-COM interface. This method is particularly useful when many devices need to be configured with the same settings. Batch files containing the desired parameter settings can be prepared to configure devices quickly and easily.

3.2 QUICKSCAN® MOBILE STAND ALONE SETUP

Read the restore default parameters code below.

1. Restore QuickScan® Mobile Default



2. Read the codes below to set the radio address of the QuickScan® Mobile reader.

Enter configuration



3. Set Radio Address



+

four digits for the QuickScan® Mobile Address (from **0000** to **1999**).

All readers used in the same area must have different addresses.

4. Exit and Save configuration



5. Read the **Bind** code to pair the QuickScan® Mobile to the cradle.
The reader is dedicated to the cradle. Any previously **bound** reader will be excluded.

Bind



The yellow LED on the QuickScan® Mobile will blink; the reader is ready to be positioned onto the cradle.

6. Firmly position the reader onto the cradle within 10 seconds, a beep will be emitted, signaling that the cradle has been paired to the QuickScan® Mobile, and the yellow LED on the reader will go off.



7. Read the cradle restore default code:

Restore cradle default

Go to par. 3.3 Interface Selection.

3.3 INTERFACE SELECTION

Read the interface selection code for your application.

RS-232

Standard



POS Terminals

Nixdorf Mode A



Fujitsu



ICL Mode



For POS terminal default settings refer to par. 4.9.

PEN



WEDGE (only for Quickscan M2 Type:130)

IBM AT or PS/2 PCs



IBM XT



PC Notebook



IBM SURE1



IBM Terminal 3153



WEDGE (CONTINUED)

IBM Terminals 31xx, 32xx, 34xx, 37xx:

To select the interface for these IBM Terminals, read the correct KEY TRANSMISSION code. Select the KEYBOARD TYPE if necessary (default = advanced keyboard).

KEY TRANSMISSION MODE

make-only keyboard



make-break keyboard



KEYBOARD TYPE

◆ advanced keyboard



typewriter keyboard



WEDGE (CONTINUED)

ALT MODE

The ALT-mode selection allows barcodes sent to the PC to be interpreted correctly independently from the Keyboard Nationality used. **You do not need to make a Keyboard Nationality selection.**

(default = Num Lock Unchanged). **Make sure the Num Lock key on your keyboard is ON.**

IBM AT - ALT mode



PC Notebook - ALT mode



WYSE TERMINALS

ANSI Keyboard



PC Keyboard



ASCII Keyboard



VT220 style Keyboard



WEDGE (CONTINUED)

DIGITAL TERMINALS

VT2xx/VT3xx/VT4xx



IBM 46XX (only for Quickscan M2 Type:110)

PORT 9B

4501 Protocol



(typical)

1520 Protocol



PORT 5B

1520 Protocol



(typical)

4501 Protocol




3.4 USB READER CONFIGURATION

The USB interface is compatible with:

Windows 98 (and later)	IBM POS for Windows
Mac OS 8.0 (and later)	4690 Operating System

USB Start-up

As with all USB devices, upon connection, the Host performs several checks by communicating with the QuickScan® Mobile. During this phase the yellow LED on the QuickScan® Mobile reader blinks and normal operations are suspended. Two basic conditions must be met before the QuickScan® Mobile is ready to read codes, the correct USB driver must be loaded and sufficient power must be supplied to the reader.

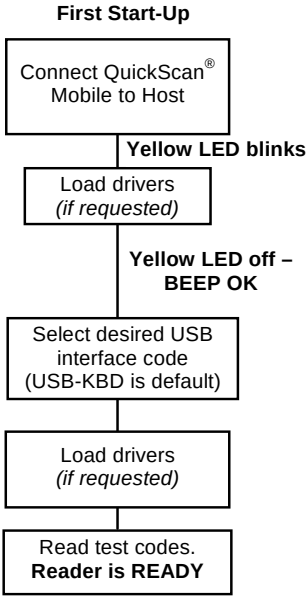

For all systems, the correct USB driver for the default USB-KBD interface is included in the Host Operating System and will either be loaded automatically or will be suggested by the O.S. and should therefore be selected from the dialog box (the first time only).

Normally the Host supplies sufficient power to the reader, the start-up phase ends correctly, the yellow LED stops blinking.

In rare cases, if the Host does not supply sufficient power to the reader, a dialog box will appear on the Host and the reader will be blocked (yellow LED continues blinking). In this case, disconnect the USB device cable at the Host (yellow LED stops blinking); and then try a different USB port as indicated by the Operating System message. You can now read codes.

At this point you can read the USB interface configuration code according to your application. Load drivers from the O.S. (if requested). When configuring the USB-COM interface, the relevant files and drivers must be installed from the USB Device Installation software, which can be downloaded from the web page http://www.scanning.datalogic.com.

The reader is ready to read barcodes. Successive start-ups will automatically recognize the previously loaded drivers.

USB

USB-KBD



USB-KBD-ALT-MODE



USB-KBD-APPLE



USB-COM*



USB-IBM-Table Top



USB-IBM-Hand Held



* When configuring USB-COM, the relevant files and drivers must be installed from the USB Device Installation software, which can be downloaded from the web site http://www.scanning.datalogic.com.

3.5 CHANGING DEFAULT SETTINGS

Once your reader is setup, you can change the default parameters to meet your application needs. Refer to the preceding paragraphs for initial configuration in order to set the default values and select the interface for your application.

In this manual, the configuration parameters are divided into logical groups making it easy to find the desired function based on its reference group.

The first five groups are for Standard/IBM Interface parameter configuration:

RS-232

USB

WEDGE (only for Quickscan M2 type:130)

PEN EMULATION

IBM 46xx (only for Quickscan M2 type:110)

The following parameter groups are common to all interface applications:

DATA FORMAT parameters regard the messages sent to the Host system for all interfaces except Pen Emulation.

READING PARAMETERS control various operating modes and indicator status functioning.

DECODING PARAMETERS maintain correct barcode decoding in certain special reading conditions.

CODE SELECTION parameters allow configuration of a personalized mix of codes, code families and their options.

ADVANCED FORMATTING PARAMETERS allow code concatenation and advanced formatting of messages towards the Host. It cannot be used with Pen Emulation connections.

RADIO PARAMETERS (Mobile series only) allow configuration of radio control parameters.

RS-232 PARAMETERS

- ***BAUD RATE***
- ***PARITY***
- ***DATA BITS***
- ***STOP BITS***
- ***HANDSHAKING***
- ***ACK/NACK PROTOCOL***
- ***FIFO***
- ***INTER-CHARACTER DELAY***
- ***RX TIMEOUT***
- ***SERIAL TRIGGER LOCK***

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

BAUD RATE

300 baud



600 baud



1200 baud



2400 baud



4800 baud



◆ 9600 baud



19200 baud



38400 baud



PARITY

◆ none



even parity



odd parity



DATA BITS

7 bits



◆ 8 bits



9 bits



STOP BITS

◆ 1 stop bit

2 stop bits

HANDSHAKING

◆ disable

hardware (RTS/CTS)

software (XON/XOFF)

RTS always ON

See par. 4.1.1 for details.

ACK/NACK PROTOCOL

◆ disable

enable

See par. 4.1.2 for details, particularly on implementing this parameter with QuickScan® Mobile.

FIFO

disable

◆ enable

See par. 4.1.3 for details.

INTER-CHARACTER DELAY

delay between characters transmitted to Host

Read 2 numbers from the table where:
00 = DELAY disabled
01-99 = DELAY from 1 to 99 milliseconds

◆ delay disabled

RX TIMEOUT

timeout control in reception from Host

Read 2 numbers from the table where:
00 = TIMEOUT disabled
01-99 = TIMEOUT from **.1** to **9.9** seconds

◆ rx timeout 5 seconds

See par. 4.1.4 for details.

SERIAL TRIGGER LOCK

◆ disabled

enable and select characters

Read 2 characters from the Hex/Numeric table in the range 00-FE where:

- First Character enables device trigger
- Second Character inhibits device trigger until the first character is received again.

USB PARAMETERS

USB-COM

Handshaking, Ack/Nack protocol, FIFO, Inter-character delay, Rx timeout, Serial trigger lock

USB-KBD

Keyboard nationality, FIFO, Inter-character delay, Inter-code delay, Control character emulation, USB keyboard speed

USB-IBM

No parameter selection required.

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

HANDSHAKING

◆ disable

hardware (RTS/CTS)

software (XON/XOFF)

RTS always ON

See par. 4.1.1 for details.

ACK/NACK PROTOCOL

◆ disable

enable

See par. 4.1.2 for details.

FIFO

disable

◆ enable

See par. 4.1.3 for details.

INTER-CHARACTER DELAY

delay between characters transmitted to Host

Read 2 numbers from the table where:

00 = DELAY disabled
01-99 = DELAY from **1** to **99** milliseconds

◆ delay disabled

RX TIMEOUT

timeout control in reception from Host

Read 2 numbers from the table where:

00 = TIMEOUT disabled
01-99 = TIMEOUT from **.1** to **9.9** seconds

◆ rx timeout 5 seconds

See par. 4.1.4 for details.

SERIAL TRIGGER LOCK

◆ disabled

enable and select characters

Read 2 characters from the Hex/Numeric table in the range 00-FE where:

- First Character enables device trigger
- Second Character inhibits device trigger until the first character is received again.

KEYBOARD NATIONALITY

Not Available for USB-KBD-ALT-MODE Interface

This parameter default value is restored through the Interface Selection code and not Restore Default.

Belgian

English

French

German

Italian

Japanese

Spanish

Swedish

◆ USA

FIFO

disable

◆ enable

See par. **4.1.3** for details.

INTER-CHARACTER DELAY

delay between characters transmitted to Host

Read 2 numbers from the table where:

00 = DELAY disabled
01-99 = DELAY from **1** to **99** milliseconds

◆ delay disabled

INTER-CODE DELAY

delay between codes transmitted to Host

Read 2 numbers from the table where:

00 = DELAY disabled
01-99 = DELAY from **1** to **99** seconds

◆ delay disabled

CONTROL CHARACTER EMULATION

◆ CTRL + Shift + Key

CTRL + Key

USB KEYBOARD SPEED

◆ Normal

Fast

WEDGE PARAMETERS

⊙	***KEYBOARD NATIONALITY***	⊙
⊙	***CAPS LOCK***	⊙
⊙	***CAPS LOCK AUTO-RECOGNITION***	⊙
⊙	***NUM LOCK***	⊙
⊙	***INTER-CHARACTER DELAY***	⊙
⊙	***INTER-CODE DELAY***	⊙
⊙	***KEYBOARD SETTING***	⊙
⊙	***CONTROL CHARACTER EMULATION***	⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

.

KEYBOARD NATIONALITY

Belgian

English

French

German

Italian

Spanish

Swedish

◆ USA

The Japanese Keyboard Nationality selection is valid only for IBM AT compatible PCs.

Japanese

CAPS LOCK

◆ caps lock OFF

caps lock ON

Select the appropriate code to match your keyboard caps lock status.

Note: Caps lock manual configuration is ignored when Caps Lock Auto-Recognition is enabled.

For **PC Notebook** interface selections, the caps lock status is automatically recognized; therefore this command is not necessary.

CAPS LOCK AUTO-RECOGNITION (IBM AT COMPATIBLE ONLY)

disable

◆ enable

NUM LOCK

toggle num lock

◆ num lock unchanged

This selection is used together with the Alt Mode interface selection for AT or Notebook PCs.

It changes the way the Alt Mode procedure is executed; therefore it should be set as follows:

- if your keyboard Num Lock is normally on use **num lock unchanged**
- if your keyboard Num Lock is normally off use **toggle num lock**

In this way the device will execute the Alt Mode procedure correctly for your application.

INTER-CHARACTER DELAY

delay between characters transmitted to Host

Read 2 numbers from the table where:
00 = DELAY disabled
01-99 = DELAY from **1** to **99** milliseconds

◆ delay disabled

INTER-CODE DELAY

delay between codes transmitted to Host

Read 2 numbers from the table where:

00 = DELAY disabled
01-99 = DELAY from **1** to **99** seconds

◆ delay disabled

KEYBOARD SETTING

ALPHANUMERIC KEYBOARD SETTING

The reader can be used with terminals or PCs with various keyboard types and nationalities through a simple keyboard setting procedure.

The type of computer or terminal must be selected before activating the keyboard setting command.

Keyboard setting consists of communicating to the reader how to send data corresponding to the keyboard used in the application. The keys must be set in a specific order.

Press and release a key to set it.

Some characters may require more than one key pressed simultaneously during normal use (refer to the manual of your PC or terminal for keyboard use). The exact sequence must be indicated to the reader in this case pressing and releasing the different keys.

Example:

If one has to press the "Shift" and "4" keys simultaneously on the keyboard to transmit the character "$" to the video, to set the "$", press and release "Shift" then press and release "4".

Each pressed and released key must generate an acoustic signal on the reader, otherwise repress the key. Never press more than one key at the same time, even if this corresponds to the normal use of your keyboard.

Press "Backspace" to correct a wrong key entry. In this case the reader emits 2 beeps.
Note: "CAPS LOCK" and "NUM LOCK" must be off before starting the keyboard setting procedure. "SHIFT" must be repressed for each character and cannot be substituted by "CAPS LOCK".

setting the alphanumeric keyboard



Read the code above.
Press the keys shown in the following table according to their numerical order.

Some ASCII characters may be missing as this depends on the type of keyboard: these are generally particular characters relative to the various national symbologies. In this case:

- **The first 4 characters (Shift, Alt, Ctrl, and Backspace) can only be substituted with keys not used, or substituted with each other.**
- characters can be substituted with other single symbols (e.g. "SPACE") even if not included in the barcode set used.
- characters can be substituted with others corresponding to your keyboard.

The reader signals the end of the procedure with 2 beeps indicating the keys have been registered.

WEDGE

01 : **Shift**		
02 : **Alt**		
03 : **Ctrl**		
04 : **Backspace**		
05 : **SPACE**	28 : **7**	51 : **N**
06 : **!**	29 : **8**	52 : **O**
07 : **"**	30 : **9**	53 : **P**
08 : **#**	31 : **:**	54 : **Q**
09 : **$**	32 : **;**	55 : **R**
10 : **%**	33 : **<**	56 : **S**
11 : **&**	34 : **=**	57 : **T**
12 : **'**	35 : **>**	58 : **U**
13 : **(**	36 : **?**	59 : **V**
14 : **)**	37 : @	60 : **W**
15 : *****	38 : **A**	61 : **X**
16 : **+**	39 : **B**	62 : **Y**
17 : **,**	40 : **C**	63 : **Z**
18 : **-**	41 : **D**	64 : **[**
19 : **.**	42 : **E**	65 : ****
20 : **/**	43 : **F**	66 : **]**
21 : **0**	44 : **G**	67 : **^**
22 : **1**	45 : **H**	68 : _ (underscore)
23 : **2**	46 : **I**	69 : **`**
24 : **3**	47 : **J**	70 : **{**
25 : **4**	48 : **K**	71 : **|**
26 : **5**	49 : **L**	72 : **}**
27 : **6**	50 : **M**	73 : **~**
		74 : **DEL**

The keyboard setup functioning is signaled by the LEDs on the cradle. Each key stroke corresponds to a double blinking of the yellow LED.

By pressing the Backspace key the red LED on the cradle blinks, while the yellow LED stays on.



CAUTION

Do not place the reader onto the cradle during this procedure. Otherwise, the battery charging will occur modifying the LEDs functioning.

Once the procedure has been completed, the yellow LED turns off.

CONTROL CHARACTER EMULATION

◆ CTRL + Shift + Key

CTRL + Key

PEN EMULATION

⊙	***OPERATING MODE***	⊙
⊙	***MINIMUM OUTPUT PULSE***	⊙
⊙	***CONVERSION TO CODE 39***	⊙
⊙	***OVERFLOW***	⊙
⊙	***OUTPUT LEVEL***	⊙
⊙	***IDLE LEVEL***	⊙
⊙	***INTER-BLOCK DELAY***	⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

PEN EMULATION

The operating mode parameters are complete commands and do not require reading the Enter and Exit configuration codes.

OPERATING MODE

◆ interpret mode



Interprets commands without sending them to the decoder.

transparent mode



Sends commands to the decoder without interpreting them.

PEN EMULATION

MINIMUM OUTPUT PULSE

high resolution code emulation

200 µs

400 µs

◆ 600 µs

800 µs

1 ms

1.2 ms

low resolution code emulation

See par. 4.2.1 for details.

CONVERSION TO CODE 39 AND CODE 128

disable conversion to Code 39

Transmits codes in their original format.

enable conversion to Code 39

Converts codes read into Code 39 format.

enable conversion to Code 128

Converts codes read into Code 128 format.

See par. 4.2.2 for details.

OVERFLOW

narrow

◆ medium

wide

See par. 4.2.3 for details.

OUTPUT LEVEL

◆ normal
(white = logic level 0)

inverted
(white = logic level 1)

See par. 4.2.4 for details.

IDLE LEVEL

◆ normal
(black level)

inverted
(white level)

See par. 4.2.4 for details.

INTER-BLOCK DELAY

delay between character blocks transmitted to Host

Read 2 numbers from the table where:
00 = DELAY disabled
01-99 = DELAY from .**1** to **9.9** seconds

◆ delay disabled

See par. 4.2.5 for details.

IBM 46XX

⊙ *IBM DATA FORMATTING* ⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

IBM DATA FORMATTING

conversion to Code 39

◆ IBM Standard

mixed IBM Standard + Code 39

◆ Cradle check the Host command

Cradle ignore Host command

See par. 4.3.1 for details.

DATA FORMAT

NOT FOR PEN INTERFACES

⊙	***CODE IDENTIFIER***	⊙
⊙	***CUSTOM CODE IDENTIFIER***	⊙
⊙	***HEADER***	⊙
⊙	***TERMINATOR***	⊙
⊙	***SPECIAL KEYS***	⊙
⊙	***FIELD ADJUSTMENT***	⊙
⊙	***FIELD ADJ. CHARACTER***	⊙
⊙	***CODE LENGTH TX***	⊙
⊙	***CHARACTER REPLACEMENT***	⊙
⊙	***ADDRESS STAMPING***	⊙
⊙	***ADDRESS DELIMITER***	⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

DATA FORMAT

CODE IDENTIFIER TABLE			
CODE	**AIM STANDARD**	**DATALOGIC STANDARD**	**Custom**
2/5 interleaved	] I *y*	N	
2/5 industrial	] X y	P	
2/5 normal 5 bars	] S y	O	
2/5 matrix 3 bars	] X y	Q	
EAN 8	] E 4	A	
EAN 13	] E 0	B	
UPC A	] X y	C	
UPC E	] X y	D	
EAN 8 with 2 ADD ON	] E 5	J	
EAN 8 with 5 ADD ON	] E 6	K	
EAN 13 with 2 ADD ON	] E 1	L	
EAN 13 with 5 ADD ON	] E 2	M	
UPC A with 2 ADD ON	] X y	F	
UPC A with 5 ADD ON	] X y	G	
UPC E with 2 ADD ON	] X y	H	
UPC E with 5 ADD ON	] X y	I	
Code 39	] A y	V	
Code 39 Full ASCII	] A y	W	
CODABAR	] F y	R	
ABC CODABAR	] X y	S	
Code 128	] C y	T	
EAN 128	] C y	k	
ISBT 128	] C4	f	
Code 93	] G y	U	
CIP/39	] X y	Y	
CIP/HR	] X y	e	
Code 32	] X y	X	
MSI	] M y	Z	
Plessey Standard	] P 0	a	
Plessey Anker	] P 1	o	
Telepen	] X 0	d	
Delta IBM	] X 0	c	
Code 11	] H y	b	
Code 16K	] K 0	p	
Code 49	] T y	q	
RSS Expanded Linear and Stacked	] e 0	t	
RSS Limited	] e 0	v	
RSS 14 Linear and Stacked	] e 0	u	

- AIM standard identifiers are not defined for all codes: the X identifier is assigned to the code for which the standard is not defined. The *y* value depends on the selected options (check digit tested or not, check digit tx or not, etc.).

- When customizing the Datalogic Standard code identifiers, 1 or 2 identifier characters can be defined for each code type. If only 1 identifier character is required, the second character must be selected as **FF** (disabled).

- The code identifier can be singly disabled for any code by simply selecting **FF** as the first identifier character.

- Write in the Custom character identifiers in the table above for your records.

CODE IDENTIFIER

◆ disable

Datalogic standard

AIM standard

custom

CUSTOM CODE IDENTIFIER

define custom code identifier(s)

① Read the above code.
(Code Identifiers default to Datalogic standard, see table on previous page).

② Select the code type from the code table in Appendix B for the identifier you want to change.

③ You can define 1 or 2 identifier characters for each code type. If only 1 identifier character is required, the second character must be selected as **FF** (disabled). Read the hexadecimal value corresponding to the character(s) you want to define as identifiers for the code selected in step ②: valid characters are in the range **00-FD**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example: To define Code 39 Code Identifier = @

Read define custom code identifier(s) + Code 39 + **40** + **FF**

HEADER

no header

one character header

two character header

three character header

four character header

five character header

six character header

seven character header

eight character header

After selecting **one** of the desired Header codes, read the character(s) from the HEX table. Valid characters are in the range **00-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example:

four character header + **41** + **42** + **43** + **44** = Header **ABCD**

For more details see par. 4.4.1**.**

DATA FORMAT

TERMINATOR

no terminator

one character terminator

two character terminator

three character terminator

four character terminator

five character terminator

six character terminator

seven character terminator

eight character terminator

After selecting **one** of the desired Header codes, read the character(s) from the HEX table. Valid characters are in the range **00-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example:

two character terminator + **0D** + **0A** = Terminator **CR LF**

For more details see par. 4.4.1**.**

SPECIAL KEYS

Available only for Wedge IBM AT-PS/2 and USB-KBD Interfaces



NOTE

*It is necessary to define each Special Key by following the procedure given in par. **4.4.2**.*

Select one or more of the following Special Keys according to your needs.

Special Key 1

Special Key 2

Special Key 3

Special Key 4

Special Key 5

FIELD ADJUSTMENT

◆ disable field adjustment

Field adjustment allows a number of characters *n*, to be added to or subtracted from the barcode read. The adjustment can be different for each enabled code type. To define the field adjustment:

① Read the enable field adjustment code:

enable field adjustment

② Select the code type from the Code Identifier Table in Appendix **B**.

③ Select the type of adjustment to perform:

right addition

left addition

right deletion

left deletion

④ Read a number in the range **01 - 32** from the Hex/Numeric Table to define how many characters to add or delete:

Conditions:

- Adjustment is only performed on the barcode data; the Code Identifier and Code Length Transmission fields are not modified by the field adjustment parameter.
- If the field setting would subtract more characters than exist in the barcode, the subtraction will take place only to code length 0.
- You can set up to a maximum of 10 different field adjustments on the same barcode family or on different barcode families.

Example: To add 4 characters to the right of Standard Code 39 Codes:

Read enable field adjustment + Code 39 + right addition + **04**

FIELD ADJUSTMENT CHARACTER

① Read the field adjustment character code:

field adjustment character

② Read the hexadecimal value corresponding to the character you want to use for field adjustment. Valid characters are in the range **00-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example:

To define the field adjustment character = **A**:

Read field adjustment character + **41**

CODE LENGTH TX

◆ code length not transmitted

code length transmitted in variable-digit format

code length transmitted in fixed 4-digit format

The code length is transmitted in the message after the Headers and Code Identifier characters. The code length is calculated after performing any field adjustment operations.

CHARACTER REPLACEMENT

◆ disable character replacement

This parameter allows up to three characters to be replaced from the barcode read. These substitutions are stored in memory. To define each character replacement:

① Read one of the following character replacement codes:

first character replacement

second character replacement

third character replacement

② From the Code Identifier Table in Appendix B, read the Code Identifier for the desired code family.
0 = character replacement will be effective for all code families.

③ From the Hex/Numeric Table read two characters corresponding to the Hex value (**00**-**FE**) which identifies the character to be replaced. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.


④ From the Hex/Numeric Table read two characters corresponding to the Hex value (**00**-**FE**) which identifies the new character to replace. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.
FF = the character to be replaced will be substituted with no character, that is, it will be removed from the code.

Example:


The following strings define:

1. *First Character Replacement:* substitution in *Code 39 barcodes* of all occurrences of the **0** character with the **1** character.

2. *Second Character Replacement:* substitution in *Code 39 barcodes* of all occurrences of the A character with the B character.



For Code 39 codes containing the string "**0**123", the contents transmitted will be "**1**123".



For Code 39 codes containing the string "**A**BCD", the contents transmitted will be "**B**BCD".

ADDRESS STAMPING

◆ disable reader address stamping

enable reader address stamping

See par. 4.4.3 for details.

ADDRESS DELIMITER

◆ disable reader address delimiter

enable reader address delimiter and select characters

Read 2 HEX characters in the range **00-FE**.

See par. 4.4.4 for details.

READING PARAMETERS

⊙	***HAND-HELD OPERATION***	⊙
⊙	***STAND OPERATION***	⊙
⊙	***HARDWARE TRIGGER MODE***	⊙
⊙	***TRIGGER-OFF TIMEOUT***	⊙
⊙	***FLASH MODE***	⊙
⊙	***READS PER CYCLE***	⊙
⊙	***SAFETY TIME***	⊙
⊙	***BEEPER INTENSITY***	⊙
⊙	***BEEPER TONE***	⊙
⊙	***BEEPER TYPE***	⊙
⊙	***BEEPER LENGTH***	⊙
⊙	***STAND RECOGNITION BEEP***	⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

HAND-HELD OPERATION

◆ hardware trigger

software trigger

* always on

* not available for Mobile series readers

automatic

hardware trigger ready

STAND OPERATION

ONLY Devices with Stand Recognition Beep

hardware trigger

software trigger

* always on

* not available for Mobile series readers

◆ automatic

HARDWARE TRIGGER MODE

◆ trigger active level

trigger active pulse

See par. 4.5.1 for details

TRIGGER-OFF TIMEOUT

trigger-off timeout

Read 2 numbers in the range 00-99:

00 = disables the trigger-off timeout

01-99 = corresponds to a max. 99-sec. delay after the trigger press to allow the reader to turn off automatically.

◆ trigger-off timeout disabled

See par. 4.5.2 for details.

FLASH MODE

"FLASH" ON duration





"FLASH" OFF duration





Read 2 numbers in the range 01-99:
01 to 99 = from .1 to 9.9 seconds.

◆ Flash-ON = 1 sec. Flash-OFF = 0.6 sec

READS PER CYCLE

◆ one read per cycle



multiple reads per cycle



See par. 4.5.3 for details.

SAFETY TIME

safety time

Limits same code consecutive reading.

Read 2 numbers in the range 00-99:

00 = no same code consecutive reading until reader is removed (no decoding) for at least 400 ms.

01-99 = timeout from .1 to 9.9 seconds before a consecutive read on same code.

◆ safety time = 0.5 sec

See par. 4.5.4 for details.

BEEPER INTENSITY

* very low intensity

low intensity

medium intensity

◆ high intensity

* This sets the beeper OFF for data entry, while for all other beeper signals it has the meaning “very low intensity”. The Beeper Intensity parameter is effective for all operating conditions described in par. 5.2.

BEEPER TONE

tone 1

◆ tone 2

tone 3

tone 4

BEEPER TYPE

◆ monotone

bitonal

BEEPER LENGTH

long

◆ short

STAND RECOGNITION BEEP

ONLY Devices with Stand Recognition

disable

◆ enable

DECODING PARAMETERS

⊙	***INK SPREAD***	⊙
⊙	***OVERFLOW CONTROL***	⊙
⊙	***INTERDIGIT CONTROL***	⊙
⊙	***DECODING SAFETY***	⊙
⊙	***PUZZLE SOLVER™***	⊙



CAUTION

Before changing these parameter values read the descriptions in par. 4.6.

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

INK SPREAD

disable

◆ enable

See par. 4.6.1 for details.

OVERFLOW CONTROL

disable

◆ enable

See par. 4.6.2 for details.

INTERDIGIT CONTROL

disable

◆ enable

See par. 4.6.3 for details.

DECODING SAFETY

◆ one read

(decoding safety disabled)

two reads

three reads

four reads

Required number of good reads before accepting code.

PUZZLE SOLVER™

◆ disable

enable

In the case of damaged or poorly printed codes, this parameter allows reading multiple parts of the single code to reconstruct it.

To read codes using this technology, simply move the illuminated bar over the code so that each line of the code is scanned. During this process a series of brief “ticks” indicates that reading is proceeding correctly.

Conditions:

- This parameter is only valid for the following codes:

EAN 8 without Add-on	**EAN 13 without Add-on**	**UPC A without Add-on**
Code 128	**Code 39**	

- For Code 39, Check digit control is forced.
- PuzzleSolver™ is not valid for ISBT 128 code.

CODE SELECTION

⊙	***EAN/UPC FAMILY***	⊙
⊙	***2/5 FAMILY***	⊙
⊙	***CODE 39 FAMILY***	⊙
⊙	***CODE 128 FAMILY***	⊙
⊙	***CODABAR FAMILY***	⊙
⊙	***CODE 93***	⊙
⊙	***MSI***	⊙
⊙	***PLESSEY***	⊙
⊙	***TELEPEN***	⊙
⊙	***DELTA IBM***	⊙
⊙	***CODE 11***	⊙
⊙	***CODE 16K***	⊙
⊙	***CODE 49***	⊙
⊙	***GS1 DATABAR™***	⊙

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

☞ = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

CODE SELECTION

DISABLE ALL CODE FAMILIES

NOTE

The reader allows up to 5 code selections. This does not limit the number of CODES enabled to 5, as it depends on the code family.

SINGLE SELECTIONS =

- **ONE** combination code from the EAN family
- **ONE** code from the 2/5 family

Example

5 code selections:

1. **2/5 Interleaved**
2. **2/5 Industrial**
3. Code 128 + EAN 128
4. Code 39 Full ASCII + Code 32
5. **UPC A/UPC E**

In this section all SINGLE code selections are underlined and in bold.

CODE SELECTION

EAN/UPC FAMILY

disable the family

① Read the desired family code

Note:
Since the EAN/UPC without ADD ON code selection is enabled by default, to correctly enable another selection, first disable the family.

WITHOUT ADD ON

◆ **EAN 8/EAN 13/UPC A/UPC E**

EAN 8/EAN 13

UPC A/UPC E

CODE SELECTION

WITH ADD ON 2 AND 5

EAN 8/EAN 13/UPC A/UPC E



EAN 8/EAN 13



UPC A/UPC E



WITH ADD ON 2 ONLY

EAN 8/EAN 13



UPC A/UPC E



WITH ADD ON 5 ONLY

EAN 8/EAN 13



UPC A/UPC E



WITH AND WITHOUT ADD ON

◆ **EAN/UPC with and without ADD ON no Autodiscrimination**

EAN/UPC Autodiscrimination ADD ON by Prefix

By setting the EAN/UPC Autodiscrimination ADD ON by Prefix, the desired prefixes must be selected by reading the corresponding codes given in the following section, since no prefix is configured by default.

CODE SELECTION

SELECT EAN/UPC PREFIXES

NOTE

When scanning the following codes, barcodes starting with the selected prefixes will be read and transmitted only if the ADD ON is present. If no ADD ON is found, the barcode will not be read. Barcodes starting with different characters are read regardless of ADD ON presence and transmitted always without ADD ON.

◆ **Cancel All Selections**

OR

select one or more of the following prefixes:

378/379

434/439

414/419

977

978

979

The commands above are not mutually exclusive. They can be used to configure more than one set of prefixes simultaneously.

Example:

The following string allows reading and transmitting with ADD ON all EAN/UPC starting with the 434/439, 977 and 978 prefixes:

1. *EAN/UPC Autodiscrimination ADD ON by Prefix*.

2. *434/439:* enables reading and transmission with ADD ON of all EAN/UPC barcodes starting with 434/439 prefixes.

3. *977:* enables reading and transmission with ADD ON of all EAN/UPC barcodes starting with 977 prefix.

4. *978:* enables reading and transmission with ADD ON of all EAN/UPC barcodes starting with 978 prefix.

EAN/UPC Autodiscrimination ADD ON by Prefix + 434/439 +

+ 977 + 978

To clear the current prefix selections:

1. *Cancel all Selections*

Cancel All Selections

EAN/UPC CHECK DIGIT TX SELECTIONS

For each code type in this family you can choose to transmit the check digit or not

CHECK DIGIT TRANSMISSION

◆ EAN 8

◆ EAN 13

◆ UPC A

◆ UPC E

NO CHECK DIGIT TRANSMISSION

EAN 8

EAN 13

UPC A

UPC E

CONVERSION OPTIONS

UPC E to UPC A conversion



UPC E to EAN 13 conversion



UPC A to EAN 13 conversion



EAN 8 to EAN 13 conversion



Enable only ISBN conversion



Enable only ISSN conversion



Enable both ISBN and ISSN conversion



Disable both ISBN and ISSN conversion



CODE SELECTION

2/5 FAMILY

disable the family

① Read the desired family code

◆ **Interleaved 2/5**

Normal 2/5 (5 Bars)

Industrial 2/5 (IATA)

Matrix 2/5 (3 Bars)

The pharmaceutical code below is part of the 2/5 family but has no check digit or code length selections.

Code CIP/HR

French pharmaceutical code

② Read a check digit selection

CHECK DIGIT TABLE

no check digit control

◆ check digit control and transmission

check digit control without transmission

③ Read **4** numbers for the code length where:

- **First 2 digits** = minimum code length.
- **Second 2 digits** = maximum code length.

The maximum code length is **99** characters.

The minimum code length must always be less than or equal to the maximum.

Examples:
0199 = variable from 1 to 99 digits in the code.
1010 = 10 digit code length only.

CODE 39 FAMILY

disables the family

① Read the desired family code

◆ **Standard Code 39**

Full ASCII Code 39

② Read a check digit selection

CHECK DIGIT TABLE

◆ no check digit control

check digit control
and transmission

check digit control
without transmission

CODE SELECTION

The pharmaceutical codes below are part of the Code 39 family but have no check digit selections.

Code CIP39

French pharmaceutical code

Code 32

Italian pharmaceutical code

CODE LENGTH (optional)

The code length selection is valid for the entire Code 39 family

Read the code + **4** numbers for the code length where:

set code length

First 2 digits = minimum code length.
Second 2 digits = maximum code length.

The maximum code length is **99** characters.

The minimum code length must always be less than or equal to the maximum.

Examples: **0199** = variable from 1 to 99 digits in the code. **1010** = 10 digit code length only.

CODE SELECTION

CODE 128 FAMILY

disables the family

① Read the desired family code

◆ **Code 128**

control without transmission
of check digit

EAN 128

control without transmission
of check digit

Transmit GS Before Code

Code EAN 128 uses the ASCII <GS> character to separate a variable length code field from the next code field. This character can also be transmitted before the code.

◆ disable

enable

If the <GS> character has been modified in the Character Replacement parameter, the new character is affected by this command.

ISBT 128

Enabling ISBT 128 automatically disables Puzzle Solver™.

CODE LENGTH (optional)

The code length selection is valid for the entire Code 128 family.

Read the code + **4** numbers for the code length where:
First 2 digits = minimum code length
Second 2 digits = maximum code length

set code length

The maximum code length is 99 characters. The minimum code length must always be less than or equal to the maximum.

Examples: **0199** = variable from 1 to 99 digits in the code. **1010**= 10 digit code length only.

The length is calculated on the output string.

CODE 93

◆ disables the code

Code 93

control without transmission
of check digit

CODE SELECTION

CODABAR FAMILY

◆ disable the family

① Read the desired equality control code

Standard Codabar



no start/stop character equality control

Standard Codabar



start/stop character equality control

② Read a start/stop transmission selection

START/STOP CHARACTER TRANSMISSION

no transmission

transmission

The Codabar ABC code below uses a fixed start/stop character transmission selection.

Codabar ABC

no start/stop character equality control but transmission.

CODE SELECTION

Codabar ABC Forced Concatenation

enable Codabar ABC with forced concatenation

non start/stop character equality control but transmission

CODE LENGTH (optional)

The code length selection is valid for the entire Codabar family

Read the code + **4** numbers for the code length where:
First 2 digits = minimum code length.
Second 2 digits = maximum code length.

set code length

The maximum code length is **99** characters.

The minimum code length must always be less than or equal to the maximum.

Examples: **0199** = variable from 1 to 99 digits in the code. **1010** = 10 digit code length only.

START/STOP CHARACTER CASE IN TRANSMISSION

The start/stop character case selections below are valid for the entire Codabar family:

transmit start/stop characters in lower case

transmit start/stop characters in upper case

MSI

◆ disable the family

Enable the code by selecting one of the check digit selections.

no check digit control

MOD10 check digit control
no check digit transmission

MOD10 check digit control
check digit transmission

MOD11 - MOD10 check digit control
no check digit transmission

MOD11 - MOD10 check digit control
check digit transmission

MOD10 - MOD10 check digit control
no check digit transmission

MOD10 - MOD10 check digit control
check digit transmission

PLESSEY

◆ disable the family

Enable the code by selecting one of the check digit selections.

Standard Plessey

no check digit control

check digit control
check digit transmitted

check digit control
check digit not transmitted

Anker Plessey

no check digit control

check digit control
check digit transmitted

check digit control
check digit not transmitted

TELEPEN

◆ disable the family

Enable the code by selecting one of the check digit selections.

Numeric Telepen

no check digit control

check digit control
check digit transmitted

check digit control
check digit not transmitted

Alphanumeric Telepen

no check digit control

check digit control
check digit transmitted

check digit control
check digit not transmitted

DELTA IBM

◆ disable the family

Enable the code by selecting one of the check digit selections.

no check digit control

Type 1 check digit control

Type 2 check digit control

CODE SELECTION

CODE 11

◆ disable the family

Enable the code by selecting one of the check digit selections.

no check digit control

Type C check digit control
check digit transmitted

Type C check digit control
check digit not transmitted

Type K check digit control
check digit transmitted

Type K check digit control
check digit not transmitted

Type C and Type K
check digit control
check digits transmitted

Type C and Type K
check digit control
check digits not transmitted

CODE 16K

◆ disable the code

Code 16K

To read stacked codes, simply move the reader over the code so that each line of the code is scanned. During this process a series of brief “ticks” indicates that reading is proceeding correctly.

CODE 49

◆ disable the code

Code 49

To read stacked codes, simply move the reader over the code so that each line of the code is scanned. During this process a series of brief “ticks” indicates that reading is proceeding correctly.

CODE SELECTION

GS1 DATABAR™

◆ disable the family

DISABLE CODE	ENABLE CODE
disable RSS Expanded Linear and Stacked	
	enable RSS Expanded Linear and Stacked
disable RSS Limited	
	enable RSS Limited
disable RSS 14 Linear and Stacked	
	enable RSS 14 Linear and Stacked

To read stacked codes, simply move the reader over the code so that each line of the code is scanned. During this process a series of brief “ticks” indicates that reading is proceeding correctly.

ADVANCED FORMATTING

NOT FOR PEN INTERFACES

⊙ ***CONCATENATION*** ⊙

⊙ ***ADVANCED FORMATTING*** ⊙



NOTE

Please follow the setup procedure carefully for these parameters.



NOTE

The Advanced Formatting parameters may not be compatible with the IBM USB POS interface selection.

1. Read the **Enter Configuration** code ONCE, available at the top of page .

2. **Read configuration codes precisely following the numbered procedure given.**

 = Read the code and follow the procedure given

◆ = Default value

3. Read the **Exit and Save Configuration** code ONCE, available at the top of page.

CONCATENATION

◆ disable

enable

Permits the concatenation of two codes defined by code type and length. It is possible to set a timeout for the second code reading and to define code transmission if the timeout expires.

The order of transmission is CODE 1-CODE 2.

Define Concatenation

1 **Code 1**

code ID

Read the code type from the Code Identifier Table beginning in Appendix B.

code length

Read a number in the range **01-99** from the Hex/Numeric Table.

2 **Code 2**

code ID

Read the code type from the Code Identifier Table beginning in Appendix B.

code length

Read a number in the range **01-99** from the Hex/Numeric Table.

---

3 **Concatenation Result Code ID**

use code 1 ID

use code 2 ID

Since you can concatenate codes from different families, you must select the Code ID character of the resulting code. The Code ID character will be sent in the output message only if it is enabled according to the Code Identifier selection (Datalogic, AIM, or Custom).

---

4 **Concatenation Timeout**

timeout

Read two numbers in the range **00** to **99**
00= no timeout
01-99 = timeout from 1 to 99 seconds

Define the timeout, which determines the valid waiting period between the two codes, in order to accept concatenation. If the timeout expires, the resulting action will be based on the following selection. (HHDII)

5 **Transmission after Timeout**

no code transmitted
after timeout



only code 1 transmitted
(if read) after timeout



only code 2 transmitted
(if read) after timeout




either code 1 or code 2 transmitted
after timeout



ADVANCED FORMATTING

Advanced formatting has been designed to offer you complete flexibility in changing the format of barcode data **before** transmitting it to the host system. This formatting will be performed when the barcode data meets certain criteria, which you will define in the following procedure.

Up to 4-advanced code management formats can be defined and saved in memory. For each format you must complete the entire configuration procedure:

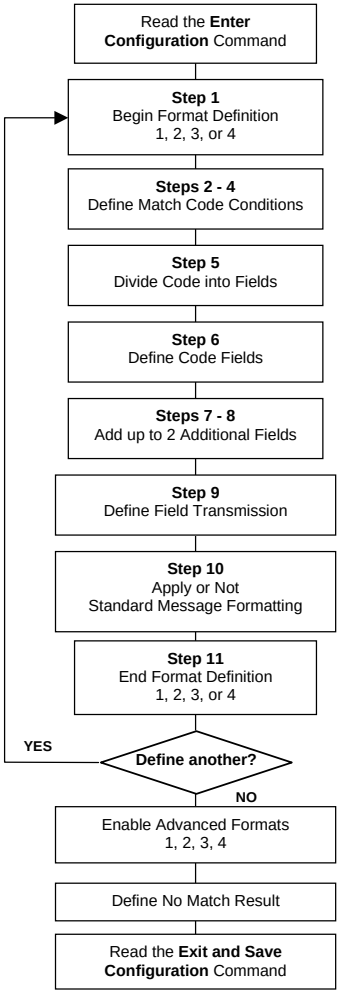

Enter Configuration

ADVANCED FORMATTING

Exit and Save Configuration

1 **Begin Format Definition**

begin Format 1 definition

begin Format 2 definition

begin Format 3 definition

begin Format 4 definition

2 **Match Code Type**

match code type

Read the above code + the code type to match from the Code Identifier Table in Appendix B.

OR

any code type

3 **Match Code Length**

match code length

Read the above code + two numbers in the range **01** to **99** for the exact code length.

OR

any code length

4 **Match with Predefined Characters**

no match

OR

match with 1 character

match with a 2-character string

match with a 3-character string

match with a 4-character string

After selecting the predefined match code, read the character(s) from the HEX table. Range of characters = **01-FE**.

Example:
Match code with the 2-character predefined string = "@@".

Match with a 2-character string

Read + **40** + **40**

AND position of first character in predefined string

Read the above code + two numbers in the range **01** to **99** representing the character position in the code where the first character of the predefined string must be found.

Read **00** if the match string can be found in any character position.

5 **Divide Code into Fields**

divide code into fields

Read one number in the range **1** to **5** to divide the code into fields.

6 **Define Code Fields**

define code fields

Each code field length can be set by either:

a) defining a field separator character to be found in the code itself. In this case you can choose to **discard** the code separator character or **include** it as the last character of the field.

OR BY

b) defining a match character to be found consecutively repeated in the code itself. In this case the field ends with the first character that does not match.

OR BY

c) specifying a specific character length up to the maximum of 99 characters.

OR BY

d) selecting the last field as variable length (if any).

You must define the same number of fields as selected in step 5, including fields that will not be transmitted.

DEFINE FIELD 1 BY:
EITHER

a) field separator

Read the field separator character from the HEX table. Range of characters = **01-FE**.

discard separator

include separator

OR

b) match character

Read the match character from the HEX table. Range of characters = **01-FE**.

OR

c) field length

Read two numbers in the range **01** to **99** to define the field length.

OR

d) this is the last field (variable length)

AND

Field 1 Terminators

no field terminators

1 field terminator

2 field terminators

Read the field terminator character(s) from the HEX table. Valid range of characters for all readers = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

DEFINE FIELD 2 BY:
EITHER

field separator

a)

Read the field separator character from the HEX table. Range of characters = **01-FE**.

discard separator

include separator

OR

match character

b)

Read the match character from the HEX table. Range of characters = **01-FE**.

OR

field length

c)

Read two numbers in the range **01** to **99** to define the field length.

OR

this is the last field (variable length)

d)

AND

Field 2 Terminators

no field terminators

1 field terminator

2 field terminators

Read the field terminator character(s) from the HEX table. Valid range of characters for all readers = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

DEFINE FIELD 3 BY:
EITHER

field separator

a)

Read the field separator character from the HEX table. Range of characters = **01-FE**.

discard separator

include separator

OR

match character

b)

Read the match character from the HEX table. Range of characters = **01-FE**.

OR

field length

c)

Read two numbers in the range **01** to **99** to define the field length.

OR

this is the last field (variable length)

d)

AND

Field 3 Terminators

no field terminators

1 field terminator

2 field terminators

Read the field terminator character(s) from the HEX table. Valid range of characters for all readers = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

DEFINE FIELD 4 BY:
EITHER

a) field separator

Read the field separator character from the HEX table. Range of characters = **01-FE**.

discard separator

include separator

OR

b) match character

Read the match character from the HEX table. Range of characters = **01-FE**.

OR

c) field length

Read two numbers in the range **01** to **99** to define the field length.

OR

d) this is the last field (variable length)

AND

Field 4 Terminators

no field terminators

1 field terminator

2 field terminators

Read the field terminator character(s) from the HEX table. Valid range of characters for all readers = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

DEFINE FIELD 5 BY:
EITHER

a) field separator

Read the field separator character from the HEX table. Range of characters = **01-FE**.

discard separator

include separator

OR

b) match character

Read the match character from the HEX table. Range of characters = **01-FE**.

OR

c) field length

Read two numbers in the range **01** to **99** to define the field length.

OR

d) this is the last field (variable length)

AND

Field 5 Terminators

no field terminators

1 field terminator

2 field terminators

Read the field terminator character(s) from the HEX table. Valid range of characters for all readers = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

7 **First Additional Fixed Field**

no fixed field

1 character fixed field

2 character fixed field

3 character fixed field

4 character fixed field

5 character fixed field

6 character fixed field

After selecting **one** of the Additional Fixed Field codes, read the corresponding character(s) from the HEX table. Range of characters = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example:

4 Character Fixed Field

+ **4D** + **41** + **49** + **4E** = **MAIN**

8 **Second Additional Fixed Field**

no fixed field

1 character fixed field

2 character fixed field

3 character fixed field

4 character fixed field

5 character fixed field

6 character fixed field

After selecting **one** of the Additional Fixed Field codes, read the corresponding character(s) from the HEX table. Range of characters = **01-FE**. For Wedge and USB-KBD interfaces, it is also possible to read the **Special Key(s)** on page 58.

Example:

3 Character Fixed Field

+ **53** + **45** + **54** = **SET**

9 **Field Transmission**

number of fields to transmit

Read one number in the range **1** to **7** for the number of fields to transmit. **Include only fields to be transmitted.**

Field Order Transmission

Read the codes corresponding to the fields to transmit in the order in which they are to be transmitted. A field can be transmitted more than once. See example.

field 1

field 2

field 3

field 4

field 5

additional field 1

additional field 2

Example:

The barcode is divided into 3 defined fields plus 1 additional fixed field.

Transmit in the order: Field 2, Additional Field 1, Field 1, Field 2.

Number of Fields to Transmit **+ 4 +** Field 2 + Additional Field 1 + Field 1 + Field 2

10 **Standard Formatting**

do not apply standard formatting

apply standard formatting

After performing Advanced Formatting on the barcode read, Standard Formatting (Headers, Code Length, Code ID, Terminators) can be applied to the message to be transmitted.

11 **End Format Definition**

end Format 1 definition

end Format 2 definition

end Format 3 definition

end Format 4 definition

ADVANCED FORMATTING

Enable Advanced Format

◆ no Advanced Formats enabled

Advanced Format 1

enable

disable

Advanced Format 2

enable

disable

Advanced Format 3

enable

disable

Advanced Format 4

enable

disable

No Match Result

clear data - no transmission



transmit data using standard format



This selection determines the action to be taken when codes read do not conform to the advanced format requisites (no match).

- Codes not matching can be ignored, cleared from memory and not transmitted.
- Codes not matching can be transmitted using the Standard formatting (Headers, Code Length, Code ID, Terminators).

RADIO PARAMETERS

- ***RADIO PROTOCOL TIMEOUT***
- ***POWER-OFF TIMEOUT***
- ***BEEPER CONTROL FOR RADIO RESPONSE***
- ***SINGLE STORE***
- ***BATCH MODE***

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups.

 = Read the code and follow the procedure given

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

RADIO PROTOCOL TIMEOUT

radio protocol timeout



Read a number from the table where:

02-19 = timeout from **2** to **19** seconds

◆ 2 seconds

See par. 4.7.1 for details.

POWER-OFF TIMEOUT

power-off timeout



Read 2 numbers in the range 00-99:

00 = Power-off disabled; reader always ready

01-99 = corresponds to a max. 99 hour delay before power-off.

◆ power-off after 4 hours.

See par. 4.7.2 for details.

BEEPER CONTROL FOR RADIO RESPONSE

◆ normal



only good decode



only good reception



off



See par. 4.7.3 for details.

SINGLE STORE

◆ disable

one attempt

two attempts

three attempts

four attempts

five attempts

six attempts

seven attempts

eight attempts

nine attempts

See par. **4.7.4** for details

BATCH MODE

◆ disable batch

enable normal batch

enable automatic batch

See par. 4.7.5 for details.

The following batch management parameters are complete commands and do not require reading the Enter and Exit configuration codes.

start normal batch transmission

delete batch data


4 REFERENCES

4.1 RS-232 PARAMETERS

4.1.1 Handshaking

Hardware handshaking: (RTS/CTS)


The RTS line is activated by the decoder before transmitting a character. Transmission is possible only if the CTS line (controlled by the Host) is active.

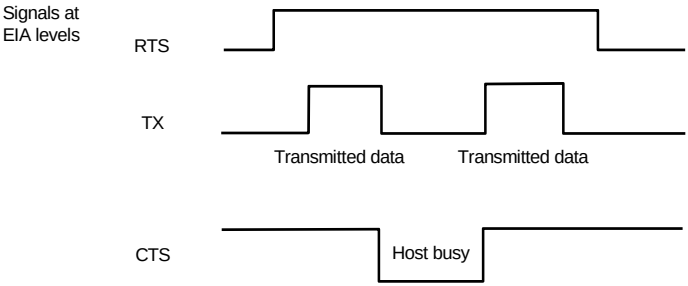

RTS/CTS handshaking

Software handshaking: (XON/XOFF)


During transmission, if the Host sends the XOFF character (13 Hex), the decoder interrupts the transmission with a maximum delay of one character and only resumes when the XON character (11 Hex) is received.

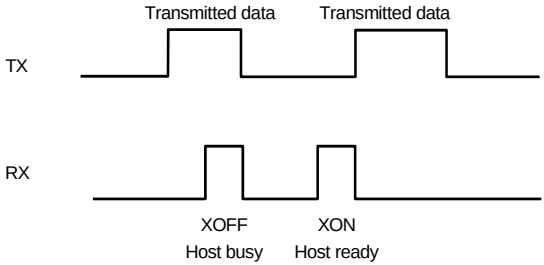

XON/XOFF handshaking

4.1.2 ACK/NACK Protocol

This parameter sets a transmission protocol in which the Host responds to the reader after every code transmitted. The Host sends an ACK character (06 HEX) in the case of good reception or the NACK character (15 HEX) requesting re-transmission, in the case of bad reception.

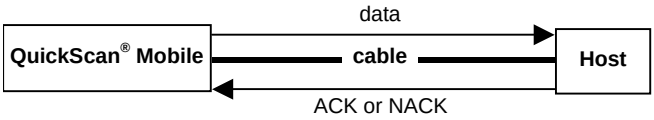

ACK/NACK enabled


If the reader does not receive an ACK or NACK, transmission is ended after the RX Timeout (see par. 4.1.4).

When ACK/NACK protocol is enabled, FIFO must be disabled manually, see par. 4.1.3.


The transmission protocol takes place between reader, cradle and Host. The reader passes its data (code read) to the cradle, which sends it to the Host.

In the following descriptions the completed transmission is indicated by the Beeper Control for Radio Response parameter with its default setting to Normal, see par. 4.7.3.

When ACK/NACK is disabled, there is no control from cradle to Host transmission, the reader responds with the good reception tone.

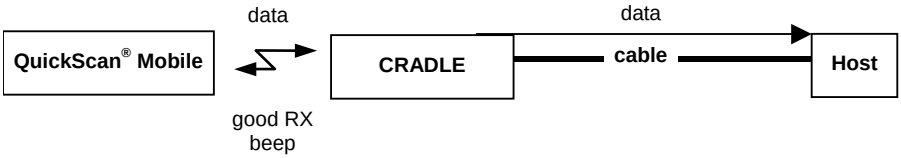

ACK/NACK disabled

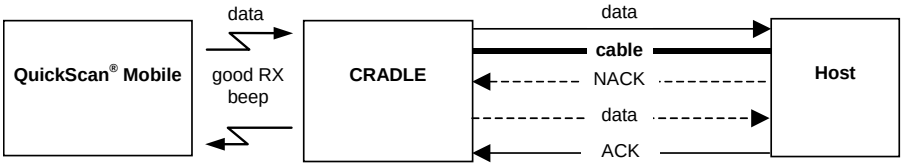

ACK/NACK enabled

When ACK/NACK is enabled, the Host sends an ACK character (06 HEX) in the case of good reception or the NACK character (15 HEX) requesting re-transmission, in the case of bad reception. Only after the ACK character is received by the cradle does the reader respond with the good reception tone.

If the reader does not receive an ACK or NACK, transmission is ended after the RX Timeout (see par. 4.1.4).

When ACK/NACK protocol is enabled, FIFO must be disabled manually, see par. 4.1.3.

4.1.3 FIFO

This parameter determines whether data (barcodes) are buffered on a First In First Out basis allowing faster data collection in certain cases for example when using slow baud rates and/or hardware handshaking.

If the FIFO buffering is enabled, codes are collected and sent out on the serial line in the order of acquisition. About 800 characters can be collected (buffer full), after which the reader signals an error and discards any further codes until the transmission is restored.

If the FIFO buffering is disabled, each code must be transmitted before another one can be read.

If enabled, the cradle collects all messages sent by QuickScan® Mobile and sends them in order of acquisition to the connected Host.

If disabled, QuickScan® Mobile blocks message transmission until the cradle has completed transmission towards the Host.

4.1.4 RX Timeout

When the RS-232 interface is selected, the Host can be used to configure the device by sending it command strings (see appendix A).

This parameter can be used to automatically end data reception from the Host after the specified period of time.

If no character is received from the Host, after the timeout expires, any incomplete string (any string not terminated by <CR>) is flushed from the device buffer.

4.2 PEN PARAMETERS

4.2.1 Minimum Output Pulse

This parameter sets the duration of the output pulse corresponding to the narrowest element in the barcode. In this way the code resolution is controlled by the signal sent to the decoder, independently of the physical resolution of the code read.

The shortest pulse (200 μs) corresponds to a high resolution code emulation and therefore a shorter transfer speed to the decoder (for decoders able to work on high resolution codes). Likewise, longer pulses correspond to low resolution code emulation and therefore a longer transfer time to the decoder.

4.2.2 Conversion to Code 39 and Code 128

When using these readers it is possible to choose between converting the decoded codes into either Code 39 format or Code 128 format. It is not possible to disable conversion.


4.2.3 Overflow

This parameter generates a white space before the first bar and after the last bar of the code. The selections are as follows:

narrow = space 10 times the minimum output pulse.
medium = space 20 times the minimum output pulse.
wide = space 30 times the minimum output pulse.

4.2.4 Output and Idle Levels

The following state diagrams describe the different output and idle level combinations for Pen emulation:

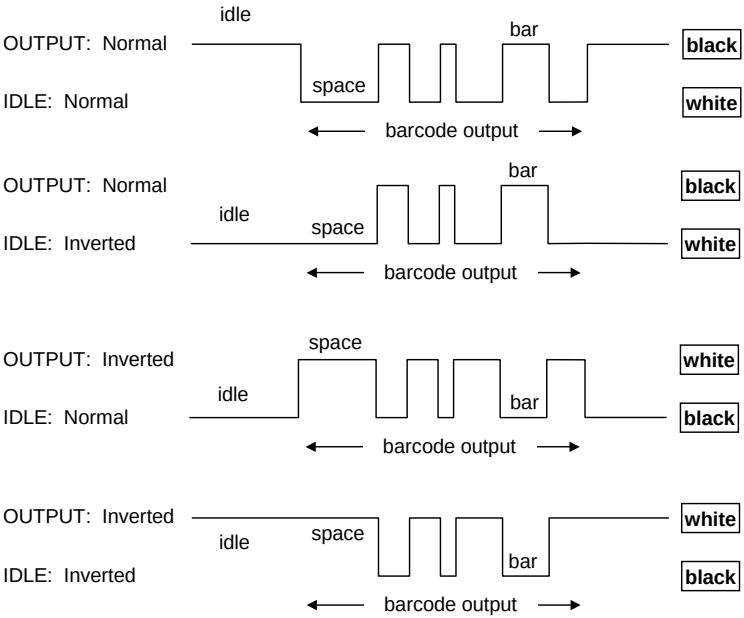

Output and Idle Levels

4.2.5 Inter-Block Delay

For the PEN Emulation interface, data are sent to the Host in fixed size blocks of 20 characters each. The inter-block delay parameter allows setting a delay between each block sent to the Host.

4.3 IBM 46XX

4.3.1 IBM Data Formatting (Transmission Format)

The IBM 46xx Series cash register recognizes the following codes:

- EAN 8 / EAN13 / UPC A / UPC E with and without Add On
- Interleaved 2/5
- **Code 39**
- Codabar
- Code 128
- Code 93
- Normal 2/5

The transmission format of codes belonging to this set is specified by the protocol. As the reader allows a wider set of codes to be selected, the following formats are defined to offer the user all the reading possibilities of the Datalogic product.

Conversion to Code 39 Format
Data from any code selected may be transmitted. Each code is transmitted to the Host as Code 39. Any character not included in the standard Code 39 set will be replaced with a “Space” (20 Hex).

IBM Standard Format
Only codes belonging to the above mentioned set may be transmitted. Each code transmitted to the Host is recognized by the identifier requested by the protocol. If the selected code does not belong to this set, it wiII not be transmitted.

Mixed IBM Standard + Code 39 Format
Data from any code selected may be transmitted. For codes belonging to the above mentioned set, the “IBM Standard Format” is applied. The “Code 39’ Format applies to codes not belonging to this set.

Cradle Check the Host Command and Cradle Ignore the Host Command
By default the cradle accepts the configuration commands received by the Host. When the other command is selected, the cradle ignores completely the commands sent from the Host and maintains its configuration.

4.4 DATA FORMAT

The system always provides reader to host data communication using the following message formatting:

Output Message from QuickScan® Dx30 or QuickScan® Mobile Stand Alone Towards Host

[Header] [Gun_Addr] [Gun_Addr_delimiter]] [Code ID] [Code Length] CODE [Terminator]

[Items in square brackets are optional.]

Output Message from QuickScan® Mobile STAR-System™ Towards Host

[Header] [Code ID] [Code Length] CODE [Terminator]

[Items in square brackets are optional.]

4.4.1 Header/Terminator Selection

The header/terminator selection is not effected by the reading of the restore default code. In fact, header and terminator default values depend on the interface selection:

RS-232: no header, terminator CR-LF

WEDGE: no header, terminator ENTER

These default values are always restored through the reading of RS-232 or WEDGE interface selection code, see chapter 2.

For the WEDGE interface, the following extended keyboard values can also be configured:

EXTENDED KEYBOARD TO HEX CONVERSION TABLE				
	IBM AT IBM 3153 APPLE ADB	**IBM XT**	**IBM 31xx, 32xx, 34xx, 37xx**	**Wyse Digital**
HEX	KEY	KEY	KEY	KEY
83	ENTER	ENTER	FIELD EXIT	RETURN
84	TAB	TAB	TAB	TAB
85	F1	F1	F1	F1
86	F2	F2	F2	F2
87	F3	F3	F3	F3
88	F4	F4	F4	F4
89	F5	F5	F5	F5
8A	F6	F6	F6	F6
8B	F7	F7	F7	F7
8C	F8	F8	F8	F8
8D	F9	F9	F9	F9
8E	F10	F10	F10	F10
8F	F11	ESC	F11	F11
90	F12	BACKSPACE	F12	F12
91	HOME	HOME	ENTER	F13
92	END	END	RESET	F14
93	PG UP	PG UP	INSERT	F15
94	PG DOWN	PG DOWN	DELETE	F16
95	↑	↑	FIELD -	UP
96	↓	↓	FIELD +	DOWN
97	←	←	ENTER (Paddle)	LEFT
98	→	→	PRINT	RIGHT
99	ESC	ESC		ESC
9A	CTRL (Right)	CTRL (Right)		CTRL (Right)
9B	Euro	Space	Space	Space

For all devices using IBM AT (compatible) Wedge or USB-KBD interfaces, all values from **9C** to **FE** send the relative simulated keypress when available or else the relative ALT-Mode sequence. See the Hex to Character Conversion Table in Appendix C.

For all devices using other Wedge interfaces, all values from **9C** to **FE** send the Space character.

Enter Configuration

Exit and Save Configuration

4.4.2 Define Special Key Sequence

The Special Key(s) for **Wedge IBM AT-PS/2 and USB-KBD interface users** can be associated with a sequence of keyboard keys that otherwise could not be selected, i.e. ALT + F6, SHIFT + F1. These Special Keys can be used for:

- Headers/Terminators
- Character Replacement
- Field Adjustment
- Custom Code ID
- Advanced Formatting – Define Field
- Advanced Formatting – Additional Fixed Field

Follow the procedure to define the desired Special Key sequence:

1. Read the Enter Configuration code above and select the Special Key to define (one at a time):

Define Special Key 1

Define Special Key 2

Define Special Key 3

Define Special Key 4

Define Special Key 5

2. Read only one code to be associated with the special key sequence:

SHIFT

OR

CTRL

OR

ALT

OR

CTRL + SHIFT

OR

ALT + SHIFT

OR

CTRL + ALT

3. Select the character to be associated with the Special Key sequence by reading the codes corresponding to the 3 character values from Appendix C. Then, read the Exit and Save Configuration code above to complete the Special Key sequence.

The character values having the ^{S} and ^{A} symbols **require** SHIFT or ALT keys or key combinations in **step 2**, in particular:
^{S} = the character is obtained in combination with SHIFT
^{A} = the character is obtained in combination with ALT

The following character values change according to the keyboard nationality.

KEYB / CHAR	ITA	USA	FR	BE	DE	UK	ES	SW	JP
!	016 ^{S}	016 ^{S}	04A	03E	016 ^{S}	016 ^{S}	016 ^{S}	016 ^{S}	016 ^{S}
"	01E ^{S}	052 ^{S}	026	026	01E ^{S}	01E ^{S}	01E ^{S}	01E ^{S}	01E ^{S}
#	052 ^{A}	026 ^{S}	026 ^{A}	026 ^{A}	05D	05D	026 ^{A}	026 ^{S}	026 ^{S}
$	025 ^{S}	025 ^{S}	05B	05B	025 ^{S}	025 ^{S}	025 ^{S}	025 ^{A}	025 ^{S}
%	02E ^{S}	02E ^{S}	052 ^{S}	052 ^{S}	02E ^{S}	02E ^{S}	02E ^{S}	02E ^{S}	02E ^{S}
&	036 ^{S}	03D ^{S}	016	016	036 ^{S}	03D ^{S}	036 ^{S}	036 ^{S}	036 ^{S}
'	04E	052	025	025	05D ^{S}	052	04E	05D	03D ^{S}
(	03E ^{S}	046 ^{S}	02E	02E	03E ^{S}	046 ^{S}	03E ^{S}	03E ^{S}	03E ^{S}
)	046 ^{S}	045 ^{S}	04E	04E	046 ^{S}	045 ^{S}	046 ^{S}	046 ^{S}	046 ^{S}
*****	05B ^{S}	03E ^{S}	05D	05B ^{S}	05B	03E ^{S}	05B ^{S}	05D ^{S}	052 ^{S}
+	05B	055 ^{S}	055 ^{S}	04A ^{S}	05B	055 ^{S}	05B	04E	04C ^{S}
,	041	041	03A	03A	041	041	041	041	041
-	04A	04E	036	055	04A	04E	04A	04A	04E
.	049	049	041 ^{S}	041 ^{S}	049	049	049	049	049
/	03D ^{S}	04A	049 ^{S}	049 ^{S}	03D ^{S}	04A	03D ^{S}	03D ^{S}	04A
0	045	045	045 ^{S}	045 ^{S}	045	045	045	045	045
1	016	016	016 ^{S}	016 ^{S}	016	016	016	016	016
2	01E	01E	01E ^{S}	01E ^{S}	01E	01E	01E	01E	01E
3	026	026	026 ^{S}	026 ^{S}	026	026	026	026	026
4	025	025	025 ^{S}	025 ^{S}	025	025	025	025	025
5	02E	02E	02E ^{S}	02E ^{S}	02E	02E	02E	02E	02E
6	036	036	036 ^{S}	036 ^{S}	036	036	036	036	036
7	03D	03D	03D ^{S}	03D ^{S}	03D	03D	03D	03D	03D
8	03E	03E	03E ^{S}	03E ^{S}	03E	03E	03E	03E	03E
9	046	046	046 ^{S}	046 ^{S}	046	046	046	046	046

KEYB / CHAR	ITA	USA	FR	BE	DE	UK	ES	SW	JP
:	049 S	04C S	049	049	049 S	04C S	049 S	049 S	052
;	041 S	04C	041	041	041 S	04C	041 S	041 S	04C
<	061	041 S	061	061	061	041 S	061	061	041 S
=	045 S	055	055	04A	045 S	055	045 S	045 S	04E S
>	061 S	049 S	061 S	061 S	061 S	049 S	061 S	061 S	049 S
?	04E	04A S	03A S	03A S	04E S	04A S	04E S	04E S	04A S
@	04C A	01E S	045 A	01E A	015 A	052 S	01E A	01E A	054
[	054 A	054	02E A	054 A	052 S	054	054 A	03E A	05B
\	00E	05D	03E A	061 A	04C S	061	00E A	04E A	051
]	05B A	05B	04E A	05B A	054 S	05B	05B A	046 A	05D
^	055 S	036 S	046 A	054	00E	036 S	054 S	05B S	055
_	04A S	04E S	03E	055	04A S	04E S	04A S	04A S	051 S
' (accent)	-	00E	03D A	05D A	055 S	00E	054	055 S	054 S
a	01C	01C	015	015	01C	01C	01C	01C	01C
b	032	032	032	032	032	032	032	032	032
c	021	021	021	021	021	021	021	021	021
d	023	023	023	023	023	023	023	023	023
e	024	024	024	024	024	024	024	024	024
f	02B	02B	02B	02B	02B	02B	02B	02B	02B
g	034	034	034	034	034	034	034	034	034
h	033	033	033	033	033	033	033	033	033
i	043	043	043	043	043	043	043	043	043
j	03B	03B	03B	03B	03B	03B	03B	03B	03B
k	042	042	042	042	042	042	042	042	042
l	04B	04B	04B	04B	04B	04B	04B	04B	04B
m	03A	03A	04C	04C	03A	03A	03A	03A	03A
n	031	031	031	031	031	031	031	031	031
o	044	044	044	044	044	044	044	044	044
p	04D	04D	04D	04D	04D	04D	04D	04D	04D
q	015	015	01C	01C	015	015	015	015	015
r	02D	02D	02D	02D	02D	02D	02D	02D	02D
s	01B	01B	01B	01B	01B	01B	01B	01B	01B
t	02C	02C	02C	02C	02C	02C	02C	02C	02C
u	03C	03C	03C	03C	03C	03C	03C	03C	03C
v	02A	02A	02A	02A	02A	02A	02A	02A	02A

KEYB / CHAR	ITA	USA	FR	BE	DE	UK	ES	SW	JP
w	01D	01D	01A	01A	01D	01D	01D	01D	01D
x	022	022	022	022	022	022	022	022	022
y	035	035	035	035	01A	035	035	035	035
z	01A	01A	01D	01D	035	01A	01A	01A	01A
{	-	054 S	025 A	046 A	052	054 S	052 A	03D A	05B S
|	00E S	05D S	036 A	016 A	04C	061 S	016 A	061 A	06A S
}	-	05B S	055 A	045 A	054	05B S	05D A	045 A	05D S
~	-	00E S	01E A	04A A	04E	05D S	-	05B A	055 S



NOTE

To use upper case letters, it is necessary to read one of the SHIFT commands from step 2 before the value corresponding to the lower case letters.

The following key values are common to all the keyboard nationalities.

KEYB / KEY	ITA	USA	FR	BE	DE	UK	ES	SW	JP
ENTER	05A	05A	05A	05A	05A	05A	05A	05A	05A
TAB	00D	00D	00D	00D	00D	00D	00D	00D	00D
F1	005	005	005	005	005	005	005	005	005
F2	006	006	006	006	006	006	006	006	006
F3	004	004	004	004	004	004	004	004	004
F4	00C	00C	00C	00C	00C	00C	00C	00C	00C
F5	003	003	003	003	003	003	003	003	003
F6	00B	00B	00B	00B	00B	00B	00B	00B	00B
F7	083	083	083	083	083	083	083	083	083
F8	00A	00A	00A	00A	00A	00A	00A	00A	00A
F9	001	001	001	001	001	001	001	001	001
F10	009	009	009	009	009	009	009	009	009
F11	078	078	078	078	078	078	078	078	078
F12	007	007	007	007	007	007	007	007	007
Home	26C	26C	26C	26C	26C	26C	26C	26C	26C
End	269	269	269	269	269	269	269	269	269
PG UP	27D	27D	27D	27D	27D	27D	27D	27D	27D
PG down	27A	27A	27A	27A	27A	27A	27A	27A	27A

KEYB / CHAR	ITA	USA	FR	BE	DE	UK	ES	SW	JP
Up arrow	275	275	275	275	275	275	275	275	275
Down arrow	272	272	272	272	272	272	272	272	272
Left arrow	26B	26B	26B	26B	26B	26B	26B	26B	26B
Right arrow	274	274	274	274	274	274	274	274	274
Esc	076	076	076	076	076	076	076	076	076
Ctrl right	214	214	214	214	214	214	214	214	214
€	02E [A]	02E [A]	024 [A]	024 [A]	024 [A]	025 [A]	02E [A]	02E [A]	-
SPACE	029	029	029	029			029		029

NOTE

If Caps Lock Auto-Recognition is disabled, it is necessary to verify that the keyboard caps lock status matches the reader one.

EXAMPLES

- Defining Special Key Sequences -


1. the following example allows defining Special Key 1 as SHIFT + F5:

Read  (enter configuration) +  (define Special Key 1) +  (SHIFT) +


codes from Appendix C corresponding to the character value for F5: **003** +

 (exit & save configuration)


2. the following example allows defining Special Key 2 as CTRL + S (upper case):

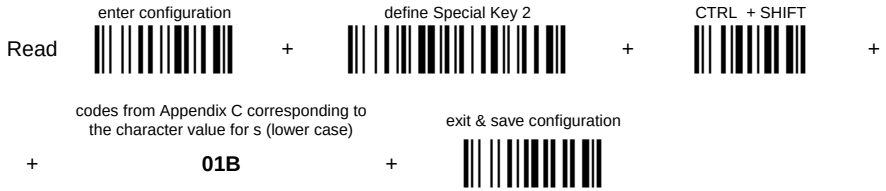

3. the following example allows defining Special Key 3 as Alt + F6:

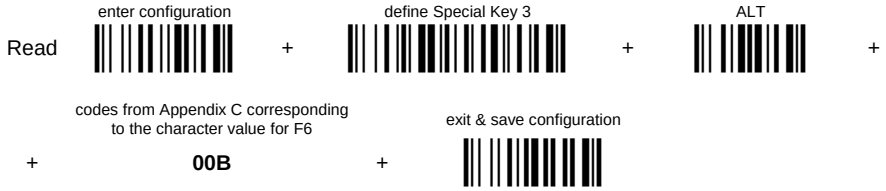

4. the following example allows defining Special Key 4 as Alt + Shift + F1:

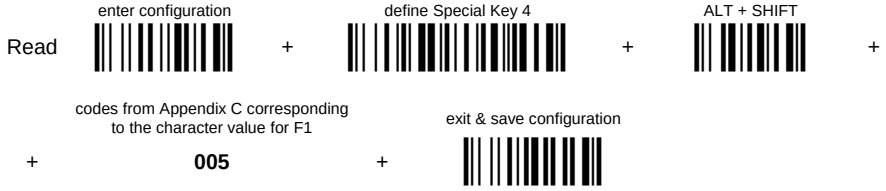

- Integrating Special Keys in Headers/Terminators -

1. the following example allows setting Special Key 1 (defined in example 1 above) as terminator:



2. the following example allows setting Special Key 2 (defined in example 2 above) as header:

Read enter configuration + one character header + special key 2 + exit & save configuration

3. the following example allows setting Special Key 3 (defined in example 3 above) as header:

Read enter configuration + one character header + special key 3 + exit & save configuration

4. the following example allows setting Special Key 4 (defined in example 4 above) and ENTER character as terminators:

Read enter configuration + two character terminator + special key 4 + ASCII characters corresponding to the HEX value for character ENTER **83** + exit & save configuration +

4.4.3 Address Stamping

It is possible to include the reader address in the message sent to the host. The reader Address Stamping parameter consists of a 4-digit number in the range 0000-1999.
For message output format, refer to par. 4.4.

4.4.4 Address Delimiter

The Address Delimiter allows a character to be included to separate the reader Address stamping field from the next field in the message. Any character can be included in the hexadecimal range from 00 to FE.
For message output format, refer to par. 4.4.

4.4.5 Enter Sleep Timeout

For readers that have the Sleep state enabled, this timeout determines when the reader will enter this state.

4.4.6 Standby

If this command is enabled, part of the CCD circuitry shuts down (Standby), in order to optimize low power consumption when not reading. When the trigger is pressed this circuitry powers up. This mode causes a minor delay of about 100 ms before the reader is ready.

Standby is always enabled and is not configurable. To exit Standby press the trigger.

4.5 READING PARAMETERS

4.5.1 Hardware Trigger Mode

This mode determines how the reading phase is controlled when the hardware trigger operating mode is selected:

- trigger active level: the reader goes ON when the trigger is pressed and goes OFF when it is released
- trigger active pulse: the reader goes ON at the first trigger press and goes OFF only at a second press

4.5.2 Trigger-Off Timeout

When this timeout is selected, the reader turns OFF automatically after the desired period of time.

4.5.3 Reads per Cycle

In general, a **reading cycle** corresponds to the ON + OFF times of a device.
The resulting effects of this parameter on code reading depend on other related configuration conditions. Here are the definitions of ON and OFF times.

- For readers using the software trigger parameter (FLASH MODE), a reading cycle corresponds to the *flash on* + *flash off* times. Code reading takes place during the *flash on* time.

- For readers using the *hardware trigger* parameter, a reading cycle corresponds to a trigger press (ON) + one of the following OFF events:

  trigger release (for *trigger active level*)

  a second trigger press (for *trigger active pulse*)

  trigger-off timeout (see par. 4.5.2).

When **one read per cycle** is selected, the device decodes only one code during the ON period and immediately turns the reader OFF. It is only possible to read another code when the next ON time occurs.

In **multiple reads per cycle**, the ON period is extended so that the device can continue decoding codes until an OFF event occurs. For software trigger mode, the *flash on* period is immediately reset after each read and therefore extended. If another code is decoded before the reset *flash on* period expires, it is again reset and the effect is that the device remains ON, decoding codes until the *flash on* or *timeout* period expires.
The Safety Time parameter should be used in this case to avoid unwanted multiple reading of the same code, see par. 4.5.4.

4.5.4 Safety Time

Safety time prevents the device from immediately decoding the same code more than once. Same code consecutive reading can be disabled requiring the reader to be removed from the code (no decoding) for at least 400 ms, or a timeout can be set up to 9.9 seconds before the decoder will accept the same code. Reading is immediate if the code changes.
The safety time parameter is not applicable when reading stacked codes or when setting one read per cycle in hardware trigger operating mode, since these settings require voluntary action by the user.

4.6 DECODING PARAMETERS



CAUTION

These parameters are intended to enhance the decoding capability of the reader for particular applications. Used incorrectly, they can degrade the reading performance or increase the possibility of a decoding error.

4.6.1 Ink-Spread

The ink-spread parameter allows the decoding of codes, which are not perfectly printed because the page texture tends to absorb the ink.

4.6.2 Overflow Control

The overflow control parameter can be disabled when decoding codes printed on small surfaces, which do not allow the use of an overflow space.

This command does not affect code families 2/5, Code 128 and Code 93.

4.6.3 Interdigit Control

The interdigit control parameter verifies the interdigit spacing for code families Code 39 and Codabar.

4.7 RADIO PARAMETERS

4.7.1 Radio Protocol Timeout

This parameter sets the valid time to wait before transmission between the reader and the cradle is considered failed.

This parameter should be set taking into consideration the radio traffic (number of readers in the same area).

If the RS-232 interface is used with ACK/NACK enabled, this parameter should be at least equal to the RX Timeout parameter for low traffic environments. It should be increased if there are many readers in the same area.

It can be set between 2 and 19 seconds.

4.7.2 Power-Off Timeout

If this command is enabled, after the desired timeout in hours, the batteries are disconnected and all power consumption ceases. To restore power, press the trigger once. The reader will now be ready to read codes.

Power-off does not affect configuration parameters.

4.7.3 Beeper Control for Radio Response

The data entry good read tone normally results in two beeps; the first indicates that the reader has decoded the code; the second indicates whether cradle has received the data.

This can be changed according to the following selections:

- Normal: both good decode and good reception are signaled (two beeps).

- Only Good Decode: only the first beep indicating a good read is signaled.
- Only Good Reception: only the second beep indicating a good reception is signaled.
- Off: Neither good read nor good reception beeps are signaled.

For all configurations, any transmission errors will always be signaled.

4.7.4 Single Store

When single store mode is enabled, if the QuickScan® Mobile fails to transmit a code to the cradle, it enters a special operating mode that prevents the user from reading barcodes. When such operating mode is entered, the trigger no longer enables barcode reading but is used to retry transmission itself for the number of attempts selected in configuration. Once the transmission is successful the reader returns to the standard mode. If transmission is not successful after the number of configured attempts, the code is discarded.

Single store may be useful if you often read codes at the limit of the coverage area and there is a chance that code transmission can fail. In such case single store allows you to move to a more favorable position or location (i.e. closer to the cradle) and retry transmission without the necessity of re-reading the code since it is already stored in the reader.

Conversely, if single store is disabled, and the user wants to retry transmission, the code must be read again, and therefore the attempt must be made from basically the same location. If the user gives up, he does not know if the transaction was successful. (Actually the transmission could have been successful but the cradle may have been unable to acknowledge the message). There are applications in which there is no risk of transmission failure. In such cases it may be better to disable single store so that the user perceives a more consistent behavior of the trigger in that it always corresponds to code reading.

4.7.5 Batch Mode

This Operating Mode allows storing read codes in the internal reader RAM memory. The stored codes are transmitted to the base station at a later time according to the type of batch mode selected.

Batch mode can be enabled either manually (normal batch mode) or automatically.

Normal batch mode temporarily suspends radio communication between reader and base station allowing codes to be stored in the reader on a FIFO basis. This can be useful for example, if codes must be read from a location where there is no radio network. Upon returning to the system working area, this mode requires reading the **Start Normal Batch Transmission** barcode to successively transmit the list of

stored codes to the base station. The FIFO management assures that the first code read will be the first code to be transmitted to the base station.

The **Delete Batch Data** barcode allows canceling all barcode data stored in the reader.

Automatic batch mode allows codes to be stored in the reader on a FIFO basis whenever the reader is out of radio range. In this case radio communication is not suspended and transmission is attempted after each code read. If transmission cannot be successfully completed, then the code is added to the list. When the reader returns in range, transmission of the codes to the base station resumes automatically, according to the selected communication protocol, upon simply pressing and releasing the trigger or by successfully reading a new code.

4.8 CONFIGURATION EDITING COMMANDS

The following commands carry out their specific function and then exit the configuration environment.

Command	Description
	Restore the reader default configuration (see the relative Quick Reference Manual for default settings)
	Transmit the reader Software release
	Transmit the reader configuration in ASCII format. This command is not effective with Pen emulation interface or with the reader model.
	Restore the cradle default configuration (see the relative Quick Reference Manual for default settings)
	Transmit the cradle Software release.
	Transmit the cradle configuration in ASCII format. This command is not effective with Pen emulation interface.

4.9 DEFAULT PARAMETERS FOR POS TERMINALS

The default values of the RS-232 and Data Format parameters for POS terminals are listed in the following table:

	NIXDORF Mode A	FUJITSU	ICL Mode
RS-232 Group			
Baud Rate	9600	9600	9600
Parity	Odd	None	Even
Data Bits	8	8	8
Stop Bits	1	1	1
Handshaking	Hardware (RTS/CTS)	None	RTS always ON
ACK/NACK Protocol	Disabled	Disabled	Disabled
FIFO	Disabled	Enabled	Enabled
Inter-Character Delay	Disabled	Disabled	Disabled
RX Timeout	9.9 sec	2 sec	9.9 sec
Serial Trigger Lock	Disabled	Disabled	Disabled
Data Format Group			
Code Identifier	Custom	Custom	Custom
Header	No Header	No Header	No Header
Terminator	CR	CR	CR
Field Adjustment	Disabled	Disabled	Disabled
Code Length TX	Not Transmitted	Not Transmitted	Not Transmitted
Character Replacement	Disabled	Disabled	Disabled
Address Stamping	Disabled	Disabled	Disabled
Address Delimiter	Disabled	Disabled	Disabled

The table below lists all the Code Identifiers available for the POS terminals:

CODE	NIXDORF Mode A	FUJITSU	ICL Mode
UPC-A	A0	A	A
UPC-E	C0	E	E
EAN-8	B	FF	FF
EAN-13	A	F	F
Code 39	M	None	C [code length]
Codabar	N	None	N [code length]
Code 128	K	None	L [code length]
Interleaved 2 of 5	I	None	I [code length]
Code 93	L	None	None
Industrial 2 of 5	H	None	H [code length]
UCC/EAN 128	P	None	L [code length]
MSI/Plessey	O	None	None
RSS	E	None	None
Other	None	None	None

5 TECHNICAL FEATURES

QuickScan® Mobile Reader and Cradle

Electrical Features - READER	
Battery Type	1 Lithium battery 700 mAh
Time of recharge Lithium	max 6 hours with USB cable
Operating autonomy	typical 20000 reads
Indicators	LED, Beeper
Max scan rate	235 scans/sec
Electrical Features - CRADLE	
Supply voltage	5 VDC ± 5%
Power consumption	max. 4 W (charging)
LED Indicators	Battery charging **red** Charge completed **green** Power / Data **yellow**
Optical Features	
Sensor	CCD solid state (2088 pixels)
Illuminator Wavelength Max. LED Output Power	LED array 630 ~ 670 nm 0.33 mW
LED safety class	Class 1 EN 60825-1
Reading field	see reading diagram
Max. resolution	0.10 mm, 4 mils
PCS minimum	20% (Datalogic Test Chart)
Environmental Features – READER	
Working Temperature	0°to + 40 °C (32° to 104 °F)
Storage Temperature (without battery)	-20° to 70 °C (-4° to 158 °F)
Humidity	90% non condensing
Drop resistance	IEC 68-2-32 Test ED 1.5 m (4 ft 9 in)
Protection class	IP30
Environmental Features - CRADLE	
Working temperature	0° to 40 °C (32° to 104 °F)
Storage temperature	-20° to 70 °C (-4° to 158 °F)
Humidity	90 % non condensing
Protection class	IP30

Mechanical Features – READER	
Weight (without batteries)	about 189 g (6.66 oz)
Dimensions	171 x 90 x 68 mm (6.72 x 3.54 x 2.80 in)
Material	Cycoloy C 2800 with desmopan 3855
Mechanical Features – CRADLE	
Weight	181 gr (6.38 oz)
Dimensions	80 x 130 x 90 mm (3.15 x 5.11 x 3.54 in)
Material	Cycoloy C 2800 with desmopan 3855

QuickScan® Mobile Radio Features

Radio Features	**European Models**	**USA Models**
Radio Frequency	433.92 MHz	910 MHz
Bit rate	19200 baud	36800 baud
Effective Radiated Power	<10 mW	<1 mW
Range (in open air)	12 m	12 m
RF Modulation	FSK	

5.1 SYSTEM AND RADIO FEATURES

Radio Features		
Radio Frequency	433.92 MHz	
Bit Rate	19200	
Range (in open air)	30 m	
RF Modulation	FSK	
System Configurations	**CRADLE**	**STARGATE™**
Maximum number of devices per base stations	16	255
Maximum number of devices in the same reading area	2000	
Maximum number of base stations in network	-	16

5.2 STATUS INDICATORS

The reader has a LED indicator and a Beeper. The cradle has three LEDs. They signal several operating conditions, which are described in the tables below.

H = high tone **L** = low tone

READER START-UP

Beeper[1]	**Meaning**
L L L L	Parameters loaded correctly
H H H H long tones	Parameter loading error, reading or writing error in the non volatile memory
H L H L	Hardware error in EEPROM

READER CONFIGURATION

Beeper[1]	**Meaning**
H H H H	Correct entry or exit from Configuration mode
L	Good read of a command
L L L	Command read error

READER DATA ENTRY

Beeper[1]	LED	Meaning
one beep[2]	ON	Correct read of a code in normal mode
H L long		TX buffer full (when FIFO is enabled) or TX error between QuickScan® Mobile and the cradle
H long	ON	Successful advanced format concatenation
H H H		Timeout expired – operation not completed
H H long		Error in advanced data formatting
	OFF	Ready to read a code

READER POWER

Beeper	LED	Meaning
10 short H	10 short blinks	Low Battery

READER BIND AND JOIN

Beeper[1]	LED	Meaning
	Blinking	Command accepted; reader ready to be inserted into the cradle
L		Success
H L long tones		Failure

[1] Only the Beeper Intensity command can modify these signals.

[2] The data entry good read tone is user-configurable with all the Beeper commands in the Reading Parameters section.

Normally this results in two beeps; the first indicates that the reader has decoded the code, the second indicates whether the cradle has received the data. See also par. 4.7.3.


CRADLE CHARGE STATUS, POWER/COMMUNICATION

Red LED	Green LED	Yellow LED	BEEPER	Meaning
ON				Charging
	ON			End of charge
Blinking	Blinking		Repetitive beep	Charging out of temperature range, over-current or over-voltage conditions
		ON		Power applied
		Blinking		Receiving data and commands from the Host or the reader

5.3 READING DIAGRAMS

QUICKSCAN® MOBILE

Reading diagram at 25 °C and 300 lux ambient lighting
Reading Zones (10° skew angle)

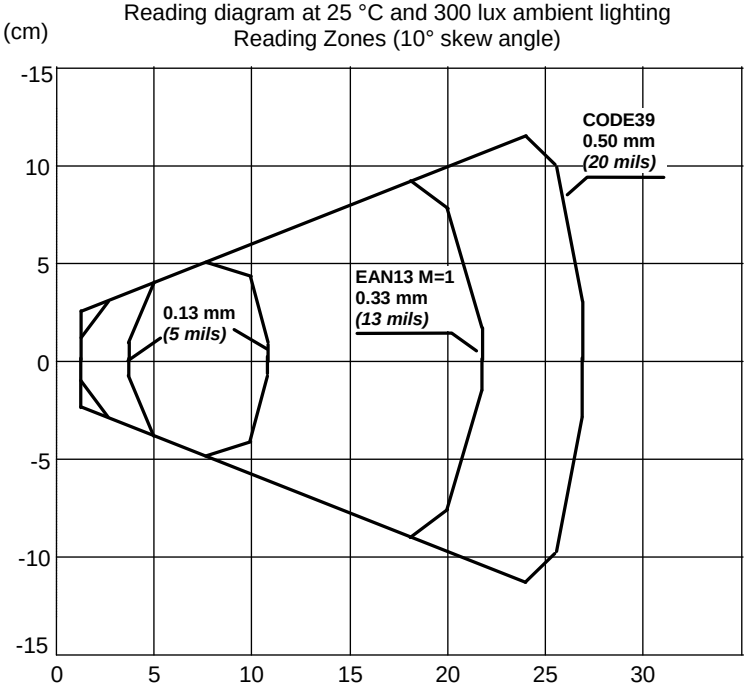


A HOST CONFIGURATION STRINGS

In this section we provide a description of how to modify the device configuration using serial strings sent from the Host.


This method requires either the RS-232 or USB-COM interface.

The device configuration can be changed by receiving commands from the Host through the serial interface. When this method is used, the programming sequence format is the following:

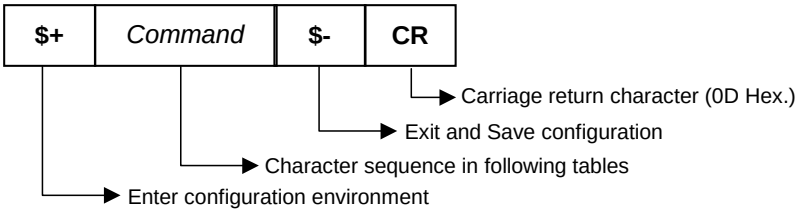

Example:

Multiple command programming sequence:

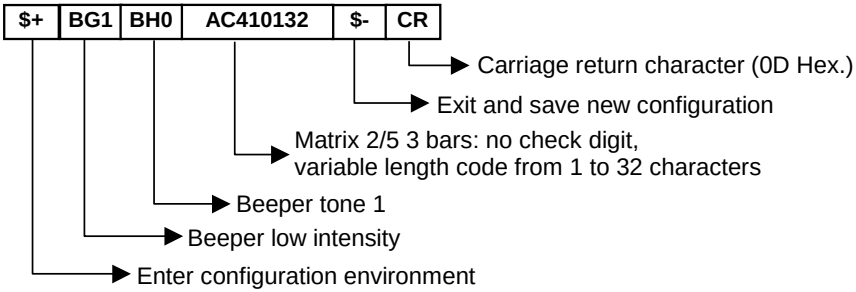

Each configuration parameter setting removes the condition previously active for that parameter.



NOTE

The device buffer can contain about 400 characters. If your programming string goes over this value, you must split it into separate groups and send each group after a delay of at least 3 seconds to give the reader time to empty the buffer and interpret the commands.

SERIAL CONFIGURATION STRINGS

ENTER/EXIT CONFIGURATION COMMANDS	
DESCRIPTION	**STRING**
Enter Configuration	**$+**
Exit and Save Configuration	**$-**
Restore Default	**$***
Transmit Software Release (not for PEN emulation)	**$!**
Transmit Device Configuration in ASCII (not for PEN emulation)	**$&**

These commands do not require $-.

INTERFACE SELECTION			
DESCRIPTION			**STRING**
RS-232	Standard		**CP0**
	ICL Mode		**CM0**
	Fujitsu		**CM1**
	Nixdorf Mode A		**CM2EC0**
WEDGE	for IBM AT		**CP500**
	for IBM Terminals: 31xx, 32xx, 34xx, 37xx; make-break keyboard		**CP501**
	for IBM Terminals: 31xx, 32xx, 34xx, 37xx; make-only keyboard		**CP502**
	Keyboard Type for IBM Terminals 31xx, 32xx, 34xx, 37xx	typewriter	**FK0**
		advanced	**FK1**
	for IBM XT		**CP503**
	for IBM Terminal 3153		**CP504**
	for IBM PC Notebook		**CP505**
	for IBM SURE1		**CP506**
	for IBM AT - ALT mode		**CP507**
	for IBM PC Notebook - ALT mode		**CP508**
	for Wyse Terminal - ANSI Keyboard		**CP509**
	for Wyse Terminal - PC Keyboard		**CP510**
	for Wyse Terminal - ASCII Keyboard		**CP511**
	for Wyse Terminal - VT220 style Keyboard		**CP514**
	for Digital Terminals VT2xx/3xx/4xx		**CP512**
	for Apple ADB Bus		**CP513**
PEN EMULATION			**CP6**
USB	USB-KBD		**UA03**
	USB-KBD-ALT-MODE		**UA04**
	USB-KBD-APPLE		**UA05**
	USB-COM		**UA02**
	USB-IBM-Table Top		**UA00**
	USB-IBM-Hand Held		**UA01**

RS-232		
DESCRIPTION		**STRING**
Baud rate	300	**CD1**
	600	**CD2**
	1200	**CD3**
	2400	**CD4**
	4800	**CD5**
	9600	**CD6**
	19200	**CD7**
	38400	**CD8**
Parity	none	**CC0**
	even	**CC1**
	odd	**CC2**
Data bits	7	**CA0**
	8	**CA1**
	9	**CA2**
Stop bits	1	**CB0**
	2	**CB1**
Handshaking	disable	**CE0**
	RTS/CTS	**CE1**
	XON/XOFF	**CE2**
	RTS always On	**CE3**
ACK/NACK Protocol	disable	**ER0**
	enable	**ER1**
FIFO	disable	**EC0**
	enable	**EC1**
Inter-character delay *(ms)*		**CK00 - CK99**
RX Timeout *(100 ms)*		**CL00 - CL99**
Serial Trigger Lock	disable	**CR0**
	enable and select characters	**CR1*ab***

a = Hex values representing an ASCII character from **00** to **FE** enabling the device trigger.

b = HEX values representing an ASCII character from **00** to **FE** inhibiting the device trigger.

USB		
DESCRIPTION		**STRING**
USB-COM		
Handshaking	disable	**CE0**
	RTS/CTS	**CE1**
	XON/XOFF	**CE2**
	RTS always ON	**CE3**
ACK/NACK Protocol	disable	**ER0**
	enable	**ER1**
FIFO	disable	**EC0**
	enable	**EC1**
Inter-character delay *(ms)*		**CK00 - CK99**
RX Timeout *(100 ms)*		**CL00 - CL99**
Serial Trigger Lock	disable	**CR0**
	enable	**CR1*ab***
USB-KBD		
Keyboard nationality (not for USB-KBD-ALT-MODE)	Belgian	**FJ7**
	English	**FJ4**
	French	**FJ2**
	German	**FJ3**
	Italian	**FJ1**
	Japanese	**FJ8**
	Spanish	**FJ6**
	Swedish	**FJ5**
	USA	**FJ0**
FIFO	disable	**EC0**
	enable	**EC1**
Delays	Inter-Character *(ms)*	**CK00 - CK99**
	Inter-Code *(s)*	**FG00 - FG99**
Control Character Emulation	CTRL + Shift + Key	**FO0**
	CTRL + Key	**FO1**
USB Keyboard Speed	Normal	**UT10**
	Fast	**UT01**

a = Hex values representing an ASCII character from **00** to **FE** enabling the device trigger.

b = HEX values representing an ASCII character from **00** to **FE** inhibiting the device trigger.

WEDGE		
DESCRIPTION		**STRING**
Keyboard nationality	Belgian	**FJ7**
	English	**FJ4**
	French	**FJ2**
	German	**FJ3**
	Italian	**FJ1**
	Spanish	**FJ6**
	Swedish	**FJ5**
	USA	**FJ0**
	Japanese (IBM AT compatible only)	**FJ8**
Caps Lock	caps Lock ON	**FE1**
	caps Lock OFF	**FE0**
Caps Lock Auto-Recognition (IBM AT compatible only)	disable	**FP0**
	enable	**FP1**
Num Lock	Toggle Num Lock	**FL1**
	Num Lock Unchanged	**FL0**
Delays	Inter-Character *(ms)*	**CK00 - CK99**
	Inter-Code *(s)*	**FG00 - FG99**
Control Character Emulation	CTRL + Shift + Key	**FO0**
	CTRL + Key	**FO1**

PEN		
DESCRIPTION		**STRING**
Operating mode	interpret (does not require **$+** or **$-**)	**$]**
	transparent (does not require **$+** or **$-**)	**$[**
Minimum output pulse	200µs	**DG0**
	400µs	**DG1**
	600µs	**DG2**
	800µs	**DG3**
	1 ms	**DG4**
	1.2 ms	**DG5**
Conversion to Code 39 and Code 128	enable conversion to Code 39	**DA1**
	enable conversion to Code 128 (M series only)	**DA2**
Output level	normal	**DD0**
	inverted	**DD1**
Idle level	normal	**DE0**
	inverted	**DE1**
Overflow	narrow overflow	**DH0**
	medium overflow	**DH1**
	wide overflow	**DH2**
Inter-Block delay *(100 ms)*		**CK00-CK99**

DATA FORMAT		
NOT FOR PEN EMULATION INTERFACES		
DESCRIPTION		**STRING**
Code Identifier	disable	**EB0**
	Datalogic standard	**EB1**
	AIM standard	**EB2**
	Custom	**EB3**
Custom Code Identifier		**EH*abc***
Headers	no header	**EA00**
	one character	**EA01*x***
	two characters	**EA02*xx***
	three characters	**EA03*xxx***
	four characters	**EA04*xxxx***
	five characters	**EA05*xxxxx***
	six characters	**EA06*xxxxxx***
	seven characters	**EA07*xxxxxxx***
	eight characters	**EA08*xxxxxxxx***
Terminators	no terminator	**EA10**
	one character	**EA11*x***
	two characters	**EA12*xx***
	three characters	**EA13*xxx***
	four characters	**EA14*xxxx***
	five characters	**EA15*xxxxx***
	six characters	**EA16*xxxxxx***
	seven characters	**EA17*xxxxxxx***
	eight characters	**EA18*xxxxxxxx***
Special Keys	special key 1	**9C**
	special key 2	**9D**
	special key 3	**9E**
	special key 4	**9F**
	special key 5	**A0**

a = ASCII character.
b, ***c***, ***x*** = HEX values representing an ASCII character.

a = ASCII character of the DATALOGIC STANDARD Code Identifier from the table on page 52.

b = Hex value of the first Custom Code Identifier character from **00** to **FD**;
FF = disable Code Identifier

c = Hex value of the second Custom Code Identifier character from **00** to **FD**;
FF = disable second character of Custom Code Identifier

x = Hex value from **00** to **FE**

DATA FORMAT (continued)		
NOT FOR PEN EMULATION INTERFACES		
DESCRIPTION		**STRING**
Code Length Tx	not transmitted	**EE0**
	transmitted in variable-digit format	**EE1**
	transmitted in fixed 4-digit format	**EE2**
Field Adjustment	disable	**EF0**
	right addition	**EF*a*0*d***
	left addition	**EF*a*1*d***
	right deletion	**EF*a*2*d***
	left deletion	**EF*a*3*d***
Field Adjustment Character		**EG*e***
Character Replacement	disable character replacement	**EO0**
	first character replacement	**EO1*afg***
	second character replacement	**EO2*afg***
	third character replacement	**EO3*afg***
Address Stamping	disable reader address stamping	**RU0**
	enable reader address stamping	**RU1**
Address Delimiter	disable reader address delimiter	**RV0**
	enable reader address delimiter and select character	**RV1*h***

a = ASCII character.
d = a number from the Hex/Numeric Table
e, f, g, h = HEX values representing an ASCII character

a = ASCII character of the DATALOGIC STANDARD Code Identifier from the table on page 52.

d = a number in the range **01-32** from the Hex/Numeric Table

e = Hex value from **00** to **FE**

f = Hex value of the character to be replaced from **00** to **FE**

g = Hex value of the new character to insert from **00** to **FE**
FF = replace with no new character (remove character)

h = a HEX value in the range from **00 - FE** representing the ASCII character.

READING PARAMETERS		
DESCRIPTION		**STRING**
Hand-Held Operation	software trigger	**BK0**
	hardware trigger	**BK1**
	automatic	**BK2**
	always on	**BK3**
	hardware trigger ready	**BK4**
Stand Operation	software trigger	**BU1**
	hardware trigger	**BU3**
	automatic	**BU0**
	always on	**BU2**
Hardware Trigger Mode	trigger active level	**BA0**
	trigger active pulse	**BA1**
Trigger-off Timeout *(s)*		**BD00 - BD99**
FLASH ON *(100 ms)*		**BB001 - BB099**
FLASH OFF *(100 ms)*		**BB101 - BB199**
Reads per Cycle	one read	**BC0**
	multiple reads	**BC1**
Safety Time *(100 ms)*		**BE00 - BE99**
Beeper Intensity	very low intensity	**BG0**
	low intensity	**BG1**
	medium intensity	**BG2**
	high intensity	**BG3**
Beeper Tone	tone 1	**BH0**
	tone 2	**BH1**
	tone 3	**BH2**
	tone 4	**BH3**
Beeper Type	monotone	**BJ0**
	bitonal	**BJ1**
Beeper Length	long	**BI0**
	short	**BI1**
Stand Recognition Beep	disable	**Ba0**
	enable	**Ba1**

DECODING PARAMETERS		
DESCRIPTION		**STRING**
Ink-spread	disable	**AX0**
	enable	**AX1**
Overflow control	disable	**AW1**
	enable	**AW0**
Interdigit control	disable	**AV0**
	enable	**AV1**
Puzzle Solver™	disable	**AU0**
	enable	**AU1**
Decoding Safety	one read	**ED0**
	two reads	**ED1**
	three reads	**ED2**
	four reads	**ED3**

CODE SELECTION			
DESCRIPTION			**STRING**
DISABLE ALL FAMILY CODES			**AZ0**
EAN/UPC	disable EAN/UPC family		**AA0**
	EAN 8/EAN 13/UPC A/UPC E	without ADD ON	**AA1**
		with ADD ON	**AA5**
	EAN 8/EAN 13	without ADD ON	**AA3**
		with ADD ON 2 ONLY	**AAK**
		with ADD ON 5 ONLY	**AAL**
		with ADD ON 2 AND 5	**AA6**
	UPC A/UPC E	without ADD ON	**AA4**
		with ADD ON 2 ONLY	**AAM**
		with ADD ON 5 ONLY	**AAN**
		with ADD ON 2 AND 5	**AA7**
	EAN/UPC with and without Add On no Autodiscrimination		**AA8Ad0**
	EAN/UPC Autodiscrimination Add On by Prefix		**AA8Ad1**
	Select Prefixes	cancel all selections	**ET0**
		378/379	**ET1378ET2379**
		434/439	**ET3434ET4439**
		414/419	**ET5414ET6419**
		977	**ET7977**
		978	**ET8978**
		979	**ET9979**
	EAN 8 check digit transmission	Disable	**AAG0**
		Enable	**AAG1**
	EAN 13 check digit transmission	disable	**AAH0**
		enable	**AAH1**
	UPC A check digit transmission	disable	**AAI0**
		enable	**AAI1**

CODE SELECTION (continued)			
DESCRIPTION			**STRING**
EAN/UPC	UPC E check digit transmission	disable	**AAJ0**
		enable	**AAJ1**
	conversions	UPC E to UPC A	**AAA**
		UPC E to EAN 13	**AAB**
		UPC A to EAN 13	**AAC**
		EAN 8 to EAN 13	**AAD**
	ISBN Conversion codes	enable ISBN	**AP1**
		enable ISSN	**AP2**
		enable ISBN and ISSN	**AP3**
		disable ISBN and ISSN	**AP0**
Code 39	disable Code 39 family		**AB0**
	Standard	no check digit control	**AB11**
		check digit control and transmission	**AB12**
		check digit control without transmission	**AB13**
	Full ASCII	no check digit control	**AB21**
		check digit control and transmission	**AB22**
		check digit control without transmission	**AB23**
	CIP 39		**AB3**
	Code 32		**AB4**
	code length		**AB*xxxx**
2/5	disable Code 2/5 family		**AC0**
	Interleaved 2/5	no check digit control	**AC11*xxxx***
		check digit control and transmission	**AC12*xxxx***
		check digit control without transmission	**AC13*xxxx***
	Normal 2/5 5 bars	no check digit control	**AC21*xxxx***
		check digit control and transmission	**AC22*xxxx***
		check digit control without transmission	**AC23*xxxx***
	Industrial 2/5 (IATA)	no check digit control	**AC31*xxxx***
		check digit control and transmission	**AC32*xxxx***
		check digit control without transmission	**AC33*xxxx***
	Matrix 2/5 3 bars	no check digit control	**AC41*xxxx***
		check digit control and transmission	**AC42*xxxx***
		check digit control without transmission	**AC43*xxxx***
	CIP/HR		**AC5**

xxxx = ASCII numbers that define the code length where:

- First 2 digits = minimum acceptable code length.
- Second 2 digits = maximum acceptable code length.

The minimum code length must always be less than or equal to the maximum.

The maximum code length for all codes is 99 characters:

Examples:

0132 = variable length from 1 to 32 digits in the code.

1010 = 10 digit code length only.

CODE SELECTION (continued)				
DESCRIPTION				**STRING**
Codabar	disable Codabar family			**AD0**
	Standard	no start/stop character equality control nor transmission		**AD111**
		no start/stop character equality control but transmission		**AD112**
		start/stop character equality control but no transmission		**AD121**
		start/stop character equality control and transmission		**AD122**
	ABC Codabar	no start/stop character equality control but transmission		**AD212**
	Codabar ABC forced concatenation			**AD232**
	code length			**AD*xxxx***
	start/stop character case in transmission		lower case	**ADA0**
			upper case	**ADA1**
Code 128	disable Code 128 family			**AI0**
	enable Code 128 - control without transmission of check digit			**AI11**
	enable EAN 128 - control without transmission of check digit			**AI21**
	Transmit GS before Code	disable		**EQ0**
		enable		**EQ1**
	ISBT 128	enable ISBT 128		**AI31**
	code length			**AIL*xxxx***
Code 93	disable Code 93 family			**AK0**
	enable Code 93 - control without transmission of check digit			**AK1**
MSI	disable the family			**AE0**
	no check			**AE1**
	MOD10 no tx			**AE2**
	MOD10 with tx			**AE3**
	MOD11-MOD10 no tx			**AE4**
	MOD11-MOD10 with tx			**AE5**
	MOD10-MOD10 no tx			**AE6**
	MOD10-MOD10 with tx			**AE7**

xxxx = ASCII numbers that define the code length where:

- First 2 digits = minimum acceptable code length.
- Second 2 digits = maximum acceptable code length.

The minimum code length must always be less than or equal to the maximum.

The maximum code length for all codes is 99 characters:

EXAMPLES:

0132 = variable length from 1 to 32 digits in the code.

1010 = 10 digit code length only.

CODE SELECTION (continued)		
DESCRIPTION		**STRING**
Plessey	disable the family	**AF0**
	Standard no check	**AF11**
	Standard check - with tx	**AF12**
	Standard check - no tx	**AF13**
	Anker no check	**AF21**
	Anker check - with tx	**AF22**
	Anker check - no tx	**AF23**
Telepen	disable the family	**AL0**
	Numeric no check	**AL11**
	Numeric check - with tx	**AL12**
	Numeric check - no tx	**AL13**
	Alpha no check	**AL21**
	Alpha check - with tx	**AL22**
	Alpha check - no tx	**AL23**
Delta IBM	disable the family	**AH0**
	no check	**AH1**
	Type 1 check	**AH2**
	Type 2 check	**AH3**
Code 11	disable the family	**AG0**
	no check	**AG1**
	Type C with tx	**AG21**
	Type C no tx	**AG22**
	Type K with tx	**AG31**
	Type K no tx	**AG32**
	Type C and K with tx	**AG41**
	Type C and K no tx	**AG42**
Code 16K	disable	**AJ0**
	enable	**AJ1**
Code 49	disable	**AM0**
	enable	**AM1**
GS1 DataBar™	disable the family	**AQ0**
	disable RSS Expanded Linear and Stacked	**AQ10**
	enable RSS Expanded Linear and Stacked	**AQ11**
	disable RSS Limited	**AQ20**
	enable RSS Limited	**AQ21**
	disable RSS 14 Linear and Stacked	**AQ30**
	enable RSS 14 Linear and Stacked	**AQ31**

RADIO PARAMETERS		
DESCRIPTION		**STRING**
Radio Protocol Timeout	enable (seconds)	**RH02-RH19**
Power-Off Timeout		**RP00-RP99**
Beeper Control For Radio Response	normal	**BF0**
	only good decode	**BF1**
	only good reception	**BF2**
	off	**BF3**
Single Store	disable	**RO0**
	one attempt	**RO1**
	two attempts	**RO2**
	three attempts	**RO3**
	four attempts	**RO4**
	five attempts	**RO5**
	six attempts	**RO6**
	seven attempts	**RO7**
	eight attempts	**RO8**
	nine attempts	**RO9**
Batch Mode	disable	**BZ0**
	normal	**BZ1**
	automatic	**BZ2**

B CODE IDENTIFIER TABLE

2/5 Interleaved



2/5 Industrial



2/5 normal 5 bars



2/5 matrix 3 bars



EAN 8



EAN 13



UPC A



UPC E



EAN 8 with 2 ADD ON



EAN 8 with 5 ADD ON



EAN 13 with 2 ADD ON



EAN 13 with 5 ADD ON



UPC A with 2 ADD ON



UPC A with 5 ADD ON



UPC E with 5 ADD ON



Code 39 Full ASCII



ABC CODABAR



EAN 128



CIP/39



Code 32



UPC E with 2 ADD ON



Code 39



CODABAR



Code 128



Code 93



CIP/HR



ISBT 128



MSI



Plessey Anker



Plessey Standard



Delta IBM



Telepen



Code 16K



Code 11



Code 49



RSS Expanded Linear and Stacked



RSS Limited



RSS 14 Linear and Stacked



C HEX AND NUMERIC TABLE

CHARACTER TO HEX CONVERSION TABLE					
char	**hex**	**char**	**hex**	**char**	**hex**
NUL	**00**	*	**2A**	U	**55**
SOH	**01**	+	**2B**	V	**56**
STX	**02**	,	**2C**	W	**57**
ETX	**03**	-	**2D**	X	**58**
EOT	**04**	.	**2E**	Y	**59**
ENQ	**05**	/	**2F**	Z	**5A**
ACK	**06**	0	**30**	[	**5B**
BEL	**07**	1	**31**	\	**5C**
BS	**08**	2	**32**	]	**5D**
HT	**09**	3	**33**	^	**5E**
LF	**0A**	4	**34**	_	**5F**
VT	**0B**	5	**35**	`	**60**
FF	**0C**	6	**36**	a	**61**
CR	**0D**	7	**37**	b	**62**
SO	**0E**	8	**38**	c	**63**
SI	**0F**	9	**39**	d	**64**
DLE	**10**	:	**3A**	e	**65**
DC1	**11**	;	**3B**	f	**66**
DC2	**12**	<	**3C**	g	**67**
DC3	**13**	=	**3D**	h	**68**
DC4	**14**	>	**3E**	i	**69**
NAK	**15**	?	**3F**	j	**6A**
SYN	**16**	@	**40**	k	**6B**
ETB	**17**	A	**41**	l	**6C**
CAN	**18**	B	**42**	m	**6D**
EM	**19**	C	**43**	n	**6E**
SUB	**1A**	D	**44**	o	**6F**
ESC	**1B**	E	**45**	p	**70**
FS	**1C**	F	**46**	q	**71**
GS	**1D**	G	**47**	r	**72**
RS	**1E**	H	**48**	s	**73**
US	**1F**	I	**49**	t	**74**
SPACE	**20**	J	**4A**	u	**75**
!	**21**	K	**4B**	v	**76**
"	**22**	L	**4C**	w	**77**
#	**23**	M	**4D**	x	**78**
$	**24**	N	**4E**	y	**79**
%	**25**	O	**4F**	z	**7A**
&	**26**	P	**50**	{	**7B**
'	**27**	Q	**51**	|	**7C**
(	**28**	R	**52**	}	**7D**
)	**29**	S	**53**	~	**7E**
		T	**54**	DEL	**7F**

CHARACTER TO HEX CONVERSION TABLE					
char	**hex**	**char**	**hex**	**char**	**hex**
€	**80**	ª	**AA**	Õ	**D5**
	81	«	**AB**	Ö	**D6**
‚	**82**	¬	**AC**	×	**D7**
ENTER	**83**	-	**AD**	Ø	**D8**
TAB	**84**	®	**AE**	Ù	**D9**
F1	**85**	¯	**AF**	Ú	**DA**
F2	**86**	°	**B0**	Û	**DB**
F3	**87**	±	**B1**	Ü	**DC**
F4	**88**	²	**B2**	Ý	**DD**
F5	**89**	³	**B3**	Þ	**DE**
F6	**8A**	´	**B4**	ß	**DF**
F7	**8B**	µ	**B5**	à	**E0**
F8	**8C**	¶	**B6**	á	**E1**
F9	**8D**	·	**B7**	â	**E2**
F10	**8E**	¸	**B8**	ã	**E3**
F11	**8F**	¹	**B9**	ä	**E4**
F12	**90**	º	**BA**	å	**E5**
HOME	**91**	»	**BB**	æ	**E6**
END	**92**	¼	**BC**	ç	**E7**
Pg UP	**93**	½	**BD**	è	**E8**
Pg Down	**94**	¾	**BE**	é	**E9**
↑	**95**	¿	**BF**	ê	**EA**
↓	**96**	À	**C0**	ë	**EB**
←	**97**	Á	**C1**	ì	**EC**
→	**98**	Â	**C2**	í	**ED**
ESC	**99**	Ã	**C3**	î	**EE**
CTRL(Right)	**9A**	Ä	**C4**	ï	**EF**
€	**9B**	Å	**C5**	ð	**F0**
œ	**9C**	Æ	**C6**	ñ	**F1**
	9D	Ç	**C7**	ò	**F2**
ž	**9E**	È	**C8**	ó	**F3**
Ÿ	**9F**	É	**C9**	ô	**F4**
NBSP	**A0**	Ê	**CA**	õ	**F5**
¡	**A1**	Ë	**CB**	ö	**F6**
¢	**A2**	Ì	**CC**	÷	**F7**
£	**A3**	Í	**CD**	ø	**F8**
¤	**A4**	Î	**CE**	ù	**F9**
¥	**A5**	Ï	**CF**	ú	**FA**
¦	**A6**	Ð	**D0**	û	**FB**
§	**A7**	Ñ	**D1**	ü	**FC**
¨	**A8**	Ò	**D2**	ý	**FD**
©	**A9**	Ó	**D3**	Reserved	**FE**
		Ô	**D4**	Reserved	**FF**

HEX / NUMERIC TABLE


0


2


4


6


8


A


C


E


1


3


5


7


9


B


D


F

Backspace



Cancels an incomplete configuration sequence

Datalogic Scanning, Inc.
959 Terry Street
Eugene, OR 97402
USA

CE 07

dichiara che
declares that the
déclare que le
bescheinigt, daß das Gerät
declare que el

QUICKSCAN M21XX Kit 433Mhz; Cordless System

e tutti i suoi modelli
and all its models
et tous ses modèles
und seine Modelle
y todos sus modelos

sono conformi alla Direttiva del Consiglio Europeo sottoelencata:
are in conformity with the requirements of the European Council Directive listed below:
sont conformes aux spécifications de la Directive de l'Union Européenne ci-dessous:
den nachstehenden angeführten Direktive des Europäischen Rats entsprechen:
cumple con los requisitos de la Directiva del Consejo Europeo, según la lista siguiente:

1999/5/EEC R&TTE

Questa dichiarazione è basata sulla conformità dei prodotti alle norme seguenti:
This declaration is based upon compliance of the products to the following standards:
Cette déclaration repose sur la conformité des produits aux normes suivantes:
Diese Erklärung basiert darauf, daß das Produkt den folgenden Normen entspricht:
Esta declaración se basa en el cumplimiento de los productos con las siguientes normas:

ETSI EN 301 489-3 V1.4.1, AUGUST 2002 :	*ELECTROMAGNETIC COMPATIBILITY AND RADIO SPECTRUM MATTERS (ERM); ELECTROMAGNETIC COMPATIBILITY (EMC) STANDARD FOR RADIO EQUIPMENT AND SERVICES; PART 3: SPECIFIC CONDITIONS FOR SHORT-RANGE DEVICES (SRD) OPERATING ON FREQUENCIES BETWEEN 9KHZ AND 40GHZ*
ETSI EN 300 220-3 V1.1.1, SEPTEMBER 2000 :	*ELECTROMAGNETIC COMPATIBILITY AND RADIO SPECTRUM MATTERS (ERM); SHORT RANGE DEVICES (SRD); RADIO EQUIPMENT TO BE USED IN THE 25MHZ TO 1000MHZ FREQUENCY RANGE WITH POWER LEVELS RANGING UP TO 500MW; PART 3: HARMONIZED EN COVERING ESSENTIAL REQUIREMENTS UNDER ARTICLE 3.2 OF THE R&TTE DIRECTIVE*
EN 60950-1, DECEMBER 2001 :	*INFORMATION TECHNOLOGY EQUIPMENT - SAFETY - PART 1 : GENERAL REQUIREMENTS*

March 1st, 2007

Australia
Datalogic Scanning Pty Ltd
Telephone: [61] (2) 9870 3200
australia.scanning@datalogic.com

France and Benelux
Datalogic Scanning Sarl
Telephone: [33].01.64.86.71.00
france.scanning@datalogic.com

Germany
Datalogic Scanning GmbH
Telephone: 49 (0) 61 51/93 58-0
germany.scanning@datalogic.com

India
Datalogic Scanning India
Telephone: 91- 22 - 64504739
india.scanning@datalogic.com

Italy
Datalogic Scanning SpA
Telephone: [39] (0) 39/62903.1
italy.scanning@datalogic.com

Japan
Datalogic Scanning KK
Telephone: 81 (0)3 3491 6761
japan.scanning@datalogic.com

Latin America
Datalogic Scanning, Inc
Telephone: (305) 591-3222
latinamerica.scanning@datalogic.com

Singapore
Datalogic Scanning Singapore PTE LTD
Telephone: (65) 6435-1311
singapore.scanning@datalogic.com

Spain and Portugal
Datalogic Scanning Sarl Sucursal en España
Telephone: 34 91 746 28 60
spain.scanning@datalogic.com

United Kingdom
Datalogic Scanning LTD
Telephone: 44 (0) 1923 809500
uk.scanning@datalogic.com

DATALOGIC™

www.scanning.datalogic.com

Datalogic Scanning, Inc.
959 Terry Street
Eugene, OR 97402
Telephone: (541) 683-5700
Fax: (541) 345-7140

©2008 Datalogic Scanning, Inc. 820001971 (Rev. B) 5/08