NETGEAR®

User Manual

Nighthawk AC1900 Cable Modem Router
Model C7000

February 2021
202-12223-01

NETGEAR, Inc.
350 East Plumeria Drive
San Jose, CA 95134, USA

Support and Community

Visit netgear.com/support to get your questions answered and access the latest downloads.
You can also check out our NETGEAR Community for helpful advice at community.netgear.com.
Customer-owned cable devices might not be compatible with certain cable networks. Check with your cable Internet provider to confirm that this NETGEAR cable device is allowed on your cable network.
If you are experiencing trouble installing your cable device, contact NETGEAR at 1-866-874-8924.
Note to CATV system installer: This reminder is provided to call the CATV systems installer's attention to Section 820-93 of the National Electrical Code, which provide guidelines for proper grounding and in particular, specify that coaxial cable shield shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Regulatory and Legal

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à https://www.netgear.com/support/download/.
(If this product is sold in Canada, you can access this document in Canadian French at https://www.netgear.com/support/download/.)
For regulatory compliance information including the EU Declaration of Conformity, visit https://www.netgear.com/about/regulatory/.
See the regulatory compliance document before connecting the power supply. For NETGEAR's Privacy Policy, visit https://www.netgear.com/about/privacy-policy.
By using this device, you are agreeing to NETGEAR's Terms and Conditions at https://www.netgear.com/about/terms-and-conditions. If you do not agree, return the device to your place of purchase within your return period.

Trademarks

©NETGEAR, Inc. NETGEAR and the NETGEAR Logo are trademarks of NETGEAR.

Contents

Chapter 1 Hardware Setup

Unpack Your Modem Router 9
Front Panel 10
Rear Panel 12
Position Your Modem Router 12
Cable Your Modem Router 13
Cable the Modem Router in a Simple Network 14
Cable Your Modem Router to a Router and Use Bridge Mode 14
Set Up Your Internet Service with Comcast Xfinity 16
Set Up and Activate Your Modem Router With Xfinity 16
. 16
Call Comcast Xfinity to Set Up Your Internet Connection 17
Set Up Your Modem Router With Another Cable Internet Service Provider 17

Chapter 2 Connect to the Network and Access the Modem Router

Connect to the Network 20
Wired Connection 20
WiFi Connection 20
Label 21
Types of Logins 21
Log In to the Modem Router 21
Access the Modem Router with NETGEAR genie App 22

Chapter 3 Specify Your Internet Settings

Notify Your Internet Provider 24
Specify the Cable Connection Starting Frequency 24
View Modem Router Initialization 25
Manually Set Up the Internet Connection 27
Specify an IPv6 Internet Connection 28
Change the MTU Size 29

Chapter 4 Control Access to the Internet

Block Access to Your Network 33
Use Keywords to Block Internet Sites 33
Block Services from the Internet 35
Schedule When to Block Internet Sites and Services 37
Avoid Blocking on a Trusted Computer 37

Set Up Security Event Email Notifications 38

Chapter 5 Share USB Devices Attached to the Modem Router

USB Drive Requirements 41
Access a USB Drive on the Network 41
Control Access to the USB Drive 42
Use FTP Within the Network 44
View Network Folders on a USB Drive 45
Add a Network Folder on a USB Drive 46
Edit a Network Folder on a USB Drive 47
Approve USB Devices 47
Access the USB Drive Through the Internet 49
Set Up FTP Access Through the Internet 49
Access the USB Drive Through the Internet with FTP 50
Safely Remove a USB Drive 51

Chapter 6 Share a USB Printer

Install the Printer Driver and Cable the Printer 53
Download the ReadySHARE Printer Utility 53
Install the ReadySHARE Printer Utility 54
Use the Shared Printer 55
View or Change the Status of a Printer 56
Use the Scan Feature of a Multifunction USB Printer 57
Change NETGEAR USB Control Center Settings 58

Chapter 7 Specify Network Settings

View WAN Settings 61
Set Up a Default DMZ Server 62
Change the Modem Router's Device Name 63
Change the LAN TCP/IP Settings 63
Specify the IP Addresses that the Modem Router Assigns 65
Disable the DHCP Server Feature in the Modem Router 66
Reserve LAN IP Addresses 67
Improve Network Connections with Universal Plug and Play 68
Use the WPS Wizard for WiFi Connections 69
Specify Basic WiFi Settings 70
Change the WiFi Security Option 72
Set Up a Guest Network 73
Control the Wireless Radios 74
Use the WiFi On/Off Button 74
Enable or Disable the Wireless Radios 75
Set Up a Wireless Schedule 76
Specify WPS Settings 77

Chapter 8 Manage Your Network

Change the Admin Password 79
View Modem Router Status. 79
Display Internet Port Statistics. 80
Check the Internet Connection Status 81
View Logs of Modem Router Activity 82
View Event Logs. 84
Run the Ping Utility 85
Run the Traceroute Utility 86
Monitor Internet Traffic 87
View Devices Currently on the Network 88
Manage the Modem Router Configuration File 89
Back Up Settings 89
Restore Configuration Settings. 90
Erase the Current Configuration Settings 91
View Wireless Access Points in Your Area 91
View or Change the Modem Router Wireless Channel 92
Dynamic DNS 93
Specify a DNS Account. 94
Change the Dynamic DNS Settings 94
Remote Management 95

Chapter 9 Specify Internet Port Settings

Set Up Port Forwarding to a Local Server 98
Add a Custom Port Forwarding Service 99
Edit a Port Forwarding Service 100
Delete a Port Forwarding Entry. 101
Application Example: Make a Local Web Server Public 101
How the Modem Router Implements the Port Forwarding Rule 102
Set Up Port Triggering. 102
Add a Port Triggering Service. 103
Application Example: Port Triggering for Internet Relay Chat 104

Chapter 10 Troubleshooting

Troubleshoot with the LEDs. 107
Power LED Is Off 107
LEDs Never Turn Off. 107
Internet LED Is Off. 107
Troubleshoot the Cable Internet Connection 108
Cannot Log In to the Modem Router 108
Changes Not Saved 110
Wireless Connectivity. 110
Troubleshoot Your Network Using the Ping Utility. 111
Test the LAN Path to Your Modem Router 111
Test the Path from Your Computer to a Remote Device. 112

Appendix A Supplemental Information

Factory Settings 114
Technical Specifications 116

1

Hardware Setup

This chapter covers the following topics:

- Unpack Your Modem Router
- Front Panel
- Rear Panel
- Position Your Modem Router
- Cable Your Modem Router
- Set Up Your Internet Service with Comcast Xfinity

For more information about the topics covered in this manual, visit the support website at http://support.netgear.com.

Unpack Your Modem Router

Your package contains the following items.

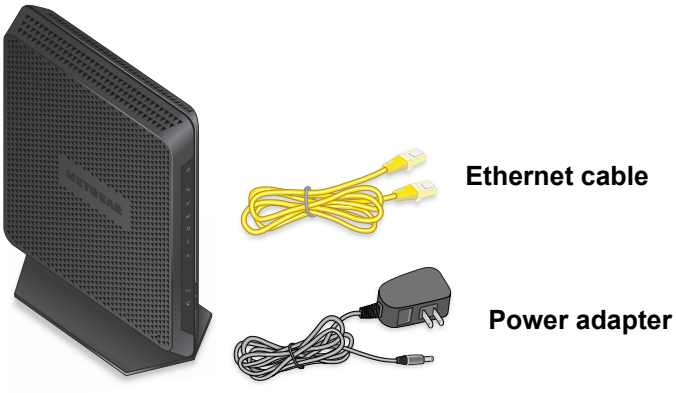


Figure 1. Package contents

Front Panel

The modem router has status LEDs and buttons on the front.

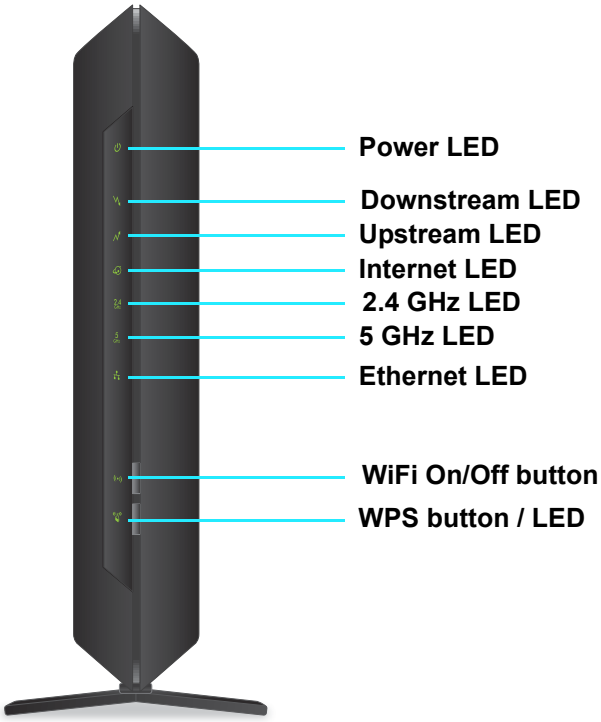


Figure 2. Modem router front view

You can use the LEDs to verify status and connections. The following table lists and describes each LED and button on the front panel of the modem router.

LED	Description
Power	• **Green**. Power is supplied to the modem router. • **Off**. No power is supplied to the modem router. • **Solid red**. Thermal cutoff mode. Power off the unit, let it cool, and move it away from heat sources (such as a TV, DVD player, or speakers) and keep it vertical in open air.
Downstream	• Solid amber. One downstream channel is locked. • **Solid green**. Two or more downstream channels are locked. • **Blinking green**. The modem router is scanning for a downstream channel. • **Off**. No downstream channel is locked.
Upstream	• Solid amber. One upstream channel is locked. • **Solid green**. Two or more upstream channels are locked. • **Blinking green**. The modem router is scanning for an upstream channel. • **Off**. No upstream channel is locked.

LED	Description
Internet 	• **Solid green**. The modem router is online. • **Blinking green**. The modem router is synchronizing with the cable provider's cable modem termination system (CMTS). • **Slow blinking amber and green**. The modem router reached the traffic meter limit. (For information about the traffic meter, see Monitor Internet Traffic on page 87.) • **Off**. The modem router is offline.
2.4 GHz radio 	• **Green**. The 2.4 GHz radio is on. • **Off**. The 2.4 GHz radio is off.
5 GHz radio 	• **Green**. The 5 GHz radio is on. • **Off**. The 5 GHz radio is off.
Ethernet 	• **Green**. A device is connected to an Ethernet port and powered on. Each Ethernet port has LEDs on the rear panel. • **Off**. No device is connected to an Ethernet port.
WiFi On/Off button with LED 	Pressing this button for two seconds turns the WiFi radios in the modem router on and off. If this LED is lit, the WiFi radios are on. If this LED is off, the WiFi radios are turned off and you cannot use WiFi to connect to the modem router.
WPS button with LED 	This button lets you use WPS to join the WiFi network without typing the WiFi password. The WPS LED blinks during this process and then lights solid.

Rear Panel

The rear panel has the connections and button shown the following figure.

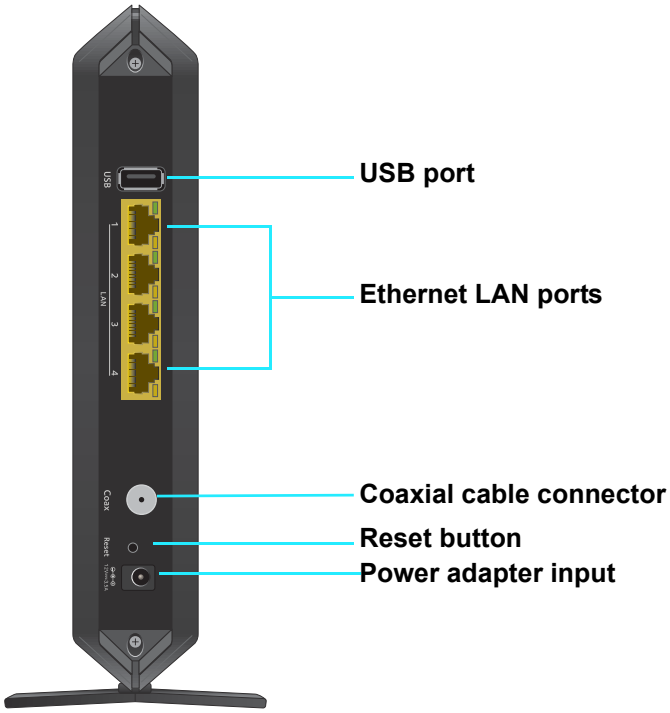


Figure 3. Modem router rear panel

Position Your Modem Router

The modem router lets you access your network anywhere within the operating range of your wireless network. However, the operating distance or range of your wireless connection can vary significantly depending on the physical placement of your modem router. For example, the thickness and number of walls the wireless signal passes through can limit the range.

Additionally, other wireless access points in and around your home might affect your modem router's signal. Wireless access points are modem routers, repeaters, WiFi range extenders, or any other device that emits a wireless signal for network access.

Position your modem router according to the following guidelines:

- Place your modem router near the center of the area where your computers and other devices operate, and within line of sight to your wireless devices.
- Make sure that the modem router is within reach of an AC power outlet and near Ethernet cables for wired computers.

- Place the modem router in an elevated location, minimizing the number walls and ceilings between the modem router and your other devices.
- Place the modem router away from electrical devices such as these:
  - Ceiling fans
  - Home security systems
  - Microwaves
  - Computers
  - Base of a cordless phone
  - 2.4 GHz cordless phone
- Place the modem router away from large metal surfaces, large glass surfaces, and insulated walls such as these:
  - Solid metal doors
  - Aluminum studs
  - Fish tanks
  - Mirrors
  - Brick
  - Concrete

Cable Your Modem Router

The most common way to cable your modem router is the simplest, without any other routers or gateways on the same network. You can also cable the modem router to another router or gateway and log in to the modem router to specify this setting.

Cable the Modem Router in a Simple Network

The modem router comes configured to work as both a modem and a router. You can share your Internet connection without connecting the modem router to a router or gateway.

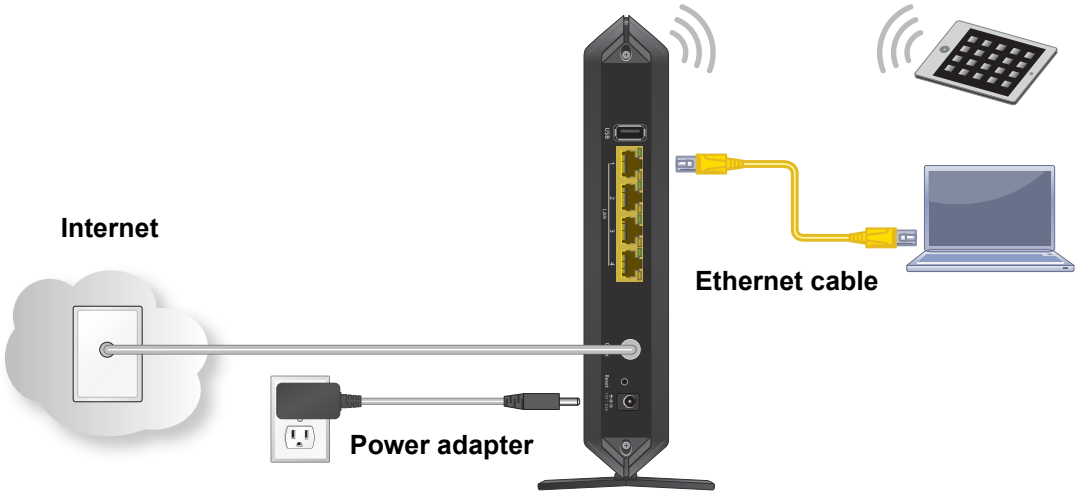


Figure 4. Modem router in a simple network

To cable your modem router:

1. Connect a coaxial cable.

   Use the coaxial cable that your cable company provides to connect the cable port on the modem router to a cable wall outlet or a line splitter.

   Note: For Xfinity cable Internet service, Comcast Xfinity recommends connecting your modem router to a cable wall outlet.

2. Connect the power adapter provided in the package to the modem router and plug the power adapter in to an electrical outlet.
3. Press the **Power On/Off** button on the rear panel of the modem router.

   The Power LED lights green.

You can log in to the modem router to view or change its settings.

Cable Your Modem Router to a Router and Use Bridge Mode

If you want to cable the modem router to a router, then you must log in to the modem router and change its Router Mode setting. Changing this setting prevents certain network conflicts that can occur when two devices on the same network perform routing functions such as

network address translation (NAT) and DHCP (assigning IP addresses to devices on the network). This turns the modem router into a bridged modem

To cable your modem router to a gateway or router:

1. Connect a coaxial cable.

   Use the coaxial cable that your cable company provides to connect the cable port on the modem router to a cable wall outlet or a line splitter.

2. Connect the power adapter to the modem router and plug the power adapter into an electrical outlet.

   The Power LED lights green.

3. On your computer or wireless device, find and select the WiFi network.

   The WiFi network name is on the product label.

4. Join the WiFi network and enter the WiFi password.

   The password is on the product label.

   Your wireless device connects to the WiFi network.

5. Launch a web browser.
6. Type **http://routerlogin.net** or **http://192.168.0.1**.


   A login screen displays.

7. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

8. Select **ADVANCED > Administration > Router Mode**.
9. Select the **No** radio button.

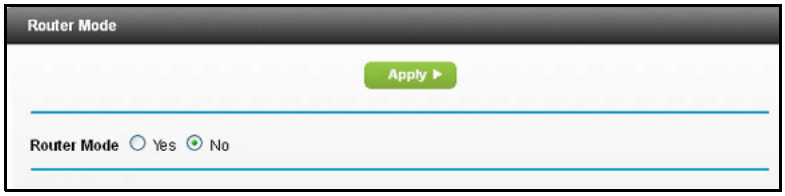

   With this setting, the modem router works as a bridge and obtains IP addresses from the cable Internet provider.

10. Click the **Apply** button.

    Your change is saved.

11. Follow the instructions that came with your router or gateway to connect it to the modem router.



CAUTION:

Once the modem router is in bridge mode, you must connect *only one* device (your router) to a modem router LAN port. In most cases, Internet service providers provide only one public IP address and connecting multiple devices will cause conflicts and will cause your devices to stop working.

Set Up Your Internet Service with Comcast Xfinity

Set up Internet service by using Comcast Xfinity's self-activation process. If you are unable to self-activate your modem router, call Comcast Xfinity customer service. After you complete the setup, perform a speed test.

Set Up and Activate Your Modem Router With Xfinity

1. If your current modem is leased from Xfinity, call Xfinity support to remove your leased modem from your Xfinity service.
2. Make sure that your mobile device is using an LTE Internet connection (do not connect to a WiFi network).
3. Open the Xfinity app and sign in with your Xfinity ID.
4. Follow the steps to get online.
5. The activation process takes about five minutes.
6. On your mobile device, launch a web browser and enter **routerlogin.net** or **192.168.0.1** in the address field.
7. Follow the prompts to:
   - Agree to the terms and conditions.
   - Change your modem router's admin credentials and set up security questions.
   - Review your WiFi network name and password.

Call Comcast Xfinity to Set Up Your Internet Connection

If you are unable to self-activate your modem router, call Comcast Xfinity customer service.

Before you call Comcast Xfinity, make sure that your account number, account phone number, email address, and password are nearby. The modem router's model number is C7000. The serial number and MAC address are on the product label.

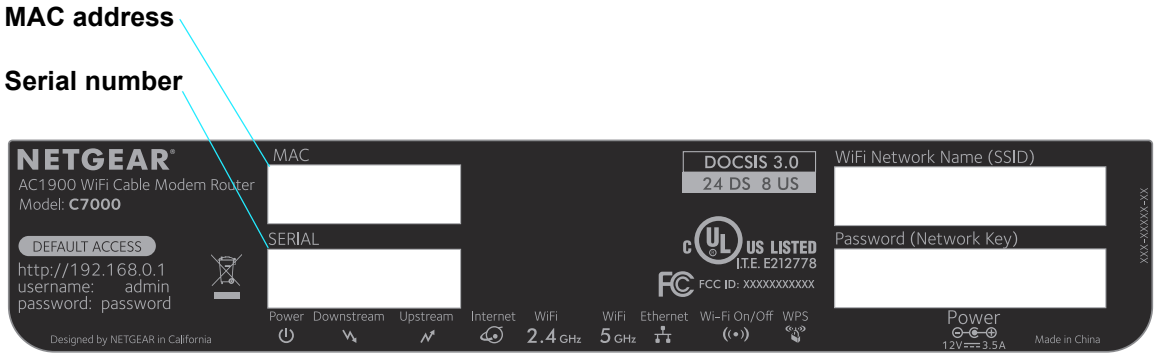


Figure 5. Find the serial number and the MAC address on the product label

To set up your Internet connection by calling Comcast Xfinity:

1. Call Comcast Xfinity customer service at 1-800-Xfinity (1-800-934-6489).
2. When asked, provide your account information and provide the modem router's model number and MAC address.
3. Wait for the Comcast Xfinity representative to confirm that your modem router is active.
4. If you do not get an Internet connection with the modem router, ask the Comcast Xfinity representative to look for your modem router online, and do one of the following depending on what the representative tells you about your modem router:
   - If the modem router is not visible, the Comcast Xfinity representative can give you instructions to verify why the modem router does not connect with your high-speed Internet service.
   - If the modem router is visible to the Comcast Xfinity representative, reboot the modem router. Check your online status again.

Set Up Your Modem Router With Another Cable Internet Service Provider

1. Connect your computer or mobile device to the modem router with WiFi or Ethernet:

   WiFi: Use the WiFi network name (SSID) and password on the modem router label to connect.

Ethernet: Use an Ethernet cable to connect a computer to an Ethernet port on the modem router. (Your computer must have an Ethernet port.)

2. Launch a web browser and enter **routerlogin.net** or **192.168.0.1** in the address field.
3. Follow the prompts to:
   - Agree to the terms and conditions.
   - Change your modem router's admin credentials and set up security questions.
   - Review your WiFi network name and password.

2

Connect to the Network and Access the Modem Router

This chapter contains the following sections:

- Connect to the Network
- Types of Logins
- Log In to the Modem Router
- Access the Modem Router with NETGEAR genie App

Connect to the Network

You can connect to the modem router's network through a wired or WiFi connection. If you set up your computer to use a static IP address, change the settings so that it uses Dynamic Host Configuration Protocol (DHCP).

Wired Connection

You can connect your computer to the modem router using an Ethernet cable and join the modem router's local area network (LAN).

To connect your computer to the modem router with an Ethernet cable:

1. Make sure that the modem router has power (its Power LED is lit).
2. Connect an Ethernet cable to an Ethernet port on your computer.
3. Connect the other end of the Ethernet cable to one of the numbered Ethernet ports.

   Your computer connects to the local area network (LAN). A message might display on your computer screen to notify you that an Ethernet cable is connected.

WiFi Connection

You can connect to the modem router's WiFi network with Wi-Fi Protected Setup (WPS) or you can find and select the WiFi network.

To use WPS to connect to the WiFi network:

1. Make sure that the modem router has power (its Power LED is lit).
2. Check the WPS instructions for your computer or wireless device.
3. Press the **WPS** button on the modem router.
4. Within two minutes, on your computer or WiFi device, press its **WPS** button or follow its instructions for WPS connections.

   Your computer or wireless device connects to the WiFi network.

To find and select the WiFi network:

1. Make sure that the modem router has power (its Power LED is lit).
2. On your computer or wireless device, find and select the WiFi network.

   The WiFi network name is on the modem router's label.
3. Join the WiFi network and enter the WiFi password.

   The password is on the modem router's label.

   Your wireless device connects to the WiFi network.

Label

The label on the modem router shows the login information, MAC address, and serial number.

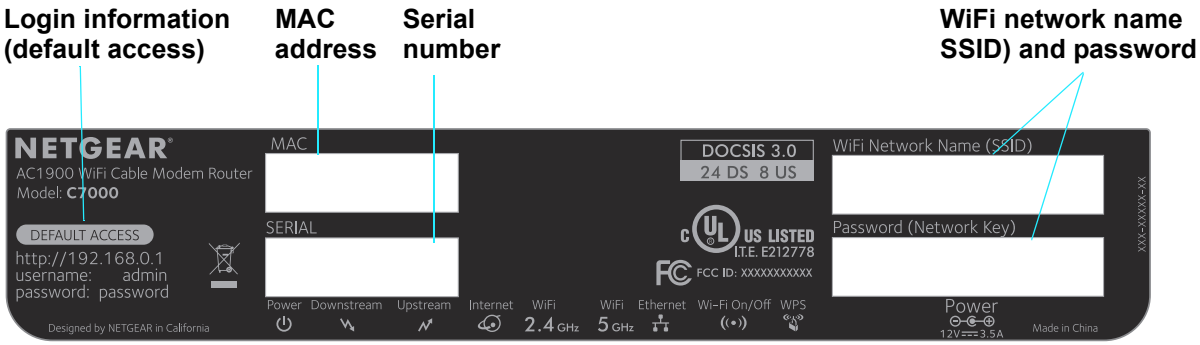


Figure 6. Modem router label

Types of Logins

Separate types of logins have different purposes. It is important that you understand the difference so that you know which login to use when.

Types of logins:

- **WiFi network key or password**. Your modem router is preset with a unique wireless network name (SSID) and password for wireless access. This information is on the modem router label.

  Note: Your modem router broadcasts dual-band 2.4 GHz and 5 GHz WiFi signals. The label shows the SSID for the 2.4 GHz signal. For information about 5 GHz WiFi settings, see Specify Basic WiFi Settings on page 70.

- **Modem Router login**.This logs you in to the modem router interface as admin from an Internet browser.

Log In to the Modem Router

When you first set up your modem router, NETGEAR genie automatically starts when you launch an Internet browser on a computer that is connected to the modem router. If you want to view or change settings for the modem router, you can use genie again.

To log in to the modem router:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

Access the Modem Router with NETGEAR genie App

The genie app is the easy dashboard for managing, monitoring, and repairing your home network. The genie app can help you with the following:

- Automatically repair common wireless network problems.
- Easily manage modem router features like Live Parental Controls, guest access, Internet traffic meter, speed test, and more.

To use the genie app to access the modem router:

1. Visit the NETGEAR genie web page at www.NETGEAR.com/genie.
2. Follow the onscreen instructions to install the app on your smartphone, tablet, or computer.
3. Launch the genie app.

   The genie app dashboard screen displays:

3

Specify Your Internet Settings

Usually, the quickest way to set up the modem router to use your Internet connection is to allow the genie to detect the Internet connection when you first access the modem router with an Internet browser. You can also customize or specify your Internet settings.

This chapter contains the following sections:

- Notify Your Internet Provider
- View Modem Router Initialization
- Manually Set Up the Internet Connection
- Specify an IPv6 Internet Connection
- Change the MTU Size

Notify Your Internet Provider

You must contact your Internet provider and tell them that you are using the modem router. For Comcast Xfinity self-activation, see Set Up and Activate Your Modem Router With Xfinity on page 16

To set up your Internet connection:

1. Contact your cable Internet provider and inform them that you are installing a new modem router that you bought from a retail store.

   Provide your cable Internet provider with the modem router's model number, which is C7000.

   You can also visit your cable Internet provider's website and follow the onscreen instructions to set up your Internet service.

   The contact information listed might change. You can also find the contact number in your monthly Internet service billing statement.

Cable ISP	Contact Information
Cox	https://www.cox.com/residential/support/home.html https://www.cox.com/activate 1-888-556-1193
Mediacom	https://support.mediacomcable.com 1-855-Mediacom (1-855-633-4226)
Optimum	https://www.optimum.net/support/contact-us https://install.optimum.com/JointInstall 1-877-810-6750
Sparklight	https://support.sparklight.com 1-877-692-2253
Spectrum	https://www.spectrum.net/contact-us https://activate.spectrum.net 1-833-267-6094
Xfinity	https://www.xfinity.com/internetsetup Use the Xfinity app for Xfinity activation.

2. When asked, provide the modem router's serial number and MAC address, which are on the product label. (See Retrieve and Display the Product Label on page 10.)
3. Wait for your cable Internet provider to confirm that your modem router is active.
4. If you the modem router does not connect to the Internet, ask your cable Internet provider to look for your modem router online, and do one of the following depending on what your cable Internet provider tells you about your modem router:

- If the modem router is not visible, your cable Internet provider can give you instructions to verify why the modem router does not connect with your high-speed Internet service.
- If the modem router is visible to your cable Internet provider, reboot the computer, laptop, or home gateway that is connected to the modem router. Try checking your online status again.

Specify the Cable Connection Starting Frequency

The starting frequency is automatically generated. For most Internet connections, you do not need to specify this information. If you need to enter a starting frequency, contact your Internet provider.

To change the starting frequency:


1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **Cable Connection.**

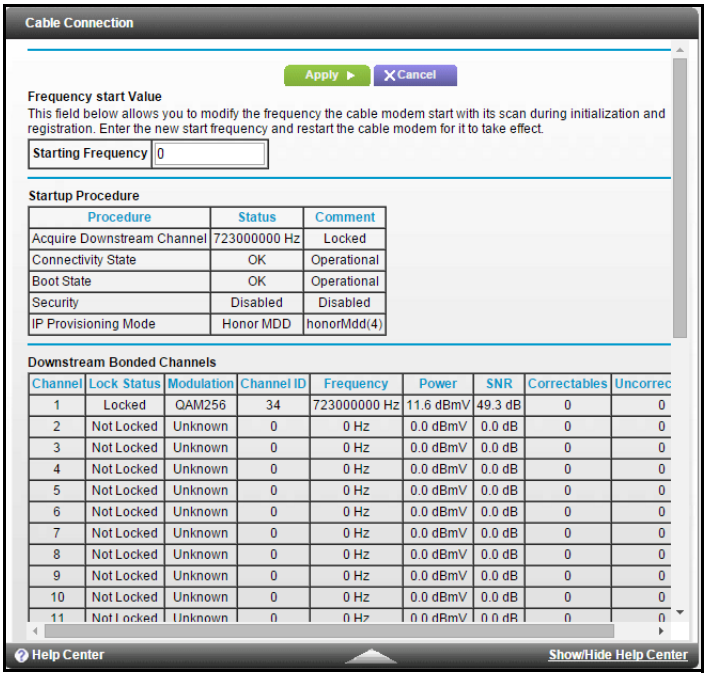

The screen displays the status of all downstream and upstream channels.

5. In the **Starting Frequency** field, type a number.
6. Click the **Apply** button.

   Your settings are saved.

View Modem Router Initialization

You can track the initialization procedure of the modem router, and get details about the downstream and upstream cable channel. The time is displayed after the modem router is initialized.

The modem router automatically goes through the following steps in the provisioning process:

1. Scans and locks the downstream frequency and then ranges the upstream channels.
2. Obtains a WAN address for the modem router.
3. Connects to the Internet.

To view the status of the modem router initialization:

1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.


A login screen displays.

3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **Cable Connection.**

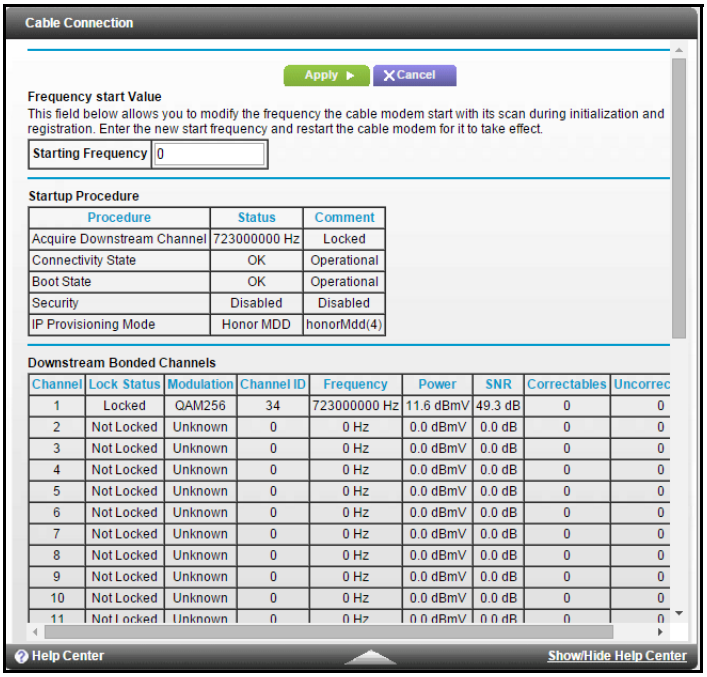

   The Startup Procedure section displays the initialization progress. The screen also displays the status of all downstream and upstream channels.(You must scroll down to view all the channels.) The number of downstream and upstream channels that are locked depends on the number of channels that your Internet provider uses.

Manually Set Up the Internet Connection

In most situations, you do not need to change these settings. NETGEAR recommends that you use the default settings for DHCP because most cable Internet services provide the IP address through DHCP.

To specify the Internet connection settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.


   A login screen displays.

3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Setup > Internet**.

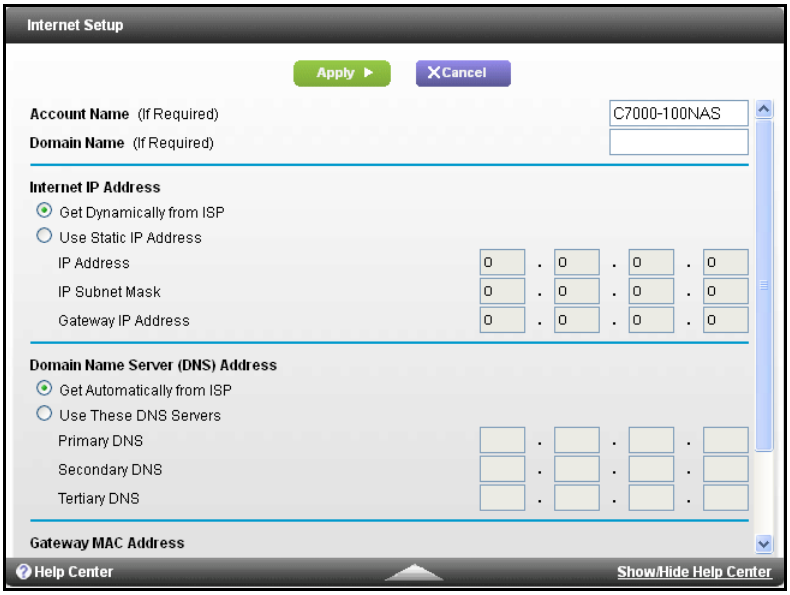

Scroll to view more settings

5. If your Internet connection requires an account name or host name, type it in the **Account Name (If Required)** field.
6. If your Internet connection requires a domain name, type it in the **Domain Name (If Required)** field.

   For the other sections in this screen, the default settings usually work, but you can change them.

7. For the **Internet IP Address** setting, select one of the following radio buttons:
   - **Get Dynamically from ISP**. Your ISP uses DHCP to assign your IP address. Your ISP automatically assigns these addresses.
   - **Use Static IP Address**. Enter the IP address, IP subnet mask, and the gateway IP address that your ISP assigned. The gateway is the ISP modem router to which your modem router connects.
8. For the **Domain Name Server (DNS) Address** setting, select one of the following radio buttons:
   - **Get Automatically from ISP**. Your ISP uses DHCP to assign your DNS servers. Your ISP automatically assigns this address.
   - **Use These DNS Servers**. If you know that your ISP requires specific servers, select this option. Enter the IP address of your ISP's primary DNS server. If a secondary DNS server address is available, enter it also.
9. Click the **Apply** button.

Your settings are saved.

If the NETGEAR website does not display within one minute, see Chapter 10, Troubleshooting.

Specify an IPv6 Internet Connection


To specify an IPv6 Internet connection:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > IPv6**.

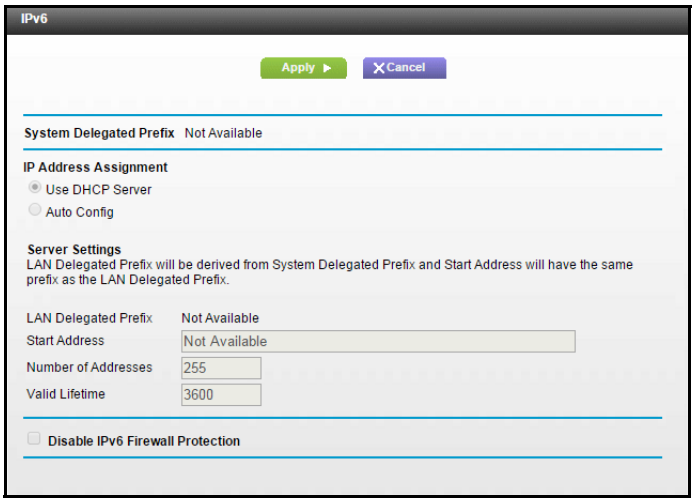

   If your Internet provider supports IIPV6, the **System Delegated Prefix** field displays IPv6 information.
5. Specify how the modem router assigns IPv6 addresses to the devices on your home network (the LAN) by selecting one of the following radio buttons:
   - **Use DHCP Server**. This method passes more information to LAN devices, but some IPv6 systems might not support the DHCv6 client function.
   - **Auto Config**. This is the default setting.
6. Complete the fields in the Server Settings section.
7. Click the **Apply** button.

Your settings are saved.

Change the MTU Size

The maximum transmission unit (MTU) is the largest data packet a network device transmits. When one network device communicates across the Internet with another, the data packets travel through many devices along the way. If a device in the data path has a lower MTU setting than the other devices, the data packets must be split or “fragmented” to accommodate the device with the smallest MTU.

The best MTU setting for NETGEAR equipment is often the default value. In some situations, changing the value fixes one problem but causes another. Leave the MTU unchanged unless one of these situations occurs:

- You experience problems connecting to your ISP or other Internet service, and the technical support of either the ISP or NETGEAR recommends changing the MTU setting. These web-based applications might require an MTU change:
  - A secure website that does not open, or displays only part of a web page
  - Yahoo email
  - MSN portal
  - America Online’s DSL service
- You use VPN and have severe performance problems.
- You used a program to optimize MTU for performance reasons, and now you have connectivity or performance problems.

Note: An incorrect MTU setting can cause Internet communication problems. For example, you might not be able to access certain websites, frames within websites, secure login pages, or FTP or POP servers.

To change the MTU size:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Setup > WAN Setup**.

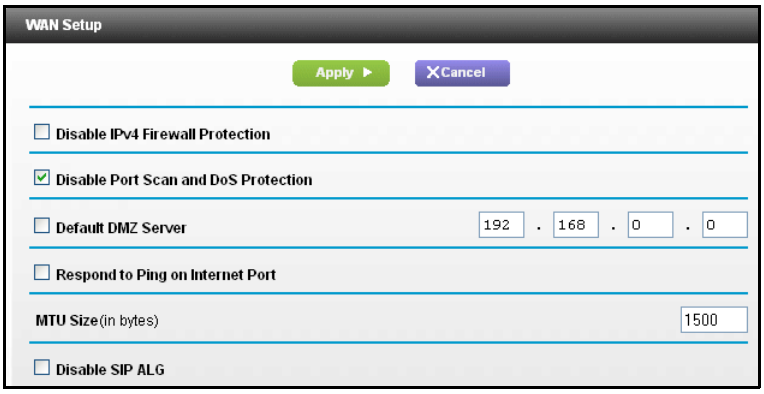

5. In the **MTU Size** field, enter a value from 64 to 1500.
6. Click the **Apply** button.

   Your change is saved.

If you suspect an MTU problem, a common solution is to change the MTU to 1400. If you are willing to experiment, you can gradually reduce the MTU from the maximum value of 1500 until the problem goes away. The following table describes common MTU sizes and applications.

Table 1. Common MTU sizes

MTU	Application
1500	The largest Ethernet packet size. This setting is typical for connections that do not use PPPoE or VPN, and is the default value for NETGEAR modem routers, adapters, and switches.
1492	Used in PPPoE environments.
1472	Maximum size to use for pinging. (Larger packets are fragmented.)
1468	Used in some DHCP environments.
1460	Usable by AOL if you do not have large email attachments, for example.

4

Control Access to the Internet

The modem router comes with a built-in firewall that helps protect your home network from unwanted intrusions from the Internet.

This chapter includes the following sections:

- Set Up Security Event Email Notifications
- Block Access to Your Network
- Use Keywords to Block Internet Sites
- Block Services from the Internet
- Schedule When to Block Internet Sites and Services
- Avoid Blocking on a Trusted Computer
- Set Up Security Event Email Notifications

Block Access to Your Network

You can use access control to block access to your network.

To set up access control:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Security > Access Control**.
5. Select the **Turn on Access Control** check box.

   You must select this check box before you can specify an access rule and use the Allow and Block buttons. When this check box is cleared, all devices are allowed to connect, even if the device is in the blocked list.
6. To specify the access rule, select one of the following radio buttons:
   - **Allow all new devices to connect**. With this setting, if you buy a new device, it can access your network. You don't need to enter its MAC address in this screen. NETGEAR recommends that you leave this radio button selected.
   - **Block all new devices from connecting**. With this setting, if you buy a new device, before it can access your network, you must enter its MAC address for an Ethernet connection and its MAC address for a WiFi connection in the allowed list.

   The access rule does not affect previously blocked or allowed devices. It applies only to devices joining your network in the future after you apply these settings.
7. To allow the computer or device you're currently using to continue to access the network, select the check box next to your computer or device, and click the **Allow** button.
8. To change an existing list, select the check box for the list and click the **Edit** button.
9. Click the **Apply** button.

   Your changes take effect.

Use Keywords to Block Internet Sites

You can use keywords to block certain Internet sites from your network. You can use blocking all the time or based on a schedule.


To set block Internet sites:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Security > Block Sites**.

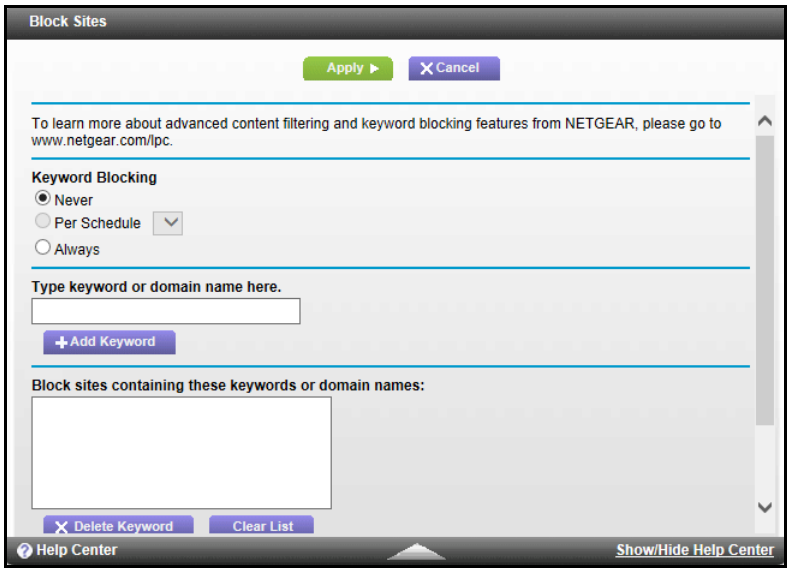

5. Select one of the keyword blocking options:
   - **Per Schedule**. Turn on keyword blocking according to the Schedule screen settings. (See Schedule When to Block Internet Sites and Services on page 37.)
   - **Always**. Turn on keyword blocking all the time, independent of the Schedule screen.
6. In the **Keyword** field, enter a keyword or domain that you want to block.

   For example:

   - Specify XXX to block http://www.badstuff.com/xxx.html.
   - Specify .com if you want to allow only sites with domain suffixes such as .edu or .gov.
   - Enter a period (.) to block all Internet browsing access.
7. Click the **Add Keyword button.**

   The keyword is added to the keyword list. The keyword list supports up to 32 entries.
8. **C**lick the **Apply** button.

   Keyword blocking takes effect.

To delete keywords from the list:

1. Do one of the following:
   - To delete a single word, select it and click the **Delete Keyword button.**

     The keyword is removed from the list.
   - **To delete all keywords on the list, click the Clear List button.**

     All keywords are removed from the list.
2. **Click t**he **Apply** button**.**

   Your changes are saved.

Block Services from the Internet

You can block Internet services on your network based on the type of service. You can block the services all the time or based on a schedule.


To block services:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.


   The BASIC Home screen displays.
4. Select **ADVANCED > Security > Block Services**.

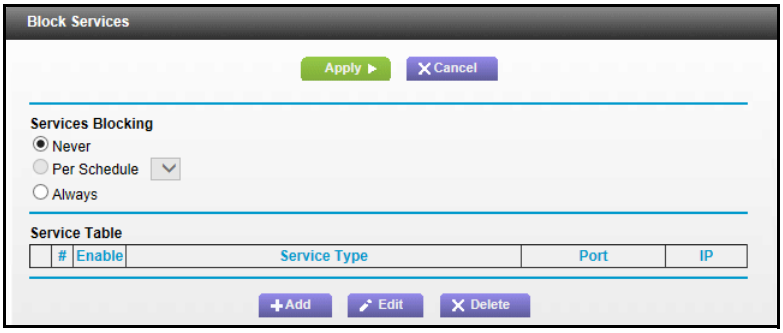

5. Specify when to block the services:
   - To block the services all the time, select the **Always** radio button.
   - To block the services based on a schedule, select the **Per Schedule** radio button.

To specify the schedule, see Schedule When to Block Internet Sites and Services on page 37.

6. Click the **Add** button.

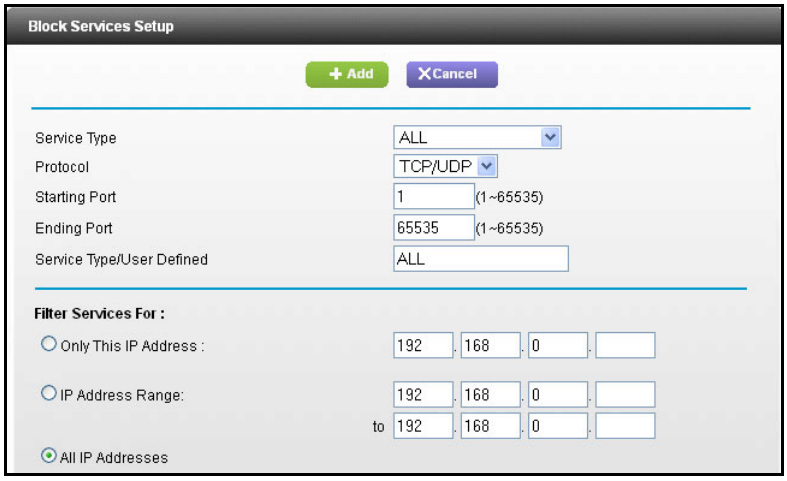

7. To add a service that is in the **Service Type** list, select the application or service.

   The settings for this service automatically display in the fields.

8. To add a service or application that is not the list, select **User Defined.**
   a. If you know that the application uses either TCP or UDP, select the appropriate protocol; otherwise, select **TCP/UDP (both)**.
   b. Enter the starting port and ending port numbers.
      - If the service uses a single port number, enter that number in both fields.
      - To find out which port numbers the service or application uses, you can contact the publisher of the application, ask user groups or newsgroups, or search on the Internet.
9. To specify how to filter the services, select one of the following radio buttons:
   - **Only This IP Address**. Block services for a single computer.
   - **IP Address Range**. Block services for a range of computers with consecutive IP addresses on your network.
   - **All IP Addresses**. Block services for all computers on your network.
10. Click the **Add button**.

    Your changes are saved.

Schedule When to Block Internet Sites and Services

When you schedule blocking, the same schedule is used to block sites and to block services. For information about how to specify what you want the modem router to block, see Use Keywords to Block Internet Sites on page 33 and Block Services from the Internet on page 35.

To schedule blocking:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Security > Schedule**.
5. Specify when to block keywords and services:
   - **Days to Block**. Select the check box for each day that you want to block the keywords or select the **Every Day** check box, which automatically selects the check boxes for all days.
   - **Time of Day to Block**. Select a start and end time in 24-hour format, or select **All Day** for 24-hour blocking.
6. Select your time zone from the list.
7. If you use daylight saving time, select the **Automatically adjust for daylight savings time** check box.
8. Click the **Apply** button.

   Your settings are saved.

Avoid Blocking on a Trusted Computer

You can exempt one trusted computer from blocking. The computer you exempt must have a fixed IP address. You can use the reserved IP address feature to specify the IP address. See Reserve LAN IP Addresses on page 67

To specify a trusted computer:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Security > Block Sites**.
5. Scroll down and select the **Allow trusted IP address to visit blocked sites** check box.
6. In the **Trusted IP Address** field, enter the IP address of the trusted computer.
7. Click the **Apply** button.

   Your changes are saved.

Set Up Security Event Email Notifications

The modem router can email you its logs of modem router activity. The log records activity and security events such as attempts to access blocked sites or services.

To set up email notifications:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Security > E-mail**.

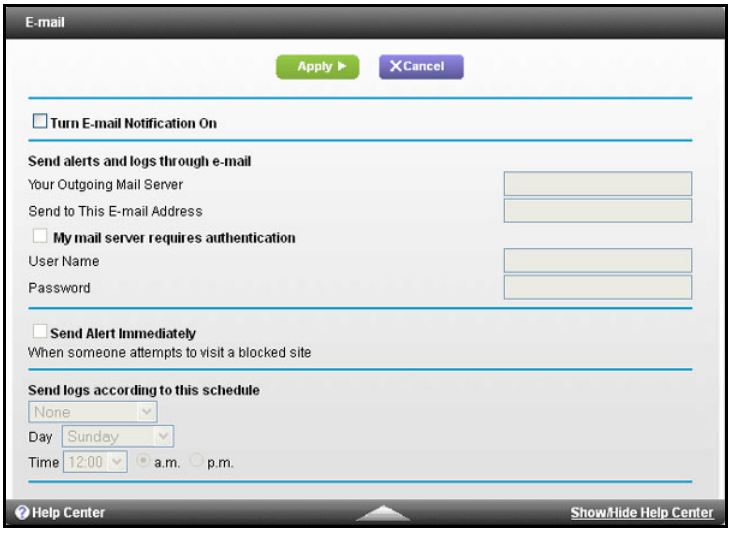

5. Select the **Turn Email Notification On** check box.
6. In the **Your Outgoing Mail Server** field, enter the name of your ISP outgoing (SMTP) mail server (such as mail.myISP.com).

   You might be able to find this information in the configuration screen of your email program. If you leave this field blank, log and alert messages are not sent.
7. Enter the email address to which logs and alerts are sent in the **Send to This E-mail Address** field.

   This email address is also used for the **From** address. If this field is blank, log and alert messages are not sent.
8. If your outgoing email server requires authentication, select the **My Mail Server requires authentication** check box.
   a. In the **User Name** field, type the user name for the outgoing email server.
   b. In the **Password** field, type the password for the outgoing email server.
9. (Optional) Select the **Send Alerts Immediately** check box.

   Email alerts are sent immediately when someone attempts to visit a blocked site.
10. To send logs based on a schedule, specify these settings:
    - From **Send logs according to this schedule** drop-down list, select the schedule type.
    - From the **Day** drop-down list, select the day.
    - From the **Time** drop-down list, select the time, and select the **am** or **pm** radio button.
11. Click the **Apply** button.

    Your settings are saved.

    Logs are sent automatically. If the log fills up before the specified time, it is sent. After the log is sent, it is cleared from the modem router memory. If the modem router cannot email the log and the log buffer fills up, the modem router overwrites the log.

5

Share USB Devices Attached to the Modem Router

This chapter describes how to access and configure a USB storage drive attached to your modem router. The USB port on the modem router can be used only to connect USB storage devices like flash drives or hard drives, or a printer. Do not connect computers, USB modems, CD drives, or DVD drives to the modem router USB port.

This chapter contains the following sections:

- USB Drive Requirements
- Access a USB Drive on the Network
- Control Access to the USB Drive
- Use FTP Within the Network
- Add a Network Folder on a USB Drive
- Edit a Network Folder on a USB Drive
- Approve USB Devices
- Access the USB Drive Through the Internet
- Safely Remove a USB Drive

For more information about ReadySHARE features, visit www.netgear.com/readyshare.

USB Drive Requirements

The modem router works with most USB-compliant external flash and hard drives. For the most up-to-date list of USB drives that the modem router supports, visit http://kbserver.netgear.com/readyshare.

Some USB external hard drives and flash drives require you to load the drivers onto the computer before the computer can access the USB device. Such USB devices do not work with the modem router.

The modem router supports the following file system types for full read/write access:

- FAT16, FAT32
- NTFS
- NTFS with compression format enabled
- Ext2, Ext3, Ext4
- XFS
- HFS+

Access a USB Drive on the Network

ReadySHARE lets you access and share a USB drive connected to the modem router USB port. (If your USB drive has special drivers, it is not compatible.)

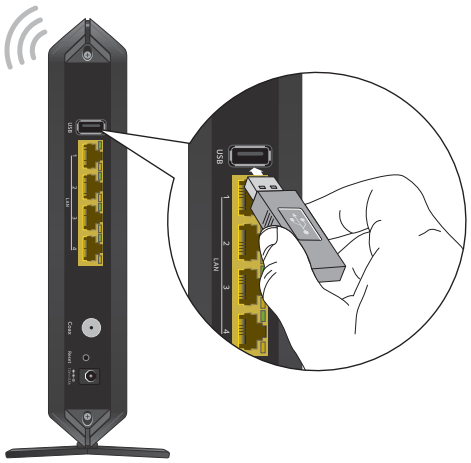


Figure 7. You can share a USB device that is attached to the USB port

To connect a USB drive:

1. Insert your USB storage drive into the USB port on the modem router.

2. If your USB drive has a power supply, you must use it when you connect the USB drive to the modem router.

   When you connect the USB drive to the modem router USB port, it might take up to two minutes before it is ready for sharing. By default, the USB drive is available to all computers on your local area network (LAN).

To access the USB drive from a Mac:

1. Select **Go > Connect to Server**.
2. Enter **smb://readyshare** as the server address.
3. Click the **Connect** button.

To access the USB drive from a Windows computer:

1. Select **Start > Run**.
2. Enter **\\readyshare** in the dialog box and click the **OK** button.

Control Access to the USB Drive

You can specify the device name, workgroups, and network folders for your USB device.

To specify the USB access settings:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > USB Storage > Advanced Settings**.

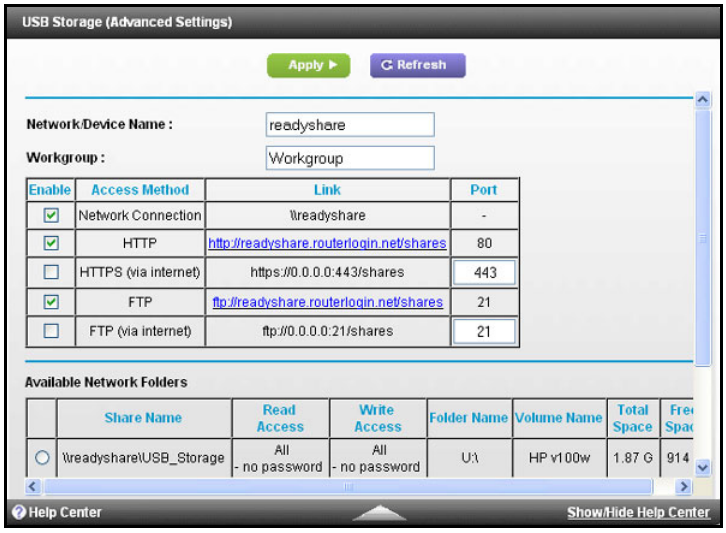

5. Specify access to the USB storage device:
   - **Network Device Name**. This is the name used to access the USB device connected to the modem router. The default is readyshare.
   - **Workgroup**. If you are using a Windows workgroup rather than a domain, the workgroup name is displayed here. The name works only in an operating system that supports NetBIOS, such as Microsoft Windows.
   - **Access Method**. Select the check boxes for the access methods that you want:
     - **Network Neighborhood/MacShare. Enabled by default.**
     - **HTTP**. Enabled by default. You can type **http://readyshare.routerlogin.net/shares** to access the USB drive.
     - **HTTP (via Internet)**. Disabled by default. If you enable this feature, remote users can type **http://***<public IP address/shares>* (for example, http://1.1.10.102/shares) or a URL domain name to access the USB drive over the Internet. This feature supports file uploading only.
     - **FTP**. Disabled by default.
     - **FTP (via Internet)**. Disabled by default. If you select this check box, remote users can access the USB drive through FTP over the Internet. This feature supports both downloading and uploading of files.
6. If you changed the settings, click the **Apply** button.

   Your changes are saved.

Use FTP Within the Network

File Transfer Protocol (FTP) lets you send and receive large files faster.


To set up FTP access:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > USB Storage > Advanced Settings**.

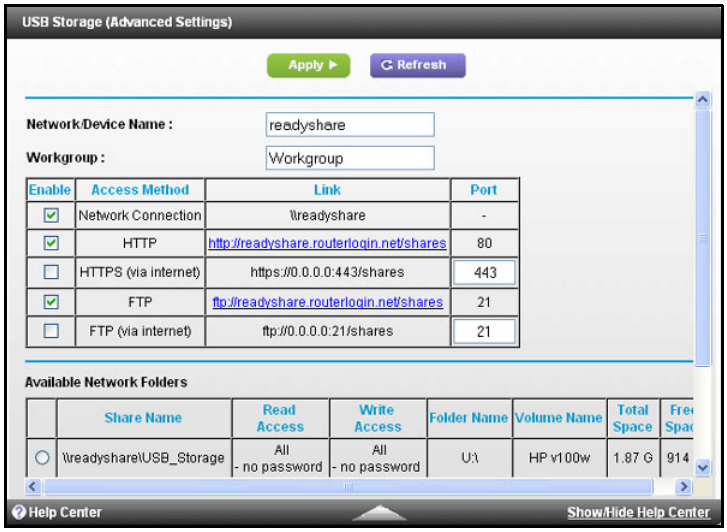

5. Select the **FTP** check box.
6. Click the **Apply** button.

   Your changes are saved.

View Network Folders on a USB Drive

You can view or change the network folders on the USB storage device


To view network folders:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > USB Storage > Advanced Settings**.

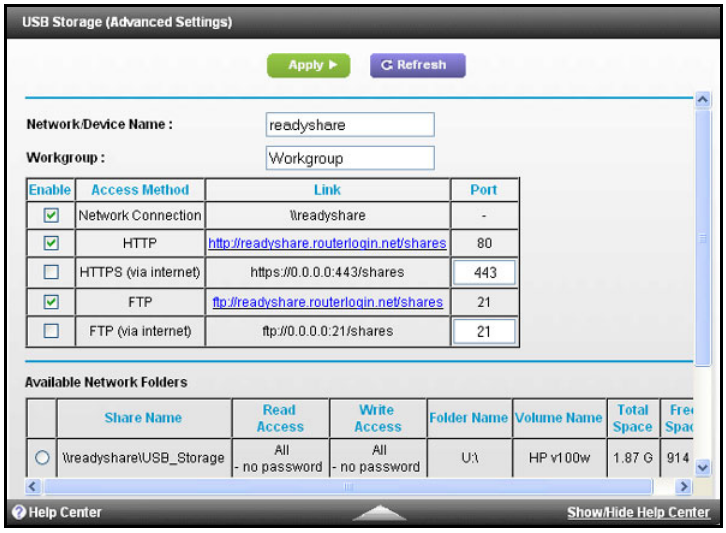

5. Scroll down to the Available Networks Folder section of the screen, and adjust the following settings:
   - **Share Name**. If only one device is connected, the default share name is USB_Storage. (Some modem router models have more than one USB port.)

     You can click the name, or you can type it in the address field of your web browser. If Not Shared is shown, the default share has been deleted, and no other share for the root folder exists. Click the link to change this setting.
   - **Read Access and Write Access**. Show the permissions and access controls on the network folder. All–no password (the default) allows all users to access the network folder. The password for admin is the same one that you use to log in to the modem router.

- **Folder Name**. Full path of the network folder.
- **Volume Name**. Volume name from the storage device (either USB drive or HDD).
- **Total Space and Free Space**. Show the current utilization of the storage device.

Add a Network Folder on a USB Drive

You can add network folders on the USB storage device.

To add a network folder:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > ReadySHARE**.

   The USB Storage (Advanced Settings) screen displays.
5. Click the **Create Network Folder** button.

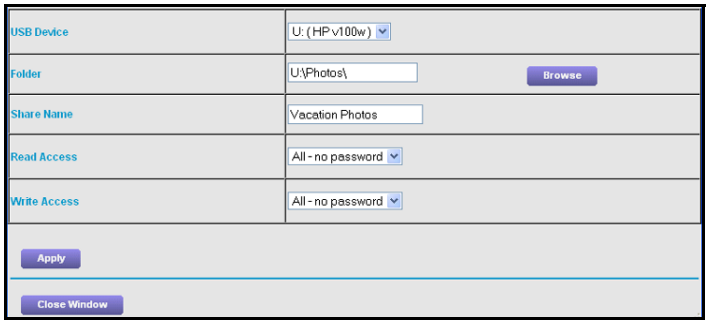

   If this screen does not display, your web browser might be blocking pop-ups. If it is, change the browser settings to allow pop-ups.
6. In the **USB Device list**, select the USB drive.
7. Click the **Browse** button and in the **Folder** field, select the folder.
8. In the **Share Name** field, type the name of the share.
9. In the **Read Access** list and the **Write Access** list, select the settings that you want.

   The user name (account name) for All–no password is guest. The password for admin is the same one that is used to log in to the modem router. By default, it is password.

10. Click the **Apply** button.

    The folder is added on the USB device.

Edit a Network Folder on a USB Drive

You can add network folders on the USB storage device.

To edit a network folder:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > ReadySHARE**.
5. Click the **Edit** button.

   The Edit Network Folder screen displays the same settings shown in the Add a Network Folder screen.
6. Change the settings in the fields as needed.
7. Click the **Apply** button.

   Your changes are saved.

Approve USB Devices

For more security, you can set up the modem router to share only USB devices that you approve.

To approve USB devices:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.


The BASIC Home screen displays.

4. Select **ADVANCED > Advanced Setup > USB Settings.**

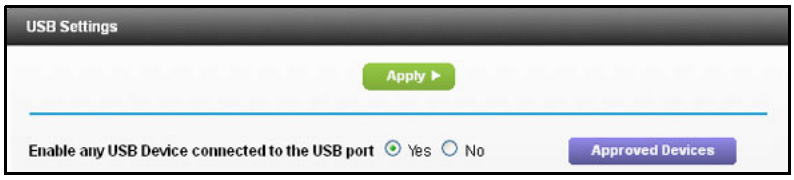

By default the **Enable any USB Device connection to the USB port** radio button is selected. This setting lets you connect and access all your USB drives.

5. Select the **No** radio button.
6. **Click the Approved Devices** button.

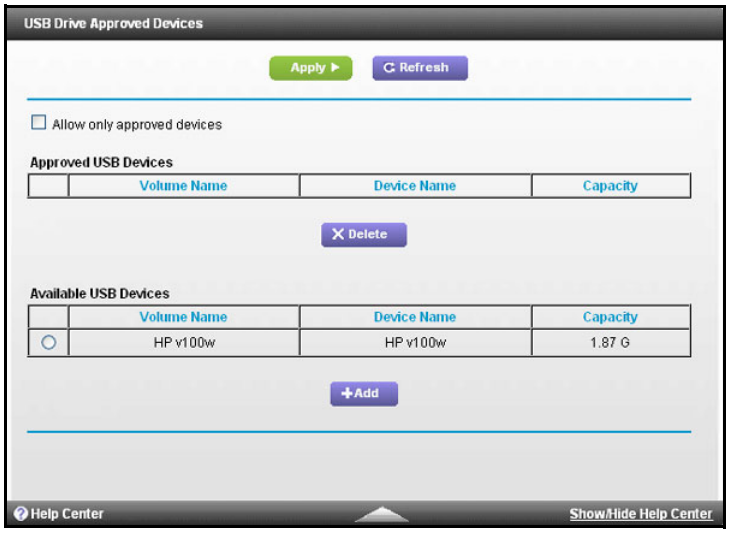

The approved and available USB devices display.

7. In the **Available USB Devices** list, select the drive that you want to approve.
8. Click the **Add** button.
9. Select the **Allow only approved devices** check box.
10. Click the **Apply** button.

    Your change takes effect.

11. To work with another USB device, first click the **Safely Remove USB Device** button for the currently connected USB device. Connect the other USB device, and repeat this process.

Access the USB Drive Through the Internet

You can access the USB drive through the Internet when you're not home.

To access the USB drive from a remote computer:

1. Launch a web browser on a computer that is not on your home network.
2. Connect to your modem router:
   - To connect with Dynamic DNS, type the DNS name.

     To use a Dynamic DNS account, you must enter the account information in the Dynamic DNS screen. See Dynamic DNS on page 93.
   - To connect without Dynamic DNS, type the modem router's Internet port IP address.

   You can view the modem router's Internet IP address on the BASIC Home screen.

You can use FTP to share files on a USB drive connected to the modem router.

Set Up FTP Access Through the Internet

To set up FTP access:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.


   The BASIC Home screen displays.

4. Select **ADVANCED > USB Storage > Advanced Settings**.

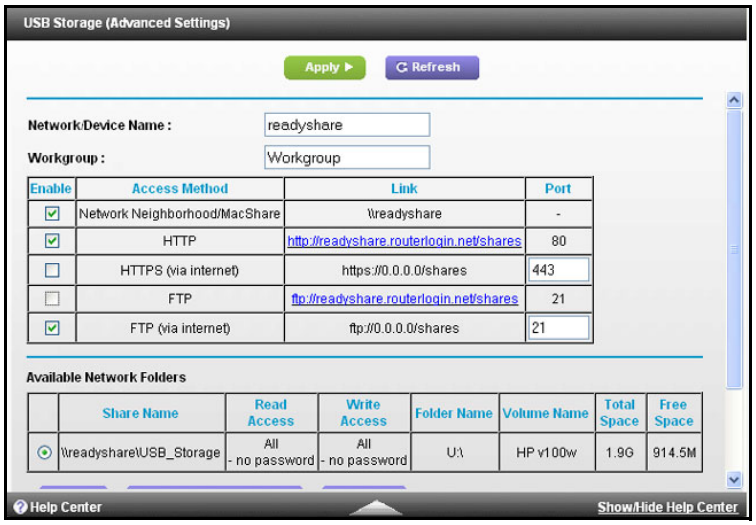

5. Select the **FTP (via Internet)** check box.
6. Click the **Apply** button.

   Your changes are saved.
7. To limit access to the admin user, click the **Edit** button.

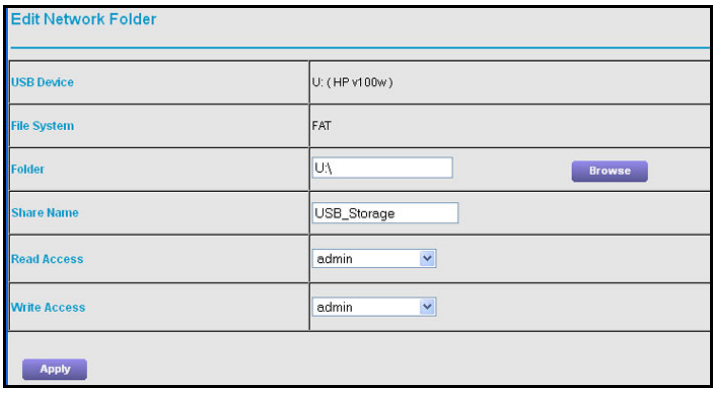

8. In the **Read Access** list, select **admin**.
9. In the **Write Access** list, select **admin**.
10. Click the **Apply** button.

    Your changes are saved.

Access the USB Drive Through the Internet with FTP

You must first set up FTP via Internet access as described in the previous section.

To access the USB drive with FTP from a remote computer:

1. To download, launch an Internet browser.

2. To upload, use an FTP client such as filezilla.
3. Type **ftp://** and the Internet port IP address in the address field of the browser.

   For example, type **ftp://10.1.65.4**.

   If you are using Dynamic DNS, type the DNS name.

   For example, type **ftp://MyName.mynetgear.com**.
4. When prompted, log in:.
   - To log in as admin, in the user name field, type **admin** and in the password field, type the same password that you use to log in to the modem router.
   - To log in as guest, in the user name field, enter **guest**.

     The guest user name does not have a password. To restrict access to the USB drive, you can specify that only the admin user can access it. See Approve USB Devices on page 47.

   The files and folders of the USB drive that your account has access to display. For example, you might see `share/partition1/directory1`.

Safely Remove a USB Drive

Before you physically disconnect a USB drive from the modem router USB port, log in to the modem router and take the drive offline.

To remove a USB disk drive safely:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **USB Storage > Basic Settings**.
5. Click the **Safely Remove USB Device** button.

   This takes the drive offline.
6. Physically disconnect the USB drive.

6

Share a USB Printer

The ReadySHARE Printer utility lets you share a USB printer that is connected to the USB port on your modem router. You can share this USB printer among the Windows and Mac computers on your network.

This chapter contains the following sections:

- Install the Printer Driver and Cable the Printer
- Download the ReadySHARE Printer Utility
- Install the ReadySHARE Printer Utility
- Use the Shared Printer
- View or Change the Status of a Printer
- Use the Scan Feature of a Multifunction USB Printer
- Change NETGEAR USB Control Center Settings

Install the Printer Driver and Cable the Printer


Some USB printer manufacturers (for example, HP and Lexmark printers) request that you do not connect the USB cable until the installation software prompts you to do so.

To install the driver and cable the printer:

1. On each computer on your network that shares the USB printer, install the driver software for the USB printer.

   If you do not have the printer driver, contact the printer manufacturer.

2. Use a USB printer cable to connect the USB printer to the modem router USB port.

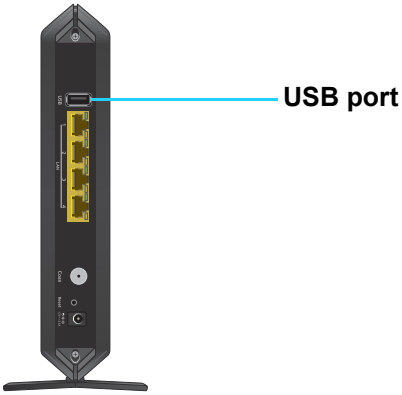

Download the ReadySHARE Printer Utility

The utility works on Windows and Mac computers.

To download the utility:

1. Visit www.netgear.com/readyshare.
2. Scroll down to the Print From the Comfort of Your Home Network section at the bottom of the screen.
3. Click one of the following links.
   - **Download PC installer and get started**. This is the utility for Windows computers.
   - **Download Mac installer and get started**. This is the utility for MAC computers.
4. Follow the onscreen instructions to download the ReadySHARE Printer utility setup file and install.


Install the ReadySHARE Printer Utility

You must install the ReadySHARE Printer utility on each computer that will share the printer. After you install it, the utility displays as NETGEAR USB Control Center on your computer.

To install the utility:

1. Double-click the ReadySHARE Printer utility setup file that you downloaded.

   The InstallShield wizard displays.

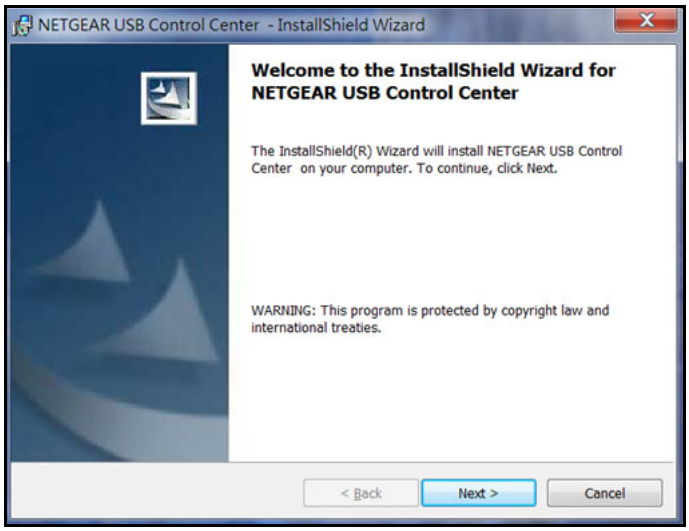


2. Follow the wizard instructions to install NETGEAR USB Control Center.

   After the InstallShield Wizard completes the installation, the NETGEAR USB Control Center prompts you to select a language:



3. Select a language from the list and click the **OK** button.

The NETGEAR USB Control Center displays the main screen.

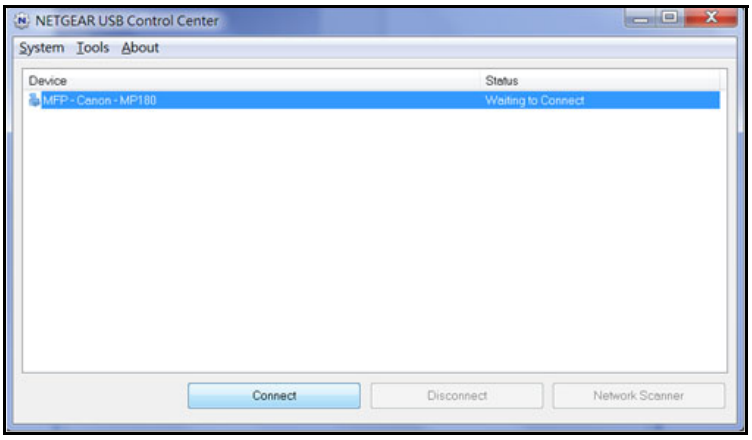

Some firewall software, such as Comodo, blocks NETGEAR USB Control Center from accessing the USB printer. If you do not see the USB printer displayed in the screen, you can disable the firewall temporarily to allow the utility to work.

4. Select the printer and click the **Connect** button.

   The printer status changes to Manually connected by *Mycomputer*. Now, only your computer can use the printer.

5. Click the **Disconnect** button.

   The status changes to Available. Now all computers on the network can use the printer.

6. To exit the utility, select **System > Exit**.

Use the Shared Printer

For each computer, after you click the **Connect** and **Disconnect** buttons once, the utility automatically manages the printing queue and handling. By default, the utility starts automatically whenever you log on to Windows and runs in the background.

To manually connect and print:

1. Click the NETGEAR USB Control Center icon .

   The main screen displays.

2. Click the **Connect** button.

   The printer status changes to Manually connected by *Mycomputer*. Now, only the computer you are using can use this printer.

3. Use the print feature in your application to print your document.
4. To release the printer so that all computers on the network can use it, click the **Disconnect** button.

To print and release the printer to any computer on the network:

1. To print your document, use the print feature in your application.

   The NETGEAR USB Control Center automatically connects your computer to the USB printer and prints the document. If another computer is already connected to the printer, your print job goes into a queue to wait to be printed.


2. If your document does not print, use the NETGEAR USB Control Center to check the status.

View or Change the Status of a Printer

To view or change the status:

1. Click the NETGEAR USB Control Center icon .

   The main screen displays.

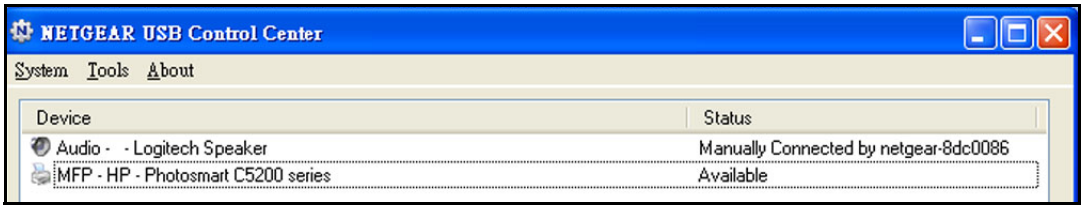

   The Status column shows the status for each device:

   - **Available**. No print jobs are in process. You can use the USB printer from any computer in the network.
   - **Connected**. Your computer is connected to the printer and will be released when your print job is done.
   - **Manually Connected by**. Only the connected computer can use the printer.
   - **Waiting to Connect**. Your computer is not connected to the shared printer yet.

2. To print from your computer when the status shows Manually connected by to another computer, click the **Disconnect** button.

   The printer is released from the connection and the status changes to `Available`.

3. To print from your computer when the status shows Waiting to Connect:

   a. Click the **Connect** button.


      The printer status changes to Manually connected by *Mycomputer*. Now, only your computer can use the printer.

   b. To allow the printer to be shared, click the **Disconnect** button.

      The printer is released from the connection and the status changes to Available.


Use the Scan Feature of a Multifunction USB Printer

If your USB printer supports scanning, you can also use the USB printer for scanning. For example, the USB printer displayed in the Windows Printers and Faxes window is ready for print jobs.

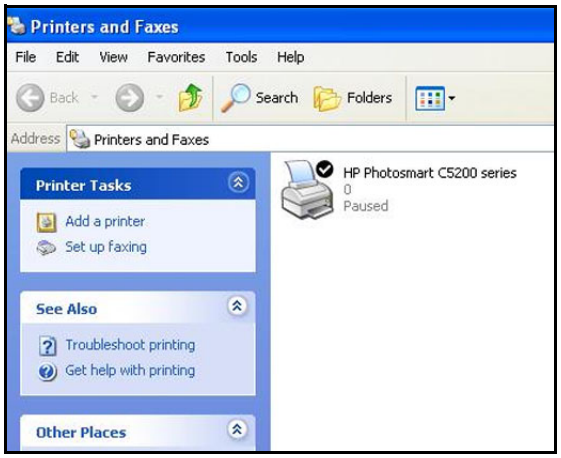

To use the scan feature of a multifunction USB printer:

1. Launch the NETGEAR USB Control Center.
2. Make sure that the printer status shows as Available.
3. Click the **Network Scanner** button.

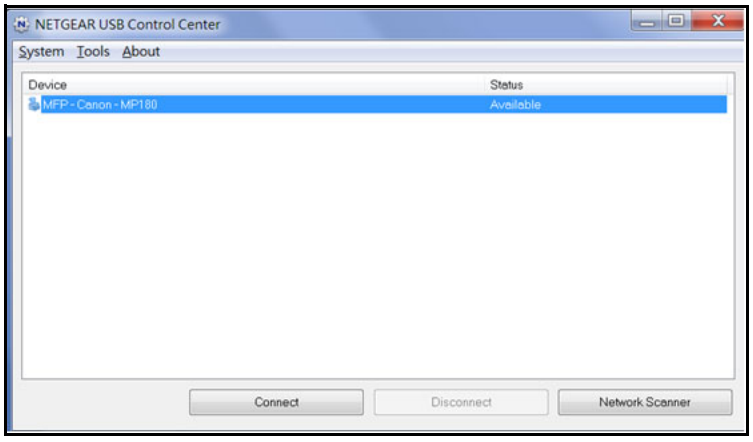


The scanner screen displays so that you can use the USB printer for scanning.

Change NETGEAR USB Control Center Settings

You can stop the NETGEAR USB Control Center from starting automatically when you log in to Windows. You can also change the language and specify the time-out to release the printer connection.

To turn off automatic NETGEAR USB Control Center startup:

1. Select **Tools > Configuration**.

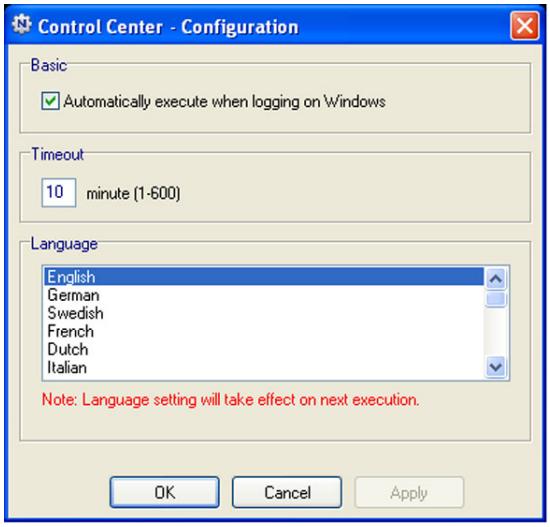

2. Clear the **Automatically execute when logging on Windows** check box.
3. Click the **OK** button.

   Your change is saved.

To change the language:

1. Select **Tools > Configuration**.
2. In the **Language** list, select a language.
3. Click the **OK** button.

   The next time NETGEAR USB Control Center starts, the language changes.

To specify the time-out:

1. Select **Tools > Configuration**.
2. In the **Timeout** field, type the number of minutes.

   The time-out is the number of minutes that a computer holds its connection to the printer when the connection isn't being used.

3. Click the **OK** button.

   Your change is saved.

7

Specify Network Settings

This chapter includes the following sections:

- View WAN Settings
- Set Up a Default DMZ Server
- Change the Modem Router's Device Name
- Change the LAN TCP/IP Settings
- Specify the IP Addresses that the Modem Router Assigns
- Disable the DHCP Server Feature in the Modem Router
- Reserve LAN IP Addresses
- Use the WPS Wizard for WiFi Connections
- Specify Basic WiFi Settings
- Change the WiFi Security Option
- Set Up a Guest Network
- Control the Wireless Radios
- Set Up a Wireless Schedule
- Specify WPS Settings

View WAN Settings

You can view or configure wide area network (WAN) settings for the Internet port. You can set up a DMZ (demilitarized zone) server, change the maximum transmit unit (MTU) size, and enable the modem router to respond to a ping to its WAN (Internet) port.


To view the WAN settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. **Select ADVANCED > Setup > WAN Setup.**

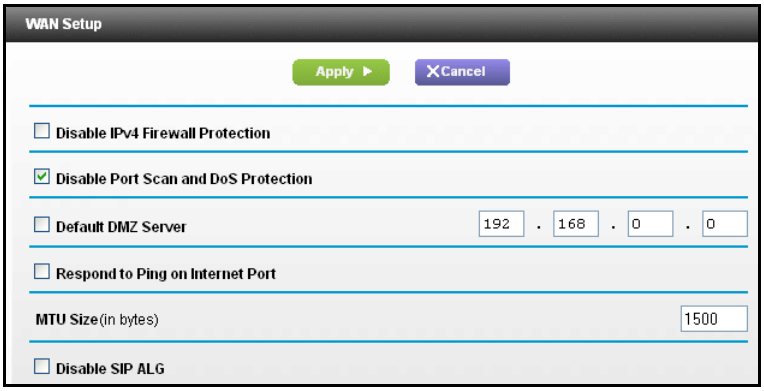

The following settings display:

- **Disable IPv4 Firewall Protection**. NETGEAR recommends that you leave this check box empty so that the firewall protects your modem router.
- **Disable Port Scan and DoS Protection**. DoS protection protects your LAN against denial of service attacks such as Syn flood, Smurf Attack, Ping of Death, and many others. Select this check box only in special circumstances.
- **Default DMZ Server**. This feature is disabled by default. It is sometimes helpful when you are playing online games or videoconferencing, but it makes the firewall security less effective. See Set Up a Default DMZ Server on page 62.
- **Respond to Ping on Internet Port**. This feature allows your modem router to be discovered. Use this feature only as a diagnostic tool or if you have a specific reason.
- **MTU Size (in bytes)**. The normal MTU (maximum transmit unit) value for most Ethernet networks is 1500 bytes, or 1492 bytes for PPPoE connections. Change the

MTU only if you are sure that it is necessary for your ISP connection. See Change the MTU Size on page 30.

- **Disable SIP ALG**. Some VoIP applications do not work well with the SIP ALG. Selecting this check box to turn off the SIP ALG might help your VoIP devices to create or accept a call through the modem router.

5. Click the **Apply** button.

   Your changes are saved.

Set Up a Default DMZ Server

The default DMZ server feature is helpful when you are using some online games and videoconferencing applications that are incompatible with Network Address Translation (NAT). The modem router is programmed to recognize some of these applications and to work correctly with them, but other applications might not function well. In some cases, one local computer can run the application correctly if the IP address for that computer is entered as the default DMZ server.



WARNING:

DMZ servers pose a security risk. A computer designated as the default DMZ server loses much of the protection of the firewall and is exposed to exploits from the Internet. If compromised, the DMZ server computer can be used to attack other computers on your network.

The modem router usually detects and discards incoming traffic from the Internet that is not a response to one of your local computers or a service that you have configured in the Port Forwarding/Port Triggering screen. Instead of discarding this traffic, you can have the modem router forward the traffic to one computer on your network. This computer is called the default DMZ server.

To set up a default DMZ server:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Setup > WAN Setup**.
5. Select the **Default DMZ Server** check box.
6. Type the IP address.
7. Click the **Apply** button.

   Your change takes effect.

Change the Modem Router's Device Name

The modem router's device name is C7000. This device name displays in file manager when you browse your network.

To change the modem router's device name:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Setup > LAN Setup**.
5. In the Device Name field, type a new name.
6. Click the **Apply** button.

   Your change is saved.

Change the LAN TCP/IP Settings

The modem router is preconfigured to use private IP addresses on the LAN side and to act as a DHCP server. The modem router's default LAN IP configuration is as follows:

- **LAN IP address**. 192.168.0.1
- **Subnet mask**. 255.255.255.0

These addresses are part of the designated private address range for use in private networks and are suitable for most applications. If your network requires a different IP addressing scheme, you can change these settings

You might want to change these settings if you need a specific IP subnet that one or more devices on the network uses, or if you have competing subnets with the same IP scheme.


To change the LAN TCP/IP settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Setup > LAN Setup**.

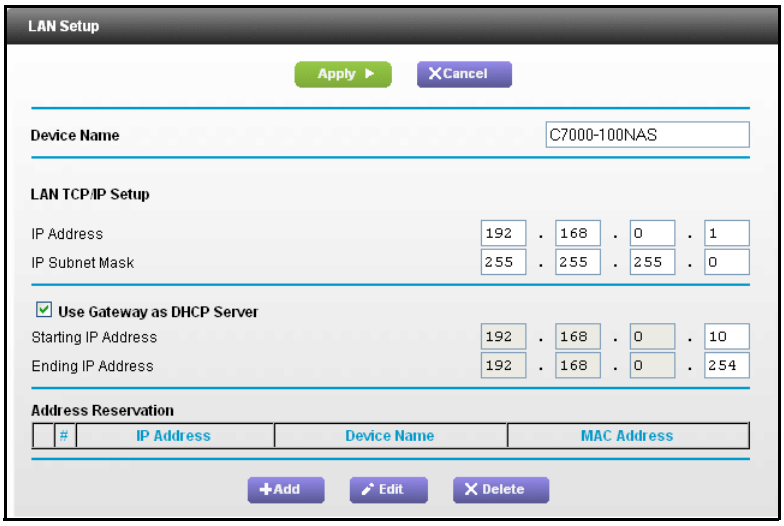

5. In the I**P Address** field, type the IP address.
6. In the **IP Subnet Mask**, type the subnet mask of the modem router.

   The IP address and subnet mask identifies which addresses are local to a specific device and which must be reached through a gateway or modem router.
7. Click the **Apply** button.

   Your changes are saved.

   If you changed the LAN IP address of the modem router, you are disconnected when this change takes effect.
8. To reconnect, close your browser, relaunch it, and log in to the modem router

Specify the IP Addresses that the Modem Router Assigns

By default, the modem router acts as a Dynamic Host Configuration Protocol (DHCP) server. The modem router assigns IP, DNS server, and default gateway addresses to all computers connected to the LAN. The assigned default gateway address is the LAN address of the modem router.

These addresses must be part of the same IP address subnet as the modem router's LAN IP address. Using the default addressing scheme, define a range between 192.168.0.2 and 192.168.0.254, although you can save part of the range for devices with fixed addresses.


To specify the pool of IP addresses that the modem router assigns:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Setup > LAN Setup**.

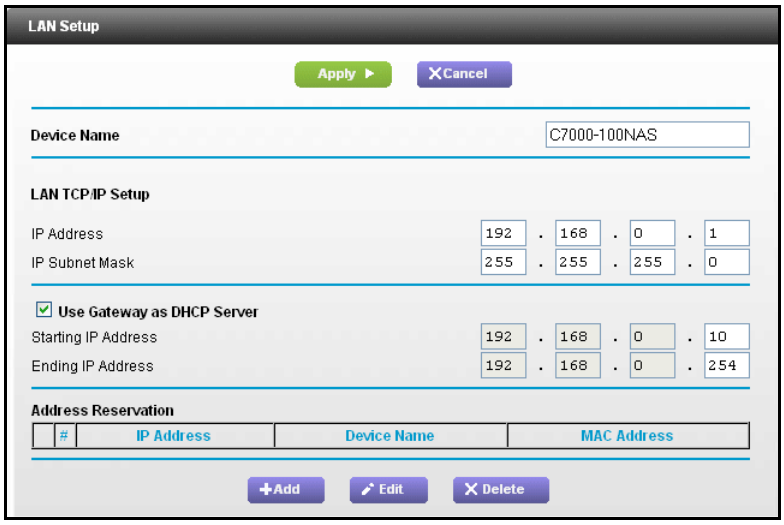

5. Make sure that the **Use Router as DHCP Server** check box is selected.
6. Specify the range of IP addresses that the modem router assigns:
   a. In the **Starting IP Address** field, type the lowest number in the range.

This IP address must be in the same subnet as the modem router.

b. In the **Ending IP Address** field, type the number at the end of the range of IP addresses.

This IP address must be in the same subnet as the modem router.

7. Click the **Apply** button.

Your settings are saved.

The modem router delivers the following parameters to any LAN device that requests DHCP:

- An IP address from the range that you have defined
- Subnet mask
- Gateway IP address (the modem router's LAN IP address)
- DNS server IP address (the modem router's LAN IP address)

Disable the DHCP Server Feature in the Modem Router

By default, the modem router acts as a DHCP server. The modem router assigns IP, DNS server, and default gateway addresses to all computers connected to the LAN. The assigned default gateway address is the LAN address of the modem router.

You can use another device on your network as the DHCP server, or specify the network settings of all your computers.

To disable the DHCP server feature in the modem router:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Setup > LAN Setup.**
5. Clear the **Use Router as DHCP Server** check box.
6. Click the **Apply** button.
7. (Optional) If this service is disabled and no other DHCP server is on your network, set your computer IP addresses manually so that they can access the modem router.

Reserve LAN IP Addresses

When you specify a reserved IP address for a computer on the LAN, that computer always receives the same IP address each time it accesses the modem router's DHCP server. Assign reserved IP addresses to computers or servers that require permanent IP settings.

To reserve an IP address:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Setup > LAN Setup**.
5. In the Address Reservation section of the screen, click the **Add** button.
6. In the **IP Address** field, type the IP address to assign to the computer or server.

   Choose an IP address from the modem router's LAN subnet, such as 192.168.0.x.
7. Type the MAC address of the computer or server.

   Tip: If the computer is already on your network, you can copy its MAC address from the Attached Devices screen and paste it here.
8. Click the **Apply** button**.**

   The reserved address is entered into the table.

The reserved address is not assigned until the next time the computer contacts the modem router's DHCP server. Reboot the computer, or access its IP configuration and force a DHCP release and renew.

To edit a reserved address entry:

1. Select the radio button next to the reserved address.
2. Click the **Edit** button.
3. Change the settings.
4. Click the **Apply** button.

   Your changes are saved.

To delete a reserved address entry:

1. Select the radio button next to the reserved address.
2. Click the **Delete** button.

   The address is removed.

Improve Network Connections with Universal Plug and Play

Universal Plug and Play (UPnP) helps devices, such as Internet appliances and computers, access the network and connect to other devices as needed. UPnP devices can automatically discover the services from other registered UPnP devices on the network.

If you use applications such as multiplayer gaming, peer-to-peer connections, or real-time communications such as instant messaging or remote assistance (a feature in Windows XP), enable UPnP.

To enable Universal Plug and Play:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > UPnP**.

   The UPnP screen displays.
5. Select the **Turn UPnP On** check box.

   By default, this check box is selected. UPnP for automatic device configuration can be enabled or disabled. If the Turn UPnP On check box is cleared, the modem router **does not allow any device to automatically control** modem router **resources, such as port forwarding.**
6. **Type the advertisement period in minutes.**

   The advertisement period specifies how often the modem router **broadcasts its UPnP information. This value can range from 1 to 1440 minutes. The default period is 30 minutes. Shorter durations ensure that control points have current device status at the expense of more network traffic. Longer durations can compromise the freshness of the device status, but can significantly reduce network traffic.**

7. **Type the advertisement time to live in hops.**

   The time to live for the advertisement is measured in hops (steps) for each UPnP packet sent. Hops are the steps a packet takes between routers. The number of hops can range from 1 to 255. The default value for the advertisement time to live is 4 hops, which should be fine for most home networks. If you notice that some devices are not being updated or reached correctly, it might be necessary to increase this value.

8. **Click the Apply button.**

   The UPnP Portmap Table displays the IP address of each UPnP device that is accessing the modem router **and which ports (internal and external) that device has opened. The UPnP Portmap Table also displays what type of port is open and whether that port is still active for each IP address.**

   To refresh the information in the UPnP Portmap table, click the Refresh button.

Use the WPS Wizard for WiFi Connections

The WPS Wizard helps you add a wireless computer or device to your WiFi network without typing the WiFi password.

To use the WPS Wizard:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > WPS Wizard**.
5. Click the **Next** button.
6. Select the radio button for the setup method that you want to use:.
   - **Push button**. Click the **WPS** button on this screen.
   - **PIN Number**. The screen adjusts. Enter the client security PIN, and click the **Next** button.
7. Within two minutes, go to the client device and use its WPS software to connect to the WiFi network.

   The WPS process automatically sets up your wireless computer with the network password when it connects. The modem router WPS screen displays a confirmation message.

Specify Basic WiFi Settings

The modem router comes with preset security. This means that the WiFi network name (SSID), network key (password), and security option (encryption protocol) are preset in the factory. You can find the preset SSID and password on the product label.

Note: The preset SSID and password are uniquely generated for every device to protect and maximize your wireless security.

NETGEAR recommends that you do not change your preset security settings. If you change your preset security settings, make a note of the new settings and store it in a safe place where you can easily find it.

If you use a wireless computer to change the wireless network name (SSID) or other wireless security settings, you are disconnected when you click the **Apply** button. To avoid this problem, use a computer with a wired connection to access the modem router.

To specify basic wireless settings:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **Wireless**.

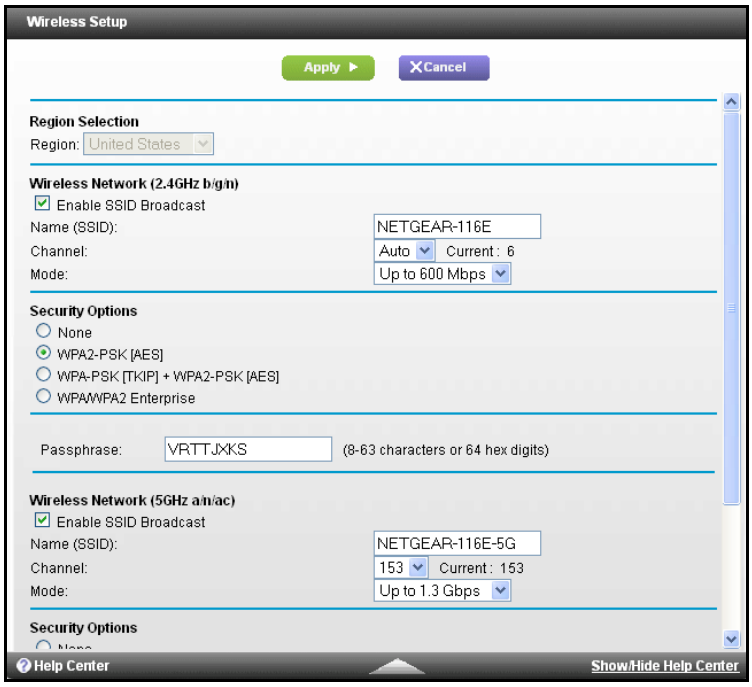

5. In the **Region** list, select your region. In some locations, you cannot change this setting.
6. To control the SSID broadcast, select or clear the **Enable SSID Broadcast** check box.

   When this check box is selected, the modem router broadcasts its network name (SSID) so that it displays when you scan for local WiFi networks on your computer or wireless device.
7. To change the network name (SSID), type a new name in the **Name (SSID)** field.

   The name can be up to 32 characters long and it is case-sensitive. The default SSID is randomly generated and is on the product label. If you change the name, make sure to write down the new name and keep it in a safe place.
8. To change the wireless channel, select a number in the **Channel** list.

   In some regions, not all channels are available. Do not change the channel unless you experience interference (shown by lost connections or slow data transfers). If this happens, experiment with different channels to see which is the best.

   When you use multiple access points, it is better if adjacent access points use different channels to reduce interference. The recommended channel spacing between adjacent access points is four channels (for example, use Channels 1 and 5, or 6 and 10).
9. To change the mode, select it from the Mode list.

   For 2.4 GHz, **Up to 600 Mbps** is the default setting. The other settings are **Up to 289 Mbps** and **Up to 54 Mbps**.

   At 5 GHz, **Up to 1300 Mbps** is the default setting, which allows 802.11ac and 802.11a wireless devices to join the network. The other settings are **Up to 600 Mbps** and **Up to 289 Mbps**.

10. Click the **Apply** button.

    Your settings are saved.

    If you connected wirelessly to the network and you changed the SSID, you are disconnected from the network.

11. Make sure that you can connect wirelessly to the network with its new settings.

    If you cannot connect wirelessly, check the following:

    - Is your computer or wireless device connected to another wireless network in your area? Some wireless devices automatically connect to the first open network without wireless security that they discover.
    - Is your computer or wireless device trying to connect to your network with its old settings (before you changed the settings)? If so, update the wireless network selection in your computer or wireless device to match the current settings for your network.

Change the WiFi Security Option

Your modem router comes with preset WPA2 or WPA security. The password that you enter to connect to your network is unique to your modem router and is on the product label. **NETGEAR recommends that you use the preset security, but you can change them. NETGEAR recommends that you do not disable security**.

To change the WPA settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **Wireless**.
5. Under **Security Options**, select a WPA option.

   The WPA2 options use the newest standard for the strongest security, but some older computers and wireless devices cannot use WPA2. By default, the **WPA2-PSK [AES]** radio button is selected.

   The Passphrase field displays.
6. In the **Passphrase** field, enter the network key (password) that you want to use.

It is a text string from 8 to 63 characters.

7. Write down the new password and keep it in a secure place for future reference.
8. Click the **Apply** button.

   Your changes are saved.

Set Up a Guest Network

A guest network allows visitors at your home to use the Internet without using your wireless security key. You can add a guest network to each wireless network: 2.4 GHz b/g/n and 5.0 GHz a/n.


To set up a guest network:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **Guest Network**.

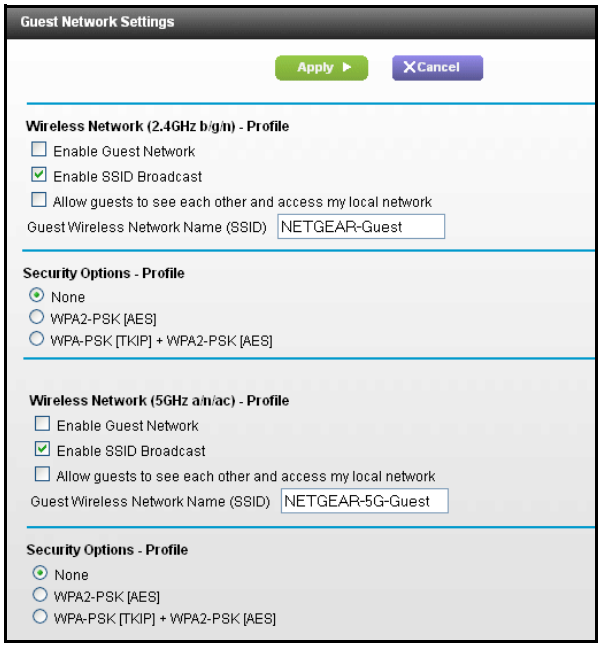

5. Select any of the following wireless settings:
   - **Enable Guest Network**. When this check box is selected, the guest network is enabled, and guests can connect to your network using the SSID of this profile.
   - **Enable SSID Broadcast**. If this check box is selected, the wireless access point broadcasts its name (SSID) to all wireless stations. Stations with no SSID can adopt the correct SSID for connections to this access point.
   - **Allow guest to see each other and access my local network**. If this check box is selected, anyone who connects to this SSID has access to your local network, not just Internet access.
6. Give the guest network a name.

   The guest network name is case-sensitive and can be up to 32 characters. You then manually configure the wireless devices in your network to use the guest network name in addition to the main SSID.
7. Select a radio button for a security option.

   The WPA2 options use the newest standard for the strongest security, but some older computers and wireless devices cannot use it. NETGEAR recommends that you select the **WPA-PSK [TKIP] + WPA2-PSK [AES]** radio button. This setting protects your WiFi network and lets computers and wireless devices can connect to the WiFi network by using either WPA2 or WPA security.
8. Click the **Apply** button.

   Your settings are saved.

Control the Wireless Radios

The modem router has internal wireless radios that broadcast signals in the 2.4 GHz and 5 GHz range. By default, they are on so that you can connect wirelessly to the modem router. When the wireless radios are off, you can still use an Ethernet cable for a LAN connection to the modem router.

You can turn the wireless radios on and off with the **WiFi On/Off** button on the modem router, or you can log in to the modem router and enable or disable the wireless radios. If you are close to the modem router, it might be easier to press its **WiFi On/Off** button. If you are away from the modem router or have already logged in it might be easier to enable or disable them.You can also turn the WiFi radios off and on based on a schedule. (See Set Up a Wireless Schedule on page 76).

Use the WiFi On/Off Button

To turn the wireless radios off and on with the WiFi On/Off button:

Press the **WiFi On/Off** button on the front of the modem router for two seconds.

If you turned off the wireless radios, the **WiFi On/Off** LED and the **WPS** LED turn off. If you turned on the wireless radios, the **WiFi On/Off** LED and the **WPS** LED light.

Enable or Disable the Wireless Radios

If you used the WiFi On/Off button to turn off the wireless radios, you can't log in to the modem router to turn them back on. You must press the **WiFi On/Off** button again for two seconds to turn the wireless radios back on.


To enable or disable the wireless radios:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Wireless Settings**.

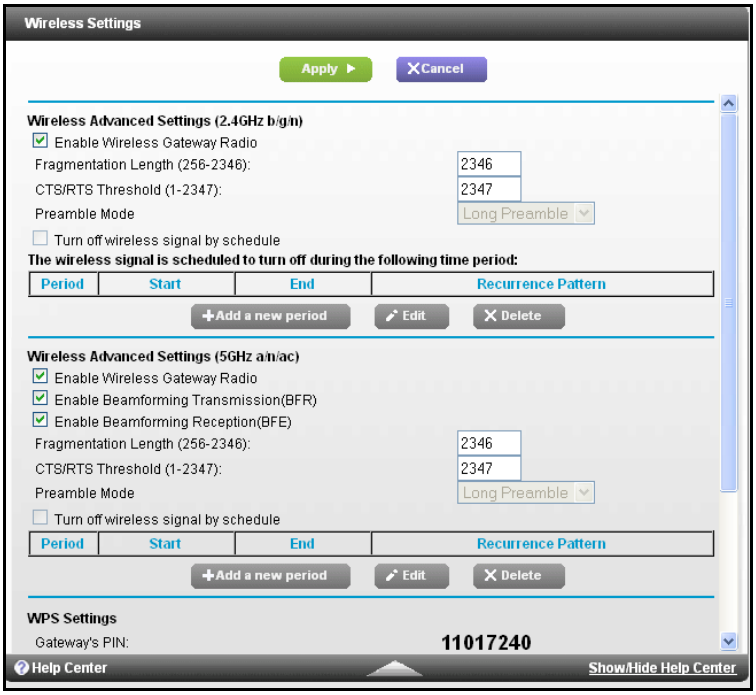

5. Select or clear the **Enable Wireless Gateway Radio** check boxes in the 2.4 GHz and 5 GHz sections of the screen.

   Clearing this check box turns off the WiFi feature of the modem router.

6. Click the **Apply** button.

   If you turned off both wireless radios, the WiFi On/Off LED and the WPS LED turn off. If you turned on the wireless radios, the WiFi On/Off LED and the WPS LED light.

Set Up a Wireless Schedule

You can use this feature to turn off the wireless signal from your modem router at times when you do not need a wireless connection. For example, you might turn it off for the weekend if you leave town.

To set up the wireless schedule:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Wireless Settings**.

   The Advanced Wireless Settings screen displays.
5. Click the **Add a new period** button.

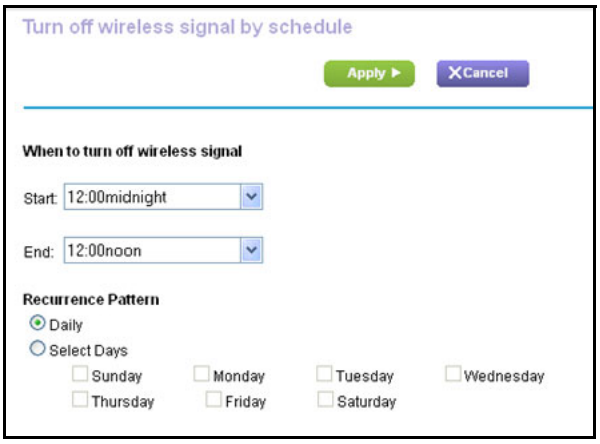

6. Use the lists, radio buttons, and check boxes to set up a period during which you want to turn off the wireless signal.
7. Click the **Apply** button.

   The Advanced Wireless Settings screen displays.

8. Select the **Turn off wireless signal by schedule** check box to activate the schedule.
9. Click the **Apply** button.

Specify WPS Settings

Wi-Fi Protected Setup (WPS) lets you join the WiFi network without typing the WiFi password.

To specify WPS Settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Wireless Settings**.

   The Router's PIN field displays the PIN that you use on a registrar (for example, from the Network Explorer on a Vista Windows computer) to configure the modem router's wireless settings through WPS.
5. (Optional) Select or clear the **Disable Router's PIN** check box.

   The PIN function might temporarily be disabled when the modem router detects suspicious attempts to break into the modem router's wireless settings by using the modem router's PIN through WPS. You can manually enable the PIN function by selecting the **Disable Router's PIN** check box.
6. (Optional) Select or clear the **Keep Existing Wireless Settings** check box.

   By default, the Keep Existing Wireless Settings check box is selected. NETGEAR recommends that you leave this check box selected.

   If you clear this check box, the next time a new wireless client uses WPS to connect to the modem router, the modem router wireless settings change to an automatically generated random SSID and security key.
7. Click the **Apply** button.

   Your changes are saved.

8

Manage Your Network

This chapter describes the modem router settings for administering and maintaining your modem router and home network.

This chapter includes the following sections:

- Change the Admin Password
- View Modem Router Status
- View Logs of Modem Router Activity
- View Event Logs
- Run the Ping Utility
- Run the Traceroute Utility
- Monitor Internet Traffic
- View Devices Currently on the Network
- Manage the Modem Router Configuration File
- View Wireless Access Points in Your Area
- View or Change the Modem Router Wireless Channel
- Dynamic DNS
- Remote Management

Change the Admin Password

This feature let you change the default password that is used to log in to the modem router with the user name admin. This password is not the one that you use for WiFi access. The label on your modem router shows your unique wireless network name (SSID) and password for wireless access.


To set the password for the user name admin:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Administration > Set Password**.

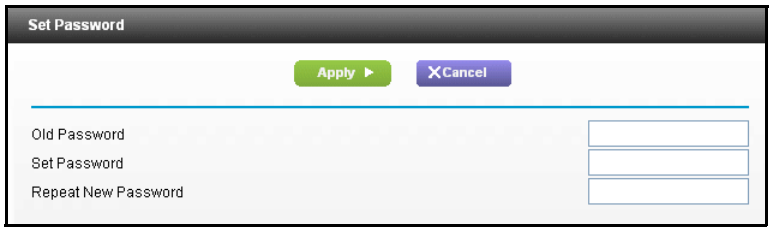

5. Type the old password, and type the new password twice.
6. Click the **Apply** button.

   Your changes take effect.

View Modem Router Status

To view modem router status and usage information:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

The BASIC Home screen displays.

4. Click the **ADVANCED tab**.

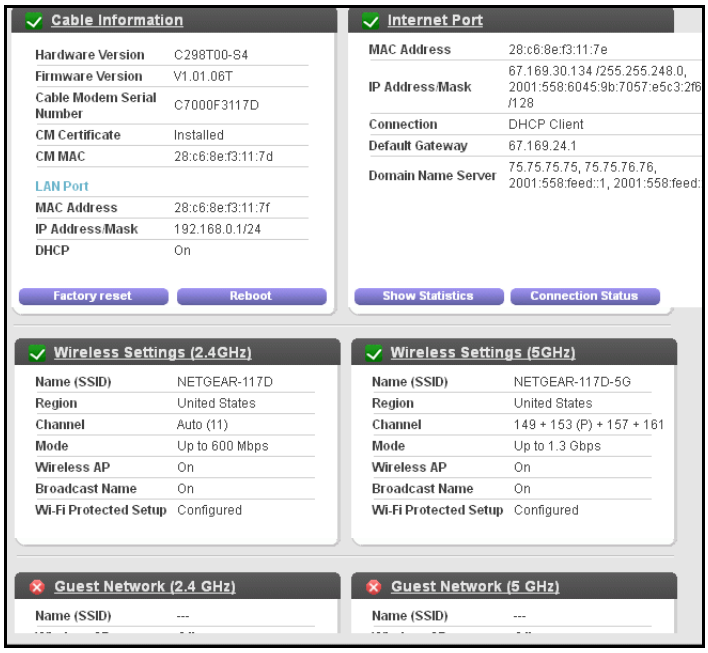

5. For information about the displayed settings, click the **Show/Hide Help Center** link at the bottom of the screen.

Display Internet Port Statistics


To display Internet port statistics:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.
4. The BASIC Home screen displays
5. Click the **ADVANCED** tab.

6. In the Internet Port pane, click **the Show Statistics** button.

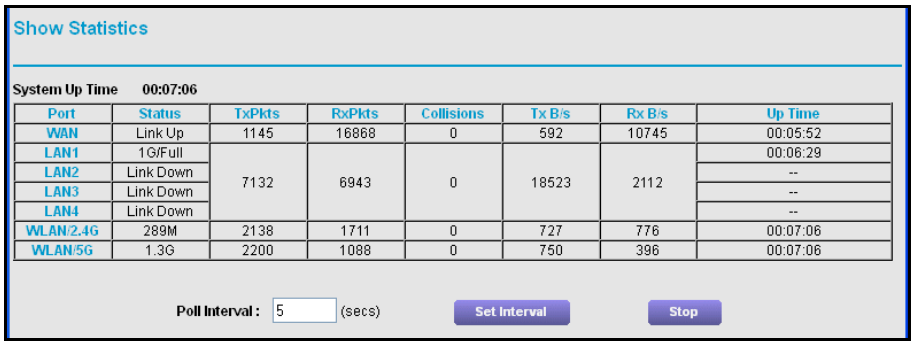

The following information displays:

- **System Up Time**. The time elapsed since the modem router was last restarted.
- **Port**. The statistics for the WAN (Internet) and LAN (Ethernet) ports. For each port, the screen displays:
  - **Status**. The link status of the port.
  - **TxPkts**. The number of packets transmitted on this port since reset or manual clear.
  - **RxPkts**. The number of packets received on this port since reset or manual clear.
  - **Collisions**. The number of collisions on this port since reset or manual clear.
  - **Tx B/s**. The current transmission (outbound) bandwidth used on the WAN and LAN ports.
  - **Rx B/s**. The current reception (inbound) bandwidth used on the WAN and LAN ports.
  - **Up Time**. The time elapsed since this port acquired the link.
  - **Poll Interval**. The interval at which the statistics are updated in this screen.

7. To change the polling frequency, enter a time in seconds in the Poll Interval field and click the **Set Interval** button.
8. To stop the polling entirely, click the **Stop** button.

Check the Internet Connection Status

To check the Internet connection status:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

The BASIC Home screen displays.

4. Click the **ADVANCED** tab.
5. In the Internet Port pane, click the **Connection Status** button.

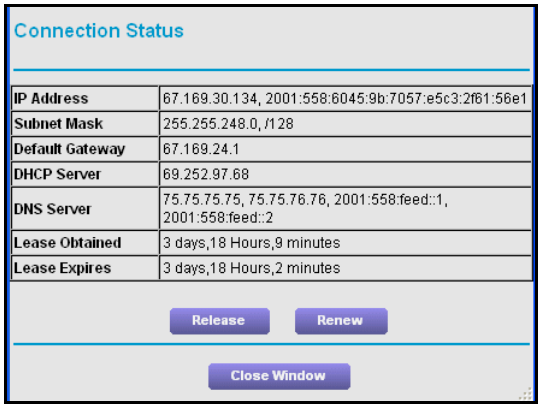

The following information displays:

- **IP Address**. The IP address that is assigned to the modem router.
- **Subnet Mask**. The subnet mask that is assigned to the modem router.
- **Default Gateway**. The IP address for the default gateway that the modem router communicates with.
- **DHCP Server**. The IP address for the Dynamic Host Configuration Protocol server that provides the TCP/IP configuration for all the computers that are connected to the modem router.
- **DNS Server**. The IP address of the Domain Name Service server that provides translation of network names to IP addresses.
- **Lease Obtained**. The date and time when the lease was obtained.
- **Lease Expires**. The date and time that the lease expires.

6. To return the status of all items to 0, click the **Release** button.
7. To refresh the screen, click the **Renew** button.
8. To exit the screen, click the **Close Window** button.

View Logs of Modem Router Activity

The log is a detailed record of the websites you have accessed or attempted to access and other modem router actions. Up to 256 entries are stored in the log. Log entries display only when keyword blocking is enabled and no log entries are made for the trusted user.

To view logs:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.

2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.


   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Administration > Logs**.

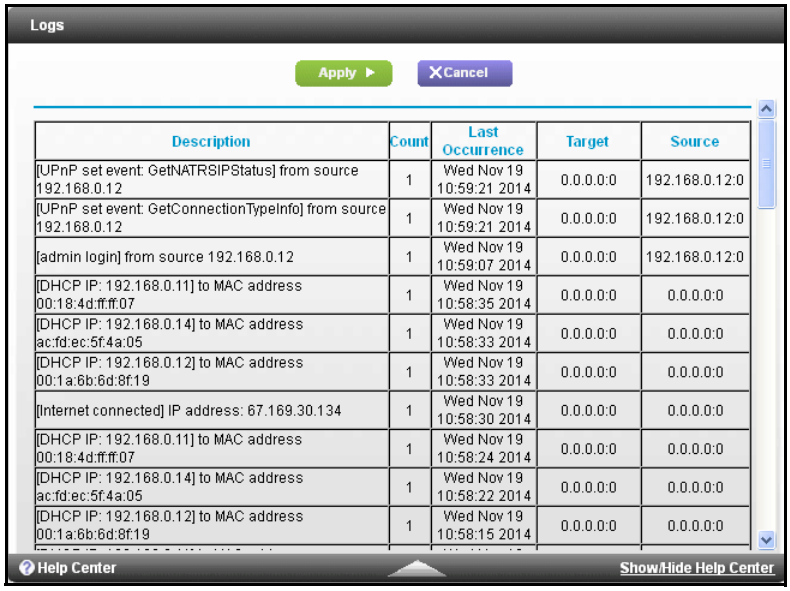

   The log screen shows the following information:

   - **Date and time**. The date and time the log entry was recorded.
   - **Source IP**. The IP address of the initiating device for this log entry.
   - **Target address**. The name or IP address of the website or news group visited or to which access was attempted.
   - **Action**. The action that occurred, such as whether Internet access was blocked or allowed.

5. To customize the log, scroll down to view the bottom of the screen and clear or select the check boxes.
6. To refresh the log screen, click the **Refresh** button.
7. To clear the log entries, click the **Clear Log** button.
8. To email the log immediately, click the **Send Log** button.

View Event Logs

Event logs capture important modem router events.


To view the event logs:

1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Administration > Event Log**.

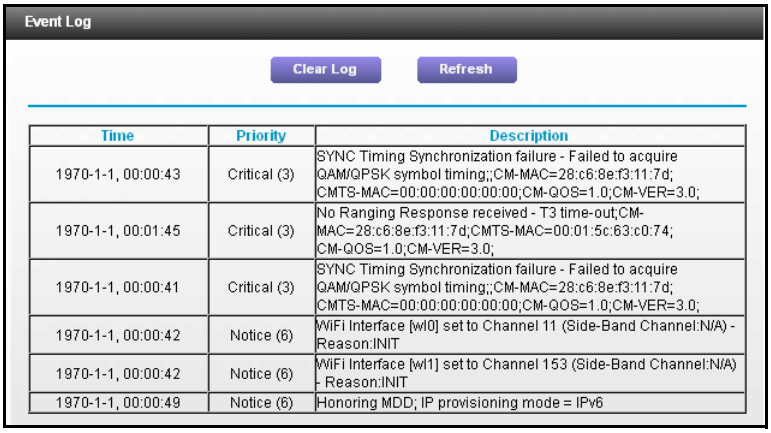

   The log screen shows the following information:

   - **Time**. The time the event log entry was recorded.
   - **Priority**. The severity for this event log entry.
   - **Description**. A description of this event log entry.
5. To refresh the log screen, click the **Refresh** button.

To clear the log entries, click the **Clear Log** button.

Run the Ping Utility

Ping is an administration utility that tests whether a computer on the network is reachable and measures the time it takes messages sent from the originating device to reach a destination computer and return.

To run a ping test:


1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Administration > Diagnostics**.

   In the **Utility** list, **Ping** is selected by default.

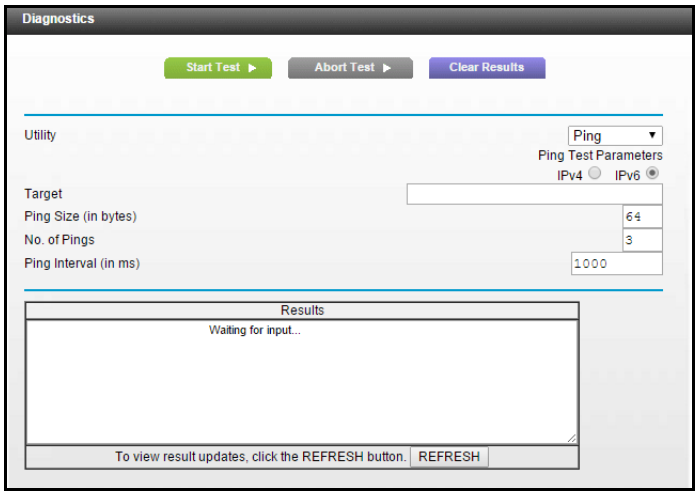

5. Select the Ping Test Parameters **IPv4** or **IPv6** radio button.
6. Specify the following parameters for the ping utility:
   - **Target**. The IP address of the ping target computer.
   - **Ping Size**. The size (in bytes) of the ping packet.
   - **No. of Pings**. The number of times to ping the target computer. The maximum number of pings is 128.
   - **Ping Interval**. The time between pings.
7. Click the **Start Test** button.

The ping results display.

8. To stop a ping test, click the **Abort Test button.**
9. To clear the results from the display, click the **Clear Results button.**

Run the Traceroute Utility

To display the route and measure transit delays of packets across an IP, run the traceroute utility.


To run a traceroute test:

1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Administration > Diagnostics**.
5. In the **Utility** list, select **Traceroute**.

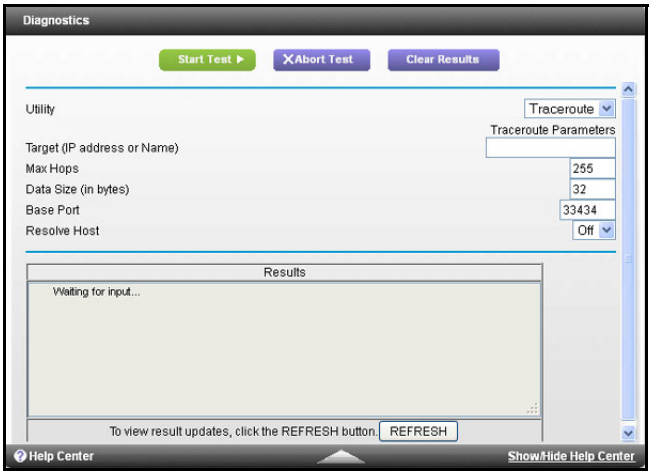

6. Specify the following parameters for the traceroute utility:
   - **Target**. The IP address or host name of the computer you are tracing.
   - **Max Hops**. The maximum number of hops to allow when tracing the route.
   - **Data Size**. The input the size (in bytes) of the packet.
   - **Base Port**. The port number to send the packet to.

- **Resolve Host**. Select **On** to resolve the host name to the IP address.

7. Click the **Start Test** button.

   The traceroute results display.

8. To clear the results from the display, click the **Clear Results button.**

Monitor Internet Traffic

Traffic metering allows you to monitor the volume of Internet traffic that passes through the modem router Internet port. You can set limits for traffic volume.

To monitor Internet traffic:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.


   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Advanced Setup > Traffic Meter**.

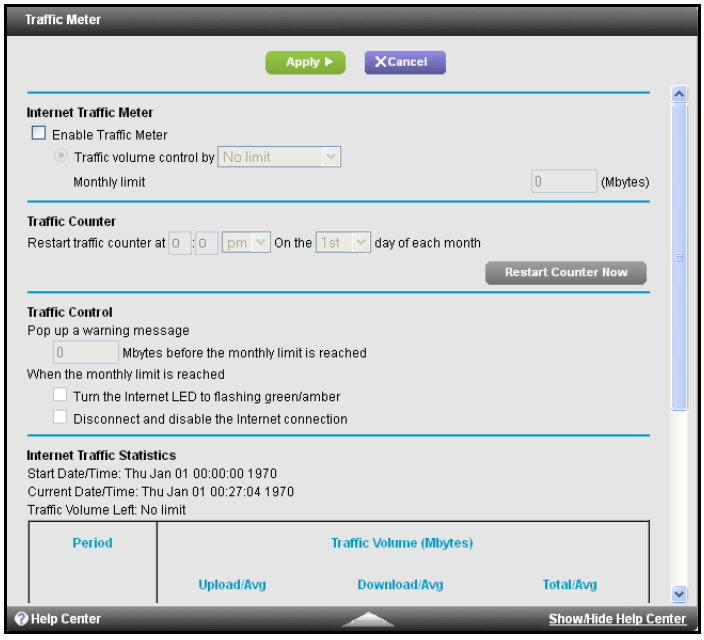

Scroll to view more settings

5. Select the **Enable Traffic Meter** check box.
6. (Optional) Control the volume of Internet traffic.

You can use either the traffic volume control feature or the connection time control feature:

- Select the **Traffic volume control by** radio button and then select one of the following options:
  - **No Limit**. No restriction is applied when the traffic limit is reached.
  - **Download only**. The restriction is applied to incoming traffic only.
  - **Both Directions**. The restriction is applied to both incoming and outgoing traffic.
- Select the **Connection time control** radio button and enter the allowed hours in the Monthly limit field.

7. (Optional) If your ISP charges for extra data volume when you make a new connection, enter the extra data volume in MB in the Round up data volume for each connection by field.
8. In the Traffic Counter section, set the traffic counter to begin at a specific time and date.

   If you want the traffic counter to start immediately, click the **Restart Counter Now** button.
9. In the Traffic Control section, specify whether the modem router should issue a warning message before the monthly limit of Mbytes or hours is reached.

   By default, the value is 0 and no warning message is issued. You can select one of the following to occur when the limit is attained:

   - The Internet LED blinks green or amber.
   - The Internet connection is disconnected and disabled.
10. Click the **Apply** button.

    The Internet Traffic Statistics section helps you to monitor the data traffic.
11. To update the Traffic Statistics section, click the **Refresh** button.
12. To display more information about the data traffic on your modem router and to change the poll interval, click the **Traffic Status** button.

View Devices Currently on the Network

You can view all computers or devices that are currently connected to your network.

To view devices on the network:


1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

The BASIC Home screen displays.

4. Select **Attached Devices**.

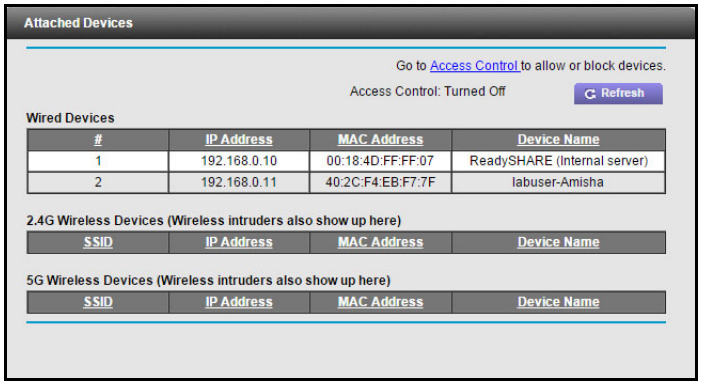

The Wired Devices section lists devices that are connected to the modem router with Ethernet cables. The Wireless Devices section lists devices that are connected to the wireless network. The following information is displayed:

- **Status**. The status of the device, Allowed or Blocked.
- **Device Name**. If the device name is known, it is shown here.
- **IP Address**. The IP address that the modem router assigned to this device when it joined the network. This number can change if a device is disconnected and rejoins the network.
- **MAC Address**. The unique MAC address for each device does not change. The MAC address is typically shown on the product label.

5. To update this screen, click the **Refresh** button.

Manage the Modem Router Configuration File

The configuration settings of the modem router are stored within the modem router in a configuration file. You can back up (save) this file to your computer, restore it, or reset it to the factory default settings.

Back Up Settings

To back up the modem router's configuration settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.


   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Administration > Backup Settings**.

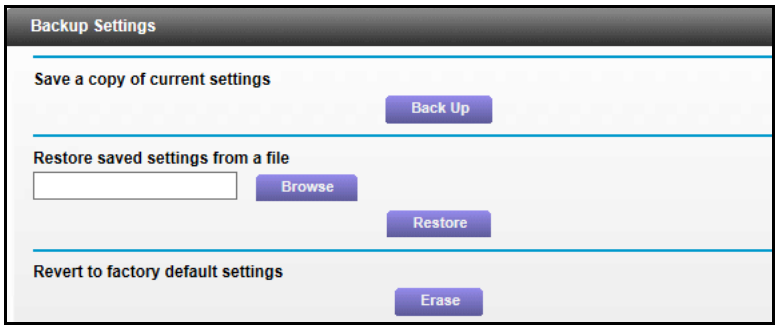

5. Click the **Back Up** button.
6. Specify a location on your network.

   A confirmation message displays.

7. Click the **OK** button.

   A copy of the current settings is saved in the location you specified.

Restore Configuration Settings

To restore configuration settings that you backed up:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Administration > Backup Settings**.
5. Click the **Browse** button to find and select the `cfg` file.
6. Click the **Restore** button.

   The file is uploaded to the modem router and the modem router reboots.



WARNING:

Do not interrupt the reboot process.

Erase the Current Configuration Settings

You can erase the current configuration and restore the factory default settings. You might want to do this if you move the modem router to a different network. (See Factory Settings on page 119).

To erase the configuration settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Administration > Backup Settings**.
5. Click the **Erase** button.

   The factory default settings are restored. The user name is admin, the password is password, and the LAN IP address is 192.168.0.1. DHCP is enabled.

View Wireless Access Points in Your Area

You can view wireless networks or access points, in your area and select and join a wireless network.

To manage your wireless access point (AP):


1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Administration > Wireless AP**.

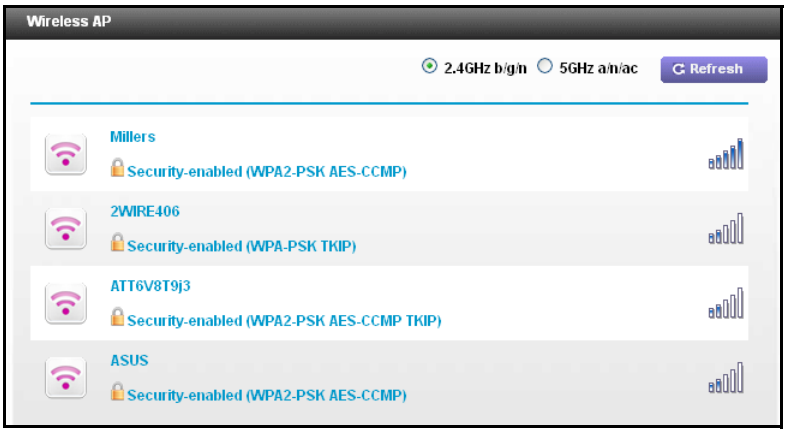

This screen displays the wireless access points in use in your area.

View or Change the Modem Router Wireless Channel

Many countries and geographic locations have laws or guidelines about which channels can be used. Depending on your location, some channels might not be available. If many wireless networks at your location use the same channel as your wireless network, you might experience interference. You can change the channel to avoid the interference.

To view or change your wireless channel:


1. Launch a web browser from a computer or wireless device that is connected to the network.
2. Type **http://routerlogin.net** or **http://192.168.0.1**.

   A login screen displays.
3. Enter the modem router user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Administration > Wireless Channel**.

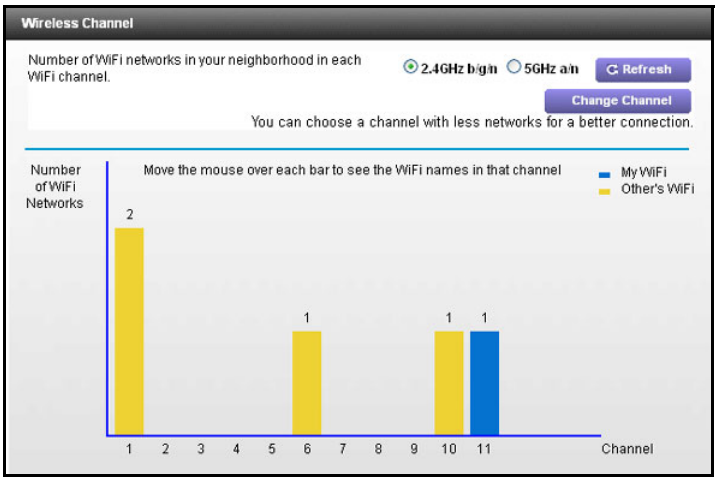

The screen displays wireless channels in use in the 2.4 GHz WiFi band. Your network is shown in blue. Yellow shows other networks in your area.

5. To view wireless channels in use in the 5 GHz WiFi band, select the **5 GHz a/n** radio button.
6. To change the wireless channel, click the **Change Channel** button.

   The Wireless Setup screen displays.
7. In the **Channel** list, select a different channel setting.
8. Click the **Apply** button.

   Your changes take effect.

Dynamic DNS

Internet service providers (ISPs) assign numbers called IP addresses to identify each Internet account. Most ISPs use dynamically assigned IP addresses. This means that the IP address can change at any time. You can use the IP address to access your network remotely, but most people don’t know what their IP addresses are or when this number changes.

To make it easier to connect, you can get a free account with a Dynamic DNS service that lets you use a domain name to access your home network. To use this account, you must set up the modem router to use Dynamic DNS. Then the modem router notifies the Dynamic DNS service provider whenever its IP address changes. When you access your Dynamic DNS account, the service finds the current IP address of your home network and automatically connects you.

If your ISP assigns a private WAN IP address (such as 192.168.x.x or 10.x.x.x), the Dynamic DNS service does not work because private addresses are not routed on the Internet.

Specify a DNS Account


To set up Dynamic DNS in the modem router:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Settings > Dynamic DNS**.

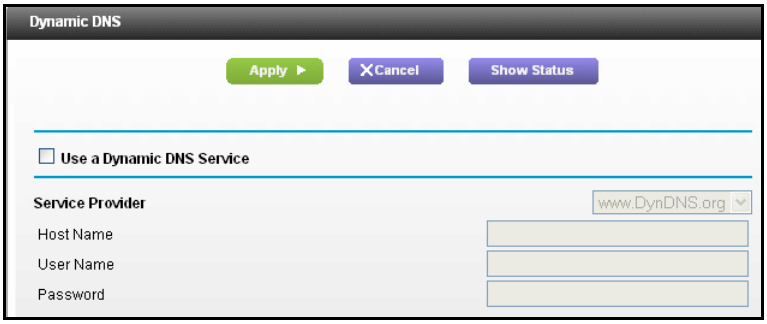

5. Select the **Use a Dynamic DNS Service** check box.
6. In the **Service Provider** list, select your service provider from the list.
7. In the **Host Name** field, type the host name (sometimes called the domain name) for your account.
8. In the **User Name** field, enter the user name for your account.
9. In the **Password (6-32 characters)** field, type the password for your DDNS account.
10. Click the **Apply** button.

    Your changes are saved.
11. To verify that your Dynamic DNS service is enabled in the modem router, click the **Show Status** button.

    A message displays the Dynamic DNS status.

Change the Dynamic DNS Settings

To change your settings:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.

2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Advanced Settings > Dynamic DNS**.
5. Change your DDNS account settings as necessary.
6. Click the **Apply** button.

   Your changes are saved.

Remote Management

The remote management feature lets you access your modem router over the Internet to view or change its settings. You need to know the modem router's WAN IP address to use this feature. For information about remote access using Dynamic DNS, see Dynamic DNS on page 93.

Note: Be sure to change the password for the user name admin to a secure password. The ideal password contains no dictionary words from any language and contains uppercase and lowercase letters, numbers, and symbols. It can be up to 30 characters. See Change the Admin Password on page 79.

To set up remote management:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.


   A login screen displays.

3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.

4. Select **ADVANCED > Advanced Setup > Remote Management**.

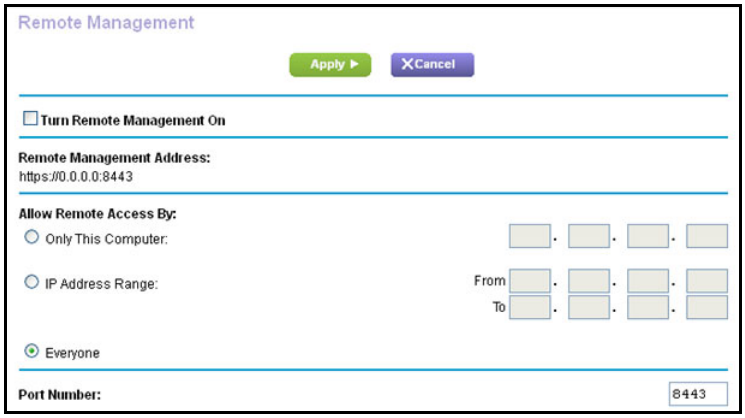

5. Select the **Turn Remote Management On** check box.
6. In the Allow Remote Access By section, specify the external IP addresses to be allowed to access the modem router's remote management:

   Note: For enhanced security, restrict access to as few external IP addresses as practical

   Select one of the following:

   - To allow access from a single IP address on the Internet, select the **Only This Computer** radio button. Enter the IP address to be allowed access.
   - To allow access from a range of IP addresses on the Internet, select the **IP Address Range** radio button. Enter a beginning and ending IP address to define the allowed range.
   - To allow access from any IP address on the Internet, select the **Everyone** radio button.
7. Specify the port number for accessing the web management interface.

   Normal web browser access uses the standard HTTP service port 80. For greater security, enter a custom port number for the remote web management interface. Choose a number from 1024 to 65535, but do not use the number of any common service port. The default is 8080, which is a common alternate for HTTP.
8. Click the **Apply button**.

   Your changes take effect.

To use remote access:

1. Launch an Internet browser on a computer that is not on your home network.
2. Type your modem router's WAN IP address into your browser's address or location field followed by a colon (:) and the custom port number.

   For example, if your external address is 134.177.0.123 and you use port number 8080, enter **http://134.177.0.123:8080** in your browser.

9

Specify Internet Port Settings

You can use port forwarding and port triggering to set up rules for Internet traffic. You need networking knowledge to set up these features.

This chapter includes the following sections:

- Set Up Port Forwarding to a Local Server
- Set Up Port Triggering

Set Up Port Forwarding to a Local Server

If you have a server in your home network, you can allow certain types of incoming traffic to reach the server. For example, you might want to make a local web server, FTP server, or game server visible and available to the Internet.

The modem router can forward incoming traffic with specific protocols to computers on your local network. You can specify the servers for applications and you can also specify a default DMZ server to which the modem router forwards all other incoming protocols.

To forward specific incoming protocols:


1. Decide which type of service, application, or game you want to provide.
2. Find the local IP address of the computer on your network that will provide the service.

   The server computer must always have the same IP address. To specify this setting, use the reserved IP address feature. See Reserve LAN IP Addresses on page 67.
3. Launch an Internet browser from a computer or wireless device that is connected to the network.
4. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
5. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
6. Select **ADVANCED > Advanced Setup > Port Forwarding/Port Triggering**.

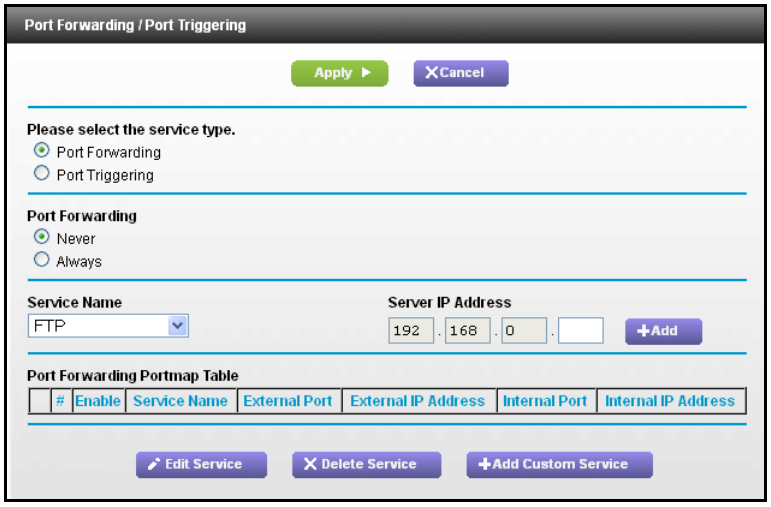

7. Leave the **Port Forwarding** radio button selected as the service type.
8. In the Service Name list, select the service name.

If the service that you want to add is not in the list, create a custom service. See Add a Custom Port Forwarding Service on page 99.

9. In the Server IP Address field, enter the IP address of the computer that will provide the service.
10. Click the **Add** button.

    The service displays in the list.

Add a Custom Port Forwarding Service

To add a custom service:


1. Find out which port number or range of numbers the application uses.

   You can usually find this information by contacting the publisher of the application or user groups or news groups.
2. Launch an Internet browser from a computer or wireless device that is connected to the network.
3. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
4. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
5. Select **ADVANCED > Advanced Setup > Port Forwarding/Port Triggering**.
6. Leave the **Port Forwarding** radio button selected as the service type.
7. Click the **Add Custom Service** button.

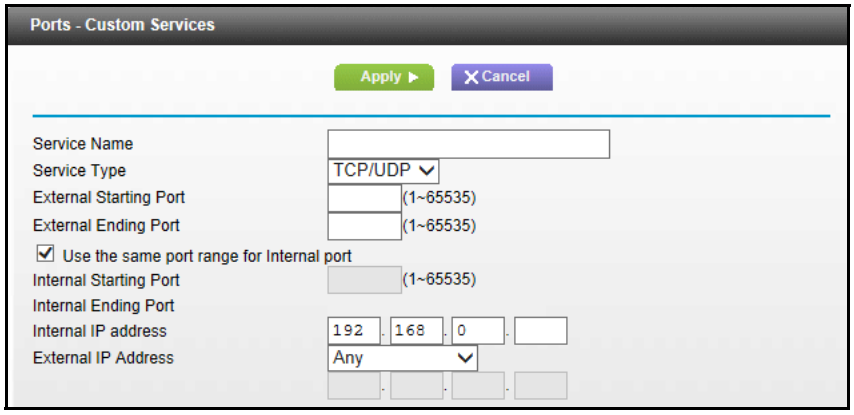

8. In the **Service Name** field, enter a descriptive name.
9. In the **Service Type** field, select the protocol. If you are unsure, select **TCP/UDP**.
10. In the **External Starting Port** field, enter the beginning port number.

If the application uses a single port, enter the same port number in the Ending Port field.

If the application uses a range of ports, enter the ending port number of the range in the External Ending Port field.

11. Specify the internal ports by one of these methods:
    - Leave the **Use the same port range for Internal port** check box selected.
    - Type the port numbers in the **Internal Starting Port** and **Internal Ending Port** fields.
12. Type the IP address in the **Internal IP address** field or select the radio button for an attached device listed in the table.
13. Click the **Apply** button.

    The service is now in the list on the Port Forwarding/Port Triggering screen.

Edit a Port Forwarding Service

To edit a port forwarding entry:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Port Forwarding/Port Triggering**.
5. Leave the **Port Forwarding** radio button selected as the service type
6. In the table, select the radio button next to the service name.
7. Click the **Edit Service** button.

   The Ports - Custom Services screen displays.
8. Specify changes to any of the following settings:
   - **Service Name**. Type the service name.
   - **Service Type**. If you are unsure, select **TCP/UDP**.
   - **External Starting Port**: If the application uses a single port, enter the same port number in the **External Ending Port** field. If the application uses a range of ports, enter the ending port number of the range in the **External Ending Port** field.
   - For the internal ports, leave the **Use the same port range for Internal port** check box selected.
   - **Internal IP address**. Type the IP address in the Internal IP address field, or select the radio button for an attached device listed in the table.

9. Click the **Apply** button.

   Your changes are saved.

Delete a Port Forwarding Entry

To delete a port forwarding entry:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Port Forwarding/Port Triggering**.
5. Select the **Port Forwarding** radio button as the service type
6. In the table, select the radio button next to the service name.
7. Click the **Delete Service** button.

Application Example: Make a Local Web Server Public

If you host a web server on your local network, you can use port forwarding to allow web requests from anyone on the Internet to reach your web server.

To make a local web server public:

1. Assign your web server either a fixed IP address or a dynamic IP address using DHCP address reservation.

   In this example, your modem router always gives your web server an IP address of 192.168.0.33.
2. In the Port Forwarding/Port Triggering screen, configure the modem router to forward the HTTP service to the local address of your web server at **192.168.0.33**.

   HTTP (port 80) is the standard protocol for web servers.
3. (Optional) Register a host name with a Dynamic DNS service, and specify that name in the Dynamic DNS screen of the modem router.

   Dynamic DNS makes it much easier to access a server from the Internet because you can type the name in the Internet browser. Otherwise, you must know the IP address that the ISP assigned, which typically changes.

How the Modem Router Implements the Port Forwarding Rule

The following sequence shows the effects of a port forwarding rule:

1. When you type the URL www.example.com in your browser, the browser sends a web page request message with the following destination information:
   - **Destination address**. The IP address of www.example.com, which is the address of your modem router.
   - **Destination port number**. 80, which is the standard port number for a web server process.
2. Your modem router receives the message and finds your port forwarding rule for incoming port 80 traffic.
3. The modem router changes the destination in the message to IP address 192.168.0.123 and sends the message to that computer.
4. Your web server at IP address 192.168.0.123 receives the request and sends a reply message to your modem router.
5. Your modem router performs Network Address Translation (NAT) on the source IP address, and sends the reply through the Internet to the computer or wireless device that sent the web page request.

Set Up Port Triggering

Port triggering is a dynamic extension of port forwarding that is useful in these cases:

- An application must use port forwarding to more than one local computer (but not simultaneously).
- An application must open incoming ports that are different from the outgoing port.

With port triggering, the modem router monitors traffic to the Internet from an outbound “trigger” port that you specify. For outbound traffic from that port, the modem router saves the IP address of the computer that sent the traffic. The modem router temporarily opens the incoming port or ports that you specify in your rule, and forwards that incoming traffic to that destination.

Port forwarding creates a static mapping of a port number or range of ports to a single local computer. Port triggering can dynamically open ports to any computer when needed and close the ports when they are no longer needed.

Note: If you use applications such as multiplayer gaming, peer-to-peer connections, real-time communications such as instant messaging, or remote assistance (a feature in Windows XP), enable Universal Plug and Play (UPnP). See Improve Network Connections with Universal Plug and Play on page 68.

Add a Port Triggering Service


To add a port triggering service:

1. Launch an Internet browser from a computer or wireless device that is connected to the network.
2. Type **http://www.routerlogin.net** or **http://www.routerlogin.com**.

   A login screen displays.
3. Enter the user name and password.

   The user name is **admin**. The default password is **password**. The user name and password are case-sensitive.

   The BASIC Home screen displays.
4. Select **ADVANCED > Advanced Setup > Port Forwarding/Port Triggering.**
5. Select the **Port Triggering** radio button.
6. Click the **Add Service** button.

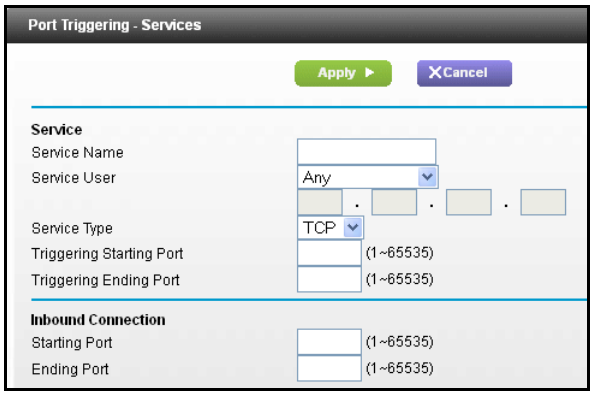

7. In the **Service Name** field, type a descriptive service name.
8. In the **Service User** list, select **Any,** or select **Single address** and enter the IP address of one computer:
   - **Any** (the default) allows any computer on the Internet to use this service.
   - **Single address** restricts the service to a particular computer.
9. Select the service type, either **TCP** or **UDP** or **TCP/UDP** (both).

   If you are not sure, select **TCP/UDP**.

10. In the **Triggering Port** field, enter the number of the outbound traffic port that will open the inbound ports.
11. Enter the inbound connection port information in the **Connection Type**, **Starting Port**, and **Ending Port** fields.
12. Click the **Apply button**.

    The service is now in the Portmap table. You must enable port triggering before the modem router used port triggering for the service that you added. See the following section.

Application Example: Port Triggering for Internet Relay Chat

Some application servers, such as FTP and IRC servers, send replies to multiple port numbers. Using port triggering, you can tell the modem router to open more incoming ports when a particular outgoing port starts a session.

An example is Internet Relay Chat (IRC). Your computer connects to an IRC server at destination port 6667. The IRC server not only responds to your originating source port, but also sends an "identify" message to your computer on port 113. Using port triggering, you can tell the modem router, "When you initiate a session with destination port 6667, you must also allow incoming traffic on port 113 to reach the originating computer." The following sequence shows the effects of the port triggering rule you have defined:

1. You open an IRC client program to start a chat session on your computer.
2. Your IRC client composes a request message to an IRC server using a destination port number of 6667, the standard port number for an IRC server process. Your computer then sends this request message to your modem router.
3. Your modem router creates an entry in its internal session table describing this communication session between your computer and the IRC server. Your modem router stores the original information, performs Network Address Translation (NAT) on the source address and port, and sends this request message through the Internet to the IRC server.
4. Noting your port triggering rule and observing the destination port number of 6667, your modem router creates another session entry to send any incoming port 113 traffic to your computer.
5. The IRC server sends a return message to your modem router using the NAT-assigned source port (for example, port 33333) as the destination port. The IRC server also sends an "identify" message to your modem router with destination port 113.
6. When your modem router receives the incoming message to destination port 33333, it checks its session table to see if a session is active for port number 33333. Finding an active session, the modem router restores the original address information replaced by NAT and sends this reply message to your computer.
7. When your modem router receives the incoming message to destination port 113, it checks its session table and finds an active session for port 113 associated with your computer. The modem router replaces the message's destination IP address with your computer's IP address and forwards the message to your computer.

8. When you finish your chat session, your modem router eventually senses a period of inactivity in the communications. The modem router then removes the session information from its session table, and incoming traffic is no longer accepted on port numbers 33333 or 113.

10

Troubleshooting

This chapter provides information to help you diagnose and solve problems you might have with your modem router. If you do not find the solution here, check the NETGEAR support site at http://support.netgear.com for product and contact information.

This chapter contains the following sections:

- Troubleshoot with the LEDs
- Cannot Log In to the Modem Router
- Changes Not Saved
- Wireless Connectivity
- Troubleshoot Your Network Using the Ping Utility

Troubleshoot with the LEDs

You can use the LEDs on the front panel of the modem router for troubleshooting.

Power LED Is Off

- Make sure that the power adapter is securely connected to your modem router and securely connected to a working power outlet.
- Check that you are using the power adapter that NETGEAR supplied for this product.
- If the problem persists, contact technical support for help at www.netgear.com/support.

LEDs Never Turn Off

When the modem router is turned on, the LEDs light for about 10 seconds and then turn off. If all the LEDs stay on, this indicates a fault within the modem router.

If all LEDs are still lit one minute after power-up, do the following:

- Cycle the power to see if the modem router recovers.
- Press and hold the **Reset** button to return the modem router to its factory settings. For more information, see Factory Settings on page 114.

If the error persists, you might have a hardware problem. Contact technical support at www.netgear.com/support.

Internet LED Is Off

If the Internet LED is off and the modem router is connected to the cable television cable, try the following:

- Make sure that the coaxial cable connections are secure at the modem router and at the wall jack.
- Make sure that your cable Internet provider provisioned your cable Internet service. Your provider can verify that the signal quality is good enough for modem router service.
- Remove any excessive splitters that on your cable line. Run a “home run” back to the point where the cable enters your home.

Troubleshoot the Cable Internet Connection

When your modem router cannot access the Internet and your Internet LED is on, register the cable MAC address or device MAC address of your modem router with your cable Internet provider.

Additionally, check the setting for your computer's TCP/IP gateway. It should be set to use the modem router. modem router. If your computer obtains its information from the modem router by DHCP, reboot the computer and verify the gateway address.

Cannot Log In to the Modem Router

If you are unable to log in to the modem router from a computer or WiFi device on your local network, check the following:

1. Make sure that you are connected to the modem router's wired or WiFi network.
   - For a wired Ethernet connection, make sure that the Ethernet connection is secure and the modem router is powered on (its Power LED is lit).
   - For a WiFi connection, make sure that you selected the correct network.If you cannot find the WiFi network, make sure that the modem router is powered on (it's Power LED is lit). If the modem router is powered on, someone might have turned off the SSID broadcast or the turned off the wireless radios. See Wireless Connectivity on page 110.
2. If you are connected to the modem router network, but the web browser does not display the login screen, check the following:
   - Make sure that your browser has Java, JavaScript, or ActiveX enabled. If you are using Internet Explorer, click the **Refresh** button to be sure that the Java applet is loaded.
   - Try quitting the browser and launching it again.
3. If the browser displays the login screen, but you cannot access the modem router, make sure that you are using the correct login information.

   The user name is **admin**, and the default password is **password**. Both are case-sensitive. Make sure that Caps Lock is off when you enter this information.
4. If you customized advanced home network settings such as the IP address scheme, check the following:
   - Make sure that the IP address of your computer is on the same subnet as the modem router. If you are using the recommended addressing scheme, your computer's address is in the range of 192.168.0.2 to 192.168.0.254.

- If your computer's IP address is shown as 169.254.x.x, recent versions of Windows and Mac OS generate and assign an IP address if the computer cannot reach a DHCP server. These autogenerated addresses are in the range of 169.254.x.x. If your IP address is in this range, check the connection from the computer to the modem router, and reboot your computer.
- If your modem router's IP address was changed and you do not know the current IP address, clear the modem router's configuration to factory defaults. This sets the modem router's IP address to 192.168.0.1. For more information, see Factory Settings on page 119.

Changes Not Saved

If the modem router does not save the changes you make in the modem router interface, check the following:

- When entering configuration settings, always click the **Apply** button before moving to another screen or tab, or your changes are lost.
- Click the **Refresh** or **Reload** button in the web browser. The changes might have occurred, but the old settings might be in the web browser's cache.

Wireless Connectivity

If you are having trouble connecting wirelessly to the modem router, try to isolate the problem:

- The computer or WiFi device that you are using does not find the WiFi network.

  This can happen for the following reasons:

  - Someone pressed the **WiFi On/Off** button on the modem router, which turned off the wireless radios.

    Check the 2.4 GHz and 5 GHz LEDs on the front of the modem router. If they are off, press the **WiFi On/Off** button to turn the wireless radios back on.

  - Someone logged in to the modem router and disabled its wireless radios or set up a wireless schedule.

    In this case, pressing the **WiFi On/Off** button does not turn the wireless radios back on. You must log in to enable the wireless radios. Use an Ethernet cable to for a wired connection to the modem router. Then log in and change the settings. For more information, see Control the Wireless Radios on page 74.

  - Someone logged in to the modem router and disabled its SSID broadcast. Your wireless network is hidden and does not display in your wireless client's scanning list. (By default, SSID broadcast is enabled.)

    To connect with WiFi, you must type the network SSID and password. For information about how to enable the SSID broadcast, see Specify Basic WiFi Settings on page 70.

- You can find the WiFi network, but you can't connect. Check the following:
  - Make sure that your computer or WiFi device supports the security that you are using for your wireless network (WPA or WPA2)?
  - You are not sure what the WiFi password is.

    The preset WiFi password is on the product label. If you changed it and do not remember the new password, you can use a wired Ethernet connection to log in to the

modem router and view or change the WiFi password. For more information, see Change the WiFi Security Option on page 72

- The WiFi signal strength is weak in your location:

  Is your modem router too far from your computer, or too close? Place your computer near the modem router, but at least 6 feet (1.8 meters) away, and see if the signal strength improves.

  Check for sources of WiFi interference that might block the signal. See Position Your Modem Router on page 12.

Troubleshoot Your Network Using the Ping Utility

Most network devices and routers contain a ping utility that sends an echo request packet to the designated device. The device then responds with an echo reply. You can easily troubleshoot a network using the ping utility in your computer or workstation.

Test the LAN Path to Your Modem Router

You can ping the modem router from your computer to verify that the LAN path to your modem router is set up correctly.

To ping the modem router from a Windows computer:

1. From the Windows toolbar, click **Start** and select **Run**.
2. In the field provided, type **ping** followed by the IP address of the modem router, as in this example:

   ping www.routerlogin.net
3. Click the **OK** button.

   You should see a message like this one:

   ```
   Pinging <IP address > with 32 bytes of data
   ```

   If the path is working, you see this message:

   ```
   Reply from < IP address >: bytes=32 time=NN ms TTL=xxx
   ```

   If the path is not working, you see this message:

   ```
   Request timed out
   ```

If the path is not functioning correctly, you might have one of the following problems:

- Wrong physical connections

For a wired connection, make sure that the numbered LAN port LED is lit for the port to which you are connected.

Check that the appropriate LEDs are on for your network devices. If your modem router and computer are connected to a separate Ethernet switch, make sure that the link LEDs are lit for the switch ports that are connected to your computer and modem router.

- Wrong network configuration

  Verify that the Ethernet card driver software and TCP/IP software are both installed and configured on your computer.

  Verify that the IP address for your modem router and your computer are correct and that the addresses are on the same subnet.

Test the Path from Your Computer to a Remote Device

After verifying that the LAN path works correctly, test the path from your computer to a remote device.

1. From the Windows toolbar, click the **Start** button and select **Run**.
2. In the Windows Run window, type:

   ping -n 10 <*IP address*>

   where <IP address> is the IP address of a remote device such as your ISP DNS server.

If the path is functioning correctly, messages like those shown in the previous section display.

If you do not receive replies, check the following:

- Check that your computer has the IP address of your modem router listed as the default gateway. If DHCP assigns the IP configuration of your computers, this information is not visible in your computer Network Control Panel. Verify that the IP address of the modem router is listed as the default gateway.
- Check to see that the network address of your computer (the portion of the IP address specified by the subnet mask) is different from the network address of the remote device.
- Check that your cable or DSL modem is connected and functioning.
- If your ISP assigned a host name to your computer, enter that host name as the account name in the Internet Setup screen.
- Your ISP might be rejecting the Ethernet MAC addresses of all but one of your computers.

  Many broadband ISPs restrict access by allowing traffic only from the MAC address of your broadband modem. Some ISPs additionally restrict access to the MAC address of a single computer connected to that modem. If so, configure your modem router to “clone” or “spoof” the MAC address from the authorized computer.

A

Supplemental Information

This appendix covers the following topics:

- Factory Settings
- Technical Specifications

Factory Settings

You can return the modem router to its factory settings. Use the end of a paper clip or a similar object to press and hold the **Reset** button on the back of the modem router for at least seven seconds. The modem router resets, and returns to the factory configuration settings shown in the following table.

Table 2. Factory default settings

Feature		Default behavior
Modem router login	User login URL	www.routerlogin.com or www.routerlogin.net
	User name (case-sensitive)	admin
	Login password (case-sensitive)	password
Local network (LAN)	LAN IP	192.168.0.1
	Subnet mask	255.255.255.0
	DHCP server	Enabled
	DHCP range	192.168.0.2 to 192.168.0.254
	Time zone	Pacific time
	DHCP starting IP address	Configured by the Internet provider
	DHCP ending IP address	192.168.0.254
	DMZ	Disabled
	Time zone	As per the ISP/MSO ToD (Time of Day) Configuration
	Time zone adjusted for daylight savings time	As per ISP/MSO ToD (time of Day) server configuration
	SNMP	Enabled
Cable modem Firewall	Inbound (communications coming in from the Internet)	Disabled (except traffic on port 80, the HTTP port)
	Outbound (communications going out to the Internet)	Enabled (all)
Wireless	Wireless communication	Enabled
	SSID name	See the product label
	Security	WPA2-PSK (AES)
	Broadcast SSID	Enabled

Table 2. Factory default settings (continued)

Feature		Default behavior
Wireless (continued)	Country/region	United States
	RF channel (2.4 GHz)	Auto[1]
	RF channel (5 GHz)	CH 153 (or manually select Band I and 4 Channels)
	Operating mode	Up to 600 Mbps at 2.4 GHz, 1300 Mbps at 5 GHz

1. Maximum wireless signal rate derived from IEEE Standard 802.11 specifications. Actual throughput can vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate.

Technical Specifications

Table 3. Modem router specifications

Feature	Description
Data and routing protocols	TCP/IP, DHCP, Dynamic DNS, UPnP, and SMB
Power adapter (North America)	120V, 60 Hz, input 12V/3.5A DC output
Dimensions	Dimensions: mm x mm x mm (in. x in. x in.)
Weight	Weight: g (0. lb)
Operating temperature	0° to 40° C (32º to 104º F)
Operating humidity	90% maximum relative humidity, noncondensing
Electromagnetic emissions	FCC Part 15 Class B
LAN	10BASE-T or 100BASE-TX or 1000BASE-T, RJ-45
WAN	24 x 8 DOCSIS 3.0 WAN Interface
Wireless	Maximum wireless signal rate complies with the IEEE 802.11 standard. See the footnote for the previous table.
Radio data rates	Auto Rate Sensing
Data encoding standards	IEEE 802.11ac 2.0 IEEE 802.11n version 2.0 IEEE 802.11n 256QAM IEEE 802.11g, IEEE 802.11b 2.4 GHz IEEE 802.11n, IEEE 802.11a 5.0 GHz
Maximum computers per wireless network	Limited by the amount of wireless network traffic generated by each node (typically 50–70 nodes).
Operating frequency range	2.4 GHz: 2.412–2.462 GHz 5 GHz: 5.18–5.24 + 5.745–5.825 GHz
802.11 security	WPA-PSK, WPA2-PSK, and WPA/WPA2