

CASIO KEYBOARD STAND CS-7W




安全上のご注意


このたびは、カシオ製品をお買い上げいただき、誠にありがとうございます。

- ご使用前に「安全上のご注意」をよくお読みの上、正しくお使いください。
- 本書は、お読みになった後も大切に保管してください。




絵表示について


この取扱説明書および製品への表示では、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するため、いろいろな絵表示をしています。その表示と意味は次のようになっています。

 警告	この表示を無視して誤った取扱いをすると、人が死亡または重傷を負う危険が想定される内容を示しています。
 注意	この表示を無視して誤った取扱いをすると、人が傷害を負う危険が想定される内容および物的損害のみの発生が想定される内容を示しています。
 警告	
キーボード本体やスタンドを不安定な場所に置かないでください	
ぐらついた台の上や傾いた所など、不安定な場所に置かないでください。落ちたり、倒れたりして、けがの原因となります。	

 注 意
スタンドについて
<ul style="list-style-type: none">●組み立ての説明にしたがってしっかりと組み立てキーボード本体を正しく設置してご使用ください。ネジが正しい位置にしっかりと固定されていなかったり、キーボード本体の位置がずれていたりすると、スタンドが倒れたり、キーボード本体が落ちたりして、けがの原因となることがあります。●キーボード本体をスタンドにのせるときは、キーボード本体とスタンドの間に手をはさまないようにご注意ください。●スタンドのネジおよびボルトが温度、湿度の変化や振動などの影響でゆるんでいないか、時々点検してください。ゆるんでいたら、再度ネジおよびボルトをしっかりと締め直してください。キーボード本体が落ちて、けがの原因となることがあります。
キーボード本体に重いものを置かないでください
キーボード本体に重いものを置かないでください。倒れたり、落ちたりしてけがの原因となることがあります。
キーボード本体やスタンドの上に乗らないでください
キーボード本体やスタンドの上に乗らないでください。特に、小さなお子様のいるご家庭ではご注意ください。倒れたり、こわれたりしてけがの原因となることがあります。

CAUTIONS CONCERNING SAFETY

Symbols
Various symbols are used in this operating manual and on the product itself to ensure that the product is used safely and correctly, and to prevent injury to the user and other persons as well as damage to property. Those symbols along with their meanings are shown below.
 WARNING
This indication stipulates matters that have the risk of causing death or serious injury if the product is operated incorrectly while ignoring this indication.
 CAUTION
This indication stipulates matters that have the risk of causing injury as well as matters for which there is the likelihood of occurrence of physical damage only if the product is operated incorrectly while ignoring this indication.
 WARNING
Do not place the keyboard or stand in a location that is unstable.
Do not place in an unstable location such as on a wobbly stand or inclined surface. This can cause the keyboard and stand to fall or tip over resulting in injury.


 CAUTION
Regarding the Stand
<ul style="list-style-type: none">• Properly place the keyboard on the stand after securely assembling the stand in accordance with the instruction manual. If the screws are not securely tightened at their correct locations, or if the keyboard itself is out of position, the stand may tip over or the keyboard may fall off resulting in injury.• When placing the keyboard on the stand, be careful so that your hands do not get pinched between the keyboard and the stand.• Since the keyboard is quite heavy, movement and installation should be performed by at least two people.• Periodically inspect the stand screws to check for looseness caused by changes in temperature or humidity and vibrations and so on. If a screw has become loose, retighten it securely. If screws are not retightened when necessary, the keyboard may fall off the stand resulting in injury.
Do not place heavy objects on the keyboard.
Do not place heavy objects on the keyboard. This may cause the keyboard to tip over or fall off the stand.
Do not sit on the keyboard or stand.
Do not sit on the keyboard or stand. This is particularly important in homes where there are young children. Sitting on the keyboard or stand may cause it to tip over or berak resulting in injury.

付属品をご確認ください。

- | | |
|----------------------|------------------------|
| ①ネームプレート 1 | ④ネジ(32mm) 6 |
| ②脚 2 | ⑤蝶ネジ(30mm) 2 |
| ③サイドバー 1 | ⑥ワッシャ 8 |

組み立て方

1. ネームプレート①を脚②に差し込み、ネジ④とワッシャ⑥で固定します。
2. サイドバー③をネジ④とワッシャ⑥で固定します。
(ご注意) 一方のネジ④をゆるく締め、他方のネジ④を締めてから両方のネジ④をしっかりと締めて下さい。
3. キーボード本体をスタンドに載せて、蝶ネジ⑤とワッシャ⑥で、キーボード本体底面のネジ穴に固定します。

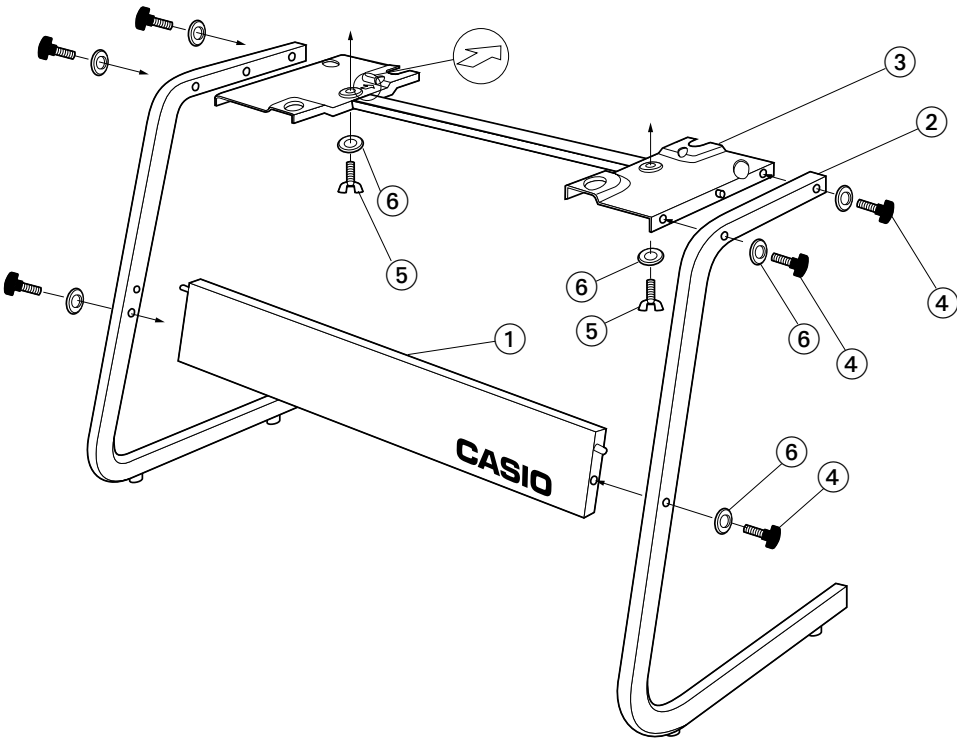

Make sure all of the following items are included. If anything is missing, contact your original retailer.

- | | |
|-------------------------|----------------------------------|
| ① Nameplate 1 | ④ Bolts (32mm) 6 |
| ② Legs 2 | ⑤ Butterfly bolts (30mm) . . . 2 |
| ③ Side bar 1 | ⑥ Washers 8 |

ASSEMBLY

1. Install the nameplate ① onto the legs ② of the stand and fasten it into place using the washers ⑥ and bolts ④.
2. Fix the side bar ③ into place using the washers ⑥ and bolts ④.
NOTE: Install one side (i.e. left) of the side bar without completely tightening the bolt ④. Install the other side (right) and tighten its bolt ④, and then fully tighten the bolt ④ on the original (left) side.
3. Set a CASIO Digital Keyboard onto the stand. Place washers ⑥ onto the butterfly bolts ⑤ and then screw the bolts into the holes in the bottom of the keyboard to secure it in place.

カシオ計算機株式会社

〒151-8543 東京都渋谷区本町 1-6-2

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

SA1011-C Printed in China