


Nokia Mini Speakers MD-6

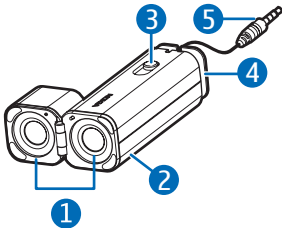

Issue 1



© 2007 Nokia. All rights reserved.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation.

Introduction

Congratulations on your purchase. With the Nokia Mini Speakers MD-6, you can listen to music from your compatible mobile phone or music device and enjoy the high-quality audio. The speakers have a Nokia 3.5 mm AV plug. The speaker cable also serves as an FM radio antenna.

Read this user guide carefully before using the speakers. Also read the user guide for the device that you connect to the speakers, which provides

important safety and maintenance information. Keep all accessories and enhancements out of the reach of small children.

Parts of the speakers are magnetic. Metallic materials may be attracted to the speakers. Do not place credit cards or other magnetic storage media near the speakers, because information stored on them may be erased.

Parts

The speakers contain the following parts shown on the title page: speaker elements (1), recess for opening the battery cover (2), release switch of the speaker cable (3), coil for the speaker cable (4), and audio plug (5).

Install the batteries

The speakers are powered by four AAA batteries. To open the battery cover, place your thumb in the recess, and firmly slide the cover toward the speaker cable. To install the batteries, first place the black ribbon

attached to the speakers across the battery compartment, then insert the batteries as indicated in the compartment. To close the battery cover, align the cover so that the recess points toward the speaker elements, insert the catches on the cover into the corresponding slots on the speakers, and carefully slide the cover toward the speaker elements.

To remove the batteries, open the battery cover, and pull the ribbon to lift the batteries from the compartment.

During long periods where the speakers are not used, remove the batteries to prevent damage from battery leakage. When battery power is low, the orange indicator light flashes.

Use the speakers

Slide the release switch of the speaker cable toward the audio plug, and uncoil the speaker cable.

To connect the speakers to a compatible Nokia device that has the Nokia 3.5 mm AV connector, insert the audio plug into the connector on your device.

To connect the speakers to a compatible Nokia device that has the Nokia 2.5 mm AV connector, connect the supplied AD-52 adapter to the device and the audio plug to the adapter.

To connect the speakers to a compatible device (such as a PC or music player) that has the standard 3.5 mm audio connector, connect the supplied AD-63 adapter to the device and the audio plug to the adapter.

To switch on the speakers, open the hinged end. The white indicator light turns on. To switch off, close the hinged end. The indicator light turns off.

To set the volume, use the volume controls on your device. If the sound level of the speakers becomes too low, change the batteries.

To carry the speakers, close the hinged end, coil the speaker cable, insert the cable into the slot on the coil, and push the coil inside the speakers so that the audio plug remains outside the coil.

Care and maintenance


Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.

诺基亚小型扬声器 MD-6

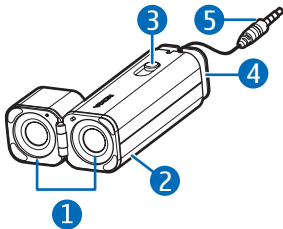

第 1 版



© 2007 诺基亚。保留所有权利。

诺基亚、Nokia 和 Nokia Connecting People 是诺基亚公司的注册商标。

简介

祝贺您购买了我们的产品。有了诺基亚小型扬声器 MD-6，您可以收听通过兼容手机或音乐设备播放的音乐，并享受到高音质的音响效果。扬声器采用诺基亚 3.5 毫米 AV 插头。扬声器的连接线也是调频收音机的天线。

使用扬声器前，请仔细阅读本《用户手册》。另请阅读与扬声器相连设备的《用户手册》，其中包含重要的安全和维护信息。将所有配件放在小孩接触不到的地方。

扬声器的某些部件具有磁性。金属物体可能被吸附在扬声器上。请勿使信用卡或其他磁性存储介质靠近扬声器，以免因消磁而丢失其所储存的信息。

组成部分

如首页图中所示，扬声器由以下部分组成：扬声器 (1)、为打开电池保护盖设置的凹槽 (2)、扬声器连接线释放键 (3)、扬声器连接线线轴 (4) 和音频插头 (5)。

安装电池

扬声器由四节 AAA 电池供电。要打开电池保护盖，请将您的拇指放在凹槽处，用力将保护盖向扬声器连接线方向滑动。要安装

电池，首先将附在扬声器上的黑色丝带横放在电池槽中，然后按照电池槽中的说明放入电池。要关闭电池保护盖，请对准保护盖以使凹点朝向扬声器，然后将保护盖上的卡锁插入扬声器上相应的插槽中，并小心地将保护盖向扬声器方向滑动。

要取出电池，请打开电池保护盖，然后拉动黑色丝带将电池从电池槽中提出。

当长时间不使用扬声器时，请取出电池以防止因电池泄漏而导致损坏。当电池电量不足时，桔黄色指示灯会闪烁。

使用扬声器

向音频插头方向滑动扬声器连接线释放键，并展开扬声器连接线。

要将扬声器连接到带有诺基亚 3.5 毫米 AV 插孔的诺基亚兼容设备，请将音频插头插入设备上的插孔中。

要将扬声器连接到带有诺基亚 2.5 毫米 AV 插孔的诺基亚兼容设备，请先将提供的 AD-52 适配器连接至该设备，然后将音频插头插到适配器上。

要将扬声器连接到带有标准的 3.5 毫米音频插孔的兼容设备 (如 PC 或音乐播放器)，请先将提供的 AD-63 适配器连接至设备，然后将音频插头插到适配器上。

要启动扬声器，请打开连接端。白色指示灯会亮起。要关闭扬声器，请合上连接端。这时指示灯会熄灭。

要设置音量，请使用设备上的音量控制键。如果扬声器的音量变得过低，请更换电池。

携带扬声器时，请合上连接端，将扬声器连接线盘起并插入线轴上的线槽中，然后将线轴推入扬声器内，使音频插头留在外面。

维护和保养

您的设备是具有优良设计和工艺的产品，应小心使用。下列建议将帮助您有效使用保修服务。

- 保持设备干燥。雨水、湿气和各种液体或水分都可能含有矿物质，会腐蚀电子线路。如果设备被打湿，请将其完全晾干。
- 不要在有灰尘或肮脏的地方使用或存放设备。这样会损坏它的可拆卸部件和电子元件。
- 不要将设备存放在过热的地方。高温会缩短电子设备的寿命、毁坏电池、使一些塑料部件变形或熔化。
- 不要将设备存放在过冷的地方。否则当设备温度升高至常温时，其内部会形成潮气，这会毁坏电路板。
- 不要扔放、敲打或振动设备。粗暴地对待设备会毁坏内部电路板及精密的结构。
- 不要用烈性化学制品、清洗剂或强洗涤剂清洗设备。


- 不要用颜料涂抹设备。涂抹会在可拆卸部件中阻塞杂物从而影响正常操作。

如果产品不能正常工作，请将其送至最近的授权维修机构进行维修。



部件名称 (Parts)	有毒有害物质或元素 (Hazardous Substance)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
附件 (Accessories)	×	○	○	○	○	○
○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。 注：本产品标有“×”的原因是：现阶段没有可供选择的替代技术或 部件。						

Nokia 迷你型揚聲器 MD-6

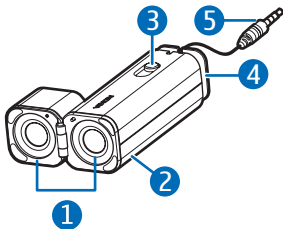

第 1 版



© 2007 諾基亞。版權所有。

諾基亞、Nokia 及 Nokia Connecting People 是諾基亞公司的註冊商標。

簡介

恭喜您購買 Nokia 迷你型揚聲器 MD-6。您可以透過它在兼容手機或音樂裝置上欣賞音樂，享受高質素的音效。本揚聲器有一個 Nokia 3.5 mm AV 插頭。揚聲器纜線亦可用作 FM 收音機的天線。

使用揚聲器之前，請仔細閱讀本用戶指南。亦請閱讀您連接至揚聲器的裝置的用戶指南，該指南提供了重要的安全和維修資料。請將所有配件和增強配套置於兒童無法觸及的地方。

揚聲器的某些部分具有磁性，可能會吸引金屬物件。請勿將信用卡或其他磁性儲存媒介置於揚聲器的附近，因為媒介上所儲存的資料可能會因此被清除。

部件

本揚聲器包含標題頁上顯示的以下部件：揚聲器元件 (1)、用於開啓電池外殼的凹槽 (2)、揚聲器纜線釋放鈕 (3)、揚聲器線圈 (4)，以及音效插頭 (5)。

安裝電池

揚聲器由 4 枚 AAA 電池供電。要開啓電池外殼，將拇指置於凹槽處，平穩地向揚聲器纜線方向滑動外殼。要安裝電池，先將係於揚聲器上的黑絲帶橫跨電池槽放置，然後依照電池槽內所示裝入電池。要關閉電池外殼，對準外殼，以使凹點朝向揚聲器元件，並將外殼上的卡扣插入揚聲器相應的插槽內，小心朝揚聲器元件方向滑動外殼。

要移除電池，開啓電池外殼，拉動絲帶，從槽中提出電池。

長期不使用揚聲器時，請將電池移除，以免由於電池洩露而造成損壞。電池電量不足時，橙色指示燈會閃爍。

使用揚聲器

向音效插頭方向滑動揚聲器纜線釋放鈕，展開纜線。

要連接揚聲器至有 Nokia 3.5 mm AV 插孔的兼容諾基亞裝置，將音效插頭插入裝置的插孔中。

要連接揚聲器至有 Nokia 2.5 mm AV 插孔的兼容諾基亞裝置，連接提供的 AD-52 轉接器至該裝置，同時將音效插頭連接至轉接器。

要連接揚聲器至有標準 3.5 mm 音效插孔的兼容裝置 (如個人電腦或音樂播放器)，連接提供的 AD-63 轉接器至該裝置，同時將音效插頭連接至轉接器。

要開啓揚聲器，打開鉸接端。這時，白色指示燈開啓。要關閉揚聲器，合上鉸接端。這時指示燈關閉。

要調校音量，使用裝置上的音量控制鍵。揚聲器的音量很低時，請更換電池。

要攜帶揚聲器，合上鉸接端，繞起揚聲器纜線，插入纜線至線圈上的槽中，並將線圈推入揚聲器內，使音效插頭留在線圈的外面。

保養及維修


本裝置是採用優良技術設計的產品，務請小心使用。以下建議有助維護您裝置的保養。

- 請保持裝置乾燥。雨水、濕氣與各種液體或水份可能含有腐蝕電路的礦物質。如果您的裝置被弄濕，請讓裝置回復完全乾燥。

- 請勿將裝置存放在佈滿灰塵、髒亂的地方或在此類地方使用裝置。活動式零件及電子元件可能較容易損壞。
- 請勿將裝置存放在高溫之處。高溫會縮短電子裝置的壽命、損壞電池並使部分塑膠材質變形或熔化。
- 請勿將裝置存放在低溫之處。當裝置升溫至正常的溫度時，其內部可能會產生濕氣，損壞電路板。
- 請勿扔擲、敲擊或搖晃裝置。粗暴的使用方式可能會破壞內部的電路板及精密構造。
- 請勿使用刺激性的化學製品、清潔溶劑或腐蝕性的清潔劑來清潔裝置。
- 請勿為裝置塗上顏料。塗料可能會妨礙裝置的活動式零件，影響正常使用。

如果產品不能正常使用，請帶往就近的授權服務中心進行維修。

Nokia 迷你喇叭 MD-6

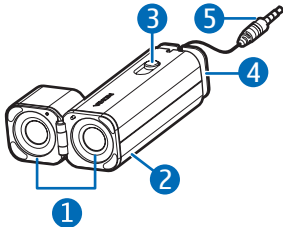

第 1 版



© 2007 Nokia。版權所有，翻印必究。

Nokia 和 Nokia Connecting People 是 Nokia Corporation 的註冊商標。

根據交通部電信器材管制辦法第十二條及第十四條：

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射電機設備之干擾。

簡介

感謝您購買本產品。Nokia 迷你喇叭 MD-6 讓您使用相容手機或音樂裝置聆聽音樂，享受高品質的聲音效果。喇叭具備 Nokia 3.5 mm AV 插頭。喇叭傳輸線也可當作 FM 收音機天線使用。

使用喇叭之前，請詳細閱讀本用戶指南。此外，也請詳細閱讀連接喇叭裝置的用戶指南，其中含有重要的安全與維護資訊。將所有配件與行動週邊產品放在孩童無法接觸到的地方。

喇叭的某些部分具有磁性，且可能會吸附金屬物質。請勿將信用卡或其他具磁性的儲存媒介放置在喇叭附近，以免遺失儲存的資料。

組件

本喇叭包含下列組件 (顯示在標題頁)：喇叭 (1)、電池蓋開啓凹槽 (2)、喇叭傳輸線釋放開關 (3)、喇叭傳輸線線圈 (4) 及音訊插頭 (5)。

安裝電池

喇叭需要四顆三號電池來提供電源。若要打開電池蓋，請將您的拇指放在凹槽處，然後使力將電池蓋朝喇叭傳輸線方向滑動。若要安裝電池，首先請將固定於喇叭的黑色緞帶橫放於電池盒中，然後再依照電池盒內的指示放入電池。若要關閉電池蓋，請先對齊電池蓋讓凹槽對準喇叭，然後將電池蓋上的套扣套入喇叭的套孔中，並小心將電池蓋滑向喇叭關閉。

若要取出電池，請打開電池蓋，然後拉動緞帶將電池從電池盒中取出。

若長時間未使用喇叭，請取出電池，以避免電池液溢漏造成損害。當電池電力不足時，指示燈會閃爍橘燈。

使用喇叭

將喇叭傳輸線釋放開關朝音訊插頭滑動，展開喇叭傳輸線。

若要連接喇叭與配備 Nokia 3.5 mm AV 插孔的相容 Nokia 裝置，請將音訊插頭插入您裝置上的插孔。

若要連接喇叭與配備 Nokia 2.5 mm AV 插孔的相容 Nokia 裝置，請將隨附的 AD-52 轉接器連接裝置，並將音訊插頭連接轉接器。

若要連接喇叭與配備標準 3.5 mm 音訊插孔的相容 Nokia 裝置 (例如電腦或音樂播放器)，請將隨附的 AD-63 轉接器連接裝置，並將音訊插頭連接轉接器。

若要開啓喇叭，請打開絞接端。此時，白色指示燈會亮起。若要關閉喇叭，請關閉絞接端。此時，指示燈便會熄滅。

若要設定音量，請使用您裝置上的音量控制器。喇叭音量過低時，請更換電池。

攜帶喇叭時，請關閉絞接端，將喇叭傳輸線捲起收入線圈槽中，然後將線圈推入喇叭內，讓音訊插頭露在線圈外頭。

照顧與維修

您的裝置為具有優質設計與技術的產品，應妥善維護。下列的建議有助於您維護保固。

- 請將裝置保持乾燥。雨水、溼氣與各種液體或水份可能含有腐蝕電路的礦物質。如果裝置已受潮，請讓裝置完全乾燥。
- 請勿在佈滿灰塵、髒亂的區域中使用或存放本裝置。活動式的零件和電子組件可能較容易損壞。
- 請勿將本裝置存放在高溫處。高溫可能會縮短電子裝置的壽命、破壞電池，並使某些塑膠零件變形或融化。

- 請勿將本裝置存放在低溫處。當裝置恢復到常溫時，其內部會有濕氣凝結，可能會損及電路板。
- 請勿扔擲、敲擊或搖晃裝置。粗暴的使用方式會破壞內部的電路板和精密的機械。
- 請勿使用刺激性的化學製品、清潔溶劑或腐蝕性的清潔劑來清潔本裝置。
- 請勿為本裝置上漆。油漆可能會阻塞活動式的零件，使其無法正常操作。

如果本產品無法正常運作，請就近洽詢客戶服務中心為您服務。