
Manual
Laser Barrel Speaker
SPK-BTCLD

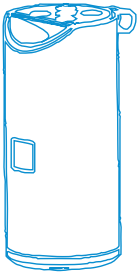


WHAT'S IN THE BOX:


- 1 x SPK-BTCLD Speaker
- 1 x Micro USB cable
- 1 x 3.5mm AUX cable
- 1 x User Manual

SPECIFICATIONS:

Bluetooth Version:	3.0 + EDR
Bluetooth Range:	10 meters
Bluetooth Name:	SPK-BTCLD
Battery:	3.7V 1200mAh
Battery Runtime:	Approx 3 - 4 hours (at medium volume)
Speaker Driver Size:	2 x Φ 52mm
Speaker Power:	2 x 5W / 4Ω
Frequency Response:	150Hz – 20KHz
Product Dimensions:	75.5 x 75.5 x 161.6mm
Weight:	512g
Charging:	5V / 1A
Charging Time:	Approx 6 hours.

CONTROLS:

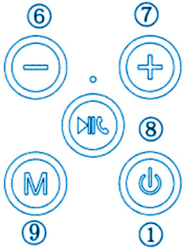

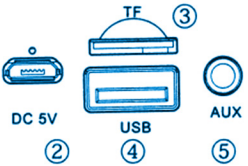

1. Power	• Press and hold approx. 3 seconds to turn device ON/OFF. • A flashing blue light will appear under the M button when device is ON.
2. Micro USB	• Insert one end of Micro USB cable into the Micro USB Port and the other end into a USB wall adapter (not included) to start charging. • A solid red light will appear under the M button when charging. • Approx. 6 hours for a full charge.
3. Micro SD Card	• Only MP3 files on FAT32 or exFAT file system are supported • Please try formatting storage to suggested file system if not detected.
4. USB	• Only MP3 files on FAT32 or exFAT file system are supported. • Please try formatting storage to suggested file system if not detected.
5. AUX	• Connect a source device via the supplied 3.5mm AUX cable. • The AUX cable also provides better FM reception.
6. -	• Hold to decrease volume. • Tap to SKIP backwards between stations or tracks.
7. +	• Hold to increase volume. • Tap to SKIP forwards between stations or tracks.
8. Play/Pause	• Tap to PLAY/PAUSE when using USB, AUX, Micro SD Card or Bluetooth mode. • Tap to start AUTO SEARCH function when using FM Radio.
9. Mode	• Tap to change between Bluetooth, AUX, FM, Micro SD or USB. • Tap to SKIP between stations in FM Mode. • Tap and hold during Bluetooth mode to pair TWS.

FEATURES:

- Bluetooth Wireless Connectivity
- USB – Upto 32gb and FAT32 or exFAT file system only.
- Micro SD Card - Upto 32gb and FAT32 or exFAT file system only.
- TWS – True Wireless Stereo
- FM Radio
- AUX IN
- Rechargeable Battery

BLUETOOTH:

- Turn on the speaker and tap “M” until “BLUETOOTH MODE” is heard (by default the device should turn ON in BT mode).
- Search for “SPK-BTCLD” under the Bluetooth settings of device being connected.

TIP: If password is requested enter “0000”

FM RADIO:

- Tap Play/Pause to start the AUTO SEARCH function for FM stations.
- This operation will scan all FM stations and record them to memory.
- The scan procedure will take 1 - 2 minutes to complete and should not be interrupted.
- Once complete you can tap + or - to skip between the saved stations.

TIP: Connect a 3.5mm cable into the AUX port to improve FM reception.

TRUE WIRELESS STEREO - TWS (2 SPEAKERS REQUIRED):

- Turn ON both speakers and switch them into Bluetooth mode.
- Press and hold M button on one of the speakers.
- A tone will be heard which indicates the speakers are now connected for TWS.
- You can now connect one of the speakers to a Bluetooth source device and when music/sound is played it will come through on both speakers.
- To turn off TWS, press and hold the M button on either speaker until a tone is heard.

TROUBLESHOOTING:

No Power:

1. Check battery level and charge if required.
2. Try turning on speaker while connected to power source.
3. Try charging with USB Wall Adapter instead of a laptop/computer.

Radio not clear:

1. Change speaker location.
2. Connect a 3.5mm AUX cable into the AUX port to improve FM reception as this also doubles as an aerial.
3. Isolate speaker from other devices as this may be caused by interference.

USB or Micro SD Card not recognised or files not playing:

1. Make sure the USB or Micro SD Card is 32gb or less.
2. Check USB or Micro SD Card has been formatted to the FAT32 or exFAT file system. If not please format on a Windows based computer.
3. Make sure to only use MP3 music files copied to the USB or Micro SD Card.

For more helpful guides visit us at YouTube | **LASER**
www.youtube.com/LasercoAu

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.