


I'm not robot!

Lenovo thinkcentre m93p user manual

How to wake up a lenovo thinkcentre. Does lenovo thinkcentre m93p have wifi.

VIEW ALL COMPATIBLE ACCESSORIES > WE'RE SORRY, BUT THERE ARE NO ACCESSORIES AVAILABLE AT THIS TIME. PN: SP40A14824 Printed in China Safety, Warranty, and Setup Guide Brief user notices ThinkCentre M93/p Lenovo ® electronic manuals... for a greener planet! Refer to the electronic User Guide for detailed product information: Unpack ThinkCentre ® computer Mouse Keyboard Power cord or ac power adapter Documentation Note: Recovery discs are not provided. Instead, everything needed for recovering factory-installed files and applications is provided in the Lenovo_Recovery partition on your hard disk drive. If you decide to remove the Lenovo_Recovery partition, be sure to create a recovery disc first. For more information, see "Recovery information" in the User Guide. See “Accessing your User Guide” for instructions on opening the electronic User Guide provided on your computer. Connector locations Note: The locations of the connectors, controls, and indicators on your computer might be slightly different from the illustrations. Tiny desktop, rear view Wi-Fi card module antenna slot ac power adapter cable loop Optional port Security-lock slot ac power adapter connector DisplayPort connector USB 3.0 connector (USB port 4) USB 3.0 connector (USB port 3) VGA monitor connector Ethernet connector USB 3.0 connector (USB port 5) Tiny desktop Tower and small desktop, rear view Power cord connector Serial port VGA monitor connector DisplayPort connectors (2) USB 3.0 connectors (USB ports 5 to 8) USB 2.0 connectors (USB ports 3 and 4) Microphone connector Audio line-out connector Audio line-in connector PCI Express x16 graphics card slot PCI Express x16 graphics card slot (Negotiable link width x4) PCI card slot PCI Express x1 card slot Ethernet connector PS/2 keyboard and mouse connectors (optional) Tower Small desktop Notes: 1. If you use the optional port for installing a serial port, the serial port and the adjacent VGA monitor connector might interfere with each other when you connect cables. To avoid the interference, ensure that you use the serial port convert cable that comes with the computer when you connect a device to the serial port.
2.
The Video Electronics Standards Association (VESA) mount bracket and the vertical stand are optional parts. If your computer comes with the VESA mount bracket installed, ensure that you remove the VESA mount bracket before you install the vertical stand. For more information, see "Installing or replacing hardware" in the User Guide. Initial setup instructions Note: Depending on your model type, your computer might not have all the connectors that are described in this section. Second Edition (January 2014) © Copyright Lenovo 2013, 2014 LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

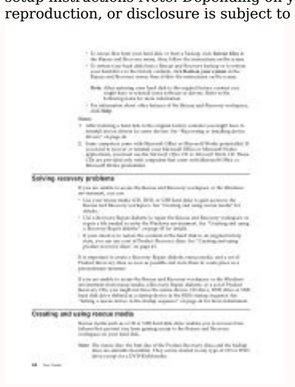

1. Connect the keyboard cable to the appropriate keyboard connector. USB 2.0 connector USB 3.0 connector PS/2 keyboard connector (optional) 2.
Connect the mouse cable to the appropriate mouse connector. USB 2.0 connector USB 3.0 connector PS/2 mouse connector (optional) 3.
Connect the display cable to the appropriate video connector. Note: If your computer is installed with a graphics card, be sure to use the monitor connectors on the graphics card. VGA connector DisplayPort connector 4.
If you have audio devices, attach them using the following instructions. Audio line-in connector: This connector receives audio signals from an external audio device, such as a stereo system. Audio line-out connector: This connector sends audio signals from the computer to external devices, such as powered stereo speakers. Microphone connector: Use this connector to attach a microphone to your computer to record sound or use speech-recognition software. Headphone connector: Use this connector to attach headphones to your computer to listen to music or other sounds without disturbing anyone. 5. If you have powered speakers with an ac power adapter, do the following: a. Connect the cable that runs between the speakers, if necessary. On some speakers, this cable is permanently attached. b. Connect the ac power adapter cable to the speakers. c. Connect the speakers to the audio line-out connector or the headphone connector on the computer. d. Connect the ac power adapter to the ac power source.
6. If you have unpowered speakers with no ac power adapter, do the following: a. Connect the cable that runs between the speakers, if necessary. On some speakers, this cable is permanently attached. b. Connect the speakers to the audio line-out connector or the headphone connector on the computer. 7. If you have any additional devices, connect them to the appropriate connectors. Your computer might not have all connectors that are shown. USB 2.0 connector: Use this connector to attach a device that requires a USB 2.0 connector, such as a keyboard, a mouse, a scanner, a printer, or a personal digital assistant (PDA). USB 3.0 connector: Use this connector to attach a device that requires a USB 2.0 or 3.0 connector, such as a keyboard, a mouse, a scanner, a printer, or a personal digital assistant (PDA). A USB 3.0 connector provides high transmission speeds to reduce the time that is required for data transmission.
Serial port: Use this port to attach a serial printer, or other devices that use a 9-pin serial port. Ethernet connector: Use this connector to attach the computer to an Ethernet-type local area network.



Important: To operate the computer within FCC limits when it is connected to an Ethernet network, use a Category 5 Ethernet cable. 8. Connect the power cord or the power adapter to the computer first and then to a properly-grounded electrical outlet. Ensure that all power cord connectors are securely and completely plugged into receptacles. Power cord for tower and small desktop Power adapter for tiny desktop 9. Press the power switch on the front of the computer. 10. Follow the on-screen instructions to complete the setup. Accessing your user guide Your User Guide contains detailed information about your computer.
To access your User Guide, do the following: Microsoft ® Windows ® 8.1: Method 1 1.
Go to the Start screen. 2. Click the arrow icon in the bottom-left corner of the screen to go to the Apps screen. If you are using a touch screen, swipe up to go to the Apps screen. 3. Scroll to the right side of the screen, and click or tap Help and Support. The Windows Help and Support window opens. 4. Click or tap Lenovo User Guide. Method 2 1. Go to the Start screen. 2. Click or tap Lenovo Support. The Lenovo Support window opens. 3. Click or tap User Guide. Microsoft Windows 8: From the desktop or the Start screen 5. Move the pointer to the top-right or bottom-right corner of the screen to display the charms, and then click Search. If you are using a touch screen, swipe in from the right edge of the screen to display the charms, and then tap Search. 6. On the Apps screen, scroll to the right side, and click or tap Help and Support. The Windows Help and Support window opens. 7. Click or tap Lenovo User Guide. From the Start screen 1. Click or tap Lenovo Support. The Lenovo Support window opens. 2. Click or tap User Guide. Microsoft Windows 7: 1. From the Windows desktop, click Start and then click Help and Support. The Help and Support application opens. 2. Click Lenovo User Guide. 3. In the Lenovo User Guide window, click the link for your model and the User Guide opens. Models without preinstalled operating systems and Virtual Desktop Infrastructure (VDI) clients: Go to the Lenovo Support Web site to access your User Guide. See “Downloading publications” for additional information. User Guides are available in additional languages from the Lenovo Web site. See “Downloading publications” for additional information.
Read this flyer before using your computer This flyer provides critical safety and regulatory information for Lenovo computers and instructions on how to access electronic versions of the publications developed for your computer. Read first — regulatory information Computer models equipped with wireless communications comply with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Be sure to read the Regulatory Notice for your country or region before using the wireless devices contained in your computer. To obtain a PDF version of the Regulatory Notice, refer to the “Downloading publications” section below. Downloading publications Electronic versions of your computer publications are available from the Lenovo Support Web site. To download the publications for your computer, go to and follow the instructions on the screen. Service and Support information The following information describes the technical support that is available for your product, during the warranty period or throughout the life of your product. Refer to the Lenovo Limited Warranty for a full explanation of Lenovo warranty terms. See “Lenovo Limited Warranty notice” later in this document for details on accessing the full warranty.
If you purchased Lenovo services, refer to the following terms and conditions for detailed information: For Lenovo Warranty Service Upgrades or Extensions, go to: For Lenovo Accidental Damage Protection Services, go to: Online technical support Online technical support is available during the lifetime of a product at: Telephone technical support Where applicable, you can get help and information from the Customer Support Center by telephone. Before contacting a Lenovo technical support representative, please have the following information available: model and serial number, the exact wording of any error message, and a description of the problem. Your technical support representative might want to walk you through the problem while you are at your computer during the call.



Worldwide Lenovo support telephone list Important: Telephone numbers are subject to change without notice. The most up-to-date telephone list for the Customer Support Center is always available at: If the telephone number for your country or region is not listed, contact your Lenovo reseller or Lenovo marketing representative. Country or region Telephone number Country or region Telephone number Africa South Africa: 0800110756 (English, Afrikaans) Central Africa: Contact the nearest Lenovo Business Partner Algeria +33 6 7348 1739 (French, English) Argentina 0800-666-0011 (Spanish) Australia 1800 041 267 (English) Austria 01-24592-5901 (German) Bahrain Kanoo IT: 00 973 1771 1722 Bahrain Business Machine LLC: 00 973 1758 4302 Belgium 02-210-9820 +32 (0)2 339 3611 (Warranty service and support) (Dutch) 02-210-9800 (French) Bolivia 0800-10-0189 (Spanish) Brazil Calls made from within the Sao Paulo region: (11) 3889-8986 Calls made from outside the Sao Paulo region: 0800-701-4815 (Brazilian Portuguese) Brunei Dial 800-1111, and then dial 866-273-5446 (English, Bahasa Melayu) Canada 1-800-565-3344 (English, French) Caribbean (Bermuda, Jamaica, Tortola) 1-800 426 7378 (English) Chile 800-361-213 (Spanish) China Technical Support Line 800-990-8888 86-10-58851110 (Mandarin) Colombia 1-800-912-3021 (Spanish) Costa Rica 0-800-011-1029 (Spanish) Croatia 0800-0426 Cyprus 80092537 (Greek) Country or region Telephone number Czech Republic +420-2-7213-1316 Denmark 4520-8200 7010-5150 (Warranty service and support) (Danish) Dominican Republic 1-866-434-2080 (Spanish) Ecuador 1-800-426911 OPCION 4 (Spanish) Egypt 800-0000-418 (Toll free) 002-02-2594-8500 (Standard charges apply) (English, Arabic) El Salvador 800-6264 (Spanish) Estonia +372 66 00 800 +372 6776793 Finland 09-459-6960 +358-800-1-4260 (Warranty service and support) (Finnish) France 0238-557-450 Hardware: 0810-631-213 (Warranty service and support) Software: 0810-631-020 (Warranty service and support) (French) Germany 01805-00 46 18 (Warranty service and support) (German) Greece Contact the nearest Lenovo Business Partner Guatemala 1800-624-0051 (Spanish) Honduras Tegucigalpa: 232-4222 San Pedro Sula: 552-2234 (Spanish) Hong Kong (852) 3071-3561 (Cantonese, English, Mandarin) Hungary +36 1 3825716 +36 1 3825720 (English, Hungarian) India 1800 3000 THINK 1800 3070 8465 (Reliance) This manual is related to the following products: : : : :

