redefine

by morphy richards®

Instruction manual

Please read and keep these instructions for future use

KT108001 MUK REV1

Health & Safety

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children shall not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.
- WARNING: Do not open the lid whilst the water is boiling.
- This appliance is intended to be used in household and similar applications such as: farm houses, by clients in hotels, motels and other residential type environments, and bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.

Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

Personal safety

- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- Do not hold the switch in the on position or tamper with the switch to fix it in the on position as this may cause damage to the switch-off mechanism.
- Do not move the kettle while switched on.
- WARNING: Misuse of the appliance could cause personal injury.

Other safety considerations

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- The kettle is only to be used with the stand provided.
- Do not use the appliance for any use other than to boil water.
- The appliance must not be on the base unit when being filled with water.
- Unplug from the outlet when not in use.
- WARNING: The appliance must not be immersed for cleaning.
- WARNING: When boiled, allow a few seconds before pouring.

Electrical requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current). Should the fuse in the mains plug require changing, a 13 amp BS1362 fuse must be fitted. WARNING: This appliance must be earthed.

this is where the similarity ends



this is where the exceptional begins

... the premium, highly innovative Morphy Richards product group.

Driven by principles of innovation and providing exceptional quality, the Redefine range is designed to fulfil the consumer need for brilliantly performing products that have equal aesthetic consideration.


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
SCHOTT
DURAN
Germany
MAX
1·5L
morphy richards

1 Ring Pull

A soft touch ergonomic ring pull for easy removal of the lid when filling your glass Kettle.

2 Lid

A unique design that allows water to flow through for a perfect pour.

3 Limescale Filter

Catches any scale and ensures your drink looks as good as it tastes.

4 Spout

Sleek design for a perfect pour.

5 Handle

Ergonomically designed handle for easy grip.

6 Glass Body

Duran Schott® glass makes it easy to see how much water is inside the kettle and illuminates when boiling water.

7 Cordless Base

Your kettle can be lifted away from the base for easy filling or pouring without any leads getting in the way.

8 360° Connector

Your Kettle can easily be placed back on the connector on the base from any angle. Ideal for the right or left handed use.

9 On/Off/Cancel Icon

Touch icon to activate or deactivate kettle from standby mode or cancel current boiling cycle.

10 Select 75°C Temperature

Touch icon to heat water to 75°C.

11 Select 85°C Temperature

Touch icon to heat water to 85°C.

12 Select 95°C Temperature

Touch icon to heat water to 95°C.

13 Select 100°C Temperature

Touch icon to heat water to 100°C.

14 Indicator Lights

Flash when water is heating and remain illuminated when desired temperature is reached.

15 Cord Storage

Helps to keep your kitchen worktop neat and tidy.

Using your kettle


Before using your kettle, or if it has not been used for over a week, follow these instructions to boil the maximum amount of water, then discard to ensure the system is clean and ready for use.

The following instructions detail the steps to follow to use your kettle. For cancelling/changing the selected temperature function, switching the kettle off and cleaning instructions, see the following pages.

When plugging your kettle in at the socket for the first time, it will beep twice and the indicator lights (14) will all flash briefly. The lights will then dim indicating that the kettle is in standby mode and ready to use.



1 Remove the Lid (2), by pulling the ring pull to one side and lifting upwards. Fill your kettle with the desired amount of water.

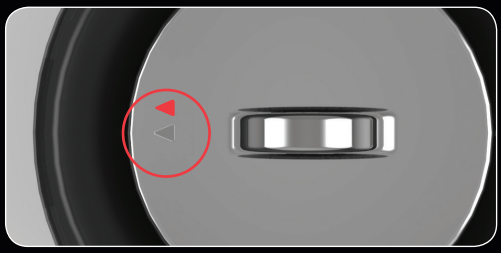

2 Replace the Lid. The bevelled arrow on the Lid points forward towards the Spout (4). Ensure the Lid is secured correctly into place before use.



3 Place your Kettle onto the 360° Connector (8) on the Cordless Base (7).



4 Tap the on/off Icon (9) to exit standby mode. All indicator lights (14) will illuminate.



5 Select the desired temperature by placing your finger across one of the temperature icons for 2 seconds. All indicator lights (14) will dim except the temperature selected. The selected icon will begin to flash until the temperature is reached. The kettle glass body (6) will also illuminate.



6 Whe the desired temperature is reached, the indicator light (14) will stop flashing and remain illuminated and the glass body (6) will dim. Allow a few seconds before pouring into a vessel. CAUTION: HOT.

Cancelling/changing selected temperature function



1 To switch the kettle on, follow steps 1-5 on page 8.



2 If you decide to cancel the current cycle, touch the same temperature icon again for 2 seconds, or tap the on/off/cancel icon (9). All indicator lights (14) will illuminate and the current cycle will be cancelled.



3 All temperature icons are now available for reselection. Touch the new temperature icon that you would like to select and boiling will begin as normal.



4 If you do not reselect a new temperature after 30 seconds all indicator lights (14) will automatically dim indicating stand by mode.

Switching your kettle off/into standby

- When all indicator lights (14) on your kettle base are dim, your kettle is in standby mode.
- When all indicator lights (14) on your kettle base are illuminated, your kettle is on. You can switch your kettle into standby mode by touching the on/off/cancel icon (9). All lights will then dim, indicating standby mode.
- To switch the kettle off completely, turn off at the socket.

Care & Cleaning

WARNING: Always disconnect the plug from the mains and allow your kettle to cool before cleaning.

Wipe the outside with a damp cloth.

IMPORTANT: Do not use abrasive cleaners on the outside of the kettle as this may scratch the surface.

Descaling

IMPORTANT: As this appliance is fitted with a concealed element it must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.

Excessive scale can cause the appliance to switch off before boiling and may damage the element invalidating the warranty. It is essential that regular descaling takes place. We recommend descaling your kettle every month.

Use a proprietary descaling product suitable for stainless steel, glass or plastic. Please follow the instructions on the packet carefully.

Cleaning the Filter

1 Boil 750ml of water in the kettle, empty into a suitable container then slowly add the descaler sachet as instructed.

2 Place the lid into the solution so the filter is fully submerged.

3 Leave for 10 minutes then remove and thoroughly swill the filter under a running tap.

4 Dry and re-fit to the kettle body.

4 Re-boil the kettle and pour the water away through the lid/filter.

5 Your kettle is now ready for use.

Contact Us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline 0344 871 0945

EIRE Helpline 1800 409 119

Spares 0344 871 0945

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog www.morphyrichards.co.uk/blog

Facebook facebook.com/morphyrichardsuk

Twitter @loveyourmorphy

Website www.morphyrichards.com

Registering your 2 year guarantee

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at

www.morphyrichards.co.uk

Or call our customer registration line quoting model and serial number, these numbers can be found on the base of your product.

UK 0344 871 0945

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

Your 1 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no, Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date.

Therefore it is vital to retain your original retailers receipt or invoice to indicate the date of initial purchase. To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

8 Batteries and damage from leakage are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.



IF YOU ARE HAVING A PROBLEM WITH ONE OF OUR PRODUCTS, CALL OUR HELPLINE:

UK: 0344 871 0945
EIRE: 1800 409 119
SPARES: 0344 871 0945

morphy richards®

The After Sales Division, Morphy Richards Ltd
Mexborough, South Yorkshire, S64 8AJ
UK: 0344 871 0945
EIRE: 1800 409 119

CE

KT108001 MUK REV1 07/16

www.morphyrichards.co.uk/redefine