Rasonic
樂信牌

# RMO-W230TG

## 23升 燒烤微波爐
## 23L Grill Microwave Oven




**僅適用於家庭使用**
**For household use only**

# 使用說明書
# OPERATION MANUAL

在使用本產品前，請仔細閱讀本說明書，並妥善保存本說明書以備用戶日後查詢。

Please read the operation manual carefully before using and well keep it in a safe place for future reference.

本說明書中的圖示可能有與實物不同的地方，僅供參考。

Some figures in this manual may not match with the real object, just for reference only.

非常感謝您選購樂信牌燒烤微波爐，在使用前請先詳細閱讀本說明書，並保存以備日後參考。

## 目錄


1. 安裝注意事項
2. 安全注意事項
3. 器皿注意事項
4. 清潔及儲存
5. 產品規格
6. 產品說明
7. 使用方法
8. 特別聲明
9. 售後服務






Shun Hing Grill (W230TG) (66723(M)).indb 1 2020-08-19 19:02:59

使用本燒烤微波爐時，必須遵守下列安全注意事項：

**警告！**使用不當會導傷亡及機件損毀

## 1. 安裝注意事項

## 為了防止火災、灼傷和觸電

## 使用前

1. 本產品屬於高耗電量電器，必須使用獨立電源插座。切勿與其他電器共用一個電源插座，並確保當地的電壓與本產品上所標明的額定電壓相符。
2. 為防止觸電，必須確保微波爐接地良好。
3. 本產品的淨重約為11公斤，用戶應將產品放置於有足夠承托力的水平面上使用。
4. 使用時必須保持空氣流通。本產品乃屬座檯式型號，**切勿**安裝於櫃內，避免堵塞微波爐的通風排氣孔，以免造成過熱。切勿在微波爐頂部放置任何物件。
5. 微波爐頂部必須與牆壁保持最少20厘米的距離；爐的兩旁應與牆壁保持最少5厘米的距離；爐背與牆壁保持最少10厘米的距離；產品與地面亦須保持最少85厘米的距離。用戶亦可利用爐背的距阻限定有關距離。切勿擅自拆去爐腳。
6. 切勿將本產品應放置於低耐溫的物料上使用，如膠檯布、棉檯布等。
7. 應將本產品放在通風及乾爽的地方，並須遠離腐蝕性氣體、火源、高溫、蒸氣、潮濕、油煙或接觸到易燃物的的環境中使用。
8. 如室內溫度過高，建議不要使用本產品。
9. 安裝位置應遠離電視、收音機或天線，以免造成干擾或引起噪音。

**警告**：如爐門損壞，在未得到合資格受訓人員維修前切勿使用。

## 2. 安全注意事項

### 2.1 首次使用

1. 將產品內的包裝物料全部取出。如微波爐的外殼上附有保護膜，請將保護膜撕掉後再使用。(**注意**：切勿拆除內腔右壁上的導波管蓋。)
2. 徹底檢查微波爐及配件有否損壞及裂痕(如門鎖、爐門及玻璃轉盤等位置)。如有損壞，切勿安裝或使用本產品。
3. 首次使用燒烤功能可能會出現冒煙或釋出輕微燒焦味，此為正常現象，並非產品故障。為免影響烹調效果，可於放置食物前，以燒烤功能加熱空爐20分鐘，然後打開爐門冷卻10分鐘後才使用。
4. 生產過程可能有保護油殘留機體內腔，並可能帶有異味或輕煙釋出，此乃屬正常現象，使用數次後，問題將會有所改善。使用時保持窗門通風良好。

### 2.2 預防內腔起火

1. 切勿過度加熱食物。
2. 移除食物及其包裝上的所有金屬封口、扎線圈等，因金屬表面形成的電弧可能會起火。
3. 加熱塑膠或紙品盛載的食物時，須確保它們是適用於微波爐烹調，由於它們屬易燃性質，請時刻留意加熱情況。
4. 切勿用微波加熱食用油或油炸食物，因為油溫會變得很高而難以控制。
5. 如欲烹調爆谷，必須使用微波爐適用的爆谷專用袋子。
6. 經常清潔產品內腔，特別是爐門、爐門與內腔間的縫隙、右壁上的導波管蓋(導波管蓋只可用乾布擦拭)，以免油脂積聚。因為積存的油污，有可能引致微波爐表面變質而造成黑煙，甚至起火，影響產品的使用壽命及其他危險。
7. 如烹調過程中冒煙或起火，請保持爐門緊閉以壓制任何火焰，否則遇上空氣會令火勢加劇。在安全情況下，用戶應立即停止操作，並拔掉電源插頭或關掉屋內電源總開關。



Shun Hing Grill (W230TG) (66723(M)).indb 2 2020-08-19 19:02:59

### 2.3 預防微波外洩

為防止微波外洩，請注意以下預防事項：

1. **警告！**切勿損壞爐門的安全鎖系統。如發現爐門不能緊閉、爐門變形或爐門的組件損壞〔如門栓〕，應立即停止使用，並聯絡信興電器服務中心有限公司進行維修後，才可再次使用。
2. 操作時，請勿置入任何物品，特別是金屬物體(如速食食品之鋁箔包裝等)。
3. 使用前，必須放入轉盤旋轉架及玻璃轉盤。
4. 切勿空機使用微波功能。使用時，爐內應放有可吸收能量的物質(如食物或水)。避免微波能量在爐內不停反射，影響微波爐的性能。若微波爐在沒有放置食物的情況下錯誤被啟動，應立即停止操作。
5. 切勿使用微波爐加熱化學劑或其他非食物製品，亦不可用含有腐蝕性化學劑的製品清洗本產品。
6. **警告！**維修工作或涉及拆開外殼及拆除波導管蓋工序，有可能導致微波洩漏，屬非常危險的情況，必須由合資格人士進行。如需檢查或維修，請聯絡信興電器服務中心有限公司。

### 2.4 食物注意事項

1. 加熱嬰兒食品時，在餵食前須將食物加以攪拌或搖晃及測試溫度，以確保熱力分佈均勻，從而避免燙傷或灼傷嬰兒。
2. 切勿加熱生雞蛋、烚蛋或連蛋殼蛋，因壓力會使雞蛋爆裂。蛋黃、蛋白也須用牙簽刺穿。另外，切勿馬上取出已煮好的湯圓或荷包蛋，以免造成食物內的液體沸濺而造成燙傷。用戶應先打開爐門，擱置一會後再取出食用。
3. 先將表面沒有細孔的食物(如蛋、栗子、馬鈴薯、香腸等帶皮食物)去皮，或在表皮上開一些裂縫或用叉子穿幾個細孔；否則，食物有可能受熱膨脹後發生爆濺。嚴格遵照食物包裝上的標籤指示，使用適當的方法進行烹調。
4. 烹飪少量食物時，小心觀察食物情況，防止過熱起火。
5. 如需使用保鮮紙遮蓋食物，應使用微波爐專用的保鮮紙，並將保鮮紙一角摺起使之通氣。烹調後，小心將保鮮紙拆開，以免被蒸氣灼傷。
6. 加熱飲品後，熱力有可能被鎖於液體內而延遲出現延遲沸騰爆濺。因此，在烹調時及移動容器時必須格外小心。
7. 烹調的效果或會因喜好的生熟程度、開始時溫度、使用地區海拔高度、份量、大小、食物形狀和盛載器皿有所影響。用戶可因應經驗適當調節烹調時間。

### 2.5 操作注意事項

1. 切勿於爐腔內儲存任何物品(如紙品、廚房器具及食物等。)
2. 必須使用原廠的玻璃轉盤及轉盤旋轉架，切勿自行更換其他非生產商授權的零件或配件，以免造成危險及令維修保養無效。
3. 切勿加熱再生紙製品，因其含有容易引起火花和易燃的雜質。
4. 切勿敲打控制面板，以免破壞控制器。
5. 如非說明書所指定，不可直接在玻璃轉盤上烹煮食物。(食物必須放入適合的烹調器皿中。)
6. 確保容器與產品爐壁保持一定距離，並置於玻璃轉盤範圍內，以免影響轉盤轉動及加熱效果。



Shun Hing Grill (W230TG) (66723(M)).indb 3 2020-08-19 19:02:59

7. 切勿將易燃物置於爐內或爐頂，以免導致起火。
8. 切勿在開啟的爐門上放置任何物件。
9. 應使用微波爐專用測肉溫度計檢查牛肉及雞肉烹調結果。切勿將水銀溫度計放入微波爐中加熱或測量，以免引起火災或造成損壞。
10. 切勿使用外置計時器或遙控系統來操作本產品。
11. 應使用微波及燒烤爐專用的手套放入、翻轉或取出食物，以免被高溫燙傷。
12. 運作時或使用後，外殼、爐內及可觸及部件溫度或會變得灼熱，**切勿觸摸**！小孩必須與產品保持距離，或於成人監督或指導下方可使用。
13. 使用時，少量蒸氣會於微波爐內外聚積，形成水滴。此乃正常現象，用戶可用軟布擦淨。於濕度高的情況下使用亦會出現相似情況，產品仍可安全使用，待產品冷卻後蒸氣便會自動消散。
14. 開啟爐門時，請注意力度並留意機內的食物會否濺出或弄翻，以免造成危險。特別於烹煮熱湯或飲品等流質食物時，請格外小心。
15. 切勿將本產品用於烹飪以外的其他用途。(用於烹飪以外或會發生故障。)
16. 微波爐只適用於加熱食物和飲料。若用於烘乾食物或衣服，以及加熱取暖墊、治療工具(如：小麥袋等)、拖鞋、海綿、抹布或報紙等，可能會導致身體受傷、起火或火災。
17. 為防止玻璃轉盤受損壞，請遵守下列事項：
    a. 用水清洗轉盤時，應先待其冷卻。
    b. 切勿放置滾熱的食品或灼熱的容器於冰冷的玻璃轉盤上。
    c. 切勿放置冰冷的食品或冰冷的容器於灼熱的玻璃轉盤上。
    d. 最大的負載重量不能超過4.5公斤。
18. 切勿將機身、電源線或插頭浸入水中或用水淋洗，以免影響產品的安全性能及防止造成觸電的危險。
19. 小心使用電源線，不可在電源線上放重物或夾住電源線；不可改裝電源線；切勿用力拉扯或扭曲電線，在拔出或插入插頭時，要用手握穩插頭本身。切勿將電源線懸掛在桌子、櫥櫃的邊緣或令其接觸發熱的表面。
20. 使用後或長期不使用時，應將插頭從插座拔出，以免因絕緣老化而發生漏電及觸電危險。切勿使用濕手接觸、插入或拔出插頭，以免觸電。
21. 移動、檢查或清潔微波爐前，應先拔掉電源線插頭，待微波爐冷卻後再進行。
22. 本產品只可作家庭使用，切勿在室外使用或用作說明書建議以外的其他用途。如不當使用此微波爐，或作為(半)商業用途，維修保養將告無效，本公司將不會承擔任何損壞的維修責任及賠償。
23. 切勿讓嬰兒靠近。若有孩童在旁，須加倍小心使用及看管小孩，以確保他們不會把此產品當作玩具。切勿讓小孩單獨使用或進行保養，亦切勿將本產品及其電源線放於小孩能觸及的地方。
24. 本產品可供年齡在8歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用產品和理解所涉及的危險。
25. 本產品是家用或在類似環境使用，如：商店內部、辦事處以及其他工作環境的員工廚房區域或類型的環境。切勿於戶外使用。
26. 經常檢查電源線、插頭、爐門及門鎖是否有破損，或曾經有跌落情況，為避免危險應停止使用，並聯絡信興電器服務中心有限公司作檢查及維修。
27. 遵從安全守則及避免釀成意外，如需維修，請聯絡信興電器服務中心有限公司(地址印於本使用說明書背頁或致電2406 5666查詢)，並須確保在檢查或維修時出示保修登記卡及收據。



Shun Hing Grill (W230TG) (66723(M)).indb 4 2020-08-19 19:02:59

## 3. 器皿注意事項

1. 檢查所使用的器皿是否適合微波爐使用。
2. 所有金屬物件、帶有金屬或銀邊的器皿亦不適用，以免產生火花或高溫而損壞本產品，造成火災或傷害。
3. 切勿把窄頸瓶器皿或密封的食物直接放入微波爐加熱，以免引起爆炸。
4. 當食物放於塑膠物料、紙或其他可燃材料製成的容器中加熱或烹調時，應時常注意，防止起火。
5. 加熱液體時，應盡量使用寬口的容器。若要加入咖啡粉、奶粉、麥片或其他沖劑，必須先將其攪拌才放入微波爐，並於加熱後待其冷卻後才食用，以免燙傷。
6. **警告**：切勿加熱密封的液體或其他食物〔如密封的玻璃瓶及嬰兒用奶瓶等〕，因會令其爆裂。
7. 以微波爐烹調／解凍食物，必須讓微波能量穿過容器滲透到食物中，挑選適當的器皿變得非常重要。建議使用圓形／橢圓形的碟盤，因為方形／長形的碟盤會令置於角落的食物會較易過熟。

以下為不同器皿的參考資料(「✔」號為適用，「✘」為不適用)：

| 容 器 | 組合烹調 | 燒烤 | 微波 |
|---|---|---|---|
| 一般塑膠 | ✘ | ✘ | ✘ |
| 微波爐專用保鮮紙 | ✘ | ✘ | ✔ |
| 燒烤微波爐專用玻璃 | ✔ | ✔ | ✔ |
| 燒烤微波爐專用陶瓷容器 | ✔ | ✔ | ✔ |
| 一般玻璃 | ✘ | ✘ | ✘ |
| 微波爐專用塑膠 | ✘ | ✘ | ✔ |
| 錫紙或錫紙容器 | ✘ | ✔ | ✘ |
| 金屬網架 | ✘ | ✔ | ✘ |
| 金屬容器 | ✘ | ✔ | ✘ |
| 紙或竹容器 | ✘ | ✘ | ✘ |

## 4. 清潔及儲存

1. 定期清潔本產品以去除食物殘渣。保養不善可導致其表面損壞，並影響產品的使用壽命或導致其他危險及傷亡。
2. 清潔前，必先關閉產品及拔掉電源插頭，待其冷卻後才進行。
3. 切勿用水或濕布直接清洗內腔導波管蓋(置於微波爐內腔右方)。
4. 保持微波爐內外表面及爐門玻璃窗及門縫的清潔。可用沾有中性清潔劑的軟綿布或海綿擦拭，然後用沾有清水的布抹淨。避免使用硬刷子或粗糙的潔具洗刷，以免損壞微波爐內外表面及玻璃窗的保護層。(**注意**：切勿讓水滲入爐縫內或通風口。)
5. 切勿使用銳利的金屬刮刀來清潔爐門玻璃窗，因為刮刀會刮花表面，或使玻璃碎裂。
6. 切勿使用蒸氣清洗裝置清洗本產品。
7. 經常清潔玻璃轉盤及轉盤旋轉架。用戶可先用加有中性清潔劑的溫水洗擦，再用清水沖洗及完全擦乾後，再放回原處備用。
8. 如控制面板被弄濕，請即用乾布抹擦，切勿使用粗糙及磨損性的清潔劑及潔具來抹擦控制面板。抹擦控制面板時，將爐門打開，以免錯誤啟動本產品。
9. 切勿使用有毒或帶有腐蝕性的清潔劑進行清潔。
10. 待微波爐完全冷卻及清洗後才能儲存，先將產品放入紙箱，然後置於乾爽的環境中。
11. 切勿將電源線纏繞在微波爐四周或壓住電源線，避免造成電源線磨損和破裂。
12. 切勿在爐面與爐門之間放置任何物品，或讓灰塵、殘餘的清潔劑積存於門縫表面。




Shun Hing Grill (W230TG) (66723(M)).indb 5 2020-08-19 19:02:59

## 5. 產品規格

| | |
|---|---|
| 型號 | RMO-W230TG |
| 額定電壓 | 220-240伏特～ 50赫茲 |
| 額定微波頻率 | 2,450兆赫茲 |
| 額定輸入功率(微波) | 1,150-1,280瓦 |
| 額定輸入功率(燒烤) | 900-1,000瓦 |
| 額定輸出功率(微波) | 800瓦 |
| 容量 | 23升 |
| 淨重 | 約12.3公斤 |
| 產品尺寸(闊x深x高) | 約483 x 367 x 281毫米 |
| 內腔尺寸(闊x深x高) | 約338 x 326 x 210毫米* |

* 內腔容量是根據內腔尺寸之最大闊度、深度和高度計算得出，實際存放食品的容量稍少於以上數值。

## 6. 產品說明

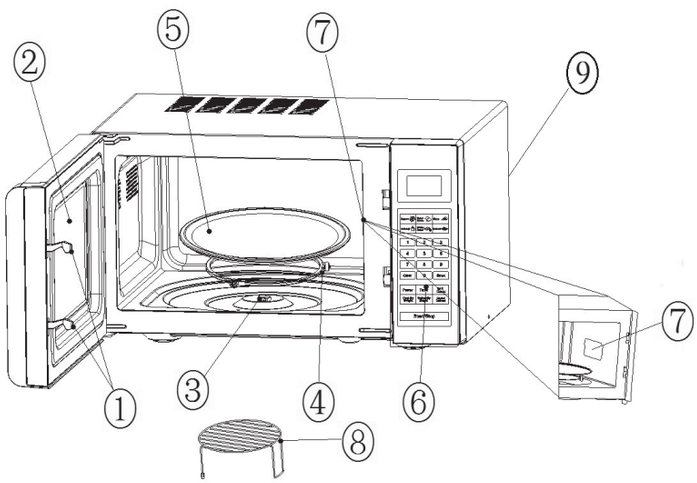



| | | |
|---|---|---|
| 1 | 爐門安全鎖系統 | 爐門必須關閉，微波爐才能工作。如產品操作時打開爐門，烹調程式將會自動終止。 |
| 2 | 爐門玻璃窗 | 可觀察食物烹調情況。 |
| 3 | 轉軸 | 放置玻璃轉盤的地方；位於下面的馬達運作帶動玻璃轉盤旋轉。 |
| 4 | 轉盤旋轉架 | 置於內腔中央。將轉盤放在旋轉架上，讓它穩定在轉軸上。 |
| 5 | 玻璃轉盤 | 用於放置盛載食物的器皿。烹調時，必須正確安裝於轉軸及轉盤旋轉架上才能轉動，使食物可均勻地受熱，達至理想的烹調效果。 |
| 6 | 控制面板 | 控制本產品，詳見**章節7.使用方法**。 |
| 7 | 導波管蓋(**不可拆除**) | 位於爐內腔右方。用以擋住微波孔，防止加熱時因食物內水分噴散，導致微波孔堵塞。 |
| 8 | 烤架 | 可直接放置食物，或盛載烤盤／耐熱碟。(不適用於微波或組合烹調功能) |
| 9 | 距阻 | 位於機背，使產品與牆身保持一定距離，確保良好通風。 |



Shun Hing Grill (W230TG) (66723(M)).indb 6 2020-08-19 19:03:00

# 7. 使用方法

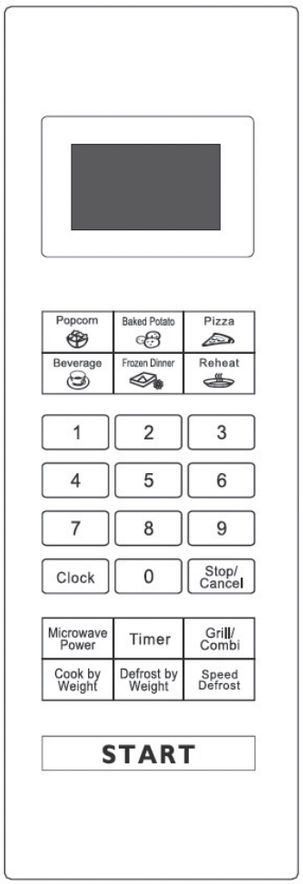


## 7.1 時鐘(Clock)

接上電源後，所有指示燈閃動3次，產品會發出一聲提示音，顯示窗的“ENTER”、“TIME”及“CLOCK”字樣會亮起，而“：”符號會保持閃動，表示用戶可設定目前時間。如30秒內未有設定時間，“CLOCK”及“：”會亮起，產品返回備用狀態。

1. 於備用狀態下，按【 Clock 】鍵設置時間，“ENTER”、“TIME”及“CLOCK”字樣會再次亮起，而“：”符號會保持閃動。
2. 順序按數字鍵輸入目前時間。時間設定是24小時制。（例如:順序輸入【 1 】、【 4 】、【 3 】及【 0 】，顯示窗顯示為14:30，即下午2時30分）
3. 按【 Clock 】鍵確認，“：”符號會停止閃動，時鐘設定已完成。

*** 注意：於烹調時，用戶可按【 Clock 】鍵顯示目前時間。

*** 注意：當電源被切斷時，用戶必須重新調校時鐘。

## 7.2 計時器(Timer)

1. 於備用狀態下，按【 Timer 】鍵，顯示窗的”ENTER”、“TIMER”及“TIME”字樣亮起，而“：”符號會保持閃動。
2. 順序按數字鍵輸入倒數時間，最少輸入1位數字。（例如：輸入【 5 】代表5秒鐘；最長設定時間為99分鐘99秒）
3. 按【 START 】鍵開始倒數。
4. 倒數期間，用戶可按【 Timer 】鍵檢視剩餘時間。
5. 完成後，會發出一聲提示音提示用戶。

*** 注意：計時器功能只進行時間倒數，並不會出現加熱效果。

*** 注意：顯示窗會於開始倒數後3秒轉回時鐘顯示。

*** 注意：如須取消計時器，先按【 Timer 】鍵，再按【 Stop/Cancel 】鍵取消。

## 7.3 微波(Microwave Power)

1. 於備用狀態下，按【 Microwave Power 】鍵設定微波火力，共有10段微波強度可供選擇（若不設定火力，產品會以最高微波強度進行烹調），具體資料如下：

| 按【Microwave Power】鍵次數 | 顯示 | 微波強度 |
|---|---|---|
| 按1次 | P100 | 100% |
| 按2次 | P90 | 90% |
| 按3次 | P80 | 80% |
| 按4次 | P70 | 70% |
| 按5次 | P60 | 60% |
| 按6次 | P50 | 50% |
| 按7次 | P40 | 40% |
| 按8次 | P30 | 30% |
| 按9次 | P20 | 20% |
| 按10次 | P10 | 10% |
| 按11次 | P00 | 0% |

2. 設定火力後，用戶可直接設定所需的烹調時間，此時，顯示窗的”ENTER”及“TIME”字樣會亮起。
3. 按數字鍵設定烹調時間，最長設定時間為99分鐘99秒。如烹調時間多於1分鐘，用戶必須同時設定分鐘及秒鐘。（例如 : 設定烹調時間為20分鐘，可按數字鍵【 2 】、【 0 】、【 0 】及【 0 】，顯示窗顯示20:00。）
4. 按【 START 】鍵進行烹調，剩餘時間會倒數顯示。
5. 完成後，顯示窗顯示“End”字樣，並有4聲提示音以提醒用戶。

*** 注意：如須取消微波功能，於倒數期間按【 Stop/Cancel 】2次即可。



Shun Hing Grill (W230TG) (66723(M)).indb 7 2020-08-19 19:03:00

### 7.4 燒烤／組合烹調(Grill/Combi)

按【 Grill/Combi 】鍵選擇燒烤／組合功能，有以下三種可供用戶選擇：

| 名稱 | 顯示 | 微波時間 | 燒烤時間 | 適用烹調# |
|---|---|---|---|---|
| 燒烤 | G. | – | 100% | 烘烤食物 |
| 組合1 | C.1 | 30% | 70% | 牛排 |
| 組合2 | C.2 | 55% | 45% | 肉類、燒春雞 |

例子：以組合2加熱食物10分鐘，具體操作如下：

1. 於備用狀態下，按【 Grill/Combi 】鍵3次選擇組合2烹調功能，顯示窗顯示 “C.2”；
2. 按數字鍵順序輸入【 1 】、【 0 】、【 0 】及【 0 】，顯示窗顯示 “10:00” 而 “ENTER” 及 “TIME” 字樣會亮起；
3. 按【 START 】鍵，產品將開始運作，剩餘時間會倒數顯示。
   （此建議應用烹調及時間只作參考，用戶可因應需要及個人喜好自行調整。）

*** **警告！**以燒烤或組合烹調食物時，應小心選擇合適容器（詳見**章節3.器皿注意事項**）；另外，由於機身會變得非常灼熱，兒童必須接受負責安全人士的監督或指導才可使用。

### 7.5 爆谷(Popcorn)

1. 於備用狀態下，按【 Popcorn 】鍵，顯示窗顯示 “CODE” 字樣及預設烹調時間。
2. 如用戶有意按照個人需要重新設定烹調時間，可再按【 Popcorn 】鍵，顯示窗的 “ENTER” 及 “TIME” 字樣會亮起，而 “：” 符號會保持閃動，順序按數字鍵輸入烹調時間。（例如：輸入【 5 】代表5秒鐘；最長設定時間為99分鐘99秒）
3. 按【 START 】鍵進行烹調。

*** 注意：若用戶曾更改烹調時間，所設定的時間將會被自動儲存，用作下次烹調的參考。（例如：本次的烹調時間重設為3:00，於下一次使用時的預設時間會改為3:00）

*** 注意：爆谷必須使用微波爐專用的爆谷器皿盛載，而紙袋包裝的微波爐爆谷亦適用於微波爐烹調，但製作時須加倍注意，並遵照食品製造商的說明指示及用法設定本產品。

### 7.6 焗薯(Baked Potato)

1. 於備用狀態下，按【 Baked Potato 】鍵，顯示窗的 “ENTER” 及 “AMT” 字樣亮起。
2. 輸入數字1至4設定焗薯份量（以200克為1個單位計算，如薯仔重400克，請選擇2個單位）。輸入份量後，顯示窗顯示 “CODE” 字樣及對應烹調時間。預設的烹調時間如下：

| 輸入數字鍵 | 顯示時間 |
|---|---|
| 1 | 4：20 |
| 2 | 8：10 |
| 3 | 12：00 |
| 4 | 16：00 |

3. 按【 START 】鍵進行烹調。

*** 注意：此功能已預設烹調火力及時間，用戶**不能**自行更改。

### 7.7 薄餅(Pizza)

1. 於備用狀態下，按【 Pizza 】鍵，顯示窗顯示 “CODE” 字樣及烹調時間。
2. 將1至2塊件裝的薄餅放入爐內。
3. 按【 START 】鍵進行烹調。

*** 注意：此功能已預設烹調火力及時間，用戶**不能**自行更改。



Shun Hing Grill (W230TG) (66723(M)).indb 8 2020-08-19 19:03:00

### 7.8 熱飲(Beverage)

1. 於備用狀態下，按【 Beverage 】鍵，顯示窗的 “ENTER” 及 “AMT” 字樣亮起。
2. 輸入數字設定加熱飲品份量（以每5安士為1個單位計算，如加熱10安士飲品，請選擇2個單位）。輸入份量後，顯示窗顯示 “CODE” 字樣及對應烹調時間。預設的烹調時間如下：

| 輸入數字鍵 | 顯示時間 |
|---|---|
| 1 | 2：00 |
| 2 | 3：50 |
| 3 | 5：50 |
| 4 | 6：20 |

3. 按【 START 】鍵進行烹調。

### 7.9 冷凍熟食(Frozen Dinner)

1. 於備用狀態下，按【 Frozen Dinner 】鍵，顯示窗的 “ENTER” 及 “AMT” 字樣亮起。
2. 輸入數字設定冷凍食物的份量（以每9安士為1個單位計算，如加熱18安士食物，請選擇2個單位）。輸入份量後，顯示窗顯示 “CODE” 字樣及對應烹調時間。預設的烹調時間如下：

| 輸入數字鍵 | 顯示時間 |
|---|---|
| 1 | 5：55 |
| 2 | 11：00 |

3. 按【 START 】鍵進行烹調。

### 7.10 翻熱(Reheat)

1. 於備用狀態下，按【 Reheat 】鍵，顯示窗顯示 “CODE” 字樣及烹調時間。
2. 將已放涼並用器皿盛載的食物放入爐內。
3. 按【 START 】鍵進行烹調。

*** 注意：此功能已預設烹調火力及時間，用戶**不能**自行更改。

### 7.11 按重烹調(Cook by Weight)

此功能是按照食物種類及重量自行調節加熱強度，具體步驟如下：

1. 於備用狀態下，按【 Cook by Weight 】鍵，顯示窗的 “ENTER” 及 “CODE” 字樣亮起。
2. 按照下表，根據食物種類輸入數字：

| 輸入數字 | 食物種類 | 烹調上限 |
|---|---|---|
| 1 | 牛肉 | 3公斤 |
| 2 | 羊肉 | 3公斤 |
| 3 | 豬肉 | 2公斤 |

3. 設定食物種類後，顯示窗的 “ENTER” 及 “Kg” 字樣亮起，而個位數字 “0.” 會閃動。
4. 輸入3位數字設定所需烹調食物重量（以公斤計算）。由0.1公斤開始，輸入的重量須以每0.05公斤為計算單位，即0.15、0.2、0.25……如此類推。
5. 設定重量後，顯示窗顯示對應的烹調時間。
6. 按【 START 】鍵進行烹調。
7. 烹調過程中，本產品會發出兩聲提示音提醒用戶翻動食物，屆時產品將暫時停止運作。待完成翻動及關上爐門後，用戶須自行按【 START 】鍵繼續烹調程序。
8. 完成後，顯示窗顯示 “End” 字樣，並有4聲提示音以提醒用戶。



Shun Hing Grill (W230TG) (66723(M)).indb 9 2020-08-19 19:03:00

### 7.12 按重解凍(Defrost by Weight)

此功能是按照食物重量自行調節解凍強度，具體步驟如下：

1. 於備用狀態下，按【 Defrost by Weight 】鍵，顯示窗的 “ENTER” 及 “Kg” 字樣亮起，而個位數字 “0.” 會閃動。
2. 輸入3位數字設定所需解凍食物重量( 以公斤計算 )。由0.1公斤開始，輸入的重量須以每0.05公斤為計算單位，即0.15、0.2、0.25……如此類推。( 解凍食物的重量上限為3公斤 )
3. 設定重量後，顯示窗顯示對應的烹調時間。
4. 按【 START 】鍵進行解凍，顯示窗顯示 “DEF” 字樣及剩餘解凍時間將以倒數形式顯示。
5. 解凍過程中，本產品會發出兩聲提示音提醒用戶翻動食物；用戶須自行按【 Stop/Cancel 】鍵暫停運作。待完成翻動及關上爐門後，按【 START 】鍵繼續解凍程序。

### 7.13 快速解凍(Speed Defrost)

此功能是按照輸入的解凍時間為食物進行快速解凍。具體步驟如下：

1. 於備用狀態下，按【 Speed Defrost 】鍵，顯示窗的 “ENTER” 、“TIME” 及 “DEF” 字樣亮起，而 “:” 會閃動。
2. 輸入數字鍵設定解凍時間，最長設定時間為99分鐘99秒。如解凍時間多於1分鐘，用戶必須同時設定分鐘及秒鐘。(例如：設定解凍時間為2分鐘50秒，可按數字鍵【 2 】、【 5 】及【 0 】，顯示窗顯示2:50。)
3. 按【 START 】鍵進行解凍，顯示窗顯示 “DEF” 字樣及剩餘解凍時間將以倒數形式顯示。
4. 完成後，顯示窗顯示 “End” 字樣，並有4聲提示音以提醒用戶。

*** 注意：用戶可設定於此功能完成後開啟單段／多段的烹調模式；設定解凍所需時間後，用戶可按【 Microwave Power 】或【 Grill/Combi 】鍵設定加熱功能，及於完成單段烹調模式後再進行二段烹調模式設定，然後才按【 START 】鍵開始運作；屆時，顯示窗的 “DEF” 及 “MEM” 字樣將會同時亮起。

*** 注意：解凍食物的重量上限為3公斤。

### 7.14 多段烹調功能

例子：以100%微波強度加熱3分鐘，然後燒烤9分鐘

1. 參考「**章節7.3微波(Microwave Power)**」設定首段微波加熱強度。
2. 順序按數字鍵【 3 】、【 0 】及【 0 】設定3分鐘烹調時間後，按【 Grill/Combi 】鍵設定第二段燒烤功能。
3. 順序按數字鍵【 9 】、【 0 】及【 0 】設定9分鐘燒烤時間，然後按【 START 】鍵開始運作，顯示窗的 “MEM” 字樣將會同時亮起。
4. 完成後，顯示窗顯示 “End” 字樣，並有4聲提示音以提醒用戶。

***注意：用戶可最多設定2段烹調模式。

### 7.15 安全鎖

安全鎖功能可預防因清潔過程中錯誤開啟或小孩在沒人看管下操作本產品，具體步驟如下：

1. 在待機狀態下，長按【 Stop/Cancel 】鍵3秒鐘後，提示音會響起，顯示窗顯示 “OFF” 字樣，表示安全鎖功能已啟動，所有功能鍵將會被鎖定。
2. 長按【 Stop/Cancel 】鍵3秒解鎖，提示音會響起，產品回復備用狀態，顯示窗顯示目前時間，產品便可以再次操作。

### 7.16 安全提示

當完成烹調後，爐內燈和風扇也會自動關掉。若用戶不打開爐門或再次設定烹調程式，產品會每兩分鐘自動發出3聲提示音，以提醒用戶。



Shun Hing Grill (W230TG) (66723(M)).indb 10 2020-08-19 19:03:00

## 8. 特別聲明

1. 本資料上所有內容經過核對，如有任何印刷及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀、顏色如有改動，則以製造商資料為準。
3. 如本資料之中英文版本有差異時，應以中文版為準。
4. 使用說明書的電子副本可以通過電子郵件發送致用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

## 9. 售後服務

1. 由購買收據日期起之一年保修期內，經信興電器服務中心有限公司之服務人員證實產品故障屬正常使用情況下發生者，本公司將提供免費修理及更換零件服務。經更換之任何損壞零件，將歸屬本公司。保修範圍不包括修理或更換損耗性零件如附件、外接線或機殼等；或除銹、髹漆、加工或清洗；或裝拆任何妨礙微波爐維修工作之裝修或設施，如需有關服務，用戶須另付費用。如不當使用本產品，或作(半)商業用途，或未依照使用說明書操作，維修保養將無效，本公司不會承擔任何損壞的維修及賠償。

2. 用戶必須於維修時出示購買／換購單據及蓋有銷售點／換購中心印章的保修登記卡(必須登記並保存)，如有任何疑問，請致電信興電器服務中心有限公司熱線查詢：2406 5666。





Shun Hing Grill (W230TG) (66723(M)).indb 11 2020-08-19 19:03:00

Thank you for choosing Rasonic Grill Microwave Oven. Please read the operation manual carefully before using and keep it for your future reference.

# Table of Contents

1. Installation Guideline

2. Important Safeguards for Usage

3. Utensil Guidelines

4. Cleaning and Storage

5. Product Specifications

6. Product Identification

7. Operation Instructions

8. Special Avowal

9. After Sales Service



Shun Hing Grill (W230TG) (66723(M)).indb 12 2020-08-19 19:03:00

When using the appliance, please follow the safety precautions as below:
**Warning!** Potential injury and product damage by misuse

## 1. Installation Guideline

### To prevent fire, burn or electric shock

### Before in use

1. The appliance is a high power consumption electric appliance. Use an independent power source to supply. Do not connect with other high wattage appliance under the same socket, and make sure the input voltage match the rated voltage marked on the appliance.
2. The appliance must be earthed to avoid electric shock.
3. Net weight of the appliance is approximately 11 kg. Place the appliance on a horizontal rigid surface.
4. Place the appliance in a space with good ventilation. The appliance is freestand type, use it on table top and **DO NOT** place in a cabinet. Do not cover or block the air vents to avoid overheating, and do not place anything on the top of the appliance.
5. Allow at least 20cm clearance in between the top cover and the ceiling, at least 5cm on both sides to the wall and at least 10cm between back cover and the wall. The appliance and the ground should be at least 85cm apart. Make use of the distance spacer at the back of the appliance to limit the distance. Do not remove oven feet.
6. Do not place the appliance near poor heat-resistant materials such as plastic table cloth and cotton cloth, etc.
7. Place the appliance in a well-ventilated and dry place and keep it away from environment of corrosive gas, fire source, high temperature, steam, humid, oily or places where close to flammable materials.
8. Do not operate the appliance if the room temperature is too high.
9. The appliance shall be placed far away from TV, radio or antenna to prevent disturbance. Otherwise, noise may occur.

**WARNING**: If the door seals are damaged, the oven must not be operated until it has been repaired by a trained person.

## 2. Important Safeguards for Usage

### 2.1 Before first use

1. Remove all packing materials from the appliance. If there is protective film wrapping the appliance, remove it before using. (**CAUTION**: Do not remove the waveguide cover on the right hand side of oven cavity.)
2. Examine thoroughly if there is crack or damage on the appliance and accessories such as door safety lock, oven door and glass tray. Do not assembly or use it if any part is damaged.
3. Using grill function for the first time, it is a normal phenomenon if smell or odor generated. As not to affect the cooking result, use grill function to heat up the appliance for 20 minutes and open the oven door for 10 minutes before placing the ingredients.
4. As there is protective oil remain inside the oven cavity, it usually would smell the odor, even a slight smoke, it is normal and would not occur after using several times, keep the window open to ensure good ventilation.

### 2.2 To prevent the risk of fire in the oven cavity

1. Do not overcook the ingredients.
2. Remove all metallic seals or wire twists from the ingredients and packing. Electric arc generated on metallic surfaces may cause fire.
3. When heating food placed on plastic or paper containers, keep an eye on the appliance due to possibility of ignition or burning as the materials are flammable.
4. Do not use the appliance to heat up oil or deep-fry as oil temperature may become uncontrollable.
5. To make popcorn, use special popcorn bags for microwave use only.
6. Keep the oven cavity clean after each operation, especially the oven door, the contact surface between the cavity and door and the waveguide cover (Clean the waveguide cover by dry cloth only). Food residue and grease accumulated may deteriorate the material surface or cause dark smoke or fire. This could adversely affect the life cycle of the appliance and cause other hazard.





Shun Hing Grill (W230TG) (66723(M)).indb 13 2020-08-19 19:03:00

7. If smoke or fire occurs during operation, keep the oven door closed in order to stifle any flames; otherwise, air will trigger the fire burning more intensely. Under safe situation, user should stop the operation and disconnect the main power supply immediately.

### 2.3 To prevent microwave leakage

To prevent harmful effects caused by microwave leakage, pay attention to the precautions below:

1. **WARNING!** Never tamper with the door safety lock system. If oven door cannot be closed firmly; or any deformation or damage found on the oven door or parts (e.g. hinge), stop operating the appliance immediately to avoid hazards. Contact Shun Hing Electric Service Centre Limited for repair before use.
2. Never place any foreign objects into the cavity during operation, especially metallic objects (e.g. fast food foil containers, etc).
3. Make sure to put the roller ring and glass tray into the oven cavity before operation.
4. Never use the microwave function without absorbing materials (such as food or water). These materials should be placed inside the cavity because reflection of microwave energy will affect the appliance performance. In case the operation starts accidentally without load, switch off the appliance immediately.
5. Do not heat chemicals or non-edible products. Do not clean the appliance with corrosive chemicals.
6. **WARNING!** It is hazardous for anyone other than an authorized person to carry out repair service that involves removal of product cover and waveguide cover; otherwise, it may cause microwave leakage. Contact Shun Hing Electric Service Centre Limited if necessary.

### 2.4 Food precautions

1. After heating baby food in feeding bottles and baby food jars, always stir or shake and check the temperature before serving. Ensure that heat is evenly distributed and the risk of scald or burns can be avoided.
2. Never use the appliance to heat or hard-boiled eggs, or in eggshells because pressure built up will lead to explosion. If needed, stab the egg yolk and egg white by toothpick before heating. Besides, do not take out cooked dumpling and fried eggs right after heating. It may lead to explosion or liquid splashing from the food even after microwave heating has ended. Open the oven door and leave it for a moment before taking out.
3. Peel the food with no pores on the surface (e.g. eggs, chestnuts, potatoes, sausages which is skinned), or cut a few slides on the food skins by knife or pierce it by folk; otherwise, foods may expend and as a result of explosion.
4. Observe the food often when cooking small amount of food to avoid fire.
5. If cling wrap is needed to cover the food, make sure it is compatible for microwave heating. Fold up a corner of the wrapper for proper ventilation. After cooking, remove the wrapper carefully to avoid scalding by steam.
6. Heating beverages can result in delayed eruptive boiling. Great care must be taken when handling the container.
7. Factors that may affect cooking time are preferred degree of moisture content, starting temperature, altitude, volume, size, shape of food and utensil used. User can adjust the cooking time based on cooking experience.

### 2.5 Usage precautions

1. Do not leave paper products, cooking utensils or food in the cavity when the appliance is not in use.
2. Make use of the original glass tray and roller ring. To avoid accident, never replace them by any parts not authorized by the manufacturer, otherwise warranty becomes invalid.
3. Do not use recycled paper products, as they may contain impurities which may cause spark and fires when used.
4. Do not hit or strike the control panel to avoid damage.
5. Do not cook food directly on the glass tray unless indicated in the manual. (Food should be placed in a suitable cooking utensil beforehand.)
6. Make sure the utensils do not touch the interior walls during cooking, it must be placed at the centre of the glass tray; otherwise it may affect the tray rotation and cooking result.



Shun Hing Grill (W230TG) (66723(M)).indb 14 2020-08-19 19:03:00

7. Do not store flammable materials on top or in the cavity as it may cause fire.
8. Never rest objects on the door while it is open.
9. Roasts and poultry cooking results by using a microwave thermometer. Do not use the conventional mercury thermometer in the appliance as it could cause fire or damage.
10. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
11. Always use oven gloves when moving, removing or flipping food to avoid burns.
12. During operation or after use, the product enclosure, oven cavity and accessible parts may be extremely hot. **DO NOT** touch to avoid burns. Children should be kept away from the appliance, use it under adult supervision.
13. During operation, less steam may accumulate inside the cavity or on the oven door, condensing water drops. It may also occur when the appliance is operated under high humidity condition. This is a normal phenomenon, user can wipe with a soft dry cloth. The appliance is still in good working condition; steam will be evaporated when the appliance is cooled down.
14. When open the oven door, aware of the force and check whether the food inside is splashed out or upset to avoid danger, especially when cooking soup or beverages.
15. Do not use the appliance for purposes other than cooking. (Malfunction may happen if uses it other than cooking.)
16. The appliance is intended for heating food and beverages. If it is used to dry food or clothing, as well as heating the warming pads, therapeutic devices (e.g. wheat bags), slippers, sponges, damp cloth or newspaper may lead to risk of injury, ignition or fire.
17. To prevent damaging the glass tray, follow the safeguards as below:
    a. Before cleaning the glass tray with water, let it cool down completely.
    b. Do not put hot food or hot utensils on a cold glass tray.
    c. Do not put cold food or cold utensils on a hot glass tray.
    d. Do not exceed the maximum loading weight 4.5 kg of the glass tray.
18. Never immerse the appliance body, power cord and plug in water or let them wet, as to avoid functional damage and electric shock.
19. Great care is necessary when using the power cord. Do not place heavy objects on the power cord and clip the power cord. Any modification of the power cord is prohibited. Do not stretch or twist the power cord. Always hold the plug tightly with hands when unplugging or plugging in the socket.
20. After use or when not in use, make sure to unplug the appliance from the socket to prevent electric leakage and electric shock due to insulation degeneration. Do not touch, plug or unplug the appliance by wet hands which can result in electric shock.
21. Be sure to unplug the appliance and must wait it to cool down before moving, checking or cleaning.
22. The appliance is for household use only. Do not use it outdoors and in any other purpose or method which is not following the instructions in the user manual. If the appliance is used improperly, for commercial or semi-commercial use, your warranty becomes invalid and our company will refuse any liability and repairing cost for the damage caused.
23. Keep it out of reach for infants. Great care is necessary in using the appliance, especially near children. Make sure that they do not play with the appliance. Also, children without adult supervision should not operate the appliance, do maintenance and keep them away from the appliance and its cord.
24. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
25. The appliance is intended to be used in household or similar application such as staff kitchen areas in shops, offices and other working environments. Do not use it outdoors.
26. Always check the power cord, plug, oven door and door safety lock to ensure they are in good condition. In order to avoid hazards, stop operating the appliance immediately if any damaged or the appliance is dropped. In such case, please contact Shun Hing Electric Service Centre Limited for repair.
27. In order to comply with safety regulations and avoid hazards, repair of electrical appliances must be carried by authorized technicians. If repair is needed, please present the official invoice, warranty registration card with the appliance for repair service and contact Shun Hing Electric Service Centre Limited, hotline at 2406 5666. The address can be found at the back page of this manual.





Shun Hing Grill (W230TG) (66723(M)).indb 15 2020-08-19 19:03:00

## 3. Utensil Guidelines

1. Utensils should be checked before use to ensure that it is suitable for microwave heating.
2. All metal objects, utensils with metallic or silver rim should not be used for heating because it will cause sparkling or over-heating. Damage the appliance may lead to fire or injury.
3. Avoid using containers which is straight-sided with narrow necks or sealed for cooking, as it may cause the container to explode.
4. To prevent fire, extreme care should be paid if foods are placed on disposable containers made by plastic, paper and other flammable materials.
5. Use wide-mouthed containers if heating liquids. If coffee powder, milk powder, cereal or other drink powder is added to the liquid, stir them thoroughly before heating. Let it cool down for few minutes after heating to prevent burns.
6. **WARNING**: Liquids or other foods (such as sealed glass or baby bottles etc.) must not be heated in sealed containers since they are liable to explode.
7. It is important to choose suitable cookware because the microwave energy must be able to penetrate the container to the food during cooking or defrosting. Round/oval dishes are preferable to square/oblong ones, as the food in the corners tends to overcook.

   A variety of cookware can be used as listed below. ("✔": Suitable, "✘": Unsuitable)

| Utensil | Combination Mode | Grilling | Microwave Cooking |
|---|---|---|---|
| Normal Plastic Utensils | ✘ | ✘ | ✘ |
| Microwave-safe plastic wrap | ✘ | ✘ | ✔ |
| Grill Microwave–safe Glassware | ✔ | ✔ | ✔ |
| Grill Microwave–safe Ceramic Cookware | ✔ | ✔ | ✔ |
| Normal Glassware | ✘ | ✘ | ✘ |
| Microwave–safe Plastic Utensil | ✘ | ✘ | ✔ |
| Aluminum Foil/Utensils | ✘ | ✔ | ✘ |
| Metal Rack | ✘ | ✔ | ✘ |
| Metal Utensil/Cookware | ✘ | ✔ | ✘ |
| Bamboo wood and Paper | ✘ | ✘ | ✘ |

## 4. Cleaning and Storage

1. Clean the food residues in the microwave oven regularly. The life cycle of the appliance may be adversely affected and possibly result in a hazardous situation if user cannot keep the appliance clean, leading waveguide to surface or other damages.
2. Always unplug the appliance and let it cool down completely before cleaning.
3. Do not clean the waveguide cover in the appliance cavity (located on the top right hand side) directly with water or damp cloth.
4. Always keep the inner, outer surface and oven window clean. Make use of mild detergent and a damp cloth or sponge to wipe during cleaning. Never scrape its surface with a hard brush to avoid damaging to the surface. (Attention: Do not allow water penetrating through gaps and air vents during cleaning.
5. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since scrappers can scratch the surface resulting in shattering of the glass.
6. Steam cleaner is prohibited.
7. The glass tray and the roller ring should be cleaned regularly. Clean them by mild sudsy water, rinse with clean water and dry them afterward. Then put them back to the proper position.
8. If the control panel gets wet, clean with a soft and dry cloth. Do not use coarse and abrasive detergent and tool to clean the control panel. When cleaning the control panel, leave the door open to prevent the appliance from accidentally turning on.
9. Do not use poisonous or corrosive detergent to clean the appliance.
10. Allow the appliance to cool down completely and clean it before storage. Put it into the box and store in a dry place.
11. Never wind the power cord tightly around the appliance or put any pressure on the power cord when storage as it could cause damage to the power cord.
12. Do not place any objects or allow dust or detergent residue accumulated in between the cover and the oven door.




Shun Hing Grill (W230TG) (66723(M)).indb 16 2020-08-19 19:03:00

## 5. Product Specifications

| | |
|---|---|
| Model | RMO-W230TG |
| Rated Voltage | 220-240V~ 50Hz |
| Rated Microwave Frequency | 2,450MHz |
| Rated Input Power (Microwave) | 1,150-1,280W |
| Rated Input Power (Grill) | 900-1,000W |
| Rated Output Power (Microwave) | 800W |
| Capacity | 23L |
| Net Weight | 12.3 kg (Approx.) |
| Exterior Dimension (W x D x H) | 483 x 367 x 281 mm (Approx.) |
| Cavity Dimension (W x D x H) | 338 x 326 x 210 mm (Approx.)* |

* Internal capacity is calculated by measuring the maximum width, depth and height of the cavity. Actual capacity for cooking food is less than the above value.

## 6. Product Identification

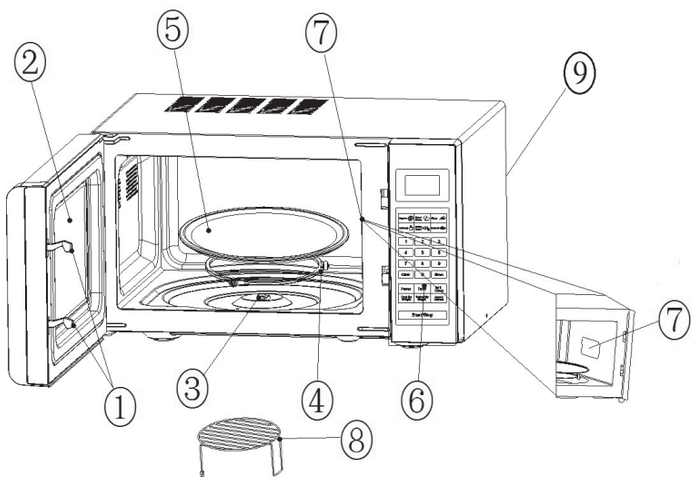



| | | |
|---|---|---|
| 1 | Door Safety Lock System | The appliance can operate only when the door is closed. Opening the door during cooking will pause the operation without cancelling the program. |
| 2 | Oven Window | Check the food condition through the window. |
| 3 | Rotating Axis | The location to place the glass tray; the motor underneath drives the glass tray to rotate. |
| 4 | Roller Ring | Place it in the middle of the cavity then place the glass tray on to the ring so that it locates firmly into the axis. |
| 5 | Glass Tray | Containers with food loaded will be placed on it. During operation, the food will rotate such that it can be evenly cooked. |
| 6 | Control Panel | To control the appliance, take note of **Chapter 7. Operation Instructions**. |
| 7 | Waveguide cover (**DO NOT REMOVE**) | Situated at the right of the cavity, protecting the microwave hole and preventing obstruction caused by spraying due to the moisture in the food. |
| 8 | Rack | Food can be placed either directly onto the rack, or on the roast tray or heat-resistant plate. (Not applicable to combination or microwave heating) |
| 9 | Distance Spacer | Situated at the back of the oven, which to ensure sufficient space from the back wall and keep good ventilation. |





Shun Hing Grill (W230TG) (66723(M)).indb 17 2020-08-19 19:03:00

# 7. Operation Instructions

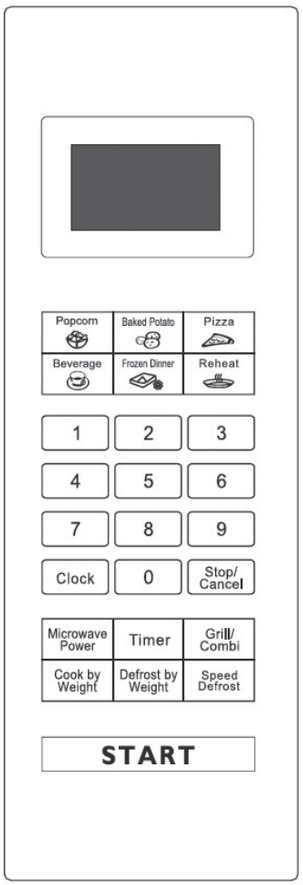


## 7.1 Clock

After plugging in the power socket, all the icons on the display will flash 3 times until a beep sound is heard. "ENTER", "TIME" and "CLOCK" will show on display while ":" will start flashing, meaning that this is clock setting procedure. If clock is not set within 30 seconds, "CLOCK" and ":" will show on the display and the appliance will return to standby mode.

1. To set the clock, press【Clock】key under standby mode. "ENTER", "TIME" and "CLOCK" will show on display again while ":" will keep flashing.
2. Enter current time by pressing number keys in order. The clock setting is a 24-hour clock. (For example: To set 14:30, press【1】,【4】,【3】and【0】in sequence. The display will show 14:30 meaning that it is half past two in the afternoon.)
3. Press【Clock】key to confirm, and ":" will stop flashing. Clock setting is done.

*** Note: During cooking, user can check the current time by pressing the【Clock】key.

*** Note: If the appliance is unplugged from the power socket, the clock must be reset.

## 7.2 Timer

1. Press【Timer】key under standby mode, "ENTER", "TIMER" and "TIME" will show on display while ":" will start flashing.
2. Enter the time by pressing number keys in order, at least input 1 digit to set the timer. (For example: Press【5】key to set 5 seconds, and the maximum time setting is 99 minutes 99 seconds.)
3. Press【START】key to start counting down.
4. When the time is counting down, user can check the remaining time by pressing the【Timer】key.
5. Once finished, a beep sound will be heard to remind user.

*** Note: Timer function only provide time count down, no heating function would be activated.

*** Note: Remaining time will show on the display for the first 3 seconds.

*** Note: To cancel, user must press【Timer】key to confirm first and cancel the timer by pressing【Stop/Cancel】key.

## 7.3 Microwave Power

1. In standby mode, power press【Microwave Power】key to set the microwave power levels. There are 10 levels for selection (Default setting is maximum power level if no further adjustment). Details are as follows,

| No. of【Microwave Power】key pressed | Display | Microwave Power |
|---|---|---|
| 1 time | P100 | 100% |
| 2 times | P90 | 90% |
| 3 times | P80 | 80% |
| 4 times | P70 | 70% |
| 5 times | P60 | 60% |
| 6 times | P50 | 50% |
| 7 times | P40 | 40% |
| 8 times | P30 | 30% |
| 9 times | P20 | 20% |
| 10 times | P10 | 10% |
| 11 times | P00 | 0% |

2. User can set the cooking time after defining the microwave power. "ENTER" and "TIME" will show on display at the moment.
3. Set the cooking time by pressing number keys. The maximum setting is 99 minutes 99 seconds, and both minute and second should be set in order to proceed if more than a minute cooking time is needed. (For example: To set 20 mintues, press【2】,【0】,【0】and【0】in sequence. Display will show 20:00)
4. Press【START】key to start cooking, remaining time will be shown in descending order.
5. Once finished, "End" will show on display together with 4 beep sounds to remind user.

*** Note: To cancel, press【Stop/Cancel】key 2 times during operation.



Shun Hing Grill (W230TG) (66723(M)).indb 18 2020-08-19 19:03:00

### 7.4 Grill/Combination (Grill/Combi)

Press【Grill/Combi】to select grill or combination functions, user can have the following 3 selections:

| Name | Display | Microwave Time | Grill Time | Suggested Application# |
|---|---|---|---|---|
| Grill | G. | – | 100% | Ingredients to be grilled |
| Combination 1 | C.1 | 30% | 70% | Steak |
| Combination 2 | C.2 | 55% | 45% | Meat and chicken |

For example: Choose Combination 2 to cook 10 minutes, details operation is as follows,

1. In standby mode, press【Grill/Combi】key 3 times to choose Combination 2 function. "C.2" will show on display.
2. Press【1】、【0】、【0】and【0】keys in sequence to set 10 minutes cooking time, display will show 10:00 together with "ENTER" and "TIME".
3. Press【START】key to start the operation. Display will be shown on display in descending order.
   (The suggested application and time are for reference only, user may adjust the desired setting depending on their personal preference.)

*** **Warning! When using grill/combination mode, use appropriate utensil to cook (refer to Chapter 3. Utensil Guidelines); besides, children should only use the oven under adult supervision due to the temperature generated.**

### 7.5 Popcorn

1. In standby mode, press【Popcorn】key. "CODE" and default cooking time will show on display.
2. User can set desired cooking time by pressing【Popcorn】key followed by number keys. "ENTER" and "TIME" will show on display while ":" will start flashing, then input the numbers in order. (For example: Press【5】for 5 seconds, and maximum setting is 99 minutes 99 seconds)
3. Press【START】key to start cooking.

*** Note: Once user defined a desired cooking time, it will be automatically stored in the system for next trail of cooking time reference. (For example: The cooking time is set to 3:00, and the default cooking time 3:00 will be shown on display as for next operation.)

*** Note: User must load the popcorn in a microwave-proof container. Some bagged popcorn which is specially made for microwave oven can be cooked too. Follow the instructions carefully from food manufacturers which are shown on the package. Pay extra attention to the appliance when making popcorn and do not leave it unattended.

### 7.6 Baked Potato

1. In standby mode, press【Baked Potato】key. "ENTER" and "AMT" will show on display.
2. Enter 1 to 4 to define the cooking quantity. Suggested to take 200 grams as a unit for consideration. For example, input number "2" if a potato weighted 400 grams. "CODE" and corresponding cooking time will show on display after defining the quantity, and the default cooking time are as follows,

| Input number | Cooking time |
|---|---|
| 1 | 4:20 |
| 2 | 8:10 |
| 3 | 12:00 |
| 4 | 16:00 |

3. Press【START】key to start cooking.

*** Note: The microwave power level and cooking time are preset, which **cannot** be adjusted.

### 7.7 Pizza

1. In standby mode, press【Pizza】key. "CODE" and default cooking time will show on display.
2. Place 1 to 2 slices of pizza into the oven cavity.
   Press【START】key to start cooking.

*** Note: The microwave power level and cooking time are preset, which **cannot** be adjusted.





Shun Hing Grill (W230TG) (66723(M)).indb 19 2020-08-19 19:03:01

### 7.8 Beverage

1. In standby mode, press【Beverage】key. "ENTER" and "AMT" will show on display.
2. Enter a number to define the cooking quantity. Suggested to take 5 ounces as a unit for consideration. For example, input number "2" if a beverage contained 10 ounces. "CODE" and corresponding cooking time will show on display after defining the quantity, and the default cooking time are as follows,

| Input number | Cooking time |
|---|---|
| 1 | 2:00 |
| 2 | 3:50 |
| 3 | 5:50 |
| 4 | 6:20 |

3. Press【START】key to start cooking.

### 7.9 Frozen Dinner

1. In standby mode, press【Frozen Dinner】key. "ENTER" and "AMT" will show on display.
2. Enter a number to define the cooking quantity. Suggested to take 9 ounces as a unit for consideration. For example, input number "2" if the food contained 18 ounces. "CODE" and corresponding cooking time will show on display after defining the quantity, and the default cooking time are as follows,

| Input number | Cooking time |
|---|---|
| 1 | 5:55 |
| 2 | 11:00 |

3. Press【START】key to start cooking.

### 7.10 Reheat

1. In standby mode, press【Reheat】key. "CODE" and default cooking time will show on display.
2. Place the cooled dishes into the oven cavity.
3. Press【START】key to start cooking.

*** Note: The microwave power level and cooking time are preset, which **cannot** be adjusted.

### 7.11 Cook by Weight

The microwave power level variant based on the type and weight of food.

1. In standby mode, press【Cook by Weight】key. "ENTER" and "CODE" will show on display.
2. Select type of food by pressing number key which is shown below,

| Input number | Type of food | Maximum amount |
|---|---|---|
| 1 | Beef | 3kg |
| 2 | Mutton | 3kg |
| 3 | Pork | 2kg |

3. "ENTER" and "Kg" will show on display after defining the type of food, and digit "0." will start flashing.
4. Enter 3 digits to define the food weight (kg in unit). The weight entered must be a multiplier of 0.05kg, starting from 0.1, increasing to 0.15, 0.2, 0.25 etc.
5. Corresponding cooking time will show on display after defining the food weight.
6. Press【START】key to start cooking.
7. During heating, the appliance will have 2 beep sounds reminding user to flip the food. Operation will be paused until flipping is finished with door closed, and user should press【START】key manually to resume the operation.
8. Once finished, "End" will show on display together with 4 beep sounds to remind user.



Shun Hing Grill (W230TG) (66723(M)).indb 20 2020-08-19 19:03:01

### 7.12 Defrost by Weight

The microwave power level variant based on the food weight. Procedures are as follow,

1. In standby mode, press【Defrost by Weight】key. “ENTER” and “Kg” will show on display, and digit “0.” will start flashing.
2. Enter 3 digits to define the food weight (kg in unit). The weight entered must be a multiplier of 0.05kg, starting from 0.1, increasing to 0.15, 0.2, 0.25 etc. (The maximum food weight is 3 kg.)
3. Corresponding cooking time will show on display after defining the food weight.
4. Press【START】key to start defrost operation. “DEF” and remaining cooking time will show on display in decreasing order.
5. During defrost operation, the appliance will have 2 beep sounds reminding user to flip the food, but user should press【Stop/Cancel】 key manually to pause the operation. Once flipped and door closed, press【START】key again to resume the defrost operation.

### 7.13 Speed Defrost

User should base on the weight of food to define the defrosting time. Procedures are as follows,

1. In standby mode, press【Speed Defrost】key, “ENTER”, “TIME” and “DEF” will start flashing.
2. Set the defrosting time by pressing number keys. The maximum setting is 99 minutes 99 seconds, and both minute and second should be set in order to proceed if more than a minute defrosting time is needed. (For example: To set 2 minutes 50 seconds, press【2】,【5】and【0】 in sequence: Display will show 2:50).
3. Press【START】key to start the operation, “DEF”and remaining time will show on display in decreasing order.
4. Once finished, “End” will show on display together with 4 beep sounds to remind user.

*** Note: User can set single/multi stages cooking functions after the completion of speed defrost function. Once define the defrosting time, user can press【Microwave Power】or【Grill/Combi】key to set cooking function and define the second stage cooking function after setting the first stage cooking function. Then, press the【START】key to confirm. "DEF" and "MEM" will show on display at the same time.

*** Note: The maximum weight of frozen food is 3kg.

### 7.14 Multi stages cooking sequence

For example: Use 100% microwave power to heat 3 minutes and grill 9 minutes

1. Refer to **Chapter 7.3 Microwave Power** to define the first stage microwave power.
2. Input【3】,【0】and【0】in sequence to set cooking time as 3 minutes, then press【Grill/Combi】key to define the second stage grilling function.
3. Input【9】,【0】and【0】in sequence to set grilling time as 9 minutes, then press【START】key to start the operation.
4. Once finished, “End” will show on display together with 4 beep sounds to remind user.

*** Note: User can set 3 cooking stages in maximum.

### 7.15 Child Safety Lock

Safety lock function can prevent children from operating the microwave oven without supervision and prevent user mistakenly switch on the microwave oven when cleaning. Procedure are as follows:

1. Under standby mode, press and hold【Stop/Cancel】key for 3 seconds, a beep sound will be heard and “OFF” will show on display, representing the activation of child safety lock.
2. Press and hold the【Stop/Cancel】key for 3 seconds to deactivate the lock function, a beep sound will be heard and the appliance will return to standby mode while current time will show on display. The microwave oven resume in operation again.

### 7.16 Safety Hints

After the completion of operation, the cavity light and fan will turn off automatically. If user do not open the oven door, the microwave oven will have 3 beep sounds for every 2 minutes to remind user.





Shun Hing Grill (W230TG) (66723(M)).indb 21 2020-08-19 19:03:01

## 8. Special Avowal

1. The content in the operation manual has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the operation manual will be updated in new version without prior notice. The product appearance and specification are subject to the manufacturer information.
3. In case there is any inconsistency or conflict between the English versions and Chinese versions of the terms, the Chinese versions shall prevail.
4. E-copy of user manual can be sent by e-mail on request, please call Shun Hing Electric Works & Engineering Co., Ltd. at 2861 2767.

## 9. After Sales Service

1. For any defect, in the judgment of technician from Shun Hing Electric Service Centre Limited, caused under normal use, our company is responsible for repairing and replacing any parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defective part which has been replaced shall become our property. Warranty service does not cover the repair or replacement of consumable parts such as accessories, external cables or cabinet, etc; or rust-removal, painting, decoration or cleaning of the microwave oven; or removal and reinstatement of any decorations or facilities hindering the service work of the microwave oven. Additional charges shall be levied if such services are required. If the appliance is used improperly, for commercial or semi-commercial use, or not following the instructions in the operation manual, the warranty becomes invalid and our company will refuse any liability and repairing cost for the damage caused.

2. User must present the official invoice/redemption voucher and the warranty registration card (Shall be registered and keep it well) with the chop from sales point/redemption center for maintenance. For enquiries, please call Shun Hing Electric Service Centre Limited hotline at 2406 5666.



Shun Hing Grill (W230TG) (66723(M)).indb 22 2020-08-19 19:03:01

# 備忘錄

# 備忘錄

SHUN HING GROUP
信興集團
SINCE 1953

Rasonic 樂信牌


## 信興電工工程有限公司

**SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.**

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓909-912室
電話：2861 2767　　圖文傳真：2865 6706
網址：http://www.rasonic.com　　電郵：shew@shunhinggroup.com

Office: Room 909-912, 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.
Tel: 2861 2767　　Fax: 2865 6706
Website: http://www.rasonic.com　　E-mail: shew@shunhinggroup.com

保養及維修Maintenance and Repair Service:

## 信興電器服務中心有限公司

**SHUN HING ELECTRIC SERVICE CENTRE LTD.**

香港新界葵涌勝耀街2號信興中心11樓
服務熱線：2406 5666　　傳真號碼：2408 0316
網址：http://www.shesc.com/zh

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK
Service Hotline: 2406 5666　　Fax No.: 2408 0316
Website: http://www.shesc.com/en

客戶服務中心：
香港新界葵涌勝耀街2號信興中心1樓
九龍佐敦佐敦道23-29號新寶廣場20樓
香港天后琉璃街7號柏景中心22樓
澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre
1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.
20/F, Sino Cheer Plaza, 23-29 Jordan Road, Jordan, Kowloon
22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong
Avenida de Venceslau de Morais, No. 193-199,5 andar - I, Edf. Industrial Nam Leng, Macau


有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：http://www.shesc.com/zh
For the latest information of Hong Kong and Macau service center, please visit http://www.shesc.com/en

RMO-W0820