EPD30 Electromagnetic Flow Meter

Operation Manual



FineTek Co., Ltd.

No.16, Tzuchiang St., Tucheng Industrial Park, New Taipei City 23678
Tel: 886-2-22696789 Fax: 886-2-22686682
Website: http://www.fine-tek.com E-mail:info@fine-tek.com

08-PD30-B8-EK,08/03/2022

Contents

1. Reading Labels 1

2. Product Warranty 2
2.1 New Product Warranty 2
2.2 Repair Warranty 2
2.3 Service Network 3

3. Product Inspection 4
3.1 Check Content 4
3.2 Safety Inspection 4

4. Summary 4

5. Product Features 5

6. Applicable Scope 5

7. Environmental Condition 5

8. Working Principles 6

9. Technical Performance 7
9.1 Execution Standards 7
9.2 Basic Parameters and Performance Indicators 7
9.2.1 Technical Specification Table 7
9.2.2 Recommended Flow Range for Tube Diameters 8
9.2.3 Lining Material 8
9.2.4 Electrode Material 9
9.2.5 Housing Protection Rating(IP) 9

10. Appearance and Dimension 10
10.1 JIS 10K & 20K 10
10.2 ANSI 150Lbs & 300Lbs 12
10.3 DIN PN40 & PN16 & PN10 13

11. Installation 14
11.1 Conditions required to guarantee the measurement accuracy of the electromagnetic flow meter: 14
11.2 Safety Measures 14
11.3 Inspection before Installation 14
11.4 Handling 15
11.5 Correct Installation 15
11.6 Notes for Installation on the Pipe 17
11.7 Grounding Requirements 18
11.8 Changing the Direction of the Transmitter Box 18

12. Wiring and Using 19
12.1 Wiring 19
12.1.1 Notes for Wiring 19
12.1.2 Open the external cover on the rear side, you will see the wiring terminal as shown below. 19

13.Inspection before Power-On 20

14. Parameter Functions 21
14.1 Procedure for Menu Setting 21
14.1.1Functions of the Display Interface 21
14.1.2 Button Functions in Parameter Setting Status: 22
14.2 Various Parameter Setting Ranges 22
14.3 System record illustration 26

15. Ordering Information 28

16. Transportation and Storage 30

17. Fault Inspection and Repair 31

18. MODBUS Communication Protocol 32

1. Reading Labels

Thanks for purchasing FineTek's Product. This operation manual describes the product features, working principles, operation and maintenance methods. It makes the user fully understand how to use the product correctly, so as to prevent dangerous situations such as device damage or operator injury.

- Please read this operation manual completely and carefully before using the product.
- Please contact the company if this operation manual can't satisfy your demands.
- The content of the operation manual is updated based on the version upgrade, which will be uploaded to the website for the user to access.
- Please don't disassemble or repair the product on your own, as this will make you disqualified from availing of the warranty service. Please send the product back to the company for repair and calibration, or just contact the company.
- Explanation of warning signs:



Danger→ It indicates that wrong operation will cause death or major disasters.



Note→ It indicates that wrong operation will cause injury and device damage to some extent.



Electric shock→ It warns of possible electric shock.



Fire→ It warns of possible fire.



Prohibited→ It indicates the prohibited wrong behavior.

2. Product Warranty

2.1 New Product Warranty

- We don’t charge for the inspection, part/s and repair for the product of the company that has a defect within 12 months from the delivery date and meets the warranty terms.
- If the product defect is not due to human error during its transportation, user may change to a new unit from the company within 7 days from delivery date.
- When the product needs to be sent back to the factory for repair, please send the whole set, and don’t disassemble the parts. Moreover, please be sure it is completely packed to avoid damage and causing more loss and defect during the transportation.
- The warranty is not available for causes that fall under the following circumstances, for which the company shall charge for the inspection, part/s and repair according to the actual condition:
  - The product or its parts are beyond the warranty period.
  - Fault or damage is caused by not following the instruction and use environment described on the operation manual.
  - The product damage is caused by a force majeure factor (natural disasters, floods, fire, earthquakes, lightning, typhoon, etc.), human destruction (scratches, dropping, latch broken, tapping, cracks and punching), human error (using improper voltage, high-humidity, water leakage, stain, corrosion, loss, improper storage, etc.) and other abnormal factors.
  - The damage is caused by the customer or the 3rd party through the installation, addition, expansion, modification and repair of parts not authorized or certified by the company.
  - The volume label information is wrong or unclear, so the product serial number can’t be confirmed.

2.2 Repair Warranty

A **6-month** warranty service is provided for the repaired part of the product, during which the same product can be repaired free of charge in case of the same fault.

2.3 Service Network

Company	Address	Telephon	Fax
Taipei Headquarters (Taiwan)	No.16, Tzuchiang St., Tucheng Industrial Park, New Taipei City 23678	+886 2-2269-6789	+886 2-2268-6682
Taichung Sales office (Taiwan)		+886 4-2465-2820	+886 4-2463-9926
Kaohsiung Sales office (Taiwan)		+886 7-333-6968	+886 7-536-8758
Fine automation Co., Ltd. (China)	No. 451, Duhui Road, Zhuanqiao Township, Minhang District, Shanghai City 201109	+86 021-64907260	+86 021-6490-7276
Aplus FineTek (Sensor Inc.)	355 S. Lemon Ave, Suite D, Walnut, CA 91789	1 909 598 2488	1 909 598 3188
FineTek Pte Ltd. (Singapore Branch)	37 Kaki Bukit Place, Level 4 Singapore 416215	+65 6452-6340	+65 6734-1878
FineTek GmbH (Germany Branch)	Bei den Kämpen 26 21220 Seevetal-Ramelsloh, Germany	+49 (0) 4185 8083 0	+49 (0) 4185 8083 80
FineTek Co., Ltd. (Indonesia Branch)	PERGUDANGAN TUNAS BITUNG JL. Raya Serang KM. 13,8, Blok C3 No. 12&15, Bitung Cikupa, Tangerang 15710	+62 021-2958-1688	+62 021-2923-1988

3. Product Inspection

3.1 Check Content

- 1 flow meter
- 1 operation manual
- 1 product inspection sheet
- 1 grounding ring set (2 rings) (Optional)

3.2 Safety Inspection

- Please check whether the external package is deformed or damaged. Please remember to take a picture for evidence for compensation later.
- After unpacking, please check whether the content is deformed or damaged, or has any quality problem. Please remember to take a picture for evidence for compensation later.
- After unpacking, please check whether the content is consistent with the ordering info, and whether the quantity is right.
- Please contact the company within 7 days if any of the above situations occur (attach the picture together with your complaint). Otherwise, we won't compensate for, change or repair the product defect.

4. Summary

The company's electromagnetic flow meter adopts coil excitation, which is more stable than the traditional magnetism generation. After strict vibration and anti-noise test, it can work stably and is highly tolerant of complex environments in the industrial field, which also has a longer life span in practical application.

The electromagnetic flow meter has kept on evolving since its initial development, which is widely applied in monitoring various industrial fluid pipes, including power generation, water treatment, food, medication, shipping, dyeing & finishing, and semi-conductor process industries. With its simple working principle, the electromagnetic flow meter is widely applicable in various environments as long as the correct model is selected to match the fluid properties.

5. Product Features

- The measurement results is not affected by the change of liquid density, viscosity, temperature, pressure and conductivity.
- There are only two measurement points in the measuring tube without baffle and movable parts, so it won't cause pressure loss and jam.
- It can test the flow for the conducting fluid and the fluidic containing some solid granules.
- The straight tube section required for the installation just needs the upstream front 5D and downstream 2D of the flow meter without complicated pipeline design.
- The measurement turndown ratio can reach 1:100, which can achieve high accuracy especially for measuring small flow.
- It has a self-diagnosis function, which can automatically detect the excited signal, whether the measuring tube is empty and whether the electrode is stained or damaged.
- The lining can be common NBR(Nitrile), high-temperature or acid-proof & alkali-proof PTFE(Teflon)
- The maximum fluidic temperature permitted can reach 120℃(Teflon)
- The flow converter setting is simple, with powerful functionality.
- Available for records for parameter modifications, boot/ shut down device (Option)
- Authority management is available in Menu (Option)

6. Applicable Scope


- Conductivity: > 5 μS/cm
- Fluid properties: Pure liquid and fluidic containing some solid granules.
- Application industries: Power generation, water treatment, food, medication, shipping, dying & finishing, and semi-conductor process

7. Environmental Condition

- Ambient environment: -40℃ ~ 70℃
- Relative humidity: 5% ~ 95% of RH, without condensing water
- Atmospheric pressure: 86 ~ 106 KPa
- Power supply: 100~240Vac 50/60Hz or DC24V

8. Working Principles

The working principle of the electromagnetic unit is based on the Faraday law of electromagnetic induction. When the conductor moves in the magnetic field, it will generate induced EMF on both sides of the conductor in the orthogonal direction of the magnetic field direction and the motion direction. The EMF is directly proportional to the motion speed of the conductor and the magnetic induction intensity.
As shown in <Figure 1>, the conducting fluidic passes through the insulating tube with the internal diameter of D(m) at the average flowing speed V(m/s) that is equipped with a pair of measuring electrodes. Moreover, the tube is in a magnetic field with uniform magnetic induction intensity of B (T). In this case, the electrodes will induce the EMF (E) at the orthogonal direction of the magnetic field and the flowing direction. According to the law of electromagnetic induction, E can be written as Equation (1):

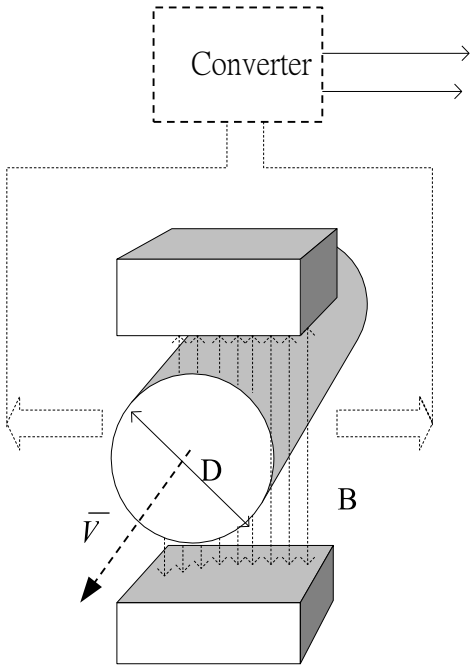

<Figure 1>

$$E = kB \cdot D \cdot V \quad (\mathrm{V}) \quad \ldots\ldots\ldots\ldots \quad (1)$$

Wherein, k is the proportional coefficient.

The volume flow can be written as

$$q_v = \frac{\pi D^2}{4} V \quad (m^3/s) \quad \ldots\ldots\ldots \quad (2)$$

From Equation (1) and (2), we can get:

$$q_v = \frac{\pi D}{4k} \frac{E}{B} \left(m^3/s\right) \quad \ldots\ldots\ldots\ldots \quad (3)$$

Thus, EMF can be represented as:

$$E = \frac{4kB}{\pi D} q_v(V) \quad \ldots\ldots\ldots\ldots\ldots \quad (4)$$

When B is a constant in Equation(3)

$\frac{\pi D}{4k} \frac{1}{B} = A$, Equation(3) can be modified as:

$$q_v = AE(m^3/s) \quad \ldots\ldots\ldots\ldots\ldots \quad (5)$$

It can be concluded that the flow **qv** is directly proportional to the EMF E.

9. Technical Performance

9.1 Execution Standards

IEC 60068-2-3	EN 61326-1:2013
IEC 61326-1	EN 55011:2009/A/:2010
IEC 60092-504	ISO 4064-1
JIS B2220	JIS B7554-1997
ANSI B16.5	DIN 25 Series

9.2 Basic Parameters and Performance Indicators

9.2.1 Technical Specification Table

Item	EPD30
Display	LCM 128* 64 pixel backlit type
Buttons	Tri-button operation
Communication interface	RS-485 (Modbus) (Optional support for ZigBee Pro wireless transmission)
Accuracy	±0.5% of reading@1m/s(0.2% optional)
Medium temperature	-20~120℃
Ambien temperature	-40~70℃*
Fluidic conductivity	>5uS/cm
Measuring scope	0.1m/s~10m/s
Current output accuracy	0.1% of Pulse Output Accuracy Temperature coefficient (100ppm/℃)
Operating pressure	16 kg/cm^2 (Please contact FineTek if pressure requested more than16 Kg/cm^2)
Current output mode	Proactive
Analog output	4~20mA
Maximum load of current output	<700Ω
Alarming current	3.6mA or 22mA
Frequency output scope	2~8KHz
Pulse width	Automatic (pulse width 50%)
Pulse mode	NPN transistor output 32vdc/200mA
Time constant	1~100s
Control output (DO)	NPN transistor output 32vdc/200mA;1-CH
Control input (DI)	Dry contact ON< 200Ω ; 1,000Ω< OFF ; 1-CH
Data logger(Option)	500 items. With calendar (Internal battery: Lift time>6 month)
Baud rate	1200~57600 bps
Protection rating	IP67/NEMA 4X
Enclosure material	Aluminum alloy
Input power	AC100~240V or DC24V
Power consumption	<10 W
Wire inlet specification	M20 x1.5*2
Excitation mode	Pulse DC
Vibration regulation	IEC 60068-2-3
EMC regulation	IEC/EN 61326-1 Class A table 2

* It can't display when LCM is lower than -20℃

9.2.2 Recommended Flow Range for Tube Diameters

Pipe diameter (mm)	Flow range (m^3/h)	
	Flowing speed 0.1~1.0m/s	Flowing speed 1.0~10m/s
15	0.06~0.64	0.64~6.4
25	0.17~1.77	1.77~17.7
40	0.45~4.5	4.5~45.2
50	0.71~7.1	7.1~71
65	1.19~11.9	11.9~119
80	1.81~18.1	18.1~181
100	2.83~28.3	28.3~283
125	4.42~44.2	44.2~442
150	6.36~63.6	63.6~636
200	11.3~113	113~1130
250	17.7~177	177~1770
300	25.4~254	254~2540
350	34.6~346	346~3460
400	45.2~452	452~4520
450	57.2~572	572~5720
500	70.7~707	707~7070

9.2.3 Lining Material

Lining material	Main properties	Application scope
PTFE	1. Stable chemical properties, resistance to various acid, alkane, and salt solutions and various organic solvents. It is not tolerant to the corrosion of CIF_3, high-temperature OF3 and high-speed liquid oxygen and ozone. 2. The anti-abrasion property is average.	1. -20~120℃ 2. Strong corrosive medium such as concentrated acid and alkane.
NBR	1. Excellent flexibility, highly tearing force capability, good wear resistance 2. It is resistant to low concentrations of acid, alkali, salt solution;It is not tolerant the corrosion of oxidizing mediums.	1. < 80℃ 2. Neutral-strong wearing mineral pulp, coal slurry and mud slurry
Neoprene	1. Neutral wearing capability 2. It is resistant to low concentrations of acid, alkali, acid corrosion.	1. < 80℃ 2. Water, Industrial water , Seawater


9.2.4 Electrode Material

Electrode material	Anti-corrosion property
Stainless steel (316L)	It is applied in water, sewage and organic corrosive medium.
Hastelloy alloy	It is resistant to the corrosion of the medium mixture of oxidizing acid such as Nitric acid, mixed acid or Sulfuric acid. Moreover, it is resistant to the corrosion of the oxidizing salt such as Fe^{2+} 、Cu^{2+} or other substances containing oxidants such as the salt solution of hypochlorous acid above the ambient temperature and sea water.
Titanium	It is resistant to the corrosion of sea water, various oxides, salt solution of hypochlorous acid, oxidating acid (including fuming Nitric acid) and organic acid and alkane. It is not resistant to the corrosion of pure reducing acid (such as Sulfuric acid and Hydrochloric acid). However, the anti-corrosion property will be greatly degraded if the acid contains some oxidants.
Tantalum	It has excellent corrosion resistance. Its characteristic is similar to glass. In addition to hydrofluoric acid , nitric acid , alkali, it could resist almost all chemical medium (including boiling hydrochloric acid, nitric acid and sulfuric acid below 175’C). It could not resist corrosion in alkali.

9.2.5 Housing Protection Rating(IP)
IP67

10. Appearance and Dimension

Flange Type

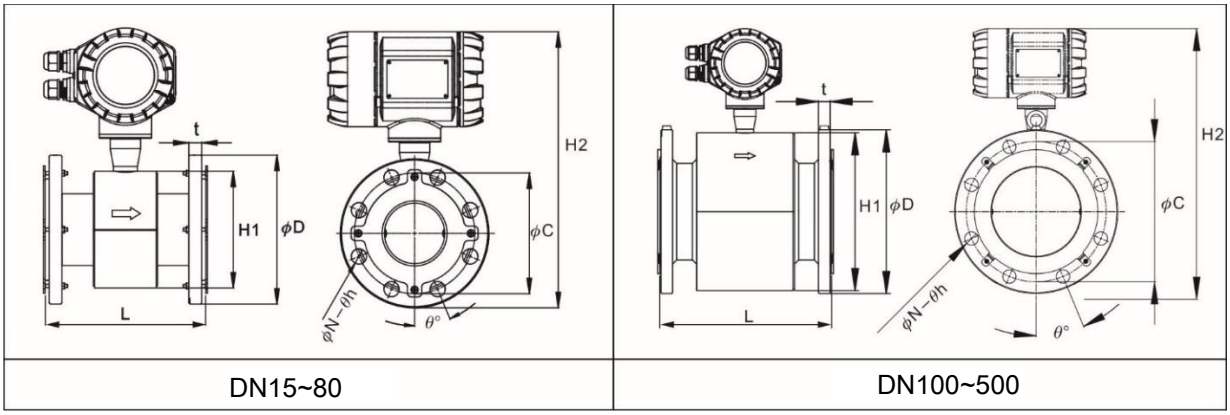

DN15~80 | DN100~500


10.1 JIS 7.5K&10K & 20K

Connection specification		JIS 10K															
Nominal diameter(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
Lining material		PTFE															
Length	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
External diameter	ϕD	95	125	140	155	175	185	210	250	280	330	400	445	490	560	620	675
PCD	ϕC	70	90	105	120	140	150	175	210	240	290	355	400	445	510	565	620
Flange thickness	t	12	14	16	16	18	18	18	20	22	22	24	24	26	28	30	30
Inclined angle of screw hole	θ°	45	45	45	45	45	22.5	22.5	22.5	22.5	15	15	11.25	11.25	11.25	9	9
Diameter of screw hole	θh	15	19	19	19	19	19	19	23	23	23	25	25	25	27	27	27
Quantity of screw holes	N	4	4	4	4	4	8	8	8	8	12	12	16	16	16	20	20
Height of sensor casing	H1	75	88	125	125	145	145	195	195	270	305	365	406	470	530	580	630
Total height	H2	267	289	315	322	342	347	385	405	467	506	572	616	675	737	769	818
Weight (kg)	-	5	6.8	6.8	7.7	9	9.9	12.9	17.5	23.5	33.2	54	69.6	88.4	109.3	---	---


Connection specification		JIS 20K											
Nominal diameter(mm)		15	25	40	50	65	80	100	125	150	200	250	300
Lining material		PTFE											
Length	L	200	200	200	200	200	200	250	250	300	350	400	500
External diameter	ϕD	95	125	140	155	175	200	225	270	305	350	430	480
PCD	ϕC	70	90	105	120	140	160	185	225	260	305	380	430
Flange thickness	t	14	16	18	18	20	22	24	26	28	30	34	36
Inclined angle of screw hole	θ°	45	45	45	22.5	22.5	22.5	22.5	22.5	15	15	15	11.25
Diameter of screw hole	θh	15	19	19	19	23	23	23	25	25	25	27	27
Quantity of screw holes	N	4	4	4	8	8	8	8	8	12	12	12	16
Height of sensor casing	H1	75	88	125	125	145	145	195	195	270	305	365	406
Total height	H2	267	289	315	322	342	355	392	415	478	514	585	632
Weight (kg)	-	5.3	7	7.1	7.7	9	12.3	16.4	23.6	31	43.4	74.2	94.2

Remarks:

For DN15~DN80、DN350~DN500, the lining protective ring is 2mm, so the total length of the flow meter shall be increasedby, L+4mm. For DN100~DN300, the lining protective ring is 0.5mm, so the total length of the flow meter shall be increased, by L+1mm; total length (L) tolerance is ±3mm, total height (H2) tolerance is ±5mm.

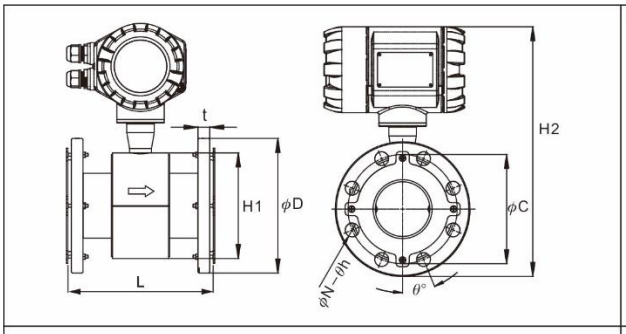


DN50~80

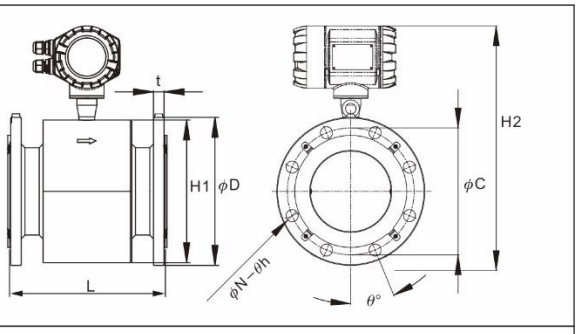


DN100~500

Connection specification		JIS 7.5K										
Nominal diameter(mm)		50	80	100	150	200	250	300	350	400	450	500
Lining material		PTFE										
Length	L	200	200	250	300	350	400	500	500	600	600	600
External diameter	ϕD	186	211	238	290	342	410	464	530	582	652	706
PCD	ϕC	143	168	195	247	299	360	414	472	524	585	639
Flange thickness	t	16	18	18	20	21	23	26	26	26	28	28
Inclined angle of screw hole	θ°	45	45	45	30	22.5	22.5	18	18	15	15	15
Diameter of screw hole	θh	19	19	19	19	19	23	23	24	24	28	28
Quantity of screw holes	N	4	4	4	6	8	8	10	10	12	12	12
Height of sensor casing	H1	125	145	195	270	305	365	406	470	530	580	630
Total height	H2	338	360	399	472	511	577	625	693	747	783	832
Weight (kg)	-	7.7	12.5	15.8	25.6	36.8	36.8	75	---	---	---	---

Remarks:
For DN15~DN80、DN350~DN500, the lining protective ring is 2mm, so the total length of the flow meter shall be increased by L+4mm. For DN100~DN300, the lining protective ring is 0.5mm, so the total length of the flow meter shall beincreased by L+1mm; total length (L) tolerance is ±3mm, total height (H2) tolerance is ±5mm

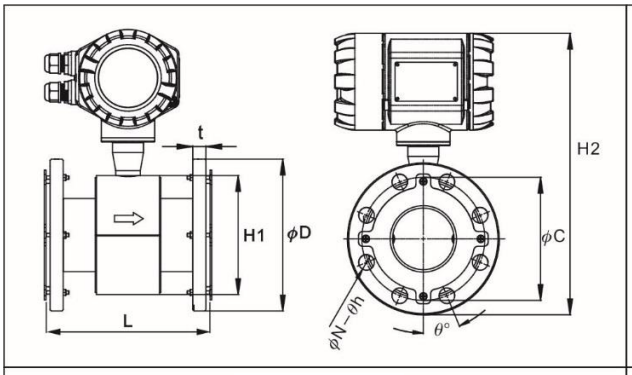

DN15~80

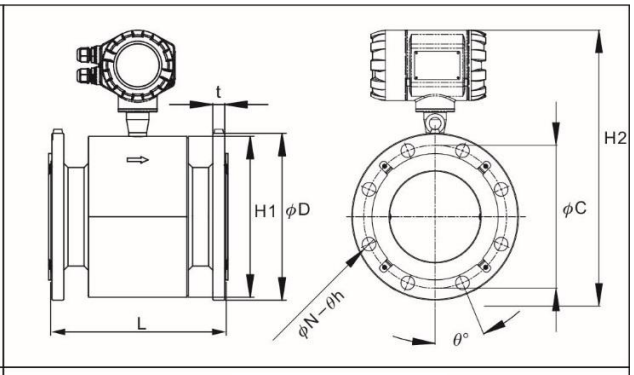


DN100~500

10.2 ANSI 150Lbs & 300Lbs


Connection specification		ANSI 150Lbs															
Nominal diameter(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
Lining material		PTFE															
Length	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
External diameter	ϕD	89	108	127	152	178	190	229	254	279	343	406	483	533	597	635	599
PCD	ϕC	60	79	99	121	140	152	191	216	241	298	362	432	476	540	578	635
Flange thickness	t	10	13	16	17	21	22	22	222	24	27	29	30	33	35	38	41
Inclined angle of screw hole	θ°	45	45	45	45	45	45	22.5	22.5	22.5	22.5	15	15	15	11.25	11.25	9.0
Diameter of screw hole	θh	16	16	16	19	19	19	19	22	22	22	25	25	29	29	32	32
Quantity of screw holes	N	4	4	4	4	4	4	8	8	8	8	12	12	12	16	16	20
Height of sensor casing	H1	75	89	125	125	145	145	195	195	265	305	365	406	470	530	580	630
Total height	H2	264	281	308	321	344	350	394	407	464	511	575	633	695	754	797	851
Weight (kg)	-	4.6	6.1	6.5	8.3	10.8	12.3	17.8	21	27	44.2	67.2	99.6	124.8	152.9	---	---

Connection specification		ANSI 300Lbs															
Nominal diameter(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
Lining material		PTFE															
Length	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
External diameter	ϕD	98	124	156	165	190	210	254	279	318	381	445	521	584	648	711	775
PCD	ϕC	67	89	114	127	149	168	200	235	270	330	387	451	514	572	629	686
Flange thickness	t	13	16	19	21	24	27	30	33	35	40	46	49	52	56	59	62
Inclined angle of screw hole	θ°	45	45	45	22.5	22.5	22.5	22.5	22.5	15	15	11.25	11.25	9.0	9.0	7.5	7.5
Diameter of screw hole	θh	16	19	22	19	22	22	22	22	22	25	29	32	32	35	35	35
Quantity of screw holes	N	4	4	4	8	8	8	8	8	12	12	16	16	20	20	24	24
Height of sensor casing	H1	75	88	125	125	145	145	195	195	265	305	365	406	470	530	580	630
Total height	H2	269	288	323	327	350	360	407	419	481	528	592	650	718	778	832	886
Weight (kg)	-	5.1	7.3	9.1	10.3	12.8	16.5	26.6	33	43.8	69.2	100.4	146.6	---	---	---	---

Remarks:
For DN15~DN80、DN350~DN500, the lining protective ring is 2mm, so the total length of the flow meter shall be increased by L+4mm. For DN100~DN300, the lining protective ring is 0.5mm, so the total length of the flow meter shall be increased by L+1mm; total length (L) tolerance is ±3mm, total height (H2) tolerance is ±5mm

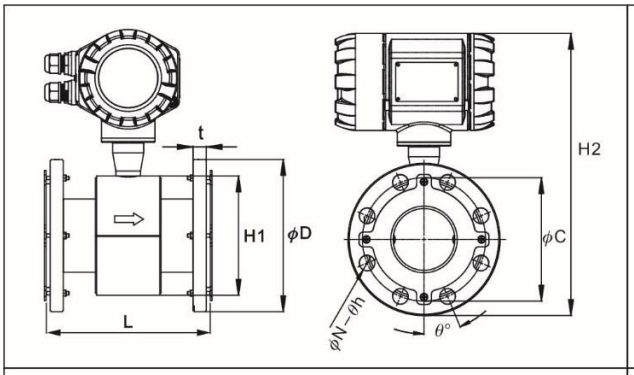

DN15~80

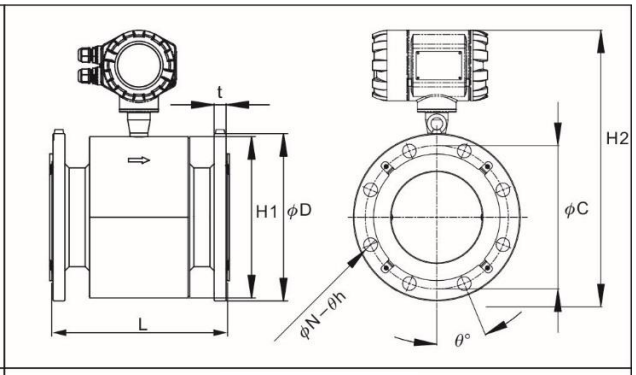

DN100~500

10.3 DIN PN40 & PN16 & PN10

Connection specification		DIN PN40						DIN PN16					
Nominal diameter(mm)		15	25	40	50	65	80	65	80	100	125	150	200
Lining material		PTFE						PTFE					
Length	L	200	200	200	200	200	200	200	200	250	250	300	350
External diameter	ψD	95	115	150	165	185	200	185	200	220	250	285	340
PCD	ψC	65	85	110	125	145	160	145	160	180	210	240	295
Flange thickness	t	18	18	18	20	22	24	18	20	20	22	22	24
Inclined angle of screw hole	θ°	45	45	45	45	22.5	22.5	45	22.5	22.5	22.5	22.5	15.0
Diameter of screw hole	θh	14	14	18	18	18	18	18	18	18	18	22	22
Quantity of screw holes	N	4	4	4	4	8	8	4	8	8	8	8	12
Height of sensor casing	H1	76	89	125	125	145	145	145	145	195	195	265	265
Total height	H2	268	284	320	327	347	355	347	355	390	405	467	490
Weight (kg)	-	5.2	7.1	7.1	7.7	9	12.3	8.6	11.7	15.6	21	28.2	40

Connection specification		DIN PN10						
Nominal diameter(mm)		200	250	300	350	400	450	500
Lining material		PTFE						
Length	L	350	400	500	500	600	600	600
External diameter	ψD	340	395	445	490	565	615	670
PCD	ψC	295	350	400	460	515	565	620
Flange thickness	t	24	26	26	28	32	38	38
Inclined angle of screw hole	θ°	22.5	15	15	11.25	11.25	9	9
Diameter of screw hole	θh	22	22	22	22	26	26	26
Quantity of screw holes	N	8	12	12	16	16	20	20
Height of sensor casing	H1	305	365	406	470	530	580	630
Total height	H2	516	570	616	675	740	788	838
Weight (kg)	-	33.2	54	69.6	88.4	109.3	---	---

Remarks:
For DN15~DN80、DN350~DN500, the lining protective ring is 2mm, so the total length of the flow meter shall be increased, by L+4mm. For DN100~DN300, the lining protective ring is 0.5mm, so the total length of the flow meter shall be increased byL+1mm; total length (L) tolerance is ±3mm, total height (H2) tolerance is ±5mm

11. Installation

The design, test and power supply for the flow meter are based on the related regulations. User must strictly follow the instructions to guarantee the safe operation and normal working of the flow meter.

11.1 Conditions required to guarantee the measurement accuracy of the electromagnetic flow meter:

- The test liquid is conducting.
- The measuring pipe must be filled with liquid.
- The test liquid must be uniform, so as to prevent the non-uniform conductivity (which will result in serious interference). If you need to add some chemicals dynamically, it should be added in the downstream of the flow meter.
- The electromagnetic flow meter must be well grounded. Especially in the plastic pipe, the grounding ring must be installed in order to perform solid grounding.
- The straight tube section is required to be at least 5D at the flow meter inlet (internal diameter of the measuring pipe), and at least 2D at the flow meter outlet.
- The flow meter should be kept away from strong EMI, and it should not be installed near the large motors or transformers.

11.2 Safety Measures

To guarantee human and device safety, the instructions below must be followed:


- Before selecting the location and installing the flow meter, the user should carefully read the related parts in this manual, and consider the safety requirements for the flow meter, related devices and machine body environment.
- The flow meter installation and repair must be performed by the personnel with some flow meter knowledge.
- The flow meter sensors and pipes must be correctly installed, and the sealing must be safe and reliable. The liquid pressure should not exceed the maximum working pressure described on the flow meter specification.
- Proper measures must be taken to prevent electrical shock accident.
- The handling equipment of the flow meter should meet the safety requirements.

11.3 Inspection before Installation

- Check whether the flange, lining, casing and outgoing line sleeve are damaged.
- Open the box cover to check whether the wiring printed circuit is loosened or damaged.
- Check whether the model number on the nameplate is consistent with the order information.

11.4 Handling


The flow meter must be handled with the correct handling method. The safety load and protection action of the handling equipment should meet the related regulations. The transmitter box (for integrated flow meter) or enclosure (for separated flow meter) must not be tied up to handle the flow meter.

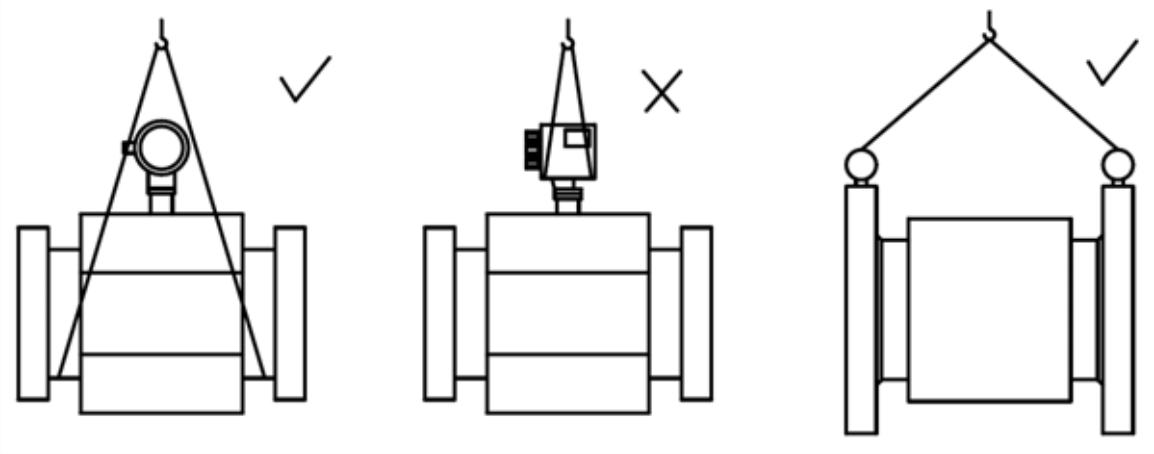


11.5 Correct Installation

It is very important to select the installation site and install the flow meter correctly. If any mistake is made during the installation, it will affect the measuring accuracy or the life span of the flow meter, or even cause damage. When selecting the installation site, please pay special attention to the following:

a. The axis of the measuring electrode must be approximate to the horizontal direction (Generally, the angle from the level line is within 10°.)

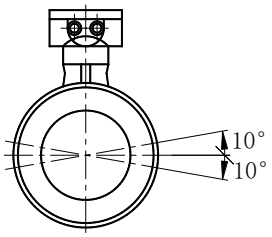

b. The measuring pipe must be filled with liquid.
c. The flow meter must be equipped with the straight tube section in the length of at least 5×D at the front side (D is the internal diameter of the flow meter), and the straight tube section in the length of at least 2×D at the rear side (D is the internal diameter of the flow meter).

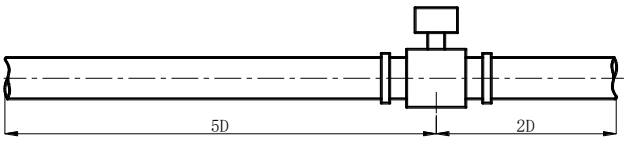

d. The flowing direction of the fluidic is the same as the arrow direction on the flow meter.
e. Please prevent the vacuum in the pipe, which will damage the lining of the flow meter.


f. The flow meter must be free from strong electromagnetic field. The magnetic intensity
of the flow meter installation site must be smaller than 400A/m.
(It should not be installed near large motors or transformers)。

g. There should be enough space left surrounding the flow meter for installation and repair.

h. If the measuring pipe vibrates, a support frame should be set up on both sides of the flow meter.

i. When measuring the mixture of different media, the distance between the mixing point and the flow meter must be 30×D at least (D is the internal diameter of the flow meter)).

j. For convenient cleaning and maintenance of the flow meter, a bypass pipe must be installed.

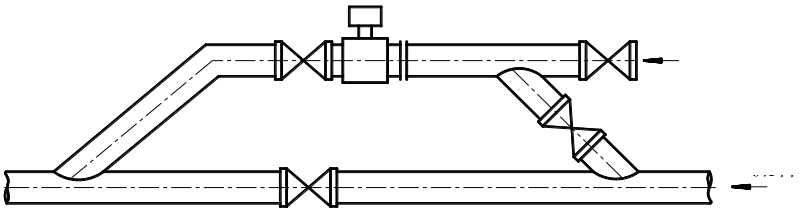

k. When installing the flow meter of the PTFE lining, the bolt connecting two flanges should be fastened evenly. Otherwise, it will damage the PTFE lining. Please use the torque wrench as much as possible.

l. The flow meter should be protected from strong vibration and great temperature change. In the meantime, damage of the corrosive liquid on the flow meter should be prevented.

m. If the flow meter is installed at a position with direct sunlight, shielding facilities should be set up.

n. When installing the sensor, the measuring pipe and the process pipe must be on the same axial line. For the senor with the nominal diameter of DN50 or below, the axial line deviation should not exceed 2mm. For those of DN65～DN150, the axial line deviation should not exceed 3mm. For those of ≥DN200, the axial line deviation should not exceed 4mm.






o. The shim installed between the flanges should have excellent anti-corrosion property. The shim should not intrude in the pipe, which will block the flowing fluidic

p. Fasten the bolts and screws of the flow meter. The screw threads should be undamaged with good lubrication condition. The bolts with torque wrench must be fastened based on the flange size and torque.

q. When welding or flame-cutting the pipes near the sensor, isolation measure must be conducted, so as to prevent the lining from heating. Moreover, the flow meter must be powered off, or it will damage the flow meter.





11.6 Notes for Installation on the Pipe

When installing the flow meter, one must follow the installation diagrams as shown below. This will ensure the flow meter can guarantee the pipe is always filled with the liquid: (The figures below are only typical cases, which don't include all feasible installation methods. The user may judge the installation position based on the actual condition.)

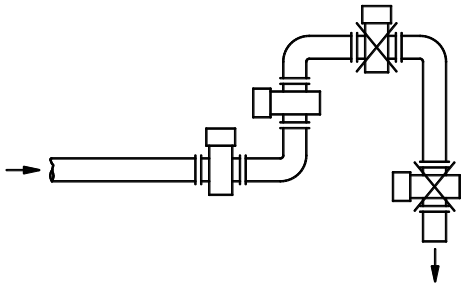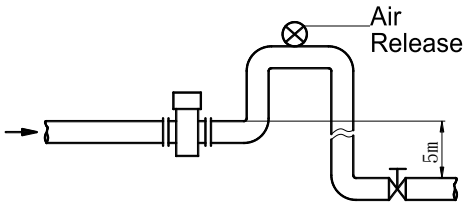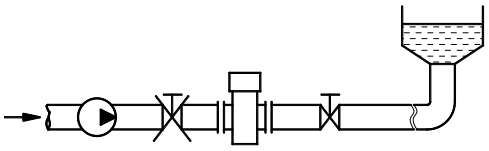No.	Diagram	Description
1		■ It should be installed at the lower point and the vertically upward point of the horizontal pipe. ■ Don't install it at the highest point and the vertically downward point of the pipe.
2		■ It should be installed at the rising point of the pipe.
3		■ If the pipe gap exceeds 5m, the air release valve should be installed at the downstream of the sensor. The downstream of the sensor should have some back pressure.
4		■ The control valve and cut valve should be installed at the downstream of the sensor rather than the upstream.
5		■ The sensor should be installed at the pump outlet rather than the inlet.

11.7 Grounding Requirements

The grounding of the electromagnetic flow meter is very important. If the grounding is poor, it won't work normally. The sensor and transmitter should be equipped with high-quality independent grounding wire (The section area of the copper core is 1.6mm^2). The grounding resistance should be <10Ω.

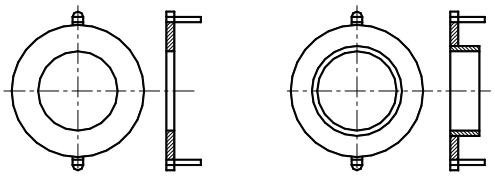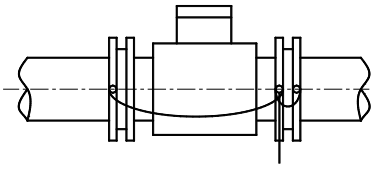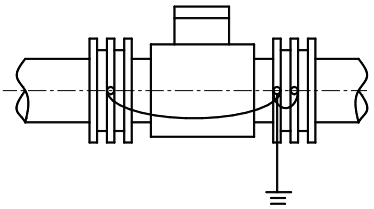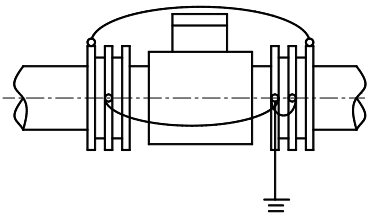	Diagram	Description
Grounding Ring		■ The grounding ring is needed if the pipe connecting with the sensor is insulating. ■ The same material as the electrode should be chosen, to prevent corrosion by the liquid. ■ If the test medium is
Grounding Method		■ It is for installing the flow meter on the metal pipe not coated with insulating layer.
		■ When installing the flow mater on the plastic pipe or the pipe with insulating coating material, paints or lining, grounding rings on both ends of the sensor should be installed.
		■ When installing the flow meter on the protective pipe of cathode, the pipe with the protection of electrolytic corrosion generally has insulating walls and external sides. Thus, during installation, the grounding ring and the flanges on the pipe should be insulating.

11.8 Changing the Direction of the Transmitter Box

The transmitter box can change into four different directions as needed.

a. Changing the direction of the transmitter box for the integrated flow meter.

- ◆ Remove 4 hex screws used to fasten the transmitter.
- ◆ Rotate the transmitter to the target direction, and pay attention to the internal connecting wire during rotation.
- ◆ Fasten the transmitter again.

12. Wiring and Using


12.1 Wiring

12.1.1 Notes for Wiring

- For the power line, the 2-core rubber insulated cable is recommended.
- For AC power supply, L1 should be “Live Wire”.
- The wiring of all terminal blocks should be clamped with slotted terminal and performed with insulation. The cable must be prevented from intruding into the terminal block directly.
- The total impedance of the outgoing cable on the current output terminal should not be larger than the value stated in the specification.
- The pulse or frequency output is NPN transistor output generally, which requires external power supply.


12.1.2 Open the external cover on the rear side, you will see the wiring terminal as shown below.

AC100~240V
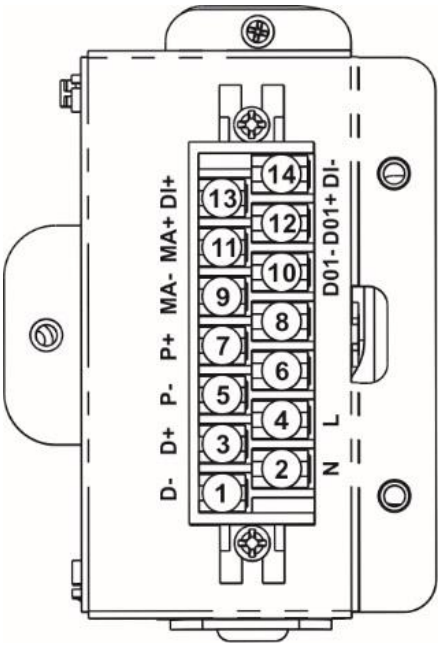
<table>
<tr><td colspan="2">Digital output 1</td><td colspan="2">RS-485 communication</td><td colspan="2">Digital input</td></tr>
<tr><td>DO1-</td><td>DO1+</td><td>D-</td><td>D+</td><td>DI-</td><td>DI+</td></tr>
<tr><td colspan="6">
</td></tr>
<tr><td></td><td>N</td><td>L</td><td>P-</td><td>P+</td><td>mA-</td><td>mA+</td></tr>
<tr><td></td><td colspan="2">AC100~240 Vac</td><td colspan="2">Voltage pulse output</td><td colspan="2">4-20mA output</td></tr>
</table>

DC24V

Digital output 1		RS-485 communication		Digital input	
DO1-	DO1+	D-	D+	DI-	DI+

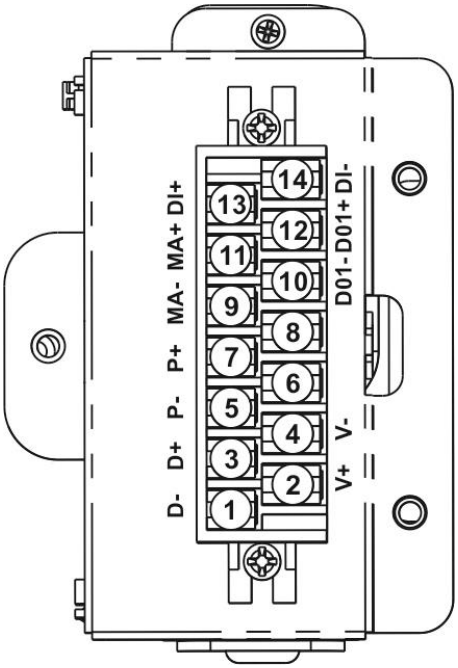


	V+	V-	P-	P+	mA-	mA+
	DC24V		Voltage pulse output		4-20mA output	

13. Inspection before Power-On


1. Check whether the flow meter is damaged during transportation and installation.
2. Check whether the voltage of the power supply is consistent with that specified on the nameplate.
3. Check whether the fuse used is of the correct current value.
4. Check whether the flow meter is grounded correctly.
5. Open the pipe valve to fill the pipeline system with liquid. One should pay attention to removing the leaked gas and residuals in the system.
6. Power on the flow meter to warm up for 10 minutes. Then it can work normally.

14. Parameter Functions

14.1 Procedure for Menu Setting

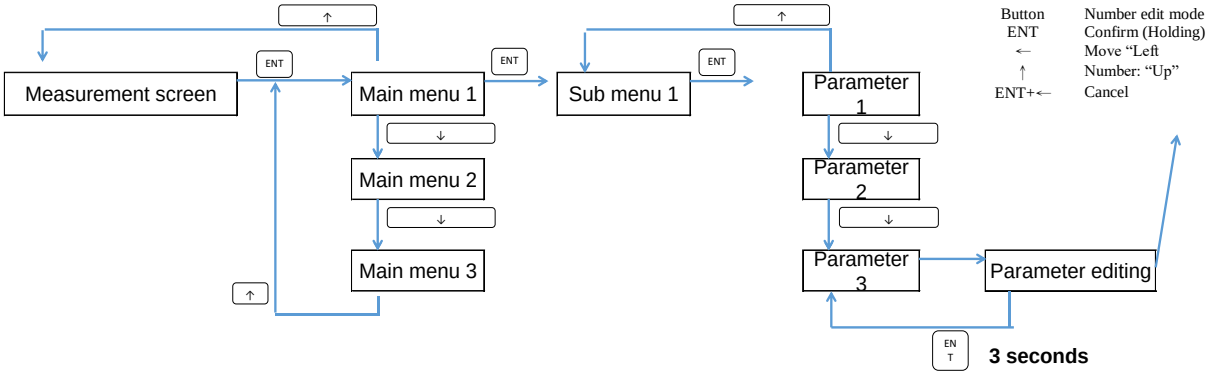

14.1.1Functions of the Display Interface

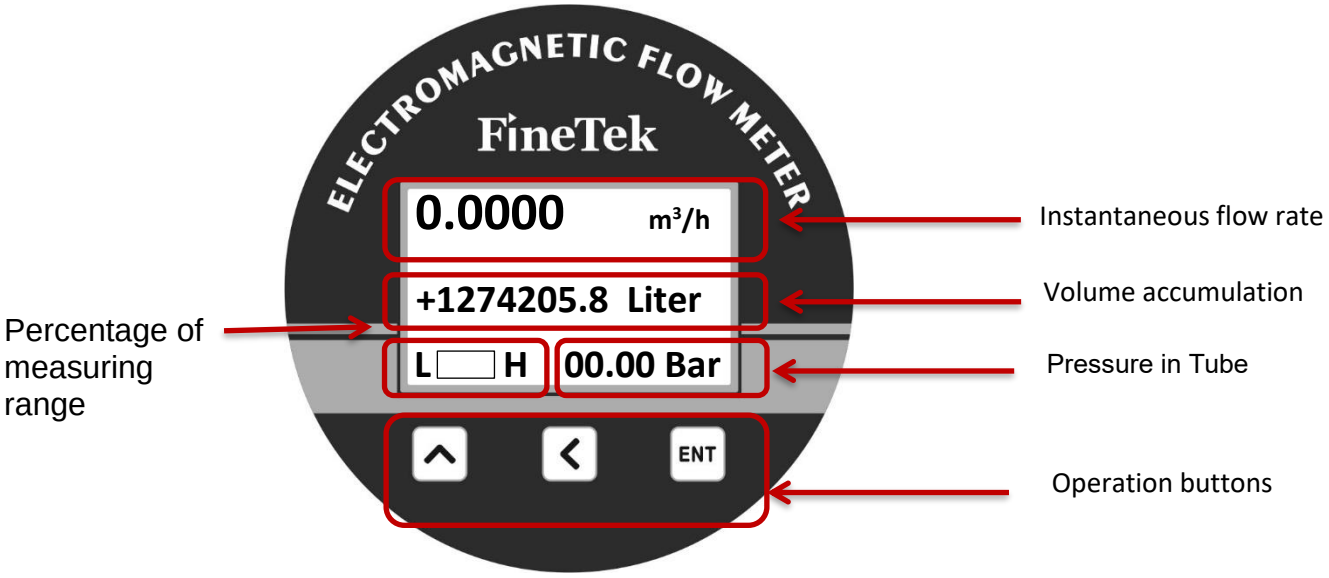

14.1.2 Button Functions in Parameter Setting Status:

			Parameter Setting Page		
Button	Main Measuring Page	Menu Mode	Read Only	Number Edit Mode	List Edit Mode
ENT	Enter menu	Enter sub menu		Confirm button (Keep pressing)	Confirm button (Keep pressing)
<		Return to the previous page	Return to the previous page	"Left" button	Return to the previous page
^		Sub menu option 【Down】		Number: "Plus" button	Option: Next page
ENT+ <				Cancel	

14.2 Various Parameter Setting Ranges

Main Menu	Sub Menu	Unit	Default	Setting Range
Fast Set (0)	Device Tag Num (1.1)	The parameter is linking from standard menu		
	Zero Adj.(2.1)			
	Flow Span (1.5)			
	Flow Unit (1.4)			
	Low cutoff (2.4)			
	Damping Time (3.1)			
	Pulse Out Unit (3.3)			
	Total Reset (1.9)			

Main Menu	Sub Menu	Unit	Default	Setting Range
Basic Set (1)	Device Tag Num (1.1)	none	00001	00001~65535
	Measure Type (1.2)	-	Water	Water
	Tube Size (1.3)	mm	actual	10,15,25,32,40,50,65,80,100
				125,150,200,250,300,350,400,450,500
	Flow Unit (1.4)	-	m^3/h	L/(s,min,h),m^3 /(s,min,h),gal/(s,min,h), kg(s,min,h),Ton(s,min,h) (Flow rate* Liquid density = weight) "L/s","L/m","L/h","m^3 /s","m^3 /m","m^3 /h", "gal/s","gal/m","gal/h","kg/s","kg/m", "kg/h","Ton/s","Ton/m","Ton/h"," m^3 /d"
	Flow Span (1.5)	=Flow Rate Unit	(5m/s) x (Diameter/2)^2 x pi x Unit of Flow	(0.1 ~ 10.0m/s) x (Diameter/2)^2 x pi x Unit of Flow (000.00)
	Direction (1.6)	dir	Forward	Forward,Reverse
	Total Unit (1.7)	-	m^3	Liter,gal, m^3,kg,Ton
	Total Mode (1.8)	none	Forward	Forward,Reverse,Bi-direction
	Total Reset (1.9)	none	Cancel	Cancel,Accept

Main Menu	Sub Menu	Unit	Default	Setting Range
Advanced Set (2)	Zero Adj. (2.1)	m/s	actual	-0.5000~+0.5000
	K-Factor (2.2)	none	1.000	0.000~3.000
	Density (2.3)	g/㎤	1.0000	0.0001~9.9999
	Low cutoff (2.4)	%	0.5	0.00~100.00
	Fwd. Init. (2.5)	=Total Unit	0	0~9999999999
	Rev. Init. (2.6)	=Total Unit	0	0~9999999999

Main Menu	Sub Menu	Unit	Default	Setting Range
I/O Signal Set (3)	Damping Time (3.1)	second	3	0~100
	Pulse Out Mode (3.2)	none	Pulse NO	Pulse NO, Pulse NC, Frequency
	Pulse Out Unit (3.3)	Unit/pulse	0.1 L	0.001~100(L,gal, m^3,g,kg,Ton) L/pulse,gal/pulse,m3/pulse,g/pulse,kg/pulse, Ton/pulse
	Max. Freq. (3.4)	kHz	2K	0.001~8K (00.000)
	Curr. Mode (3.5)	none	4-20	4-20,0-20
	4mA Fine-Tune (3.6)	count	0	-5000~5000
	20mA Fine-Tune (3.7)	count	0	-5000~5000
	Input1 Func. (3.8)	N/A	None	None, Total Reset
	Input1 Type (3.9)	N/A	NO	NO,NC
	Filter Variation(3.10)	m/s	1	00.000~10.000
	Filter Weight(3.11)	%	10	0~100
	Median Filter(3.12)	%	Enable	Disable,Enable

Main Menu	Sub Menu	Unit	Default	Setting Range
Alarm Set (4)	Max. Flow (4.1)	Flow Rate Unit	Max.	Max. Flow Rate
	Min. Flow (4.2)	Flow Rate Unit	min.	Min. Flow Rate
	Empty Tube Set (4.3)	N/A	Disable	Enable, Disable
	Output 1 Func. (4.4)	N/A	Max. Flow Rate	Max. Flow Rate, Min. Flow Rate, Empty Tube, System Alarm
	Output 1 Type (4.5)	N/A	NO	NO,NC
	Output 2 Func. (4.6)	N/A	Min. Flow Rate	Max. Flow Rate, Min. Flow Rate, Empty Tube, System Alarm
	Output 2 Type (4.7)	N/A	NO	NO,NC
	Curr. Func. (4.8)	N/A	None	Empty Tube, System Alarm
	Alarm Curr. (4.9)	mA	3.6	3.6,3.8,20.5,22
	Temp. Alarm.(4.10)	N/A	1	0: OFF, 1: ON

Main Menu	Sub Menu		Unit	Default	Setting Range
System Set(5)	Language(5.1)	N/A	N/A	English	English,Traditional Chinese, Simplified Chinese
	System Info.(5.2)	Tube Status	N/A	Actual	Normal, Empty
		Resistance	m/s	Actual	N/A
		Status Code	kΩ	Actual	N/A
		Act. Flow Speed	N/A	Actual	0000 0000 ~ FFFF FFFF
	Self-Test(5.3)	N/A	N/A	Cancel	Normal, Circuit Fail ,Excitation Fail, Amb. Temp, Electrode Coating
	Analogy Input(5.4)	4mA Display	N/A	0000	0~9999
		20mA Display.	N/A	1000	0~9999
		4-20mA Unit	N/A	Kpa	None, Kpa, Mpa, Psi, Bar, ˚C, ˚F
		Dot	N/A	1	0~3
	ModBus Comm.(5.5)	BaudRate(2.13.2)	N/A	1	1~255
		Modbus ID(2.13.1)	BPS	9600	1200,2400,4800,9600,19200, 38400,57600
		Stop bit(2.13.5)	N/A	8	8,9
		Data bit(2.13.3)	N/A	none	none,odd,even
		Parity(2.13.4)	N/A	1	1,2
	Recovery Default(5.6)	N/A	N/A	Cancel	Cancel, Accept
	Mains Frequency(5.7)	N/A	Hz	50	50, 60
	LCM Contrast Brightness(5.8)	N/A	N/A	32	15~40
	Manu Password (5.9)	User Password(5.9.1)	N/A	00000	0~99999
		Admin Password(5.9.2)			

Main Menu	Sub Menu	Unit	Default	Setting Range
Simulation(6)	Flow Speed(6.1)	m/s	0	-10 ~ 10
	Flow Rate(6.2)	unit of flow	0	0~Max.
	Output Curr.(6.3)	mA	4mA	3.6~22
	Output Freq.(6.4)	Hz(pulse/sec)	2	2~8000
	Output1 Status(6.5)	N/A	OFF	ON/OFF
	Output2 Status(6.6)	N/A	OFF	ON/OFF
	Input1 Status(6.7)	N/A	Actual	ON/OFF
	Input Curr.(6.8)	N/A	Actual	0~24mA


Main Menu	Sub Menu	Unit	Default	Setting Range
SystemLog(7)	Date Set (7.1)	N/A	Actual	year : 17~99, month : 01~12, day : 01~31
	Time Set (7.2)	N/A	Actual	hour : 00~23, minute : 00~59, sec : 00~59
	Log data clear (7.3)	N/A	Cancel	Cancel, Accept
	System Log Info (7.4)	N/A	Actual	N/A

Main Menu	Sub Menu	Unit	Default	Setting Range
Information(8)	F.W. Version(8.1)		Actual	

※Sub menu 1.3、1.9、2.2、2.5、2.6、5.6、5.9、7.3, only the admin can change.

14.3 System record illustration

Display image illustration

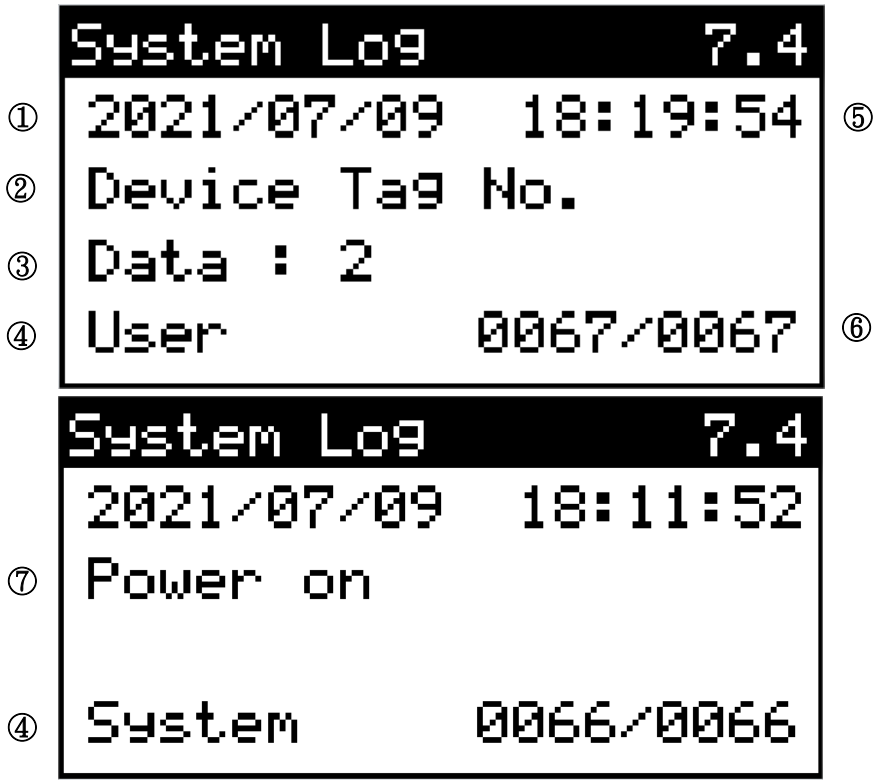


Item	Description
1	Date of event occurred
2	Name of modified parameter, modifier is "User", "Admin"
3	The contents of modified parameter
4	Operator for modifying parameters, divided into "User", "Admin", and "System"
5	Time of event occurred
6	Current total number of records
7	Names of system events, the modification is by "System", see the table below for details

Classification	Message	Description
Hardware status"	Power on	Record the current time when the system is booted"
	Power off	Record the current time when the system is shut down"
User setting"	Total reset	Only permitted when user is "Admin"
	K-Factor	Only permitted when user is "Admin"
	Tube sze	Only permitted when user is "Admin"
	Admin password	Only permitted when user is "Admin"
	User password	Permitted for both ""User"" or "Admin"
	Set default	Only permitted when user is "Admin"
	Others	Refer to the parameter setting function description 14.2 for the authority classification."

15. Ordering Information

Model Number	Order Code
EPD30	EPD10000-A
EPD34	EPD10400-A

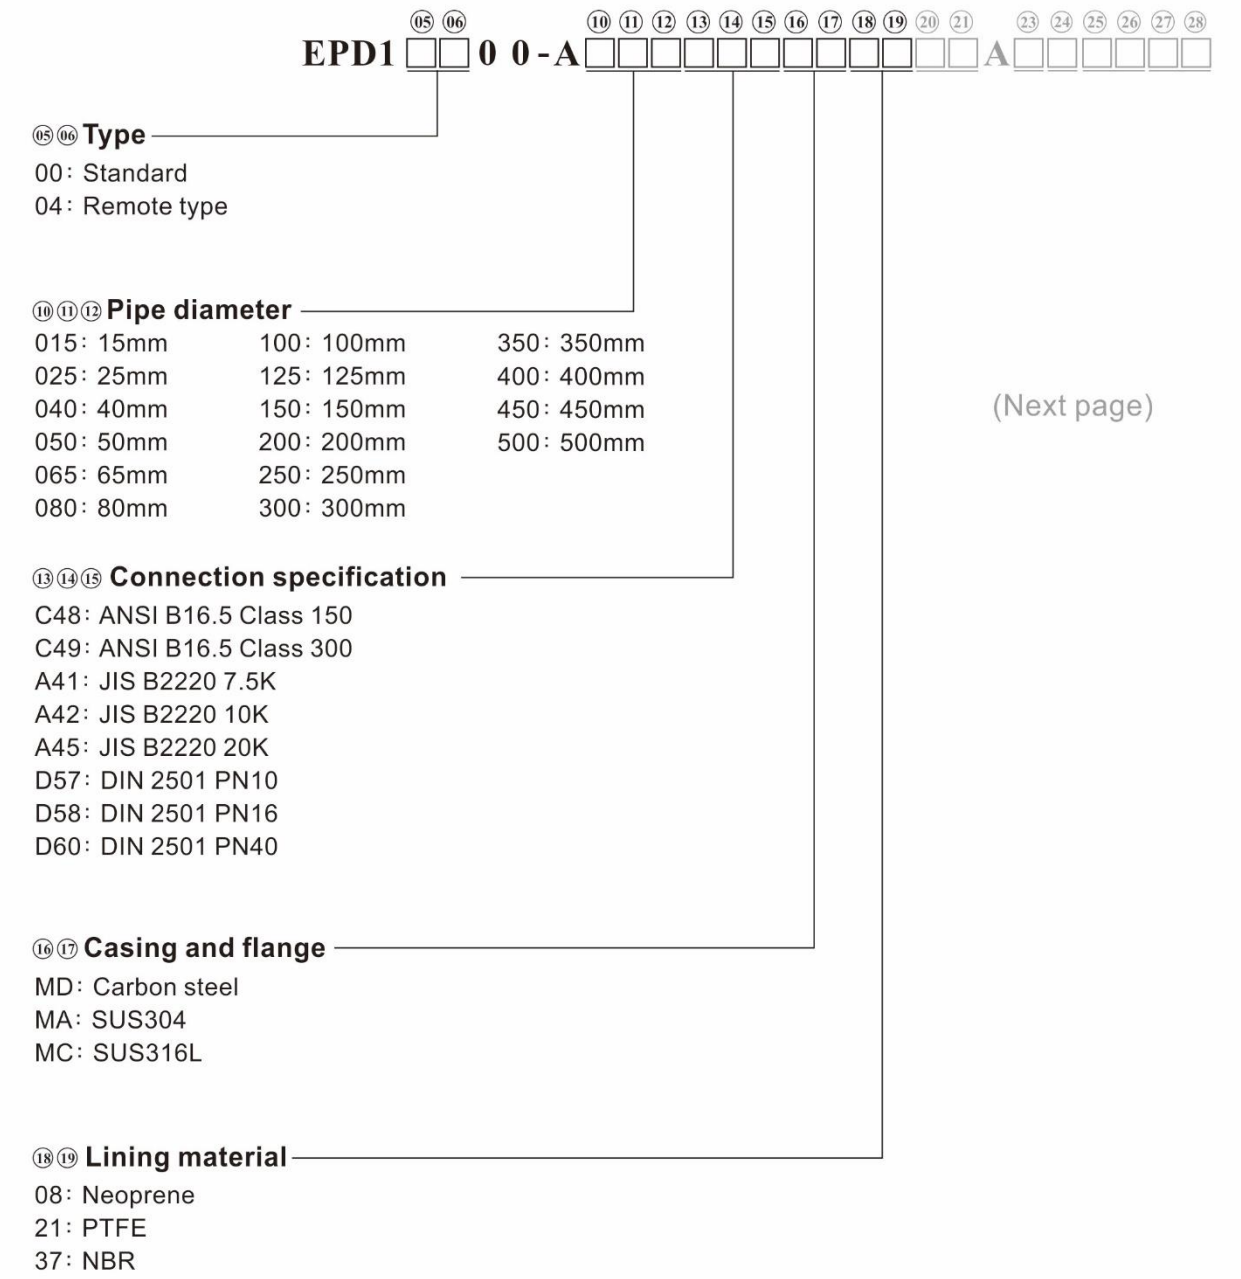

(Next page)



⑳㉑ Electrode material

MC: SUS316L
MF: Titanium
MK: Tantalum
MJ: Hastelloy alloy(C-276)

㉓ Power supply

A: 100~240Vac, 50/60Hz
D: 24Vdc
N: 100~240Vac,50/60Hz with date logger
R: 24Vdc with date logger

㉔ Accuracy

F: 0.5%
G: 0.3%
H: 0.2%

㉕㉖ Grounding material

00: None
MA: SUS304
MC: SUS316L
MF: Titanium
MK: Tantalum
MJ: Hastelloy alloy(C-276)

㉗㉘ Cable length

00: None(Only available for standard type)
10: 10 M(Remote type standard)
15: 15 M
20: 20 M
⋮
95: 95 M
A0: 100 M

16. Transportation and Storage

To prevent the flow meter from damage during the transportation, please keep the packaging condition as how it was when it was shipped from the factory before arriving at the installation site. The storage conditions should meet the following:

- Appropriate rainproof and damp-proof treatment must be conducted .
- Vibration must be reduced and collision with other objects must be prevented during its transportation.
- The storage temperature must be in the range of -20～70℃
- The humidity should be lower than 80%
- To store the used sensors, clean the tested medium attached on the lining and the electrode, and avoid oxidation by not exposing it to too much air for a long time.
- Outdoor storage may degrade the performance of the flow meter.

17. Fault Inspection and Repair

When fault occurs to the flow meter or it fails to meet the accuracy requirements, please try to fix it by referring to the table below.

Fault	Inspection	Solution
Can't achieve the accuracy	■ Whether the zero point of the flow meter floats	■ The casing of the flow meter is grounded correctly. ■ For the plastic pipe, check whether the grounding ring is corroded. ■ Perform zero point calibration. Please refer to
	■ Whether the pipe is filled with liquid	■ Change the installation location to make the pipe be filled with
	■ Whether the flow meter works near the upper/lower limit of the flow rate	■ Reduce/increase the flow rate to keep the flowing speed within ■ 1m/s~10m/s.
	■ Whether the setting of measuring range is correct	■ Make sure the measuring range of the flow meter is the same as that defined on the device used to receive the signals sent from the flow meter.
	■ Whether the output connection of the flow meter is correct	■ Re-connect to ensure smooth line.
	■ Whether the grounding between the flow meter and the pipe is good	■ Perform grounding for flow meter correctly, and the grounding impedance should not be higher than10Ω.
	■ Whether the coefficient value of the sensor shown on menu 28 is consistent with that stated on the	■ The coefficient value might have been modified by others. Please restore the settings.
No screen displayed when startup	■ Whether the power supply, switch, fuse and other power devices of the flow meter are normal	■ Fix the problem, so that the flow meter can be supplied with power correctly. ■ The flow meter might be damaged.
Communication failed	■ Whether the model is integrated with RS-485 communication function	■ Check whether RS-485 converter can work normally. ■ Contact the vendor.
No pulse output	■ Whether the external power supply 12VDC is equipped for the output end.	■ If the factory specification is without source NPN output, add an external power supply.

18. MODBUS Communication Protocol

Address(Hex)	Address(Dec)	Variable Name	Data Type	Unit	Range	Definition	Authority
0x1000	**4096**	gt_modbus_slave_fine_tek_id[0]	**UINT8**	N/A		"FI"	Read only(Header)
0x1001	**4097**	gt_modbus_slave_fine_tek_id[2]	**UINT8**	N/A		"NE"	Read only(Header)
0x1002	**4098**	gt_modbus_slave_fine_tek_id[4]	**UINT8**	N/A		"-T"	Read only(Header)
0x1003	**4099**	gt_modbus_slave_fine_tek_id[6]	**UINT8**	N/A		"EK"	Read only(Header)
0x1004	**4100**	PFC_PRODUCT_TYPE	**UINT16**	N/A		"FM"	Read only(Header)
0x1005	**4101**	PFC_PRODUCT_NUMBER	**UINT16**	N/A		0x0001	Read only(Header)
0x1006	**4102**	PFC_PRODUCT_VERSION	**UINT16**	N/A		0x0001	Read only(Header)

0x1010	Measuring Status		Data Type	Unit	Range	Definition	Authority
0x1010	**4112**	PFC_FlowTotal_FRAM_FWD_VAL-High	**FLOAT64**	m^3		Forward accumulated flow capacity	Read only
0x1011	**4113**	PFC_FlowTotal_FRAM_FWD_VAL+1					Read only
0x1012	**4114**	PFC_FlowTotal_FRAM_FWD_VAL+2					Read only
0x1013	**4115**	PFC_FlowTotal_FRAM_FWD_VAL-Low					Read only
0x1014	**4116**	PFC_FlowTotal_FRAM_REV_VAL-High	**FLOAT64**	m^3		Backward accumulated flow capacity	Read only
0x1015	**4117**	PFC_FlowTotal_FRAM_REV_VAL+1					Read only
0x1016	**4118**	PFC_FlowTotal_FRAM_REV_VAL+2					Read only
0x1017	**4119**	PFC_FlowTotal_FRAM_REV_VAL-Low					Read only
0x1018	**4120**	PFC_FlowTotal_FRAM_BI_DIR_VAL-High	**FLOAT64**	m^3		Two-way accumulated flow capacity	Read only
0x1019	**4121**	PFC_FlowTotal_FRAM_BI_DIR_VAL+1					Read only
0x101A	**4122**	PFC_FlowTotal_FRAM_BI_DIR_VAL+2					Read only
0x101B	**4123**	PFC_FlowTotal_FRAM_BI_DIR_VAL-Low					Read only
0x101C	**4124**	PFC_FlowRate_Main_Val-High	**FLOAT64**	Rate Unit		Instant flow rate value	Read only
0x101D	**4125**	PFC_FlowRate_Main_Val+1					Read only
0x101E	**4126**	PFC_FlowRate_Main_Val+2					Read only
0x101F	**4127**	PFC_FlowRate_Main_Val-Low					Read only
0x1020	**4128**	gb_pfc_flowrate_rawdata_m_s-High	**FLOAT64**	m/s		\Setting\ Information\ Actual flow rate	Read only
0x1021	**4129**	gb_pfc_flowrate_rawdata_m_s+1					Read only
0x1022	**4130**	gb_pfc_flowrate_rawdata_m_s+2					Read only
0x1023	**4131**	gb_pfc_flowrate_rawdata_m_s-Low					Read only
0x1024	**4132**	gf_pfc_current_out_value-High	**FLOAT32**	mA		Output current value	Read only
0x1025	**4133**	gf_pfc_current_out_value-Low					Read only
0x1026	**4134**	PFC_SIMULATION_INPUT_CURR-High	**FLOAT32**	mA		Iutput current value	Read only
0x1027	**4135**	PFC_SIMULATION_INPUT_CURR-Low					Read only
0x1028	**4136**	gb_pfc_liquid_resistance-High	**FLOAT32**	KΩ		\Setting\ Information\ Liquid resistance value	Read only
0x1029	**4137**	gb_pfc_liquid_resistance-Low					Read only
0x102A	**4138**	PFC_FlowTotal_FWD_VAL-Low	**UINT32**	Liter		Forward accumulated flow capacity	Read only
0x102B	**4139**	PFC_FlowTotal_FWD_VAL-High					Read only
0x102C	**4140**	PFC_FlowTotal_REV_VAL-Low	**UINT32**	Liter		Backward accumulated flow capacity	Read only
0x102D	**4141**	PFC_FlowTotal_REV_VAL-High					Read only
0x102E	**4142**	PFC_FlowTotal_BI_VAL-Low	**UINT32**	Liter		Two-way accumulated flow capacity	Read only
0x102F	**4143**	PFC_FlowTotal_BI_VAL-High					Read only
0x1030	**4144**	PFC_Flowrate_Main_Vluae-Low	**FLOAT32**	Rate Unit		Instant flow rate value	Read only
0x1031	**4145**	PFC_Flowrate_Main_Vluae-High					Read only
0x1032	**4146**	PFC_Flowrate_rawdata_vluae-Low	**FLOAT32**	m/s		\Setting\ Information\ Actual flow rate	Read only
0x1033	**4147**	PFC_Flowrate_rawdata_vluae-High					Read only

0x1040	System status		Data Type	Unit	Range	Definition	Authority
0x1040	**4160**	PFC_TEMPERATURE_BOARD_NOW-High	**FLOAT32**	°C		PCB temp.	Read only
0x1041	**4161**	PFC_TEMPERATURE_BOARD_NOW-Low					Read only
0x1042	**4162**	PFC_SELF_TEST_TUBE_STATUS	**UINT16**	N/A	0: Normal 1: Empty	\Setting\ Information\ Status of pipe	Read only
0x1043	**4163**	pfc_system_status_code_value-High	**UINT32**	N/A		\Setting\ Information\ system status code	Read only
0x1044	**4164**	pfc_system_status_code_value-Low					Read only

0x1050	Paramter setting- System information		Data Type	Unit	Range	Definition	Authority
0x1050	**4176**	PFC_PRODUCT_VERSION	**UINT16**	N/A		Version of firmware (Master)	Read only

0x1055	Parameter setting- Basic setting		Data Type	Unit	Range	Definition	Authority
0x1055	**4181**	PFC_BASIC_SET_DEVICE_TAG_NUM	**UINT16**	N/A	00001~65535(Default:1)	Basic setting/ ID number	Read /Write
0x1056	**4182**	PFC_BASIC_SET_MEASURE_TYPE		N/A	0:Water 1:none	Measured object	Read /Write
0x1057	**4183**	PFC_BASIC_SET_TUBE_SIZE-High	**FLOAT32**	10~100mm	Line size divided by 1000	Basic setting/ Connection size	Read /Write
0x1058	**4184**	PFC_BASIC_SET_TUBE_SIZE-Low		125~500mm	e.g.: DN80= 80/1000=0.08		
0x1059	**4185**	PFC_BASIC_SET_FLOW_RATE_UNIT	**UINT16**	N/A	0:L/m 1:L/h 2:m3/m 3:m3/h 4:gal/m 5:gal/h 6:kg/m 7:kg/h 8:T/m 9:T/h 10:m3/d	Basic setting/Instant flow rate unit	Read /Write
0x105A	**4186**	PFC_BASIC_SET_FLOW_SPAN-High	**FLOAT64**	m^3/s	+Line size(m)^2 *0.0785 ~ Line size(m)^2 *7.85	Basic setting/Measuring range of full pipe	Read /Write
0x105B	**4187**	PFC_BASIC_SET_FLOW_SPAN+1					Read /Write
0x105C	**4188**	PFC_BASIC_SET_FLOW_SPAN+2					Read /Write
0x105D	**4189**	PFC_BASIC_SET_FLOW_SPAN-Low					Read /Write
0x105E	**4190**	PFC_BASIC_SET_FLOW_DIR	**UINT16**	N/A	0: Forward 1: Backward	Basic setting/Flow direction	Read /Write
0x105F	**4191**	PFC_BASIC_SET_FLOW_TOTAL_UNIT	**UINT16**	N/A	0:Liter1:gal2:m33:kg4:Ton	Basic setting/ Accumulated flow capacity unit	Read /Write
0x1060	**4192**	PFC_BASIC_SET_TOTAL_MODE	**UINT16**	N/A	0: Forward 1: Backward 2: Two-way	Basic setting/ Accumulated flow capacity mode	Read /Write
0x1061	**4193**	PFC_BASIC_SET_TOTAL_RESET	**UINT16**	N/A	0: Cancel 1: Confirm	Basic setting/ Reset accumulated flow capacity	Read /Write

0x1070	Parameter setting- Advanced setting		Data Type	Unit	Range	Definition	Authority
0x1070	**4208**	PFC_BASIC_SET_ZERO_ADJ-High	**FLOAT64**	m/s	-0.5000~+0.5000	Basic setting/ Zero point setting	Read /Write
0x1071	**4209**	PFC_BASIC_SET_ZERO_ADJ+1					Read /Write
0x1072	**4210**	PFC_BASIC_SET_ZERO_ADJ+2					Read /Write
0x1073	**4211**	PFC_BASIC_SET_ZERO_ADJ-Low					Read /Write
0x1074	**4212**	PFC_BASIC_SET_K_FACTOR-High	**FLOAT64**	N/A	+0.0000~+3.0000 (Default:1.0)	Basic setting/ K Factor setting	Read /Write
0x1075	**4213**	PFC_BASIC_SET_K_FACTOR+1					Read /Write
0x1076	**4214**	PFC_BASIC_SET_K_FACTOR+2					Read /Write
0x1077	**4215**	PFC_BASIC_SET_K_FACTOR-Low					Read /Write
0x1078	**4216**	PFC_ADVANCED_SET_DENSITY-High	**FLOAT64**	g/cm^3	+0.0001~+9.9999 (Default:1.0)	Basic setting/ Density	Read /Write
0x1079	**4217**	PFC_ADVANCED_SET_DENSITY+1					Read /Write
0x107A	**4218**	PFC_ADVANCED_SET_DENSITY+2					Read /Write
0x107B	**4219**	PFC_ADVANCED_SET_DENSITY-Low					Read /Write
0x107C	**4220**	PFC_BASIC_SET_LOW_FLOW_CUTOFF-High	**FLOAT64**	%	+0.0000~+100.00 (Default:0.5)	Basic setting/ Low rate shield	Read /Write
0x107D	**4221**	PFC_BASIC_SET_LOW_FLOW_CUTOFF+1					Read /Write
0x107E	**4222**	PFC_BASIC_SET_LOW_FLOW_CUTOFF+2					Read /Write
0x107F	**4223**	PFC_BASIC_SET_LOW_FLOW_CUTOFF-Low					Read /Write
0x1080	**4224**	PFC_ADVANCED_SET_FWD_TOTAL_INIT-High	**FLOAT64**	m3	0~99999	Advanced setting/ Forward accumulated flow ratestart value	Read /Write
0x1081	**4225**	PFC_ADVANCED_SET_FWD_TOTAL_INIT+1					Read /Write
0x1082	**4226**	PFC_ADVANCED_SET_FWD_TOTAL_INIT+2					Read /Write
0x1083	**4227**	PFC_ADVANCED_SET_FWD_TOTAL_INIT-Low					Read /Write
0x1084	**4228**	PFC_ADVANCED_SET_REV_TOTAL_INIT-High	**FLOAT64**	m3	0~99999	Advanced setting/ Backward accumulated flow ratestart value	Read /Write
0x1085	**4229**	PFC_ADVANCED_SET_REV_TOTAL_INIT+1					Read /Write
0x1086	**4230**	PFC_ADVANCED_SET_REV_TOTAL_INIT+2					Read /Write
0x1087	**4231**	PFC_ADVANCED_SET_REV_TOTAL_INIT-Low					Read /Write
0x1088	**4232**		**UINT16**	N/A	0~1	Zero point auto calibration ON/OFF	Read /Write

0x1090	Parameter setting- Output/Input signal setting		Data Type	Unit	Range	Definition	Authority
0x1090	**4240**	PFC_IO_SIGNAL_SET_DAMPING_TIME	**UINT16**	Second	000~+100(Default:3)	Output/Input signal setting/ Input signal average time	Read /Write
0x1091	**4241**	PFC_IO_SIGNAL_SET_PULSE_OUTPUT_MODE	**UINT16**	N/A	0:NO 1:NC 2: Frequency output	Pluse output mode	Read /Write
0x1092	**4242**	PFC_IO_SIGNAL_SET_PULSE_OUTPUT_UNIT-High	**FLOAT64**	Liter	+0.0010~+99.999 (Default:0.01)	Pluse unit setting	Read /Write
0x1093	**4243**	PFC_IO_SIGNAL_SET_PULSE_OUTPUT_UNIT+1					Read /Write
0x1094	**4244**	PFC_IO_SIGNAL_SET_PULSE_OUTPUT_UNIT+2					Read /Write
0x1095	**4245**	PFC_IO_SIGNAL_SET_PULSE_OUTPUT_UNIT-Low					Read /Write
0x1096	**4246**	PFC_IO_SIGNAL_SET_MAX_FREQ-High	**FLOAT64**	Hz	+0.0010~8.000 (Default:2.0)	Frequency setting	Read /Write
0x1097	**4247**	PFC_IO_SIGNAL_SET_MAX_FREQ+1					Read /Write
0x1098	**4248**	PFC_IO_SIGNAL_SET_MAX_FREQ+2					Read /Write
0x1099	**4249**	PFC_IO_SIGNAL_SET_MAX_FREQ-Low					Read /Write
0x109A	**4250**	PFC_IO_SIGNAL_SET_OUTPUT_CURR_MODE	**UINT16**	mA	0: 4-20mA 1: 0-20mA	Current output mode	Read /Write
0x109B	**4251**	PFC_IO_SIGNAL_SET_4MA_FINE_TUNE	**INT16**	Count	-5000.0~+5000.0 (Default:0)	4mA output adjustment	Read /Write
0x109C	**4252**	PFC_IO_SIGNAL_SET_20MA_FINE_TUNE	**INT16**	Count	-5000.0~+5000.0 (Default:0)	20mA output adjustment	Read /Write
0x109D	**4253**	PFC_IO_SIGNAL_SET_DIGITAL_1_IN_FUNC	**UINT16**	N/A	0: none 1: Reset	Input1 contact function	Read /Write
0x109E	**4254**	PFC_IO_SIGNAL_SET_DIGITAL_1_IN_TYPE	**UINT16**	N/A	0:NO 1:NC	Input1 contact form	Read /Write

0x10A5	Parameter setting- Alarm setting		Data Type	Unit	Range	Definition	Authority
0x10A5	**4261**	PFC_ALARM_SET_MAX_FLOW_RATE-High	**FLOAT64**	m^3/s	+0.0000 ~ Line size(m)^2 *7.85	Max. flow rate	Read /Write
0x10A6	**4262**	PFC_ALARM_SET_MAX_FLOW_RATE+1					Read /Write
0x10A7	**4263**	PFC_ALARM_SET_MAX_FLOW_RATE+2					Read /Write
0x10A8	**4264**	PFC_ALARM_SET_MAX_FLOW_RATE-Low					Read /Write
0x10A9	**4265**	PFC_ALARM_SET_MIN_FLOW_RATE-High	**FLOAT64**	m^3/s	+0.0000 ~ Line size(m)^2 *7.85	Min. flow rate	Read /Write
0x10AA	**4266**	PFC_ALARM_SET_MIN_FLOW_RATE+1					Read /Write
0x10AB	**4267**	PFC_ALARM_SET_MIN_FLOW_RATE+2					Read /Write
0x10AC	**4268**	PFC_ALARM_SET_MIN_FLOW_RATE-Low					Read /Write
0x10AD	**4269**	PFC_ALARM_SET_EMPTY_TUBE_DETECT	**UINT16**	N/A	0: Off 1: On	Empty pipe detection	Read /Write
0x10AE	**4270**	PFC_ALARM_SET_ALARM_1_FUNC	**UINT16**	N/A	0: None 1: Max. flow rate 2: Min. flow rate 3: Empty alarm 4: System error	Output 1 contact function	Read /Write
0x10AF	**4271**	PFC_ALARM_SET_ALARM_1_TYPE	**UINT16**	N/A	0:NO 1:NC	Output1 contact form	Read /Write
0x10B0	**4272**	PFC_ALARM_SET_ALARM_2_FUNC	**UINT16**	N/A	0: None 1: Max. flow rate 2: Min. flow rate 3: Empty alarm 4: System error	Output 2 contact function	Read /Write
0x10B1	**4273**	PFC_ALARM_SET_ALARM_2_TYPE	**UINT16**	N/A	0:NO 1:NC	Output2 contact form	Read /Write
0x10B2	**4274**	PFC_ALARM_SET_CURR_FUNC	**UINT16**	N/A	0: none 1: Empty alarm 2: System error	Alarm current function	Read /Write
0x10B3	**4275**	PFC_ALARM_SET_ALARM_CURR_VAL	**UINT16**	mA	0:3.6 1:3.8 2:20.5 3:22	Alarm current setting	Read /Write

0x10B9	Parameter setting- System setting		Data Type	Unit	Range	Definition	Authority
0x10B9	**4281**	PFC_SYSTEM_SET_LANGUAGE	**UINT16**	N/A	0: English 1: Chinese (Traditional) 2: Chinese (Simple)	Language	Read /Write
0x10BA	**4282**	PFC_SYSTEM_SET_ANALOGY_INPUT_4MA_INFO-High	**FLOAT32**	N/A	0~9999	Analog setting/ 4 mA Value	Read /Write
0x10BB	**4283**	PFC_SYSTEM_SET_ANALOGY_INPUT_4MA_INFO-Low					
0x10BC	**4284**	PFC_SYSTEM_SET_ANALOGY_INPUT_20MA_INFO-High	**FLOAT32**	N/A	0~9999	Analog setting/ 20 mA Value	Read /Write
0x10BD	**4285**	PFC_SYSTEM_SET_ANALOGY_INPUT_20MA_INFO-Low					
0x10BE	**4286**	PFC_SYSTEM_SET_ANALOGY_INPUT_4_20MA_UNIT	**UINT16**	N/A	0:None 1:Kpa 2:Mpa 3:Psi 4:Bar 5:℃ 6:℉	4~20 mA input unit	Read /Write
0x10BF	**4287**	PFC_SYSTEM_SET_ANALOGY_INPUT_DOT	**UINT16**	N/A	0~3	Decimal digits	Read /Write
0x10C0	**4288**	PFC_IO_SIGNAL_SET_MODBUS_COMM_ID	**UINT16**	N/A	0 ~ 255	Modbus ID	Read /Write
0x10C1	**4289**	PFC_IO_SIGNAL_SET_MODBUS_COMM_BAUDRATE-High	**UINT32**	BPS	1200 :1200bps 2400 :2400bps 4800 :4800bps 9600 :9600bps 19200 :19200bps 38400 :38400bps 57600 :57600bps	BaudRate	Read /Write
0x10C2	**4290**	PFC_IO_SIGNAL_SET_MODBUS_COMM_BAUDRATE-Low					
0x10C3	**4291**	PFC_IO_SIGNAL_SET_MODBUS_COMM_DATA_BTIS	**UINT16**	N/A	0x0000:8 0x1000:9	Data bit	Read /Write
0x10C4	**4292**	PFC_IO_SIGNAL_SET_MODBUS_COMM_STOP_BITS	**UINT16**	N/A	0x0000:1 0x2000:2	Stop bit	Read /Write
0x10C5	**4293**	PFC_IO_SIGNAL_SET_MODBUS_COMM_PARITY	**UINT16**	N/A	0x0000:None 0x0400:even parity 0x0600:uneven parity	Parity	Read /Write
0x10C6	**4294**	PFC_LOAD_DEFAULT_SETTING	**UINT16**		0: Cancel 1: Comfirm	Default value	Read /Write

0x10C9	Parameter setting- Analog Simulation		Data Type	Unit	Range	Definition	Authority
0x10C9	**4297**	PFC_SIMULATION_FUNC_STATE	**UINT16**	N/A	0:None 1: Flow rate 2: Flow capacity 3: Current output 4: Frequency output 5: Output1 status 6: Output2 status	Simulation fuction select	Read /Write
0x10CA	**4298**	PFC_SIMULATION_FLOW_SPEED-High	**FLOAT64**	m/s	-10.000~10.000	Simulation of flow rate	Read /Write
0x10CB	**4299**	PFC_SIMULATION_FLOW_SPEED+1					Read /Write
0x10CC	**4300**	PFC_SIMULATION_FLOW_SPEED+2					Read /Write
0x10CD	**4301**	PFC_SIMULATION_FLOW_SPEED-Low					Read /Write
0x10CE	**4302**	PFC_SIMULATION_FLOW_RATE-High	**FLOAT642**	Rate Unit	+0.0000 ~ Caliver(m)^2 *7.85	Simulation of flow capacity	Read /Write
0x10CF	**4303**	PFC_SIMULATION_FLOW_RATE+1					Read /Write
0x10D0	**4304**	PFC_SIMULATION_FLOW_RATE+2					Read /Write
0x10D1	**4305**	PFC_SIMULATION_FLOW_RATE-Low					Read /Write
0x10D2	**4306**	PFC_SIMULATION_OUTPUT_CURR-High	**FLOAT32**	mA	3.6~22	Simulation of current output	Read /Write
0x10D3	**4307**	PFC_SIMULATION_OUTPUT_CURR-Low					Read /Write
0x10D4	**4308**	PFC_SIMULATION_OUTPUT_FREQ	**UINT16**	Khz	0.002~8Khz	Simulation of frequency output	Read /Write
0x10D5	**4309**	PFC_SIMULATION_OUTPUT_1_STATUS	**UINT16**	N/A	0: OPEN 1: CLOSED	Simulation of output1 status	Read /Write
0x10D6	**4310**	PFC_SIMULATION_OUTPUT_2_STATUS	**UINT16**	N/A	0: OPEN 1: CLOSED	Simulation of output2 status	Read /Write

0x10DE	System specific setting		Data Type	Unit	Range	Definition	Authority
0x10DE	**4318**	PFC_SAVE_SYSTEM_VAR_TO_EEPROM	**UINT16**	N/A	0: none 1: Input	Input USER EEPROM	Read /Write
0x10DF	**4319**	PFC_ENG_MODE_SAVE_SETTING	**UINT16**	N/A	0: none 1: Input	Input FACTORY; Set EEPROM	Read /Write
0x10E0	**4320**	pfc_auto_set_excition_freq_flag	**UINT16**	N/A	0: Off 1: On	Auto input excitation frequency accoring to frequency and pipe size	Read /Write

EPD30 電磁流量計

產品操作手冊



桓達科技股份有限公司

23678 新北市土城工業區自強街 16 號

電話：886-2-22696789　　傳真：886-2-22686682

網址：http://www.fine-tek.com　　E-mail:info@fine-tek.com

08-EPD30-B7-CK,08/03/2022

目　錄

1. 閱讀標示 3

2. 產品保證 4

2.1 新品保固 4
2.2 維修保固 4
2.3 服務網絡 5

3. 產品檢查 6

3.1 物品核對 6
3.2 安全查驗 6

4. 概述 6

5. 產品特點 7

6. 適用範圍 7

7. 環境條件 7

8. 工作原理 8

9. 技術性能 9

9.1 執行標準 9
9.2 基本參數和性能指標 9

10. 外型尺寸 11

10.1 JIS 10K & 20K 11
10.2 ANSI 150LBS & 300LBS 13
10.3 DIN PN40 & PN16 & PN10 14

11.安裝 15

11.1 保證電磁流量計測量精度的必要條件： 15
11.2 安全措施 15
11.3 安裝前的檢查 15
11.4 吊裝 16
11.5 正確安裝 16
11.6 管道上安裝注意事項 18
11.7 接地要求 19
11.8 改變傳送器盒的方向 19

12. 接線與使用 20
12.1 接線 20
13. 送電前的檢查 21
14. 參數功能說明 22
14.1 設定選單流程說明 22
14.2 各參數設定功能說明 23
14.3 各參數設定範圍說明 31
15. 產品選型 33
16. 運輸與貯存 35
17. 故障檢查與維修 36
18. MODBUS 通訊協定(參照英文版) 36

1. 閱讀標示

感謝您購買本公司桓達科技的產品，此操作說明書是針對產品的特性、動作原理、操作和維修方式，還有使用注意事項等內容來說明，可讓使用者充分瞭解產品的正確使用方法，避免發生設備損壞或操作者受傷等危險狀況。

- 使用本產品前，請完整、仔細的閱讀本操作手冊。
- 若本操作手冊無法提供您所要的需求時，請與本公司聯絡。
- 本操作說明書的內容，會依照版本的更新而有所不同，將會上傳於本公司網站上，提供使用者下載。
- 請不要自行拆開或維修，這意味著您將失去保固資格。請將產品寄回本公司維修和校準，或與本公司聯絡。
- 警告符號說明：



提示危險→表示若操作錯誤會有致命和重大災害的危險。



提示注意→表示若操作錯誤會有一定程度的傷害和設備的損壞。



提示電擊→表示可能會觸電的警告。



提示火災→表示可能會發生火災的警告。



提示禁止→表示禁止的錯誤動作事項。

2. 產品保證

2.1 新品保固

- 本公司產品於交貨日算起十二個月內，在符合保固條件之下發生故障，可不收檢測、零件、維修等費用。
- 產品運送過程導致新品瑕疵而非人為故障，可於 7 日內向本公司更換。
- 產品故障需寄回原廠維修時，請將產品整組寄回，勿自行拆卸部品，並且包裝請務必完善，避免運送損毀，造成更大的損失。
- 產品保證僅針對正常使用客戶，如有特殊應用、不正常使用及超量使用者，則不在此保證範圍內。
- 在以下狀況下發生故障，將不具有保固條件，需酌收收檢測、零件、維修等費用：
  - 產品整機或零件超過保固期限。
  - 未依操作手冊使用或未依說明書上之使用環境，所致之故障毀壞。
  - 產品之毀損係受不可抗力(天災、水災、火災、地震、雷擊、颱風等)，人為破壞(刮傷、摔傷、卡榫斷裂、敲打、破裂、重擊等)，人為疏失(使用不合適的電壓、高濕、進水、汙漬、腐蝕、遺失、未妥善保管等)或其他非正常因素所致者。遭遇天災地變之不可抗拒之外力的情況下，所造成的故障。
  - 客戶擅自或使第三人安裝、添附、擴充、修改、修復非本公司授權或認可之零件所致之毀壞。
  - 產品標籤資訊不符或破損不清楚而無法確定產品序號時。

2.2 維修保固

本公司對於產品維修後，針對維修部份提供**六個月**保固期，在此期間內若同一零組件再發生相同故障時，即可享有免費維修服務。

2.3 服務網絡

公司	地址	電話	傳真
臺北總公司 (臺灣)	23678 新北市土城工業區自強街 16 號	+886 2-2269-6789	+886 2-2268-6682
台中營業處 (臺灣)		+886 4-2337-0825	+886 4-2337-0836
高雄營業處 (臺灣)		+886 7-333-6968	+886 7-536-8758
上海凡宜科技電子有限公司(中國)	201109 上海市閔行區顓橋鎮都會路451號	+86 021-64907260	+86 021-6490-7276
Aplus FineTek Sensor Inc. (美國子公司)	355 S. Lemon Ave, Suite D, Walnut, CA 91789	1 909 598 2488	1 909 598 3188
Finetek Pte Ltd. (新加坡分公司)	37 Kaki Bukit Place, Level 4 Singapore 416215	+65 6452-6340	+65 6734-1878
FineTeK GmbH (德國分公司)	Bei den Kämpen 26 21220 Seevetal-Ramelsloh, Germany	+49 (0) 4185 8083 0	+49 (0) 4185 8083 80
Finetek Co Ltd. (印尼分公司)	Tunas Bitung Industrial Park Blok C3 No.12 dan No.15 Jalan Raya Serang Km.13.8 Kabupaten Tangerang 15710 Banten	+62 021-2958-1688	

3. 產品檢查

3.1 物品核對

- 流量計1組
- 操作說明書1份
- 產品檢驗單1份
- 接地環1組(2片)(選購)

3.2 安全查驗

- 拆封前請檢查外包裝有無變形或破損，並拍照存證作為事後補償依據
- 拆封後請檢查內容物有無變形或破損及一切品質問題，並拍照存證作為事後補據
- 開箱後請立即核對內容物是否與訂購內容相符，數量是否正確
- 若有以上異常狀況請於貨到 7 日內連絡本公司(連同照片)，否則恕不無償給予補換貨或維修

4. 概述

本公司電磁流量計，採用穩定性高的線圈激磁方式，其穩定性較傳統的生磁方式高。產品經過嚴苛的震動和抗雜訊測試後都能很穩定的工作，對於工業現場環境的複雜性有良好的耐受度，在實際的應用中有著更長的產品壽命。

電磁流量計從開始發展到今天，持續不斷的被改良，常被廣泛的應用到各類的工業流體管道的監控中，其中包含發電、水處理、食品、醫藥、船舶、染整、半導體製程等不勝枚舉。

由於電磁流量計的原理單純，適用範圍廣，只要適當的選型並與流體性質配合便能良好的應用在各類的環境之中。

5. 產品特點

- 測量時不受液體密度、粘度、溫度、壓力及導電率等變化而影響測量結果
- 測量管內只有兩個量測點，沒有阻流件及活動件，故不會造成壓力損失及堵塞的情況
- 可測試導電液體及含微量固體顆粒之流體流量
- 安裝時所需的直管段僅需流量計上游前 5D 及下游 2D，不需複雜的管路設計
- 測量的量程比可 1:100，尤其在小流量測量時精度高
- 具備自我診斷功能，可自我偵測激磁訊號、測量管是否為空管、電極是否汙損
- 內襯可為一般型 NBR(Nitrile),高溫或酸鹼型 PTFE(Teflon)
- 最高允許流體溫度可達 120℃(Teflon)
- 流量轉換器設定簡單、功能性強
- 支援參數修改紀錄、開關機紀錄(選購)
- 選單支援權限管理(選購)

6. 適用範圍

- 導電率： > 5 μS/cm
- 流體性質：液體、含少量固體顆粒之液體。
- 應用產業：發電、水處理、食品、醫藥、船舶、染整、半導體製程


7. 環境條件

- 環境溫度: -40℃ ~ 70℃
- 相對濕度: 5% ~ 95% of RH, 無凝結水
- 大氣壓力: 86 ~ 106 KPa
- 電源：100~240Vac 50/60Hz 或 24Vdc

8. 工作原理

電磁流量計動作原理是基於法拉第電磁感應定律。當導體在磁場內運動，在與磁場方向、運動方向相互垂直方向的導體兩端，會有感應電動勢產生。電動勢的大小與導體運動速度和磁感應強度大小成正比。

在<圖一>中，當導電流體以平均流速 V（m/s），通過裝有一對測量電極的一根內徑為 D（m）的絕緣管子流動時，並且該管子處於一個均勻的磁感應強度為 B（T）的磁場中。那麼，在這對電極上就會感應出垂直於磁場和流動方向的電動勢（E）。由電磁感應定律，E 可寫作（1）式：

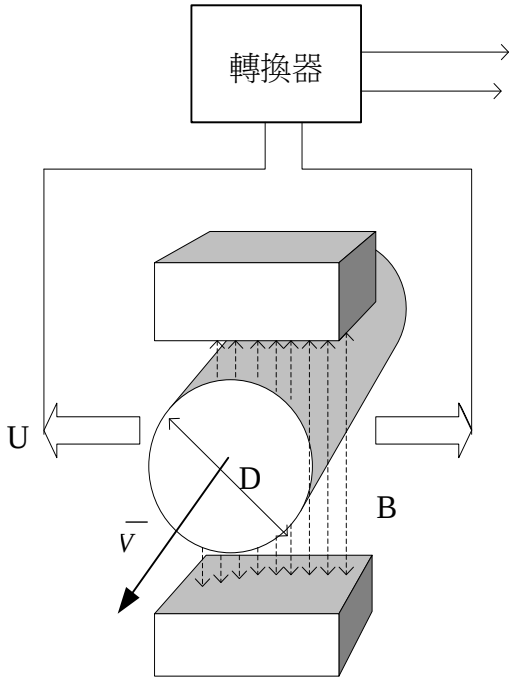

<圖一>

$$E = kB \cdot D \cdot V \text{（V）} \quad \text{.....（1）}$$

式中 k 是比例係數。

體積流量可以寫作

$$q_v = \frac{\pi D^2}{4} V \text{（} m^3/s \text{）} \quad \text{.....（2）}$$

由公式（1）和（2）可得到：

$$q_v = \frac{\pi D}{4k} \frac{E}{B} (m^3/s) \quad \text{.....（3）}$$

因此電動勢可表示為：

$$E = \frac{4kB}{\pi D} q_v(V) \quad \text{.....（4）}$$

當 B 是個常數時，公式（3）中

$\frac{\pi D}{4k} \frac{1}{B} = A$，公式（3）改寫為：

$$q_v = AE(m^3/s) \quad \text{.....（5）}$$

可見，流量 q_v 與電動勢 E 成正比。

9. 技術性能

9.1 執行標準

IEC 60068-2-3	EN 61326-1:2013
IEC 61326-1	EN 55011:2009/A/:2010
IEC 60092-504	ISO 4064-1
JIS B2220	JIS B7554-1997
ANSI B16.5	DIN 25 Series

9.2 基本參數和性能指標

9.2.1 產品技術規格表

項目	EPD30
螢幕	LCM 128*64 畫素背光型
按鍵	3 鍵式操作
通訊介面	RS-485 (Modbus)(Optional 支援 ZigBee Pro 無線傳輸)
精確度	±0.5% of reading@1m/s(0.2% optional)
介質溫度	-20 ~ 120℃
環境溫度	-40 ~ 70℃*
流體導電度	>5 uS/cm
量測範圍	0.1m/s ~ 10m/s
電流輸出精度	0.1% of Pulse Output Accuracy 溫度係數(100ppm/℃)
耐壓	16Kg/cm^2 (16Kg/cm^2 以上,請洽業務)
電流輸出模式	主動
類比輸出	4 ~ 20mA
電流輸出最大負載	< 700Ω
警報電流	3.6mA 或 22 mA
頻率輸出範圍	2 ~ 8KHz
Pulse 寬度	自動 (脈波寬度 50%)
Pulse 模式	NPN 晶體輸出 32vdc/200mA
時間常數	1~100 s
控制輸出(DO)	NPN 晶體輸出 32vdc/200mA ;1-CH
控制輸入(DI)	乾接點 ON< 200Ω ; 1,000Ω< OFF ; 1-CH
資料紀錄(選購)	500 筆資料,含萬年曆(內建電池壽命 6 個月)
鮑率	1200 ~ 57600 bps
防護等級	IP67 / NEMA 4X
接線盒材質	鋁合金
輸入電源	AC 100~240V 或 DC 24V
消耗功率	< 10W
入線口規格	M20 x 1.5*2
激磁模式	Pulse DC
震動規範	IEC 60068-2-3
EMC 規範	IEC/EN 61326-1 Class A table2

*LCM 低於-20℃時無法顯示

9.2.2 各管徑建議流量範圍

管徑 (mm)	流量範圍（m^3 / h）	
	流速 0.1~1.0m/s	流速.1~10m/s
15	0.06~0.64	0.64~6.4
25	0.17~1.77	1.77~17.7
40	0.45~4.5	4.5~45.2
50	0.71~7.1	7.1~71
65	1.19~11.9	11.9~119
80	1.81~18.1	18.1~181
100	2.83~28.3	28.3~283
125	4.42~44.2	44.2~442
150	6.36~63.6	63.6~636
200	11.3~113	113~1130
250	17.7~177	177~1770
300	25.4~254	254~2540
350	34.6~346	346~3460
400	45.2~452	452~4520
450	57.2~572	572~5720
500	70.7~707	707~7070

9.2.3 內襯材料

內襯材料	主要性能	適應範圍
丁晴橡膠 (NBR)	1. 有極好的彈性，高度扯斷力，耐磨性能好。 2. 耐一般低濃度酸、鹼、鹽溶液；不耐氧化性介質的腐蝕。	1. < 80℃ 2. 中性強磨損的礦漿，煤漿和泥漿。
氯丁橡膠 (Neoprene)	1. 耐磨性中等。 2. 耐一般低濃度的酸鹼、鹽腐蝕。	1. < 80℃ 2. 自來水、工業用水、海水。
PTFE	1. 化學性能穩定，能耐各種酸、鹼、鹽溶液和各種有機溶劑。不耐三氟化氯(ClF3)，高溫三氟氟化氧，高流速液氧，臭氧的腐蝕。 2. 耐磨性能一般。	1. -20~120℃ 2. 濃酸、鹼等強腐蝕性介質。

9.2.4 電極材料


電極材料	耐蝕性能
不鏽鋼(316L)	用於水、污水或無機、有機腐蝕性介質。
哈氏合金	能耐氧化性酸：如硝酸、混酸或硫酸的混合介質的腐蝕；也耐氧化的鹽類：如 Fe^{2+}、Cu^{2+} 下；或含其他氧化劑的腐蝕：如高於常溫的次氯酸鹽溶液、海水的腐蝕。
鈦	能耐海水、各種氧化物和次氯酸鹽、氧化性酸(包括發煙硝酸)、有機酸鹼等的腐蝕；不耐較純的還原性酸(如硫酸、鹽酸)的腐蝕；但如酸中含有氧化劑時，耐腐蝕性大為降低。
鉭	具有優良的耐腐蝕性，和玻璃很相似。除了氫氟酸、發煙酸、鹼外，幾乎能 耐一切化學介質(包括沸點的鹽酸、硝酸和 175℃以下的硫酸)腐蝕。在鹼中不耐腐。

9.2.5 外殼防護等級

IP67

10. 外型 尺寸

法蘭型

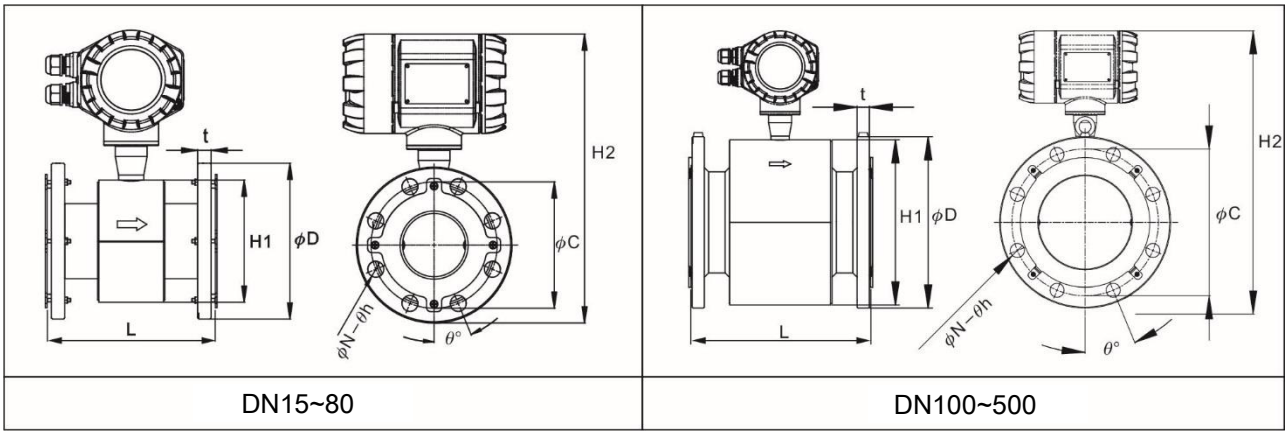

DN15~80 | DN100~500


10.1 JIS 7.5 & 10K & 20K

接續規格		JIS 10K															
公稱通徑(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
內襯材質		PTFE															
長度	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
外徑	ϕD	95	125	140	155	175	185	210	250	280	330	400	445	490	560	620	675
PCD	ϕC	70	90	105	120	140	150	175	210	240	290	355	400	445	510	565	620
法蘭厚度	t	12	14	16	16	18	18	18	20	22	22	24	24	26	28	30	30
螺絲孔傾斜角	θ°	45	45	45	45	45	22.5	22.5	22.5	22.5	15	15	11.25	11.25	11.25	9	9
螺絲孔直徑	θh	15	19	19	19	19	19	19	23	23	23	25	25	25	27	27	27
螺絲孔數量	N	4	4	4	4	4	8	8	8	8	12	12	16	16	16	20	20
傳感器高度	H1	75	88	125	125	145	145	195	195	270	305	365	406	470	530	580	630
總高度	H2	267	289	315	322	342	347	385	405	467	506	572	616	675	737	769	818
重量(Kg)	-	5	6.8	6.8	7.7	9	9.9	12.9	17.5	23.5	33.2	54	69.6	88.4	109.3	---	---


接續規格		JIS 20K											
公稱通徑(mm)		15	25	40	50	65	80	100	125	150	200	250	300
內襯材質		PTFE											
長度	L	200	200	200	200	200	200	250	250	300	350	400	500
外徑	ϕD	95	125	140	155	175	200	225	270	305	350	430	480
PCD	ϕC	70	90	105	120	140	160	185	225	260	305	380	430
法蘭厚度	t	14	16	18	18	20	22	24	26	28	30	34	36
螺絲孔傾斜角	θ°	45	45	45	22.5	22.5	22.5	22.5	22.5	15	15	15	11.25
螺絲孔直徑	θh	15	19	19	19	23	23	23	25	25	25	27	27
螺絲孔數量	N	4	4	4	8	8	8	8	8	12	12	12	16
傳感器高度	H1	75	88	125	125	145	145	195	195	270	305	365	406
總高度	H2	267	289	315	322	342	355	392	415	478	514	585	632
重量(Kg)	-	5.3	7	7.1	7.7	9	12.3	16.4	23.6	31	43.4	74.2	94.2

註：

DN15~DN80、DN350~DN500 內襯保護(接地)環厚度 2mm 流量計總長度=L+4mm，DN100~DN300 內襯保護(接地)環厚度 0.5mm 流量計總長度=L+1mm，尺寸公差；流量計總長度±3mm，總高度±5mm

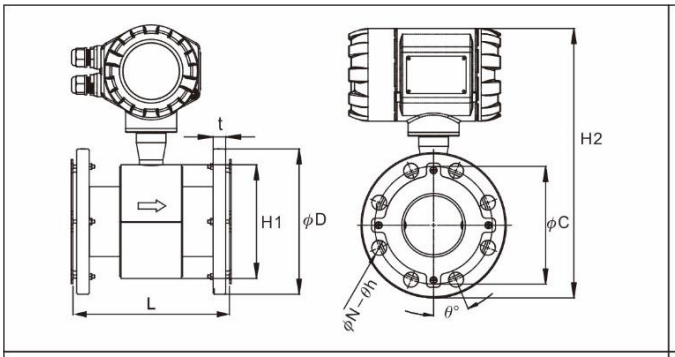

DN50~80

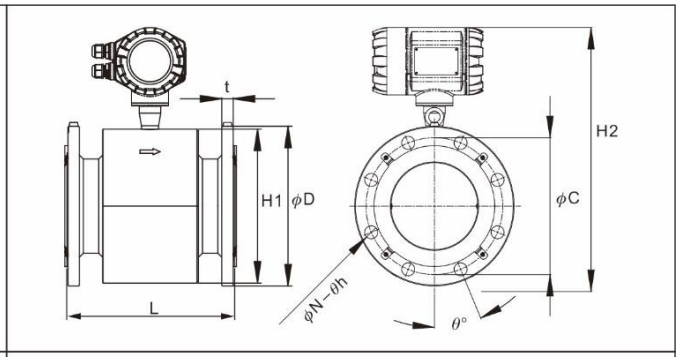


DN100~500


接續規格		JIS 7.5K										
公稱通徑(mm)		50	80	100	150	200	250	300	350	400	450	500
內襯材質		PTFE										
長度	L	200	200	250	300	350	400	500	500	600	600	600
外徑	ϕD	186	211	238	290	342	410	464	530	582	582	706
PCD	ϕC	143	168	195	247	299	360	414	472	524	585	639
法蘭厚度	t	16	18	18	20	21	23	26	26	26	28	28
螺絲孔傾斜角	θ°	45	45	45	30	22.5	22.5	18	18	15	15	15
螺絲孔直徑	θh	19	19	19	19	19	23	23	24	24	28	28
螺絲孔數量	N	4	4	4	6	8	8	10	10	12	12	12
傳感器高度	H1	125	145	195	270	305	365	406	470	530	580	630
總高度	H2	338	360	399	472	511	577	625	693	747	783	832
重量(Kg)	-	7.7	12.5	15.8	25.6	36.8	55.6	75	---	---	---	---

註：

DN15~DN80、DN350~DN500 內襯保護(接地)環厚度 2mm 流量計總長度=L+4mm，DN100~DN300 內襯保護(接地)環厚度 0.5mm 流量計總長度=L+1mm，尺寸公差；流量計總長度±3mm，總高度±5mm

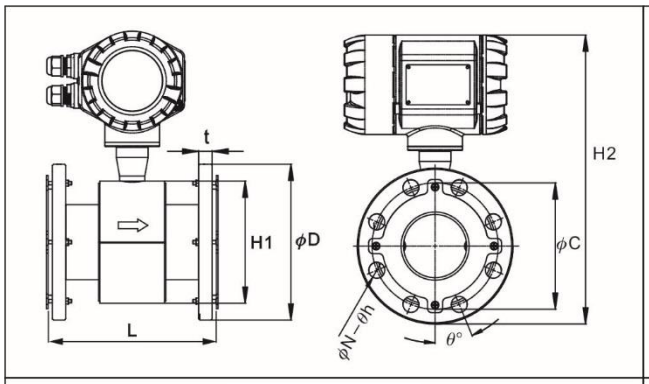

DN15~80

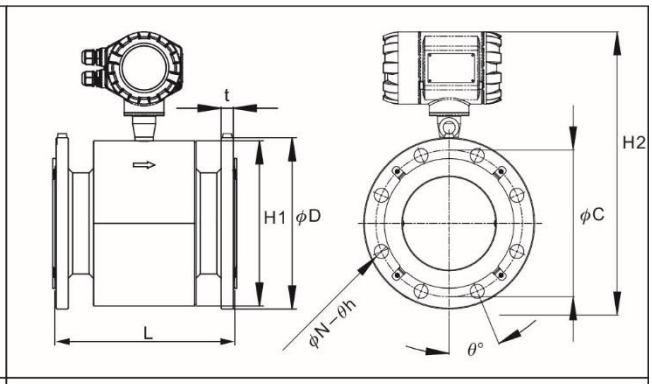

DN100~500


10.2 ANSI 150Lbs & 300Lbs

接續規格		ANSI 150Lbs															
公稱通徑(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
內襯材質		PTFE															
長度	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
外徑	ϕD	89	108	127	152	178	190	229	254	279	343	406	483	533	597	635	599
PCD	ϕC	60	79	98	121	140	152	191	216	241	298	362	432	476	540	578	635
法蘭厚度	t	10	13	16	17	21	22	22	22	24	27	29	30	33	35	38	41
螺絲孔傾斜角	θ°	45	45	45	45	45	45	22.5	22.5	22.5	22.5	15	15	15	11.25	11.25	9
螺絲孔直徑	θh	16	16	16	19	19	19	19	22	22	22	25	25	29	29	32	32
螺絲孔數量	N	4	4	4	4	4	4	8	8	8	8	12	12	12	16	16	20
傳感器高度	H1	75	89	125	125	145	145	195	195	265	305	365	406	470	530	580	630
總高度	H2	264	281	308	321	344	350	394	407	464	511	575	633	695	754	797	851
重量(Kg)	-	4.6	6.1	6.5	8.3	10.8	12.3	17.8	21	27	44.2	67.2	99.6	124.8	152.9	---	---


接續規格		ANSI 300Lbs															
公稱通徑(mm)		15	25	40	50	65	80	100	125	150	200	250	300	350	400	450	500
內襯材質		PTFE															
長度	L	200	200	200	200	200	200	250	250	300	350	400	500	500	600	600	600
外徑	ϕD	98	124	156	165	190	210	254	279	318	381	445	521	584	648	711	775
PCD	ϕC	67	89	114	127	149	168	200	235	270	330	387	451	514	572	629	686
法蘭厚度	t	13	16	19	21	24	27	30	33	35	40	46	49	52	56	59	62
螺絲孔傾斜角	θ°	45	45	45	22.5	22.5	22.5	22.5	22.5	15	15	11.25	11.25	9	9	7.5	7.5
螺絲孔直徑	θh	166	19	22	19	22	22	22	22	22	25	29	32	32	35	35	35
螺絲孔數量	N	4	4	4	8	8	8	8	8	12	12	16	16	20	20	24	24
傳感器高度	H1	75	88	125	125	145	145	195	195	265	305	365	406	470	530	580	630
總高度	H2	269	288	323	327	350	360	407	419	481	528	592	650	718	778	832	886
重量(Kg)	-	5.1	7.3	9.2	10.3	12.8	16.5	26.6	33	43.8	69.2	100.4	146.6	---	---	---	---

註：

DN15~DN80、DN350~DN500 內襯保護(接地)環厚度 2mm 流量計總長度=L+4mm，DN100~DN300 內襯保護(接地)環厚度 0.5mm 流量計總長度=L+1mm，尺寸公差；流量計總長度±3mm，總高度±5mm

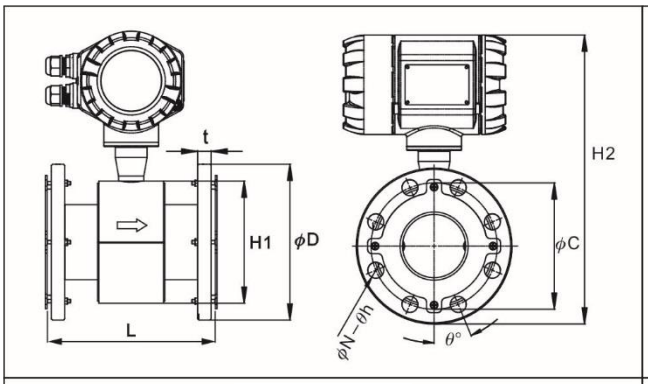

DN15~80

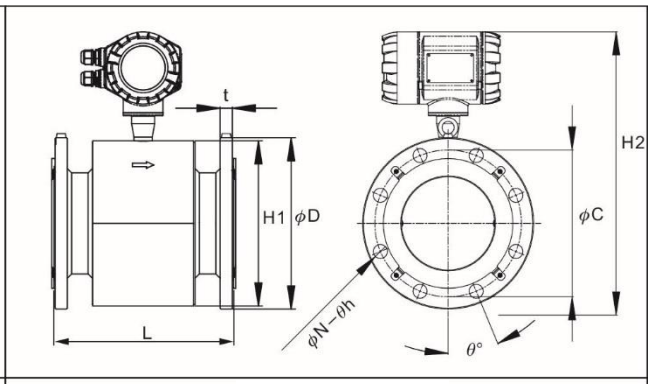

DN100~500

10.3 DIN PN40 & PN16 & PN10

接續規格		DIN PN40						DIN PN16					
公稱通徑(mm)		15	25	40	50	65	80	65	80	100	125	150	200
內襯材質		PTFE						PTFE					
長度	L	200	200	200	200	200	200	200	200	250	250	300	350
外徑	ψD	95	115	150	165	185	200	185	200	220	250	285	340
PCD	ψC	65	85	110	125	145	160	145	160	180	210	240	295
法蘭厚度	t	18	18	18	20	22	24	18	20	20	22	22	24
螺絲孔傾斜角	θ°	45	45	45	45	22.5	22.5	45	22.5	22.5	22.5	22.5	15
螺絲孔直徑	θh	14	14	18	18	18	18	18	18	18	18	22	22
螺絲孔數量	N	4	4	4	4	8	8	4	8	8	8	8	12
傳感器高度	H1	76	89	125	125	145	145	145	145	195	195	265	265
總高度	H2	268	284	320	327	347	355	347	355	390	405	467	490
重量(Kg)	-	5.2	7.1	7.1	7.7	9	12.3	8.6	11.7	15.6	21	28.2	40

接續規格		DIN PN10						
公稱通徑(mm)		200	250	300	350	400	450	500
內襯材質		PTFE						
長度	L	350	400	500	500	600	600	600
外徑	ψD	340	395	445	490	565	615	670
PCD	ψC	295	350	400	460	515	565	620
法蘭厚度	t	24	26	26	28	32	38	38
螺絲孔傾斜角	θ°	22.5	15	15	11.25	11.25	9	9
螺絲孔直徑	θh	22	22	22	22	26	26	26
螺絲孔數量	N	8	12	12	16	16	20	20
傳感器高度	H1	305	365	406	470	530	580	630
總高度	H2	516	570	616	675	740	788	838
重量(Kg)	-	33.2	54	69.6	88.4	109.3	---	---

註：

DN15~DN80、DN350~DN500 內襯保護(接地)環厚度 2mm 流量計總長度=L+4mm，DN100~DN300 內襯保護(接地)環厚度 0.5mm 流量計總長度=L+1mm，尺寸公差；流量計總長度±3mm，總高度±5mm

11.安裝

流量計的設計、試驗和供電均有相關規定，用戶必須嚴格遵守說明，以確保流量計的安全操作及正常運作。

11.1 保證電磁流量計測量精度的必要條件：

- 被測液體必須具有導電性
- 被測液體必須能充滿管道
- 被測液體必須均勻，以保證避免電導率的不均勻性（會產生嚴重干擾），如需動態加入化學物質，應在流量計下游處加入
- 電磁流量計系統必須良好接地，尤其在塑膠管道中一定要加裝接地環並實值接地
- 流量計入口直管段至少 5 倍 D(測量管道內徑)，出口直管段至少 2 倍 D
- 在流量計附近應避免強電磁場干擾；避免安裝在大型電機或變壓器等設備附近

11.2 安全措施

為保障人身和設備的安全，須遵守以下事項：


- 在選擇位置和安裝流量計之前，必須認真閱讀完本說明書有關部分，同時要考慮流量計、相關設備和機身環境的安全要求
- 應由具備一定流量計知識的人員進行流量計的安裝和維修
- 正確安裝流量計感測器及配管，保證密封安全可靠，液體壓力不得超過流量計規格上所能承受的最高工作壓力
- 採取適當措施，防止觸電事故
- 流量計的吊裝設備應符合安全規定

11.3 安裝前的檢查

- 檢查法蘭、內襯、外殼和出線套有無損傷
- 打開盒蓋、檢查接線印刷電路板有無鬆動或損壞
- 檢查銘牌中型號編碼與訂貨編碼是否相符

11.4 吊裝

流量計應採用正確吊裝方法進行吊裝，吊裝設備的安全載荷及防護措施應符合有關規定。禁止在傳送器箱體（一體式流量計）或接線盒（分離型流量計）處用繩拴起吊流量計。

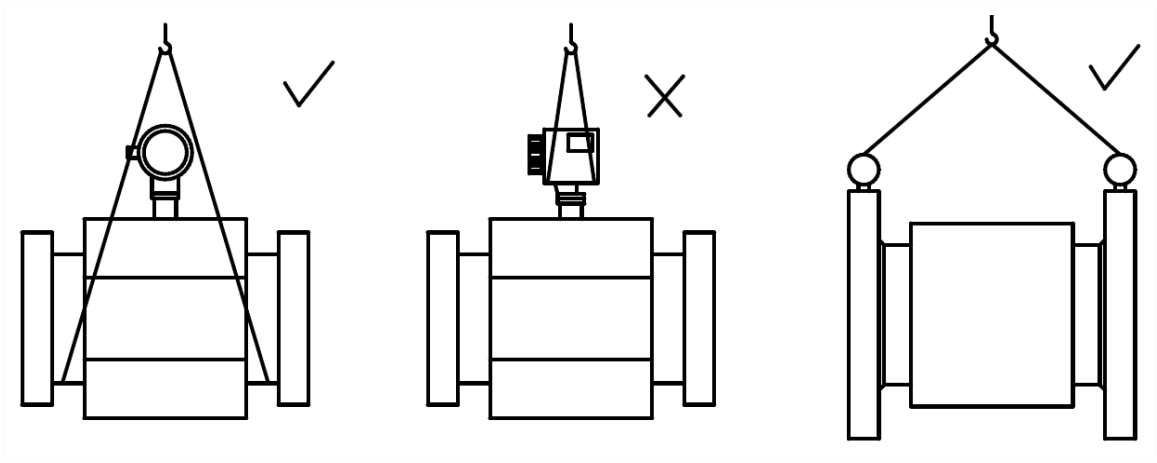


11.5 正確安裝

正確地選擇安裝點和正確安裝流量計都是非常重要的環節，若在安裝環節失誤，輕者影響測量精度，重者會影響流量計的使用壽命，甚至會損壞流量計。


選擇安裝位置時需特別注意

a. 測量電極的軸線必須近似於水平方向（與水平線夾角一般為 10°以內）。

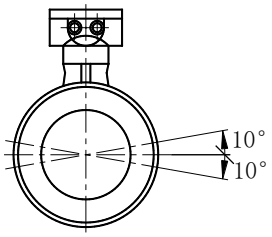

b. 測量管道內必須完全充滿液體。

c. 流量計的前方最少要有 5×D（D 為流量計內徑）長度的直管段，後方最少要有 2×D（D 為流量計內徑）長度的直管段。

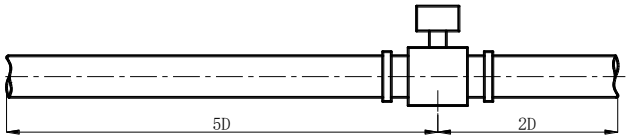

d. 流體的流動方向和流量計的箭頭方向一致。

e. 請避免在管道內出現真空現象，會損壞流量計的內襯，。


f. 在流量計附近應無強電磁場，流量計安裝場所的磁場強度應小於 400A/m（避免安裝在大型電機或變壓器等設備附近）。

g. 在流量計附近應有充裕的空間，以便安裝和維護。

h. 若測量管道有振動，在流量計的兩邊應有固定的支座。

i. 測量不同介質的混合液時，混合點與流量計之間的距離最少要有 30×D（D 為流量計內徑長度）。

j. 為方便今後流量計的清洗和維護，應安裝旁通管道。

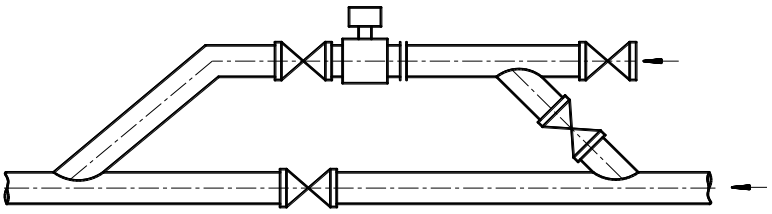

k. 安裝 PTFE 內襯的流量計時，連接兩法蘭的螺栓應注意均勻擰緊，否則容易壓壞 PTFE 內襯，盡可能使用扭力板手。

l. 流量計應避免強烈振動和過大的溫度變化，同時要防止腐蝕性液體的對流量計造成損害。

m. 如果安裝地點易受陽光曝曬，應增加遮陽設施。

n. 安裝感測器時，應盡可能的使測量管與製程管道位於同一個軸線上。
對 DN50 及以下公稱通徑的感測器，其軸線偏離不超過 2mm。DN65～DN150 其軸線偏離不超過 3mm，≥DN200 其軸線偏離不超過 4mm。






o. 法蘭之間加裝的墊片，應有良好的耐腐蝕性能，該墊圈不得伸入管道內部，阻礙流體流動。

p. 緊固流量計螺栓、螺母，其螺紋應完整無損，潤滑良好。應依據法蘭尺寸、力矩大小採用力矩板手緊固螺栓。

q. 在感測器鄰近管道進行焊接或火焰切割時，要採用隔離措施，防止襯裏受熱，且必須確認流量計未通電運行，防止損壞流量計。





11.6 管道上安裝注意事項

流量計安裝時，必須遵守以下安裝示意圖例，以確保流量計可以保證液體永遠充滿管道：(以下圖例僅為典型說明，並未包含全部可行的安裝方式，使用者應依實際工況進行安裝位置判斷。)

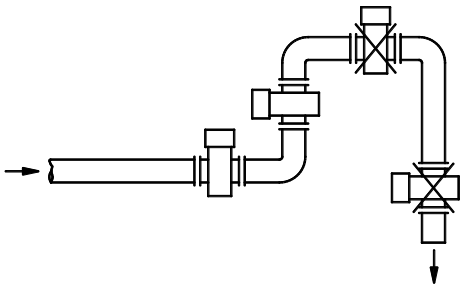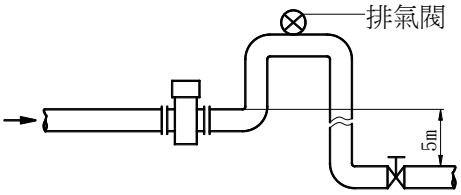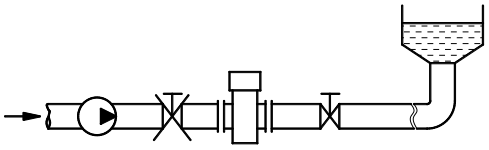序號	圖例	說明
1		■ 應安裝在水平管道較低處和垂直向上處。 ■ 避免安裝在管道的最高點和垂直向下處。
2		■ 應安裝在管道的上升處。
3		■ 若管道落差超過 5m，在傳感器的下游安裝排氣閥 ■ 傳感器的下游應有一定的背壓。
4		■ 應在傳感器的下游安裝控制閥和切斷閥，而不應安裝在傳感器上游。
5		■ 傳感器絕對不能安裝在幫浦的進口處，安裝在幫浦的出口處。

11.7 接地要求

電磁流量計的接地是非常重要的，若接地不良，無法正常工作，感測器和傳送器部分應有良好的單獨接地線（銅芯截面積為 1.6mm^2），接地電阻<10Ω。

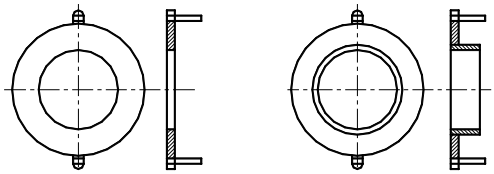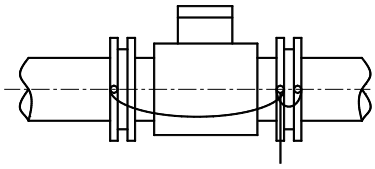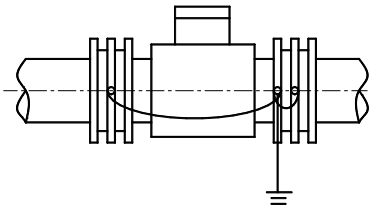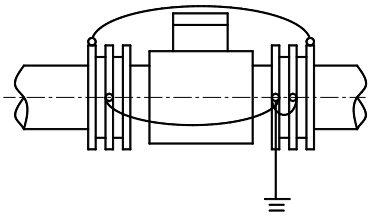	圖例	說明
接地環		■ 若與感測器連接的管道是絕緣性的，則需用接地環 ■ 應選擇其材質和電極的材質一樣，避免被液體。 ■ 若被測介質是磨損性的，應選擇帶頸接地環。
接地方式		■ 流量計在金屬管道上的安裝，金屬管道內壁沒有絕緣塗層。
		■ 流量計在塑膠或內壁有絕緣塗料、油漆、內襯等管道上安裝時，應在傳感器的兩端安裝接地環。
		■ 流量計在陰極保護管道上安裝，防護电解腐蝕的管道一般在其壁和外壁是絕缘的，安裝時需注意接地環和管道上的法蘭應絕緣。

11.8 改變傳送器盒的方向

傳送器盒可以根據需要作四個不同方向的轉變。

a. 一體型流量計的傳送器盒方向的改變

- 取下固定傳送器的 4 個六角螺絲。
- 將傳送器盒轉到理想的方向，旋轉時注意內部連接線。
- 重新固定傳送器。

12. 接線與使用

12.1 接線


12.1.1 接線注意事項

- 電源線建議選用二芯絕緣橡皮電纜線，線材外徑應大於 10mm。。
- 當為交流供電時，L1 應接“火線”
- 一般 24VDC 電源供電的情況下，電纜線的電阻應不大於 10Ω。
- 所有的端子台接線應夾一字端子，並作好絕緣；應避免電線直接伸入端子台。
- 電流輸出端子出線電纜總阻抗不得大於規格所標稱的阻抗。
- 脈波或頻率輸出一般為 NPN 晶體輸出，需外接電源。

12.1.2 打開背後外殼蓋，可看見如下圖所示接線端子

AC100~240V


數位輸出 1		RS-485 通訊		數位輸入	
DO1-	DO1+	D-	D+	DI-	DI+

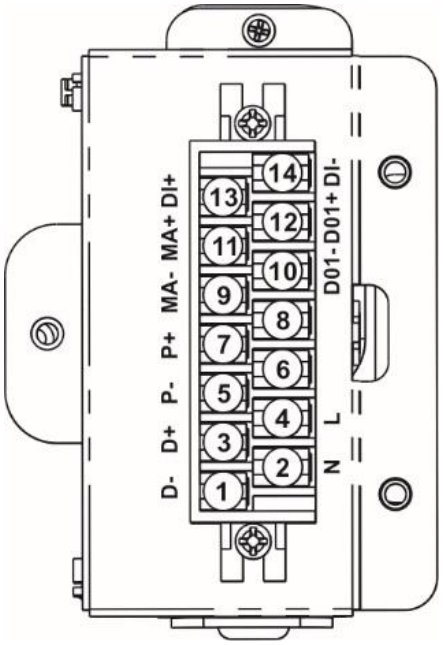

	N	L		P-	P+	mA-	mA+
	AC100~240 Vac			電壓脈波輸出		4-20mA 輸出	

DC24V

數位輸出 1		RS-485 通訊		數位輸入	
DO1-	DO1+	D-	D+	DI-	DI+
	V+ V-	P-	P+	mA-	mA+
	DC24V	電壓脈波輸出		4-20mA 輸出	

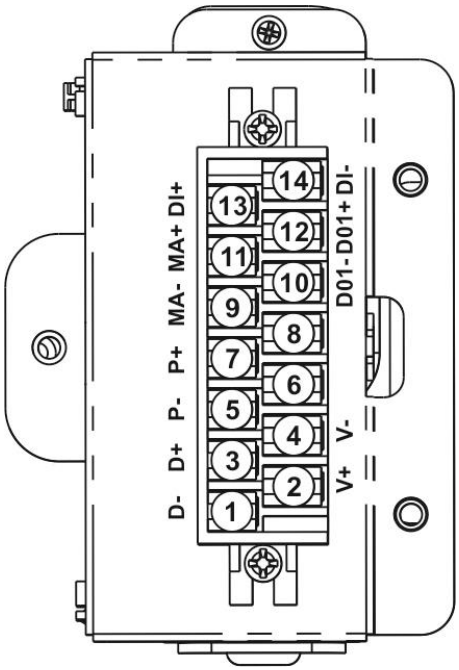


13. 送電前的檢查

1. 流量計在運輸和安裝中有無損傷
2. 使用電源電壓同銘牌電壓是否相符
3. 使用正確流量值的保險絲
4. 流量計正確接地
5. 打開管道閥門使液體充滿管線系統，應注意排除洩漏和系統內的殘留氣體
6. 接通流量計電源，通電預熱 10 分鐘即可正常工作


14. 參數功能說明

14.1 設定選單流程說明

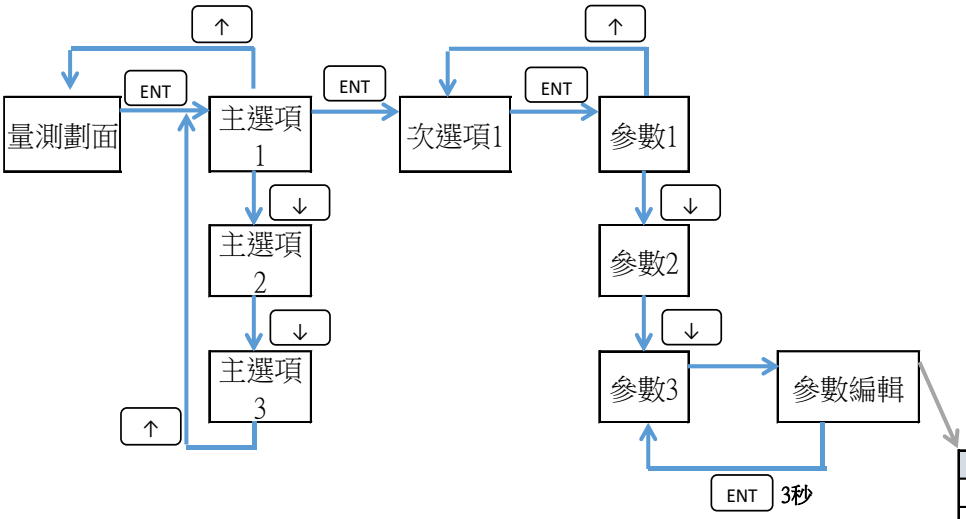

按鍵	數字編輯模式
ENT	確認鍵(長按)
←	"左"位移鍵
↑	數字："加"鍵
ENT + ←	取消

14.1.1 顯示介面功能

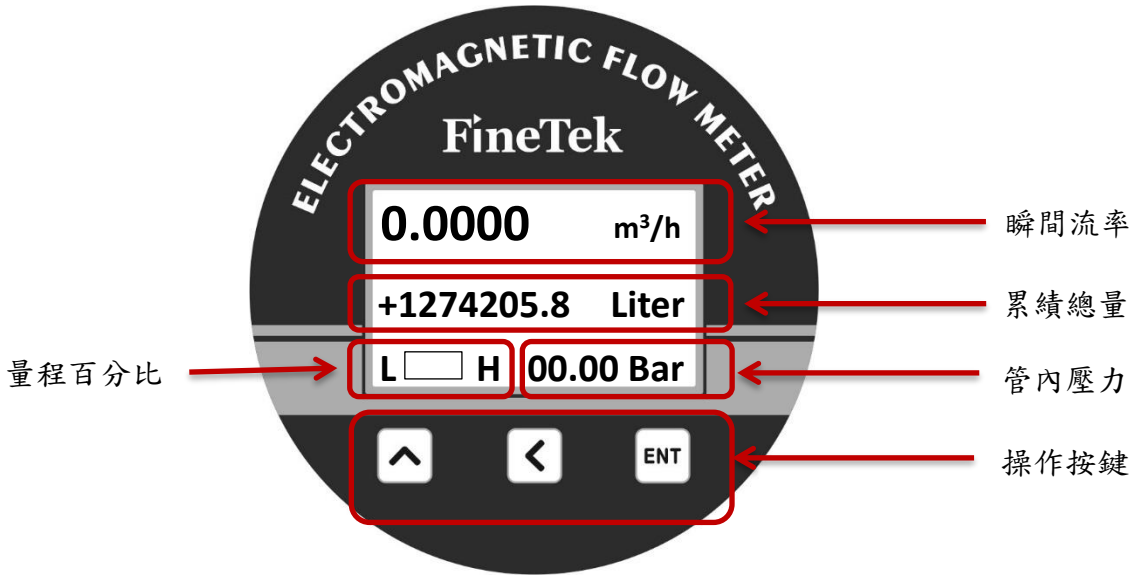

14.1.2 參數設定狀態時的鍵功能：

			參數設定頁面		
按鍵	量測主劃面	選單模式	Read Only	數字編輯模式	清單編輯模式
ENT	進入選單	進入次選單		確認鍵(長按)	確認鍵(長按)
←		回上層	回上層	"左"位移鍵	回上層
↑		次選單項目【下】		數字："加"鍵	選項：下翻頁
ENT+ ←				取消	

14.2 各參數設定功能說明

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
快速設定(0)	裝置位號 (1.1)	N/A	此區參數是從標準選單中取出之捷徑			
	流量零點調整 (2.1)	N/A				
	流率滿量程 (1.5)	N/A				
	瞬時流率單位 (1.4)	N/A				
	低流量屏避 (2.4)	N/A				
	輸入訊號平均時間 (3.1)	N/A				
	脈波單位設定 (3.3)	N/A				
	總量重置設定 (1.9)					

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
基礎設定(1)	裝置位號 (1.1)	N/A	none	00001	00001~65535	客戶端工廠管理用 tag number
	量測液體類型 (1.2)	N/A	-	水	水(Water)	設定量測液體類型種類
	流量計口徑 (1.3)	10~100 mm(1.3.1)	mm	actual	10,15,25,32,40,50,65,80,100	設定流量計公稱通徑，可計算流量量程
		125~500 mm(1.3.2)			125,150,200,250,300,350,400,450,500	
	瞬時流率單位 (1.4)	N/A	-	㎥/h	L/(s,min,h),m^3 /(s,min,h), gal/(s,min,h),kg(s,min,h), Ton(s,min,h) (若選重量單位，流量自動和密度相乘) "L/s","L/m","L/h","m^3 /s", "m^3 /m","m^3/h","gal/s", "gal/m","gal/h","kg/s", "kg/m","kg/h","Ton/s", "Ton/m","Ton/h","m^3 /d"	瞬時流量自動以此設定單位顯示
	流率滿量程 (1.5)	N/A	=流率單位	(5m/s) x (口徑 mm/2)^2 x pi x 流率單位	(0.1 ~ 10.0m/s) x (口徑 mm/2) ^{2} x pi x 流率單位 **(000.00)**	此量程設定直接對應到 4-20mA 輸出及頻率輸出值
	流體方向 (1.6)	N/A	dir	順向 (Forward)	順向,逆向	可選擇流體的流動方向
	總量累積單位 (1.7)	N/A	-	Liter	Liter,gal,㎥,kg,Ton	總量流量自動以此設定單位顯示
	總量累積模式 (1.8)	N/A	none	順向	順向,逆向,雙向	Σ+正向流測量,Σ-反向流測量,Σ△雙向流測量 (△= 正流 - 反流)
	總量重置設定 (1.9)	N/A	none	Cancel	否,是	將目前顯示的總累積量清除。

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
進階設定 (2)	流量零點調整 (2.1)	AUTO MANUAL	m/s	Actual	-0.5000~+0.5000	在滿管無流量時的零點流量補償
	流量系數 K (2.2)	N/A	none	1.000	0.000~3.000	流量傳感器特徵參數，真實值 = 測量值 * k
	密度 (2.3)	N/A	g/㎤	1.0000	0.0001~9.9999	質量流量=體積流量*密度
	低流量屏避 (2.4)	N/A	%	0.5	0.00~100.00	當管路內有微流或振動時，找低流顯示屏避 (判斷流率大於該值才顯示並累積)
	順向總量起始值 (2.5)	N/A	=總量累積單位	0	0~9999999999	初始化目前的正向累積總量
	反向總量起始值 (2.6)	N/A	=總量累積單位	0	0~9999999999	初始化目前的正向累積總量

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
輸出入訊號設定(3)	輸入訊號平均時間 (3.1)	N/A	second(s)	3	0~100	將實際流量做平均值輸出
	脈波輸出模式 (3.2)	N/A	none	Pulse NO	Pulse NO, Pulse NC, Frequency	Pulse 輸出接點的初始狀態，或用頻率來表示流率(如果選頻率,依流率表示),Pulse No,Nc 為總量輸出的高低電位狀態
	脈波單位設定 (3.3)	N/A	Unit/pulse	0.1 L	0.001~100(L,gal, m^3,g,kg,Ton) L/pulse,gal/pulse,m^3/pulse, g/pulse,kg/pulse,Ton/pulse	可設定每個 pulse 所代表的流量
	頻率設定 (3.4)	N/A	Hz,kHz	2K	1~8K (00.000)	在設定的流率滿量程下的最高輸出頻率值
	電流輸出模式設定 (3.5)	N/A	none	4-20	4-20,0-20	選擇電流輸出模式
	電流輸出 4mA 微調 (3.6)	N/A	count	0	-5000~5000	可調整 4mA 輸出的基準值
	電流輸出 20mA 微調 (3.7)	N/A	count	0	-5000~5000	可調整 20mA 輸出的基準值
	輸入 1 接點功能 (3.8)	N/A	N/A	None	None,總量重置	輸入接點動作時所執行的功能。
	輸入 1 接點型式 (3.9)	N/A	N/A	NO	NO,NC	設定輸入接點的原始狀態，可能 NO 或 NC
	濾波視窗變化率 (3.10)	N/A	m/s	1	00.000~10.000	降低流量突波變化準位設定
	濾波視窗權重 (3.11)	N/A	%	10	0~100	降低流量突波變化
	中位數波視窗 (3.12)	N/A	%	Enable	Dusable,Enable	降低流量測量時雜訊的影響

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
警報設定(4)	流率上限 (4.1)	N/A	瞬時流率 單位	該口徑最大值	0~±至流率上限值(000.00)-	設定流率超過此設定時，則被觸發報警
	流率下限 (4.2)	N/A	瞬時流率 單位	該口徑最小值	0~±至流率上限值(000.00)-	設定流率低於此設定時，則被觸發報警
	空管檢測 (4.3)	N/A	N/A	Disable	Disable,Enable	當電導率低到某一程度即判斷為空管狀態
	輸出 1 功能 (4.4)	N/A	N/A	流量上限警報	None,流量上限警報,流量下限警報,空管警報,系統異常	選擇輸出 1 接點的功能
	輸出 1 接點型式 (4.5)	N/A	N/A	NO	NO,NC	設定警報接點的原始狀態，可能 NO 或 NC
	輸出 2 功能 (4.6)	N/A	N/A	流量下限警報	None,流量上限警報,流量下限警報,空管警報,系統異常	選擇輸出 2 接點的功能
	輸出 2 接點型式 (4.7)	N/A	N/A	NO	NO,NC	設定警報接點的原始狀態，可能 NO 或 NC
	警報電流功能 (4.8)	N/A	N/A	None	None,空管警報,系統異常	選擇電流警報的功能
	警報電流設定 (4.9)	N/A	mA	3.6	3.6,3.8,20.5,22	設定當警報發生時之輸出電流值
	溫度警報 (4.10)	N/A	N/A	1	0: 關， 1:開	設定當溫度過高時,觸發警報

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
系統設定(5)	系統語言(5.1)	N/A	N/A	English	English, 繁中, 简中	系統顯示語言
	系統資訊(5.2)	測量管狀態	N/A	Actual	正常/空管	檢測目前量測管內液體是否溢過兩電極測量點
		目前流速	m/s	Actual	N/A	測量目前流體速度的真實值
		液體阻抗	kΩ	Actual	N/A	測量目前流體電阻值真實值
		系統狀態碼	N/A	Actual	0000 0000 ~ FFFF FFFF	顯示目前系統狀態代碼
	自我測試(5.3)	N/A	N/A	取消	正常,電路異常(Device 周邊溝通與確認),激磁異常,環境溫度過高,**電極汙損** **警示訊息無中文**	正常：系統自我檢測無發現任何異常現象 電路異常：板溫過高/過低、I/O 失效、無法檢知訊號 激磁異常：激磁電流無法檢知或電流異常 環境過高：環境溫度超出可允許範圍 **電極汙損：電極嚴重被覆蓋非導電性物質**
	類比輸入設定(5.4)	4mA 顯示值	N/A	0000	0~9999	設定輸入電流的對應顯示值 Scale Low
		20mA 顯示值	N/A	100	0~9999	設定輸入電流的對應顯示值 Scale High
		4-20mA 輸入單位	N/A	Kpa	None, Kpa, Mpa, Psi, Bar, ˚C, ˚F,	輸入電流對應顯示單位設定
		小數點位數	N/A	1	0~3	設定小數點位數


	Modbus 通訊 (5.5)	Modbus ID(2.13.1)	N/A	1	1~255	基本通訊設定
		BaudRate (2.13.2)	BPS	9600	1200,2400,4800,9600,19200, 38400,57600	
		Data bit(2.13.3)	N/A	8	8,9	
		Parity (2.13.4)	N/A	none	none,odd,even	
		Stop bit(2.13.5)	N/A	1	1,2	
	恢復出廠設定值 (5.6)	N/A	N/A	取消	取消,確認(Cancel, Accept)	
	市電頻率 (5.7)	N/A	Hz	50	50,60	選擇接入之市電頻率
	LCM 亮度 (5.8)	N/A	N/A	32	15~40	選擇顯示對比亮度
	選單密碼 (5.9)	使用者密碼 (5.9.1)	N/A	00000	0~99999	使用者密碼
		管理者密碼 (5.9.2)				管理者密碼

主選項	次選項	說明	單位	出廠值	設定值範圍	功能描述
訊號模擬 (6) (離開此選單後回到正常模式)	流速模擬 (6.1)	N/A	m/s	0	-10 ~ 10	模擬流速，使系統做出相應的反應。(選單無返回計時)
	流量模擬 (6.2)	N/A	流量單位	0	0~該口徑最大值	模擬流量，使系統做出相應的反應。(選單無返回計時)
	電流輸出模擬 (6.3)	N/A	mA	4mA	3.6~22	僅電流輸出 port 做出反應。(選單無返回計時)
	頻率輸出模擬 (6.4)	N/A	Hz(pulse/秒)	2	2~8000	pulse port 做出相應頻率輸出。(選單無返回計時)
	輸出接點 1 狀態 (6.5)	N/A	N/A	OFF	ON/OFF	測試接點是否正常。(選單無返回計時)
	輸出接點 2 狀態 (6.6)	N/A	N/A	OFF	ON/OFF	測試接點是否正常。(選單無返回計時)
	輸入訊號 1 狀態 (6.7)	N/A	N/A	Actual	ON/OFF	測試接點是否正常。(選單無返回計時)
	電流輸入狀態 (6.8)	N/A	N/A	Actual	0~24mA	顯示目前輸入電流值。(選單無返回計時)
系統紀錄 (7)	日期設定 (7.1)	N/A	N/A	actual	年：17~99, 月：01~12, 日：01~31	設定日期
	時間設定 (7.2)	N/A	N/A	actual	時：00~23, 分：00~59, 秒：00~59	設定時間
	系統清除(7.3)	N/A	N/A	取消	取消, 確認	清除全部紀錄
	系統紀錄資訊 (7.4)	N/A	N/A	actual	N/A	檢視記錄資訊
產品資訊 (8)	韌體版本(8.1)		N/A	actual		

※選項 1.3、1.9、2.2、2.5、2.6、5.6、5.9、7.3, 只有管理者權限可作更改

14.3 各參數設定範圍說明

顯示畫面說明

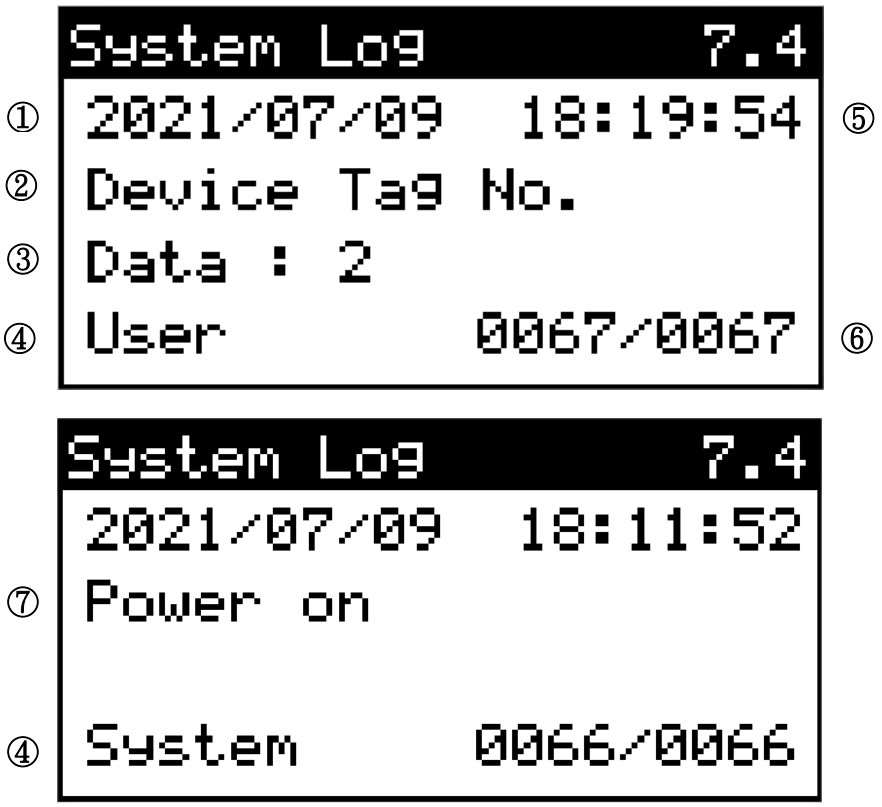


項次	欄位說明
1	事件發生日期。
2	被修改參數名稱，修改者為『User』、『Admin』
3	被修改參數內容
4	修改參數的操作者，區分為『User』、『Admin』、『System』
5	事件發生時間
6	目前總紀錄筆數
7	系統事件發生名稱，修改者為『System』，詳見下表。

分類	訊息	說明
系統硬體狀態	系統開機	系統開機時紀錄當下時間
	系統開機	系統關機時紀錄當下時間
使用者設定	總量重置設定	允許操作者為 Admin
	流量係數 K	允許操作者為 Admin
	流量計口徑	允許操作者為 Admin
	管理者密碼	允許操作者為 Admin
	使用者密碼	允許操作者為 User/Admin
	恢復出廠設定值	允許操作者為 Admin
	其它操作介面參數	權限分級詳見參數設定功能說明 14.2

15. 產品選型

型號	訂購料號
EPD30	EPD10000-A
EPD34	EPD10400-A

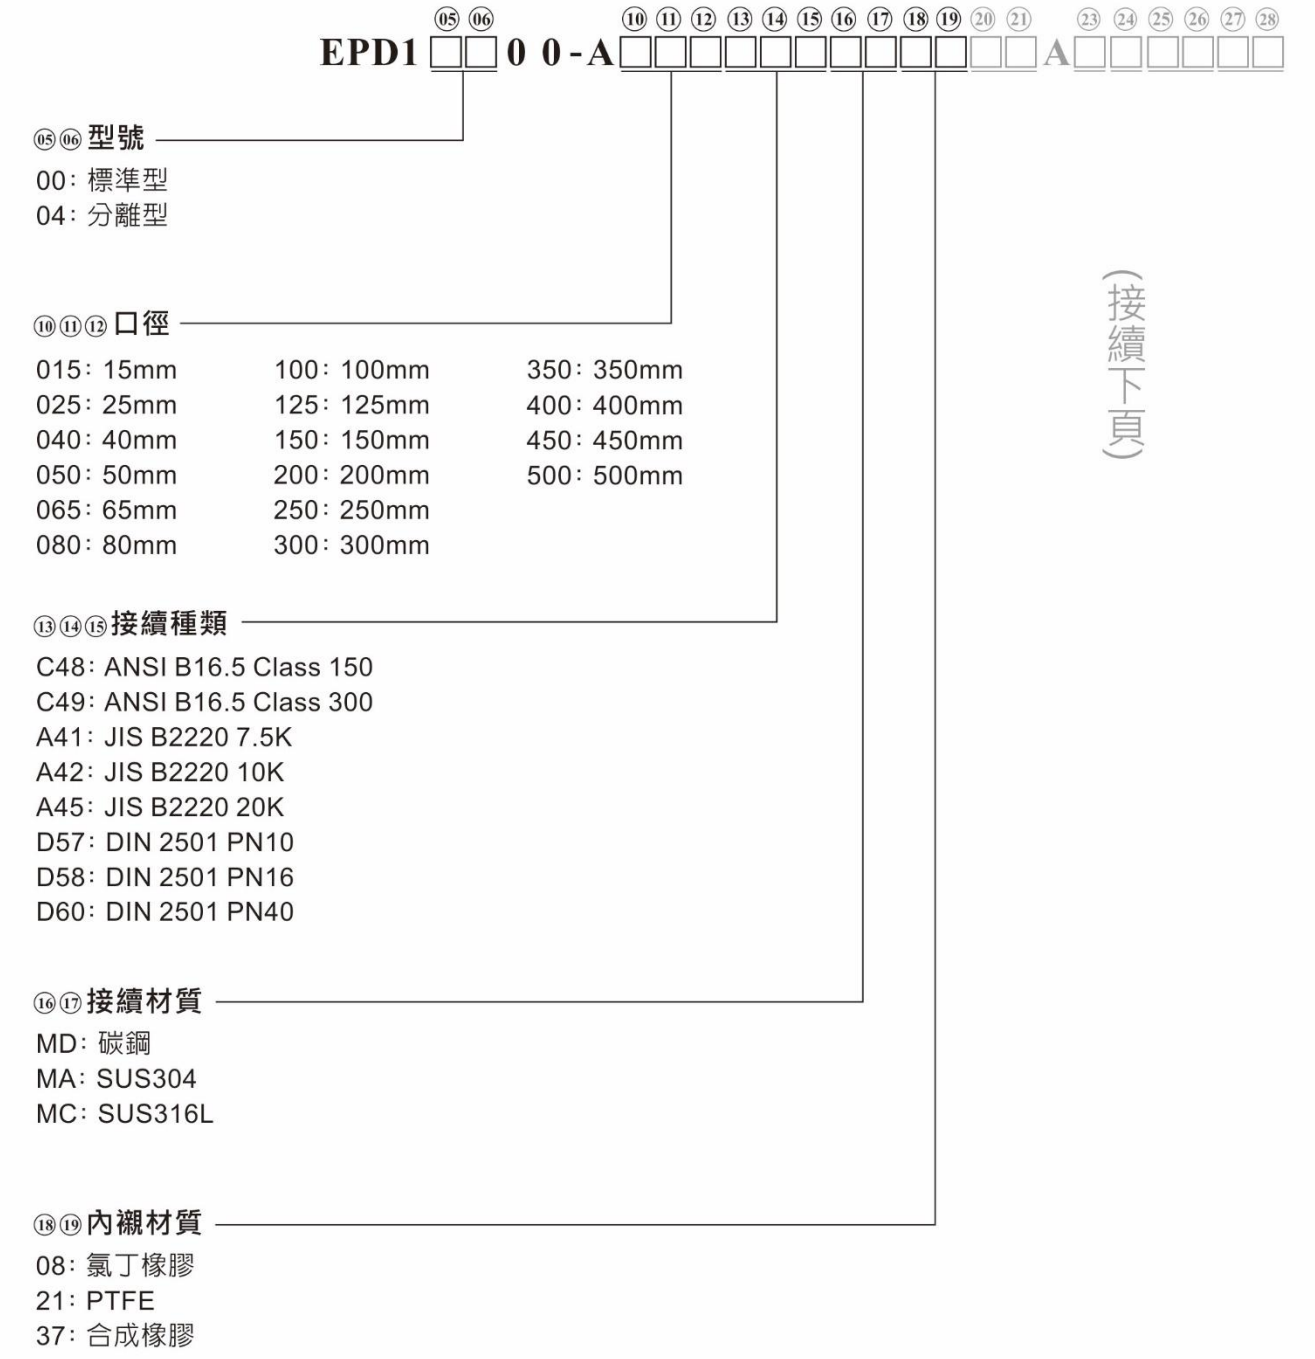



⑳㉑ **電極材質**

MC：SUS316L
MF：鈦
MK：鉭
MJ：哈氏合金(C-276)

㉓ **電源**

A: 100~240Vac, 50/60Hz
D: 24Vdc
N: 100~240Vac,50/60Hz (含資料記錄功能)
R: 24Vdc (含資料記錄功能)

㉔ **精度**

F：0.5%
G：0.3%
H：0.2%

㉕㉖ **接地環材質**

00：無接地環
MA：SUS304
MC：SUS316L
MF：鈦
MK：鉭
MJ：哈氏合金(C-276)

㉗㉘ **訊號電纜線長度** (標準型因無電纜線,故此碼選"00：無須選擇"即可)

00：無需選擇(僅標準型)
10：10米(標準長度)
15：15米
20：20米
⋮
95：95米
A0：100米

16. 運輸與貯存

為防止流量計在轉運時受到損傷，在到達安裝現場以前，請保持製造廠發運時的包裝狀態。在貯存過程中，貯存地點應具備下列條件：

- 需做適當防雨及防潮
- 盡可能的減少運送時的振動並避免撞擊
- 溫度範圍-20～70℃
- 溼度低於 80%
- 貯存使用過的感測器，須先清除附著於襯裏和電極表面上的被測介質，避免長期曝露在空氣中而氧化
- 露天貯存，流量計性能可能會受影響

17. 故障檢查與維修

如果流量計出現故障與無法達到精度要求，請嘗試利用下表說明進行排除

現象	檢查	處理方法
無法達到精度	■ 流量計零點是否漂移	■ 流量計外殼正確接地。 ■ 塑膠管路需檢查接地環是否腐蝕 ■ 進行零點校正。請參閱選單第 7 項。
	■ 管道是否充滿液體	■ 改變安裝位置，使流體充滿管道
	■ 流量計是否在接近流率範圍上限或下限值工作	■ 降低或提高流速，使流速介於 1m/s ~10m/s 之間。
	■ 檢查量程設定是否正確	■ 確保流量計量程和接收流量計訊號設備設定義的量程是一致的。
	■ 檢查流量計輸出連接是否正確	■ 重新連接，並確保線路通暢。
	■ 流量計與管路之間接地是否良好	■ 將流量計正確接地，接地阻接不得高於 10Ω。
	■ 檢查傳送器選單 28 的感測器系數值與感測器銘牌上標示是否一致	■ 系數值可能被第三人調整過，請調回。
開機無劃面	■ 檢查流量計電源、開關、保險絲等供電設施是否正常	■ 排除異常，使流量計可以正確取得電源。 ■ 流量計可能損壞。
無法進行通訊	■ 檢查型號是否含 RS-485 通訊功能	■ 確認 RS-485 轉換器是否能正常工作 ■ 與原廠聯絡
無脈波輸出	■ 檢查是否有額外供電 12VDC 給輸出端	■ 出廠值為無源 NPN 輸出，需外接電源

18. MODBUS 通訊協定(參照英文版)