SpaceLogic KNX

SpaceLogic KNX DALI Gateway Pro

Application description

This document describes the ETS software application used to program the device.

MTN6725-0101

Firmware Version 1.0
2020/09



www.se.com

Schneider Electric

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners. This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.
Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an “as is” basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel. As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice. To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Trademarks

Firefox® is a registered trademark of Mozilla Corporation in the USA and/or other countries.
Google Chrome™ is a trademark of Google Inc.
Wi-Fi® is a registered trademark of the Wi-Fi Alliance
Microsoft Windows®, Microsoft Edge® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
Other trademarks and registered trademarks are the property of their respective owners

Content

1 General product information ... 8

1.1 Using the application program ... 8
1.2 DALI Bus system properties ... 8
1.3 SpaceLogic KNX DALI Gateway Pro product features ... 9
1.4 Operating concept ... 11
1.5 Scope of delivery and commissioning ... 12

2 KNX Secure ... 13

2.1 Secure Usage ... 13
2.2 Unsecure usage ... 14
2.3 Master-Reset ... 14

3 Colour control ... 15

3.1 Features of DALI device Type 8 ... 15
3.2 Colour display via XY coordinates ... 15
3.3 Colour display via colour temperature ... 16
3.4 Colour display via 3 or 4 colour channels (RGBWAF) ... 16
3.5 Colour display via 2 DT-6 LED types ... 17

4 Operating modes ... 18

4.1 Normal mode ... 18
4.2 Permanent mode ... 18
4.3 Staircase mode ... 18
4.4 Night mode ... 19
4.5 Panic mode (special case) ... 19
4.6 Test mode for central battery emergency lights ... 19
4.7 Operating mode hierarchy ... 20

5 Analysis and service functions ... 21

5.1 Recording operating hours ... 21
5.2 Failure recognition at ECG level ... 21
5.3 Failure analysis at group level ... 22
5.4 Failure analysis at device level ... 22

6 Webserver ... 23

6.1 Commissioning and operation ... 23
6.2 Safety aspects ... 23
6.3 Import of the CA Root Certificate ... 24
6.4 User Accounts ... 25
6.4.1 Administartor ... 25
6.4.2 Normal User ... 25
6.5 Password management and login ... 26
6.5.1 Password forgotten ... 27
6.6 Loading the website ... 28
6.7 Administration of the website ... 29
6.7.1 Generate New Device Certificate ... 29
6.7.2 Download Issuer Certificate ... 30
6.7.3 Update Firmware ... 30
6.7.4 New Admin Password ... 30
6.7.5 New User Password ... 30
6.8 Language Setting on Website ... 31
6.9 Calling the start page ... 31

6.10 Actions on the website ... 32
6.11 Automatic log-off ... 32
7 System diagnostics ... 33
7.1 Requirements and Function ... 33
7.2 Viewing the Diagnostic Information ... 34
7.3 Website access of other gateways ... 34
8 Installation and commissioning concept ... 35
8.1 DALI New installation ... 36
8.2 Identification and assignment of DALI ECGs ... 36
8.3 ETS-App (DCA) ... 37
8.4 Configuration ... 38
8.5 Synchronization between web pages and DCA ... 38
9 Maintenance and expansion ... 39
9.1 Quick exchange of individual ECGs ... 39
9.2 DALI Post-installation ... 39
10 DALI Commissioning ECG ... 41
10.1 DCA Commissioning ... 41
10.1.1 Preparation ... 41
10.1.2 New installation ... 43
10.1.3 ECG and group detail info ... 47
10.1.4 Failure and status display ... 48
10.1.4.1 ECG info in the right-hand side tree ... 49
10.1.4.2 ECG info in the ECG table ... 49
10.1.4.3 Group Info in the group tree ... 50
10.1.5 Operating DALI devices ... 50
10.1.6 Post Installation ... 52
10.1.7 ECG Quick exchange ... 53
10.1.8 Status Sync ... 54
10.1.9 Restoring the DALI configuration ... 54
10.2 Website Commissioning ... 55
10.2.1 Preparation ... 55
10.2.2 New Installation ... 56
10.2.3 Post Installation ... 58
10.2.4 Failure and status display ... 59
10.2.5 Operating DALI devices ... 59
11 DALI Commissioning Motion Detector ... 61
11.1 DCA Commissioning ... 61
11.1.1 Preparation ... 61
11.1.2 Neuinstallation ... 62
11.1.3 Post Installation ... 64
11.1.4 Failure and status display ... 65
11.1.4.1 Info in right tree view ... 65
11.1.4.2 Info in table view ... 65
11.2 Website Commissioning ... 66
11.2.1 Preparation ... 66
11.2.2 New Installation ... 66
11.2.3 Post Installation ... 67
12 The scene module ... 69
12.1 Scene configuration via DCA ... 69
12.1.1 Configuration ... 69

12.1.2 Colour setting ... 72
12.1.2.1 Groups with flexible Colour Control Types ... 73
12.1.3 Programming scenes ... 73
12.1.4 Testing a scene event ... 74
12.1.5 Testing the scene as a whole ... 74
12.2 Scene configuration via web server ... 75
12.2.1 Configuration ... 75
12.2.2 Colour Settings ... 77
12.2.2.1 Groups with variable colour control ... 77
12.2.3 Programming the scenes and scene test ... 78
12.2.4 Testing an event in the scene ... 79

13 The effect module ... 80

13.1 Effect configuration with the DCA ... 80
13.1.1 Configuration ... 80
13.1.2 Colour settings ... 81
13.1.3 Programming effects ... 83
13.1.4 Testing an effect event ... 83
13.1.5 Testing the whole effect ... 83
13.2 Effect configuration via web server ... 84
13.2.1 Configuration ... 84
13.2.2 Colour settings ... 86
13.2.2.1 Groups with variable colour control ... 86
13.2.3 Programming the effects and effect test ... 87
13.2.4 Testing an event in an effect ... 87

14 Time control module for values and colours ... 88

14.1 Time schedules configuration with DCA ... 88
14.1.1 Configuration ... 88
14.1.2 Types of action ... 91
14.1.3 Disable/enable ... 94
14.1.4 Export/Import ... 94
14.2 Time schedules configuration via web server ... 94
14.2.1 Configuration ... 95
14.2.2 Types of action ... 95
14.2.3 Disable/enable ... 98
14.2.4 Assignment of groups and ECGs ... 98
14.2.5 Programming the time programs ... 98
14.2.6 Export/Import ... 99
14.3 Timer ... 99

15 Self-contained battery emergency lights ... 100

15.1 Self-contained battery emergency lights ... 100
15.2 Identification of self-contained battery emergency lights ... 101
15.3 Converter inhibit mode ... 101
15.4 Test mode for self-contained battery emergency lights ... 101
15.5 Emergency Test Results ... 102
15.5.1 DCA report ... 102
15.5.1.1 Detailed information about emergency lights ... 103
15.5.1.2 Exporting test results ... 103
15.5.2 Website Report ... 104
15.5.2.1 Detailed information of an emergency lamp ... 105
15.5.2.2 Exporting the test results ... 105

16 DCA Extras ... 106

17 Commissioning/operating via display and pushbuttons ... 106

17.1 Main menu level 1 ... 107
17.2 Sub-menu level 2 ... 108
17.2.1 Sub-menu language ... 108
17.2.2 Sub-menu IP network / address ... 108
17.2.3 Sub-menu new installation ... 108
17.2.4 Sub-menu post-installation ... 109
17.2.5 Sub-menu ECG quick exchange ... 109
17.2.6 Sub-menu group assignment ... 110
17.2.7 Sub-menu group test ... 110
17.2.8 Sub-menu scene test ... 111
17.2.9 Sub-menu system test ... 111
17.2.10 Sub-menu maintenance ECG/lamp ... 112
17.2.11 Sub-menu converter inhibit mode ... 112

18 ETS communication objects ... 113

18.1 General objects ... 113
18.1.1 General objects behavior ... 113
18.1.2 General objects analysis and service ... 113
18.1.3 General objects special functions ... 115
18.1.3.1 Objects for Energy Saving ... 116
18.1.3.2 Objects for emergency ... 116
18.1.4 Time control objects ... 116
18.2 Broadcast objects ... 117
18.2.1 Broadcast objects colour control ... 117
18.3 Group objects ... 119
18.3.1 Group objects behaviour ... 119
18.3.2 Group objects colour control ... 120
18.3.2.1 Colour temperature ... 120
18.3.2.2 RGB ... 121
18.3.2.3 HSV ... 122
18.3.2.4 RGBW ... 123
18.3.2.5 HSVW (separate Objects) ... 125
18.3.2.6 XY Colour ... 125
18.3.2.7 Colour temperature + RGB ... 127
18.3.2.8 Colour temperature + RGBW ... 130
18.3.3 Group objects analysis and service ... 134
18.4 ECG objects ... 135
18.4.1 ECG objects behaviour ... 135
18.4.2 ECG objects colour control ... 135
18.4.3 EVG Emergency Setting ... 138
18.4.4 ECG objects analysis and service ... 142
18.5 Motion detector objects ... 143
18.5.1 Motion detector objects general ... 143
18.5.2 Motion detector objects brightness ... 143

19 ETS parameters ... 144

19.1 General ... 144
19.1.1 Parameterpage: General ... 144
19.1.2 Parameterpage: Behaviour ... 145
19.1.3 Parameterpage: Analysis and Service ... 146
19.1.4 Parameterpage: Special Functions ... 148
19.1.5 Parameterpage: IP Network ... 151
19.2 Parameterpage: Broadcast ... 154
19.3 Group ... 155
19.3.1 General Group1 (2.. 16) ... 155
19.3.2 Behaviour ... 158
19.3.3 Colour control ... 160
19.3.3.1 Colour Temperature ... 160

19.3.3.2 RGB ... 162
19.3.3.3 RGBW ... 162
19.3.3.4 XY Colour ... 163
19.3.3.5 Colour Temperature + RGB ... 164
19.3.3.6 Colour Temperature + RGBW ... 165
19.3.4 Analyse and Service ... 167
19.4 ECG ... 168
19.4.1 ECG General ... 168
19.4.2 ECG 1 (2.. 64) ... 169
19.4.2.1 Emergency Settings ... 173
19.4.2.2 Behaviour ... 174
19.4.2.3 Colour Control ... 176
19.4.2.4 Analysis and maintenance ... 180
19.5 Motion Detector ... 181
19.5.1 Motion Detector General ... 181
19.5.2 Motion Detector MD 1 (2.. 8) ... 181
19.5.2.1 MD 1, Brightness ... 183

20 FAQ ... 185

20.1 Web Access ... 185
20.2 Security ... 185
20.3 DCA ... 185

21 Disclaimer for cyber security ... 186

22 Open Source Software used in the DALI Gateway Pro ... 186

1 General product information

1.1 Using the application program

This application program description outlines the function of the SpaceLogic KNX DALI Gateway Pro software for devices equipped with firmware version 1.0.0 or higher.

Product family: Lighting
Product Type: Gateway
Manufacturer: Schneider Electric
Name: SpaceLogic KNX DALI Gateway Pro
Order number: MTN6725-0101
Number of communication objects: 2110

When using KNX Secure:
Number of secure group addresses for use: 1000
Number of communication partners: 100

1.2 DALI Bus system properties

The cross-functional DALI-Bus (DALI = Digital Addressable Lighting Interface) is a system used to control electronic ballasts (ECGs) in lighting technology. The specifications of the DALI communications interface are set in the international norm EN62386.

The DALI Bus enables the receipt of switch and dim commands. In addition, the DALI can be used for the notification of an failure status such as light or ECG failures or for other light status information. In line with the latest DALI standard, devices with emergency light function (EN 62386-202) are also supported. Status and operating mode of emergency lights can be monitored and different prescribed testing procedures can be performed.

Via the connected control device / gateway (Master), up to 64 individual DALI ECGs (Slaves) can be connected in a DALI segment. When the DALI is commissioned, the ECGs receive an automatically generated 3 byte long address. Based on the long address a short address between 0 and 63 is assigned during the further commissioning process. As the address assignment is automatic, the device order is random. The individual ECGs/lights therefore need to be identified during the further commissioning process (see below).

The addressing of individual ECGs in the system is either based upon the short address (individual addressing) or upon a DALI group address (group addressing). For this purpose, any number of ECGs within a segment can be assigned to up to 16 groups. The group addressing in the DALI system guarantees that switch and dim processes of different lights within a system are performed simultaneously without imposition of time delays. In addition to short and group addresses, the light values of individual DALI ECGs can also be merged into scenes and addressed via scene addresses.

For a detailed description of the DALI system, please see the DALI handbook at
---> https://www.digitalilluminationinterface.org

1.3 SpaceLogic KNX DALI Gateway Pro product features

The SpaceLogic KNX DALI Gateway Pro is a multi-master application controller for controlling electronic ballasts with DALI interface via the KNX installation bus. It supports ballasts according to EN 62386-102 ed1 (DALI1), devices according to EN 62386-102 ed2 (DALI2), as well as DALI2 motion sensors and light sensors according to EN 62386-303 and EN 62386-304.

The device transforms switching and dimming commands from the connected KNX system into corresponding DALI telegrams, or status and event information from the DALI bus into KNX telegrams.

The SpaceLogic KNX DALI Gateway Pro has a DALI output which can control up to 64 ECGs. In addition, up to 8 DALI2 motion detectors or light sensors can be connected. Multi-master operation according to EN 62386-103 ed2 is permitted.

The required power supply for the connected ECGs and motion sensors is provided directly from the device. Additional DALI power supplies are not required. When using sensors supplied via the DALI bus, it must be ensured that the current consumption of all connected DALI devices does not exceed the guaranteed value.

The device is available in a 4TE wide DIN rail housing for direct installation in an electrical distribution board. The bus connection is made via a standard bus connector. Mains and DALI lines are connected via screw terminals on the device. Ethernet is connected via an RJ45 socket.

Per gateway the ECGs can be controlled in 16 groups. In addition to the group control the SpaceLogic KNX DALI Gateway Pro also allows individual control of up to 64 ECGs.

In addition to the control of all standard operating devices, the SpaceLogic KNX DALI Gateway Pro also allows the operation of single battery emergency lights (EN 62386-202). Emergency lighting systems with central battery are also supported.

A maximum of 8 motion detectors with light sensors can also be controlled.

The special interface for configuring the DALI segments is designed as a DCA (Device Control App) for the ETS5. Please make sure that the corresponding etsapp is installed in addition to the product database knxprod. This is available for download at Konnex or on the Schneider Electric website.

In addition to the pure gateway functions, the SpaceLogic KNX DALI Gateway Pro offers numerous additional features:

- Addressing of 16 DALI groups and/or individual addressing of up to 64 individual ECGs
- Flexible DALI commissioning concept: directly on the device, via integrated web server or in the ETS5 (DCA)
- Coloured light control with the support of Device Type 8 (DT-8) ballasts and control via communication objects
- Coloured light control depending on ballast Sub-Type:
  - Colour Temperatur (DT-8 Sub-Type Tc)
  - XY Colour (DT-8 Sub-Type XY)
  - RGB (DT-8 Sub-Type RGBWAF)
  - HSV (DT-8 Sub-Type RGBWAF)
  - RGBW (DT-8 Sub-Type RGBWAF)
- Automatic, time-controlled setting of light value, light colour and colour temperature (also for Human Centric Lighting applications) for groups and/or individual ECGs
- Automatic change of colour temperature depending on the light value (Dim-to-warm)
- Control of colour temperature via communication object for DT6, warm white and cool white
- Broadcast objects for controlling all connected ECGs simultaneously (also possible for color values)
- Various operating modes for groups such as continuous mode, night mode, staircase mode
- Integrated operating hours counter for each group and/or individual ECG with alarm when end of life is reached
- Individual fault detection with objects for each individual luminaire/EVG
- Complex error evaluation on group/device level with error number and error rate calculation
- Error threshold monitoring with individually adjustable threshold values
- Scene module for up to 16 scenes, which can be assigned to KNX scenes 1..64 as required
- Extensive scene programming, including the possibility of dimming scenes
- Setting of colour in DT-8 luminaires via scenes for groups and/or individual ECGs
- Effect module for sequence controls and lighting effects including colour adjustment in DT-8 luminaires
- Test mode for systems with emergency luminaires supplied by central battery
- Support of single-battery emergency lights DT-1
- Support of test procedures for emergency lights with time and date stamp
- "Quick Exchange Function" for easy replacement of individual defective ECGs
- "Energy saving function" allows the ECG power supply to be switched off when light is switched off via additional switching actuators
- Integrated web server with extensive options for commissioning and maintenance
- Integrated "Visualization" via Web browser for direct operation and display
- Cross-device summary of errors in the entire system
- Manual operation of group and broadcast telegrams via operating keys and display on the device
- Signalling of error states and status diagnosis via LEDs and display on the device

The special surface for the configuration of DALI segments is designed as a DCA (Device Control App) for the ETS5. Please remember to install the corresponding ETS App in addition to the product database .knxprod. The ETS App is available for download on the Schneider Electric website or from KONNEX.

1.4 Operating concept

The device is equipped with 3 operating interfaces:

- Keys and display on the device
- ETS + DCA
- web interface

It is recommended to select "one" operating concept for commissioning and later configuration.
Note: The operating concepts cannot be used in parallel or simultaneously.

Any change in the ETS or DCA will only become visible when the website is called up again (renewed login). The web page already called up cannot update these changes online.

It is also important to make sure that changes made with the website are only visible in ETS after a synchronization in DCA, see chapter 8.5 Synchronization between web pages and DCA

Since an ETS download with the corresponding configuration of parameters and group assignment is necessary, the following procedure is recommended:

- Parameter setting and group assignment with ETS
- Commissioning of the ballasts and allocation to groups with the DCA
- Configuration of scenes, effects and timer commands with DCA or web interface
- Status and error diagnosis with the DCA or web interface.

1.5 Scope of delivery and commissioning

The scope of delivery of the DALI Gateway Pro consists of:

- DALI Gateway Pro with pre-installed software
- Operating and installation instructions
- 1x heat shrinkable tubing 1.2 x 2cm for additional insulation of the bus cable



The following connectors can be found at the bottom of the REG casing:

- KNX bus coupler
- DALI connector

The following connector can be found on top:

- 230VAC connector
- RJ45 plug for Ethernet

The factory setting of the DALI Gateway Pro

- IP address assignment: DHCP
- Physical address: 15.15.255

A KNX project created with the ETS programming software should be available for the initial commissioning.

Error LED

The Error LED indicates the following errors:

- KNX connection is interrupted.
- DALI failure
- Internal error

2 KNX Secure

The KNX standard has been extended by KNX Secure.
This enables the transmission of encrypted information within KNX. This allows secure encryption of ETS downloads as well as communication via objects.

Note: There are special conditions to be kept in mind when using secure devices in ETS. Please refer to the corresponding web pages on the KNX website (https://www.knx.org)

The SpaceLogic KNX DALI Gateway Pro is equipped with a KNX Secure Stack.
In order to use a device "safely", the ETS project must first be protected with a password.

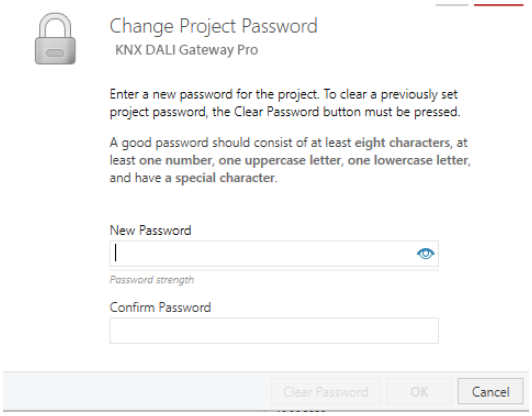

Note: "Safe" devices can only be downloaded with an interface that supports longer telegrams (long frames).

2.1 Secure Usage

In the ETS the secured usage is shown in the properties as follows:

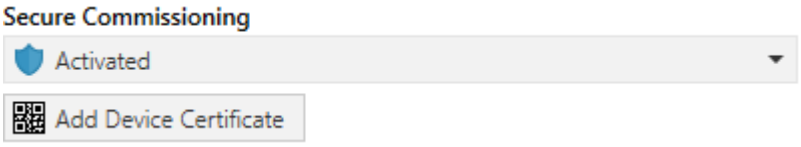

Subsequently, the device certificate must be read in for each "safe" device. For this purpose, the camera is available as a QR Code Reader or the code must be entered manually:

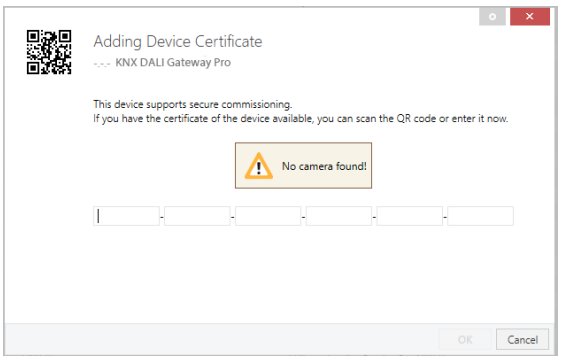

The certificate consists of the serial number and an initial key FDSK (Factory Default Setup Key).
This code is only used for initial commissioning with the ETS. During the first download this key is replaced

by the ETS. This prevents unauthorized persons from gaining access to the installation despite knowing the initial key.

This initial key is printed on the device label both as a QR code and in text form.

Note: A "removable" sticker is also supplied, which the user can place in his documentation.

Note: The unit is designed to use up to 1000 group addresses in secure communication. Up to 100 communication partners are possible to communicate with the DALI Gateway Pro via secured group communication.

2.2 Unsecure usage

However, the DALI Gateway Pro can also be configured as a "traditional" device in the ETS, as was previously the case. In this case, group communication with other devices can also be carried out as usual. In this case no encrypted ETS download takes place.

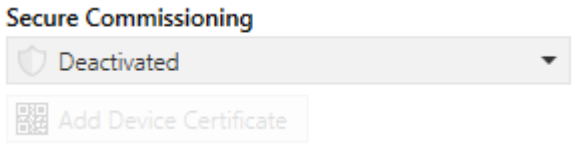

2.3 Master-Reset

A master reset must be carried out so that the device can be returned to the manufacturing state and thus the initial key can be reactivated.

The following procedure must be followed for this:

1. Remove KNX connector
2. Press commissioning KNX push button and keep it pressed
3. Add KNX connector
4. Keep KNX push button for long time (~7sec) after KNX power supply connection.

3 Colour control

The SpaceLogic KNX DALI Gateway Pro also supports ECGs for colour control (device Type 8 according to EN 62386-209). Such devices allow for multi-channel colour control (RGB) and thereby enable the mixing of a light colour or the setting of a colour temperature via DALI.

3.1 Features of DALI device Type 8

ECGs for colour control (DT-8) are offered by a range of manufacturers. Usually these devices allow for the direct control of LED modules with multi-colour LEDs. The most common ones are modules with LEDs in the three colours red, green, blue (RGB), as well as modules with two different white tones (Tunable White).

Attention: DT-8 ECGs for the sub-Type PrimaryN are not supported by the DALI gateway.

Occasionally LED modules with a further integrated white channel (RGBW) are offered on the market. Whilst it is, of course, possible to control the different colour channels individually, each via a separate DALI control device for LEDs (Device Type-6), this solution has the disadvantage, that each of these devices is assigned a separate DALI short address. This means that two (tunable white), three (RGB) or even four short addresses are required to control a module. With a maximum number of 64 available short addresses per DALI segment, the number of lights that can be used would be greatly reduced. With a DT-8 device, however, only one short address is required for all colour channels and the maximum possible range of 64 lights can be controlled. The DALI standard EN 62386-209 defines different colour control methods for DT-8 devices. Normally, a certain device supports only one of these possible methods. Therefore please pay attention to the specifications of the respective device or lamp manufacturer.

3.2 Colour display via XY coordinates

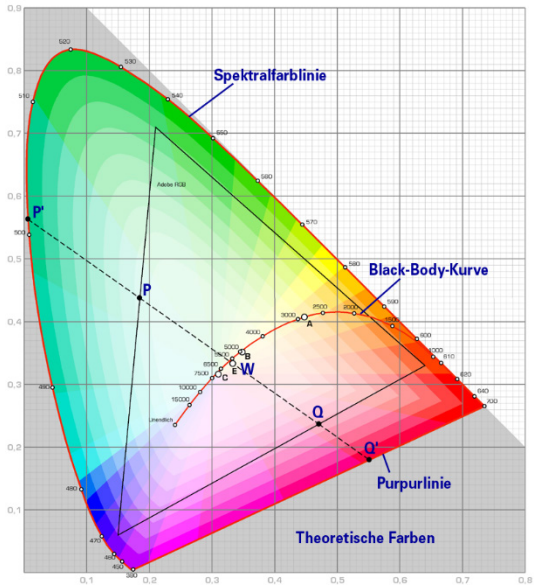

The display of a colour via two nominated coordinates in a so-called colour space is a common method. By means of the x-y coordinates any point in this space is accessible and as a result any colour can be defined. The diagram used in the DALI standard is the colour space chromaticity diagram according to the 1931 CIE standard. (Cambridge University Press) which is shown in the following graphic.

Figure: University of Cambridge press, source Wikipedia

In devices that support the x-y coordinates method, the colour is set via two values between 0.0 and 1.0. However, because of the physical properties of an LED, even in an RGB LED module not every colour is practically possible. In practice, it is common to set the value which is closest.

Note: Please pay attention to the instructions of the ECG or lamp manufacturer. Usually the xy values, which are supported by the lamp, are specified here. XY values outside of the specified range can lead to incorrect values and non-reproducible colours.

3.3 Colour display via colour temperature

One subset of all the possible colours in the colour space displayed above, are the different white tones.

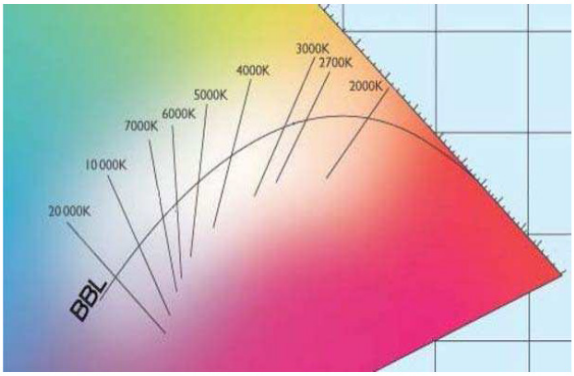

The white tones are found on one line across the whole colour space. The points on this so-called black-body-line (BBL) are usually defined via a colour temperature in Kelvin. This makes it possible to exactly determine the white tone of a light between warm and cool with just one value. The colour temperature principle is therefore perfect for the control of white light fixtures (tunable white).

Figure: University of Cambridge press, source Wikipedia

DT-8 operating devices set the required colour temperature on an LED module by mixing cool and warm white LEDs. Of course, as before this is only possible within certain physical limits. With today's LED modules colour temperatures between 2000 and 8000 Kelvin are common.

3.4 Colour display via 3 or 4 colour channels (RGBWAF)

Principally, a colour is always created by mixing different individual colours (different white tones, RGB or RGBW). A colour can therefore also be displayed based on the mixing ratio of different single colours, e.g. 50% red, 0% green, 60% blue.

Unlike the methods described above, the colour definition in this case is not exact but depends greatly on the specific, physical attributes of the LEDs used to create the colour (wave length, intensity). Nonetheless, the indication of the primary colour percentages within a system is useful for the relative description of a colour. In some DT-8 ballasts, the colour is set by defining 3 (RGB) or 4 values (RGBW) between 0 and 100%.

According to DALI standard EN 62386-209, up to six colours (RGBWAF) can theoretically be drawn upon. The SpaceLogic KNX DALI Gateway Pro, however, only supports a maximum of 4 colours, in line with the ECGs that are currently available on the market.

3.5 Colour display via 2 DT-6 LED types

This allows a colour temperature to be set via 2 DT-6 groups. For example, LED strips with a warm colour (3000K) are assigned to a master group and LED strips with a cold colour (6000K) to a slave group.

With this assignment, only the master group with one colour temperature is controlled.
The device automatically calculates the control of the warm and cold LED to achieve the desired colour.

4 Operating modes

Each group and individual ECG offer different operating modes that can be set individually on the parameter page.

4.1 Normal mode

In normal mode, ECGs can be dimmed and switched without restrictions both via individual and group control. The control of each ECG and each group is based on three communication objects (switching, dimming, value setting). For DT-8 ECGs numerous additional objects for light colour control are available.

An ECG can only be assigned to a single DALI group. The SpaceLogic KNX DALI Gateway Pro does not support multi-group assignments on DALI level. If such assignment is required, please use KNX communication objects for this purpose. Separate status objects inform about the switch and value status both at group and individual ECG level.

4.2 Permanent mode

If you would like to run an individual ECG or a whole group permanently with a certain light value, (e.g. a permanently lit corridor or workshop) you can choose the permanent mode option. The ECG or group are automatically set to the required value after you program or switch on the gateway. Switch and dim objects remain hidden. Light status, failure and service functions, however, are also available in permanent mode.

Note: Should a device in this mode not be running at the preset light level because of a special operation (e.g. identification process on the device display) or failure (e.g. ECG was without power when the gateway was started) the light level is automatically corrected after 60 seconds.

4.3 Staircase mode

This operating mode is supported by groups, only.
In staircase mode, the value set via a switch, dim or value telegram is automatically changed to the switch off value after a programmable time. The lights can be switched off immediately or in 2 steps (within a minute) or through dim-down (within a minute).

In staircase mode, each additionally received telegram re-starts the internal timer. The lights switch off when the timer runs out after the most recently received telegram. The staircase mode can be disabled or enabled via an additional object. If the staircase mode is disabled, the group behaves like in normal mode and does not automatically switch off. If the mode is disabled whilst the switch-off timer is already running, the timer stops and the group remains at the currently set value if the mode is enabled again, the timer starts again from the beginning.

4.4 Night mode

The night mode corresponds largely to the staircase mode. The only difference is that the automatic switch-off is dependent on the central night object of the gateway. If the night object is not set (day), the group behaves like in normal mode. If the object is set (night), the group either switches off after a programmable time or it goes into permanent mode.

4.5 Panic mode (special case)

The panic mode can be activated via a central object for the whole gateway. All groups and ECGs that have been enabled for panic mode, permanently switch to a programmable panic light value on receipt of the object. They can no longer be controlled individually. When the panic mode is switched off, the devices return to the previous light value or the switch on / switch off value and can again be controlled individually.

Note: When the panic mode is active, both the scene and time scheduling module are de-activated.

4.6 Test mode for central battery emergency lights

Through its internal function the SpaceLogic KNX DALI Gateway Pro supports installations with central battery emergency luminaires. Any ECG (except for those of the self-contained battery Type) can be configured as an emergency light (even when assigned to a group). You can choose a test time between 15 minutes and 4 hours. If the gateway receives the central battery test object, the respective lights change to a programmable value for this time period. They can no longer be switched or dimmed via the corresponding objects. The discharge time and capacity of the central battery can thereby be tested under pre-defined conditions.

So that individual ECGs within a group can no longer be switched via group telegrams or scenes, the group assignment is dissolved for the duration of the test mode. When the test has finished, groups and scenes are automatically re-programmed onto the ECGs. Should the gateway lose power during the test mode, the unprogrammed devices are marked and automatically programmed on return of the power supply. The test mode, however, does not continue. It has to be re-started.
When the test mode terminates normally, the devices return to the previous light value or the switch on / switch off value and can again be controlled individually.

4.7 Operating mode hierarchy

Some of the individual operating modes described above have higher functions and roles for the operation of the system as a whole. A prioritisation or hierarchy of operating modes is therefore required. The central battery test mode has the highest priority followed by the panic mode. The permanent, normal and night modes have the same priority level in the hierarchy.

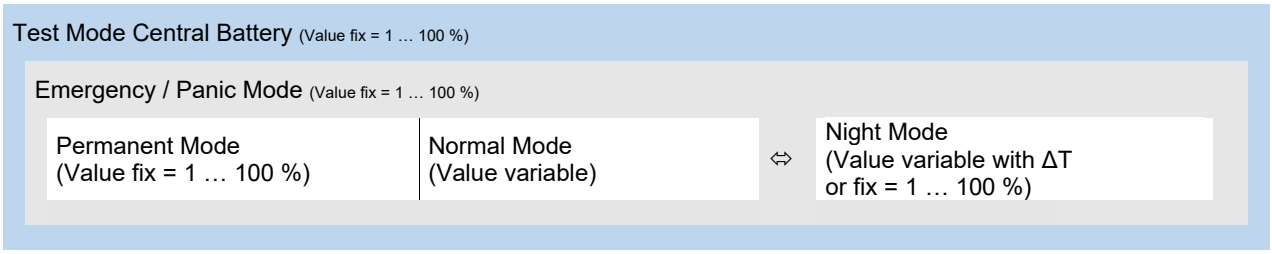

By default manual mode is enabled and can always be used for service and maintenance functions. However, it can be disabled by means of ETS parameters, see chapter: 19.1.4 Parameterpage: Special Functions

5 Analysis and service functions

5.1 Recording operating hours

The SpaceLogic KNX DALI Gateway Pro allows for the operating hours (burning time) of each lamp to be individually recorded for each group and individual ECG. The internal recording is precise to the second. The value is available externally via communication objects. (DPT 13.100).

The operating hours recording is independent from the dim value. This means any light value > 0% contributes to an increase in the operating hours of a group. The counter can be reset (when a lamp is changed). To reset the counter, the value 1 is written on the communication "reset operating hours”.

A maximum value can be configured for each running time counter (life span), which activates an alarm object on the KNX bus. This information can be used for maintenance purposes.

Attention: In accordance with KNX standards, the operating hours are sent in seconds. However, these can be changed into other units.

5.2 Failure recognition at ECG level

A major advantage of DALI technology is the individual recognition of light failures or faulty ECGs. The SpaceLogic KNX DALI Gateway Pro supports this function.

For error analysis, the DALI Gateway cyclically interrogates all connected ECGs for ECG and lamp faults. The polling cycle can be configured. If the time is 1 second (standard setting) and there are 64 connected ECGs, the complete process of scanning all ECGs for light and ECG failures takes 128 seconds (1 second per ECG and failure Type). It can therefore take up to about 2 minutes before a fault that has occurred is recognised. For each ECG, a communication object is available to send the information to the KNX bus (1Bit or 1 Byte object). In addition, the failure status can also be checked on the DCA in the ETS.

Furthermore, the error status of all TOEs is clearly displayed on the web page of the gateway.

Attention: If the parameter setting is "Polling cycle for failures" = "No query", all failure queries are disabled. No ECG or converter failures or lamp failures are recognised in this case. This setting is only useful for service purposes when an extreme reduction of the DALI busload is required.

5.3 Failure analysis at group level

If ECGs and / or converters are merged into groups, numerous group-specific failure data is available in addition to the individual ECG data. For this purpose different communication objects are available for each group. In addition to general information such as whether there is an failure within a group and of what Type, the complete number of faulty devices within the group and the failure rate can be listed via a communication object. An alarm object is sent when a certain failure rate is exceeded. A complex object with a summary of the data further adds to the analysis options.

For details of group-specific communication objects, please see the communication objects description below in chapter: 18.3 Group objects

The failure information for a group is also clearly displayed on the web site of the integrated web server.

5.4 Failure analysis at device level

Failure analysis objects similar to those at group level are also available at device level (i.e. for all ECGs connected to the gateway). The failure rate or number of faulty ECG in the whole DALI segment can be made available via communication objects. In contrast to the group level, at gateway level the percentage and number of failures can be broken down further according to failure Type. The alarm threshold for the failure rate can be individually set for ECG, light and converter failures.

For further details regarding the communication objects, please see the communication objects description in chapter: 18.1.2 General objects analysis and service.

As before, the failure information for the entire gateway is also displayed on the website.

6 Webserver

6.1 Commissioning and operation

In addition to the DCA, you can also easily commission the DALI via the integrated web server. For this purpose connect the SpaceLogic KNX DALI Gateway Pro directly to the IP network.

Use a standard patch cable to connect the device to a switch, hub or router of the IP network. You can also use a WLAN access point as network coupler. This means you can commission the DALI via a portable note book, tablet PC or mobile phone.

Once the network is physically connected, you need to assign an IP address to the SpaceLogic KNX DALI Gateway Pro to enable access via the web browser. By default, all devices with an IP interface are set to DHCP address assignment. If there is a DHCP server in the network the device automatically receives an IP address after initialisation. This address is shown on the device display. If no DHCP service is available or if you would rather use a fixed IP address, you must set the address either via ETS. You may also need to configure the sub-net mask and standard gateway (for direct access via the Internet). Those two parameters can only be configured in the ETS.

Once the IP address has been assigned correctly, load the device website via any common web browser.

Attention: Please, take care that you open a https connection via **https://<ip>**

HTML5 functionality is required for all browsers used. Google Chrome, Mozilla Firefox and Microsoft Edge have been tested in the current status (version of this document).

6.2 Safety aspects

The communication with the web server in the SpaceLogic KNX DALI Gateway Pro is encrypted via HTTPS.

Each device has a self-signed SSL certificate. This certificate contains among other things the name of the owner, his public key, the period of validity and the name of the certification authority.

The SSL certificate existing in the device was signed by the certification authority and can be verified with the corresponding public key of the certification authority.
In order for the SSL certificate of the device to be considered trustworthy, the browser or PC must know the certificate of the certification authority in order to confirm the trustworthiness. The operating system manages a list of all "trusted certification authorities", so-called CA root certificates.

If a secure connection is then established in the browser, the browser first checks whether this certificate can be confirmed by a CA root certificate. If the check is positive, a closed lock is usually displayed in the browser line to confirm security.
If the device certificate cannot be confirmed, a security warning will be issued and must be accepted manually.

The Schneider Electric KNX devices have their own CA root certificate and all device certificates are derived and confirmed from this CA root certificate.

If this CA root certificate is imported on the operating system, the browser recognises all SpaceLogic KNX DALI Gateway Pro devices as "trustworthy", as the individual device certificates are confirmed by this CA root certificate.

The device makes the CA root certificate available via an administrator page. The procedure for loading this certificate and then installing it on the PC is explained in the chapter: 6.3 Import of the CA Root Certificate.

6.3 Import of the CA Root Certificate

As already explained in the security aspects, the device enables the CA root certificate to be loaded.

To do this, please log in on the website as "Administrator" and select the menu item "ADMINISTRATOR". Below the actions is the entry "Load the root certificate". This allows the root certificate to be stored on the PC. See also chapter: 6.7.2 Download Issuer Certificate.

To import this certificate, please proceed as follows:
Install security certificate:

- Right-click the exported file in the location where it was saved and select "Install Certificate".
- In the next step, the storage location is queried. Here you can select "Current User" or "Local Computer". Click on "Next".
- Here the option "**Save all certificates to the following store**" should be selected and "Browse" should be clicked.
- Select the **Trusted Root Certification Authorities** folder as the certificate store and OK.

After completion, the message "The import process was successfully completed" is displayed.

Note: In order for the browser to check this new issuer certificate when calling up a website, it must be restarted.

6.4 User Accounts

Two user accounts are managed in the SpaceLogic KNX DALI Gateway Pro.
A user with all rights as administrator and a normal user with restricted rights.
A total of 4 sessions (login) can be managed.

6.4.1 Administartor

This user role has all rights. In particular, commissioning, i.e. new installation or subsequent installation of the ballasts or motion detectors, is only permitted to the administrator.

Important: Only one administrator can be logged on at a time.

6.4.2 Normal User

The rights of the normal user can be set in even more detail with the ETS.
Basically, commissioning is blocked for the user.

By default, however, it has all operating rights to switch lights, configure scenes, effects, schedules and view status information.

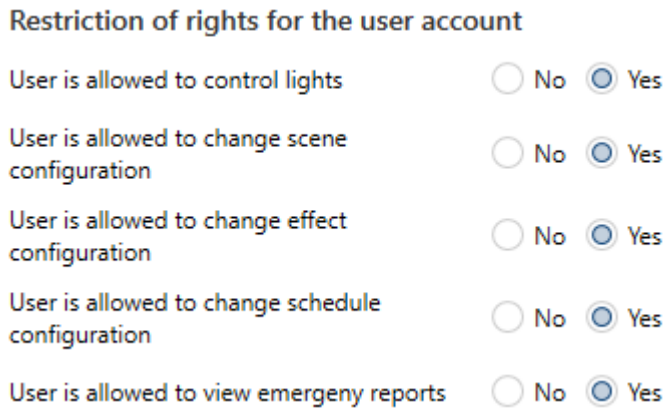

6.5 Password management and login

For security reasons, access to the web server in the device is blocked by default.
Therefore an ETS configuration and a download is necessary before using the IP interface.

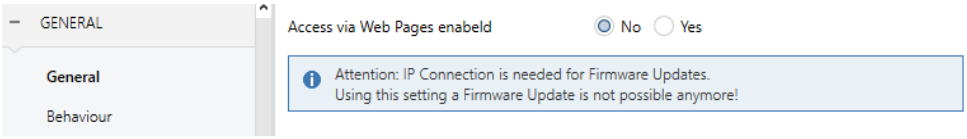

After setting the network configuration, the web server can be activated.
By default, the following accesses are provided with the corresponding access data.

Account	Login Name	Password
Admin Account	admin	dali
User Account	user	user

Note: Please note that after the download the passwords for the accesses must be changed again into secure passwords.

After that the passwords should not be reset with the ETS. It is therefore strongly recommended to set the corresponding parameter to "No" before the next ETS download:

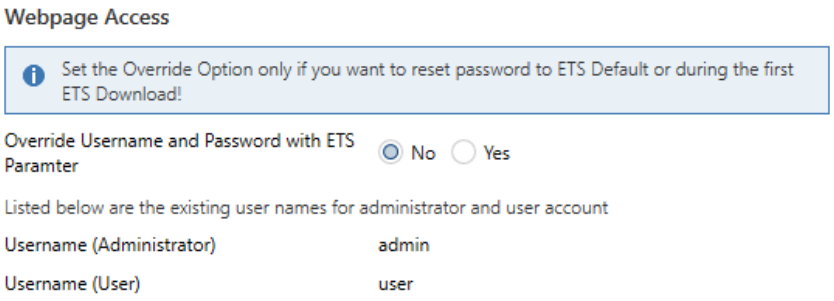

After the first ETS download and the parameter "Overwrite login name and password" set to "Yes", the authentication is carried out with these values. Afterwards a prompt appears asking you to change the password.
The following rule must be observed here:

- At least 8 characters
- Upper and lower case
- At least one digit
- At least one special character

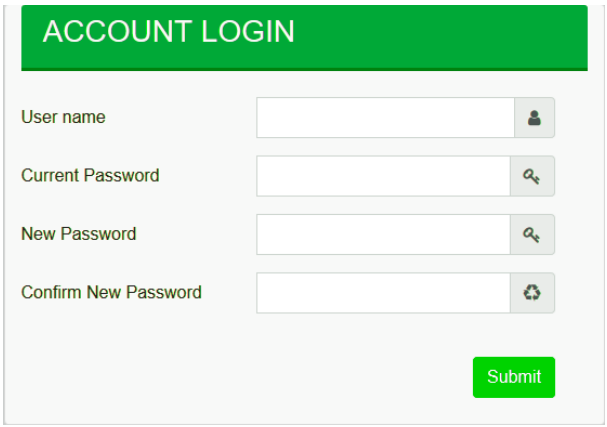

Afterwards you can log in with the changed password.

Note: The user name is only defined with the ETS configuration.

Accordingly, it would be possible to assign a customer-specific login name for the administrator or the standard user.

Note: However, it is recommended to use the default names "admin" and "user".

6.5.1 Password forgotten

If the password is forgotten, the password can be reset via an ETS download with the ETS and the corresponding parameter, see figure.

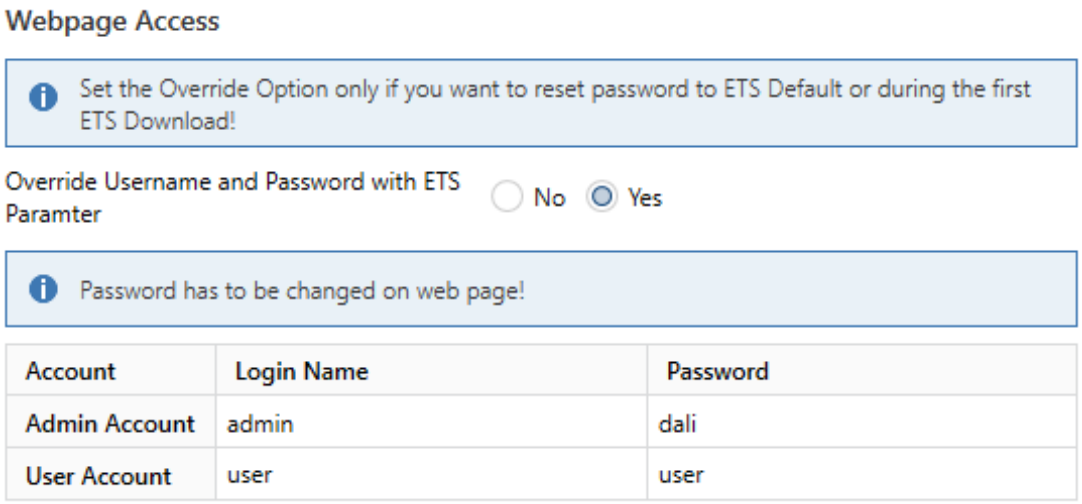

This is followed by changing the password as described in the previous chapter.

6.6 Loading the website

Once the IP connection to the gateway is established, the website can be accessed by entering the IP address in the address field of the browser. The website can be accessed with user or administrator rights.
Attention: Please, take care that you open a https connection via **https://<ip>**

When logging in as "user", the function of the website is restricted and configuration commands are blocked. This login should be used if the website is used for visualization and operation. If the website is also used for DALI commissioning, the login as administrator is required. All following illustrations and descriptions of the web pages refer to the administrator representation.

In the login window, the user name is used to decide whether the administrator role or the normal user role should be activated.

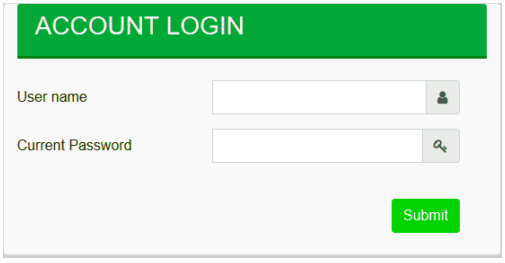

The user name is defined in the ETS. By default, "admin" and "user" are used.

Note: Under certain circumstances it is advisable to save the login data in the browser. You will be prompted to do so. With the next call the data are then already pre-filled.

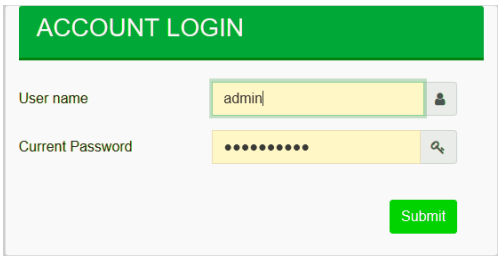

Note: If there is no login after 1 minute, a subsequent login is reported as a "forbidden request" for security reasons. The correct URL must then be loaded again and the user must log on again.

Note: For security reasons, access to the website will be blocked for 1 minute if 4 incorrect login attempts are detected.

Important: Up to four sessions can be managed. If all four sessions are logged in with "User", the role of "Admin" is also acknowledged with the response "No Session available". In this case the logged in "Users" must first be logged out.

6.7 Administration of the website

For administration, please log in on the website as "Administrator" and select the menu item "ADMINISTRATOR".

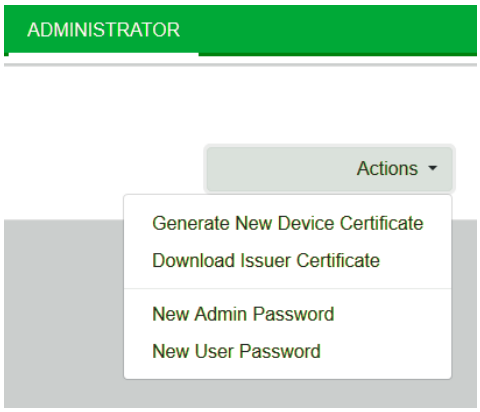

6.7.1 Generate New Device Certificate

The device is delivered with a certificate. This certificate has a lifetime of 5 years.
There are different reasons to renew the certificate:

- The IP address of the device has changed (after initial commissioning)
- The certificate is no longer valid and must be renewed

To regenerate a certificate, you must be logged in to the administrator role.
Under the tab "Administration" you have the possibility to generate a new certificate.

After the certificate is created, the device must be manually restarted for the new certificate to become active.

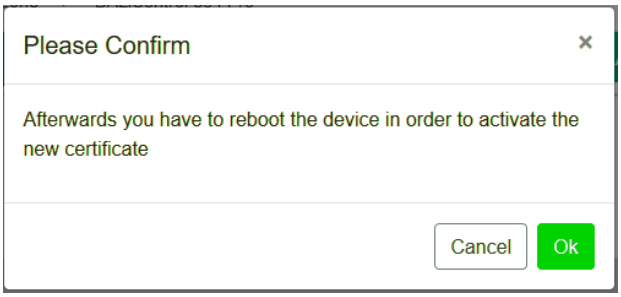

6.7.2 Download Issuer Certificate

With this action the issuer certificate can be downloaded to the PC.

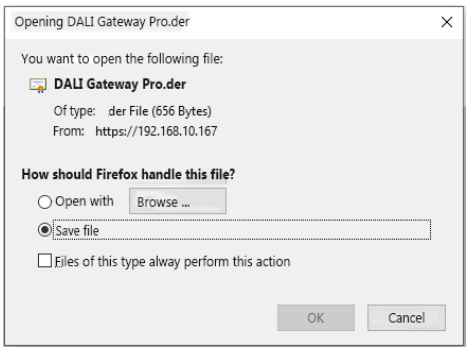

Please select a storage location in order to install the issuer certificate on the PC afterwards, see 6.3 Import of the CA Root Certificate. The certificate will be saved in a ".der" format.

6.7.3 Update Firmware

Firmware updates are intended for security and functional updates to ensure that the devices are always up to date. With the Device Firmware Update Tool (DFU Tool) you can update the firmware of many Schneider Electric KNX devices with a single software.

- Download DFU-Tool here and follow the instructions.

6.7.4 New Admin Password

In this menu item the password for the administrator can be changed.

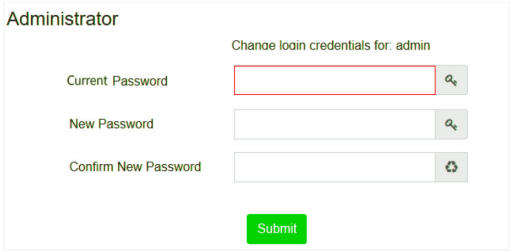

6.7.5 New User Password

In this menu item the password for the user can be changed

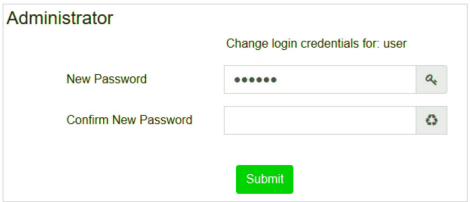

6.8 Language Setting on Website

The language English is selected on delivery. The language can be changed directly on the device using the buttons, see submenu chapter: 17.2.1 Sub-menu language
Attention: Only the languages English and German are provided on the website.

6.9 Calling the start page

The website consists of a header and a menu bar, which are always visible. The header displays the logo, the installation location, if defined in the ETS configuration, and the login name.



The Info button displays a popup window with the version, a link to the technical documentation and a link to use the OpenSource sources.

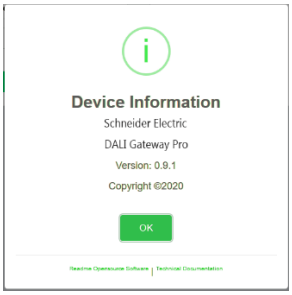

The menu line consists of the entries:

- Information
- Commissioning (only in the admin login)
- Settings
- Configuration
- Diagnosis
- Administrator (only in the Admin login)

Initially, the overview page with the basic information of the device is displayed:

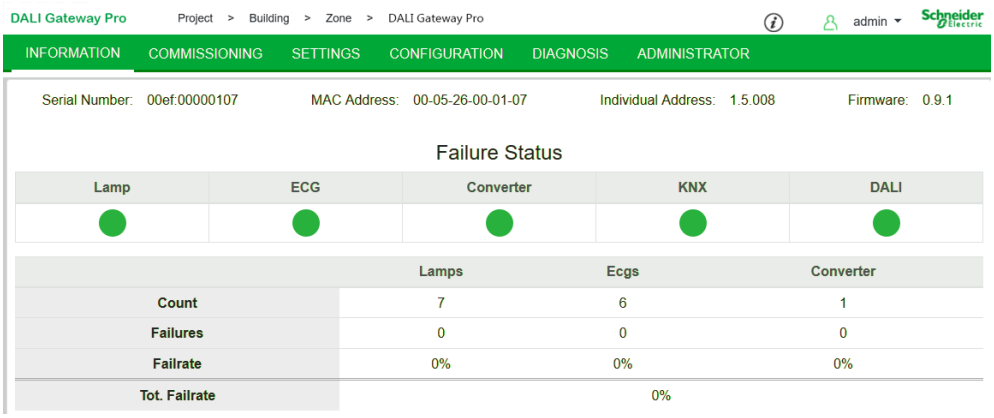

The following properties of the DALI Gateway are displayed in the upper line:

- Serial number
- Mac address
- KNX address
- Firmware version
- DNS name

The current error situation is also displayed. A distinction is made between the following types of error:

- Lamp fault
- ECG Error
- Converter error
- KNX Error
- DALI error

The table below shows the number of connected devices and their error rate.

6.10 Actions on the website

Different actions can be performed on the website. A distinction is made between configuration commands such as new installation and switching commands.

Acknowledgement after processing is absolutely necessary for configuration commands. If this cannot be received because of errors, the process is aborted after a timeout of 5 minutes.

6.11 Automatic log-off

An inactive session, i.e. a login as user or administrator without active operation, is automatically logged off after 5 minutes. After this time, the login window appears again. This is particularly useful for the administrator session, so that it is not blocked indefinitely.

Note: Mouse movements, keyboard entries and clicks are considered active operation.

7 System diagnostics

A system with several DALI gateways allows a simple automated overview of the fault status of all connected gateways. The complete overview is available in each gateway and can be displayed on the website.

When a gateway is restarted, it reports with status information and is automatically transferred to the list of other devices. The current status is automatically sent with every error status change. Further parameter settings are described in the next chapter.

7.1 Requirements and Function

To activate the system diagnostics, the corresponding parameter must be set in the ETS.

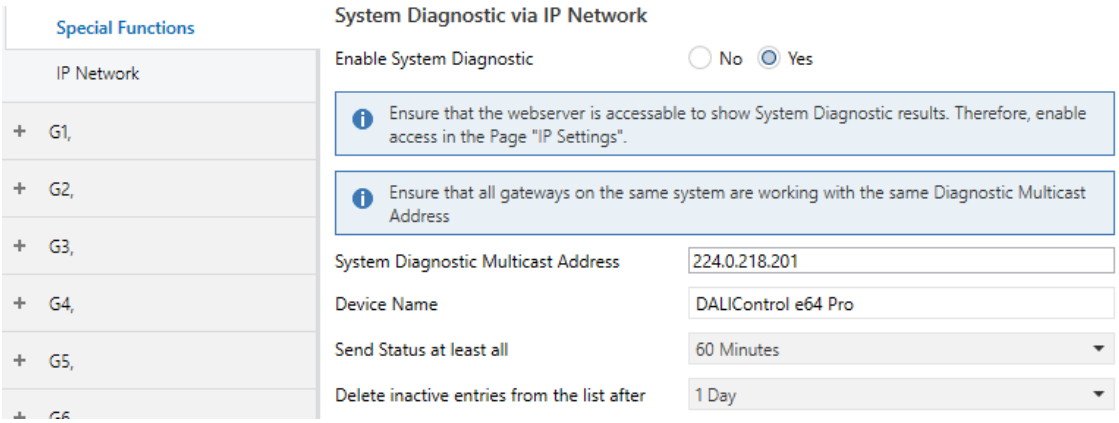

All gateways that are to communicate with each other must be configured with the same multicast address. Each event (value change and error message) is automatically sent to the group of participating gateways. This allows each gateway to store and monitor the status of the other gateways. This data is only stored temporarily and is collected again after a restart.
Another parameter can be used to define the time after which the status should be sent if no change has occurred during this time and no automated event is reported.
The inactive entries (inactive gateways) are deleted after a predefined time, which can be set via ETS.

Note: After restarting a gateway, the device status is initially sent to this multicast address. Subsequently, at each change, or after the time set in the ETS. The system diagnostics broadcast service cannot be fully protected against spoofing. If in doubt about the correct device segment status, please login to the corresponding device webinterface directly.

The parameters are also described in chapter 19.1.4 Parameterpage: Special Functions.

7.2 Viewing the Diagnostic Information

The diagnostic view is displayed on the website.

To do this, select "Diagnosis" in the main menu and "System Overview" in the following submenu.

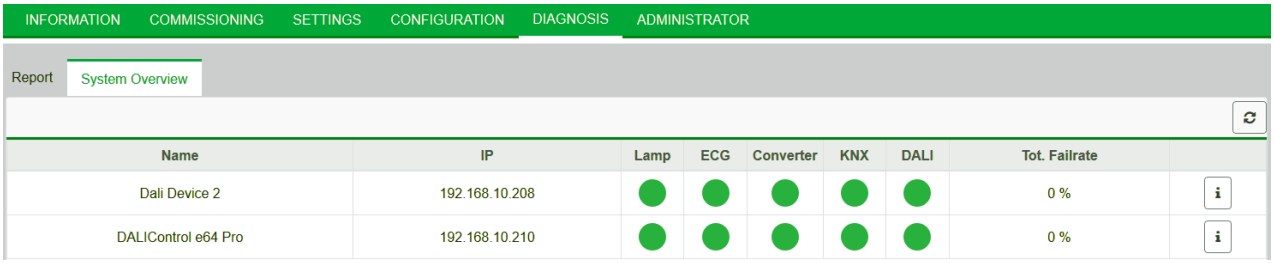

In a list all DALI Gateways that are working in the same system and are enabled according to the requirements are displayed.

The following information is displayed:

- Name of the DALI Gateway
- IP address of the DALI gateway
- Lamp Error
- ECG Error
- Converter error
- KNX Error
- DALI error
- Failure rate

Clicking the Info button displays further information about the status of the device in a detail window.

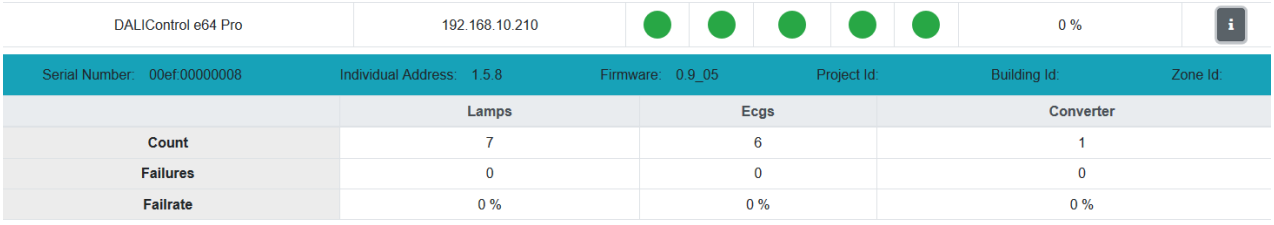

7.3 Website access of other gateways

Each Dali Gateway in the list can be opened in a second browser tab by clicking on the IP address.

Note: The corresponding login data of the DALI Gateway must be available.

8 Installation and commissioning concept

The following graphic shows the steps required for the new installation and commissioning of a DALI gateway.

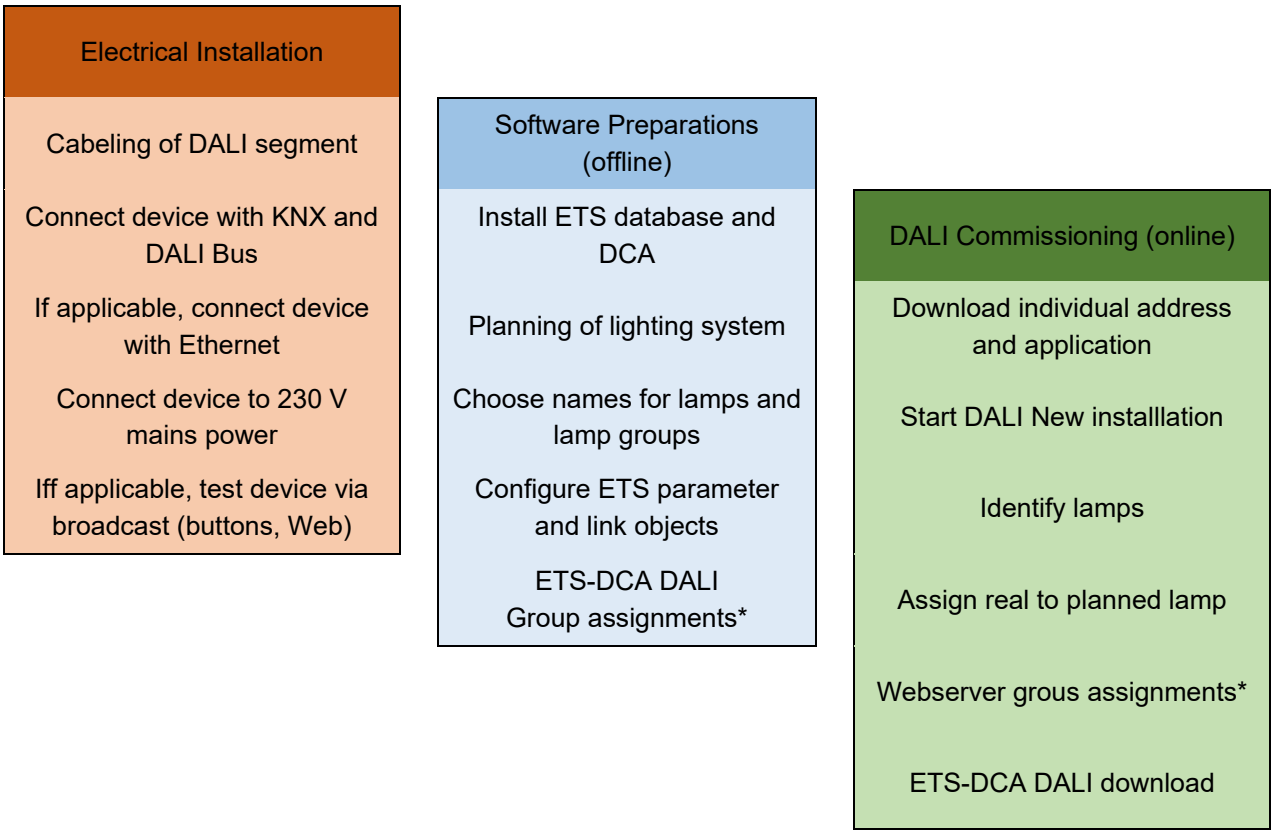

* When commissioning via DCA the group assignment can already be done in the planning phase (offline). When commissioning via web server the system has to be on-line.

8.1 DALI New installation

After wiring the DALI segment (see mounting and operating instructions) and software preparations such as installation, planning and configuration (see below) which can be performed without connection to the DALI gateway (offline), you are ready to start a new DALI installation. A new installation is only possible with a connection to the DALI gateway and when the ECGs that are to be installed are connected and supplied with power.

As with every configuration process, the new installation is possible in a number of different ways:

- Configuration and execution via DCA (Device Control App) in the ETS5
- Configuration and execution via integrated web server (Ethernet network connection required)
- Configuration and execution via pushbuttons and display on the device

Note: Depending on the type of use, configuration data should be synchronized in the DCA, see 8.5 Synchronization between web pages and DCA

If you start a new installation, the ECGs connected to the DALI gateway are reset and automatically recognised and programmed by the DALI gateway. During the programming process each ECG is assigned a short address between 0 and 63 based on a random long address. As the long address is generated randomly, the short addresses and lights need to be assigned afterwards. The new installation makes the connected ECGs known to the gateway and enables the gateway to contact them via the short address.

Note: Please remember that every time a new installation is started, the ECGs are reset and thereby randomly allocated again. Any previous configuration is overwritten and deleted.

8.2 Identification and assignment of DALI ECGs

As the ECGs are assigned randomly following the new installation, individual ECGs need to be identified and assigned as required. During the commissioning process, the ECGs are usually identified by setting an ECG / lamp to flashing mode. This means that in the installation, the lamp can be identified visually so that it can be assigned according to the user's preference. Instead of flashing, lights can also be turned on/off.

For self-contained emergency lights according to DT-1, the identification is slightly different. As not all lights support switching on/off or may only switch on in case of power loss, the EN 62386-202 enables the activation of an identification status. Whenn the gateway sets these ECGs to flashing mode, the identification status starts instead. The exact execution of this status is up to the manufacturer. Normally the control LED connected to the converter flashes red or red-green for a few seconds. Please refer to the instructions for the emergency lights or converters used.

After an ECG has been identified, it can be assigned to the previously planned ECG. Again there are different options for the assignment (DCA, web server, pushbuttons and display on the device). The different options are described in the following chapters.

8.3 ETS-App (DCA)

The application for the SpaceLogic KNX DALI Gateway Pro is based on the standard surface for the configuration of communication objects and parameters as well as a special surface for commissioning the DALI bus system. This special surface is designed as a DCA (Device Control App) for the ETS5.
All required program data are automatically created when the App is imported.

Click on the "App" button in the ETS5 footer and then select the "plus" button in order to add a new application to your ETS5 system:



A file box will appear to select the ETS App for the SpaceLogic KNX DALI Gateway Pro:

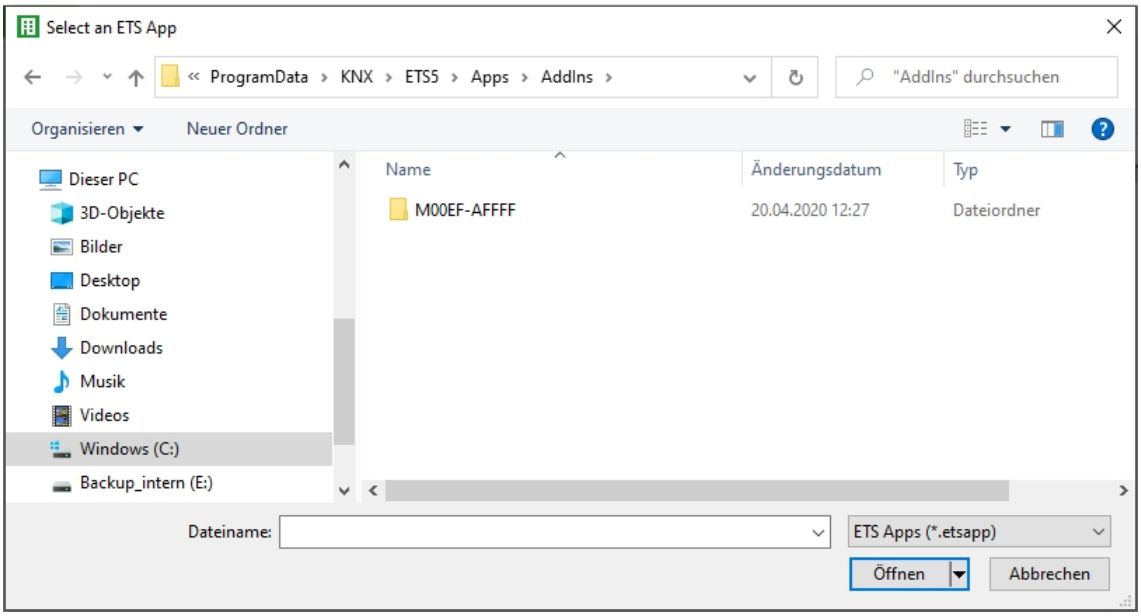

The application will now be installed and displayed in the list of all ETS5 apps.



After the installation, the ETS has to be re-started. When the product is selected, an additional "DCA" tab is shown in the ETS5.



8.4 Configuration

The parameters and the corresponding group addresses can now be configured as with any other KNX product. Through the parameters, various operating modes can also be configured. These are described in more detail in the chapter. 4 Operating modes

If a later use of the website is to be enabled, this must first be enabled in the ETS parameterization.
As the DALI Gateway Pro also supports colour control, future ECGs or groups with the desired colour control should be configured in ETS. Only in this way can the corresponding communication objects be made available.

In order to better identify the types of ECGs or groups both in the DCA and on the website, meaningful descriptive texts should also be defined for the ECGs and groups. These texts are also displayed in the list of communication objects.

The DALI specific configuration is performed in the DCA tab or by using the web-page. You should start by planning and naming the ECGs you want to use and by assigning them to the required groups.
This work can be carried out offline without connection to the KNX and without connection to the SpaceLogic KNX DALI Gateway Pro. The actual DALI commissioning is only possible online which means that a connection to the device is required. During this process the connected ECGs are recognised so that they can be assigned to the previously set up configuration.

After the assignment, the special DALI configuration has to be loaded onto the device by using the "Program" button in the DCA tab, see chapter: 10.1 DCA Commissioning or 10.2 Website Commissioning.

Finally, the parameters and links to group addresses should be loaded onto the device. The device is now ready to use.

8.5 Synchronization between web pages and DCA

The web pages read the real data from the device each time they are called up and thus always display current configuration data. The DCA on the other hand works with the configuration data stored in the ETS.

If a configuration has been carried out with the web page or with the buttons directly on the device and you should continue working with the DCA later, a synchronization is necessary.
The menu items "Extras" and "Read device data" in the DCA are used for this purpose. More detailed information can be found in chapter: 16 DCA Extras

9 Maintenance and expansion

9.1 Quick exchange of individual ECGs

When a DALI segment is commissioned, the short address, group assignment (if applicable) and other configuration data are programmed into the ECG’s internal memory. If you need to replace an ECG because of a fault, you need to program this data onto the new device.

The SpaceLogic KNX DALI Gateway Pro offers a function that makes it possible to quickly and easily replace individual ECGs. The "ECG quick exchange" can be started from the DCA, the web server (when logged in as administrator) or on the device (pushbuttons, display) itself. The gateway first checks if any of the configured ECGs that are known to it have been reported as faulty. Then the segment is searched for new, unknown devices. If a new device is found, all configuration details of the old ECG are automatically programmed onto the new one and the installation is immediately ready for use again.

However, the ECG quick exchange only workes if just one ECG within a segment is faulty and replaced by a new one. If several devices are faulty, the ECGs have to be identified and you must use the post installation function. Please also remember that the quick exchange is only possible for devices of the same Type. You cannot, for example, replace an ECG for self-contained battery emergency lights with a device for LEDs.

If a quick exchange is not possible because of any of the conditions above, the gateway terminates the process with an failure code. The different failure codes have the following meaning:

Failure Type 7: No ECG fault
Failure Type 8: More than one ECG faulty
Failure Type 9: No new ECG can be found
Failure Type 10: ECG has wrong device Type
Failure Type 11: More than one new ECG

9.2 DALI Post-installation

If you would like to expand an already commissioned DALI segment with new ECGs or would like to replace several faulty ones in the segment, please use the "post installation" function.
It is possible to activate "post-installation" on DCA or on the device itself (pushbuttons, display) and in the web browser when logging in as administrator.

When you start the post installation, the gateway first check on basis of DALI long address if all previously configured ECGs are still available in the segment. Usually ECGs that no longer exist or cannot be found are deleted from the gateway’s internal memory. Should unavailable ECGs be kept (i.e. if parts of the system are not powered temporarily), the deleting can be avoided by using an additional option.

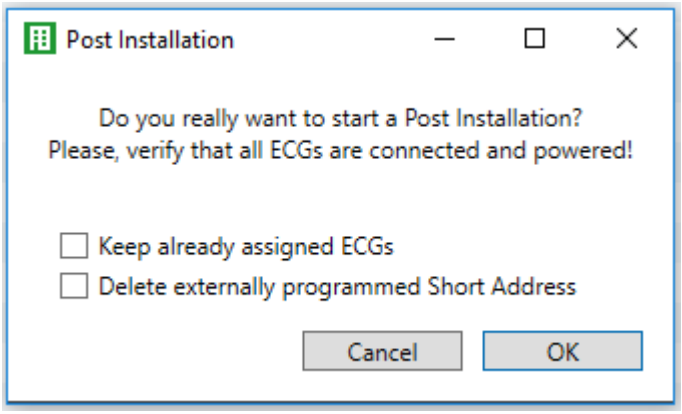

Usually ECGs have no short address and long address 0xFFFFFF on delivery by default. It might be possible, that ECGs got a short address even if long address is still 0xFFFFFF (i.e. if an external tool was used for programming). In order to delete short address in this case please activate the control element ”Delete externally programmed short address”.

After verification the segment is searched for new ECGs. Newly found devices are inserted into any existing gaps or added on at the end.

Attention: Please remember that the maximum number of ECGs within a segment is 64

As the position (short address) of a newly found device is allocated randomly, you need to identify the lights after the installation and if required assign them to groups.

10 DALI Commissioning ECG

This chapter describes the commissioning with the DCA and the website

10.1 DCA Commissioning

Following the physical installation and wiring of the DALI ECGs and lights and the electronic commissioning, the ECG configuration needs to be prepared and planned in the DCA. For this purpose, open the commissioning page in the DCA:

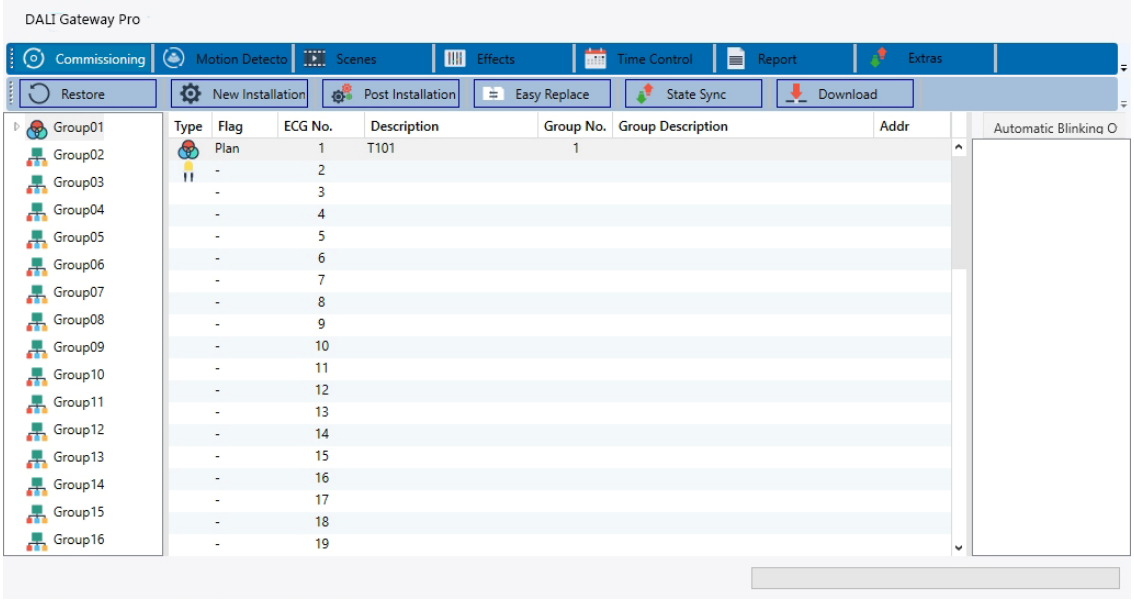

The group configuration is displayed in a tree structure on the left-hand side. The middle part shows a table for the ECG configuration and names. A list on the right-hand side shows the actual devices found in the system that have not yet been identified. During the planning phase the list is empty as the ETS is not yet connected to the system.

10.1.1 Preparation

First you should plan and name the ECGs. Use the description field to enter a name (light number, room number, etc).



Double-click to display an editing window which will allow you to enter a maximum of 20 characters.

You should also set the correct ECG Type in the parameters (in this example LED Module is selected):

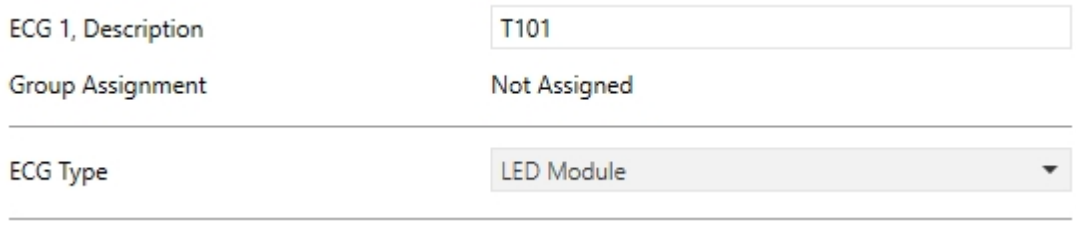

This also leads to the corresponding display in the Type field in the DCA:



Note: The icon in the first column always reflects the ETS setting.

As a next step, you should define the group control Type in the parameters (in this example colour control via RGB):



This leads to the corresponding display in the group tree in the DCA:



You can now assign the individual ECGs to the corresponding groups. Pull the ECGs via Drag&Drop onto the corresponding group in the tree on the left-hand side.



If an ECG is assigned to a group by drag & drop, the corresponding group number is automatically displayed in the "Group No." field in the ECG configuration table. The icon of the group type is also automatically displayed.

Note: The icon in the first column of ECGs assigned to a group always reflects the type of the group, i.e. the icon of the ECG is replaced by the icon of the group.
If a group assignment has to be removed, the command can be found in the context menu of the ECG

configuration table:

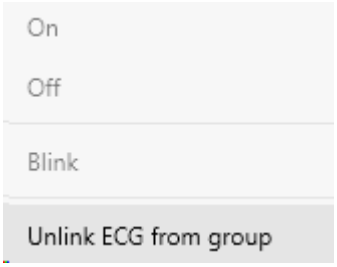

You can enter a user-friendly name in the neighbouring field "group description". ECG and group names are automatically displayed both in the group configuration tree (displayed in brackets) and in the descriptions of the ETS communication objects. Alternatively you can rename groups via the parameter page:



Easily recognisable names make it much easier for the system integrator when linking group addresses with communication objects.

47	G1, Switching, Room 111	On/Off
48	G1, Dimming, Room 111	Brighter/Darker
49	G1, Set Value, Room 111	Value
52	G1, Status, Room 111	On/Off
53	G1, Status, Room 111	Value
54	G1, Failure Status, Room 111	Yes/No
57	G1, Colour RGB, Room 111	Value
69	G1, Colour RGB, Room 111	Status

10.1.2 New installation

Once the planning, parameter setting and linking of group addresses have all been completed, the DALI segment can be commissioned. To do so, please connect the commissioning PC with the ETS to the KNX system via an interface (USB or IP). Once the connection is active, you need to program the physical address of the gateway. The communication between the plug-in and the gateway is based on the physical address.

Use the ‘commissioning‘ page and the ‘new installation‘ button to start the teach-in process of the connected DALI segment.



During the teach-in process all ECGs are automatically recognised and each ECG is assigned a short address from 0 - 63. Depending on the size of the connected DALI segment the process can take up to 3 minutes.

A bar in the bottom right hand corner indicates how far this process has progressed. At the same time a display also informs about the current process and the number of ECGs that have so far been found.



Once the process is complete, all ECGs that have been found are displayed in the list of to-be identified devices on the right-hand side.

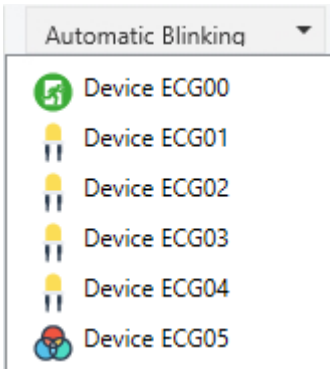

To identify the devices, switch the corresponding lamp on and off. If you select an ECG and press the right mouse button, a context menu appears from which you can select the required function.

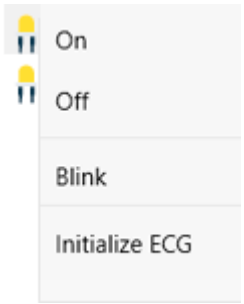

Alternatively, you can also select ‘on’ in the box ‘Flash automatically‘.

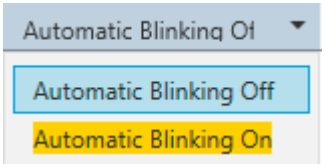

In this case, the flashing mode of an ECG starts by itself when a device is selected.

For self-contained battery emergency lights, selecting "flashing" activates the identiification process of the light. Usually the status LED of the emergency light flashes during this process. Please pay attention to the description of the lights you are using. As the status LED does not work or is not visible for some lights, you can also start a function test. During the function test, the ECG usually switches the lights on for a few seconds.

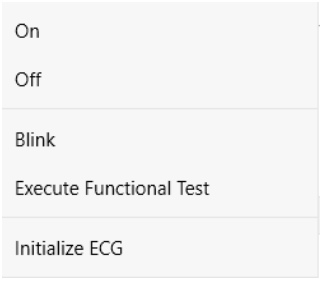

The context menu is also available at group level. During the identification process it might be useful to switch certain groups or all connected lamps on or off. You can also send broadcast commands via the context menu, in order to, for example, switch all lights on or off, see chapter: 10.1.5 Operating DALI devices

Once an ECG has been identified, you can drag and drop it onto the previously planned element in the ECG configuration table.

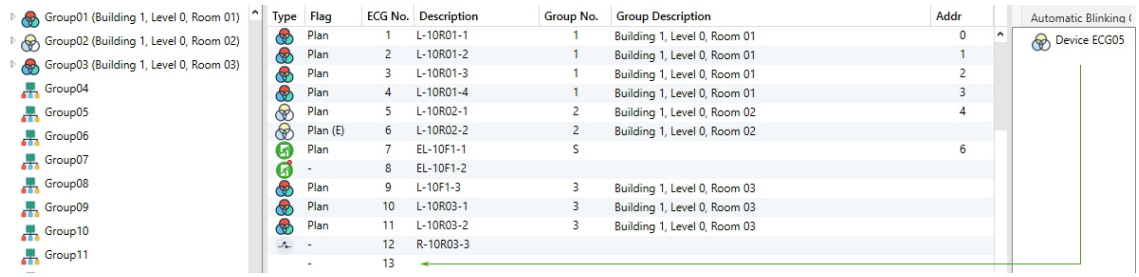

Once an ECG has been dragged into the ECG configuration table, it disappears from the list of non-identified ECGs. At the same time the ‘PLAN‘ flag in the configuration table shows that the ECG has been assigned to the planned element. The last colum in the table shows the real ECG short address.

Note: Please make sure that the short address is between 0 and 63. If an ECG has been wrongly assigned, it can be moved back to the list of non-identified devices using the same drag& drop mechanism.

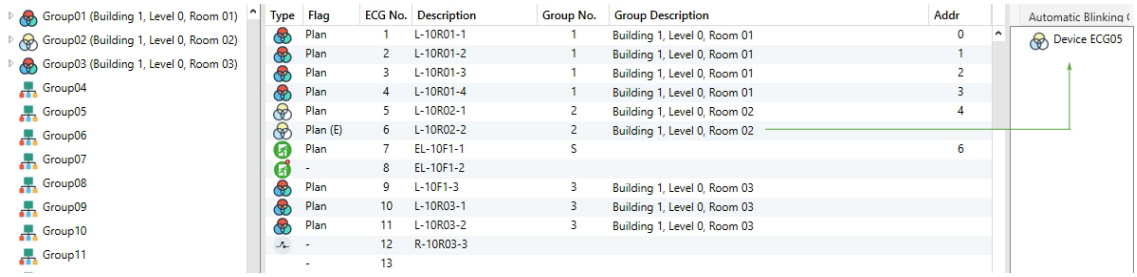

The element in the configuration table is now available again (Flag: ‘PLAN (E)‘ → Empty) and the ECG re-appears in the list of non-identified devices from where it can now be moved to a different element if required.

Important: Please remember that at this point all operations that have been performed are only displayed in the work space. They are not immediately loaded onto the DALI gateway. To start the process of downloading the settings onto the gateway and the ECGs, you must press the ‘Download‘ button.



The download can take up to 1 minute. The progress bar informs about the current status. Once the download is complete, all previously planned ECGs are programmed in the system with the DALI configuration. The respective devices are marked with an "OK" flag in the ECG configuration table.

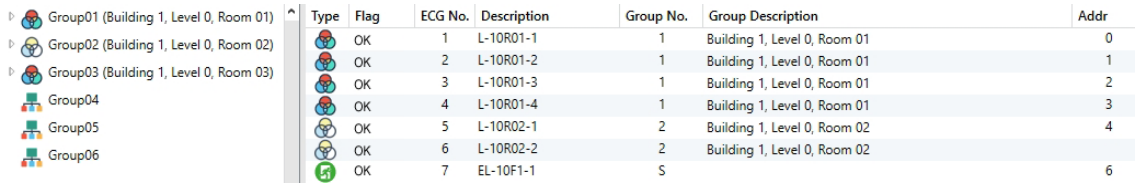

Attention: Please remember that the download on the ‘commissioning page‘ only programmes the DALI configuration data onto the gateway and ECGs. The actual ETS application with parameter settings and group addresses still has to be downloaded onto the device either before or after the DALI identification and commissioning. This is done, as usual, via the normal download process in the ETS

10.1.3 ECG and group detail info

The following icons are displayed for the different ECG Types in the DCA:
A green background shows that this ECG has been configured as emergency light with central battery.
See below.

	ECG Type 0: Fluorescent lamp
	ECG Type 1: Emergency light switchable or Emergency Light + Colourtemperature
	ECG Type 1: Emergency light non switchable
	ECG Type 2: Discharge lamp
	ECG Type 3: Low voltage lamp
	ECG Type 4: Incandescent lamp
	ECG Type 5: 0..10V Converter
	ECG Type 6: LED
	ECG Type 7: Relais module
	ECG Type 8: Colour module RGB
	ECG Type 8: Colour module tunable white
	ECG Type 8: Colour module tunable white + RGB

10.1.4 Failure and status display

During the commissioning, lamps/ECGs are identified visually (ON, OFF, flashing). It is therefore crucial that all lamps and ECGS operate correctly. If the gateway identifies a lamp or ECG fault during the installation process, the ECG concerned is highlighted in red. Failures are displayed for non-identified devices (right tree)



and for ECGs that have already been assigned (middle table).

Type	Flag	ECG No.	Description	Group No.	Group Description
	OK	1	L-10R01-1	1	Building 1, Level 0
	OK	2	L-10R01-2	2	Building 1, Level 1
	OK	3	L-10R01-3	S	
	OK	4	L-10R01-4	S	

Failures are marked with a red dot. Detailed information is available via double-click (see next chapter).

As the view is not automatically updated and as it may take a few minutes for the DALI gateway to recognise a fault, we recommend that you press the ‘Status Sync‘ button a short while after the installation.



This ensures that the displayed status is updated with the actual status and any failures that may have been detected in the meantime are displayed correctly.

Attention: If an ECG failure already exists during the search process of the initial installation, the device is usually not detected. This means that the number of ECGs found does not correspond to the number that was expected. ECG failures are only displayed in the manner described above if the ECG concerned has been previously programmed and is known to the gateway.

In addition to ECG failures, further ECG info is exported or displayed.
This information includes:

- Long address
- Short address
- Device Type
- Device subType (important for colour ECGs DT-8)
  - TC: Temperature Colour
  - XY: XY Colour
  - RGBW: RGB or HSV Colour
- Device subType (important for emergency ECGs DT-1)
  - SW: switchable emergency lights
  - NSW: non switchable emergency lights
- Failure status

For DT-8 ECGs with colour temperature control the following are also displayed:

- Min. temperature
- Max. temperature

Press the "Status Sync" button to export and update the information.



The process can take a few seconds:



10.1.4.1 ECG info in the right-hand side tree

Additional information for the ECGs is displayed via tooltip:

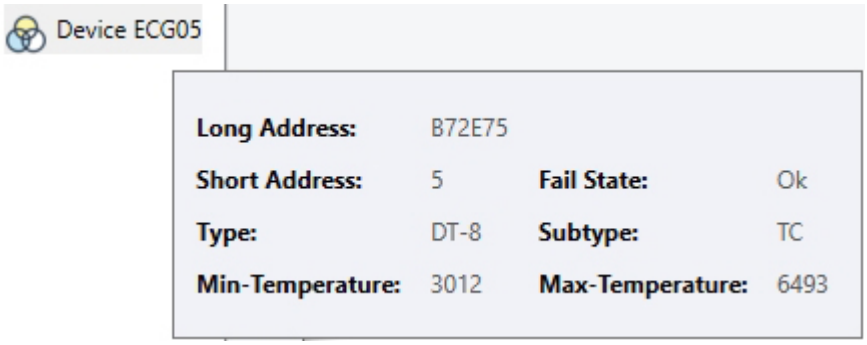

To activate the tooltip, hover over the position with the mouse.

10.1.4.2 ECG info in the ECG table

Double-click to open another window with further details:

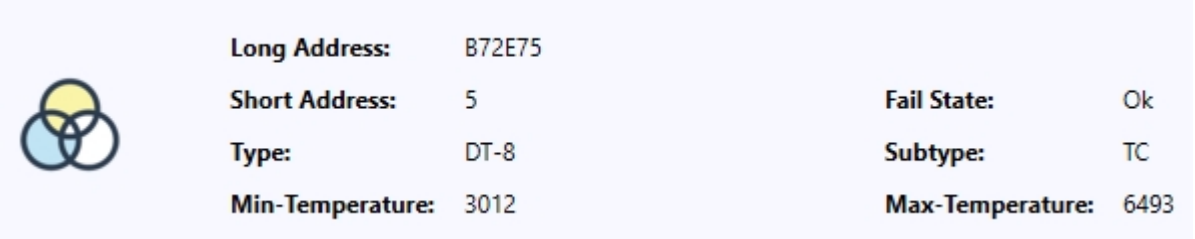

Important: The icon in the detail window shows the real ECG Type. Please make sure that the ETS definition is the same as the actual Type.

Further information:

- Long address
- Real short address
- Type
- Sub-Type
- Failure status
- Min. temperature (only for sub-Type TC)
- Max. temperature (only for sub-Type TC)

10.1.4.3 Group Info in the group tree

Additional information for the group is displayed via tooltip in the group tree.

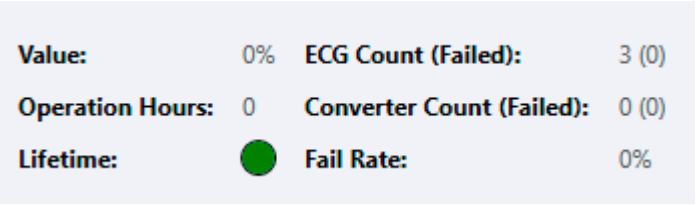

10.1.5 Operating DALI devices

DALI devices can be directly controlled in five different ways.

- **Broadcast:**

In this case telegrams that all participating devices react to are sent to the DALI bus.
The commands are executed by all ECGs even if they have not yet been commissioned. Therefore these commands work independently of the status of the DALI system.

- **Group Control:**

In this case, group telegrams are sent to control a particular group. For this process to work correctly, the ECGs need to have been assigned to groups and the configuration has to be downloaded onto the gateway.

- **ECG Control:**

In this case, ECGs can be individually controlled.

- **Emergency (Converter) inhibit**

Use the context menu in the group tree on the left-hand side to disable converters.

If the power supply for the connected emergency lights is turned off within 15 minutes after activating the converter inhibit mode, the lights are turned off instead of changing into emergency mode. This operating mode may be necessary during the commissioning and installation process to prevent constant emergency lighting and battery discharge.

- **Emergency (Converter) Start Functional Test**

Use the context menu in the right-hand side tree or the list to start a function test with converters.

- **Initialize ECG**

This function is only available in the tree on the right. This can be used to completely delete an ECG. After this action, it is no longer present and can only be found by renewed post installation. Therefore, this action must be confirmed by the operator:

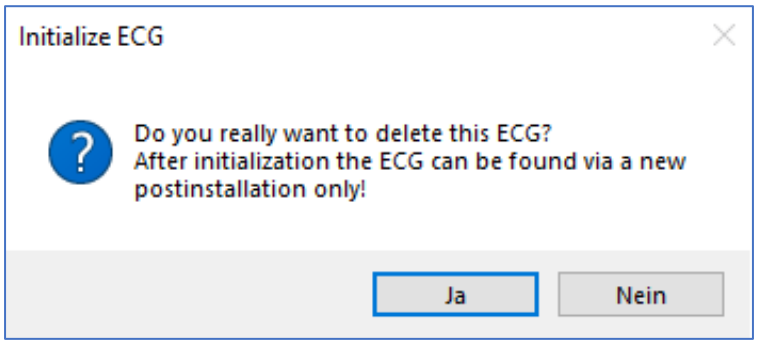

The DCA offers different options to activate these commands. The DALI must be commissioned and a connection to the gateway must be available for all of the options.

Group menu in the left-hand side tree:

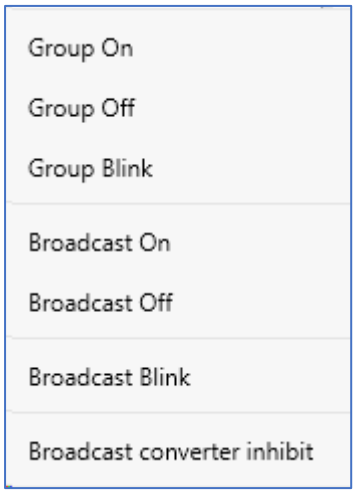

Context menu in the ECG table:

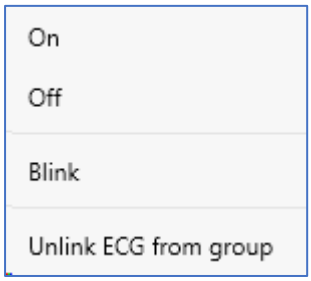

ECG menu in the right-hand side tree:



10.1.6 Post Installation

If you would like to expand an already commissioned DALI segment with new ECGs or would like to replace several faulty ones in the segment, please use the "post installation" function.



When you start the post installation in the ETS, the gateway first check if all previously configured ECGs are still available in the segment. ECGs that no longer exist or cannot be found are usually deleted from the gateway’s internal memory. Should unavailable ECGs be kept (i.e. if parts of the system are not powered temporarily), the deleting can be avoided by using an additional option: "Keep already assigned ECGs"

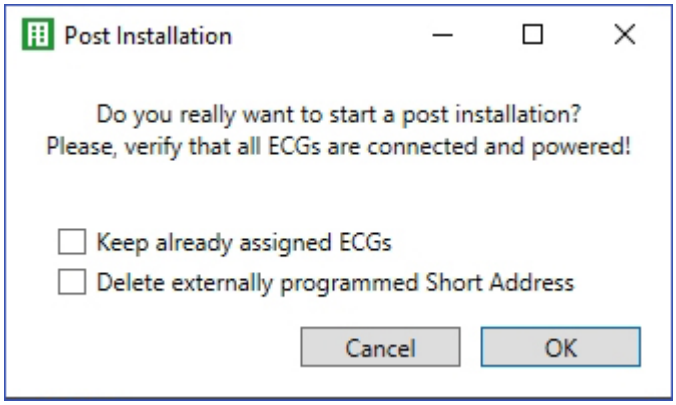

Usually ECGs have no short address and long address 0xFFFFFF on delivery by default. It might be possible, that ECGs got a short address even if long address is still 0xFFFFFF (i.e. if an external tool was used for programming). In order to delete short address in this case please activate the control element ”Delete externally programmed short address”.

After verification the segment is searched for new ECGs. Newly found devices are inserted into any existing gaps or added on at the end.

Attention: Please remember that the maximum number of ECGs within a segment is 64.

As the position (short address) of a newly found device is allocated randomly, you need to identify the lights and if required assign them to groups.

Note: If you choose the setting "Switch ECG power supply via object", the corresponding objects are sent before the post installation. Afterwards the ECG can be assigned again to a group.

Important: Please remember that at this point all operations that have been performed are only displayed in the work space. They are not immediately loaded onto the DALI gateway. To start the process of downloading the settings onto the gateway and the ECGs, you must press the ‘Download‘ button.



10.1.7 ECG Quick exchange

If you need to exchange an individual ECG because of a fault, you can also use the quick exchange function. Press the quick exchange button in the DCA.



The execution of this function must be confirmed in a query window.

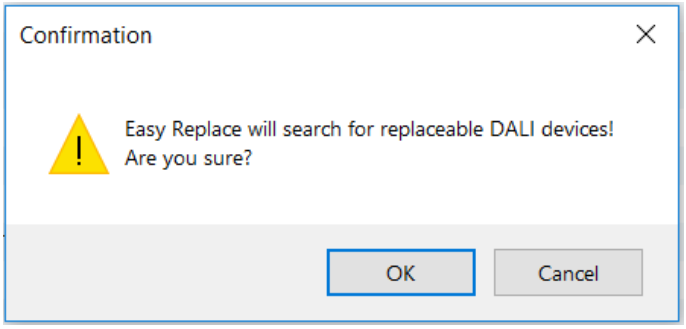

If a quick exchange is not possible because of external circumstances, the gateway terminates the process with an failure code. The different failure codes have the following meaning:

Failure Type 7: No ECG fault
Failure Type 8: More than one ECG faulty
Failure Type 9: No new ECG can be found
Failure Type 10: ECG has wrong device Type
Failure Type 11: More than one new ECG

10.1.8 Status Sync

Use this function to read and display the status of all ECGs, see chapter: 10.1.3 ECG and group detail info. The DALI Gateway polls the ECG status cyclically.



10.1.9 Restoring the DALI configuration

This command is used to completely restore a SpaceLogic KNX DALI Gateway Pro, for example, by replacing it with a completely unprogrammed device.



After actuation, a window appears in which the overwriting of the device configuration must be confirmed.

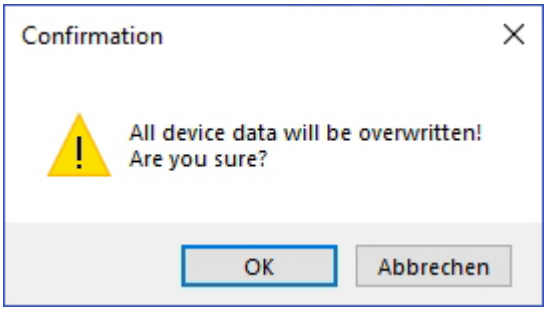

In this case all Dali relevant data from the ETS is written onto the device.

Important: Once this process is complete, the device must be restarted manually.
This function only applies to the DALI configuration. It is therefore essential to carry out a normal ETS download for the ETS parameters and communication objects.

Important: We recommend you do an ETS back-up after you have completed the configuration.

10.2 Website Commissioning

After the physical installation and wiring of the DALI ECGs and luminaires and the electrical commissioning, the ECG configuration must first be prepared and planned on the website. For this purpose, the commissioning page is opened:



Important for commissioning via web is the correct ETS configuration of the groups and ECG settings. Here the group type (normal or colour control) and also the individual ECG types should already be correctly defined.

10.2.1 Preparation

The first step should be to plan and designate the ECGs and groups. For this purpose, a name (luminaire number, room number and group designation or similar) can be entered in the description field on the "Settings" page.

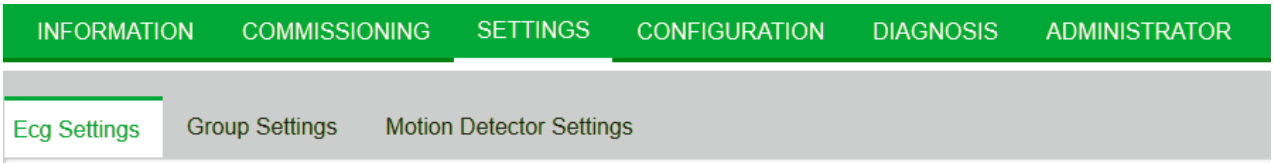

Attention: It is useful to assign plausible descriptive texts for the groups and for the ECGs which are to be used later as individual ECGs.

Note: The view under ECG settings is sorted by the ETS ECG number. These ECG numbers must then also receive the corresponding planned settings and object assignments in ETS.



Important: Please note that all performed operations are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the save operation the save button in the upper right corner must be pressed:



10.2.2 New Installation

After planning, setting the parameters and linking the group addresses, the actual commissioning of the DALI segment takes place. The teach-in process of the connected DALI segment can then be started via the "Commissioning" page and the "New installation" button.

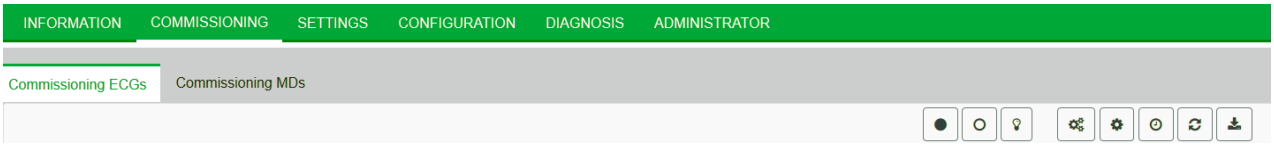



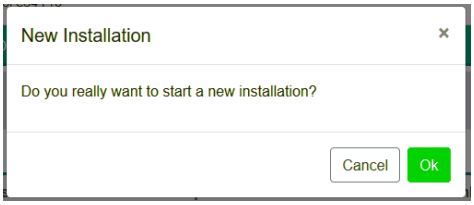

During teach-in, all ECGs are automatically detected and each ECG is assigned a short address from 0..63. The teach-in process can take up to 3 minutes, depending on the size of the connected DALI segment. The progress is shown in the popup window.

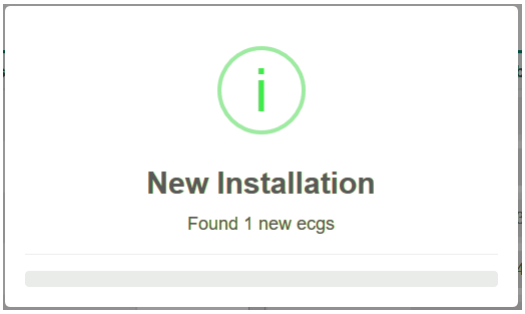

After completion of the teach-in process, all found ECGs are included in the table.

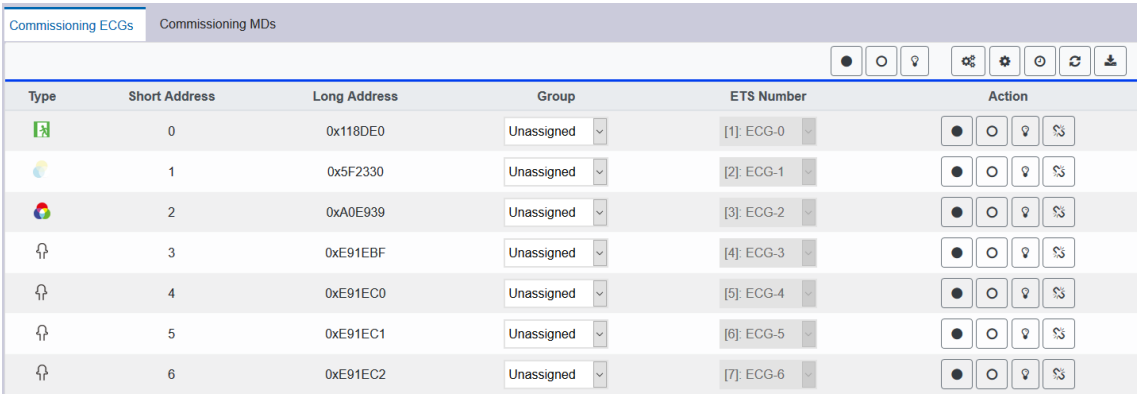

The identification is now carried out by switching the respective light on and off.

Once an ECG has been identified, it can be assigned as an individual ECG or to a group in the drop-down menu:

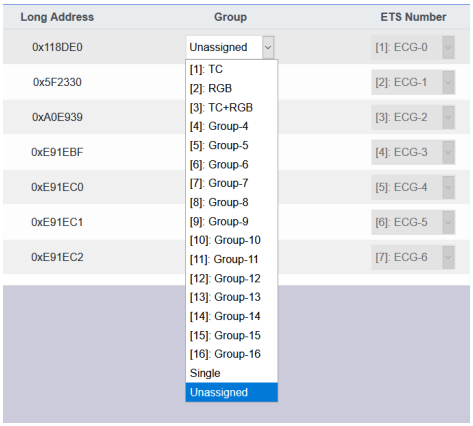

The desired assignment to the ETS ECG number can then be selected.
Example: ECG with control of colour temperature with short address 1 is assigned to group 1 (TC) and ETS ECG number 2:



With this procedure all found ECGs can be assigned.

Note: Please note that the real short address is between 0 and 63.

Important: Please remember that at this point all operations that have been performed are only displayed in the work space. They are not immediately loaded onto the DALI gateway. To start the process of downloading the settings onto the gateway and the ECGs, you must press the ‘Download‘ button.



The programming process can take up to 1 minute.

Important: It is important to note that the programming process on the "commissioning side" only programs the DALI configuration data in gateway and ECGs. In addition, the actual ETS application with the parameter settings and group addresses must be loaded into the device before or after the DALI identification and commissioning. This is done as usual via the normal loading process in the ETS.

10.2.3 Post Installation

If an already commissioned DALI segment is to be extended by additional ECGs, or if several defective ECGs in the segment are to be replaced, the "post installation" function must be used.



When you start the post installation in the ETS, the gateway first check if all previously configured ECGs are still available in the segment. ECGs that no longer exist or cannot be found are usually deleted from the gateway's internal memory. Should unavailable ECGs be kept (i.e. if parts of the system are not powered temporarily), the deleting can be avoided by using an additional option: "*Keep already configured ECGs*"

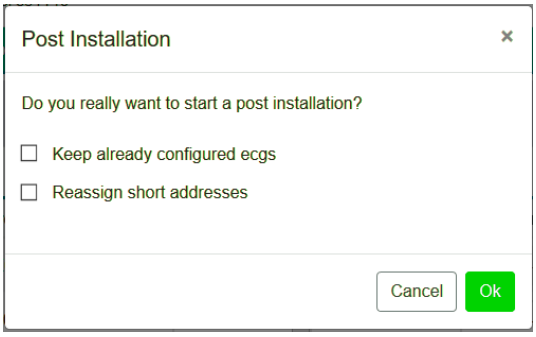

Usually ECGs have no short address and long address 0xFFFFFF on delivery by default. It might be possible, that ECGs got a short address even if long address is still 0xFFFFFF (i.e. if an external tool was used for programming). In order to delete short address in this case please activate the control element "*Reassign short address*".

After verification the segment is searched for new ECGs. Newly found devices are inserted into any existing gaps or added on at the end.

Attention: Please remember that the maximum number of ECGs within a segment is 64.

Since the position (short address) of the newly found devices was assigned randomly, an identification of the luminaires and, if necessary, a group assignment must be carried out after the subsequent installation, as with the new installation.

Note: If you choose the setting "Switch ECG power supply via object", the corresponding objects are sent before the post installation. Afterwards the ECG can be assigned again to a group.

10.2.4 Failure and status display

The identification of the luminaires/ECGs during commissioning is carried out visually (switch on, switch off, flashing) and is therefore only possible if the lamps and ECGs are working without errors. If a lamp or ECG fault is identified by the gateway during the installation process, the corresponding ECG is highlighted in red.

Type	Number	Short Address	Group	Description	Value	Colour	Action
	1	4	Single	ECG No. 1	0 %	0 X 0 Y	▶ i
	2	6	[1]: Group 1	ECG No. 2	N/A %	N/A	▶ i
	3	0	Single	ECG No. 3	0 %	N/A	▶ i

10.2.5 Operating DALI devices

The DALI devices can be controlled directly in various ways.

In the menu bar is available:

- **Broadcast :**



:

In this case telegrams that all participating devices react to are sent to the DALI bus.
The commands are executed by all ECGs even if they have not yet been commissioned. Therefore these commands work independently of the status of the DALI system.

- **Emergency (Converter) inhibit**



Use the context menu in the group tree on the left-hand side to disable converters.
If the power supply for the connected emergency lights is turned off within 15 minutes after activating the converter inhibit mode, the lights are turned off instead of changing into emergency mode. This operating mode may be necessary during the commissioning and installation process to prevent constant emergency lighting and battery discharge.

- **Easy Replace**



If you need to exchange an individual ECG because of a fault, you can also use the quick exchange function. This action must be confirmed by the operator:

If a quick exchange is not possible because of external circumstances, the gateway terminates the process with an failure code. The different failure codes have the following meaning:

Failure Type 7: No ECG fault
Failure Type 8: More than one ECG faulty
Failure Type 9: No new ECG can be found
Failure Type 10: ECG has wrong device Type
Failure Type 11: More than one new ECG

In the table for each individual ECG:

- **ECG Control:**



Single ECGs can be controlled directly.


This can be used to completely delete an ECG. After this action, it is no longer present and can only found by renewed post installation. Therefore, this action must be confirmed by the operator.

11 DALI Commissioning Motion Detector

The DALI Gateway Pro allows the configuration of input devices.

Note: Only motion detectors that comply with the IEC 62386 part 303/304 standard are supported.

Each input device is identified by a short address, as with ECGs. This address is assigned during the new installation.
The DALI Gateway Pro supports up to 8 motion sensors.
Each input device can contain one or more instances. With motion sensors it is common that one instance represents the "motion" and another instance represents the “brightness”.

This type of motion detector is preset in DALI Gateway Pro.

11.1 DCA Commissioning

The assignment settings and programming of motion sensors can be done in the DCA. For this purpose, switch from the commissioning page to the Motion Detector page.

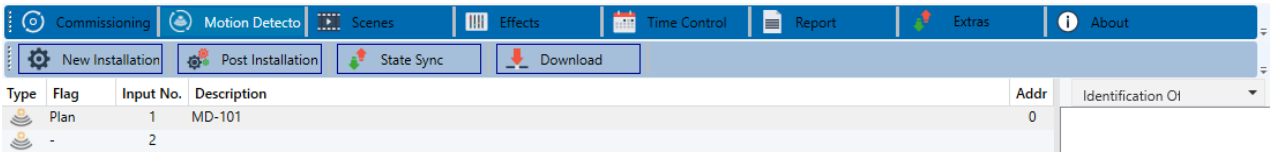

11.1.1 Preparation

The first step should be to plan and name the motion sensors. For this purpose a name (room number or similar) can be entered in the description field.



By double-clicking, an editing window appears for entering a text. A maximum of 20 characters can be entered. In addition, the correct motion detector type should also be set in the parameters.

The ETS parameters provide for a built-in brightness sensor for each motion detector, see parameter "Additional brightness sensor available".

If motion detectors without brightness measurement are used, this can be set via this ETS parameter.

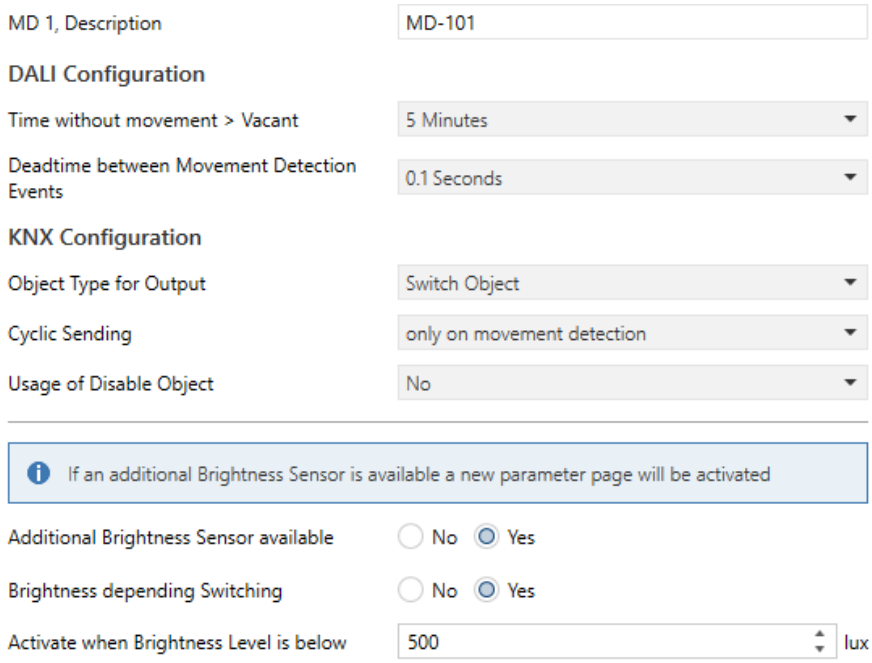

 Icon for Motion Detector with Brightness

 Icon for Motion Detector without Brightness

11.1.2 New installation

The teach-in process of the connected DALI segment can then be started via the "Commissioning" page and the "New installation" button.



During teach-in, all motion detectors are automatically detected and each motion detector is assigned a short address from 0..63. The teach-in process can take up to 3 minutes, depending on the size of the connected DALI segment. The progress is shown in the progress bar at the bottom right of the window. At the same time a display informs about the number of motion detectors found so far, or about the current process.



When the teach-in process is complete, all motion detectors found are entered in the list of devices still to be identified on the right-hand side.



The identification is now carried out by an identity process of the motion detectors. When activated, an LED usually flashes in the identified motion detector.

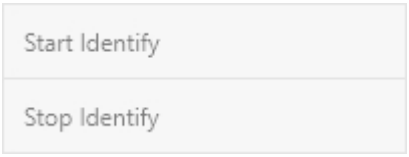

Note: The way in which the connected motion sensor displays its identification may be different for different manufacturers. Please read the manufacturer's instructions.

Once a motion sensor has been identified, it can be dragged and dropped to the corresponding ETS entry in the table.

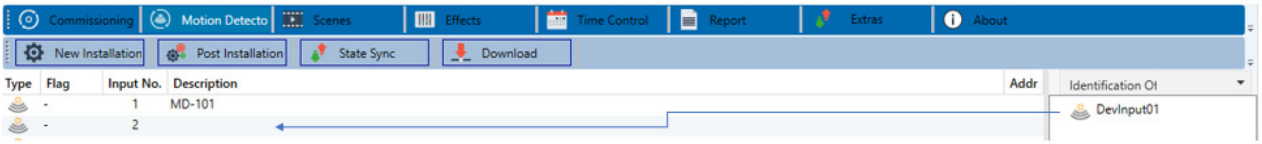

To delete an assignment, this entry can also be dragged back into the right-hand tree.

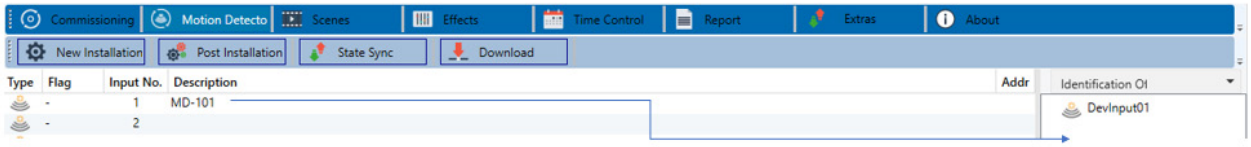

Important: Please note that all performed operations are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the loading process of the settings into the Gateway and into the motion detectors, it is absolutely necessary to press the "Download" button.



The programming process can take up to 1 minute. The progress bar provides information about the current status. When the loading process is complete, all previously planned motion sensors in the real system have been programmed with the DALI configuration. In the motion detector configuration table, the corresponding devices are marked with the "OK" flag.



Important: It is important to note that the programming process on the "commissioning side" only programs the DALI configuration data into the gateway and into the ECGs/movement sensors. In addition, the actual ETS application with the parameter settings and group addresses must be loaded into the device before or after the DALI identification and commissioning. This is done as usual via the normal loading process in the ETS.

11.1.3 Post Installation

If an already commissioned DALI segment is to be extended by additional motion detectors, or if one or more defective motion detectors in the segment are to be replaced, the "Post installation" function must be used.



If a subsequent installation is started, the gateway first checks on the basis of the DALI long address whether all previously configured motion sensors are still present in the segment. Normally, motion sensors that are no longer present or cannot be found are deleted from the internal memory of the gateway during the subsequent installation.

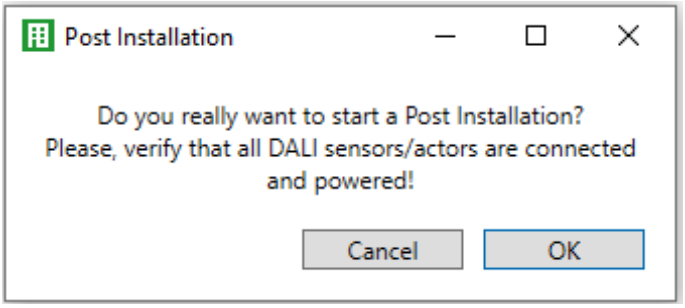

Attention: Please note the maximum number of 8 motion detectors in one segment.

Since the position (short address) of the newly found devices was assigned randomly, the motion detectors must be identified after the subsequent installation in the same way as for the new installation.

Important: Please note that all performed operations are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the loading process of the settings into the Gateway and into the motion detectors, it is absolutely necessary to press the "Download" button.



11.1.4 Failure and status display

11.1.4.1 Info in right tree view

Here the additional information is displayed as tooltip of the respective Motion Detector:

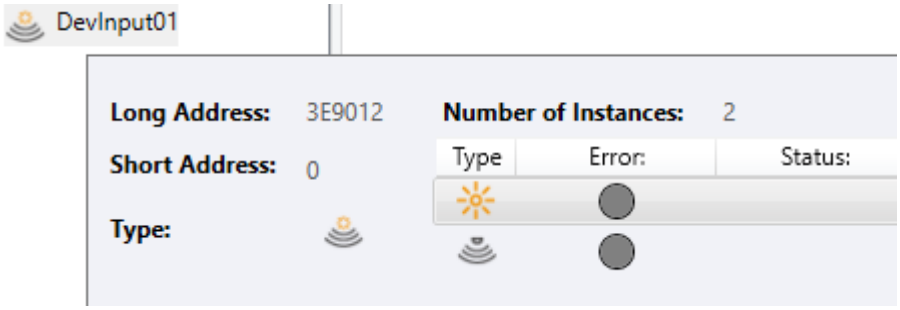

To activate the tooltip, the mouse pointer must remain in this position a little longer.

11.1.4.2 Info in table view

A double click opens an additional window with further details:

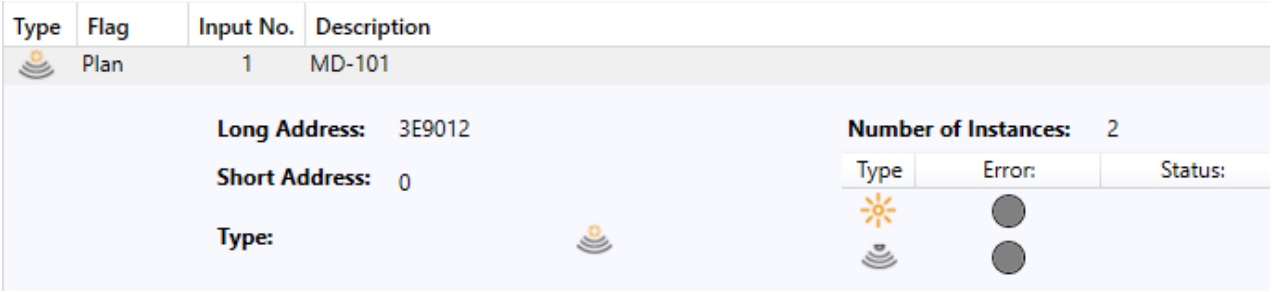

Important: The icon in the details window indicates the real motion detector type that was read out via DALI. Please make sure that the ETS definition matches the real type.

Further information:
- Long address
- Real short address
- Type
- Number of instances
- Sub-type
- Error status

11.2 Website Commissioning

The assignment settings and programming of motion sensors can be done on the web page.



11.2.1 Preparation

The first step should be to plan and name the motion sensors. For this purpose, a text can be entered in the description field on the "Settings" page.

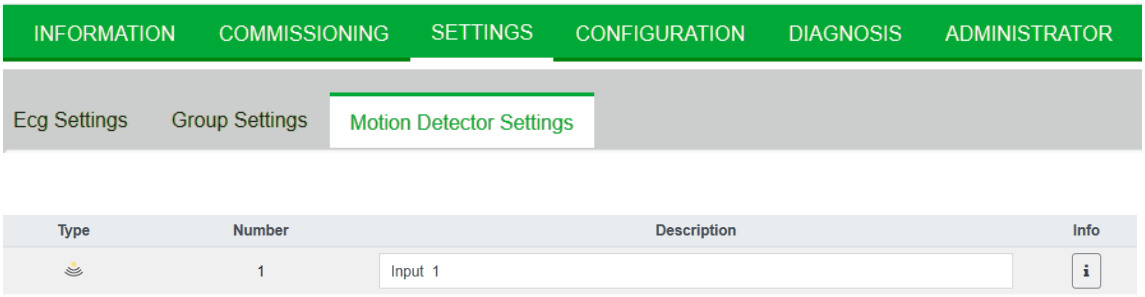

Important: Please note that all operations performed are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the save operation the save button in the upper right corner must be pressed:



11.2.2 New Installation

After planning, setting the parameters and linking the group addresses, the actual commissioning of the DALI segment takes place. The teach-in process of the connected DALI segment can then be started via the "Commissioning" page and the "New installation" button.



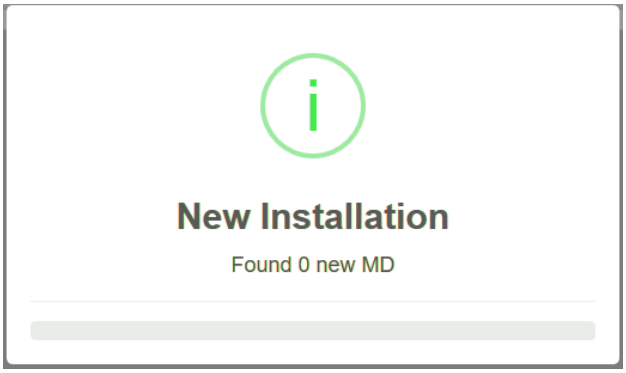

After installation, all motion detectors found are displayed in the list and can be identified with the action button.



After identification, they can be assigned to the motion detectors preconfigured in the ETS.



Important: Please note that all performed operations are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the loading process of the settings into the Gateway and into the motion detectors it is absolutely necessary to press the "Program" button.



11.2.3 Post Installation

If an already commissioned DALI segment is to be extended by additional motion detectors, or if one or more defective motion detectors in the segment are to be replaced, the "Post-installation" function must be used.



If a subsequent installation is started, the gateway first checks on the basis of the DALI long address whether all previously configured motion sensors are still present in the segment. Normally, motion sensors that are no longer present or cannot be found are then deleted from the internal memory of the gateway during the subsequent installation.

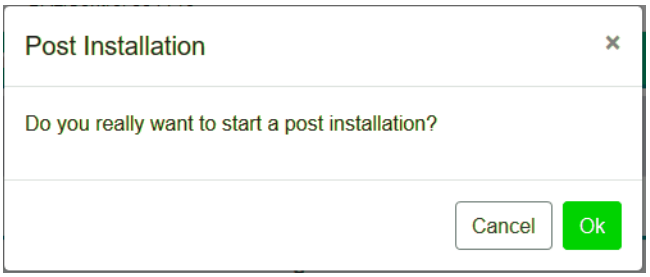

Attention: Please note the maximum number of 8 motion detectors in one segment.

Newly found motion detectors can be assigned according to the previous chapter of the ETS configuration.

Important: Please note that all performed operations are initially only displayed within the user interface but are not directly loaded into the DALI Gateway. To start the loading process of the settings into the Gateway and into the motion detectors, it is absolutely necessary to press the "Program" button.



12 The scene module

The SpaceLogic KNX DALI Gateway Pro enables the programming and invoking of up to 16 internal light scenes. A scene is invoked via a 1Byte scene object. It can be adjusted by which KNX scene 1..64 (value 0..63) which of the 1..16 DALI scenes is invoked. This object can also be used to save scenes (Bit 7 set). The currently set value is saved as scene value. In case of DALI DT-8 devices, the currently set light colour or colour temperature also becomes part of the scene and is automatically adjusted when a scene is invoked.
General, a scene can consist of groups and individual ECGs (as long as these have not been assigned to a group).

To assign a group to a scene or to delete a group from a scene and to assign the KNX scene number to the DALI scene, use the DCA or the website. Both configuration methods can be used to set values and colours for invoking a scene.

By default, when a scene is called up, the programmed scene is jumped to immediately without dimming time. If a scene is to be dimmed, a dimming time can also be set for each scene. If a scene is in the process of dimming, switching an individual group (or an ECG) from the scene does not cause the entire scene to be stopped, but only the group addressed is affected. All other groups continue the dimming process started by the scene call.

For each scene a 4 Bit dim object is available. This makes it possible to dim all the lights in a scene together.

12.1 Scene configuration via DCA

Scenes can be programmed and assigned in the DCA. For this purpose change from the commissioning to the scene page.

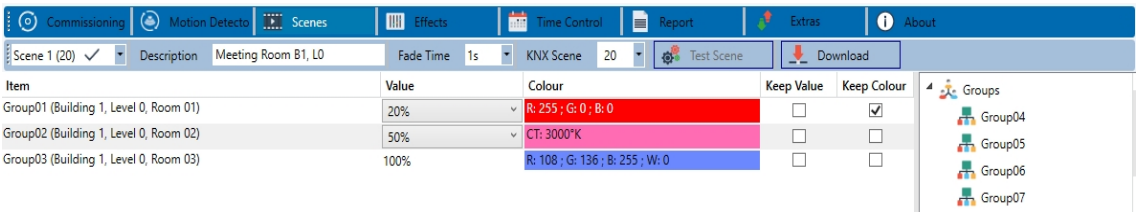

12.1.1 Configuration

You can enter a user-friendly name for each scene in the description field. The name can be up to 20 characters long.



If you do not want a scene to start immediately but would prefer dimming it up to its final value, you can set the dimming time individually for each scene.

Please remember that the dim time always refers to the full value range. Accordingly a dim time of 30 s means a value change of 100% within 30 s. If the value within a scene is only changed by 50%, the change is performed within 15 s.

Select the required scene from the dropdown on the left-hand side.

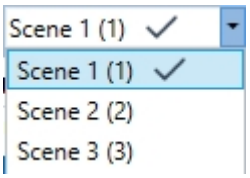

A "tick" means that the scene has already been defined.

A scene is activated by a 1 Byte scene object according DPT 18.001. In the KNX standard you are able to address up to 64 scenes by this datapoint. In the DALI gateway there are only 16 scenes available. By default DALI scenes are assigned one to one to the KNX scenes, what means scene 1 of the DALI gateway is usually invoked by object value 0 (KNX scene 1) respectively by object value 128 it is programmed. In the DCA it is now possible to change this assignment. This adjustment can be done in the headline of the scene editor.

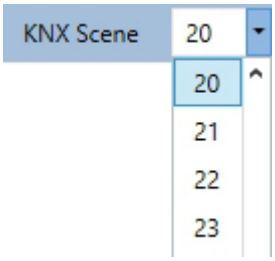

In the example above, the selected DALI scene can be invoked object value 19 (KNX scene 20), respectively programmed by value 147. Please note that the assignment hast o be unique. If different DALI scenes are assigned to the same KNX scene only the first DALI scene is activated / programmed.

The groups which you would like to use for this scene can be moved from the tree on the right-hand side into the field in the middle using drag-and-drop.

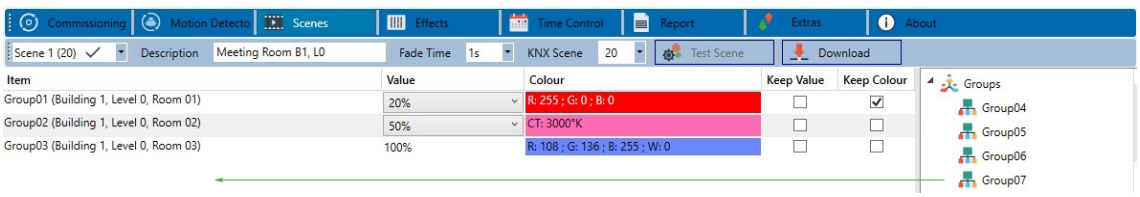

Use the entry fields to enter the required values for this scene.

- **Value**

A brightness level between 0 and 100% can be selected via a drop down field.

- **Colour**

Defines the colour according to Type of colour control for this group. Use the context menu or simply double-click to open a window to select the colour from a colour picker.

- **Keep value**

In this case the current value remains unchanged when the scene is invoked. The entry field for the value is disabled. Any entry in the value field is ignored.

- **Keep colour**

In this case the current colour remains unchanged when the scene is invoked. The entry field for the colour is disabled. Any entry in the colour field is ignored.

To delete an entry, select a group and use drag and drop to move it back to the tree on the right-hand side.

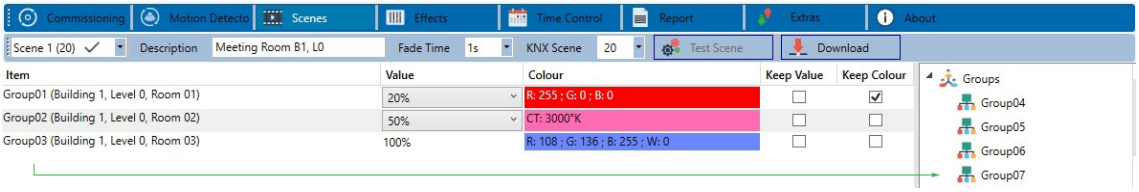

You can also delete an entry via the context menu (right click on a line):

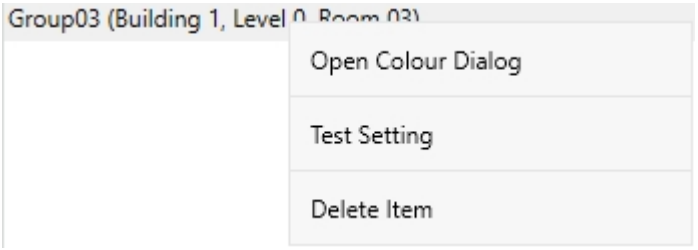

12.1.2 Colour setting

Each group or ECG can only support one Type of colour control.

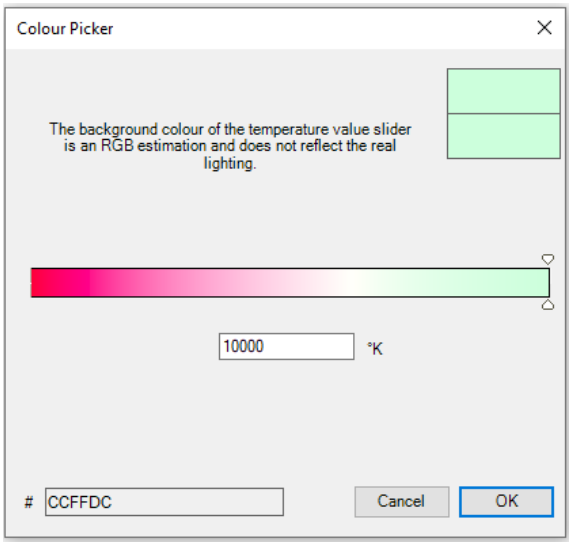

The following color input window is displayed for the "Color Temperature" type.

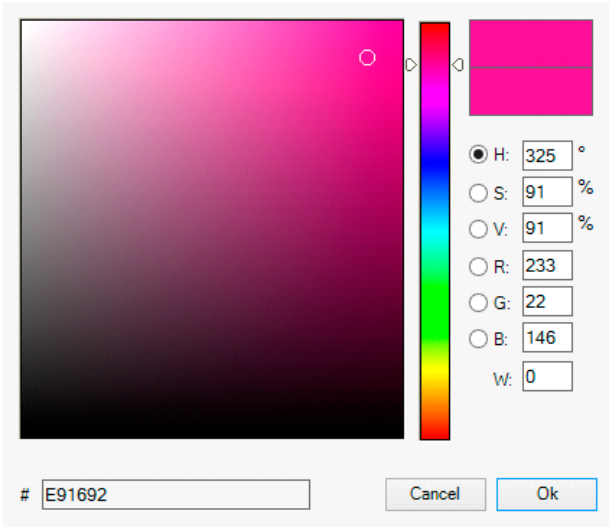

For the "RGB (RGBW)" or "HSV" type, this color input window is displayed.

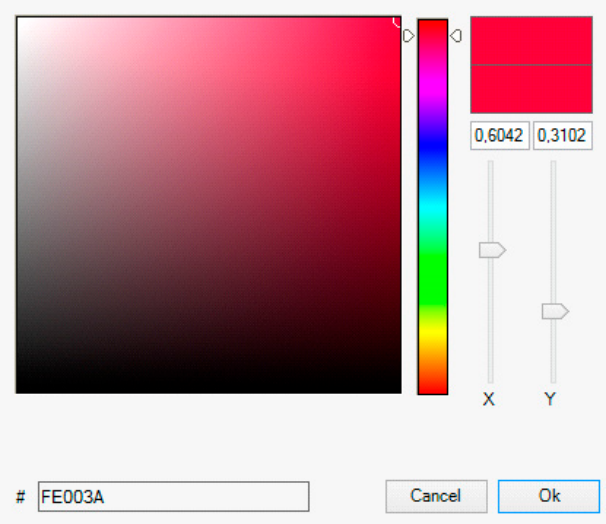

For the type "XY" this color input window is displayed.

12.1.2.1 Groups with flexible Colour Control Types

If a group in ETS is selcted as color type "RGB + color temperature", this group can be used in the scene with both color controls. This type is indicated by the following dialog element:

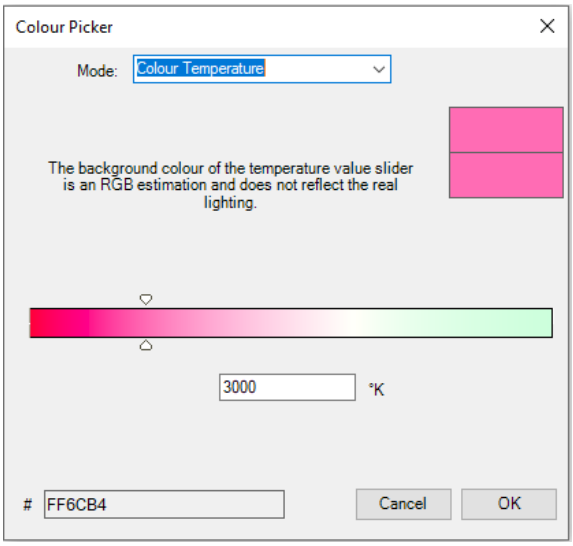

In the upper setting the type of control can be selected.

12.1.3 Programming scenes

Once all scene values have been set and assigned, you need to download the scene onto the DALI ECGs. For this purpose, please press the download button in the top right-hand corner.



A connection to the SpaceLogic KNX DALI Gateway Pro is required. In principle, you can also plan

individual scenes in the ETS ‘offline‘, independently of the DALI system. The DCA only has to be connected to the gateway for the duration of the programming.

12.1.4 Testing a scene event

One way to test the settings for an event is via the conext menu (right click with the mouse).

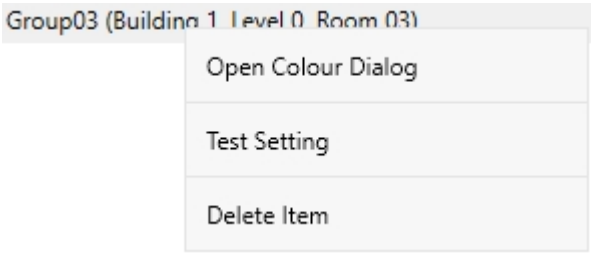

A connection to the SpaceLogic KNX DALI Gateway Pro is required. The command setting the value and colour of the group is executed. This means you can check the correct properties before programming the whole scene. If "Keep Value" or "Keep colour" have been selected, the current values are kept and the new values are not activated.

12.1.5 Testing the scene as a whole



After a scene has been programmed, the button becomes active. Press the button to activate and execute the selected scene. A connection to the SpaceLogic KNX DALI Gateway Pro is required for this purpose.

12.2 Scene configuration via web server

The assignment settings and programming of scenes can be done from the web page via the web server. After starting the web page, switch to the configuration page for this purpose and select "Scenes".

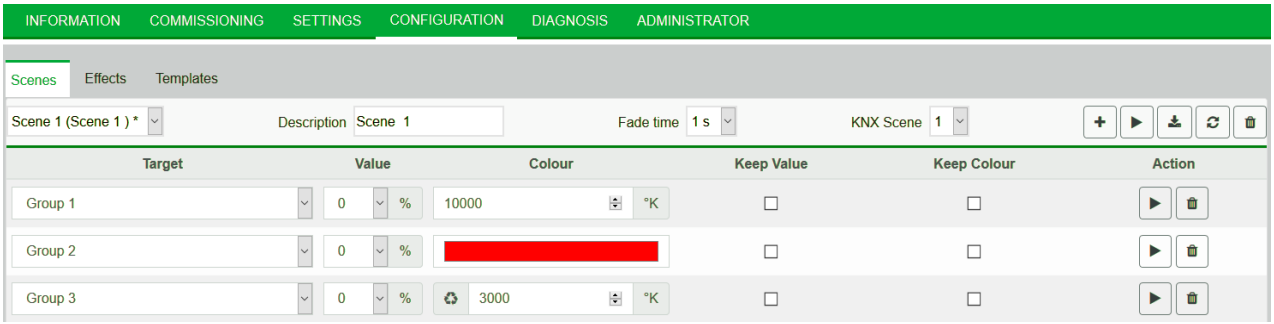

Up to 16 scenes can be configured here. Each scene can be provided with a description text.

12.2.1 Configuration

On the left side, the desired scene can be selected in the drop-down menu. An "asterisk" indicates that this scene has already been defined.

In the description field of the scenes a user friendly name can be assigned. This name can be up to 10 characters long.



If the scene is not to be jumped to immediately when called up, but is to be dimmed to the end value, a dimming time can also be set individually for each scene.

Please note that the dimming time always refers to the complete value range. Accordingly, a dimming time of 30 s means a change in value of 100% within 30 s. If the value is only changed by 50% within the scene, this change will be made within 15 s.

The scene is activated via a 1-byte scene object in accordance with DPT 18.001. In the KNX standard, up to 64 scenes can be addressed. However, only 16 scenes are available in the DALI Gateway. By default, the assignment of the DALI scene to the KNX value which calls up the scenes is set to 1 to 1 assignment. This means that scene 1 of the DALI gateway is activated via the KNX object value 0 (KNX scene 1), or programmed via the object value 128. It is possible to change this assignment. The setting can be made in the header of the scene editor:



In the example above, the selected DALI scene is then called up via the object value 19 (KNX scene 20) or programmed via the value 147. It must be ensured that the assignment is unique. If the same KNX scene is assigned to different DALI scenes, only the first DALI scene is retrieved / programmed by the KNX scene call.

The following actions are available for a selected scene:



- Adding a new entry
- Test this scene (the scene must first be loaded into the gateway)
- Saving the scene
- Reload configuration data
- Deleting a Scene

12.2.2 Colour Settings

If individual ECGs or groups are parameterised for colour control (DT-8), a colour can be set in addition to the light value. To do this, click in the Color field of the desired ECG or group:

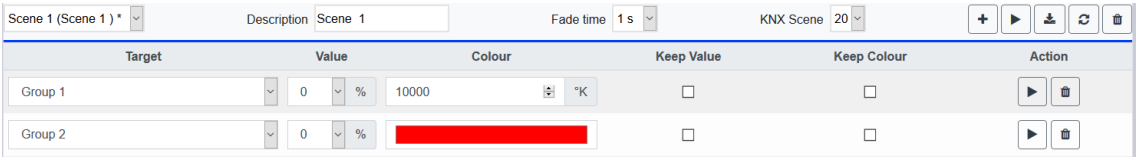

Attention: Setting a colour is only possible if the respective group or ECG has been enabled for colour control. Otherwise the note N/A (not applicable) appears in the "Color" field. A further window opens in which the color data can be set.

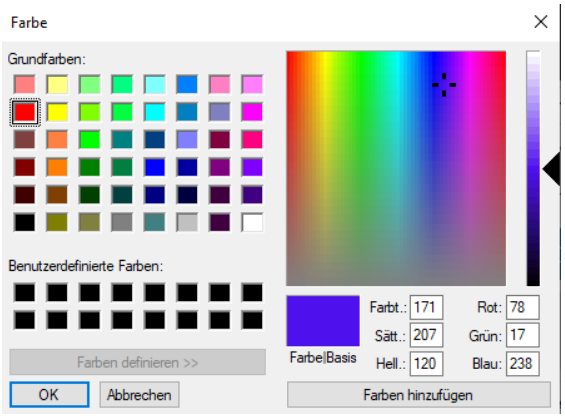

With the confirmation "OK" the set colour for the group / individual ECG is adopted in the scene.



Two additional flags can be used to set whether only the value setting or only the colour setting should be made:

- KV (Keep Value) Value remains as set, only colour is taken into account
- KC (Keep Colour) Colour remains as set, only value is taken into account

12.2.2.1 Groups with variable colour control

If a group in ETS is selcted as color type "RGB + color temperature", this group can be used in the scene with both color controls.
This type is indicated by the following dialog element:



By clicking on the front icon, the input of color temperature in Kelvin changes to the normal color dialog.

12.2.3 Programming the scenes and scene test

Once all entries have been made for all desired scenes, the settings must be loaded from the browser into the device. This is done by pressing the "Save" button.



The scene data are then also transferred simultaneously to the connected ECGs.

During programming, a descriptive text (max. 10 characters) can also be assigned to the respective scene. To do this, the name must be entered in the text field above the scene block before saving.

If the selected scene is to be activated for testing, this can be done using the "Test scene" button.



The scene data can be loaded from the gateway into the web browser using the "Reload scene" button.



12.2.4 Testing an event in the scene

A way to test the setting of an event is in the "Action" column. When the "Play" button is activated, this event is sent to the DALI bus.

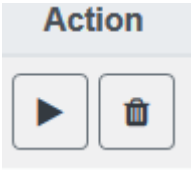

The command with the setting of the value and color is executed for this group or ECG. In this way the desired property can be checked before programming the whole scene. If the properties "Keep value" or "Keep color" are set, the corresponding values are not activated but are kept at the current value.

13 The effect module

In addition to light scenes the Dali Gateway Pro also enables the use of effects. An effect is essentially the process control of light values of different groups and individual ECGs. The individual light values can either be directly controlled or dimmed via a dim value. Please remember that the value relates to a dim time between 0 and 100% (see scene module). The SpaceLogic KNX DALI Gateway Pro enables 16 independent effects. An effect is started or stopped via a 1 Byte object. Set Bit 7 in the object to start the effect. Receiving the object with a deleted Bit 7, will stop the effect.

Altogether, 500 effect steps can be programmed, which can be spread across 16 effects.

13.1 Effect configuration with the DCA

Effect programming and assigning can be done via the DCA. For this purpose, please change from the commissioning to the effect page.

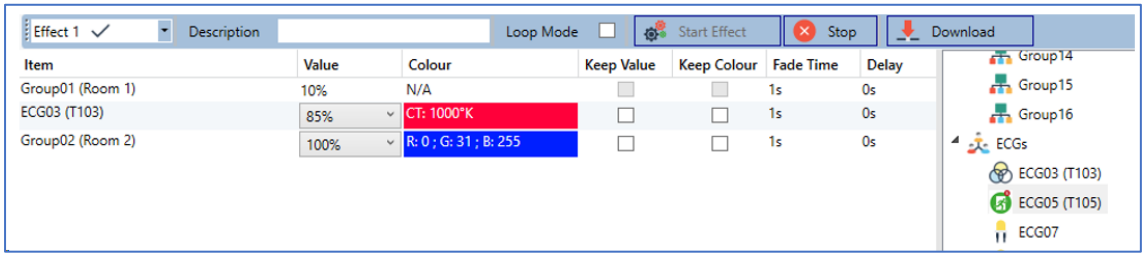

13.1.1 Configuration

On the effect page, select the required effect from the drop down field.

In the description field of the effect a user friendly name can be assigned. This name can be up to 20 characters long.

If the "Loop Mode" setting is checked, this effect is played endlessly and can only be stopped by a stop command.

Drag the groups and individual ECGs that are required for this effect from the tree on the right hand side into the middle field listing the effect steps. The order of the list entries corresponds to the individual effect steps. To change the order within the list, use the mouse to move the entries around.

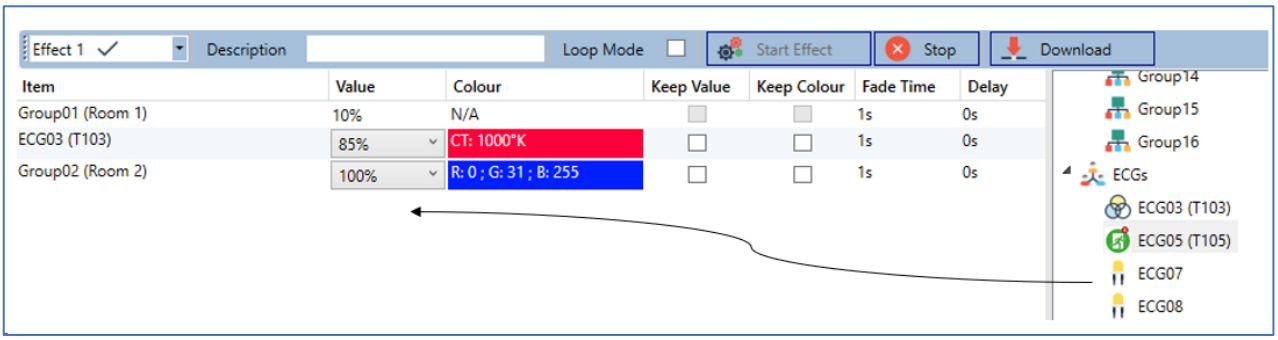

Enter the values required for the scene in the different fields.

Value
Defines the light value between 0 and 100%. The value can be selected via a drop-down field.

Colour
Defines the colour according to the Type of colour control for this group. Double-click on the mouse or use the context menu to open a window and simply select the colour from a colour picker.

Keep value
With this setting, the current value remains unchanged when the scene is recalled. The entry field for the value is disabled with this setting as it is not needed. Any entry in the value field will be ignored.

Keep colour
With this setting, the current colour remains unchanged when the scene is recalled. The entry field for the value is disabled with this setting as it is not needed. Any entry in the colour field will be ignored.

Fade time
Defines the time needed to achieve the required setting. This entry can be used to define fading effects.

Delay
Defines the time until the next event.

To delete an entry, select a group and drag it back into the tree on the right hand side.
Another option to delete an entry is via the context menu (delete element):

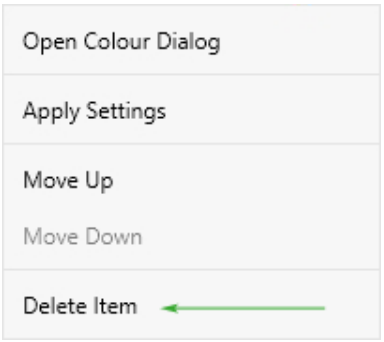

13.1.2 Colour settings

Each group or ECG can only support one Type of colour control.

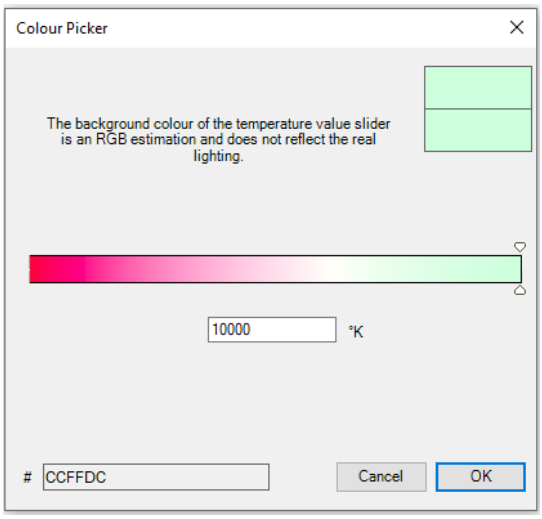

The following color input window is displayed for the "Color Temperature" type.

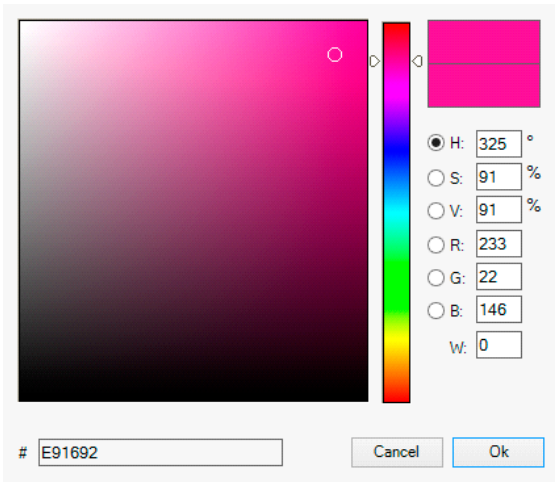

For the "RGB (RGBW)" or "HSV" type, this color input window is displayed.

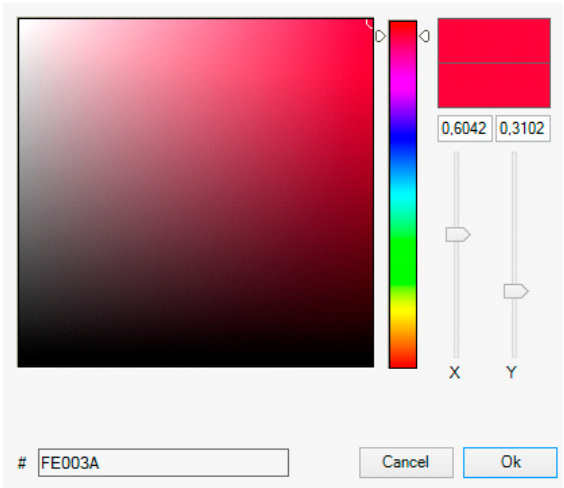

For the type "XY" this color input window is displayed.



For the type RGB + color temperature a selection option is offered in the upper line

13.1.3 Programming effects

Once all effect values have been set and assigned, save the effect on the device. Press the "download" button in the top right hand corner.



A connection to the SpaceLogic KNX DALI Gateway Pro is required for the download. Individual effects can also be planned "offline" in the ETS, independently of the DALI system. The DCA only needs to be connected to the gateway for the download.

13.1.4 Testing an effect event

To test the settings of an event, use the context menu (Right click on a field):

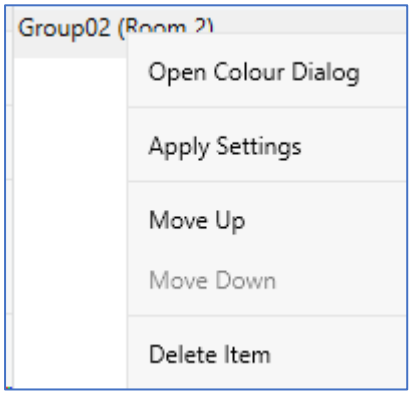

Connection to the SpaceLogic KNX DALI Gateway Pro is required. The command is performed with the value and colour settings that have been defined for this group or ECG. This makes it possible to check properties before the whole effect is programmed. If "Keep value" or "Keep colour" have been set, the respective values will not be activated and the current value will be retained.

13.1.5 Testing the whole effect

After an effect has been programmed, the button is activated. Press the button to start the selected effect. Connection to the SpaceLogic KNX DALI Gateway Pro is required.



To stop an endless (loop mode) effect, press the stop button.

13.2 Effect configuration via web server

The assignment settings and the programming of effects can be done from the website via the web server. After starting the web page, switch to the configuration page and select "Effects".

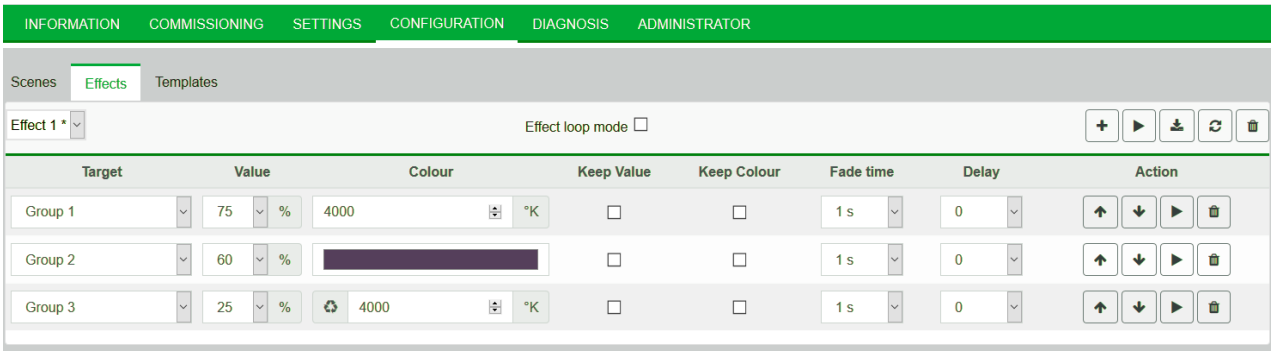

13.2.1 Configuration

On the left side, the desired effect can be selected in the drop-down menu.

An "asterisk" indicates that this effect has already been defined.

If the "Endless" setting is checked, this effect is played endlessly and can only be stopped by a stop command.

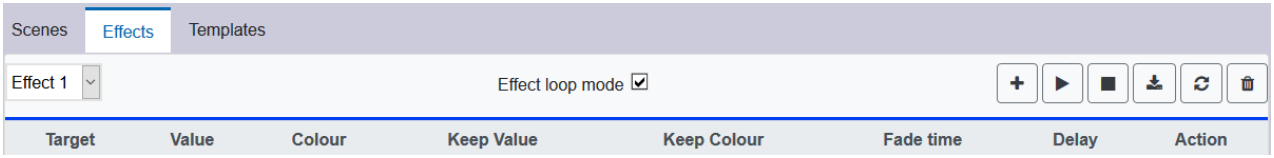

The following actions are available for a selected effect:



- Adding a new entry
- Testing the effect (the effect must first be loaded into the gateway)
- Saving the effects
- Reload configuration data
- Delete effect

Use the "Plus" button to add new entries to the selected effect.

In the DropDown Element you can now select the desired group or the desired single ECG.

The order of the entries in the list corresponds to the order of the individual effect steps. If the order within a list is to be changed, this can be changed using the buttons in the action column.



The desired values for this effect can be entered in the individual entries.

Value
Specifies the brightness value in 0..100% and can be selected via a drop-down field.

Colour
Specifies the color according to the type of color control for this group. To do this, a window is opened by clicking on it to simply select the colour in a colour picker.

Keep value
With this setting, the current value remains unchanged when the effect is called. The input field for the value is deactivated, as it is not taken into account in this function. An entry in the value field is ignored.

Keep color
With this setting, the current color remains unchanged when the effect is called. The input field for the color is deactivated, as it is not considered in this function. An entry in the color field is ignored.

Fade time
With this setting, the time can be defined to reach the desired setting.
This allows you to define crossfade effects.

Delay
The delay defines the time until the next event is set.

Delete
To delete an entry, use the corresponding button in the action column.



13.2.2 Colour settings

If individual ECGs or groups are parameterised for colour control (DT-8), a colour can be set in addition to the light value. To do this, click in the Color field of the desired ECG or group:

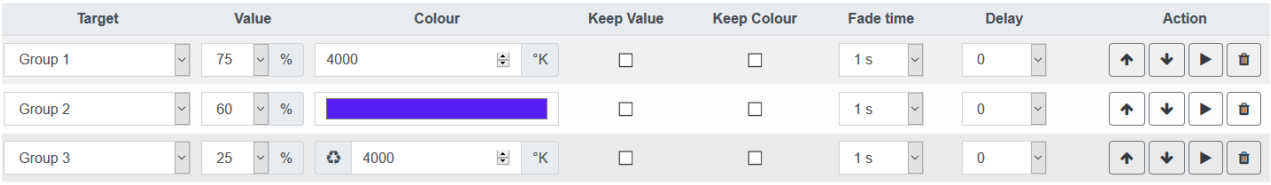

Attention: Setting a colour is only possible if the respective group or ECG has been enabled for colour control. Otherwise the note N/A (not applicable) appears in the "Color" field. A further window opens in which the color data can be set.

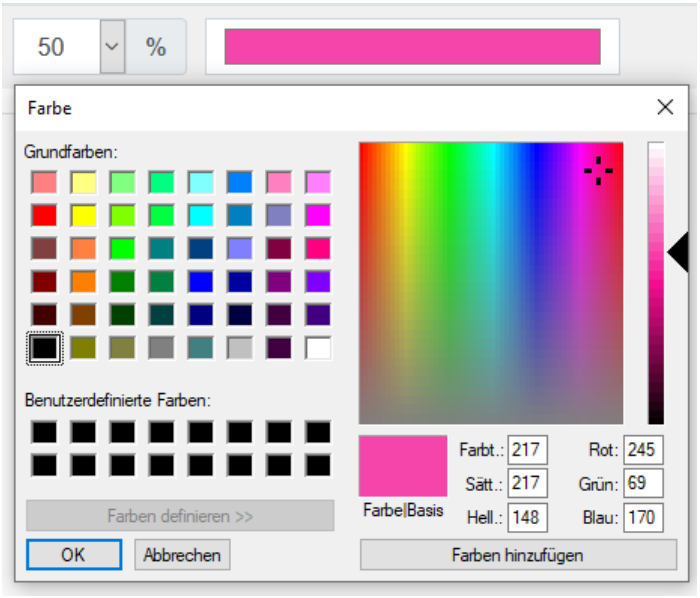

With the confirmation "OK" the set colour for the group / individual ECG is adopted in the effect.

13.2.2.1 Groups with variable colour control

If a group in ETS is selcted as color type "RGB + color temperature", this group can be used in the effect with both color controls.
This type is indicated by the following dialog element:

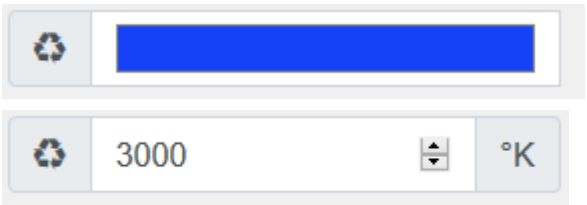

By clicking on the front icon, the input of color temperature in Kelvin changes to the normal color dialog.

13.2.3 Programming the effects and effect test

Once all entries for all desired effects have been made, the settings must be loaded from the browser into the device. This is done by pressing the "Save" button.



If the selected effect should be activated for testing, this can be done by pressing the "Test effect" button.



In case of loop mode the effect can be stopped.



Loading the effect data from the gateway into the web browser is possible by pressing the "Reload Effects" button.



13.2.4 Testing an event in an effect

A way to test the setting of an event is in the "Action" column. When the "Play" button is activated, this event is sent to the DALI bus.

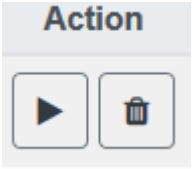

The command with the setting of the value and color is executed for this group or ECG. This way the desired property can be checked before programming the whole effect. If the properties "Keep value" or "Keep color" are set, the corresponding values are not activated but are kept at the current value.

14 Time control module for values and colours

In order to use the colour setting options of DT-8 devices, SpaceLogic KNX DALI Gateway Pro offers an integrated time control module. With this module, users can automatically set a defined light colour and potentially a light value depending on the current time and date. Up to 16 templates are available. A template combines different actions which will trigger an event at a configurable time.

Time control of DT-8 colour ECGS is particularly interesting for white light control. Changes in colour temperature over the course of a day have a positive effect on well-being and efficiency in the work place. Educational institutions, hospitals and many other settings use daytime dependent white light control.

The time control module can also be used to implement general temporal colour changes in DT-8 devices. For example, a building facade can be illuminated in red light in the first half of the night and in blue light in the second half of the night. Automatic adjustment of the dimming value depending on the time is also possible.

14.1 Time schedules configuration with DCA

Time control can be programmed and assigned in the DCA. For this purpose change from the commissioning to the time control page.

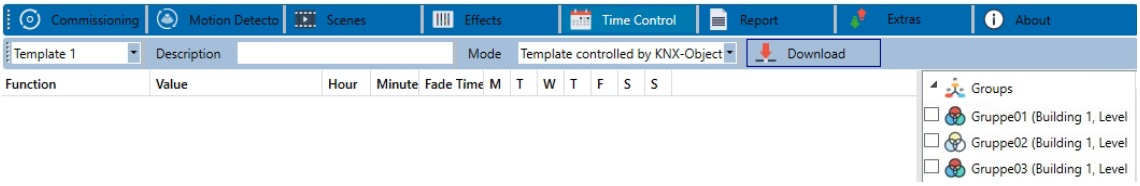

14.1.1 Configuration

Use the drop down on the left hand side to select a template.

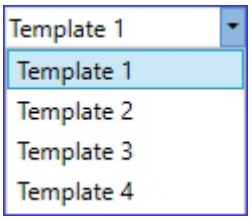

A "tick" means that the template has already been defined.

Use the description field to enter a user friendly name for the template. The name can be up to 20 characters long and is displayed in brackets in the dropdown list for information purposes.

You can also define the behaviour of the template:

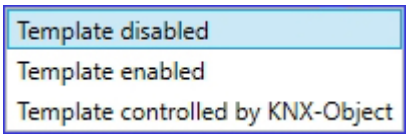

The template can be disabled. By default all templates are enabled. It is also possible to enable or disable the template via a communication object. If you choose the option "control template via object" the corresponding objects are displayed. See chapter: 18.1.4 Time control objects

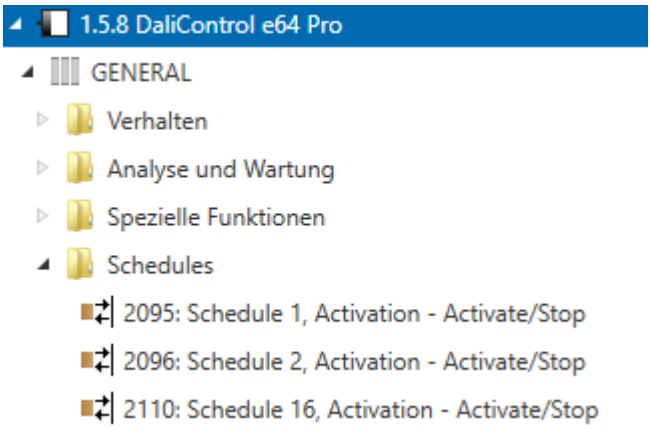

Use the tree on the right hand side to select the DALI groups that you want to include in the template.

The middle part of the page is used to create an action list. All groups that have been selected, automatically perform an action at the configured time. Altogether a maximum of 300 actions can be stored on a DALI gateway if all templates are used. A context menu is available to control and create action lists.

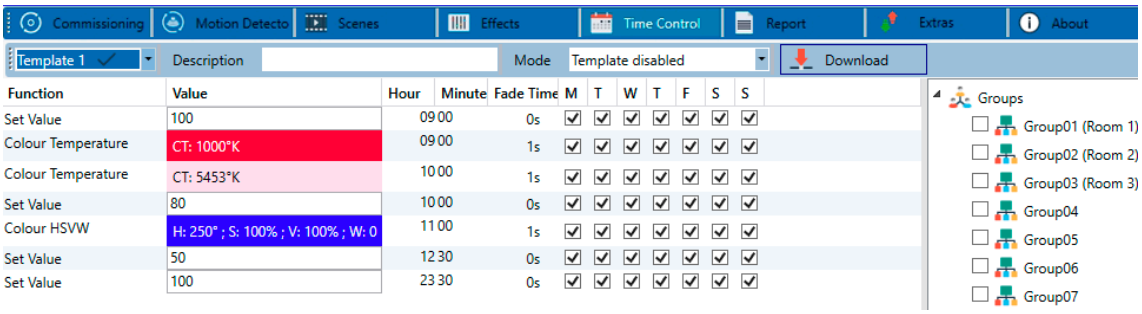

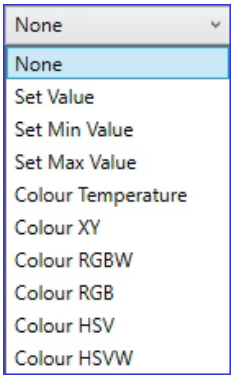

A total of 9 function types are available for time control.
See chapter: 14.1.2Types of action

The creation of action lists and the operation is done as far as possible via the context menu. The context menu opens when the mouse pointer is positioned on an action in a line and the right mouse button is pressed. The following functions are then available for editing and creating action lists:

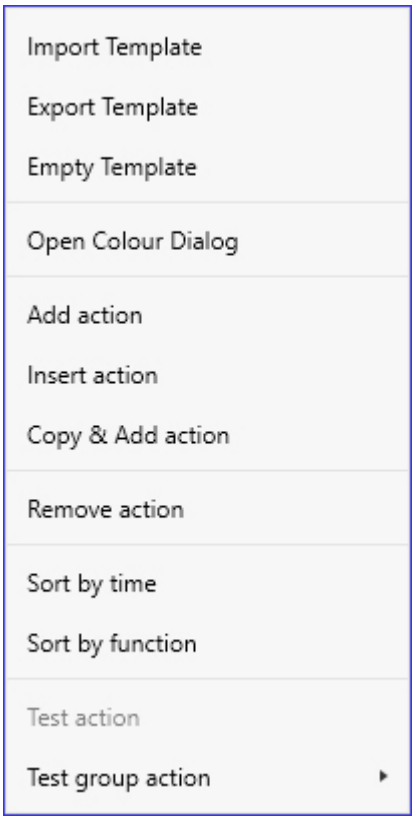

Import template
see 14.1.4 Export/Import

Export template
see 14.1.4 Export/Import

Empty template
Completely removes the configuration of this template.

Add action
Creates a new action and adds it to the end of the list.

Insert action
Creates a new action and inserts it between two existing list entries.

Copy and add action
Copies a selected action and adds it to the end of the list.

Delete action
Deletes a selected action.

Sort by time
Sorts the action list into ascending chronological order.

Sort by function
Sorts the action list according to function entries.

Test action
Immediately executes the chosen action (without regard for any potentially configured transition time) for all selected groups within a template. A connection to the SpaceLogic KNX DALI Gateway Pro is required.

Test group action
Immediately executes the chosen action (without regard for any potentially configured transition time) for a selected group within a template. You can also select the group via the context menu. A connection to the SpaceLogic KNX DALI Gateway Pro is required.

14.1.2 Types of action

Once you have created an action, set the corresponding function via the selection box. For each function, you can select a value, the time of the action and (if you would like the value to slowly cross-fade) a transition time. If you do not want the action to be performed every day, please enter the days of the week when you want to schedule the action. Please remember that only certain value ranges make sense for each function. In principle any value can be entered in the value field. However, if this value exceeds the possible value range, it is automatically limited to the maximum value. (For example, if you enter 200 for the function "Set value”, the maximum value 100% is automatically entered.) The following functions are possible for an action:

Set value
Sets the brightness level of a group. The permitted value range is between 0 and 100%.

MinValue
Sets the minimum dim value of the selected group for relative (4 Bit) and absolute (8 Bit) dimming. When using this action, any minimum dim value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.
This value is reset to the ETS setting after an ETS download.

MaxValue
Sets the maximum dim value of the selected group for relative (4 Bit) and absolute (8 Bit) dimming. When using this action, any maximum dim value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.
This value is reset to the ETS setting after an ETS download.

Colour temperature

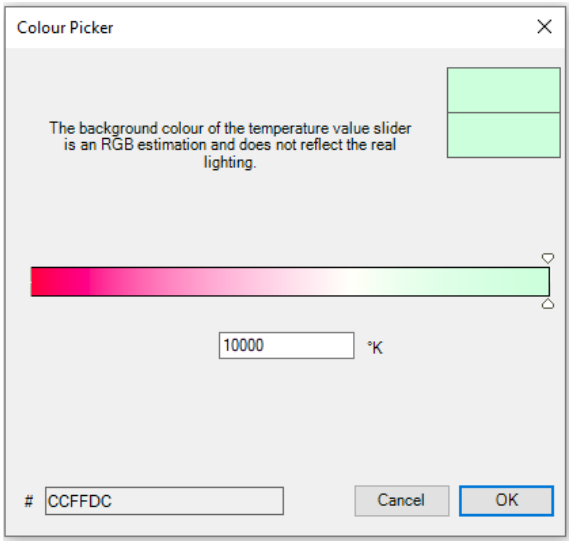

This function sets the colour temperature of DT-8 devices that support the colour temperature setting (TC). On the ECG the colour is also changed if the lamp is turned off at the time of the action. You can enter the colour temperature range. The value range permitted is between 1000 and 10000 K but please remember the physical limits of the connected ECGs and lights.

Colour RGB

Sets the colour values of DT-8 devices that support the colours RGB. On the ECG the colour is also changed if the lamp is turned off at the time of the action. The values for each colour can be entered separately. The permitted value range for R,G and B is between 0 and 255. The final colour is a mixture of the different primary colours according to their percentage.

Colour RGBW

Sets the colour values of DT-8 devices that support the colours RGB or RGBW.

On the ECG the colour is also changed if the lamp is turned off at the time of the action.

The values for each colour can be entered separately. The permitted value range for R,G,B and W is between 0 and 255. The final colour is a mixture of the different primary colours according to their percentage.

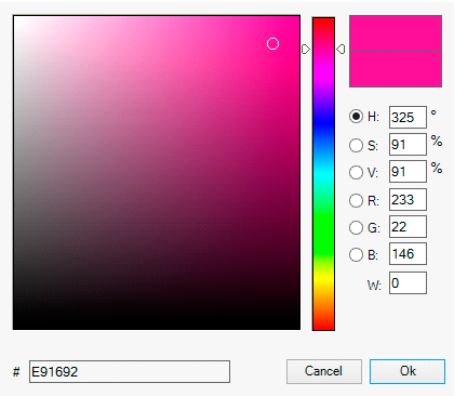

Colour HSV

Sets the colour values of DT-8 devices that support the colours RGB.

However, the value is entered by means of saturation, hue and brightness levels in this case.

On the ECG the colour is also changed if the lamp is turned off at the time of the action.

The permitted value range for the hue is between 0 and 360°, the value range for saturation and brightness is between 0 and 100%.

Colour HSVW

In this function, a separate white value (separate channel) is specified in addition to HSV.

Colour XY

Sets the XY colour of DT-8 devices that support the XY colour space.

On the ECG the colour is also changed if the lamp is turned off at the time of the action. The X and Y coordinates of the colour can be entered separately. The permitted value range for X and Y is from 0.0 to 1.0. Please remember the physical limits of the connected ECGs/lights. Not every colour from the colour spectrum can be set.

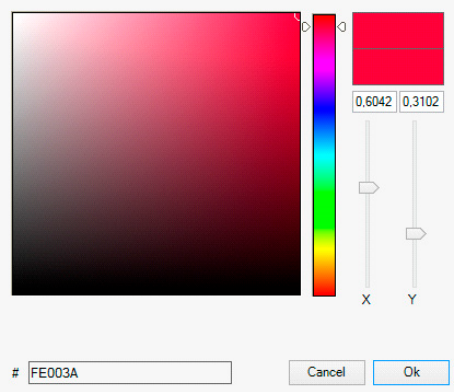

MaxOnValue

Sets the maximum switch-ON value of the selected group or ecg. When using this action, any maximum switch On value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.

This value is reset to the ETS setting after an ETS download.

In principle, every group and ecg can be added to a template independently of the ECG device Types used in the group. Whilst the functions "Set Value", "MinValue" and "MaxValue" work for all device Types, (including, for example, fluorescent lights DT-0 and LED modules DT-6), the colour control functions "Colour Temperature", "Colour XY", "Colour RGBW", "Colour RGB", "Colour HSV"and "Colour HSVW" can only be executed by the connected DT-8 devices.

Other device Types will ignore these actions. This also applies to the selected method. A DT-8 device with XY control, for example, will ignore an RGBW action and vice versa.

If the DT-8 devices within a group or template use different methods but are to perform a colour change at the same time, you need to set up two actions with different functions for the same point in time:

Function	Value	Hour	Minute	Fade Time	M	T	W	T	F	S	S
Colour HSV	H: 246° ; S: 92% ; V: 92%	11	00	1s	☑	☑	☑	☑	☑	☑	☑
Colour Temperature	CT: 2200°K	11	00	1s	☑	☑	☑	☑	☑	☑	☑
Set Value	66	11	00	0s	☑	☑	☑	☑	☑	☑	☑

Once an action table within a template is complete, you need to save the template into the DALI gateway. Please press the download button to do so.



Please remember that time-dependent actions can only be performed if they have previously been saved on the gateway. You can, however, test individual actions via the test button without saving them on the gateway. This does not change the data on the device.

14.1.3 Disable/enable

A template can be enabled or disabled in the header of the editor.

This makes it possible to fully prepare a template whilst disabling its execution. This way you can, for example, create two templates: one for a building in normal mode and one for the holiday period. You can now simply enable the required template without having to modify any of the actions. It is even easier to control time-dependencies via external objects. If you select this setting for a template, you can control it via the external objects 2095ff.



The value on receipt of the object determines whether a template is disabled or enabled.

14.1.4 Export/Import

To reuse a previously created template it is possible to export the template. The resulting xml file can be saved separately so that it can be reused in another project or template.
The export and import commands can be found in the context menu.



The template is saved as an XLM file in the chosen destination directory.

14.2 Time schedules configuration via web server

The assignment settings and the programming of schedules can be done from the website via the web server. After starting the web page, switch to the configuration page for this purpose and select "Templates".

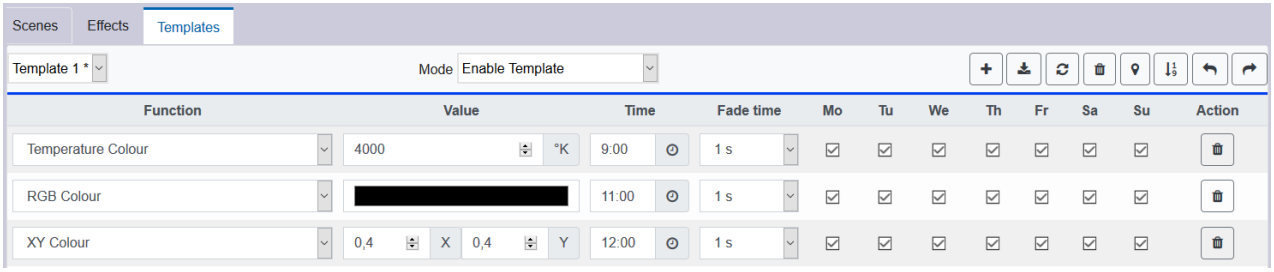

14.2.1 Configuration

On the left side you can first select the desired template in the drop-down menu.
An "asterisk" indicates that this template has already been defined.



The behaviour of the template can also be defined, see Chapter: 14.1.3 Disable/enable

The following actions are available for a selected template:



- Adding a new entry
- Saving the template
- Reload configuration data
- Delete template
- Assignment of groups and/or TOEs
- Sorting the entries
- Import of the configuration from an xml file
- Export of the configuration to an xml file

With the "Plus" button new entries can be added to the selected template.
In the drop-down element you can now select the desired action type, see next chapter.

Depending on the action type, values and colors as well as the time of execution including the desired weekdays can be selected.

14.2.2 Types of action

Once you have created an action, set the corresponding function via the selection box. For each function, you can select a value, the time of the action and (if you would like the value to slowly cross-fade) a transition time. If you do not want the action to be performed every day, please enter the days of the week when you want to schedule the action. Please remember that only certain value ranges make sense for each function. In principle any value can be entered in the value field. However, if this value exceeds the possible value range, it is automatically displayed a red border to indicate the not matching input value.

The following functions are possible for an action:

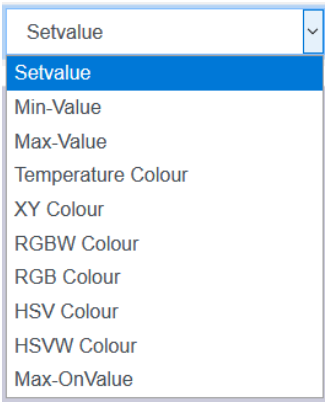

Set value
Sets the brightness level of a group. The permitted value range is between 0 and 100%.

MinValue
Sets the minimum dim value of the selected group for relative (4 Bit) and absolute (8 Bit) dimming. When using this action, any minimum dim value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.
This value is reset to the ETS setting after an ETS download.

MaxValue
Sets the maximum dim value of the selected group for relative (4 Bit) and absolute (8 Bit) dimming. When using this action, any maximum dim value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.
This value is reset to the ETS setting after an ETS download.

Colour temperature
This function sets the colour temperature (TC). On the ECG the colour is also changed if the lamp is turned off at the time of the action. You can enter the colour temperature range. The value range permitted is between 1000 and 10000 K but please remember the physical limits of the connected ECGs and lights

Colour RGBW
Sets the colour values of DT-8 devices that support the colours RGB or RGBW.
On the ECG the colour is also changed if the lamp is turned off at the time of the action.
The values for each colour can be entered separately. The permitted value range for R,G,B and W is between 0 and 255. The final colour is a mixture of the different primary colours according to their percentage.

Colour RGB
Sets the colour values of DT-8 devices that support the colours RGB.
On the ECG the colour is also changed if the lamp is turned off at the time of the action. The values for each colour can be entered separately. The permitted value range for R,G and B is between 0 and 255. The final colour is a mixture of the different primary colours according to their percentage.

Colour HSV

Sets the colour values of DT-8 devices that support the colours RGB.

However, the value is entered by means of saturation, hue and brightness levels in this case.

On the ECG the colour is also changed if the lamp is turned off at the time of the action.

The permitted value range for the hue is between 0 and 360°, the value range for saturation and brightness is between 0 and 100%.

Colour HSVW

In this function, a separate white value (separate channel) is specified in addition to HSV.

Colour XY

Sets the colour temperature of DT-8 devices that support the XY colour space display (XY).

On the ECG the colour is also changed if the lamp is turned off at the time of the action. The X and Y coordinates of the colour can be entered separately. The permitted value range for X and Y is from 0.0 to 1.0. Please remember the physical limits of the connected ECGs/lights. Not every colour from the colour spectrum can be set.

MaxOnValue

Sets the maximum ON value of the selected group or ecg. When using this action, any maximum On value set in the ETS parameters is automatically overwritten. The permitted value range is between 0 and 100%.

This value is reset to the ETS setting after an ETS download.

In principle, every group can be added to a template independently of the ECG device Types used in the group. Whilst the functions "Set Value", "MinValue" and "MaxValue" work for all device Types, (including, for example, fluorescent lights DT-0 and LED modules DT-6), the colour control functions "Colour Temperature", "Colour XY", "Colour RGBW", "Colour RGB" and "Colour HSV" can only be executed by the connected DT-8 devices. Devices of other device types will ignore the actions. This also applies with regard to the selected procedure.

Other device Types will ignore these actions. This also applies to the selected method. A DT-8 device with XY control, for example, will ignore an RGBW action and vice versa. If the DT-8 devices within a group or template use different methods but are to perform a colour change at the same time, you need to set up two actions with different functions for the same point in time:

14.2.3 Disable/enable

In the page header, the respective template can be released or locked.



This option allows you to prepare templates completely but block their execution. For example, two templates could be created: One for the normal operation of a building and another one for the holiday period. By simply selecting the desired template, the desired template can be released without having to manipulate any actions. Time dependencies can be implemented even more conveniently using external objects. If this setting is selected for a template, the control can be carried out via the external objects 2095ff.

14.2.4 Assignment of groups and ECGs

By selecting the "Assignment" button, the desired groups and ECGs that are to work with this schedule can be selected.



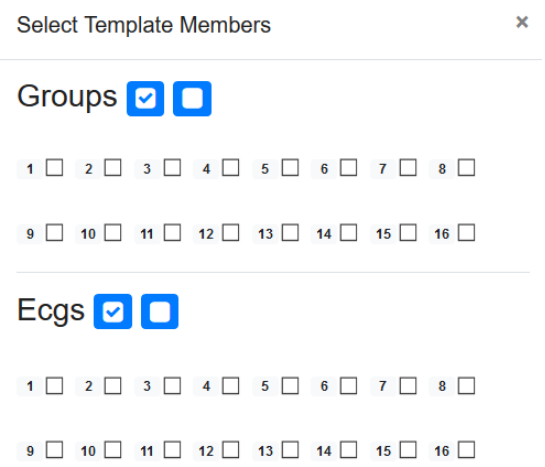

14.2.5 Programming the time programs

Once all entries for all desired templates have been made, the settings must be loaded from the browser into the device. This is done by pressing the "Save" button.



14.2.6 Export/Import

In order to be able to reuse an already created template, it is possible to export it. The created XML file can be saved separately to be used again in another project or in another template. The export or import can be done with the following buttons:



Import of a time program



Export of a time program

The template is saved as an XLM file in the desired target directory.

14.3 Timer

To ensure the safe operation of the time control module the exact time and date are required on the device. This has to be provided by the KNX in form of 3 Byte communication objects. The precision of the DALI gateway's internal time calculation is limited. It is therefore essential to update the time at least once a day. When the application is started the device automatically sends a read request for time and date to the KNX bus.

The time control module remains completely disabled until an updated time has been received. Actions are only performed after receipt of a valid time. Please remember that the 3 Byte time object also transmits information about the current weekday (Monday – Sunday). (For some KNX timers this is configurable). If a 3 Byte object is received without this information, the weekday is not checked. This means that an action which has, in fact, only been enabled for Saturday and Sunday would also be performed on a Monday.

As the date is not calculated internally, the DALI gateway automatically sends a read request to the date object at 00:01 and at 00:04. At the same time, the time object is also automatically queried. A further read request is sent at 3:01. This avoids any potential failures when clocCW change to daylight saving time and vice versa.

15 Self-contained battery emergency lights

The SpaceLogic KNX DALI Gateway Pro also supports ECGs for the control of self-contained battery emergency lights. (Device Type 1 according to EN 62386-202). Such devices contain a battery within the lamp that will operate the light for a certain time period in case of loss of power supply.

15.1 Self-contained battery emergency lights

Principally a distinction is made between switchable and non-switchable devices for self-contained battery lamps. A switchable device can be directly connected to a lamp just like a ‘normal’ ECG. In normal mode xthe light (usually an LED) can be switched and dimmed via DALI. The standard switch parameters and objects are available for these devices.

In contrast to the ’switchable‘ device, a ’non-switchable‘ device (converter) can only control the connected lamp in an emergency. The light is normally either always on or always off. As these devices do not allow direct switching, there are no objects available for this purpose.

During both new and post-installation the SpaceLogic KNX DALI Gateway Pro recognises automatically, whether the connected device is a ‘switchable’ or ‘non-switchable’ ECG.

Sometimes special, non-switchable converters are used together with "normal”DALI ECGs in a light. These lights are therefore called emergency lights with 2 DALI devices. The two ECGs make a device pair that shares a common light. The ‘non-switchable‘ device uses the DALI communication to query the device status and to initiate mandatory test phases. The switchable device controls the light in normal mode.

However, because of the DALI structure with its random assignment of short addresses, the pairing of a ‘normal‘ device with a ’non-switchable‘ device does not occur automatically. It has to be performed manually on the parameter page in ETS. The assignment is crucial for failure analysis purposes as ‘non-switchable‘ devices usually share the connected lamp with a ‘normal’ device. Without the assignment, a lamp failure may be double-counted. In addition, the ‘normal’ ECG in a pair is usually automatically disconnected from the power supply when the emergency light is tested. This loss of function generates an ECG failure. However, by making a pair, the gateway recognises automatically, whether a real ECG failure has occurred or whether the corresponding converter has simply been tested. Only real ECG failures are taken into account for the analysis.

15.2 Identification of self-contained battery emergency lights

For identification after new/reinstalled single-battery emergency lights, the identification process is started when "flashing mode" is selected. Usually the status LED of the emergency light flashes. However, please observe the respective description of the light. Since the status LED is not executed or visible with some lights, a function test can be started alternatively. During the function test, the ECG usually switches the luminaire on for a few seconds.

15.3 Converter inhibit mode

Self-contained battery emergency lights always change into emergency mode if there is a power supply failure. The lamp is now operated by the internal battery. However, it may become necessary at times to cut off the power supply, for example during maintenance work or the commissioning phase of a building. To prevent the lights from switching into emergency mode, the converters connected to the SpaceLogic KNX DALI Gateway Pro can be disabled via the pushbuttons and display on the device (see above). This converter inhibit mode is only available for all connected devices at the same time. If the power supply is turned off within 15 minutes after activating the mode, the connected lights do not change into emergency mode and the lights remain switched off. When the power resumes, the lights return to normal. If the 15 minutes run out without a power loss, all converters are automatically reset to normal mode.

15.4 Test mode for self-contained battery emergency lights

The SpaceLogic KNX DALI Gateway Pro supports the execution and recording of mandatory tests for self-contained battery emergency lamps.

Attention: The legal regulations and norms vary in different countries. Please make sure that you comply with all country-specific requirements.

The SpaceLogic KNX DALI Gateway Pro supports functional tests, long duration tests and battery status tests. Functional and duration tests can be started externally via KNX telegrams (1 Byte telegrams, see below) or via the device website. Alternatively you may choose to set automatic test intervals. This means tests are performed automatically via the connected converters. (Please check the converter description for the exact function). After a test has been completed, the test results are available on the KNX bus via communication objects and they may be recorded in the visualisation. The corresponding objects are updated with the test result and automatically sent after every new test. Please see chapter: 18.1.3.2 Objects for emergency for the exact function.

Alternatively, test results can be displayed on the website if you select the respective converter.

15.5 Emergency Test Results

15.5.1 DCA report

The "Report" tab displays statistical data on the fault status of the connected ECGs, as well as the test reports of the connected emergency luminaires. In the upper part the following information is displayed:

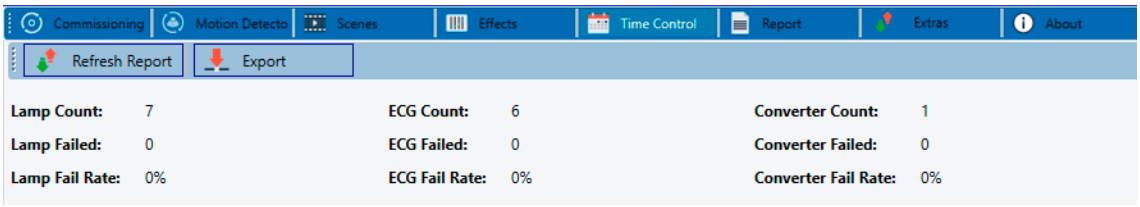

- Lamp Count
- ECG Count
- Converter Count
- Lamp failed
- ECG failed
- Converter failed
- Lamp failure rate
- ECG failure rate
- Converter failure rate



Press the "Refresh" button to display the test reports (Result of the last emergency lighting test of all emergency lights). This information is directly obtained from the emergency lights via a DALI command.

Date
ECG: Number of ECGs (ETS Definition)
ECG Name: Name of the ECG assigned by the ETS
Mode: FT= Function test; DT: Duration test; BT: Battery test
Result: During a battery test the battery status is displayed; during a duration test the time of the test is displayed.
Converter: green: no failure; red: Converter was faulty during the test (DALI QUERY 252: bit 0)
Duration: green: no failure; red: Duration of the battery is insufficient (DALI QUERY 252: bit 1)
Battery: green: no failure; red: Battery faulty (DALI QUERY 252: bit 2)
Lamp: green: no failure; red: Emergency light is faulty (DALI QUERY 252: bit 3)
Delay: green: no failure; red: Maximum delay time has been exceeded during function or duration test (DALI QUERY 252: bit 4 oder bit 5)
Test: green: ok

15.5.1.1 Detailed information about emergency lights

Double-click on an emergency light (converter) to display detailed information.

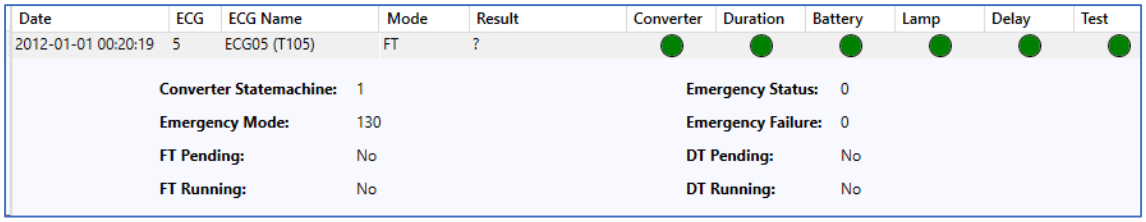

Converter status: Status according to DTP 244.600:

0: Unknown

1: Normal mode active, all OK

2: Inhibit mode active

3: Hardwired inhibit mode active

4: Rest mode active

5: Emergency mode active

6: Extended emergency mode active

7: FT in progress

8: DT in progress

Emergency light status: Status according to DALI Query_Emergency_Status 253

Emergency light mode: Status according to DALI Query_Emergency_Mode 250

Emergency light failure: Status according to DALI Query_Failure_Status 252

15.5.1.2 Exporting test results



Press the Export button to save the test results in an xml file. The file can be saved in any location.

15.5.2 Website Report

The test results of the emergency lights can be displayed on the website via the web server. After starting the web page, switch to the diagnostics page for this purpose and select "Report".

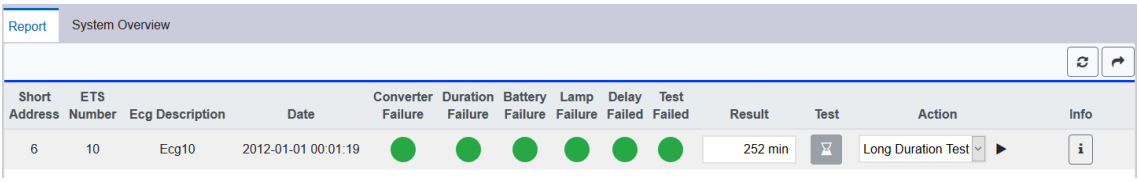

This table lists all configured emergency luminaires:

Short address: real address of the ECG

ECG: Number of the ECG (ETS definition)

ECG Description: the name given to this ECG by the ETS

Date: Date of the last test result

Converter: green: no error; red: converter was faulty during test (DALI QUERY 252: bit 0)

Duration: green: no error; red: battery rated time insufficient (DALI QUERY 252: bit 1)

Battery: green: no error; red: battery defective (DALI QUERY 252: bit 2)

Lamp: green: no error; red: emergency lighting lamp defective (DALI QUERY 252: Bit 3)

Delay: green: no error; red: maximum delay time in function test or duration test exceeded (DALI QUERY 252: bit 4 or bit 5)

Result: During a battery test, the charge state of the battery is displayed; during an endurance test, the time of the test is displayed

Testing:

	FT= Functoin Test
	DT: Duration Test
	BT: Battery Test

Action:

Here you can choose between function test, endurance test and battery test. The test is started with the following key:

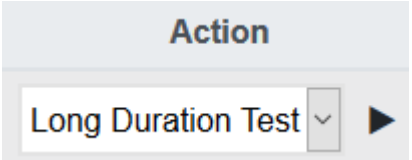

15.5.2.1 Detailed information of an emergency lamp

Info: The Info button displays detailed information:

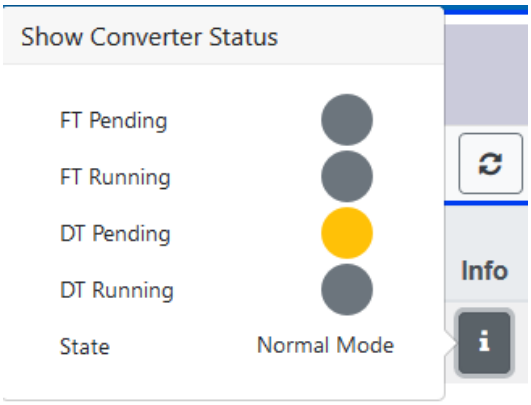

15.5.2.2 Exporting the test results



Press the Export button to save the test results in an xml file.

The storage location is freely selectable.

16 DCA Extras

The menu item Extras offers further special functions.

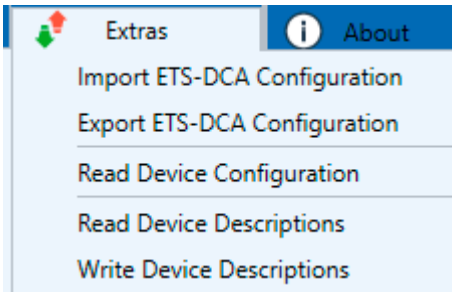

Import device configuration
A previously saved device configuration can be loaded into the ETS with this function.

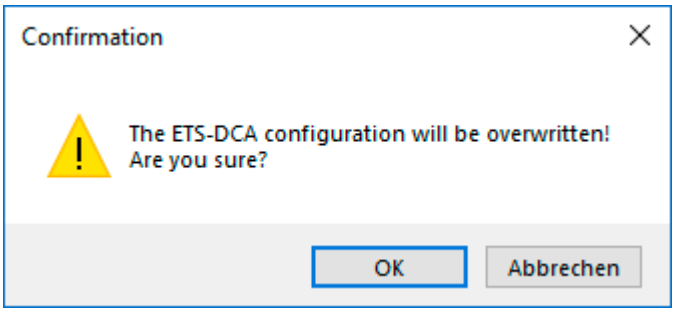

Please remember that all DCA data in the ETS will be overwritten with this data. Press the "Restore" button under commissioning in order to load the configuration onto the Dali gateway. See chapter: 10.1.9 Restoring the DALI configuration

Export device configuration
The ETS DCA configuration can be saved as an xml file.

Read device configuration
All data from the DALI gateway is exported and transferred to the ETS-DCA configuration.

Note: This is especially important if you have previously worked with the website. Description texts are not read automatically. To do this, the separate menu item "Read description texts" must be selected.

Read description texts
The description texts of the ECGs, groups and scenes can also be saved on the DALI gateway. The descriptions on the device are available on the device website. Please remember that the device allows only 20 characters per name. In case the website was previously used for commissioning, the texts are transferred to the ETS.

Write description texts
The description texts of the ECGs, groups and scenes can be saved on the DALI gateway. The descriptions on the device are available on the device website.

17 Commissioning/operating via display and pushbuttons

You can commission the connected DALI segment and set and change some functions and tests via the three pushbuttons (MOVE, Set/Prg, ESC) and the 2x12 character display on the front of the device. The user concept is menu-based. Depending on the menu position, you can select two sub-levels. The current menu position is shown on the display. To navigate within the menu, press the pushbuttons briefly.

The Move key is used to select the next menu item within a level. With a short push on the Prg/Set button you reach the respective subordinate level. Pressing the ESC key causes leaving the selected level and returning to the superordinate level.

17.1 Main menu level 1

The main menu (level 1) has the following structure:

DALI GATEWAY Pro – V1.0	The product name and firmware version are displayed. The sub-menu can be used to set the display language.
NETWORK IP ADDRESS	This sub-menu displays the IP address set in the ETS or assigned by the DHCP server.
NEW INSTALLATION	When a DALI segment is newly installed, use the sub-menu to reset the connected DALI devices and automatically search for ECGs. **Unlike with a new installation that was started through DCA or web server, the ECGs in this case are directly assigned 1:1 to the real ECGs.**
POST INSTALLATION	Use this sub-menu to start the automatic search process and possibly adjust the configuration following a post-installation of DALI ECGs.
ECG EASY REPLACEMENT	Use this sub-menu to active the ECG quick exchange function and possibly program and integrate individually replaced ECGs into the system.
GROUP ASSIGNMENT	Identifies ECGs and assigns them to DALI groups.
GROUP TEST	Switches programmed groups for test purposes.
SCENE TEST	Tests individually programmed scenes.
SYSTEM TEST	Use this sub-menu to individually load any existing system failures.

MAINTENANCE ECG/LAMP	Resets operating hours.
CONVERTER INHIBIT MODE	Activates the converter inhibit mode in the installation phase.

To perform a function or change a configuration within a sub-menu, go to the respective position and change into programming mode. To change into programming mode, hold the Prg/Set button for more than 2 seconds. Once the function is in programming mode, a ➔-symbol appears in the display. If the programming mode is active, use the Move button to change a parameter or setting. Briefly press the Prg/Set button again to complete the process and save the set parameter or activate the function.

17.2 Sub-menu level 2

17.2.1 Sub-menu language

The sub-menu language has the following structure:

DALI Gateway Pro – V3.0	The product description and firmware version are displayed. The display language can be set in the sub-menu.
LANGUAGE GERMAN	The currently set display language is shown. Hold the Prg/Set button to change into programming mode. Use the MOVE button to choose from one of the following languages: GERMAN, ENGLISH, FRENCH, SPANISH, ITALIAN, DUTCH, SWEDISH, DANISH. Briefly press the Prg/Set button again to save the configuration. The display now worksin the selected language. **Hint:** The language will be activated after a restart of the device.

17.2.2 Sub-menu IP network / address

The sub-menu IP/address has the following structure:

NETWORK IP ADDRESS	Briefly press the Prg/Set button to change from the main menu IP ADDRESS to the sub-menu.
DHCP: 192. 168.004.xxx	This sub-menu displays the IP address currently set in the ETS or assigned by the DHCP-Server.

17.2.3 Sub-menu new installation

The sub-menu new installation has the following structure:

NEW INSTALLATION	Briefly press the Prg/Set button to change from the main menu NEW INSTALLATION to the sub-menu SEARCH ECGs via PROG-MODE.

SEARCH ECGs via PROG-MODE	This sub-menu displays the IP address currently set in the ETS or assigned by the DHCP-Server.
FOUND ECGs: xx	Use this sub-menu to reset the connected DALI devices and automatically search for ECGs during a new installation.

17.2.4 Sub-menu post-installation

The sub-menu post-installation has the following structure:

POST- INSTALLATION	Briefly press the Prg/Set button to change from the main menu POST- INSTALLATION to the sub-menu SEARCH ECGs via PROG-MODE.
SEARCH ECGs via PROG-MODE	Hold the Prg/Set button to change into programming mode. Briefly press the Prg/Set-button again to start the verification and search process. The device searches for the connected ECGs via their long address and automatically compares them to the previous configuration
DELETED ECGs: x	If ECGs have been removed from the DALI segment, the entries are deleted from the device. The number of deleted devices is displayed during the verification process
NEW ECGs: x	After that, the DALI segment is searched for newly installed devices. Newly added ECGs are automatically reset and any previously programmed parameters and group assignments are deleted. Depending on the number of connected ECGs the search process may take a few minutes. During the search process, the number of newly found devices is shown in the display.
DELTED/NEW ECGs: x/x	Once the whole process (verification and search) is complete, the display shows both the deleted and the newly found ECGs (deleted devices / new devices from left to right, see picture on the left). Press the ESC button (or wait for about 30 seconds) to return to the level above.).

17.2.5 Sub-menu ECG quick exchange

The sub-menu ECG quick exchange has the following structure:

ECG QUICK EXCHANGE	Briefly press the Prg/Set button to change from the main menu ECG QUICK EXCHANGE to the sub-menu SEARCH ECGs via PROG-MODE.
SEARCH ECGs via PROG-MODE	Hold the Prg/Set button to change into programming mode. Briefly press the Prg/Set-button again to start the quick exchange. The device first check if one or several ECGs in the system were faulty. It then automatically looCW for newly connected ECGs in the segment. The quick exchange is only possible if just one ECG in the segment was faulty and one new ECG is found. If the process is successful, the number of the replaced ECG is shown in the display.
ECG xx REPLACED	If the search process cannot be completed because the required conditions are not met, an failure code appears in the display.

ERROR TYPEE xx	If the search process cannot be completed because one of the conditions necessary for the quick exchange is not fulfilled, an error code is shown in the display. The displayed error codes have the following meaning: - **Failure Type 7**: No faulty ECG - **Failure Type 8**: More than one ECG faulty - **Failure Type 9**: No new ECG found - **Failure Type 10**: ECG has wrong device Type - **Failure Type 11**: More than one new ECG

Press the ESC button (or wait for about 30 seconds) to return to the level above.

17.2.6 Sub-menu group assignment

The sub-menu group assignment has the following structure:

GROUP ASSIGNMENT	Briefly press the Prg/Set button to change from the main menu GROUP ASSIGNMENT to the sub-menu. Within this menu the individual ECGS that were found during the search process can be assigned to 16 DALI groups and previous assignments can be modified.
ECG NR.: xx GROUP: --	Briefly press the MOVE button to run through the different ECGs. The number of the selected ECG is shown in the first display line. As long as the ECG is selected, the connected lamp is flashing. The programmer can thereby determine which lamp is assigned to the number.
KONV. NR.: xx GROUP: --	If the selected device is a converter for emergency lights, the selection sets the device into identification mode and the display shows the word CONV. For identification purposes, the function LED on the converter flashes during the test (see user manual for the converter).
KONV. NR.: xx GROUP: xx	Hold the Prg/Set button to change into programming mode. Briefly press the MOVE button again to select the group that you want to assign the ECG to. If the group is selected, briefly press the Prg/Set button to confirm and save the setting. Press the ESC button (or wait for about 30 seconds) to return to the level above.

17.2.7 Sub-menu group test

The sub-menu group test has the following structure:

GROUP TEST	Briefly press the Prg/Set button to change from the main menu GROUP TEST to the sub-menu. Within the menu, groups can be switched either individually or all together (ALL GROUPS TEST = BROADCAST) to test the installation.
GROUP: X TEST	Briefly press the MOVE button to run through the individual groups. The number of the selected group is shown in the first display line.
GROUP: X ---> OFF	Hold the Prg/Set button to change into programming mode. Briefly press the Move button to select whether you would like to switch the group on or off. Briefly press the Prg/Set button to execute the selected command. Press the ESC button (or wait for about 30 seconds) to return to the level above.

17.2.8 Sub-menu scene test

The sub-menu scene test has the following structure:

SCENE TEST	Briefly press the Prg/Set button to change from the main menu SCENE TEST to the sub-menu. Within the menu you can invoke all scenes for test purposes or program newly set light scenarios into the scene.
SCENE: X TEST	Briefly press the MOVE button to run through the individual scenes. The number of the selected scene is shown in the first display line.
SCENE: X ----> INVOKE	Hold the Prg/Set button to change into programming mode. Briefly press the Move button to choose whether you would like to invoke or save a scene. Briefly press the Prg/Set-Taste button to execute the selected command and either invoke or save the scene. Press the ESC button (or wait for about 30 seconds) to return to the level above.

17.2.9 Sub-menu system test

The sub-menu system test has the following structure:

SYSTEM TEST	Briefly press the Prg/Set button to change from the main menu SYSTEM TEST to the sub-menu. Within the menu you can check for any potential failures.
DALI NO ERROR	If there is no failure, this is shown in the display. The following failures can be recognised by the system. They are shown in the display and also simultaneously set off the red failure LED:
DALI ERROR	- DALI short-circuit - Lamp fault with the lamp or ECG number being displayed - ECG failure with display of the ECG number - No KNX Bus In case of a DALI short-circuit, no further failures can be recognised. For all other failure Types, several failures can be recognised at the same time. Within the menu you can toggle between different failures by briefly pressing the Move button.
LAMP xx NO ERROR	The number of the ECG is displayed for lamp failures. This means that an failure can be easily localised.
ECG xx NO ERROR	The number of the ECG is displayed for ECG failures. This means that an failure can be easily localised.
KNX NO ERROR	If there are no failures, this is shown on the display.

17.2.10 Sub-menu maintenance ECG/lamp

The sub-menu maintenance ECG/lamp has the following structure:

MAINTENANCE ECG/LAMP	Briefly press the Prg/Set button to change from the main menu MAINTENANCE ECG/LAMP to the sub-menu. Within the menu you can start the burn-in of a lamp and reset the reader for its operating hours.
ECG NR.: xx xxx h	Briefly press the MOVE button to run through the individual ECGs. The number of the selected ECG is shown in the first display line. Line 2 shows the number of operating hours since the last reset.
ECG. NR.: xx RESET	Hold the Prg/Set button to change into programming mode. Briefly press the Prg/Set button to execute the selected command. Press the ESC button (or wait for about 30 seconds) to return to the level above.

17.2.11 Sub-menu converter inhibit mode

The sub-menu converter inhibit mode has the following structure:

CONVERTER INHIBIT MODE	Brefly press the Prg/Set button to change from the main menu CONVERTER INHIBIT MODE to the sub-menu. Within the menu you can turn on the Inhibit Mode for all connected self-contained battery emergency lights. If the mains power supply is turned off within 15 minutes from activating the Inhibit Mode, the lights do not change into emergency mode but remain switched off. Particularly during the initialisation phase of a building this operating mode may be required to prevent the emergency lights from being turned on constantly
INHIBIT MODE via PROG-MODE	Hold the Prg/Set button to change into programming mode.
INHIBIT CONVERTER?	Briefly press the Prg/Set button again to activate the Inhibit Mode. Press the ESC button (or wait for about 30 seconds) to return to the level above.

18 ETS communication objects

The SpaceLogic KNX DALI Gateway ProPro communicates via the KNX bus based on a powerful communication stack of the System B type. Altogether 2110 communication objects are available, which are described below separated by function bloc.

Note: Up to 1000 group addresses can be used in encrypted form, see chapter: 2.1 Secure Usage.

18.1 General objects

18.1.1 General objects behavior

Object	Object name	Function	Type	Flags
1	Time	Time	3 Byte 10.001	CWT
This object is used to set the time. The time must be provided by a central timer and updated at least twice a day.				
2	Date	Date	3 Byte 11.001	CWT
This object is used to set the date. The date must be provided by a central timer and updated at least twice a day. Leap years and change-over to and from daylight saving time are not taken into consideration during internal calculations of time and date. Therefore please pay attention that the timer sends the correct date on these occasions.				
10	Activate Panic mode	Activate/Stop	1 Bit 1.010	CW
Use this object to activate or stop the panic mode via the bus.				
11	Activate Test mode	Activate/Stop	1 Bit 1.010	CW
This object is used to activate or stop the test mode via the bus.				
12	Activate Night mode	Activate/Stop	1 Bit 1.010	CW
This object is used to activate or stop the night mode via the bus.				

18.1.2 General objects analysis and service

Object	Object name	Function	Type	Flags
13	General failures	Yes/No	1 Bit 1.005	CRT
This object is used to report the presence of a general failure in the connected DALI segment independent of its type.				
14	DALI failure	Yes/No	1 Bit 1.005	CRT
This object is used to report the presence of a DALI short-circuit in the connected DALI segment.				
15	General Failure Exceed Theshold	Yes/No	1 Bit 1.005	CRT
This object is used to report that the total of all lamp, ECG and converter failures recognised by the gateway, exceeds the set threshold.				

16	General Failure in Total	Value	1 Byte 5.010	CRT
This object is used to report the total number of all lamp, ECG and converter failures recognised by the gateway. Please remember that for each connected device an failure is counted just once. A simultaneous lamp failure in case of an ECG or converter failure cannot be recognised or counted.				
16a	General Failure in %	Value	1 Byte 5.001	CRT
This object is used to report the failure rate as a percentage of all lamp, ECG and converter failures recognised by the gateway. Please remember that for each connected device an failure is counted just once. A simultaneous lamp failure in case of an ECG or converter failure cannot be recognised or counted.				
17	Lamp Failure Exceed Theshold	Yes/No	1 Bit 1.005	CRT
This object is used to report that the total of all lamp failures recognised by the gateway exceeds the set threshold.				
18	Lamp Failure in Total	Value	1 Byte 5.010	CRT
Reports the total amount of lamp failures recognised by the gateway.				
18a	Lamp Failure in %	Value	1 Byte 5.001	CRT
Alternatively, this object is used to report the failure rate as a percentage of the total number of lamps in the DALI segment.				
19	ECG Failure Exceeds Theshold	Yes/No	1 Bit 1.005	CRT
This object is used to report that the total of all lamp failures recognised by the gateway exceeds the set threshold.				
20	ECG Failure in Total	Value	1 Byte 5.010	CRT
Reports the total amount of ECG failures recognised by the gateway.				
20a	ECG Failure in %	Value	1 Byte 5.001	CRT
Alternatively, this object is used to report the failure rate as a percentage of the total number of lamps in the DALI segment.				
21	Converter Failure Exceeds Theshold	Yes/No	1 Bit 1.005	CRT
This object is used to report that the total of all converter failures recognised by the gateway exceeds the set threshold.				
22	ECG Failure in Total	Value	1 Byte 5.010	CRT
Reports the total amount of converter failures recognised by the gateway.				
22a	ECG Failure in %	Value	1 Byte 5.001	CRT
Alternatively, this object is used to report the failure rate as a percentage of the total number of converters in the DALI segment.				
23	Status On/Off Group 1 – Group 16	Status	4 Bytes 27.001	CRT
Activates the status display for groups 1 - 16.				
24	Status On/Off ECG 1 - ECG 16	Status	4 Bytes 27.001	CRT
Sends the switch status for ECGs 1 - 16. Each value >0% is interpreted as ON.				

25	Status On/Off ECG 17 - ECG 32	Status	4 Bytes 27.001	CRT
Sends the switch status for ECGs 17 - 32. Each value >0% is interpreted as ON.				
26	Status On/Off ECG 33 - ECG 48	Status	4 Bytes 27.001	CRT
Sends the switch status for ECGs 33 - 48. Each value >0% is interpreted as ON.				
27	Status On/Off ECG 49 - ECG 64	Status	4 Bytes 27.001	CRT
Sends the switch status for ECGs 49 - 64. Each value >0% is interpreted as ON.				
28	Status Failure Lamp/ECG	Status	1 Byte 238.600	CRT
Sends the switch status of individual lamps in the DALI segment when the system is started or when a change has taken place. Bit 0 - 5 refer to the number of the ECG. Bit 7 represents an ECG failure, Bit 6 a lamp failure. For example: Bit 7 6 5 4 3 2 1 0 ECG 5 / ECG failure 1 0 0 0 0 1 0 0 ECG 6 / Lamp failure 0 1 0 0 0 1 0 1 If a value is received where Bit 7 and Bit 6 are set, it is interpreted as a status query. For example: Bit 7 6 5 4 3 2 1 0 ECG 5 / Query 1 1 0 0 0 1 0 0 The gateway responds with the current status of the queried ECG. Bit 7 6 5 4 3 2 1 0 ECG 5 / ECG failure 1 0 0 0 0 1 0 0				

18.1.3 General objects special functions

Object	Object name	Function	Type	Flags
29	Scene invoke / programm	Start/Program	1 Byte 18.001	CW
Scenes can be called up or programmed via this object. Up to 16 scenes are available in the Dali Gateway. To program a set scene, the top bit must be set: Start Program Scene 1 0 128 Scene 2 1 129 ……. Scene 16 15 143				
46	Effects start / stop	Start/Stop	1 Byte	CW
Effects can be started or stopped via this object. Up to 16 effects are available in the Dali Gateway. The top bit must be set to start an effect. Stopping takes place when bit 7 is deleted. The following therefore applies: Effect Off Effect On Effect 1 0 128 Effect 2 1 129 ……. Effect 16 15 143				

30.. 45	Scene x, Dimming	Brighter/Darker	4 Bit 3.007	KS
Scene 1 .. 16 can be dimmed relatively via this object. Dimming is set with bit 4, dimming with bit 4 deleted. Bits 1..3 indicate the respective step sizes. Bit 1..3 deleted is interpreted as a stop telegram. **Note:** The min / max values of the respective groups that were defined with the ETS are also taken into account when dimming the scenes.				

18.1.3.1 Objects for Energy Saving

Each group as well as each ECG can be de-energized via a separate actuator. Up to 16 energy-saving objects are provided in the parameters for this purpose.

2079.. 2094	Energy Saving Object 1.. 16	On / Off	1 Bit 1.001	CRT
With the appropriate assignment in the parameters, this object is switched off when associated groups or ECGs are switched off. This allows a separate power supply to be switched off. If the associated groups or ECGs are controlled again with a value > 0%, this object is switched on again before. In this case, a minimum time delay is programmed so that the ECGs are ready for operation again, see Parameterpage: Special Functions				

18.1.3.2 Objects for emergency

Two types of communication objects are offered on the device. The selection is defined via parameters:

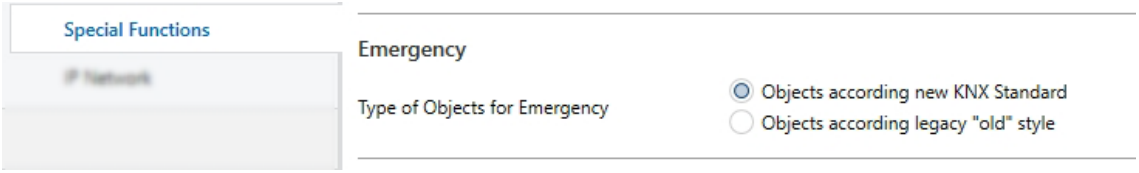

The objects are explained with the respective ECGs.

18.1.4 Time control objects

A communication object for enabling and disabling templates is available for each of the up to 16 templates in the colour control module. See chapter: 14.1.3 Disable/enable. These need to be enabled under time control in the DCA.

Object	Object name	Function	Type	Flags
2095ff	Template 1, Activation	Activate/ Stop	1 Bit 1.010	CW
Template 1 is activated via this object. The template is active when the value is 1 and will be executed according to schedule.				
2110	Template x, Activation	Activate/ Stop	1 Bit 1.010	CW
Template X is activated via this object. The template is active when the value is 1 and will be executed according to schedule.				

18.2 Broadcast objects

Object	Object name	Function	Type	Flags
3	Broadcast, Switching	On/Off	1 Bit 1.001	CW
All connected lights can be switched on or off together using this object. If connected ECGs are in a special state (test mode, panic mode), they are not switched. In this case, switching takes place through sequential addressing on the DALI bus and a delay between the first and last luminaire may be visible. If there is no special state, switching takes place simultaneously using DALI broadcast telegrams. The broadcast switching function always switches to 0 or 100%. The parameters "switch-on and switch-off value" for groups and electronic ballasts are not taken into account. **Note:** This object is only visible if you have selected Parameterpage-> Special Function "Enable broadcast" in the parameters.				
4	Broadcast, Set Value	Value	1 Byte 5.001	CW
All connected lights can be set to one value using this object. If connected ECGs are in a special condition (test mode, panic mode), they are not changed. In this case, switching takes place by sequential addressing on the DALI bus and a delay between the first and last light may be visible. If there is no special state, the values are set at the same time by DALI broadcast telegrams. **Note:** This object is only visible if "Enable broadcast" was selected in the parameters Parameterpage -> Special function. Broadcast can also be released for colour control. In this case, up to 4 further objects no. 3-7 are shown, see Parameter page: -> Special functions. The description of the different colour control objects is explained in detail in chapter: 3 Colour control .				

18.2.1 Broadcast objects colour control

Object	Object name	Function	Type	Flags
5	Broadcast, (RGB) Red	Value	1 Byte 5.001	CW
The broadcast colour control can be set via this object. The values for (RGB) red are transferred here.				
5a	Broadcast, (RGB)	Value	3 Byte 232.600	CW
Send the colour (RGB) via this object.				
5b	Broadcast, (HSV) Hue	Value	1 Byte 5.001	CW
Send the (HSV) Hue value via this object.				
5c	Broadcast, (RGBW)	Value	6 Byte 251.600	CW
The set colour (RGBW) is sent as a value via this object.				
5d	Broadcast, Set Colour X	Value	2 Bytes 7.600	CW
Send the (X/Y Colour) X value via this object.				
6	Broadcast, (RGB) Green	Value	1 Byte 5.001	CW
The broadcast colour control can be set via this object. The values for (RGB) green are transferred here.				

6a	Broadcast, (HSV) Saturation	Value	1 Byte 5.001	CW
Send the saturation via an HSV value via this object.				
6b	Broadcast, Set Colour Y	Value	2 Bytes 7.600	CW
Send the (X/Y Colour) Y value via this object.				
7	Broadcast, (RGB) Blue	Value	1 Byte 5.001	CW
The broadcast colour control can be set via this object. The values for (RGB) blue are transferred here.				
8	Broadcast, White	Value	1 Byte 5.001	CW
The broadcast control can be set via this object. The values for red white are transferred here.				
9	Broadcast, Colour Temperatur	Value	2 Bytes 7.600	CW
Send the colour temperatur value via this object.				

18.3 Group objects

A set of communication objects is available for each one of the up to 16 possible groups.
The following objects are available (Example group 1):

18.3.1 Group objects behaviour

Object	Object name	Function	Type	Flags
47	G1, Switching	On/ Off	1 Bit 1.001	CW
Use this object to switch group 1 on or off.				
48	G1, Dimming	Brighter/Darker	4 Bit 3.007	CW
Used for the relative dimming of group 1. Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
49	G1, Value setting	Value	1 Byte 5.001	CW
Über dieses Object kann Gruppe 1 auf den entsprechenden Value gesetzt werden.				
50	G1, Value setting	Value/Time	3 Bytes 225.001	CW
Attention: Object 50 is shown for the following parametert: G1 --> Behaviour --> Additional value setting object with dim time. Use this object to set group 1 to the required value and dim time. 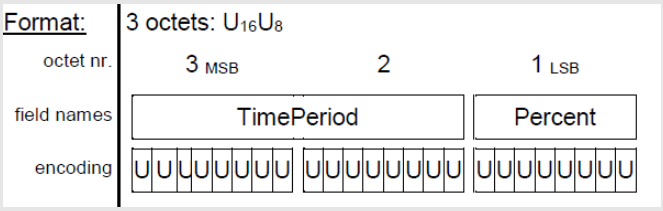 The time is defined in multiples of 100 ms. Because of Dali properties, a value range of 1s to 200s is accepted. Vaues outside this value range are restricted accordingly. A dim time of 10s is coded as follows: 10 s = 10x10x100 ms				
51	G1, Enable	Yes/No	1 Bit 1.003	CW
Attention: Object 51 is shown for the following parameter: G1 --> General --> Function of the additional object This object enables the operation of group 1: Object = 0 → Disabled Object = 1 → Enabled				
51a	G1, Disable	Yes / no	1 Bit 1.003	CW
This object disables the operation of group 1: Object = 0 → Enabled Object = 1 → Disabled				
52	G1, Status	On/Off	1 Bit 1.001	CRT
Sends the switch status of the group. Any value >0% is interpreted as ON.				
53	G1, Status	Value	1 Byte 5.001	CRT
Sends the value status of the group.				

18.3.2 Group objects colour control

Different colour control options are supported:

- **Colour temperature**
- **RGB**
- **HSV**
- **RGBW**
- **XY**
- **Colour temperature + RGB**
- **Colour temperature + RGBW**

Only one type of colour control can be selected per group. All ECGs in the group that support this type, can be controlled. Other ECG types will not react to the command. Please make sure to only include ECGs with the same colour control in a group.Depending on type of colour control chosen, different objects are displayed:

18.3.2.1 Colour temperature

The colour temperature can be set in Kelvin. Colour temperatures below 3000 K are called "warm white", above 5000 K "cool white" and between 3000 and 5000 "neutral white".

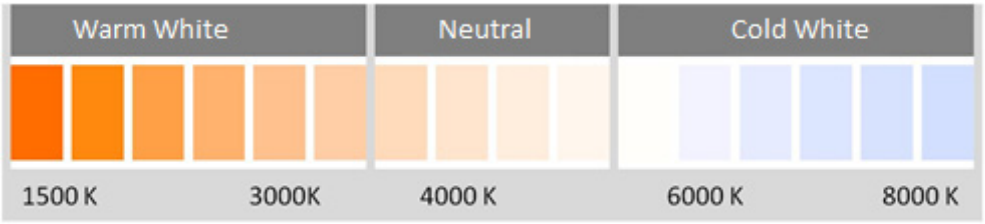

Object	Object name	Function	Type	Flags
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
64	G1, Colour Control Fading	Warmer/Cooler	4 Bit 3.007	CW
The colour in the group can be changed using this object. Increase the angle with bit 3 set, decrease the angle with bit 3 deleted. Bit 0..3 deleted is interpreted as a stop telegram. This means that the entire circumference of the circle can be circulated and every colour can be set.				

70	G1, Colour Temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status.				
75	G1, Colour Temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.2 RGB

The RGB colour space is called additive colour space as the colour perception is created by mixing the three primary colours.

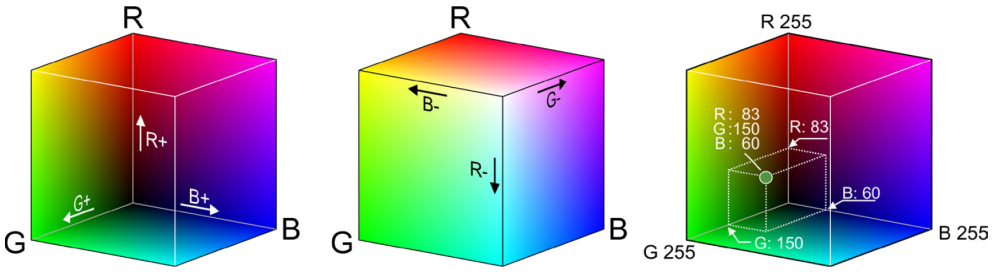

Figure 3: RGB cubes (source: Wikipedia)

18.3.2.2.1 RGB (DPT 232.600)

Object	Object name	Function	Type	Flags
57	G1, Colour RGB	Value	3 Byte 232.600	CW

Sets the colour in the group as RGB.

Format:	3 octets: $U_8U_8U_8$
octet nr.	3 MSB 2 1 LSB
field names	R G B
encoding	UUUUUUUU UUUUUUUU UUUUUUUU
Encoding:	All values binary encoded.
Range::	R, G, B: 0 to 255
Unit:	None
Resol.:	1
PDT:	PDT_GENERIC_03

Datapoint Types

ID:	Name:	Range:	Resol.:	Use:
232.600	DPT_Colour_RGB	R: 0 to 255 G: 0 to 255 B: 0 to 255	R: 1 G: 1 B: 1	G

69	G1, Colour RGB	Status	3 Byte 232.600	CRT
Use this object to send the set colour of the group as status.				

18.3.2.2.2 RGB (separate objects)

Object	Object name	Function	Type	Flags
60	G1, Colour (RGB) Red	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for red (R) are transmitted.				
61	G1, Colour (RGB) Green	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for green (G) are transmitted.				
62	G1, Colour (RGB) Blue	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for blue (B) are transmitted..				
65	G1, (RGB) Fading Red	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (R) in the group. Bit 4 is set to increase the red component and deleted to decrease the red component. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
66	G1, (RGB) Fading Green	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (G) in the group. Description as for colour change RGB (R).				
67	G1, (RGB) Fading Blue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (B) in the group. Description as for colour change RGB (R).				
71	G1, Colour (RGB) Red	Status	1 Byte 5.001	CRT
Sends the selected colour (R) as group status.				
72	G1, Colour (RGB) Green	Status	1 Byte 5.001	CRT
Sends the selected colour (G) as group status.				
73	G1, Colour (RGB) Blue	Status	1 Byte 5.001	CRT
Sends the selected colour (B) as group status.				

18.3.2.3 HSV

The colour is set as an HSV value. This consists of hue, saturation and value. The value (V) is set via the value object number 60/61. Further objects are displayed for hue (H) and saturation (S). The hue is entered as a value between 0° and 360° and rotates around the colour circle making it easy to reach all colours of the circle.

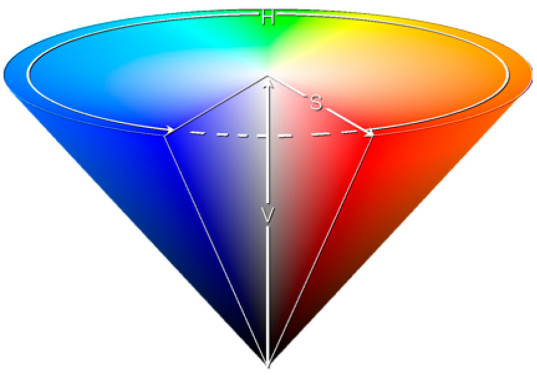



Figure 4: HSV colour value (Source: Wikipedia)

Values for saturation and intensity (darkness value) are set between 0 and 100%.100% mean complete saturation and full intensity.

18.3.2.3.1 HSV (separate objects)

Object	Object name	Function	Type	Flags
60	G1, Colour (HSV) Hue	Value	1 Byte 5.003	CW
Sets the colour via an HSV value. A value between 0° and 360° can be transmitted. Please remember that the used data type 5.003 only allows for a resolution of about 1.4°. 				
61	G1, Colour (HSV) Saturation	Value	1 Byte 5.001	CW
Use this object to set the saturation. A value between 0° and 100% can be transmitted.				
65	G1, Colour (HSV) Fading Hue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the hue of a group. Bit 3 is set to increase the angle and deleted to decrease the angle. Bit 1 to 3 deleted is interpreted as a stop telegram. As the whole colour circle is accessible, any colour can be set.				
66	G1, Colour (HSV) Fading Saturation	Brighter/Darker	4 Bit 3.007	CW
See change of hue above. The value between 0 and 100% is increased incrementally.				
71	G1, Colour (HSV) Hue	Status	1 Byte 5.003	CRT
Sends the configured hue as group status.				
72	G1, Colour (HSV) Saturation	Status	1 Byte 5.001	CRT
Sends the configured saturation as group status.				

18.3.2.4 RGBW

18.3.2.4.1 RGBW (6 Byte separate objects Object DPT 251.600)

Object	Object name	Function	Type	Flags
57	G1, Colour RGBW	Value	6 Byte 251.600	CW
Use this object to set the colour in the group as RGBW. Enter the colour values for white, blue, green and red between 0 and 100% in the bottom Bytes. 4 Bits in the 5th Byte determine whether the corresponding colour values are valid.				

Datapoint Type				
DPT_Name:	DPT_Colour_RGBW			
DPT Format:	$r_{12}B_4U_8U_8U_8U_8$	DPT_ID:	251.600	
Field	Description	Supp.	Range	Unit
m_R	Shall specify whether the colour information red in the field R is valid or not.	M	{0,1}	None.
m_G	Shall specify whether the colour information green in the field G is valid or not.	M	{0,1}	None.
m_B	Shall specify whether the colour information blue in the field B is valid or not.	M	{0,1}	None.
m_W	Shall specify whether the colour information white in the field W is valid or not.	M	{0,1}	None.
R	Colour Level Red	M	0 % to 100 %	-
G	Colour Level Green	M	0 % to 100 %	-
B	Colour Level Blue	M	0 % to 100 %	-
W	Colour Level White	M	0 % to 100 %	-

69	G1, Colour RGBW	Status	6 Byte 251.600	CRT
Sends the set colour of the group as status.				

18.3.2.4.2 RGBW (seperate Objects)

Object	Object name	Function	Type	Flags
60	G1, Colour (RGB) Red	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for red (R) are transmitted.				
61	G1, Colour (RGB) Green	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for green (G) are transmitted.				
62	G1, Colour (RGB) Blue	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for blue (B) are transmitted.				
63	G1, Colour White	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for white (W) are transmitted.				
65	G1, (RGB) Fading Red	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (R) in the group. Bit 4 is set to increase the red component and deleted to decrease the red component. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
66	G1, (RGB) Fading Green	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (G) in the group. Description as for colour change (red).				
67	G1, (RGB) Fading Blue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour (B) in the group. Description as for colour change (red).				
68	G1, Fading White	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour green in the group. Description as for colour change (red).				

71	G1, Colour (RGB) Red	Status	1 Byte 5.001	CRT
Sends the set colour red as group status.				
72	G1, Colour (RGB) Green	Status	1 Byte 5.001	CRT
Sends the set colour green as group status.				
73	G1, Colour (RGB) Blue	Status	1 Byte 5.001	CRT
Sends the set colour blue as group status.				
74	G1, Colour White	Status	1 Byte 5.001	CRT
Sends the set colour white as group status.				

18.3.2.5 HSVW (separate Objects)

See chapter: 18.3.2.3.1 HSV (separate objects)

18.3.2.6 XY Colour

The colour is determined through an XY value between 0 and 1:

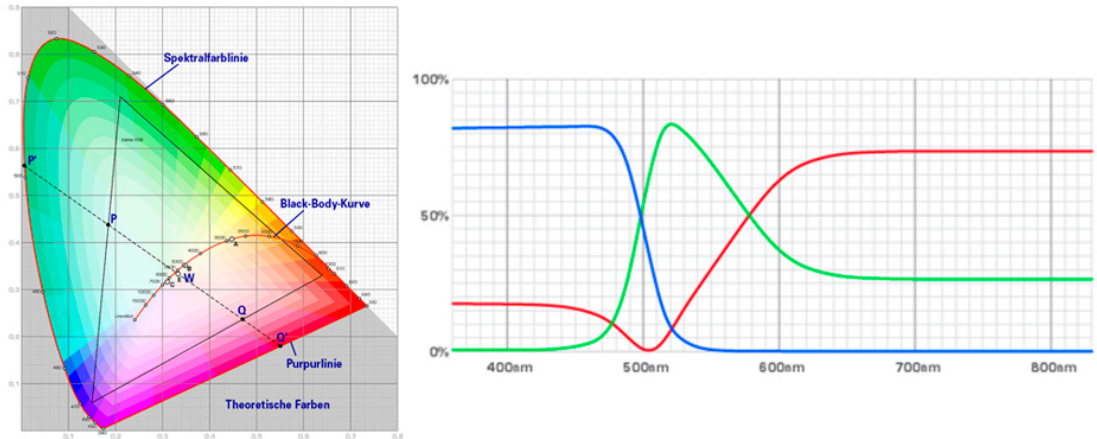

Figure 5: XY colour value (Source: Wikipedia)

Im KNX wird dieser Valueebereich auf einen Bereich 0..65535 (2 Byte Ganzzahl) umgerechnet. Der Value 65535 entspricht daher dem Value 1 in der Grafik.

18.3.2.6.1 XY (combined objects)

Object	Object name	Function	Type	Flags
57	G1, Colour XY	Value	6 Byte 242.600	CW
Use this object to set the colour via XY coordinates in the group. The brightness level is entered in the bottom Byte via a value between 0 and 100% followed by the Y and X coordinates between 0 and 65535. 2 Bit in the top byte				

determine whether brightness and XY values are valid.

Datapoint Type				
DPT_Name:	DPT_Colour_xyY			
DPT Format:	$B_8U_{16}U_{16}U_8$	DPT_ID:	242.600	
Field	Description	Supp.	Range	Unit
C	This field shall indicate whether the colour information in the fields *x-axis* and *y-axis* is valid or not.	M	{0,1}	None.
B	This field shall indicate whether the brightness information in the field *Brightness* is valid or not.	M	{0,1}	None.
x-axis	x-coordinate of the colour information	M	0-65535	None.
y-axis	y-coordinate of the colour information	M	0-65535	None.
Brightness	Brightness of the colour	M	0 % to 100 %	None.

69	G1, Colour XY	Status	6 Byte 242.600	CRT

This object is used to send the set XY coordinates as status of the group.

18.3.2.6.2 XY (separate objects)

Obj	Object name	Function	Type	Flags
57	G1, Colour X	Value	2 Byte 7.001	CW
Use this object to set the X value between 0 and 65535.				
60	G1, Colour Y	Value	2 Byte 7.001	CW
Use this object to set the Y value between 0 and 65535.				
69	G1, Colour X	Status	2 Byte 7.001	CRT
Use this object to set the X value between 0 and 65535.				
71	G1, Colour Y	Status	2 Byte 7.001	CRT
Use this object to set the Y value between 0 and 65535.				

18.3.2.7 Colour temperature + RGB

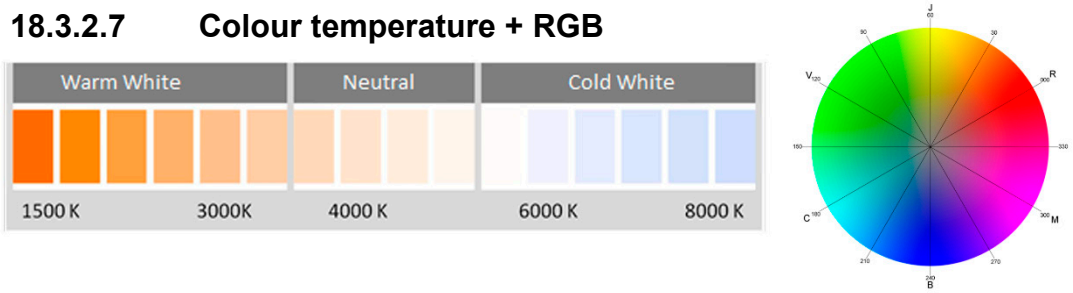

Figure 6: Colour temperatur + RGB (Source: Wikipedia)

18.3.2.7.1 Colour temperature + RGB (3 Byte combined Objects DPT 232.600)

Object	Object name	Function	Type	Flags
57	G1, Colour RGB	Value	3 Byte 232.600	CW
The colour can be set as RGB in the group via this object. The colour values for white, blue, green and red are given in the lower bytes in the value range of 0 ... 100%. In the 5th byte, 4 bits indicate whether the corresponding colour values are valid.				
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
64	G1, Colour Control Fading	Warmer/Colder	4 Bit 3.007	CW
Changes the colour temperature in the group. Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				

69	G1, Colour RGB	Status	3 Byte 232.600	CRT
Sends the set RGB colour as group status.				
70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.7.2 Colour temperature + RGB (RGB separate objects)

Object	Object name	Function	Type	Flags
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
60	G1, Colour (RGB Red)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for red (R) are transmitted.				
61	G1, Colour (RGB Green)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for green (G) are transmitted.				
62	G1, Colour (RGB Blue)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for blue (B) are transmitted.				
64	G1, Colour Control Fading	Value	1 Byte 5.001	CW
Changes the colour temperature in the group. Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
65	G1, Colour (RGB) Fading Red	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour red in the group. Bit 4 is set to increase the red component and deleted to decrease the red component. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
66	G1, Colour (RGB) Fading Green	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour green in the group. Description as for colour change (red).				
67	G1, Colour (RGB) Fading Blue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour blue in the group. Description as for colour change (red).				

70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status.				
71	G1, Colour (RGB Red)	Status	1 Byte 5.001	CRT
Sends the set colour red as group status.				
72	G1, Colour (RGB Green)	Status	1 Byte 5.001	CRT
Sends the set colour green as group status.				
73	G1, Colour (RGB Blue)	Status	1 Byte 5.001	CRT
Sends the set colour blue as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.7.3 Colour temperature + RGB (HSV separate objects)

Object	Object name	Function	Type	Flags
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
60	G1, Colour (HSV) Hue	Value	1 Byte 5.003	CW
Sets the colour via an HSV value. A value between 0° and 360° can be transmitted. Please remember that the used data type 5.003 only allows for a resolution of about 1.4°. 				
61	G1, Colour (HSV) Saturation	Value	1 Byte 5.001	CW
Use this object to set the saturation. A value between 0° and 100% can be transmitted.				
64	G1, Colour Control Fading	Warmer/Cooler	4 Bit 3.007	CW
The colour in the group can be changed using this object. Increase the angle with bit 3 set, decrease the angle with bit 3 deleted. Bit 0..3 deleted is interpreted as a stop telegram. This means that the entire circumference of the circle can be circulated and every colour can be set.				
65	G1, Colour Control Fading Hue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the hue of a group. Bit 3 is set to increase the angle and deleted to decrease the angle. Bit 1 to 3 deleted is interpreted as a stop telegram. As the whole colour circle is accessible, any colour can be set.				

66	G1, Colour Control Fading Saturation	Brighter/Darker	4 Bit 3.007	CW
See change of hue above. The value between 0 and 100% is increased incrementally				
70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status				
71	G1, Colour (HSV) Hue	Status	1 Byte 5.003	CRT
Sends the configured hue as group status.				
72	G1, Colour (HSV) Saturation	Status	1 Byte 5.003	CRT
Sends the configured saturation as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.8 Colour temperature + RGBW

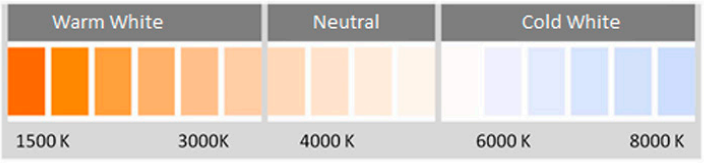

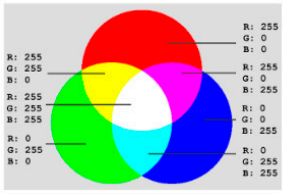

18.3.2.8.1 Colour temperature + RGBW (6 Byte combined Objects DPT 251.600)

Object	Object name	Function	Type	Flags
57	G1, Colour RGBW	Value	6 Byte 251.600	CW
The colour can be set as RGB in the group via this object. The colour values for white, blue, green and red are given in the lower bytes in the value range of 0 ... 100%. In the 5th byte, 4 bits indicate whether the corresponding colour values are valid.				
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
64	G1, Colour Control Fading	Warmer/Colder	4 Bit 3.007	CW
Changes the colour temperature in the group. Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
69	G1, Colour RGBW	Status	6 Byte 251.600	CRT
Sends the set RGB colour as group status.				

70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.8.2 Colour temperature + RGBW (RGBW separate objects)

Object	Object name	Function	Type	Flags
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
60	G1, Colour (RGB Red)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for red (R) are transmitted.				
61	G1, Colour (RGB Green)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for green (G) are transmitted.				
62	G1, Colour (RGB Blue)	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for blue (B) are transmitted.				
63	G1, Colour White	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for white (W) are transmitted.				
64	G1, Colour Control Fading	Warmer/Colder	4 Bit 3.007	CW
Changes the colour temperature in the group. Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
65	G1, Colour (RGB) Fading Red	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour red in the group. Bit 4 is set to increase the red component and deleted to decrease the red component. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
66	G1, Colour (RGB) Fading Green	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour green in the group. Description as for colour change (red).				
67	G1, Colour (RGB) Fading Blue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the colour blue in the group. Description as for colour change (red).				

68	G1, Colour Fading White	Brighter/Darker	4 Bit 3.007	CW
Use this object to change white in the group. Description as for colour change (red).				
70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status.				
71	G1, Colour (RGB Red)	Status	1 Byte 5.001	CRT
Sends the set colour red as group status.				
72	G1, Colour (RGB Green)	Status	1 Byte 5.001	CRT
Sends the set colour green as group status.				
73	G1, Colour (RGB Blue)	Status	1 Byte 5.001	CRT
Sends the set colour blue as group status.				
74	G1, Colour White	Status	1 Byte 5.001	CRT
Sends the set white as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.2.8.3 Colour temperature + RGBW (HSVW separate objects)

Object	Object name	Function	Type	Flags
58	G1, Colour temperature	Value	2 Byte 7.600	CW
Sets the colour temperature in the group.				
59	G1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the colour temperature in the group relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
60	G1, Colour (HSV) Hue	Value	1 Byte 5.003	CW
Sets the colour via an HSV value. A value between 0° and 360° can be transmitted. Please remember that the used data type 5.003 only allows for a resolution of about 1.4°. 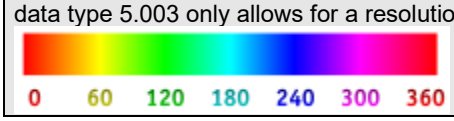 				

61	G1, Colour (HSV) Saturation	Value	1 Byte 5.001	CW
Use this object to set the saturation. A value between 0° and 100% can be transmitted.				
63	G1, Colour White	Value	1 Byte 5.001	CW
Sets the colour in the group. The values for white (W) are transmitted.				
64	G1, Colour Control Fading	Warmer/Cooler	4 Bit 3.007	CW
The colour in the group can be changed using this object. Increase the angle with bit 3 set, decrease the angle with bit 3 deleted. Bit 0..3 deleted is interpreted as a stop telegram. This means that the entire circumference of the circle can be circulated and every colour can be set.				
65	G1, Colour Control Fading Hue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the hue of a group. Bit 3 is set to increase the angle and deleted to decrease the angle. Bit 1 to 3 deleted is interpreted as a stop telegram. As the whole colour circle is accessible, any colour can be set.				
66	G1, Colour Control Fading Saturation	Brighter/Darker	4 Bit 3.007	CW
See change of hue above. The value between 0 and 100% is increased incrementally				
68	G1, Colour Fading White	Brighter/Darker	4 Bit 3.007	CW
Use this object to change white in the group. Description as for colour change (red).				
70	G1, Colour temperature	Status	2 Byte 7.600	CRT
Sends the set colour temperature as group status				
71	G1, Colour (HSV) Hue	Status	1 Byte 5.003	CRT
Sends the configured hue as group status.				
72	G1, Colour (HSV) Saturation	Status	1 Byte 5.003	CRT
Sends the configured saturation as group status.				
74	G1, Colour White	Status	1 Byte 5.003	CRT
Sends the set white as group status.				
75	G1, Colour temperature relative	Status	1 Byte 5.001	CRT
Sends the set relative colour temperature as group status.				

18.3.3 Group objects analysis and service

Object	Object name	Function	Type	Flags
54	G1, Failure Status	Yes/No	1 Bit 1.001	CRT
Attention: Object 54 is shown for the following parameter: G1 --> Analysis and service-> "Type of failure status object". This object is used to send the failure status for lamp, ECG and converter failures within the group.				
54a	G1, Failure Status	Status	1 Byte 5.010	CRT
Sends the failure status for lamp, ECG and converter failures within the group as a 1Byte object. Bit 0 --> Lamp failure Bit 1 --> ECG failure				
55	G1, Failure Status	Status	4 Byte	CRT
This object is used to report the total number of devices within the group and the failure status according to failure type. The different Bits within the object have the following meaning: Bit 31 | Bit 30 | Bit 29..24 Norm.EVG | Notl. EVG | Numer ECG+converter failures Bit 23 | Bit 22 | Bit 21..16 Norm.Lamp | Emerg.lamp | Number of lamps failures Bit 15 | Bit 14 | Bit 13..8 Def.Conv. | Idle | Number of converters Bit 7 | Bit 6 | Bit 5..0 Idle | Idle | Number ECGs				
56	G1, Failure Exceeds Theshold	Yes/No	1 Bit	CRT
This object is used to report that the total of all lamp failures recognised in the DALI segment exceeds the set threshold.				
56a	G1, Failure Theshold in Total	Value	1 Byte 5.010	CRT
This object is used to report the failure rate in total of the total number of lamps in the DALI segment.				
56b	G1, Failure Theshold in %	Value	1 Byte 5.001	CRT
Alternatively, this object is used to report the failure rate as a percentage of the total number of lamps in the DALI segment.				
76	G1, Operating Hours Reset	Yes/No	1 Bit 1.015	CW
Resets the operating hours in a group via value "1". **Note:** Object 76-78 is shown for the following parameter: G1 --> Analysis and service --> "Operation Hour Calculation" = Yes.				
77	G1, Operating Hours	Value	4 Byte 13.100	CW
Counts the operating hours in the group. The value is transmitted in seconds according to DPT 13.100.				
78	G1, Life Time Exceeded	Yes/No	1 Bit 1.005	CW
Shows whether the maximum life span set in the parameters has been exceeded. **Note:** If the threshold value is exceeded, an alarm is sent via this object (by sending the value "*1*"). An alarm is re-sent for every operating hour that is above the threshold valuet.				

18.4 ECG objects

18.4.1 ECG objects behaviour

A communication object is available for each of the up to 64 connected ECGs and corresponding lamps to display the failure status. (Example ECG 1):

Object	Object name	Function	Type	Flags
559	ECG1, Switching	On/Off	1 Bit 1.001	CW
Use this object to switch an ECG on or off if it is not in special mode (test mode, emergency lights, panic/ emergency mode).				
560	ECG1, Dimming	Brighter/Darker	4 Bit 3.007	CW
This object is used for the relative dimming of an ECG that is not in special mode (test mode, emergency lights, panic/ emergency mode). Bit 4 is set to dim up and deleted to dim down. Bits 1 to 3 refer to the increment size. Bit 1 to 3 deleted is interpreted as a stop telegram.				
561	ECG 1, Set Value	Value	1 Byte 5.001	CW
Sets the value of ECG1 unless it is in special mode (test mode, emergency lights, panic/ emergency mode).				
562	ECG1, Enable	Yes/No	1 Bit 1.003	CW
Note: Object 562 is shown for the following parameter: ECG 1 -->General -->Function of the additional object. Use this object to enable the operation of ECG 1: Object = 0 → Operation disabled Object = 1 → Enable operation				
562a	ECG1, Disable	Yes/No	1 Bit 1.003	CW
Use this object to disable the operation of ECG 1: Object = 0 → Enable operation Object = 1 → Operation disabled				
563	ECG1, Status	On/Off	1 Bit 1.001	CRT
Sends the ECG switch status. Each value >0% is interpreted as ON.				
564	ECG 1, Status	Value	1 Byte 5.001	CRT
Sends the ECG value status.				

18.4.2 ECG objects colour control

Objekt	Objektname	Funktion	Typ	Flags
566	ECG 1, Colour temperature	Value	2 Bytes 7.600	CW
Sets the ECG 1 colour temperature.				
566a	EVG 1, Colour RGB	Value	3 Bytes 232.600	CW
Sets the ECG1 colour in as RGB.				

Format:	3 octets: $U_8U_8U_8$
octet nr.	3 MSB 2 1 LSB
field names	R G B
encoding	UUUUUUUU UUUUUUUU UUUUUUUU
Encoding:	All values binary encoded.
Range::	R, G, B: 0 to 255
Unit:	None
Resol.:	1
PDT:	PDT_GENERIC_03

Datapoint Types

ID:	Name:	Range:	Resol.:	Use:
232.600	DPT_Colour_RGB	R: 0 to 255 G: 0 to 255 B: 0 to 255	R: 1 G: 1 B: 1	G

566b	ECG 1, Colour RGBW	Value	6 Bytes 251.600	CW

Use this object to set the ECG1 colour as RGBW. Enter the colour values for white, blue, green and red between 0 and 100% in the upper Bytes. 4 Bits in the 1st Byte determine whether the corresponding colour values are valid.

Datapoint Type					
DPT_Name:	DPT_Colour_RGBW				
DPT Format:	$U_8U_8U_8U_8r_8r_4B_4$		DPT_ID:	251.600	
Field	Description	Supp.	Range	Unit	Default
R	Colour Level Red	M	0 % to 100 %	-	-
G	Colour Level Green	M	0 % to 100 %	-	-
B	Colour Level Blue	M	0 % to 100 %	-	-
W	Colour Level White	M	0 % to 100 %	-	-
m_R	Shall specify whether the colour information red in the field R is valid or not.	M	{0,1}	None.	None.
m_G	Shall specify whether the colour information green in the field G is valid or not.	M	{0,1}	None.	None.
m_B	Shall specify whether the colour information blue in the field B is valid or not.	M	{0,1}	None.	None.
m_W	Shall specify whether the colour information white in the field W is valid or not.	M	{0,1}	None.	None.

566c	ECG 1, Colour XY	Value	6 Bytes 242.600	CW

Use this object to set the ECG1 colour via XY coordinates. The brightness level is entered in the bottom Byte via a value between 0 and 100% followed by the Y and X coordinates between 0 and 65535. 2 Bit in the top byte determine whether brightness and XY values are valid.

Datapoint Type				
DPT_Name:	DPT_Colour_xyY			
DPT Format:	$B_8U_{16}U_{16}U_8$	DPT_ID:	242.600	
Field	Description	Supp.	Range	Unit
C	This field shall indicate whether the colour information in the fields *x-axis* and *y-axis* is valid or not.	M	{0,1}	None.
B	This field shall indicate whether the brightness information in the field *Brightness* is valid or not.	M	{0,1}	None.
x-axis	x-coordinate of the colour information	M	0-65535	None.
y-axis	y-coordinate of the colour information	M	0-65535	None.
Brightness	Brightness of the colour	M	0 % to 100 %	None.

566d	ECG 1, Colour (HSV) Hue	Value	1 Byte 5.001	CW
Sets the ECG1 colour via an HSV value. A value between 0° and 360° can be transmitted. Please remember that the used data type 5.003 only allows for a resolution of about 1.4°.  				
567	ECG 1, Colour temperature relative	Value	1 Byte 5.001	CW
Sets the ECG 1 colour temperature relatively between 0 and 100%. The value range 0 to 100% is automatically converted to the possible colour temperature range.				
567a	EVG 1, Colour (HSV) Saturation	Value	1 Byte 5.001	CW
Use this object to set the saturation. A value between 0° and 100% can be transmitted.				
568	ECG 1, Colour White	Value	1 Byte 5.001	CW
Sets the ECG1 colour. The values for white (W) are transmitted.				
569	ECG 1, Colour Control Fading	Warmer/Cooler	4 Bit 3.007	CW
The ECG1 colour can be changed using this object. Increase the angle with bit 4 set, decrease the angle with bit 4 deleted. Bit 1..3 deleted is interpreted as a stop telegram. This means that the entire circumference of the circle can be circulated and every colour can be set.				
569a	ECG 1, Colour (HSV) Fading Hue	Brighter/Darker	4 Bit 3.007	CW
Use this object to change the hue of the ECG1. Bit 4 is set to increase the angle and deleted to decrease the angle. Bit 1 to 3 deleted is interpreted as a stop telegram. As the whole colour circle is accessible, any colour can be set.				
570	ECG 1, Colour (HSV) Fading Saturation	Brighter/Darker	4 Bit 3.007	CW
See change of hue above. The value between 0 and 100% is increased incrementally.				
571	EVG 1, Colour Fading White	Brighter/Darker	4 Bit 3.007	CW
Use this object to change ECG1 colour white.				
572	ECG 1, Colour temperature	Status	2 Bytes 7.600	CRT
This object sends the set colour temperature as ECG1 status.				
572a	EVG 1, Colour RGB	Status	3 Bytes 232.600	CRT
This object sends the set RGB colour as ECG1 status.				
572b	EVG 1, Colour RGBW	Status	6 Bytes 251.600	CRT
This object sends the set RGBW colour as ECG1 status.				
572c	EVG 1, Colour XY	Status	6 Bytes 242.600	CRT
This object sends the set XY colour as ECG1 status.				

572d	EVG 1, Colour (HSV) Hue	Status	1 Byte 5.001	CRT
This object sends the set (HSV) hue colour as ECG1 status.				
573	ECG 1, Colour temperature relative	Status	1 Byte 5.001	CRT
Über dieses Objekt wird die relative Farbtemperatur als Status der EVGs gesendet.				
573a	EVG 1, Colour (HSV) Saturation	Status	1 Byte 5.001	CRT
This object sends the set (HSV) saturation colour as ECG1 status.				
574	ECG 1, Colour White	Status	1 Byte 5.001	CRT
This object sends the set white (W) colour as ECG1 status.				

18.4.3 EVG Emergency Setting

18.4.3.1.1 Objects according to the new KNX standard:

Object	Object name	Function	Type	Flags
575	Converter 1, Test start	Start	1 Byte 20.611	CW

Use this oject to start a long duration test, function test and battery status query of the converter. The individual Bits have the following meaning:

20.611	DPT_Converter_Test_-Control	*field1* = TestCtrl 0 : Reserved, no effect 1 : Start Function Test (FT) Acc. DALI Cmd. 227 2 : Start Duration Test (DT) Acc. DALI Cmd. 228 3 : Start Partial Duration Test (PDT) 4 : Stop Test Acc. DALI Cmd 229 5 : Reset Function Test Done Flag Acc. DALI Cmd. 230 6 : Reset Duration Test Done Acc. DALI Cmd. 231 7 to 255 : Reserved, no effect **Note:** Concurrent tests to the same DALI converter will be supported. This DPT controls a test of a DALI converter. It allows also to stop a running test and to reset test flags.

576	Converter 1, Test result	Test	6 Byte 245.600	CRT

This object reports the converter status according to Konnex data point type 245.600.

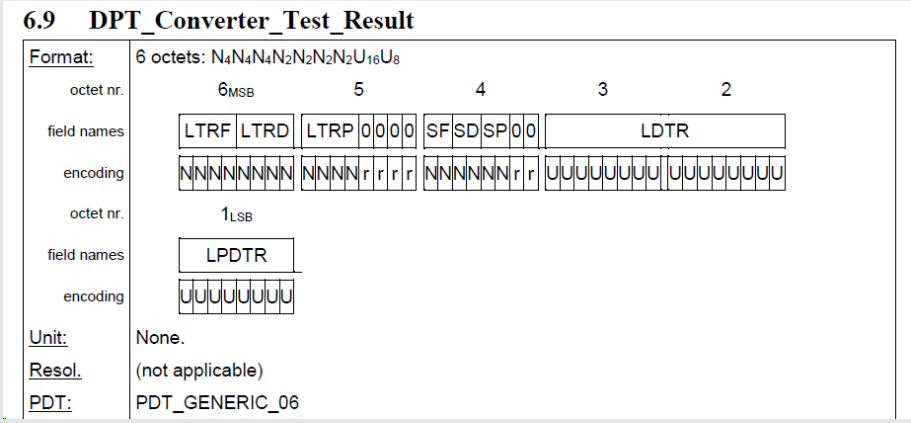

Data field	Description	Encoding	Range
LTRF	Last Test Result FT: Test result of last function test	0: Unknown 1: Passed in time 2: Passed max delay exceeded 3: Failed, test executed in time 4: Failed, max delay exceeded 5: Test manually stopped 6 to 15: Reserved, do not use	{0…15}
LTRD	Last Test Result DT: Test result of last duration test	0: Unknown 1: Passed in time 2: Passed max delay exceeded 3: Failed, test executed in time 4: Failed, max delay exceeded 5: Test manually stopped 6 to 15: Reserved, do not use	{0…15}
LTRP	Last Test Result PDT: Test result of last partial duration test	Last Test Result PDT Test result of last partial duration test 0: Unknown 1: Passed in time 2: Passed max delay exceeded 3: Failed, test executed in time 4: Failed, max delay exceeded 5: Test manually stopped 6 to 15: Reserved, do not use	{0…15}
SF	Start Method of Last FT	0: Unknown 1: Started automatically 2: Started by Gateway 3: Reserved Updated after a test has been finished.	{0…3}
SD	Start Method of Last DT	Start Method of Last DT 0: Unknown 1: Started automatically 2: Started by Gateway 3: Reserved Updated after a test has been finished.	{0…3}
SP	Start Method of Last PDT	Start Method of Last PDT 0: Unknown 1: Started automatically 2: Started by Gateway 3: Reserved Updated after a test has been finished.	{0…3}

LDTR	Contains the battery discharge time as the result of the last successful duration test (DT). According DALI Cmd. 243	DPT 7.006 DPT_TimePeriodMin The max. value of 510 min shall be interpreted as 510 min or longer.	{0…510}
LPDTR	Last PDT Result Provides the remaining Battery Charge Level after the last PDT	0: deep discharge point … 254: fully charged 255: unknown According DALI Cmd. 241	{0…255}

577	Converter 1, Status	Status	2 Byte 244.600	CRT

This object reports the converter status according to Konnex data point type 244.600.

6.8 DPT_Converter_Status

Format:	2 octets: $N_4B_4N_2N_2N_2N_2$
octet nr.	2_{MSB} 1_{LSB}
field names	CM HS FP DP PP CF
encoding	NNNNBBBB NNNNNNNN
Unit:	None.
Resol.	(not applicable)
PDT:	PDT_GENERIC_02

Datapoint Types

ID:	Name:	Usage:
244.600	DPT_Converter_Status	FB

Data field	Description	Encoding	Range
CM	Converter Mode according to the DALI converter state machine	0: Unknown 1: Normal mode active, all OK 2: Inhibit mode active 3: Hardwired inhibit mode active 4: Rest mode active 5: Emergency mode active 6: Extended emergency mode active 7: FT in progress 8: DT in progress 9: PDT in progress 10 to 15: Reserved. Shall be 0.	{0…15}
HS	Hardware Status	Bit 0: Hardwired Inhibit is active Bit 1: Hardwired switch is on Bit 2 and 3: Reserved. Shall be 0.	{0,1}
FP	Function Test Pending	0: Unknown 1: No test pending 2: Test pending 3: Reserved NOTE 26 The information about a running test is given in the Converter Mode field. NOTE 27 The status "Unknown" may for instance occur at power-up.	{0…3}

DP	Duration Test Pending	Duration Test Pending 0: Unknown 1: No test pending 2: Test pending 3: Reserved NOTE 28 The information about a running test is given in the Converter Mode field. NOTE 29 The status "Unknown" may for instance occur at power-up.	{0…3}
PP	Partial Duration Test Pending	0: Unknown 1: No test pending 2: Test pending 3: Reserved NOTE 30 The information about a running test is given in the Converter Mode field. NOTE 31 The status "Unknown" may for instance occur at power-up.	{0…3}
CF	Converter Failure	Indicates that one or more failures were detected. Further information about the Type of failure can be found in CTR. 0: Unknown 1: No failure detected 2: Failure detected 3: Reserved	{0…3}

578	Converter 1, Battery info	Status	2 Byte 7.001	CRT

This object reports the battery status according to Konnex data point type 246.600.

6.10 DPT_Battery_Info

Format:	2 octets: $r_4B_4U_8$
octet nr.	2_{MSB} 1_{LSB}
field names	0 0 0 0 BS BCL
encoding	r r r r B B B B N N N N N N N N
Unit:	None.
Resol.	(not applicable)
PDT:	PDT_GENERIC_02

Datapoint Types		
ID:	Name:	Usage:
246.600	DPT_Battery_Info	FB

Field names	Description	Encoding	Range
BS	Battery Status	Bit 0: Battery Failure Acc. DALI Cmd. 252 Bit 1: Battery Duration Failure Acc. DALI Cmd. 252 Bit 2: Battery Fully Charged Bit 3 to 7: Reserved, must be 0	{0, 1}
BCL	Battery Charge Level Indicates the recent charge level	0: deep discharge point … 254: fully charged 255: unknown or not supported According DALI Cmd. 241	{0…255}

18.4.3.1.2 Objects according to earlier versions

Object	Object name	Function	Type	Flags
575	Converter 1, Test start	Start	1 Byte	CW
This object is used to start a long duration test, function test and battery status query of the converter. The individual Bits have the following meaning: Bit 0 → Start function test Bit 1 → Function test pending Bit 2 → Start duration test Bit 3 → Duration test pending Bit 4 → Query battery status Bit 5 → Battery status query pending Bit 6 → Function test running Bit 7 → Duration test running				
576	Converter 1, Test result	Test	3 Byte	CRT
This object is used to analyse the results of function and duration tests and the battery status. The individual bits have the following meaning: Bit 23..16 → If test is function or battery test: Battery status 0..100% → If test is duration test: Test time of duration test in steps of 2 Minutes Bit 15 → Failure during duration test Bit 14 → Failure during function test Bit 13 → Maximum time for duration test exceeded Bit 12 → Maximum time for function test exceeded Bit 11 → Emergency lamp faulty Bit 10 → Battery faulty Bit 9 → Battery operating hours too short Bit 8 → Converter faulty Bit 7 → Duration test pending Bit 6 → Function test pending Bit 5 → Duration test running Bit 4 → Function test running Bit 3 → Test failure during the last test Bit 2 → Last test was battery query Bit 1 → Last test was duration test Bit 0 → Last test was function test			

18.4.4 ECG objects analysis and service

565	ECG 1, Failure Status	Status	1 Bit 1.005	CRT
Sends the failure status of lamp, ECG and converter failures.				
565	ECG 1, Failure Status	Status	1 Byte 5.0.10	CRT
Sends the failure status of lamp, ECG and converter failures.				
579	ECG 1, Operating Hours Reset	Yes/No	1 Bit 1.015	CW
Resets the operating hours counter. **Note:** Object 579-581 is shown for the following parameter: ECG1 --> Analysis and service --> "Operation Hour Calculation" = Yes.				

580	ECG 1, Operating Hours	Value	4 Bytes 13.100	CRT
The operating hours of a lamp are sent via this object. The internal counter can be set to 0 (Reset) or another value via this object. Please remember: The "Write" flag is switched off in the presetting.				
581	ECG 1, Life Time Exceeded	Yes/No	1 Bit 1.002	CRT
This object is used to send a status message when the configured life time of a lamp is exceeded.				

18.5 Motion detector objects

A set of communication objects is available for each of the up to 8 possible motion detectors. The following objects are available (example BM 1):

18.5.1 Motion detector objects general

2031	MD1, Movement Switching	ON/Off	1 Bit 1.001	CRT
The output is switched when motion is detected.				
2031a	MD1, Movement SetValue	Value	1 Byte 5.001	CRT
A certain value can be sent when motion is detected				
2031b	MD1, Movement SetScene	Activate	1 Byte 17.001	CRT
When motion is detected, an assigned scene is started.				
2032	MD1, Disable	Yes/No	1 Bit 1.003	CW
This object disbales the Motion Detector.				
2033	MD1, Movement Off	On/Off	1 Bit 1.001	CW
The presence can be switched off directly via this object and the detector is reset.				
2035	MD1, Failure Status	Status	1 Bit 1.005	CRT
Sends the failure status as an object on the bus.				

18.5.2 Motion detector objects brightness

2034	MD1, Brightness	Brightness	2 Byte 9.004	CRT
Sends the value of the detected brightness as an object to the bus.				
2036	MD1, Brightness is below the Threshold	Yes/No	1 Bit 1.005	CRT
Sends an object to the bus when the value falls below the threshold.				

19 ETS parameters

The ETS parameters of the device are distributed across different parameter pages. To simplify the overview, only the parameter pages of the device selected in the function tree are displayed.

19.1 General

Five parameter pages are available under the heading "General". The parameters are described below.

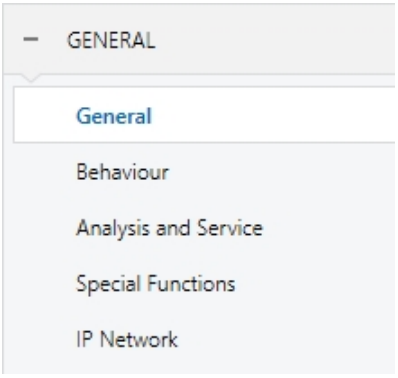

19.1.1 Parameterpage: General

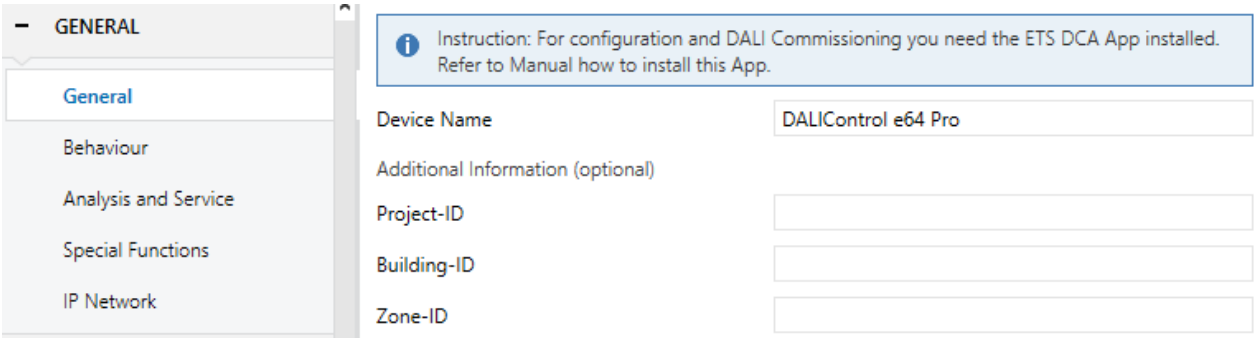

Parameter	Settings
Device Name	DALI Gateway Pro
You can assign your own device name here. DALI Gateway Pro is preset.	
Additional information about: Project-ID, Circuid-ID, Distributationboard-ID	Project-ID Circuit-ID Distributionboard-ID
Space for additional installation instructions (optional)	

19.1.2 Parameterpage: Behaviour

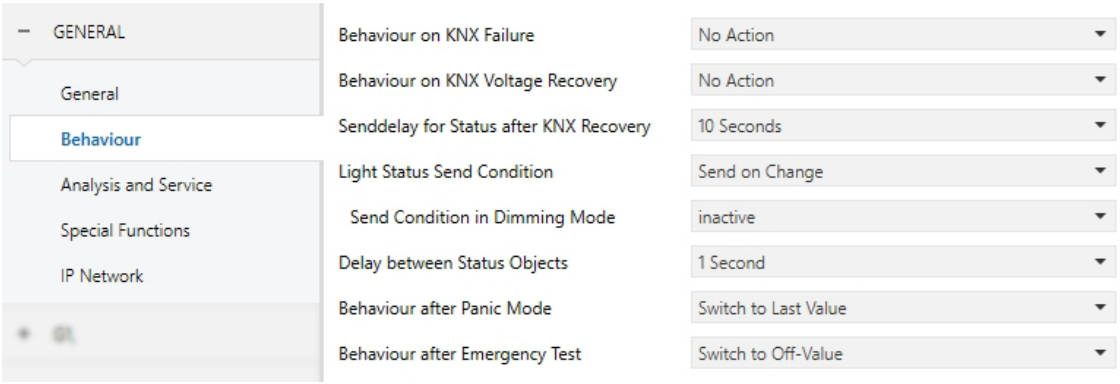

Parameter	Settings
Behaviour on KNX Failure	**No Action** Switch to ON-Value Switch to OFF-Value Switch to Panic Value
Use this parameter to set the behaviour of the connected ECGs/lamps when a KNX failure occurs.	
Behaviour on KNX Voltage Recovery	**No Action** Switch to Last Value Switch to ON-Value Switch to OFF-Value
Use this parameter to set the behaviour of the connected ECGs/lamps on KNX voltage recovery or bus reset.	
Send delay for Status after KNX Recovery	immediately 5 Seconds **10 Seconds** 15 Seconds 20 Seconds 30 Seconds 40 Seconds 50 Seconds 60 Seconds
Sets a delay for sending status objects after KNX voltage recovery or a bus reset. In installations with more than one gateway, different settings for this parameter can prevent all devices from sending at the same time.	
Light Status Send Condition	Send on Request **Send on Change** Send on Change and after Busreset
Determines the light status send conditions (switch status and value status) of the connected ECGs and groups.	
Send Condition in Dimming Mode	If Change > 2% If Change > 5% If Change > 10% If Change > 20% **inactive**
Use this parameter to set whether and when you would like a value status to be sent via a 4 bit dimming telegram during dimming (relative dimming). If you use the setting inactive, the value is only sent after the dimming process is complete.	
Behaviour after Panic Mode	Switch to OFF-Value Switch to ON-Value **Switch to Last Value**
Use this parameter to determine which light value ECGs / lamps are to adopt after the panic mode has finished. If you use "Switch to Last Value", the value prior to the panic mode is saved and the lamp returns to this value afterwards.	

Behaviour after Emergency Test	Switch to OFF-Value Switch to ON-Value **Switch to Last Value**
Use this parameter to determine which light value ECGs / lamps are to adopt after the emergency test has finished. If you use "Switch to OFF-Value", the value prior to the emergency test is saved and the lamp returns to this value afterwards.	

19.1.3 Parameterpage: Analysis and Service

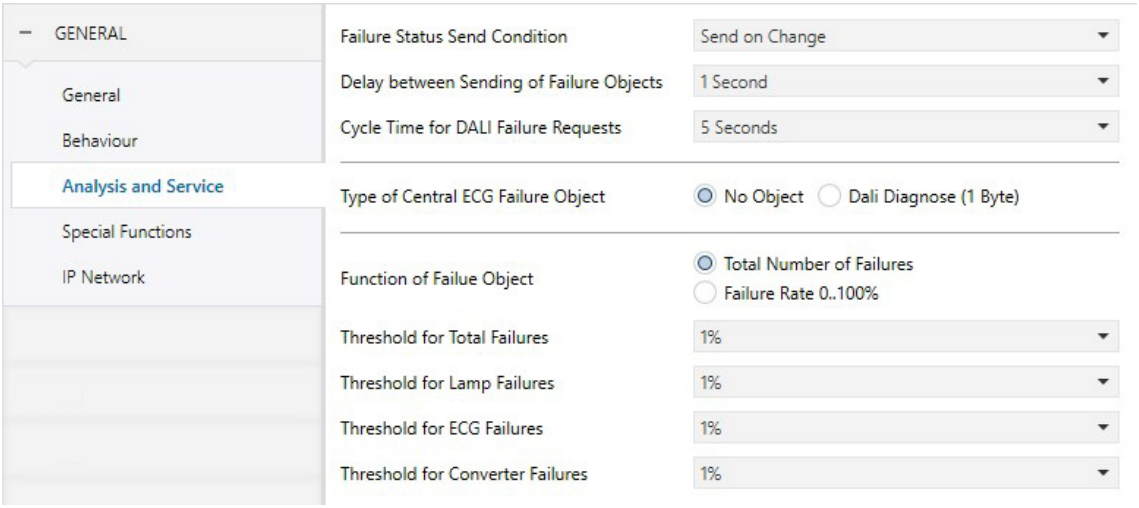

Parameter	Settings
Failure Status Send Condition	Send on Request **Send on Change** Send on Change and after Busreset
Sets the conditions under which the failure status objects of the connected ECGs and groups are to be sent.	
Cycle Time for DALI Failure Request	no request 0.5 Seconds 1 Second 2 Seconds 3 Seconds 4 Seconds **5 Seconds** 6 Seconds 7 Seconds 8 Seconds 9 Seconds 10 Seconds
To analyse ECG and lamp failures, a periodic request has to be sent to the ECGs via DALI telegrams. Use this parameter to set the cycles for these periodic requests. **Attention:** If you set "no request" ECG and lamp failures can no longer be recognised. The evaluation of emergency luminaires is no longer possible! You should therefore use this setting only during service or in special cases.	
Type of Central ECG Failure Object	**No Object** Dali Diagnose (1 Byte)
Use this parameter to select whether you want to use the central failure object for ECG and lamp failures (object number 13).	
Function of Failure Object	**Total number of Failures** Failure rate 0..100%

Use this parameter to select whether you want to use the failure analysis objects (objects number 16, 18, 20 and 22) to report the total amount of failures or the failure rate in %.	
Threshold for Total Failures	**1%** 2% 3% ….. 100%
Configures a threshold value for the general failure alarm object (object 16). The threshold value takes all failures (ECG, lamp and converter failures) into consideration independently of the failure type and relates them to the total number of connected ECGs and converters.	
Threshold for Lamp Failures	**1%** 2% 3% ….. 100%
Configures a threshold value for the lamp failure alarm object (object 18). The threshold value considers all lamp failures in relation to the total number of connected lamps in the DALI segment.	
Threshold for ECG Failures	**1%** 2% 3% ….. 100%
Configures a threshold value for the ECG failure alarm object (object 20). The threshold value considers all ECG failures in relation to the total number of connected ECGs in the DALI segment.	
Threshold for Converter Failures	**1%** 2% 3% ….. 100%
Configures a threshold value for the converter failure alarm object (object 22). The threshold value considers all converter failures in relation to the total number of connected converters in the DALI segment.	

19.1.4 Parameterpage: Special Functions

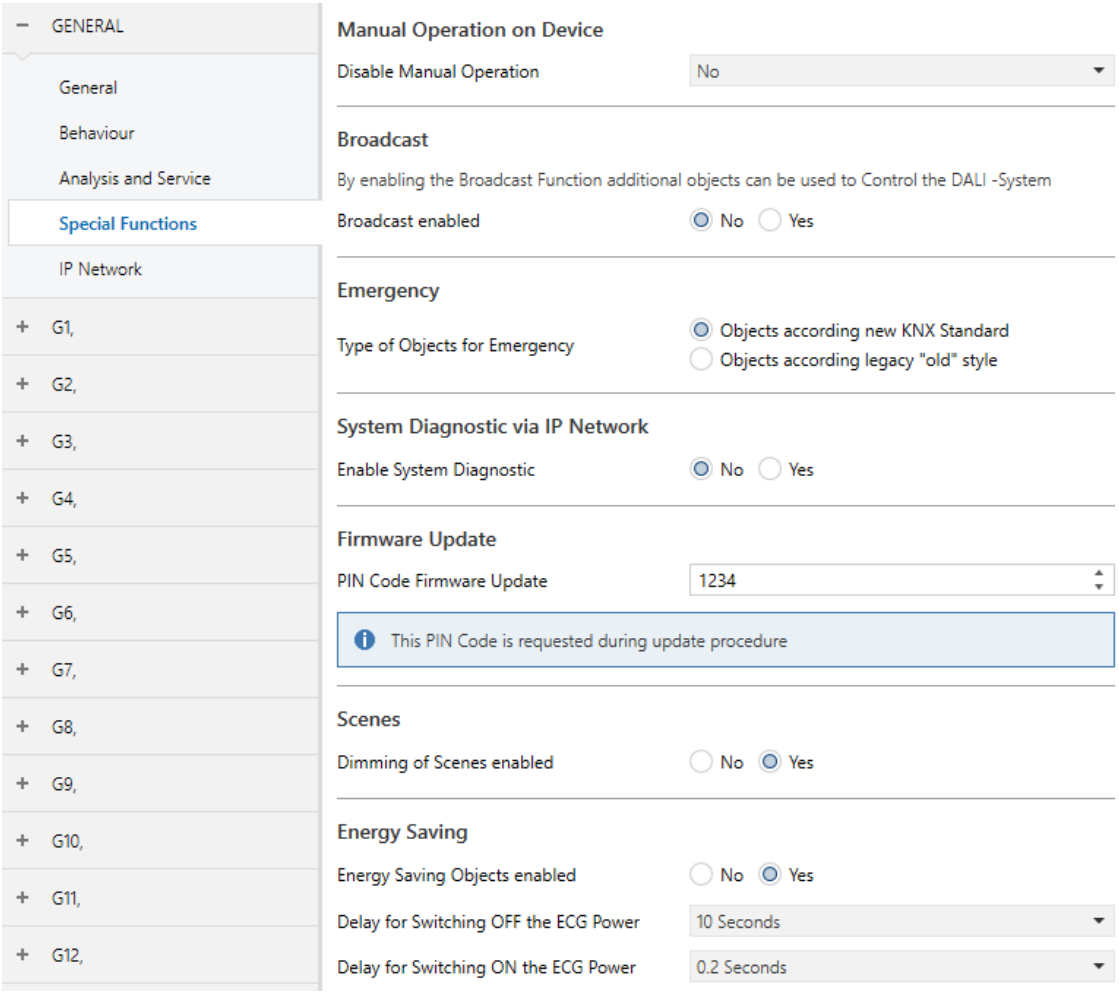

Parameter	Settings
Enable operation on the device	**No** Yes, all settings are disabled Yes, without installation
With this parameter, manual control can be enabled directly on the device.	
Broadcast enabled	**Yes** No
This parameter can be used to enable the broadcast function in addition to group control. The activation activates a new tab "Broadcast. See chapter: 19.2 Parameterpage: Broadcast  **Note:** When activating the broadcast function, additional objects to control the DALI system can be used and further parameters appear.	

Type of Objects for Emergency	**Objects accirding new KNX Standard** Objects according legacy "old" style



Enable System Diagnostics	**No** Yes

Allows system diagnostics over the network. Has been in the security settings → IP Network / Security Settings the option "Communication on local network, only" is selected, the possibility of external diagnostic access is disabled.

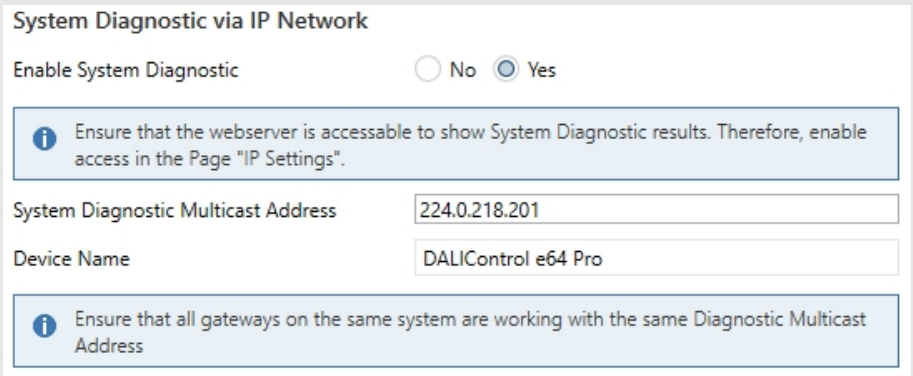

System diagnostics Multicast address	**224.0.2.201**

All gateways belonging to the system must communicate via the same multicast address.

Device name	

The device name already defined under General Settings is displayed here. It can also be changed here. This name will be displayed later on the web page.

Send status at least all	No **30 minutes** 60 minutes 120 minutes

A further parameter can be used to define after which time the status is to be sent if no change has occurred during this time and thus no automated event is reported.

Delete inactive entries from the list after	6 hours 12 hours **1 day** 2 days 3 days 4 days

The inactive entries (non-active gateways) are deleted after this time.

PIN Code Firmware Update	1234
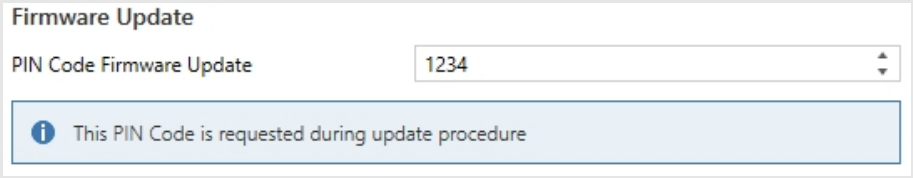 This number is requested during a firmware update, see **Fehler! Verweisquelle konnte nicht gefunden werden. Fehler! Verweisquelle konnte nicht gefunden werden.**	
Dimming of Scenes enabled	**No** Yes
	
Energy Saving Objects enable	**No** Yes
 When this function is activated, an energy-saving object can be selected for both groups and ECGs to switch off the power supply when the lighting is switched off.	
Delay for Switching OFF the ECG Power	**10 Seconds** 30 Seconds 1 Minute 2 Minutes 5 Minutes 10 Minutes
Delay before switching off the power.	
Delay for Switching ON the ECGs	0.1 Seconds **0.2 Seconds** 0.3 Seconds … 1 Second 2 Seconds
Delay until the ECGs are switched on. During this time the actuator controlling the power supply must have switched safely.	

19.1.5 Parameterpage: IP Network

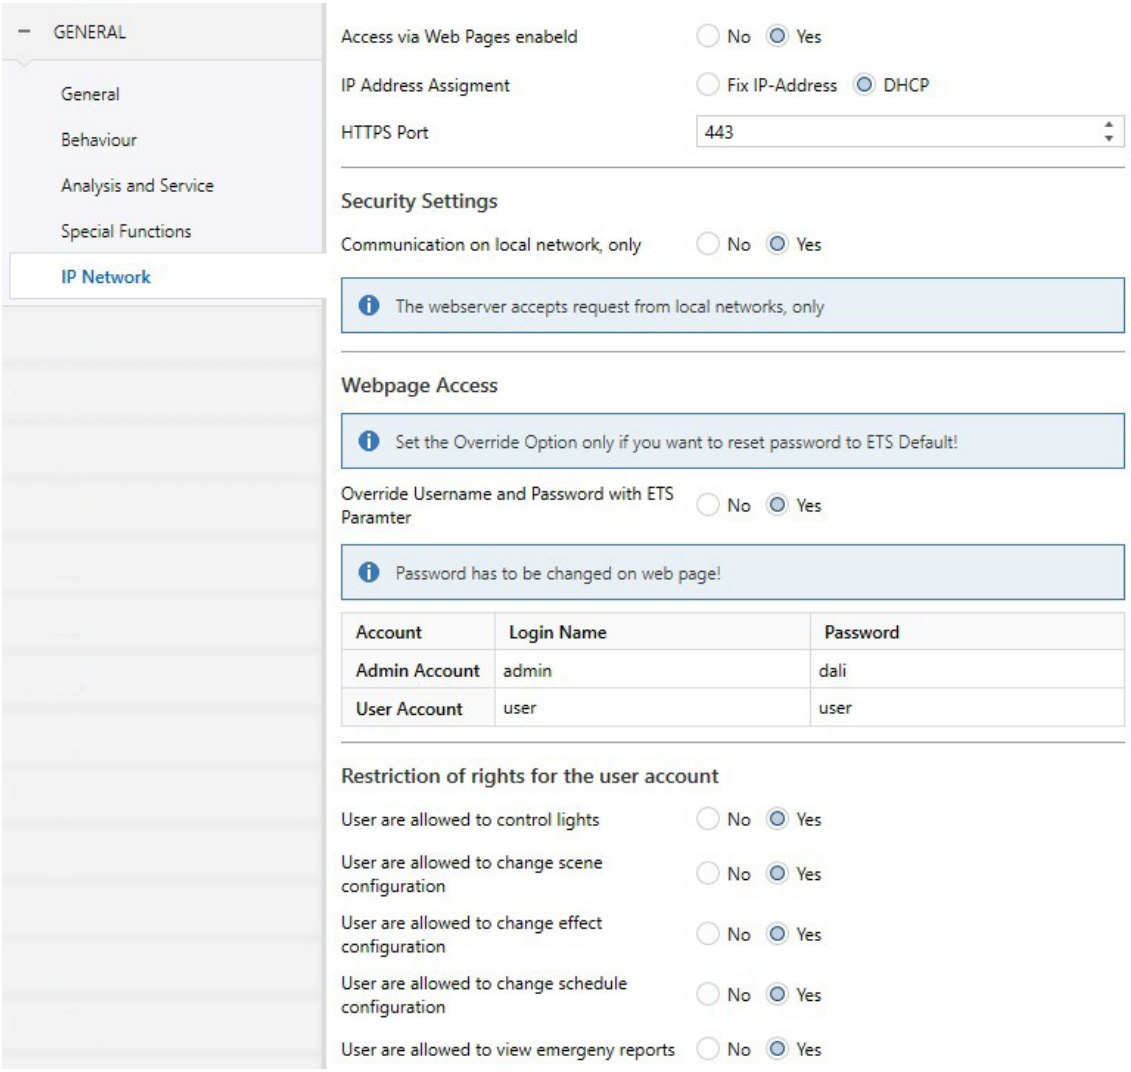

Parameter	Settings
Access via Web Pages enabled	**No** Yes
This can be used to deactivate the basic use of web operation for security reasons. **Attention:** An IP connection is required for the firmware update. If deactivated, no firmware update is possible!	
IP Adress Assigment	Fix IP-Adress **DHCP**
Determines whether the device is given a fixed IP address or a dynamic IP address via DHCP. When selecting the fixed IP address, the following additional parameters are shown. 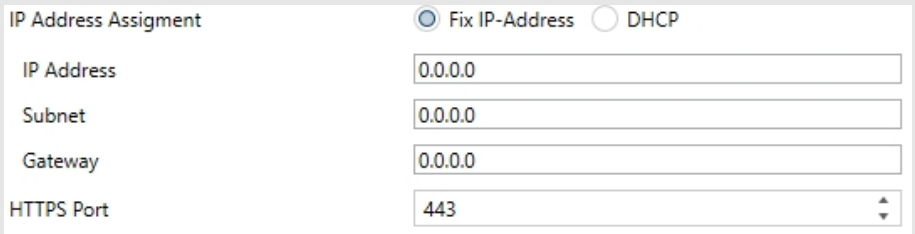	

HTTP Port	**443**
The device has a HTTPSl web server to visualize the status or to carry out commissioning. The port is set to the standard value 443.	
Name resolution (mDNS)	
Enable Host Name Resolution (mDNS)	**Nein** Ja
If enabled the device can be found by this hostmane	
Host Name	
This parameter defines the Host Name.	

Due to security reason this Service shall only be used in trusted internal networks. Please, take care that router are configured to block this Service. The selected host name must be unique in the entire system.

Security settings	
Communication on local network, only	**No** Yes
This parameter can be used to restrict the web server for operating and controlling the device via websites. By default, only requests from the local network are accepted.	

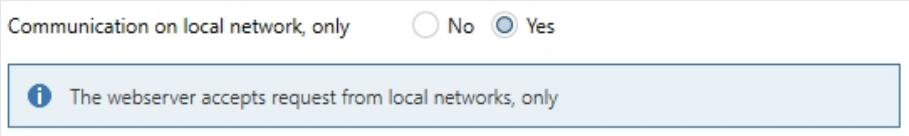

Website access	
Overwrite Username and Password with ETS Parameter.	No **Yes**

With this option the passwords can be reset. Refer to chapter 2 KNX Secure for detailled information.

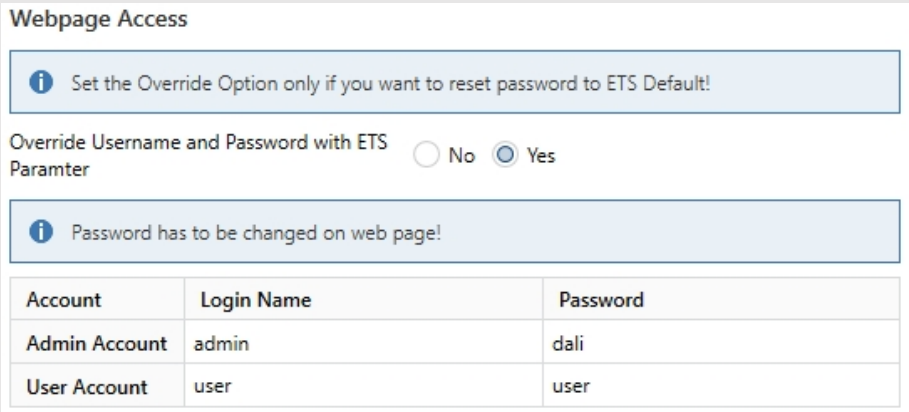

Account	Login Name	Password
Admin Account	admin	dali
User Account	user	user

Admin Account	Entry (8 characters)
The standard operator is "admin". The default password "**dali**" must be changed on the website and has a maximum length of 8 characters. **Note:** An empty password is not allowed.	
User Account	Entry (8 characters)
The default operator is "**user**". The default password "**user**" must be changed on the website and has a maximum length of 8 characters. **Note:** An empty password is not allowed.	
Restriction of rights for the user account	User are allowed to control lights ○ No ◉ Yes User are allowed to change scene configuration ○ No ◉ Yes User are allowed to change effect configuration ○ No ◉ Yes User are allowed to change schedule configuration ○ No ◉ Yes User are allowed to view emergeny reports ○ No ◉ Yes
Here the user rights can be released or restricted.	

19.2 Parameterpage: Broadcast

This tab is displayed if the "Broadcast enabled" option has been activated in → ETS parameters/General/ Special Functions.

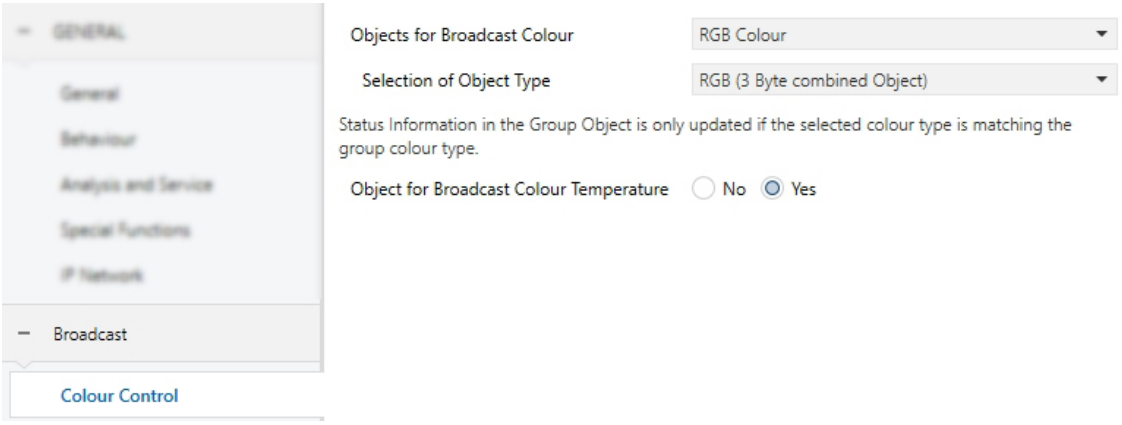

Objects for Broadcast Colour	**No** RGB Colour RGBW Colour XY Colour
This defines which communication objects are to be displayed for broadcast colour control.  When selecting RGB / RGBW or XY colour, an additional selection window is displayed. 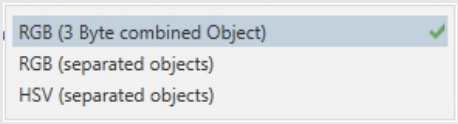 Selection RGB Colour 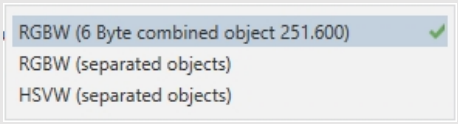 Selection RGBW Colour  Selection XY Colour **Note:** The status information is only updated if the type of the colour control matches the type defined in the group.	
Object for Broadcast Colour Temperature	No **Yes**
Activate object for broadcast colour temperature.	

19.3 Group

There are 4 parameter pages for group settings. The parameters are described below.



19.3.1 General Group1 (2.. 16)

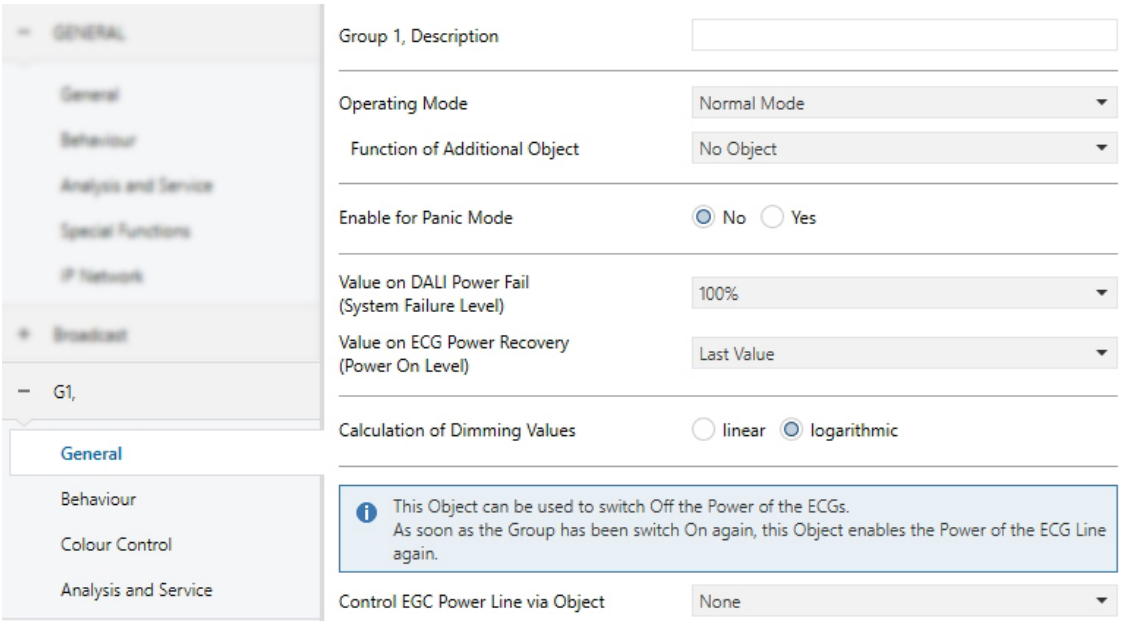

Parameter	Settings
Group x, Description	e.g.: Room1 (window)

Use this parameter to define a group description. The description is shown for all communication objects.
For example: Room1 (window).

G1, Switching, Room1 (window)	On/Off
G1, Dimming, Room1 (window)	Brighter/Darker
G1, Set Value, Room1 (window)	Value
G1, Status, Room1 (window)	On/Off
G1, Status, Room1 (window)	Value
G1, Failure Status, Room1 (window)	Yes/No

Value on DALI Power Fail (System Failure Level)	0..100% **[100]** Last value
Use this parameter to set the value of a lamp after a loss of DALI power. The value is saved on the ECG and the device automatically changes to the value when a power loss occurs.	
Value on ECG Power Recovery (Power On Level)	0..100% [100] **Last value**
Use this parameter to set the value of a lamp after a return of ECG power supply. The value is saved on the ECG and the device automatically changes to the value when power is restored.	
Operating Mode	**Normal Mode** Permanent Mode Normal/Night Mode Staircase Mode
Use this parameter to set the operating mode of a group.	
Value in permanent mode (if permanent mode is selected)	0..100% **[50]**
Use this parameter to set the value of all lamps in a group in 'permanent mode'. Lamps in this mode cannot be switched or changed. They remain at the set value.	
Behaviour in Normal / Night mode (if is selected)	**Delayed Switch-Off automatically** Delayed Switch-Off in 2 steps automatically Delayed Dimm-Off automatically Activate Permanent Mode and Ignore Telegrams
This parameter can be used to set how the corresponding group behaves if night mode has been activated via the night object (No. 12). The parameter is only shown if the group is set to "Night Mode". Special settings: • **Delayed Switch-Off in 2 steps automatically:** - 1 minute before the configured time the value is set to 50% of the actual value. - After the configured time the switch-off value is set. • **Delayed Dimm-Off automatically:** - 1 minute before the configured time, the current value is dimmed to the switch-off value. • **Activate Permanent Mode and Ignore Telegrams:**	
Automatic Switch OFF after	1 Minute 2 Minutes 3 Minutes 4 Minutes **5 Minutes** 10 Minutes 15 Minutes … 90 Minutes
Use this parameter to set the time after which a group in normal/night mode automatically switches off. This parameter is only visible if you select "night mode".	
Behavior in Staircase Mode (if is selected)	**Delayed Switch-Off automatically** Delayed Switch-Off in 2 steps automatically Delayed Dimm-Off automatically
This parameter can be used to set how the corresponding group behaves in staircase operation. The parameters are only shown if the group is set to "staircase function". • **Delayed Switch-Off in 2 steps automatically:** - 1 minute before the configured time the value is set to 50% of the actual value. - After the configured time the switch-off value is set. • **Delayed Dimm-Off automatically:** - 1 minute before the configured time, the current value is dimmed to the switch-off value.	

Automatic Switch OFF after	1 Minute 2 Minutes 3 Minutes 4 Minutes **5 Minutes** 10 Minutes 15 Minutes … 90 Minutes
Use this parameter to set the time after which a group in staircase mode automatically switches off. This parameter is only visible if you select 'staircase mode'.	
Function of Additional Object	**No Object** Disable Object Release Object Staircase function Disable Object
Use this parameter to set the function of an additional object. If you select "Disable Object", value 1 disables the operation of the group. If you select "Release Object", value 1 enables the operation of the group. **Attention**: The Disable function does only refer to Switch ON/OFF and SetValue via Objects If you select " Staircase function Disable Object", value 1 disables only the staircase function. This can be used to temporarily disable the staircase function for example during cleaning.	
Behaviour on Disable	**No Change** Switch to On-Value Switch to OFF-Value
This parameter appears when an additional object has been selected to define the behaviour when disabled.	
Behaviour on Enable	**No Change** Switch to On-Value Switch to OFF-Value
This parameter appears when an additional object has been selected to define the behaviour when enabled.	
Enabled for Panic Mode	**No** Yes
Determines whether a group should be considered during panic mode. The panic mode is controlled via central object number 10.	
Value in Panic Mode	**1%** **..** **50%** **..** 100%
Use this parameter to select the value for this operating mode.	
Calculation of Dimming Values	**logarythmic** linear
Sets the dimming curve for the group.	
This Object can be used to switch Off the Power of the ECGs. As soon as the Group has been switch On again, this Object enables the Power of the ECG Line again.	
Control ECG Power Line via Object	**None** Energy Saving Object 1.. 16
Here you define the object with which the power supply is to be switched off. This parameter is only visible if this function was previously set on the General → Special Functions parameter page, see Parameterpage: Special Functions	

19.3.2 Behaviour

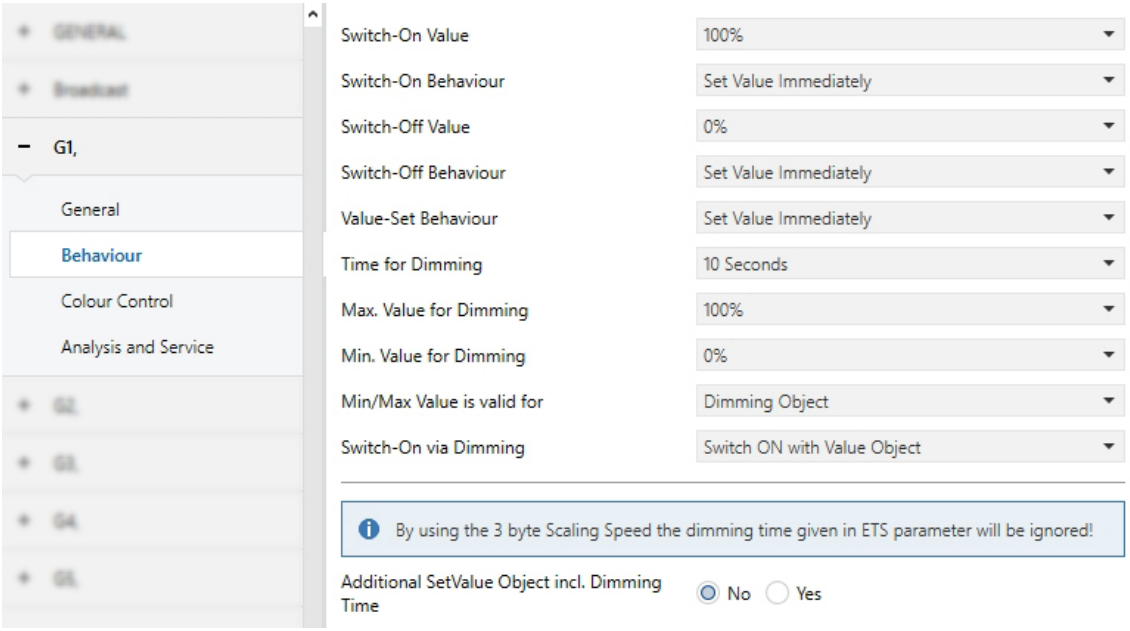

Parameter	Settings
Switch-ON Value	1% 5% 10% … 95% **100%** Last value
Use this parameter to set the switch-on value. If you select "last value", the value is set to the dimming value prior to the lamp being switched off.	
Switch-ON Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to set the switch-on behaviour.	
Switch-OFF Value	**0%** 5% 10% … 45% 50% … 95% **99%**
Use this parameter to set the switch-off value.	

Switch-OFF Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to set the switch-off behaviour.	
Value-Set Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to configure the behaviour on receipt of a new dimming value via value setting. Please remember that the dim time always refers to the full value range. Accordingly a dimming time of 30 s means a value change of 100% within 30 s. If the value within a scene is only changed by 50%, the change is performed within 15 s.	
Time for Dimming	3 Seconds 4 Seconds 5 Seconds 6 Seconds **10 Seconds** 20 Seconds 30 Seconds 60 Seconds
Use this parameter to set the dim time for relative dimming in relation to a value range from 0 to 100%.	
Max. Value for Dimming	50% 55% …. **100%**
Use this parameter to configure the maximum dimming value that can be set through relative dimming.	
Min. Value for Dimming	**0%** 0.5% 1% … 5% …. 50%
Use this parameter to configure the minimum dim value that can be set through relative dimming.	
Min/Max Value is valid for	**Dimming Object** Value Object Dimming & Value Object
Use this parameter to select the object that minimum and maximum values are valid for. It is possible to set, for example, 60% via dimming and 100% via value setting.	

Switch ON via Dimming	No Switch ON with Dimming Object **Switch ON with Value Object** Switch ON with Dimming & Value Object
Use this parameter to select whether a switched off group should be switched on when receiving a relative 4 Bit dimming object, a value setting object or both.	
Additional SetValue Object incl. Dimming Time.	**No** Yes
Determines whether the SetValue object is to be used with the combined dimming time (DPT 225.001). See object Nr. 50. **Note:** If you select the 3 Byte object (combination of value and dimming time), the dimming time in the ETS is ignored.	

19.3.3 Colour control

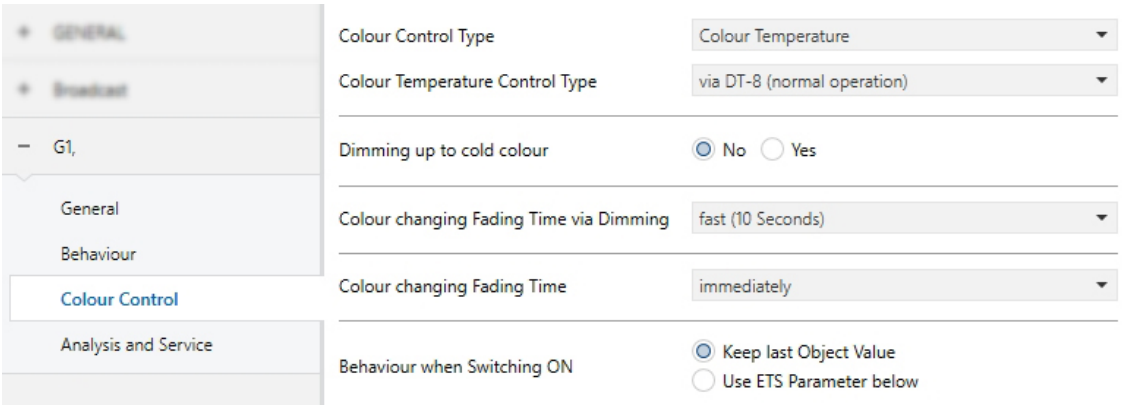

Parameter	Settings
Colour Control Type	**none** Colour temperature RGB colour RGBW colour XY Colour Colour temperature + RGB Colour temperature + RGBW
This parameter can be used to set which colour control should be used in this group. Please make sure that the ECGs in this group also support this type of control.	

19.3.3.1 Colour Temperature

Colour Temperatur Control Type (when selecting "Colour temperature")	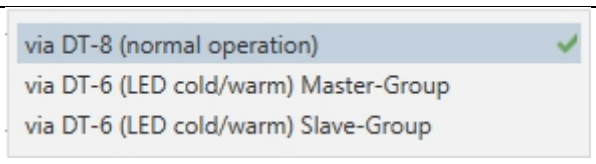
When "Colour Temperature" is selected, these types of control are supported.	
Via DT-8 (normal operation)	

Dim-to-warm	**No** Yes
When this option is activated, the color temperature is changed as the light is dimmed up. The corresponding values are set in the following parameter	
Colour temperature at Value 0% Colour temperature at Value 100%	Colour Temperature at Value 0% 3000 °K Colour Temperature at Value 100% 6000 °K
Parameters for setting the colour temperature (warm) in dimmed light and (cold) in high dimmed light.	
Colour changing Fading Time via Dimming	**Fast (10 seconds)** Standard (20 seconds) Slow (40 seconds)
This parameter is used to decide how quickly the colour temperature should be changed when dimming.	
Colour changing Fading Time	**immediately** 1 second 5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 90 seconds
This parameter is used to decide how quickly the colour temperature should be changed.	
Behaviour when Switching ON	**Keep last Object Value** Use ETS Parameter below
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last Object Value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Colour Temperature when Switching ON	3000 °K
Colour temperature at power-on with the option "Use ETS Parameter below" enabled.	
Via DT-6 (LED cold/warm) Master-Group	via DT-6 (LED cold/warm) Master-Group
This allows a colour temperature to be set via 2 DT-6 groups. For example, LED strips with a warm colour (3000K) are assigned to a master group and LED strips with a cold colour (6000K) to a slave group	
Colour Temperature by using 2 Groups (one for cold white, one for warm white) Colour Temperature for Master LED (warm) 1000 °K Colour Temperature for Slave LED (cold) 6000 °K	
Here the real values for the two LEDs are defined	
Via DT-6 (LED cold/warm) Slave-Group	via DT-6 (LED cold/warm) Slave-Group
This Group is controlled by another Master Group. Settings and Objects from the Master are vaild.	
Assign according Master Group	**Group 1** Group 2 Group 3 …. Group 16
Assignment of the relevant master group.	

19.3.3.2 RGB

Selection of Object Type (when selecting "RGB Colour")	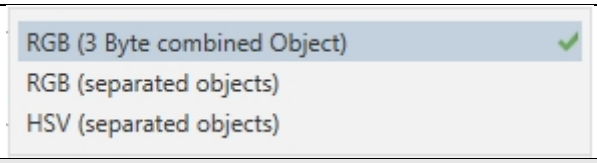
When selecting "RGB colours", these types of control are supported.	
Time at colour change via dimming	**Fast (10 seconds)** Standard (20 seconds) Slow (40 seconds)
This parameter is used to decide how quickly the colour temperature should be changed when dimming.	
Colour changing Fading Time	**immediately** 1 second 5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 90 seconds
This parameter is used to decide how quickly the colour temperature should be changed.	
Correction Value for special LED	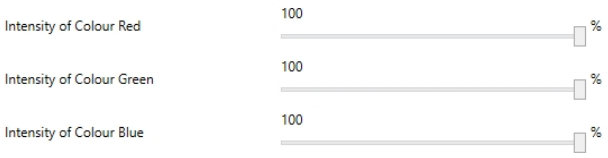
Under certain circumstances, the intensity of the colours red, green, blue may not be exactly matched to the illuminants and the ballast. In order to carry out a subsequent correction, the weighting of the individual colours can be changed here. An intensity of 100% means that this colour is controlled to 100%.	
Behaviour when Switching ON	**Keep last Object Value** Use ETS Parameter below
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last Object Value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Colour value at switch-on	
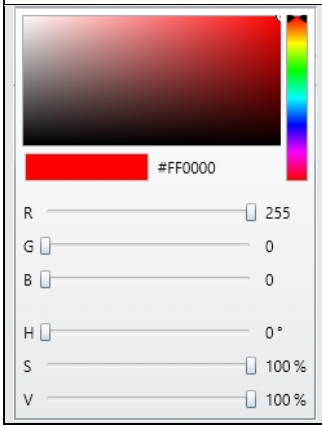	This parameter defines the RGB colour when switching on. To do this, a window for colour selection is displayed via the button in the ETS.

19.3.3.3 RGBW

Selection of Object Type (when selecting "RGBW Colour")	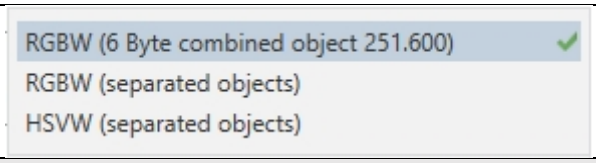
When selecting "RGBW colours", these types of control are supported. For ETS parameters see chapter: 3 Colour control ..	
Behaviour when Switching ON	**Keep last Object Value** Use ETS Parameter below
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last Object Value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Use ETS parameters as set below	
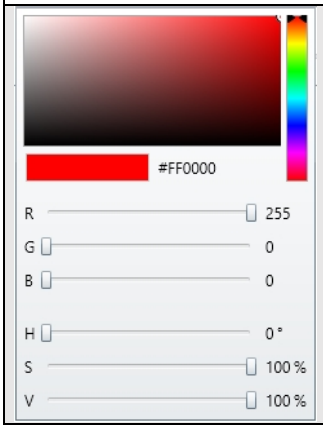	This parameter defines the RGBW colour when switching on. To do this, a window for colour selection is displayed via the button in the ETS.

19.3.3.4 XY Colour

Selection of Object Type (when selecting "XY Colour")	
This parameter can be used to set which objects are to be used for control.	
Colour changing Fading Time	**immediately** 1 second 5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 90 seconds
This parameter is used to decide how quickly the colour should be changed.	
Behaviour when Switching ON	**Keep last Object Value** Use ETS Parameter below
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last Object Value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Use ETS Parameter below	X-Value when Switching ON (0..1) Y-Value when Switching ON (0..1)

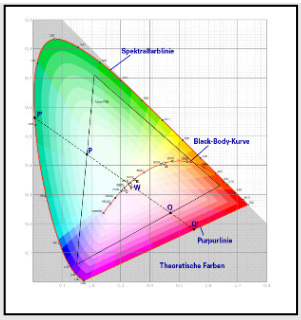

This parameter is used to define the X colour at switching-on.
The value range is between 0 and 1.
X= 0.33 and Y=0.33 corresponds to the white point.

19.3.3.5 Colour Temperature + RGB

Selection of Object Type (when selecting "Colour temperature + RGB")	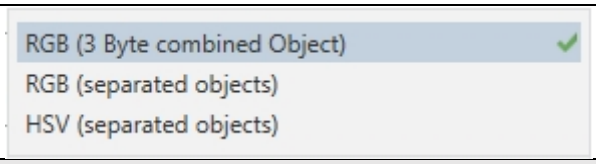
When "Colour temperature + RGB" is selected, these types of control are supported.	
Dim-to-warm	**No** Yes
When this option is activated, the color temperature is changed as the light is dimmed up. The corresponding values are set in the following parameter	
Colour temperature at Value 0% Colour temperature at Value 100%	
Parameters for setting the colour temperature (warm) in dimmed light and (cold) in high dimmed light.	
Time at colour change via dimming	**Fast (10 seconds)** Standard (20 seconds) Slowly (40 seconds)
This parameter is used to decide how quickly the colour should be changed when dimming.	
Time at colour change	**immediately** 1 second 5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 90 seconds
This parameter is used to decide how quickly the colour should be changed.	
Correction value for special LED	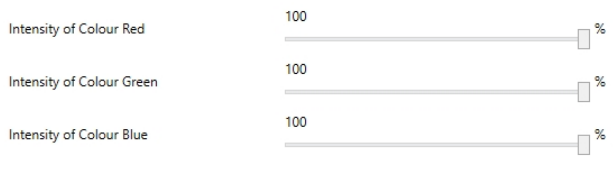
Under certain circumstances, the intensity of the colours red, green, blue may not be exactly matched to the illuminants and the ballast. In order to carry out a subsequent correction, the weighting of the individual colours can be changed here. An intensity of 100% means that this colour is controlled to 100%.	

Behaviour when Switching ON	Keep last Object Value ✓ Use ETS Parameter below for Colour Use ETS Parameter below for Colour Temperature
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last Object Value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Use ETS parameters as set below	Colour Value when Switching On #FF0000
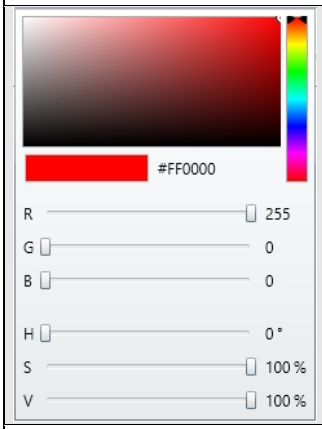 This parameter defines the RGB colour when switching on. To do this, a window for colour selection is displayed via the button in the ETS.	
Behaviour when Switching ON	3000 °K
Colour temperature on power on with the option "Use ETS parameters for colour temperature as set below" enabled.	

19.3.3.6 Colour Temperature + RGBW

Selection of the Object Type (when selecting "Colour Temperatur + RGBW")	RGBW (6 Byte combined object 251.600) ✓ RGBW (separated objects) HSVW (separated objects)
When selecting "Colour Temperatur + RGBW", these types of control are supported.	
Dim-to-warm	**No** Yes
When this option is activated, the color temperature is changed as the light is dimmed up. The corresponding values are set in the following parameter	
Colour temperature at 0% Colour temperature at 100%	Colour Temperature at Value 0% 3000 °K Colour Temperature at Value 100% 6000 °K
Parameters for setting the colour temperature (warm) in dimmed light and (cold) in high dimmed light.	
Colour changing Fading Time via Dimming	**Fast (10 seconds)** Standard (20 seconds) Slow (40 seconds)
This parameter is used to decide how quickly the colour should be changed when dimming.	

Colour changing Fading Time	**immediately** 1 second 5 seconds 10 seconds 20 seconds 30 seconds 60 seconds 90 seconds
This parameter is used to decide how quickly the colour should be changed.	
Correction Value for special LED	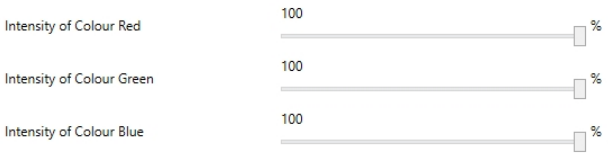
Under certain circumstances, the intensity of the colours red, green, blue may not be exactly matched to the illuminants and the ballast. In order to carry out a subsequent correction, the weighting of the individual colours can be changed here. An intensity of 100% means that this colour is controlled to 100%.	
Behaviour when Switching ON (when selecting "ETS Parameter below for Colour")	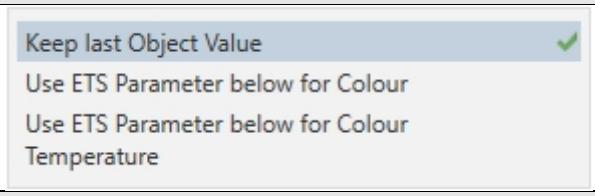
This parameter is used to decide whether the last valid colour value should always be used or basically the colour temperature that was set with the ETS. **Note:** in case of "Keep last object value" - **Attention:** in case of an invalid object value, the preset colour of the ETS is used.	
Use ETS Parameter below (when selecting "ETS Parameter below for Colour Temperature")	
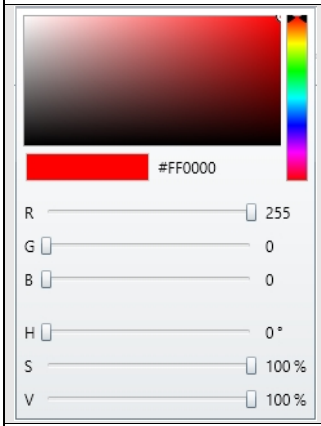 This parameter defines the RGB colour when switching on. To do this, a window for colour selection is displayed via the button in the ETS.	
Behaviour when Switching ON	
Colour temperature on power on with the option "Use ETS parameters for colour temperature as set below" enabled.	

19.3.4 Analyse and Service

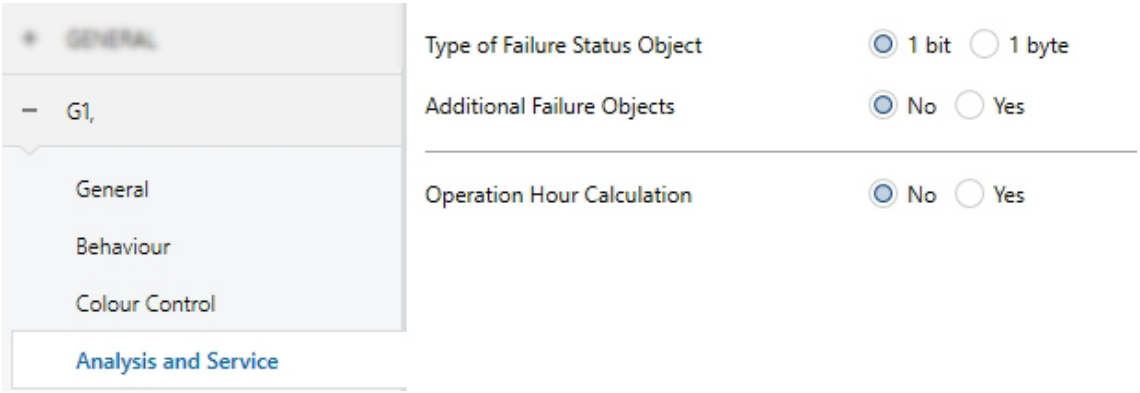

Parameter	Settings
Type Failure Status Object	**1 Bit** 1 Byte
Determines whether the failure object should be sent as a 1 Bit object without differentiation after the failure type has been detected or as an 8 Bit object with differentiation.	
Additional Failure Objects	**No** Yes
Use this parameter if you want to define additional failure objects.	
Additional Failure Object for	**Failure threshold Exceeded** Failure Number/Rate
Determines whether the additional failure object should be used as a 1 Byte object for number of failures/failure rate or as a 1 Bit object for exceeding the failure threshold.	
Function of Additional Failure Object	**Total Number of Failures** Failure Rate 0..100%
Use this parameter to select either number of all failures in a group or failure rate in %. This parameter is only visible if you select "Total Number of Failures" as additional failure object.	
Threshold for Total Failures	1%...100% **[1%]**
Use this parameter to enter the threshold in %. When the threshold is exceeded, the failure alarm object is sent. This parameter is only visible when you select "Failure Threshold Exceeded" as additional failure object.	

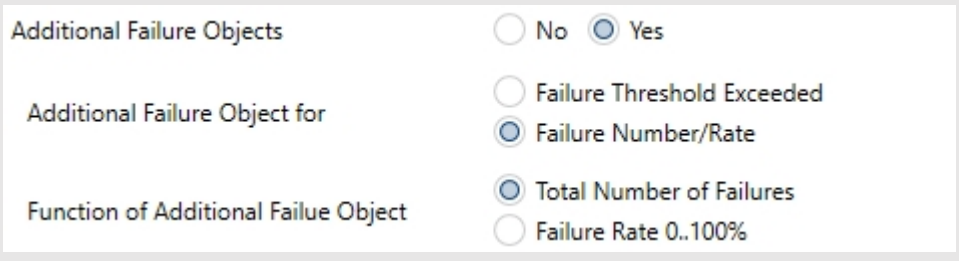

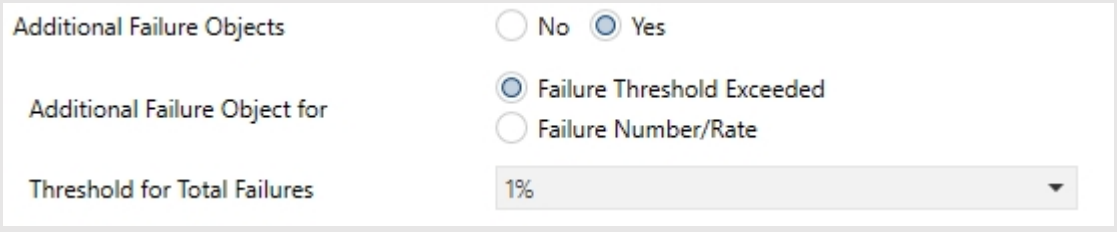

Operation Hours Calculation	Yes **No**
Use this parameter if you want to count the operating hours of a group.	
Operating Hour Limit (hours)	1 h..200.000 h **[4000 h]**
Sets the life span of a lamp with an individual warning being sent. 	

19.4 ECG

The settings for the ECGs are made on two parameter pages, provided that this ECG is defined as a single ECG and has not been assigned to a group. The parameters on these pages are described below.

19.4.1 ECG General

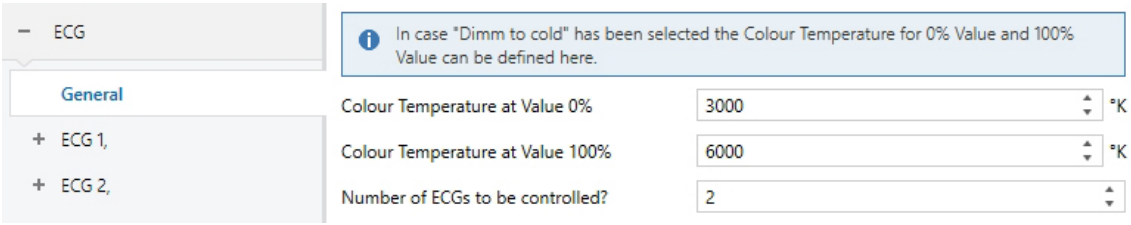

Colour Temperature at Value 0% Colour Temperature at Value 100%	Colour Temperature at Value 0% 3000 °K Colour Temperature at Value 100% 6000 °K
Parameters for setting the colour temperature (warm) with dimmed light and (cold) with dimmed light.	
Number of ECGs to be controlled?	Number of ECGs to be controlled? 2
Parameter for setting the number of ECGs (0.. 64) to be installed.	

19.4.2 ECG 1 (2.. 64)

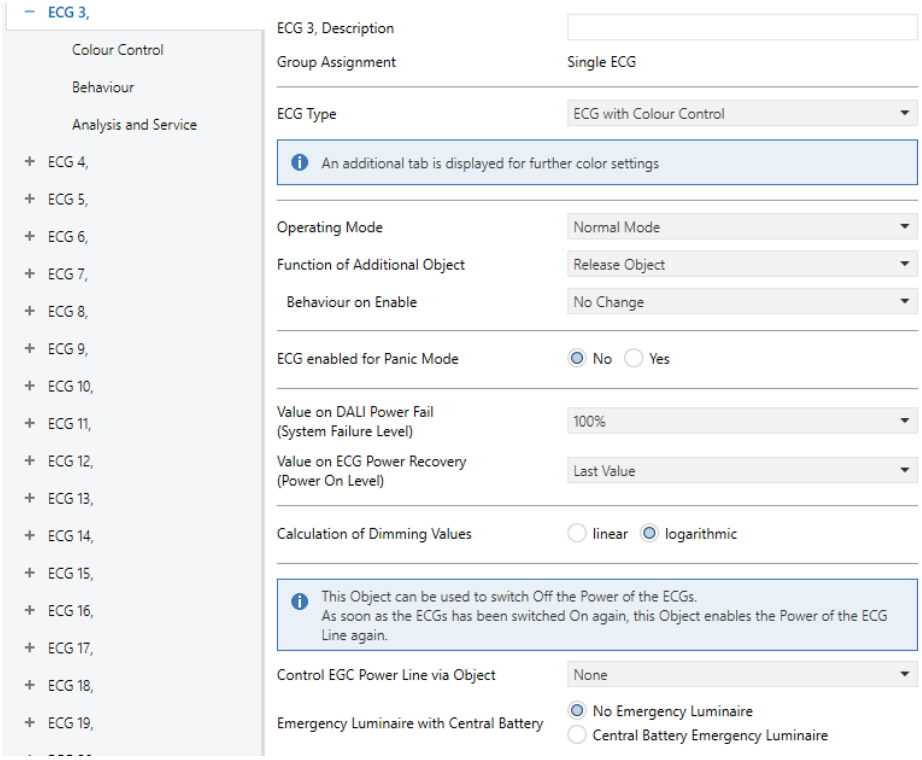

Parameter	Settings
ECG x, Description	e.g.: Floor, 1 level
With this parameter an ECG description can be defined. This description is displayed as an overview for all communication objects. Example for the description: Floor, 1 level. ECG 1, Switching, Floor, 1 level — On/Off ECG 1, Dimming, Floor, 1 level — Brighter/Darker ECG 1, Set Value, Floor, 1 level — Value ECG 1, Status, Floor, 1 level — On/Off ECG 1, Status, Floor, 1 level — Value ECG 1, Failure Status, Floor, 1 level — Status	
Group Assignment	Not assigned Group 1 … Group 16
The group assignment is configured via the DCA or via the website and is only displayed here.	
ECG Type	Fluorescent Lamp Self Contained Battery Lamp (non switchable) Self Contained Battery Lamp (switchable) Self Contained Battery Lamp (switchable) + Colour Control Discharge Lamp Low Voltage Lamp Incandescent Lamp 0..10V Converter **LED Module** Relay Module ECG with Colour Control
Use this parameter to set the type of ECG used.	

ECG Type	**LED Module**
Parameters for the ECG type LED module	
Operating Mode	**Normal Mode** Permanent Mode Normal / Night Mode
This parameter allows to set the operating mode in which the ECG shall be operated. Night operation is controlled via a central object no. 12.	
Function of Additional Obejct	**No Obejct** Disable Object Release Object
This parameter can be used to define the function of an additional object. If the "Disable object" is selected, an object is displayed which blocks operation of the ECG if the value is "1". If the "Enable object" is selected, an object is displayed which enables operation of the ECG if the value is "1". **Note:** Disable function only refers to ON/OFF and value setting commands via KNX objects	
Behaviour on Enable	**No Chance** Switch to ON-Value Switch to OFF-Value
This parameter is displayed when an additional object is selected. The behaviour during activation can be defined here..	
Value in Permanent Mode	1..100% **[50%]**
This parameter allows you to set the value to which the corresponding lamp is permanently set in "Permanent" Mode. In the operating mode 'continuous operation' the lamp cannot be switched or changed, but always lights up in the set value. The parameter is only displayed if the ECG is set to 'continuous operation'.	
Behaviour in Normal / Night Mode (if is selected)	**Delayed Switch-Off automatically** Delayed Switch-Off in 2 steps automatically Delayed Dimm-Off automatically Activate Permanent Mode and Ignore Telegrams
This parameter can be used to set how the corresponding group behaves if night mode has been activated via the night object. The parameter is only shown if the group is set to "Normal Night Mode". Special settings: • **Delayed Switch-Off in 2 steps automatically:** - After the set time is set to 50% of the previous value. - After a further minute, the switch-off value is set. • **Delayed Dimm-Off automatically:** **-** After the set time, the switch-off value is dimmed within one minute. • **Activate Permanent Mode and Ignore Telegrams:**	
Automatic Switch-Off after (minutes)	1 minute 2 minutes 3 minutes 4 minutes **5 minutes** 10 minutes 15 minutes … 90 minutes
This parameter is used to decide after how many minutes the ECG shall be switched off.	
Function of Additional Object	**No Object** Disable Object Release Object Staircase function Disable Object
Use this parameter to set the function of an additional object. If you select "Disable Object", value 1 disables the operation of the group. If you select "Release Object", value 1 enables the operation of the group. If you select " Staircase function Disable Object", value 1 disables only the staircase function. This can be used to temporarily disable the staircase function for example during cleaning.	

Behaviour on Enable	**No Change** Switch to On-Value Switch to OFF-Value
This parameter appears when an additional object has been selected to define the behaviour when enabled.	
Enabled for Panic Mode	**No** Yes
Determines whether a group should be considered during panic mode. The panic mode is controlled via central object number 10.	
Value in Panic Mode	1..100% [**50**]
Use this parameter to select the value for this operating mode.	
Value on DALI Power Fail (System Failure Level)	0..100% **[100]** Last value
Use this parameter to set the value of a lamp after a loss of DALI power. The value is saved on the ECG and the device automatically changes to the value when a power loss occurs.	
Value on ECG Power Recovery (Power On Level)	0..100% [**100**] **Last value**
Use this parameter to set the value of a lamp after a return of ECG power supply. The value is saved on the ECG and the device automatically changes to the value when power is restored.	
Calculation of Dimming Values	**logarythmic** linear
Sets the dimming curve for the group.	
This Object can be used to switch Off the Power of the ECGs. As soon as the Group has been switch On again, this Object enables the Power of the ECG Line again.	
Control ECG Power Line via Object	**None** Energy Saving Object 1.. 16
Here you define the object with which the power supply is to be switched off. This parameter is only visible if this function was previously set on the General → Special Functions parameter page, see Parameterpage: Special Functions	
Emergency Lights with Central Battery	**No Emergency Lighting** Central Battery Emergency Lighting
Use this parameter if you want the ECG to control an emergency light with central battery. Devices defined as emergency lights are specifically marked during status notifications and a special test mode can be activated via an object. This parameter is not visible if "self contained emergency light" has been selected.	
Value in Test Mode	0..100% [**50**]
This parameter can be used to set the value to which the corresponding lamp is permanently set in "Test mode". In the operating mode "test mode" the lamp cannot be switched or changed, but always lights up in the set value. This parameter is only visible if "Emergency lighting with central battery" has been selected. Test mode is started with object 11.	
Duration of Test Mode (minutes)	5 Minutes …. **1 Hour** …. 4 Hours
Use this parameter to configure for how long the lamp will be on after starting the test mode. A lamp in this mode cannot be switched or changed. It remains at the set value. This parameter is only visible if you select "emergency lights with central battery".	
ECG Type	Fluorocent Lamp

Parameters for the ECG type "Fluorocent Lamp". See parameter settings for LED modules.	
ECG Type	Self Contained Battery Lamp (non switchable)
Parameters for the ECG type "Self Contained Battery Lamp (non switchable)"	
Converter controls -	ECG 1… 64 **Not assigned**
Type of Failure Object	**1 bit** 1 byte
Here you can define whether the error is to be reported in the form of a bit (Alarm DPT 1.005) or via a byte object with the information about lamp or ballast errors, see chapter: 18.4 ECG objects.	
ECG Type	Self Contained Battery Lamp (switchable)
Parameters for the ECG type "Self Contained Battery Lamp (switchable)". See parameter settings for LED modules. The parameter setting "emergency lighting with central battery" is not available for this ECG type.	

ECG Type	Self Contained Battery Lamp (switchable) + Colour Control
Parameters for the ECG type "Self Contained Battery Lamp (switchable) + Colour Control". See parameter settings for LED modules. The parameter setting "emergency lighting with central battery" is not available for this ECG type.	
ECG Type	Discharge Lamp
Parameters for the ECG type "Discharge Lamp". → See parameter settings for LED modules.	
ECG Type	Low Voltage Halogen Lamp
Parameters for the ECG type "Low Voltage Halogen Lamp". → See parameter settings for LED modules.	
ECG Type	Incandescent Lamps
Parameters for the ECG type "Incandescent Lamps". See parameter settings for LED modules.	
ECG Type	0..10V Converter
Parameters for the ECG type "0..10V Converter". → See parameter settings for LED modules.	
ECG Type	Relais Module
Parameters for the ECG type "Relais Module". See parameter settings for LED modules.	
ECG Type	ECG with Colour Control
Parameters for the ECG type "ECG with Colour Control". See parameter settings for LED modules.	

19.4.2.1 Emergency Settings

This parameter page is only shown if "Broadcast enabled" (see chapter: 19.1.4 Parameterpage: Special Functions) and the EVG type "Self Contained Battery Lamp" is selected.

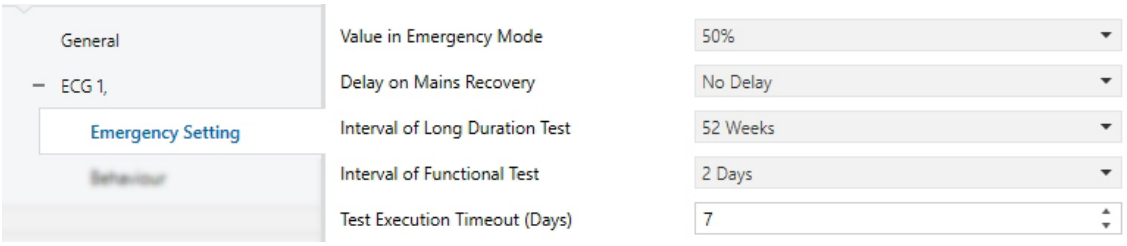

Parameter	Settings
Value in Emergency Mode	1..100% **[50]**
Sets the light value of a self-contained battery emergency light in case of a power failure or during a long duration test.	

Delay on Main Recovery	**No delay** 30 seconds 1 minute 2 minutes 3 minutes 4 minutes 5 minutes 10 minutes 10 minutes 15 minutes 20 minutes
Sets the delay until a self-contained battery lamp changes back into normal mode after power has been restored.	
Interval of Long Duration Test	No automatic test 1 week 2 week …. **52 weeks**
Use this parameter to set the intervals at which the converter is to perform automatic long duration tests.	
Interval of Functional Test	No automatic test 1 day **2 days** …. 28 days
Use this parameter to set the intervals at which the converter is to perform automatic functional tests.	
Test Execution Timeout (Days)	0..255 **[7]**
If a function or long duration test cannot be started immediately, (for example because the battery is not fully charged), the converter tries to execute the test later. Use this parameter to configure how long to attempt another test start and when to send an failure notification that the time has been exceeded. If the setting is 0, timeout will occur after 15 minutes.	

19.4.2.2 Behaviour



Parameter	Settings
Switch-ON Value	1.. 100% [**100**] Last value

Use this parameter to set the switch-on value. If you select "Last value", the value is set to the dimming value prior to the lamp being switched off.	
Switch-ON Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to set the switch-on behaviour.	
Switch-OFF Value	**0%** 5% 10% … 45% 50% … 95% **99%**
Use this parameter to set the switch-off value.	
Switch-OFF Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to set the switch-off behaviour.	
Value-Set Behaviour	**Set Value Immediately** Dimm to Value in 3s Dimm to Value in 6s Dimm to Value in 10s Dimm to Value in 20s Dimm to Value in 30s Dimm to Value in 1 Minute Dimm to Value in 2 Minutes Dimm to Value in 5 Minutes Dimm to Value in 10 Minutes
Use this parameter to configure the behaviour on receipt of a new dimming value via value setting. Please remember that the dim time always refers to the full value range. Accordingly a dimming time of 30 s means a value change of 100% within 30 s. If the value within a scene is only changed by 50%, the change is performed within 15 s.	
Time for Dimming	3 Seconds 4 Seconds 5 Seconds 6 Seconds **10 Seconds** 20 Seconds 30 Seconds 60 Seconds

Use this parameter to set the dim time for relative dimming in relation to a value range from 0 to 100%.	
Max. Value for Dimming	50% 55% …. **100%**
Use this parameter to configure the maximum dimming value that can be set through relative dimming.	
Min. Value for Dimming	**0%** 0.5% 1% … 5% …. 50%
Use this parameter to configure the minimum dim value that can be set through relative dimming.	
Min/Max Value is valid for	**Dimming Object** Value Object Dimming & Value Object
Use this parameter to select the object that minimum and maximum values are valid for. It is possible to set, for example, 60% via dimming and 100% via value setting.	
Switch ON via Dimming	No Switch ON with Dimming Object **Switch ON with Value Object** Switch ON with Dimming & Value Object
Use this parameter to select whether a switched off group should be switched on when receiving a relative 4 Bit dimming object, a value setting object or both.	

19.4.2.3 Colour Control

This parameter page is only displayed if the ECG type is "Single battery emergency light (switchable) + colour control" or "ECG with colour control".

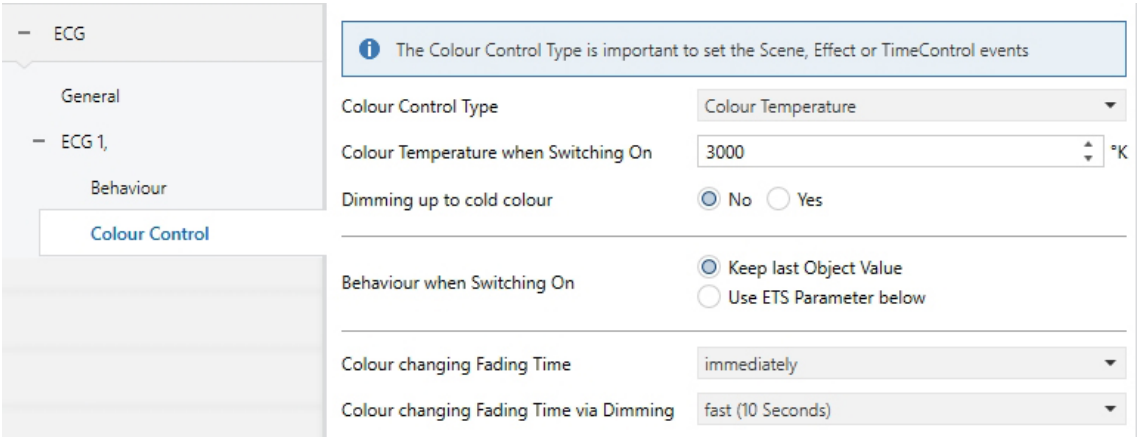

19.4.2.3.1 Colour Temperature

Parameter	Settings

Colour Control Type **Note:** The colour control type is is important to set the Scenes, Effects or TimeControl events.	none Colour Temperature ✓ RGB Colour RGBW Colour XY Colour HSV Colour HSVW Colour
This parameter can be used to set which colour control is to be used for the ECG. The default value is set to "Colour temperature".	
Colour Temperatur when Switching On	3000 °K
The set colour temperature when switched on in Kelvin.	
Dim-to-warm	**No** Yes
General parameter for colour Temperature at 0% and at 100% are taken into account, see ECG>General See chapter: 19.4.1 ECG General.	
Behavior when Switching ON	Keep last Object Value Use ETS Parameter below
This parameter is used to decide whether the last valid colour value should always be used or the parameters set below should be used. **Note:** with "Keep last object value" – **Attention:** with an invalid object value, the preset colour of the ETS is used.	
Colour changing Fading Time	immediately ✓ 1 Second 5 Seconds 10 Seconds 20 Seconds 30 Seconds 60 Seconds 90 Seconds
The set time for the colour change between immediate and 90 seconds.	
Colour changing Fading Time via Dimming	fast (10 Seconds) ✓ standard (20 Seconds) slow (40 Seconds)
The time for the colour change when dimming is set here.	

19.4.2.3.2 RGB

Colour Control Type	RGB Colour

Colour control assigned to the ECG.	
Colour Value when Switching ON	#FF0000

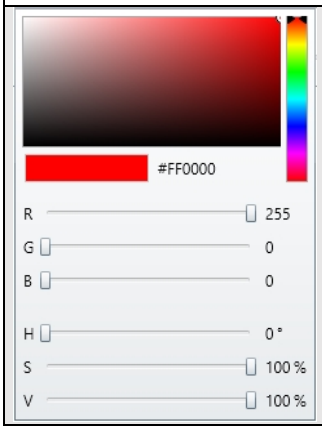

This parameter defines the RGB colour when switching on. To do this, a window for colour selection is displayed via the button in the ETS.

19.4.2.3.3 RGBW

Colour Control Type	RGBW Colour
Colour control assigned to the ECG.	

Colour Value when Switching ON	#FF0000

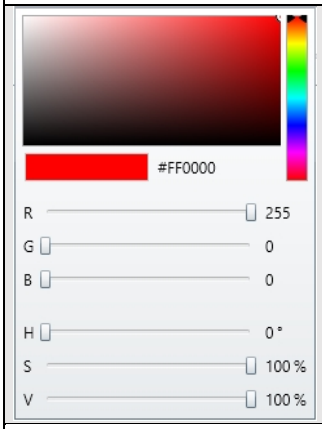

This parameter defines the RGB colour when switching on. To do this, a window for colour selection is displayed via the buttor in the ETS.

Additional White	255

The additional white value from 0 to 255 can be set using the slider. The increment is 1 increment.
The default value is 255 (max.).

19.4.2.3.4 XY Colour

Colour Control Type	XY Colour

Colour control assigned to the ECG.

X-Value when Switching ON (0..1) X-Value when Switching ON (0..1)	0.33 0.33

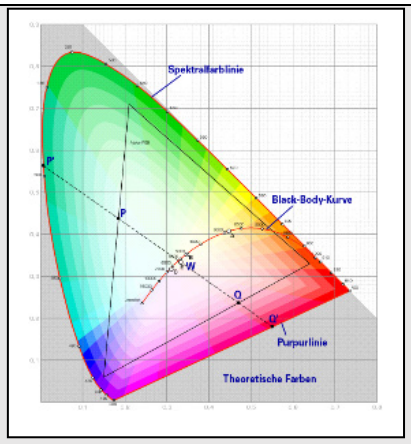

This parameter defines the X colour when switching on. The range of values is between 0 and 1.
X = 0.33 and Y = 0.33 correspond to the white point.

19.4.2.3.5 HSV

Colour Control Type	HSV Colour

Parameters for the colour control type "HSV colour".
→ see parameter settings for RGB colour.

19.4.2.3.6 HSVW

Colour Control Type	HSVW Colour
Parameters for the colour control type "HSV colour". → see parameter settings for RGBW colour.	

19.4.2.4 Analysis and maintenance

Type of the error object	**1 bit** 1 byte
Here you can define whether the error is to be reported in the form of a bit (Alarm DPT 1.005) or via a byte object with the information about lamp or ballast errors, see Chapter: 18.4 ECG objects .	
Operating hours Calculation	Yes **No**
This parameter can be used to set whether an individual operating hours count for the group is desired.	
Operating hours Limit value (hours) (Calculation for operating hours).	1 h..200.000 h **[4000 h]**
This parameter is used to set the lamp life at which an individual warning is sent. 	

19.5 Motion Detector

19.5.1 Motion Detector General

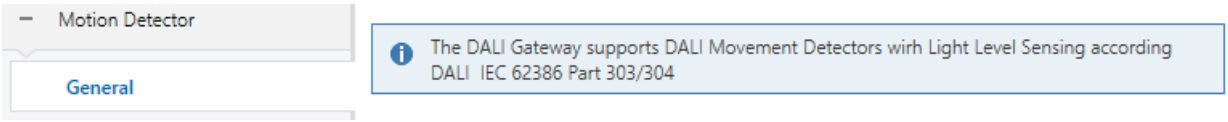

Number of Movement Detectors to be controlled?	**0**.. 8
This parameter allows the number of movement detectors to be set. A maximum of 8 motion detectors can be connected. The step size is 1 increment. The default value is **0**. After selecting one motion detector or more, two additional parameterization pages appear in the tab for motion detectors. **Note:** Only DALI Movement Detectors that comply with the IEC 62386 part 303/304 standard are supported.	

19.5.2 Motion Detector MD 1 (2.. 8)

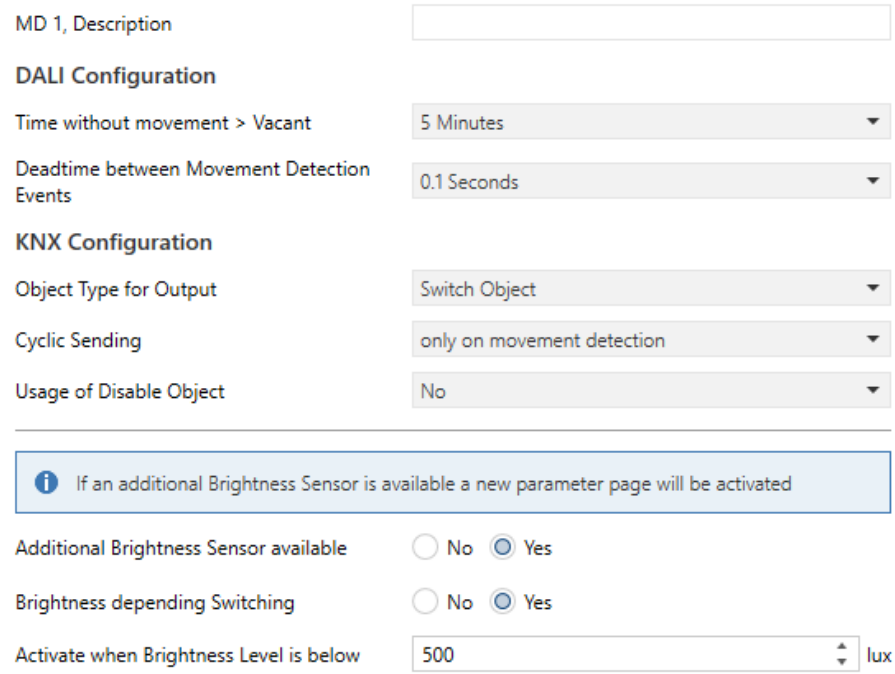

Parameter	Settings
MD x, Description	e.g. x, Floor 1, Building 2

This parameter can be used to define a motion detector description. This description is displayed for an overview for all communication objects. Example: MD1, Floor1, Building 2.

MD1, Movement Switching, Floor 1, Building 2
MD1, Brightness, Floor 1, Building 2
MD1, Failure Status, Floor 1, Building 2
MD1, Brightness is below the Threshold, Floor 1, Building 2

DALI Configuration

Time without movement > Vacant	none 1 Minute 2 Minutes 3 Minutes 4 Minutes 5 Minutes ✓ 7 Minutes 10 Minutes 15 Minutes 20 Minutes 25 Minutes 30 Minutes 35 Minutes 40 Minutes
After this time, the presence is deactivated, i.e. if no movement is detected in this preset time, it can be assumed that no person is within the range of the motion detector. IEC62386-303 (Hold Timer)	
Deadtime between Movement Detection Events	none ✓ 1 Second 2 Seconds 3 Seconds 4 Seconds 5 Seconds 1 Minute 2 Minutes 3 Minutes 4 Minutes
Deadtime between Movement Detection Events IEC62386-303 (Deadtime Timer)	

KNX Configuration

Object Type for Output	**Switch Object** Set Value Object Scene Object
Selection of the object type which is sent to the bus.	
Value in Presence State	**0 to 100%**
Value to be caled in Presence State.	
Value in Vacant State	**0 to 100%**
Value to be caled in Vacant State.	
Scene in Presence State	**Scene 1 to 64**
Scene to be caled in Presence State.	

Scene in Vacant State	**Szene 1 bis 64**
Scene to be caled in Vacant State.	
Cyclic Sending	only on movement detection ✓ 2 Seconds 5 Seconds 10 Seconds 20 Seconds 30 Seconds 1 Minute 2 Minutes 3 Minutes 4 Minutes
Selection of behaviour in cycle sending mode.	
Usage of Disable Object	**No** Disable with Value 0 Disable with Value 1
Here you define how the disable object is to be used.	
ℹ If an additional Brightness Sensor is available a new parameter page will be activated	
Additional Brightness Sensor available	No **Yes**
If the option is activated, an additional parameter page is displayed	
Brightness depending Switching	**No** Yes
If the parameter is activated, the motion detector switches depending on the entered brightness value.	
Activate when Brightness Level is below	500 lux
Entry of the brightness value of the switch-on threshold. The value can be between 5 - 1000 lux. Default setting is 500 lux.	

19.5.2.1 MD 1, Brightness

DALI Configuration

Deadtime between Brightness Events	2 Seconds
Hysteresis in %	10 %
Send Value by change of	10 lux

KNX Configuration

Brightness Correction Value	0
Threshold alarm activated at	500 lux
Hysteresis for Threshold Alarm	20 lux
Behaviour when Value < Threshold	◉ Send ON when Value > Threshold ○ Send OFF when Value > Threshold
Cyclic Sending	No

Parameter	Settings
DALI Configuration	
Deadtime between Brightness Events	none 1 Second 2 Seconds ✓ 3 Seconds 4 Seconds 5 Seconds 6 Seconds 8 Seconds 10 Seconds
Specification of a fixed period of time after which the current brightness value is sent.	
Hysteresis in %	10 %
Value of the switch-on delay in % [0 .. 250]. The standard value is set to 10%.	
Send Value by change of	10 lux
Send value by changing in % [1 .. 250]. The standard value is set to 10%.	
KNX Configuration	
Brightness Correction Value	0
Increase / decrease of the measured brightness (Lux) by the set value. [-300 .. +300]. The default is 0 (no correction).	
Threshold alarm activated at	500 lux
Setting the brightness threshold above which the limit alarm is activated.	
Hysteresis for Threshold Alarm	20 lux
Value of the switch-on delay (hysteresis) in% [1 .. 250]. The standard value is set to 20%.	
Behavior when Value < Threshold	◉ Send ON when Value < Threshold ○ Send OFF when Value < Threshold
Selection of the send behavior when the limit is exceeded.	
Cyclical sending	none ✓ 1 Second 2 Seconds 3 Seconds 4 Seconds 5 Seconds 1 Minute 2 Minutes 3 Minutes 4 Minutes
Specification of a fixed period of time after which the current brightness value is sent.	

20 FAQ

20.1 Web Access

The IP address is called up in the browser, but the message "This page is not available" is displayed.

a.) The web page access must be activated in the ETS.
b.) The IP address must be entered in the form "https://<ip>.

20.2 Security

Despite an imported root certificate no "secure" closed lock is displayed.
Probably the IP address was changed and no new certificate was created. Please create a new device certificate as administrator.

After several failed logins, the device cannot be logged in and is no longer accessible.
After 3 failed login attempts, the connection to this IP address is blocked for one minute for security reasons.

The IP address of the DALI GW is correctly configured, but the device cannot be reached via a router or over the internet.
In the default setting, access is only allowed in local networks. This setting must be changed in the ETS.

The password has been forgotten.
An ETS download with the corresponding settings must be carried out. Afterwards the user is asked to enter a new and secure password

20.3 DCA

The DCA does not display the configuration that is visible on the web page.
The data was not synchronized. Please read out the device data, see chapter: 106 DCA Extras.

21 Disclaimer for cyber security

In order to protect plants, systems, machines and networks from online threats, it is necessary to implement a holistic, state-of-the-art security concept and keep it up to date.

You are responsible for preventing unauthorized access to your plants, systems, machines and networks. These should only be connected to a network or the Internet if and to the extent that the connection is necessary and appropriate security measures (e.g. firewalls or network segmentation) are in place. In addition, the security recommendations of Schneider Electric must be observed. For further information please contact your contact person at Schneider Electric or visit our website.

Use updates as soon as they are available and always the latest versions. Using versions that are no longer supported or not using the latest updates may increase your risk of online threats. Schneider Electric strongly recommends that you follow security recommendations regarding the latest security threats, patches, and related measures.

22 Open Source Software used in the DALI Gateway Pro

The Dali Gateway Pro contains, among other things, Open Source Software files, as specified below, developed by third parties and licensed under an Open Source Software license. These Open Source Software files are protected by copyright. Your right to use the Open Source Software is governed by the relevant applicable Open Source Software license conditions.

Warranty regarding use of the Open Source Software:

The following disclaimer applies to the GPL and LGPL components in relation to the rights holders:
"*these programs are distributed by the copyright holders in the hope that these will be useful, but WITHOUT ANY WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE"*. See the GNU General Public License or the GNU Lesser General Public License for more details.

For the remaining open source components, the liability exclusions of the rights holders apply as per the respective license.

Schneider Electric SE and all of its subsidiaries ("Schneider Electric Group") provide no warranty for the Open Source Software contained in the Dali Gateway Pro, if such Open Source Software is used in any manner other than intended by Schneider Electric Group. The licenses listed below define the warranty, if any, from the rights holders of the Open Source Software. Schneider Electric Group specifically disclaims any warranty for defects caused by altering any Open

Source Software or the Dali Gateway Pro's configuration. Any warranty claims against Schneider Electric Group in the event that the Open Source Software contained in the Dali Gateway Pro infringes the intellectual property rights of a third party are excluded.
Technical support, if any, will only be provided for unmodified software.

Further use of Open Source Software:

Your compliance with those license conditions will entitle you to use the Open Source Software as foreseen in the relevant license. In the event of conflicts between other Schneider Electric license conditions applicable to the Dali Gateway Pro and the Open Source Software license conditions, the Open Source Software conditions shall prevail. The Open Source Software is provided royalty-free (i.e. no fees are charged for exercising the licensed rights). The following Open Source Software is contained in this Dali Gateway Pro:

Open Source Software File	License	Source Link
Font Awesome Font Version 4.7.0	SIL OFL Version 1.1	https://github.com/FortAwesome/Font-Awesome/releases/tag/v4.7.0
Font Awesome CSS Version 4.7.0	MIT	https://github.com/FortAwesome/Font-Awesome/releases/tag/v4.7.0
Bootstrap Version 4.5.0	MIT	https://github.com/twbs/bootstrap/releases/tag/v4.5.0
jquery Version 3.5.1	MIT	https://github.com/jquery/jquery/releases/tag/3.5.1
Mustache 4.0.1	MIT	https://github.com/janl/mustache.js/releases/tag/v4.0.1
SweetAlert2 9.14.4	MIT	https://github.com/sweetalert2/sweetalert2/releases/tag/v9.14.4
Bootstrap Timepicker Version 0.5.2	MIT	https://github.com/jdewit/bootstrap-timepicker/releases/tag/v0.5.2
Jsmn Version 1.0.0	MIT	https://github.com/zserge/jsmn/releases/tag/v1.0.0

The respective license terms for the respective Open Source Software files can be found at the end of this document.

If any Open Source Software contained in this Dali Gateway Pro is licensed under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), Mozilla Public License (MPL) or any other Open Source Software license, which requires that source code is to be made available, you can download the corresponding source code of the Open Source Software from the aforementioned link.

==========

The Licenses in detail

##########

Font Awesome Font Version 4.7.0
Copyright (c) 2016 Dave Gandy

SIL Open Font License Version 1.1 - 26 February 2007

PREAMBLE
The goals of the Open Font License (OFL) are to stimulate worldwide development of collaborative font projects, to support the font creation efforts of academic and linguistic communities, and to provide a free and open framework in which fonts may be shared and improved in partnership with others.

The OFL allows the licensed fonts to be used, studied, modified and redistributed freely as long as they are not sold by themselves. The fonts, including any derivative works, can be bundled, embedded, redistributed and/or sold with any software provided that any reserved names are not used by derivative works. The fonts and derivatives, however, cannot be released under any other type of license. The requirement for fonts to remain under this license does not apply to any document created using the fonts or their derivatives.

DEFINITIONS
"Font Software" refers to the set of files released by the Copyright Holder(s) under this license and clearly marked as such. This may include source files, build scripts and documentation.

"Reserved Font Name" refers to any names specified as such after the copyright statement(s).

"Original Version" refers to the collection of Font Software components as distributed by the Copyright Holder(s).

"Modified Version" refers to any derivative made by adding to, deleting, or substituting -- in part or in whole -- any of the components of the Original Version, by changing formats or by porting the Font Software to a new environment.

"Author" refers to any designer, engineer, programmer, technical writer or other person who contributed to the Font Software.

PERMISSION & CONDITIONS
Permission is hereby granted, free of charge, to any person obtaining a copy of the Font Software, to use, study, copy, merge, embed, modify, redistribute, and sell modified and unmodified copies of the Font Software, subject to the following conditions:

1) Neither the Font Software nor any of its individual components, in Original or Modified Versions, may be sold by itself.

2) Original or Modified Versions of the Font Software may be bundled, redistributed and/or sold with any software, provided that each copy contains the above copyright notice and this license. These can be included either as stand-alone text files, human-readable headers or in the appropriate machine-readable metadata fields within text or binary files as long as those fields can be easily viewed by the user.

3) No Modified Version of the Font Software may use the Reserved Font Name(s) unless explicit written permission is granted by the corresponding Copyright Holder. This restriction only applies to the primary font name as presented to the users.

4) The name(s) of the Copyright Holder(s) or the Author(s) of the Font Software shall not be used to promote, endorse or advertise any Modified Version, except to acknowledge the contribution(s) of the Copyright Holder(s) and the Author(s) or with their explicit written permission.

5) The Font Software, modified or unmodified, in part or in whole, must be distributed entirely under this license, and must not be distributed under any other license. The requirement for fonts to remain under this license does not apply to any document created using the Font Software.

TERMINATION
This license becomes null and void if any of the above conditions are not met.

DISCLAIMER
THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL
DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

##

Font Awesome CSS Version 4.7.0

Copyright (c) 2016 Dave Gandy

Bootstrap Version 4.5.0

Copyright (c) 2011-2020 Twitter, Inc.

Copyright (c) 2011-2020 The Bootstrap Authors

jquery Version 3.5.1

Copyright (c) JS Foundation and other contributors

Mustache 4.0.1

Copyright (c) 2009 Chris Wanstrath (Ruby)
Copyright (c) 2010-2014 Jan Lehnardt (JavaScript)
Copyright (c) 2010-2015 The mustache.js community

SweetAlert2 9.14.4

Copyright (c) 2014 Tristan Edwards & Limon Monte

Bootstrap Timepicker Version 0.5.2

Copyright (c) J.Dewit

JSMN Version 1.0.0

Copyright (c) 2010 Serge A. Zaitsev

MIT License

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:
The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Schneider Electric Industries SAS
For technical questions please contact the Customer Care Centre in your country.
se.com/contact

© 2020 Schneider Electric, All rights reserved

MTN6725-0101_SW_EN 2020/09