



TRAVIS INDUSTRIES
HOUSE OF FIRE

Brushed Nickel Glass Frame Trim
SKU # 95900333 / 95900336 ! For 864 TRV, ST, HO
SKU # 95900334 #-) - \$\$' ') ! For 564 SS, DF, or HO

Packing List:

Contents:

- 2 Vertical Trim Pieces
- 8 Magnets
- 2 Horizontal Trim Pieces
- Instructions

Warning:

- The magnets included with the trim are not toys!
- Do not allow young children to handle the magnets!
- Swallowing the magnets may cause serious injury!
- Magnets may also damage magnetic data strips on bank cards or damage electronic memory storage devices.


Caution:

Edges of sheet metal parts may be sharp!

Instructions:

The Brushed Nickel Glass Frame Trim is attached to the fireplace glass frame using strong magnets. Magnets are most easily separated from each other by sliding them and pushing them apart. To easily remove a magnet from a metal part, slide the magnet off the end of the part.


- Remove the protective film covering the trim pieces.
- Place two magnets on the back side of each vertical trim section (shorter pieces) so each magnet is about 4 inches from the ends as shown in Photo 1, centering them at an equal distance between the flanged sides. Exact placement of the magnets is not critical.
- Place two magnets on the back sides of each horizontal trim section, (longer pieces) each magnet near the hooked tabs as shown in Photo 1.

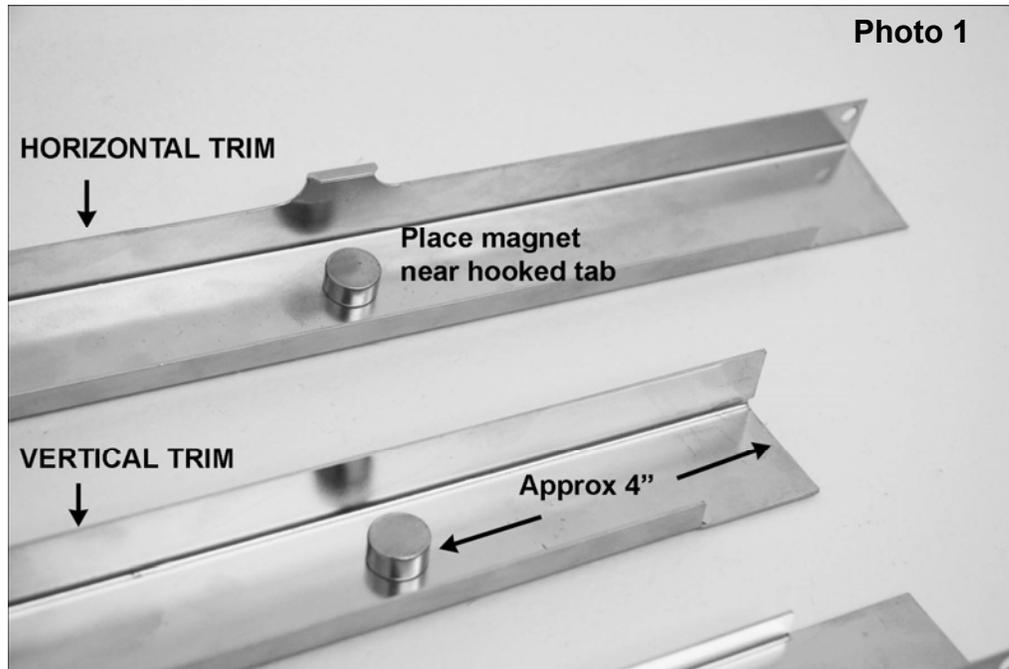

D. The trim may be applied to the glass frame with the glass frame installed on the fireplace or with the glass frame off the fireplace. The photos below show the glass frame off the fireplace. Refer to fireplace owner's manual for how to remove the glass frame from the fireplace.

E. Trim may be applied with the screen covering the glass or with the screen removed. If you wish to remove the screen, do so before applying the trim. Refer to fireplace owner's manual for how to remove the screen.

F. Apply the two vertical trim sections first. The shorter flange edge is applied next to the glass with the longer flange edge overlapping the outside of the glass frame. See Photo 2.

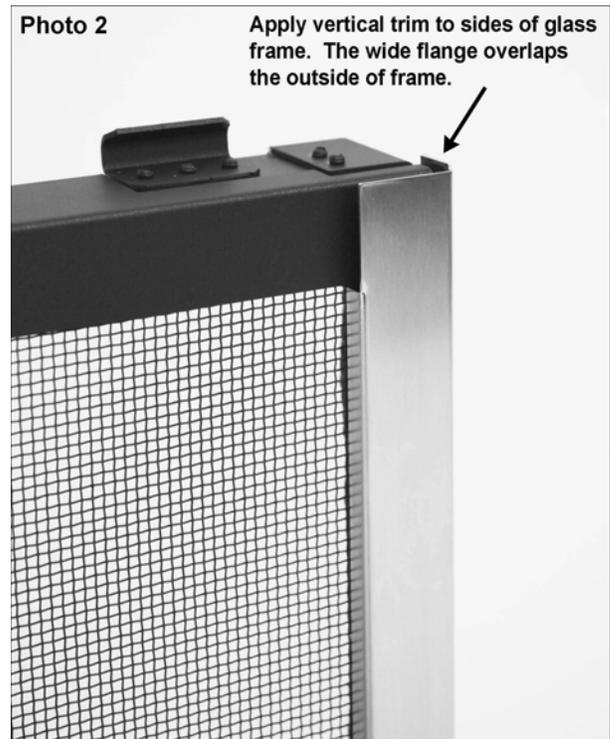


Attach the horizontal trim to the glass frame. The tabs on the trim clip onto the glass frame. (The 564 hooks over the frame, the 864 hooks into the slot as shown below.)



G. Apply the upper and lower horizontal trim sections so the hooked edge of the tabs fits into a slot in the sides of the glass frame. The ends of the horizontal trim sections cover and align with the ends of the vertical trim sections. See Photo 3.

H. Adjust the trim sections so they are flat and all edges align. Photo 4 shows completed assembly

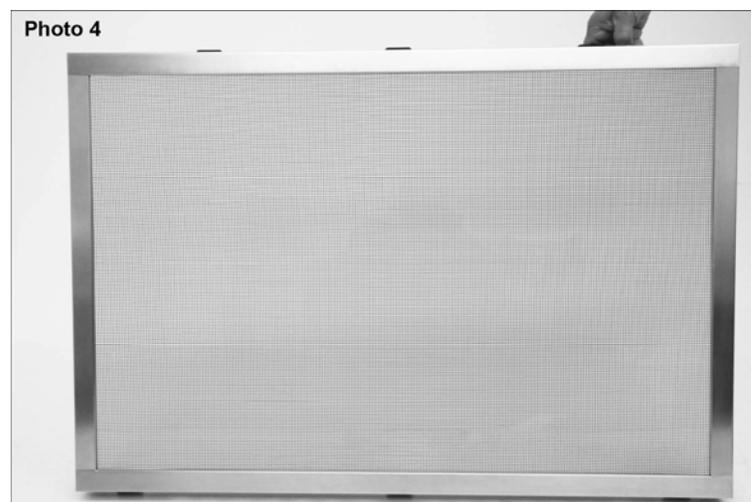

I. **Warning:** Clean all fingerprints and other marks off the trim sections with a soft cloth and denatured alcohol before operating the fireplace. Heat from the fireplace may cause fingerprints or other marks to be permanently etched into the metal finish.