



**TRAVIS INDUSTRIES
HOUSE OF FIRE**

21E Artisan Face Installation Instructions

Packing List

- (2) Cove Covers
- Mounting Bracket

Part Numbers


Artisan (SKU 98500365)
Patina Bronze (SKU 95700140)

Overview

This instruction sheet details installation of the above face onto a 21E electric fireplace.

Cove Cover Installation

The cove covers install over the top corners of the glass and prevent light from exiting the slots on the face. Remove the two screws above the glass on the right side as shown below. Place the cove cover in place and secure using the same screws. Repeat this process for the left side.

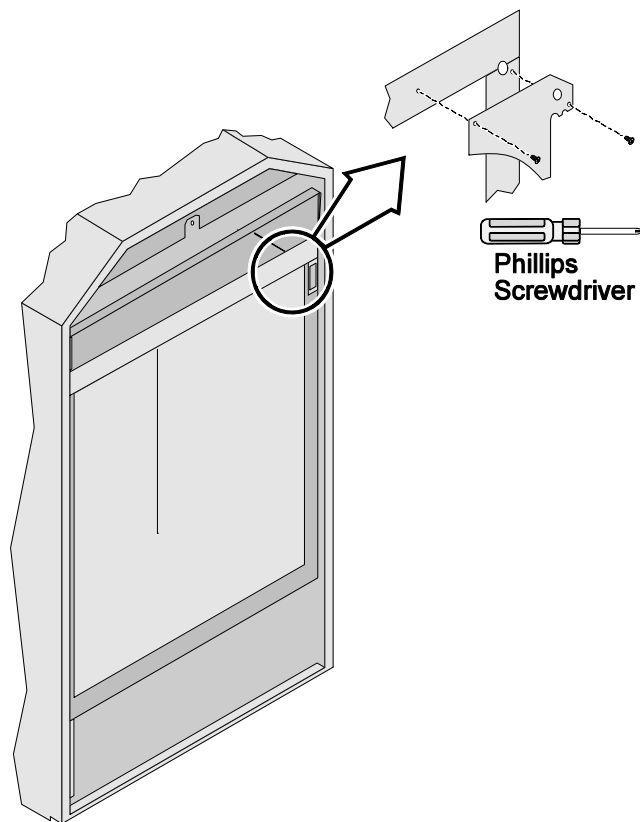




TRAVIS INDUSTRIES
HOUSE OF FIRE

21E Artisan Face Installation Instructions

Face Installation

Attach the mounting bracket to the back of the face as shown below.

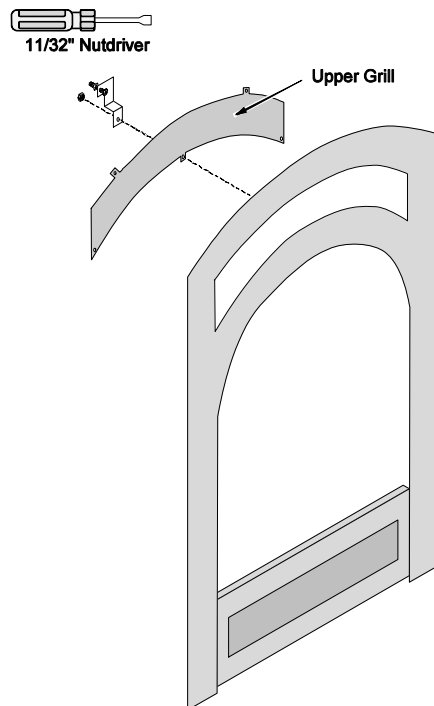

Position the face so the bottom brackets insert into the slots on the lower support legs (see illustration below). With the brackets inserted, rotate the face forward and secure by tightening the attachment screw on the mounting bracket. Use a flashlight, if necessary, to align the screw with the press nut on the fireplace.

