



**TRAVIS INDUSTRIES
HOUSE OF FIRE**

21E Bed and Breakfast Face Installation Instructions

Packing List

- (2) Cove Covers
- (2) Magnets

Part Numbers

Black (SKU 98500361)

Brushed Nickel (98500362)

French Country Antique Gold (SKU 95700143)

French Country Black (95700145)

Overview


This instruction sheet details installation of the above faces onto a 21E electric fireplace.

Cleaning Gold or Nickel Surfaces

Use denatured alcohol and a soft cloth to clean gold or nickel surfaces. Marks left on the surface may damage the face.

Cove Cover Installation

The cove covers install over the top corners of the glass and prevent light from exiting the slots on the face. Remove the two screws above the glass on the right side as shown below. Place the cove cover in place and secure using the same screws. Repeat this process for the left side.

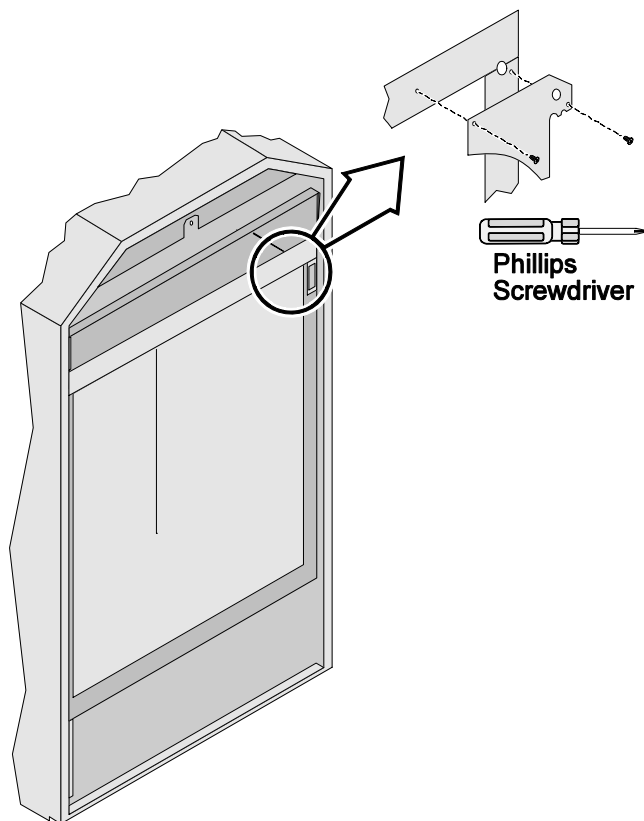




TRAVIS INDUSTRIES
HOUSE OF FIRE

21E Bed and Breakfast Face Installation Instructions

Face Installation

Place a magnet in the upper corners of the fireplace face in the cutout provided in the cove cover (see illustration below).

WARNING: The powerful magnets may require pliers to properly position. Take care with the magnets to prevent damage. Keep the magnets away from children.

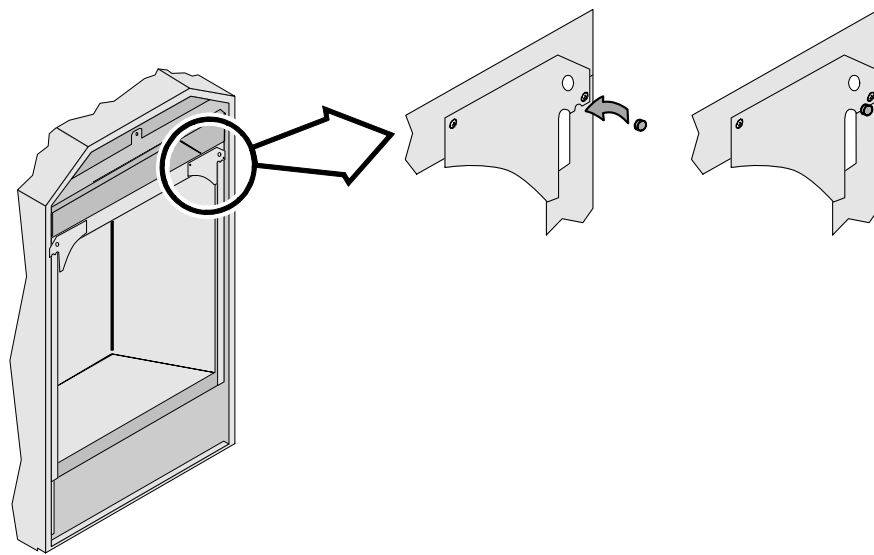

Position the face so the bottom brackets insert into the slots on the lower support legs (see "a" in the illustration below). With the brackets inserted, rotate the face forward until the magnets secure the face in place (see "b" below).

