



## ALI Lifting Points Guide – 2021 Model Year Update

December 2020 release


The following pages identify the vehicle year-model graphic supersession for ALI's 2021 model year update. The new graphics that appear in the most current version of the lift points guide have been provided along with the applicable graphic name and year-model combination. The graphics that are superseded in the 2020 model year print version, have been listed for reference. Purchasers and users of the 2020 Lift Points Guide are advised to reference the diagrams included in this press release for the vehicle lifting points depicted.

The lift points guide includes information relating to the proper placement of vehicle lift arms when raising a light duty car, truck, van or SUV. When provided by an OEM, references to frame markings or the use of vehicle lift pads have been included.

The ALI Lift Points Guide yearly update has been completed to include 2021 model year revisions. The 2021 Lift Points Guide will be available January 1, 2021 by visiting ALI's online store at [www.autolift.org](http://www.autolift.org). Yearly updates include the addition of new images when a new vehicle has become available or major revision has been made by an OEM. Existing images for current generation vehicles are reviewed to ensure that they match the most current OEM information.

**AU-9** Audi A8 Quattro 2010-21, Audi S8 2013-18 supersedes

- **AU-7** 2010-19 A8 Quattro, 2013-18 S8 on page 7 (2020MY print version)

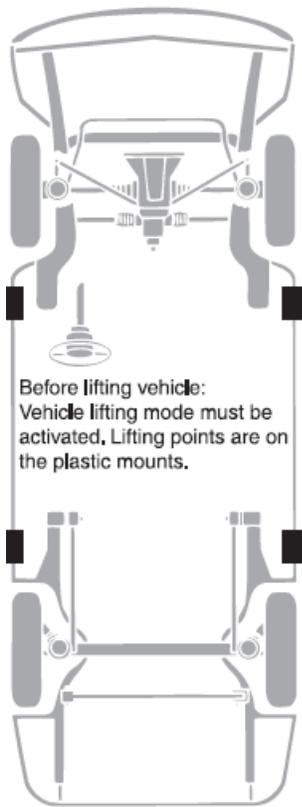


Before lifting vehicle:  
Vehicle lifting mode must be  
activated, Lifting points are on  
the plastic mounts.

- AUDI**  
2012-19 A6  
2012-21 A6 Quattro  
2012-21 A7 Quattro  
2010-21 A8 Quattro  
2009-21 Q5  
2014-19 RS7  
2013-18 S6  
2013-18 S7  
2013-18 S8  
2014-21 SQ5

**AU-9**

**CH-10** 2015-21 ProMaster City supersedes

- **CH-9** 2015-20 ProMaster City on page 11 (2020MY print version)

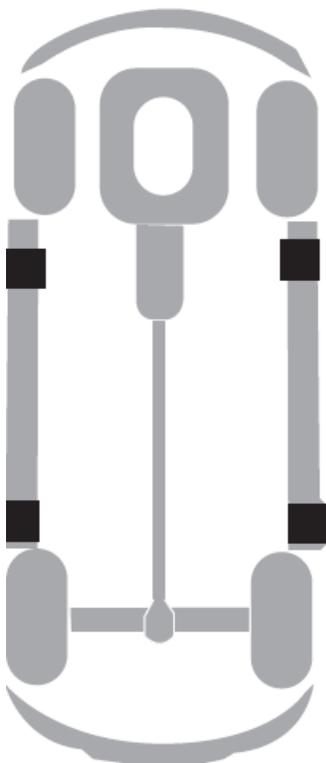

- CHRYSLER**  
2004-08 Crossfire
- RAM**  
2015-21 Promaster  
City

**CH-10**

**CH-15** 2014-21 Cherokee, 2015-17 200 supersedes

- **CH-10** 2014-20 Cherokee on page 11
- **CH-14** 2015-17 200 on page 12 (2020MY print version)



In the event that the standard SAE lift pads and/or appropriate lift arm lengths are not available to meet the sill molding openings for flange lifting, the alternate lift point locations should be utilized.

**CHRYSLER**  
2015-17 200  
**JEEP**  
2014-21 Cherokee

**CH-15**

**CH-16** 2017-21 Compass (MP) supersedes

- **CH-10** 2018-20 Compass on page 11 (2020MY print version)




In the event that the standard SAE lift pads and/or appropriate lift arm lengths are not available to meet the sill molding openings for flange lifting, the alternate lift point locations should be utilized.

**JEEP**  
2017-21  
Compass (MP)

**CH-16**

**DT-13** Dodge/RAM 2012-21 4500, 5500 supersedes

- **DT-5** 2012-18 4500, 5500 on page 14 (2020MY print version)
- **DT-12** 2019 4500, 5500 page 16 (2020MY print version)

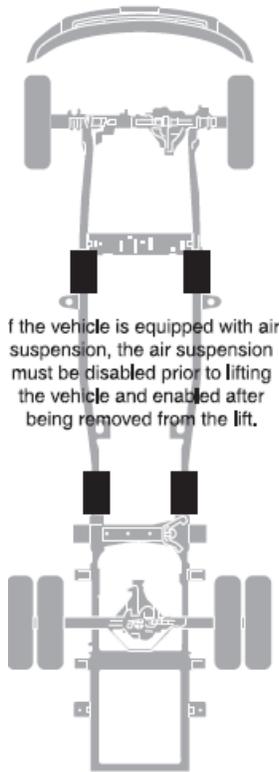


If the vehicle is equipped with air suspension, the air suspension must be disabled prior to lifting the vehicle and enabled after being removed from the lift.

**DODGE/RAM**  
**2011-21 3500**  
**Chassis Cab**  
**Pickup**  
**2012-21 4500-**  
**5500 Pickups**

**DT-13**

**FO-19** 2011-18 Fiesta supersedes

- **FO-15** 2011-18 Fiesta on page 19 (2020MY print version)

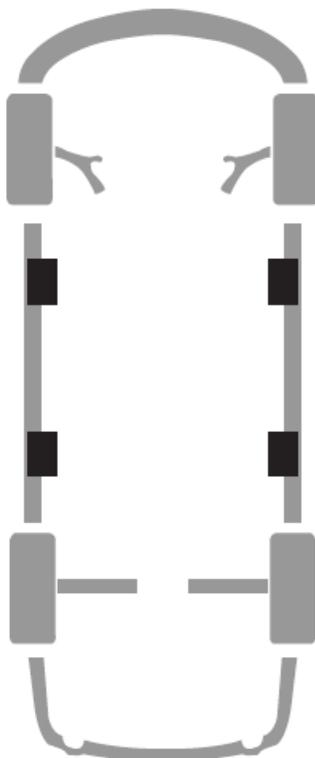


**FORD**  
**2011-18 Fiesta**

**FO-19**

**FT-24** 2017-21 F250, F350, F450, F550 supersedes

- **FT-16** 2017-19 F250, F350, F450, F550 on page 23 (2020MY print version)

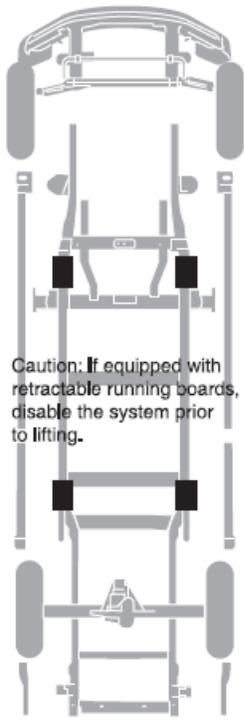

Caution: If equipped with retractable running boards, disable the system prior to lifting.


**FORD**  
2017-21 F250,  
F350, F450, F550

4WD Shown

**FT-24**

**FO-17** 2018-21 EcoSport supersedes

- **FT-15** 2018-20 EcoSport page 19 (2020MY print version)

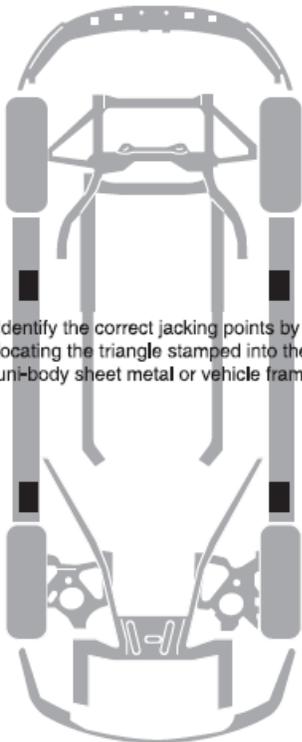


Identify the correct jacking points by locating the triangle stamped into the uni-body sheet metal or vehicle frame.

**FORD**  
2018-21 Ecosport  
2015-21 Mustang

**FO-17**

**FT-23** 2020-21 Explorer, Explorer Police Utility supersedes

- **FT-17** 2020-21 Explorer, Explorer Police Utility page 24 (2020MY print version)

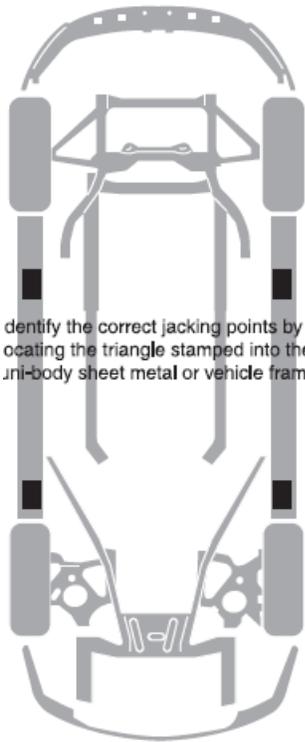


Identify the correct jacking points by locating the triangle stamped into the unibody sheet metal or vehicle frame.

**FORD**  
2020-21 Explorer,  
Explorer Police  
Utility

**FT-23**

**GM-54** 2018-21 Enclave, Traverse supersedes

- **GM-45** 2018-20 Enclave, Traverse page 31 (2020MY print version)

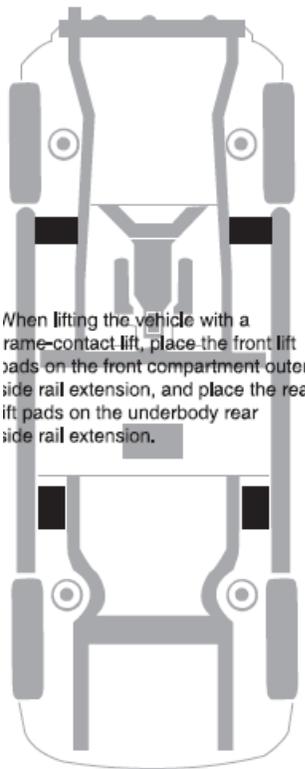

When lifting the vehicle with a frame-contact lift, place the front lift pads on the front compartment outer side rail extension, and place the rear lift pads on the underbody rear side rail extension.

**BUICK**  
2018-21 Enclave


**CADILLAC**  
2020-21 XT6

**CHEVROLET**  
2018-21 Traverse

**GM-54**


**GT-14** 2009-20 Escalade (ALL), 2008-13 Avalanche, 2009-19 Silverado (1500-3500), 2008-20 Suburban/Tahoe, 2009-19 Sierra (1500-3500), 2008-20 Yukon/XL supersedes

- **GT-1D** 2008-14 Escalade (ALL), 2008-13 Avalanche, 2007-13 SSR, 2008-14 Suburban/Tahoe, 2008-14 Yukon/XL page 34 (2020MY print version)
- **GT-11** 2015-20 Escalade (ALL), 2015-20 Suburban/Tahoe, 2015-20 Yukon/XL page 36 (2020MY print version)

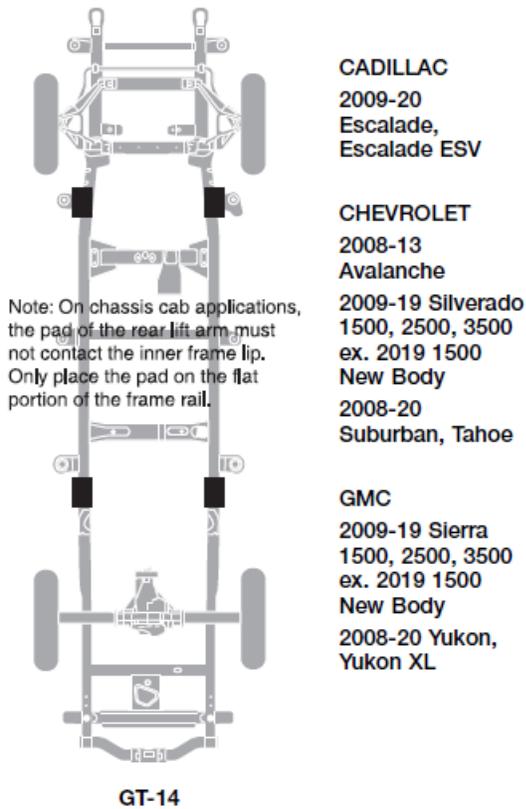


**GT-15** 2020-21 Silverado/Sierra 2500-3500 supersedes

- **GT-10** 2020 Silverado/Sierra 2500-3500 page 36 (2020MY print version)

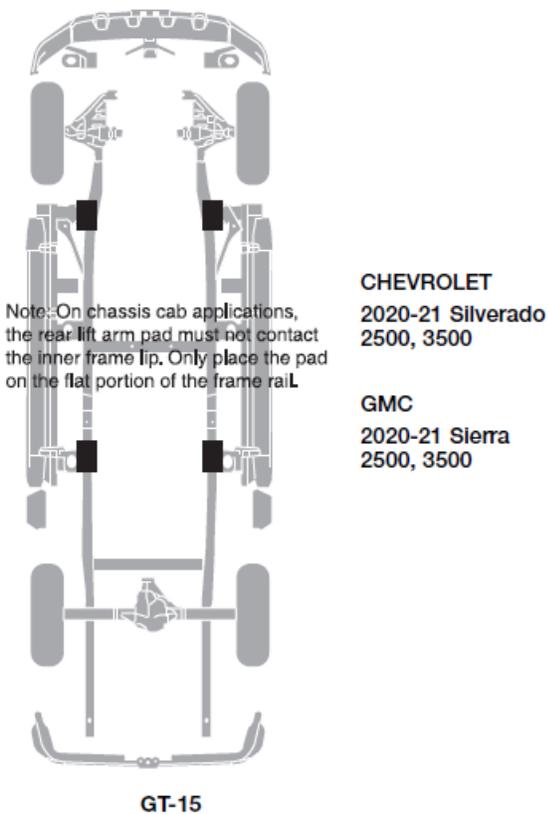

**HY-4** 2017-21 G90 supersedes

- **HY-5** 2017-20 G90 page 39 (2020MY print version)

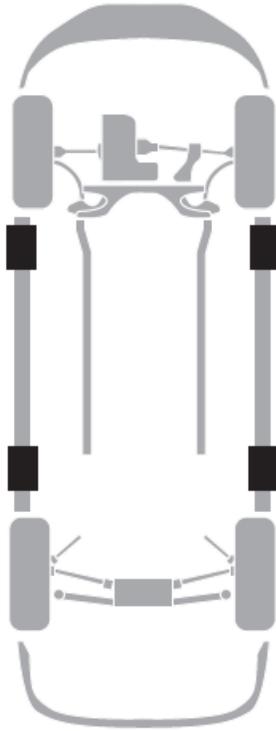


**HY-4**

- GENESIS**  
2019-20 G70  
2021 G80  
2017-21 G90  
2021 GV80
- HYUNDAI**  
2000-21 Accent  
2006-17 Azera  
2000-21 Elantra  
2013-20 Elantra GT  
2007-08 Entourage  
2011-16 Equus  
2009-14 Genesis  
2010-16 Genesis Coupe  
2017-20 Ioniq  
2018-21 Kona  
2019-20 Nexo  
2020-21 Palisade  
2001-19 Santa Fe, Santa Fe Sport  
2000-21 Sonata  
2011-21 Sonata Hybrid  
2000-08 Tiburon  
2005-21 Tucson  
2012-17, 2019-21 Veloster  
2020-21 Venue  
2007-12 Veracruz  
2001 XG300  
2002-05 XG350

**NI-15** 2014-20 QX60, 2014-19 QX60 Hybrid, 2008-21 Rogue, 2014-15 Rogue Select, 2017-21 Rogue Sport supersedes

- **NI-17** 2014-20 QX60, 2014-19 QX60 Hybrid, 2008-20 Rogue, 2014-15 Rogue Select, 2017-18 Rogue Sport page 39 (2020MY print version)

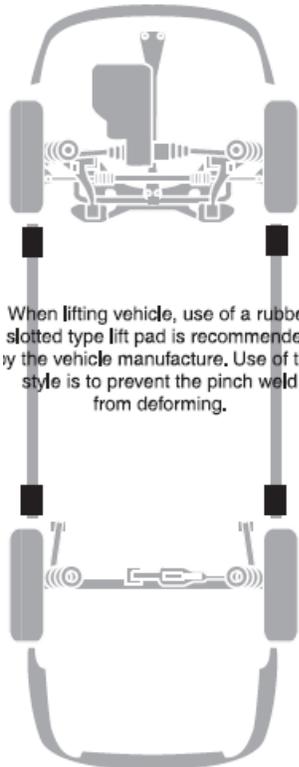


When lifting vehicle, use of a rubber slotted type lift pad is recommended by the vehicle manufacture. Use of this style is to prevent the pinch weld from deforming.

**NI-15**

- INFINITI**  
2000-02 G20  
2003-08 G35  
2014-20 QX60  
2014-19 QX60 Hybrid
- NISSAN**  
2011-20 Leaf  
2008-21 Rogue  
2014-15 Rogue Select  
2017-21 Rogue Sport  
2000-21 Sentra  
2007-21 Versa  
2014-19 Versa Note

**TO-26** 2012-21 Prius C supersedes

- **TO-19** 2012-21 Prius C page 65 (2020MY print version)

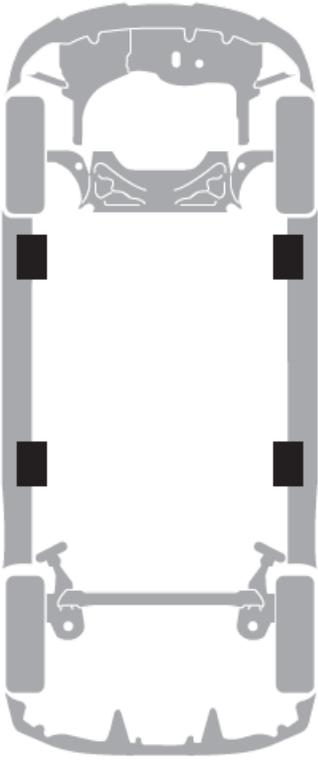

**TOYOTA**  
2012-21 Prius C

**TO-26**