
#### **GEEEK**


#### **A50 INSTALLATION GUIDE**

Version 1.0

#### SCREWS LIST

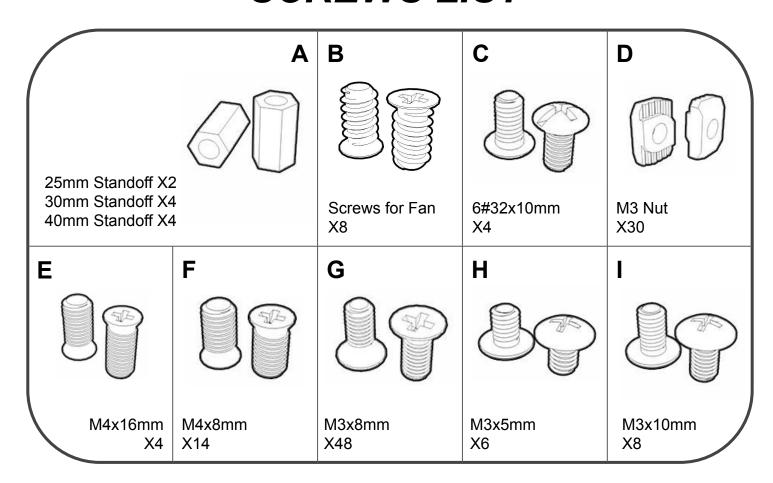


# Aluminum Frame Installation

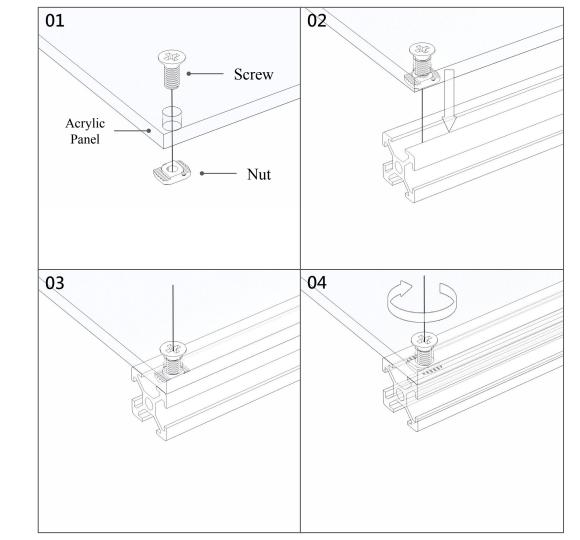





Please read the "Aluminum Frame installation" before assembling this case

### **STEP 01** Aluminum Frame Installation

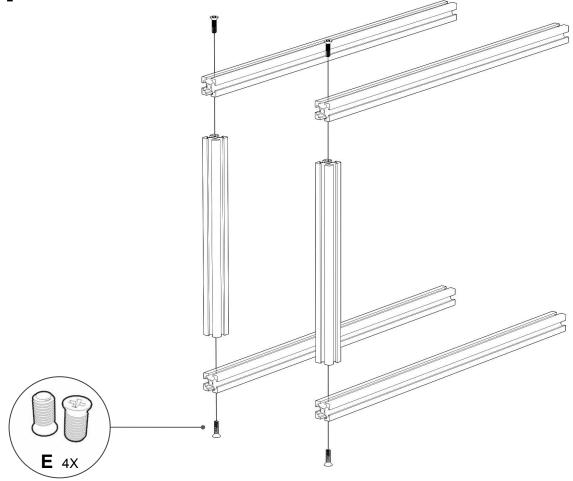



**STEP 02** Install the Standoffs on the Left Upper and Lower Side Brackets

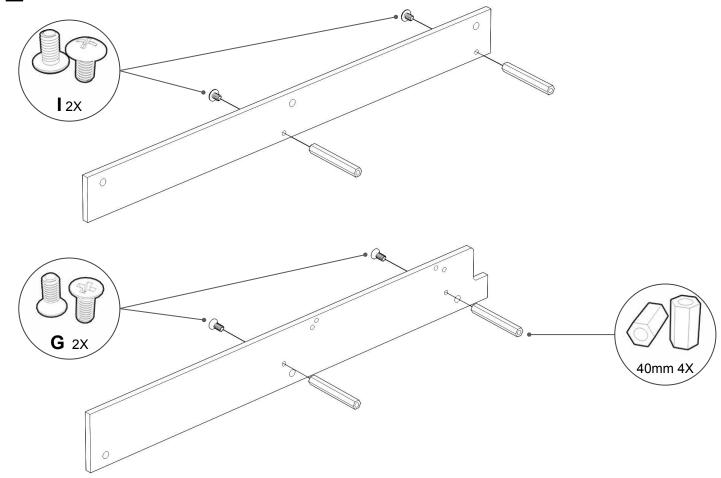


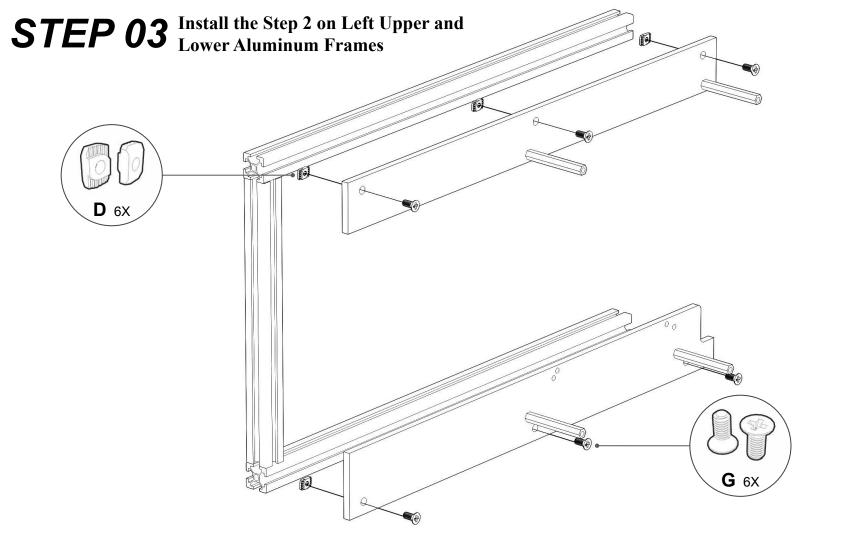


#### STEP 04 Install the HDD Bracket on the Right Aluminum Frame

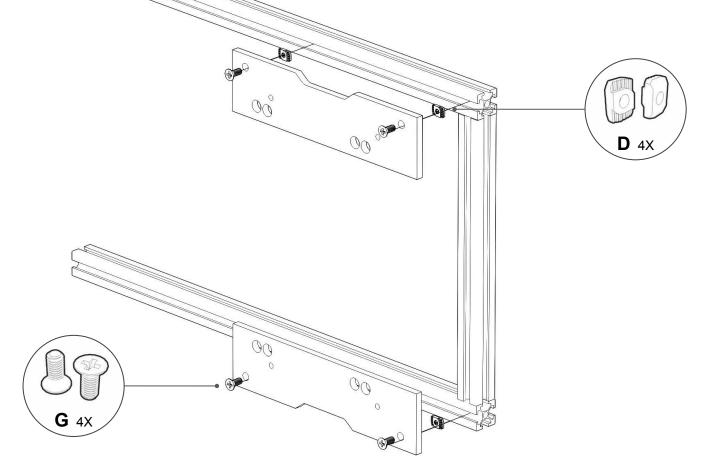


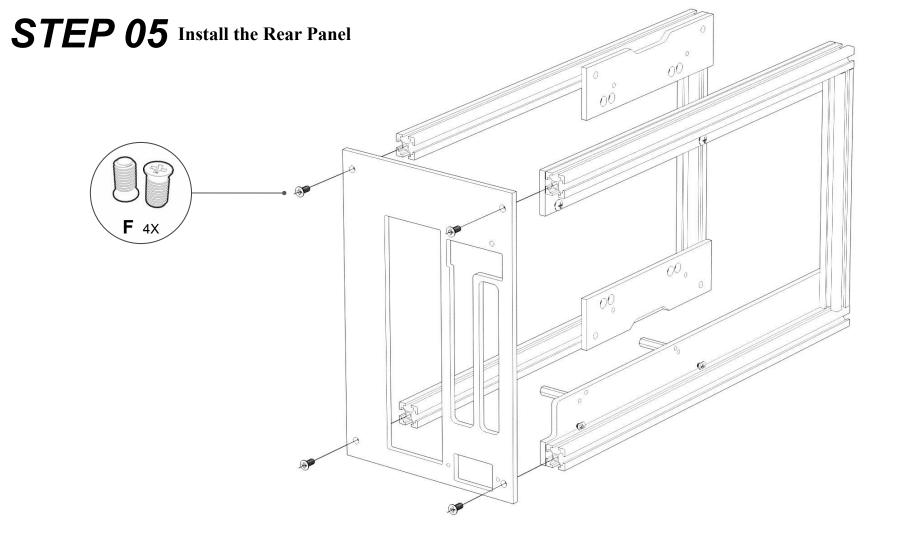

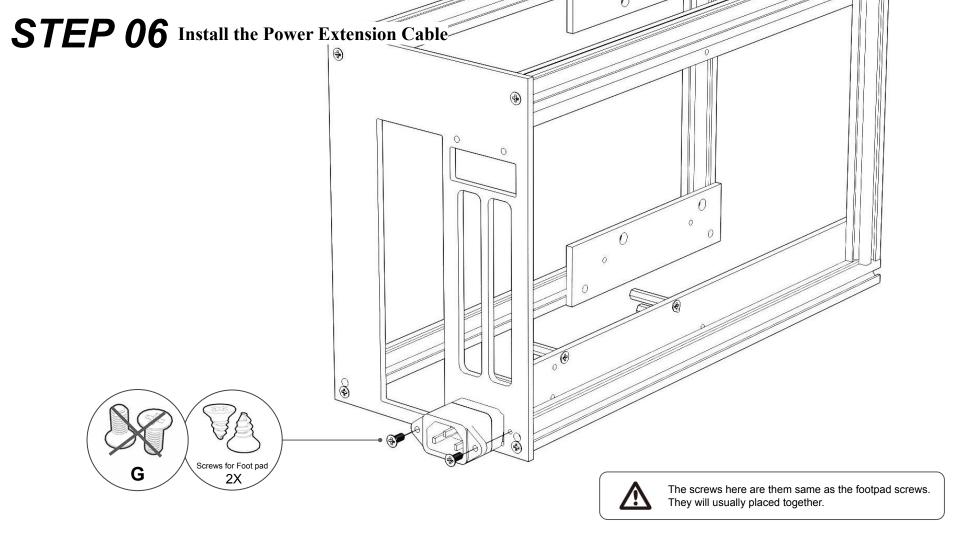

## STEP 07 Install the Bottom Panel Screws for Foot pad 4X **D** 6X The screws here are them same as the footpad screws. They will usually placed together. We suggest to complete all the installations and cable management first and install the bottom panel at last. It will be easier for the assembly.

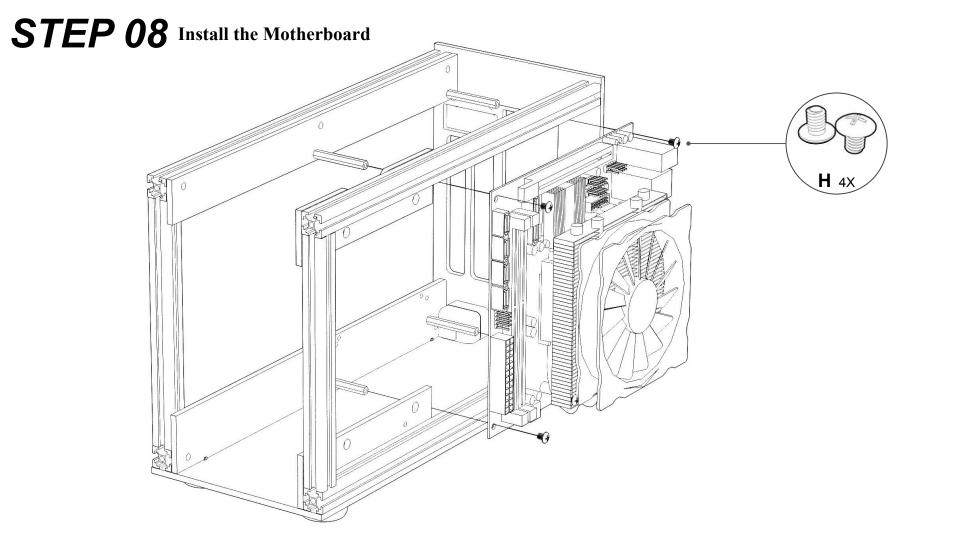

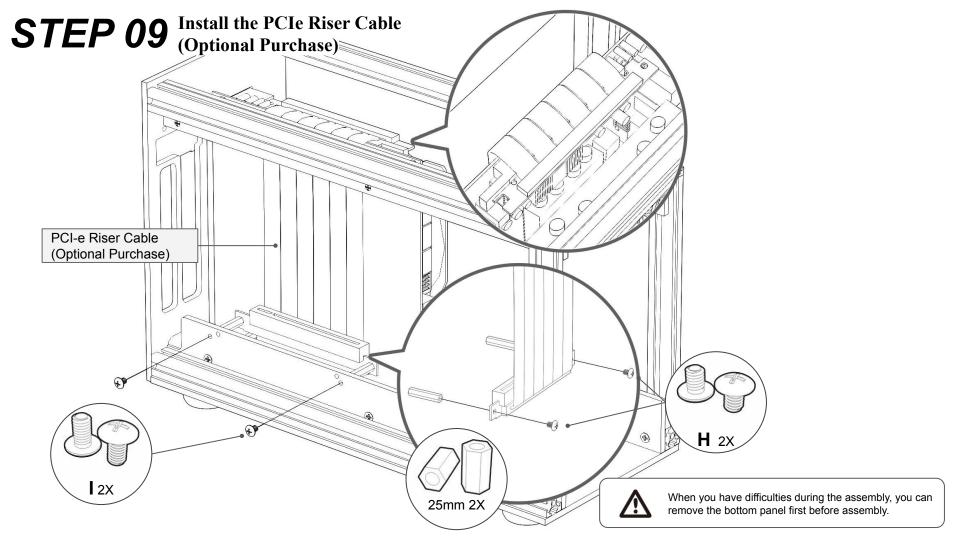

#### **STEP 10** Install and Secure the Graphic Card

