


im Vertrieb von BNC Strain Relief Installation Guide

CAMBOARD Electronics

1. Cut the cable to the desired length.
2. Remove the outer jacket as needed to separate the individual coaxial cable lines.
3. For each individual coaxial cable, place a strain relief narrow end first onto the cable, and slide it a few inches down away from the cable end.



4. Prepare the cable end as usual, then attach and crimp a BNC connector onto the individual coaxial cable.
5. Apply one drop of the provided Loctite® 495 (or comparable) cyanoacrylate glue to the BNC ferrule, as shown below. Avoid skin contact with the glue.

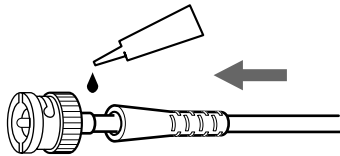


BNC Strain Relief Installation Guide

1. Cut the cable to the desired length.
2. Remove the outer jacket as needed to separate the individual coaxial cable lines.
3. For each individual coaxial cable, place a strain relief narrow end first onto the cable, and slide it a few inches down away from the cable end.



4. Prepare the cable end as usual, then attach and crimp a BNC connector onto the individual coaxial cable.
5. Apply one drop of the provided Loctite® 495 (or comparable) cyanoacrylate glue to the BNC ferrule, as shown below. Avoid skin contact with the glue.

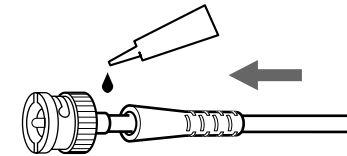


BNC Strain Relief Installation Guide

1. Cut the cable to the desired length.
2. Remove the outer jacket as needed to separate the individual coaxial cable lines.
3. For each individual coaxial cable, place a strain relief narrow end first onto the cable, and slide it a few inches down away from the cable end.



4. Prepare the cable end as usual, then attach and crimp a BNC connector onto the individual coaxial cable.
5. Apply one drop of the provided Loctite® 495 (or comparable) cyanoacrylate glue to the BNC ferrule, as shown below. Avoid skin contact with the glue.

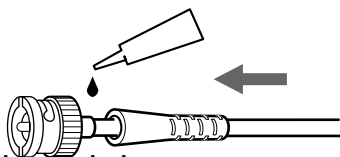


www.camboard.de

Tel. 07131 911201


Fax 07131 911203

BNC Strain Relief Installation Guide

1. Cut the cable to the desired length.
2. Remove the outer jacket as needed to separate the individual coaxial cable lines.
3. For each individual coaxial cable, place a strain relief narrow end first onto the cable, and slide it a few inches down away from the cable end.



4. Prepare the cable end as usual, then attach and crimp a BNC connector onto the individual coaxial cable.
5. Apply one drop of the provided Loctite® 495 (or comparable) cyanoacrylate glue to the BNC ferrule, as shown below. Avoid skin contact with the glue.

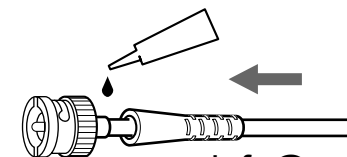


ce-info@camboard.de

im Vertrieb von
BNC Strain Relief Installation Guide, continued

CAMBOARD Electronics

- Slide the strain relief up the cable onto the shaft of the BNC connector.
- Rotate the strain relief at least a quarter turn to evenly distribute the glue and to seat the strain relief snugly against the BNC barrel.



- Allow the glue to dry for one minute.
- Repeat steps 3 through 8 for each individual coaxial cable.



Extron Electronics, USA
 1230 South Lewis Street
 Anaheim, CA 92805
 USA
 714.491.1500
 Fax 714.491.1517

Extron Electronics, Europe
 Beeldschermweg 6C
 3821 AH Amersfoort
 The Netherlands
 +31.33.453.4040
 Fax +31.33.453.4050


Extron Electronics, Asia
 135 Joo Seng Road, #04-01
 PM Industrial Building
 Singapore 368363
 +65.6383.4400
 Fax +65.6383.4664

Extron Electronics, Japan
 Daisan DMJ Building 6F
 3-9-1 Kudan Minami
 Chiyoda-ku, Tokyo 102-0074 Japan
 +81.3.3511.7655
 Fax +81.3.3511.7656

68-431-01
 Rev. B
 03 02

BNC Strain Relief Installation Guide, continued

- Slide the strain relief up the cable onto the shaft of the BNC connector.
- Rotate the strain relief at least a quarter turn to evenly distribute the glue and to seat the strain relief snugly against the BNC barrel.



- Allow the glue to dry for one minute.
- Repeat steps 3 through 8 for each individual coaxial cable.



Extron Electronics, USA
 1230 South Lewis Street
 Anaheim, CA 92805
 USA
 714.491.1500
 Fax 714.491.1517

Extron Electronics, Europe
 Beeldschermweg 6C
 3821 AH Amersfoort
 The Netherlands
 +31.33.453.4040
 Fax +31.33.453.4050


Extron Electronics, Asia
 135 Joo Seng Road, #04-01
 PM Industrial Building
 Singapore 368363
 +65.6383.4400
 Fax +65.6383.4664

Extron Electronics, Japan
 Daisan DMJ Building 6F
 3-9-1 Kudan Minami
 Chiyoda-ku, Tokyo 102-0074 Japan
 +81.3.3511.7655
 Fax +81.3.3511.7656

68-431-01
 Rev. B
 03 02

BNC Strain Relief Installation Guide, continued

- Slide the strain relief up the cable onto the shaft of the BNC connector.
- Rotate the strain relief at least a quarter turn to evenly distribute the glue and to seat the strain relief snugly against the BNC barrel.



- Allow the glue to dry for one minute.
- Repeat steps 3 through 8 for each individual coaxial cable.



Extron Electronics, USA
 1230 South Lewis Street
 Anaheim, CA 92805
 USA
 714.491.1500
 Fax 714.491.1517

Extron Electronics, Europe
 Beeldschermweg 6C
 3821 AH Amersfoort
 The Netherlands
 +31.33.453.4040
 Fax +31.33.453.4050


Extron Electronics, Asia
 135 Joo Seng Road, #04-01
 PM Industrial Building
 Singapore 368363
 +65.6383.4400
 Fax +65.6383.4664

Extron Electronics, Japan
 Daisan DMJ Building 6F
 3-9-1 Kudan Minami
 Chiyoda-ku, Tokyo 102-0074 Japan
 +81.3.3511.7655
 Fax +81.3.3511.7656

68-431-01
 Rev. B
 03 02

BNC Strain Relief Installation Guide, continued

- Slide the strain relief up the cable onto the shaft of the BNC connector.
- Rotate the strain relief at least a quarter turn to evenly distribute the glue and to seat the strain relief snugly against the BNC barrel.



- Allow the glue to dry for one minute.
- Repeat steps 3 through 8 for each individual coaxial cable.



Extron Electronics, USA
 1230 South Lewis Street
 Anaheim, CA 92805
 USA
 714.491.1500
 Fax 714.491.1517

Extron Electronics, Europe
 Beeldschermweg 6C
 3821 AH Amersfoort
 The Netherlands
 +31.33.453.4040
 Fax +31.33.453.4050

Extron Electronics, Asia
 135 Joo Seng Road, #04-01
 PM Industrial Building
 Singapore 368363
 +65.6383.4400
 Fax +65.6383.4664

Extron Electronics, Japan
 Daisan DMJ Building 6F
 3-9-1 Kudan Minami
 Chiyoda-ku, Tokyo 102-0074 Japan
 +81.3.3511.7655
 Fax +81.3.3511.7656

68-431-01
 Rev. B
 03 02

www.camboard.de

Tel. 07131 911201

ce-info@camboard.de

Fax 07131 911203