


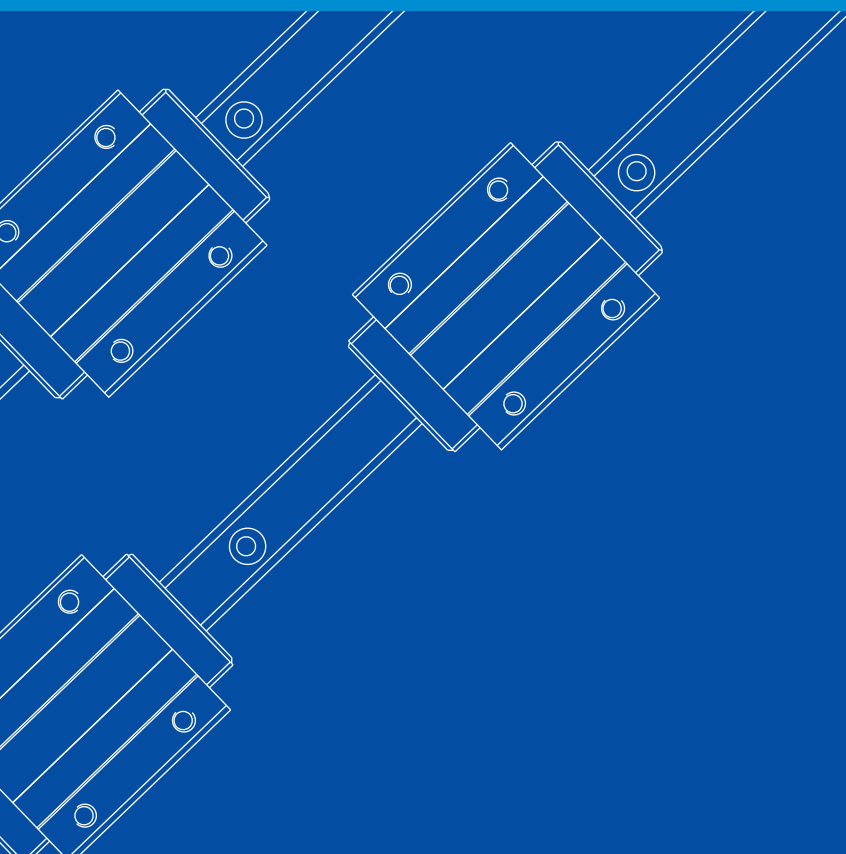

TBI MOTION TECHNOLOGY CO., LTD.
No.91, Zhong Shan Rd., Tucheng Dist., New Taipei City
23680, Taiwan, R.O.C.
TEL : +886-2-22687211~4 E-mail : tbi.tbi@msa.hinet.net
FAX : +886-2-22687210 http : //www.tbimotion.com.tw



facebook



2014/05-2000

Note : The appearance and specification may be changed without prior notice only if the requirement improves performance.



LINEAR GUIDE Technical Manual

LINEAR GUIDE CATALOG



LINEAR GUIDE



● 1986 TBI

Taiwan Ball Screw Industrial Co., Ltd. (*TBI*) was established in Tucheng Industrial District, Taipei, Taiwan. We were also the first manufacturer who produces ground type of precise ball screws in Taiwan.

● 1988

TBI established Research & Development Department and finished constructing the factory in Taichung that focuses on innovative products and producing precise grinding ball screws.

● 2002 COMTOP

COMTOP was established and exported ball screws to world wide based on a professional and successful marketing sales system.

● 2010 TBI TBIMOTION

(*TBI MOTION*) has integrated the technology of *TBI* and the marketing strategy of **COMTOP** to develop *TBI MOTION* in a leading place of Linear Motion Industry. The main products are Ball Screws, Linear Guides, Ball Splines, Single Axis Robot, Linear Ball Bearing, Couplings, and Ball Screw Accessories... etc.



An INDEX

Linear Guideway

1. General Information

1-1 Advantage and Features of Linear Guide	1
1-2 The procedure of Selecting Linear Guide	4
1-3 Basic Load Rating and Service Life of Linear Guide	5
1-4 Working Load	13
1-5 Safety Factor and Load	19
1-6 Calculation of average working load	28
1-7 Calculation example	32
1-8 Installation of Linear Guide	42
1-9 Friction	54
1-10 Design of Rigidity	55
1-11 Accuracy	57
1-12 Lubrication	59
1-13 Precautions of Linear Guide	60

2. *TBI MOTION* Linear Guide

2-1 The Characteristics of TBI Linear Guide	61
2-2 TRH/TRS/TRC International standard linear guide	62
The Structure of TR-series	63
TR Model Number for Non-interchangeable TR Type	65
Model Number for Interchangeable TR Type	66
TRH-V Series Dimension Table	67
TRH-F Series Dimension Table	69
TRS-V Series Dimension Table	71
TRS-F / TRC-V Series Dimension Table	73
The Standard length and maxima length of linear rail/Type	75
Accuracy Standard	77
Determining the Magnitude of a Preload/Grease Nipples	79
Mounting Location	81
Dust-proof/Linear Guide Self-lubrication Series Accessory	83
Codes of accessories	85
Mounting-Surface Dimensional Tolerance	89
2-3 TM Miniature Linear Guide	90
The suructure of TM-series/Accuracy/Preload	91
Types of lubrication/Order Information/Model Number	93
TM-N Specification/TM-W Specification	95
<i>TBI MOTION</i> Linear Guideway Inquiry Form	97

1-1 Advantage and Features of Linear Guide

1-1-1 High Accuracy

Because linear guide has little friction resistance, only a small driving force is needed to move the load. Low frictional resistance helps the temperature rising effect be small. Thus, the frictional resistance is decreased and the accuracy could be maintained for long period than traditional slide system.

1-1-2 High Rigidity

The design of Linear Guide rail and block features an equal load rating in all four directions that request sufficient rigidity load in all directions, and self-aligning capability to absorb installation-error. Moreover, a sufficient preload can be achieved to increase rigidity and makes it suitable for any kind of installation.

1-1-3 Easy for Maintenance





Compared with high-skill required scrapping process of traditional slide system, the Linear Guide can offer high precision even if the mounting surface is machined by milling or grinding. Moreover the interchangeability of Linear Guide gives a convenience for installation and future maintenance.

1-1-4 High Speed

Linear Guide block, rail and ball apply by contact point of Rolling system. Due to the characteristic of low frictional resistance, the required driving force is much lower than that in other systems, thus the power consumption is small. Moreover, the temperature rising effect is small even under high speed operation.

1-1-5 High Performance without Clearance(see Fig 1.1.1)

Fig 1.1.1

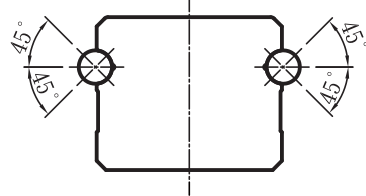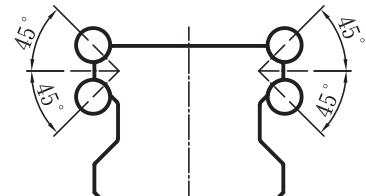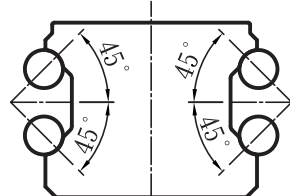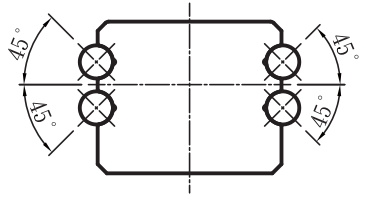Drawing	Characteristics, Performance
	- Two trains of balls. - In a Gothic-arch groove, each ball contacts the raceway at four points 45°-45°. - It has constant contact point between ball and arc groove. - Rigidity has high stability. - Two-row design is able to perform an equal load rating in four directions.
	- Four trains of balls. - The circular-arc groove has two contact points at 45°-45°(DF)-Four-Row Design features an equal load rating in all four directions with high rigidity. - Four-row design is able to perform an equal load rating in four directions. - Self-Aligning to absorb installation-error.
	- Four trains of balls. - The circular-arc groove has two contact points at 45°-45° (DB). - Four-Row Design features an equal load rating in all four directions with high rigidity. - Low friction resistance promotes smooth operating condition.
	- Four trains of balls. - In the Gothic-arch groove, each ball contacts the raceway at two points 45°-45°, Light preload, two contact points, Heavy preload, four contact points. - It contrasts with traditional DB type, which has better rigidity at permissible Moment..

The Contract table of four-row design with equal load rating and two-row Gothic design.

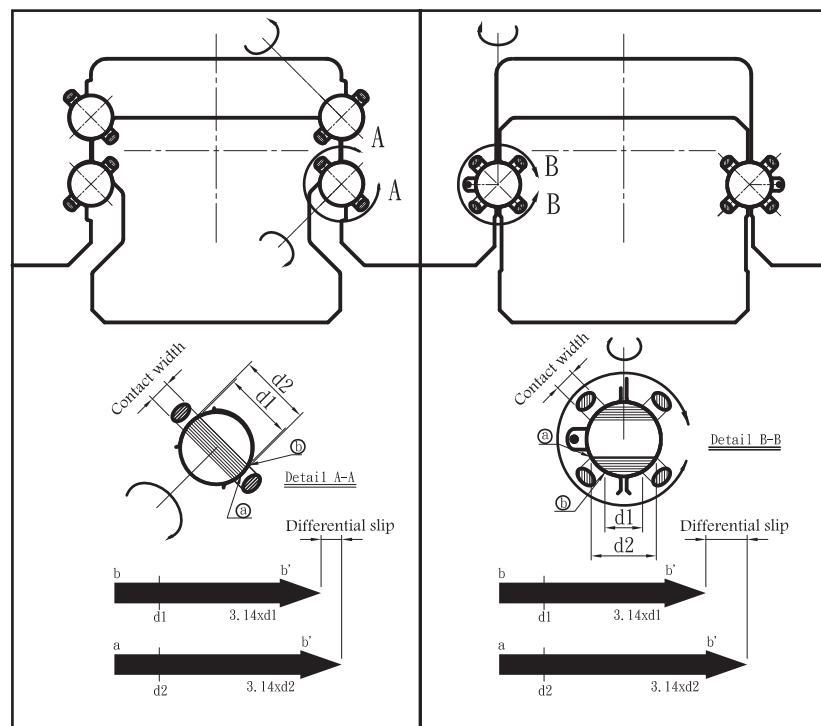



Table1.1.1 Four-Row Equal Load Rating Design.

Table1.1.2 Two-Row Gothic Design.

As shown in the diagrams, each time the ball rolls, a slip occurs in an amount equal to the difference between the circumferences of the inner and outer surfaces of the ball in contact with the raceway (πd_1) and (πd_2). (This slip is called the differential slip). When the circumferential difference is too large, a slip occurs when the ball rolls. The friction coefficient between the ball and the raceway is several times greater when slip occurs than when there is no slip and frictional resistance increases substantially. Even under a preload or regular load, the ball and raceway contact one another at two points in the loading direction, as shown. Thus the difference between d_1 and d_2 can be small, as can the differential slip. This design gives rise to a smooth rolling motion.

1-2 The procedure of Select Linear Guide

1-2-1 Flowchart

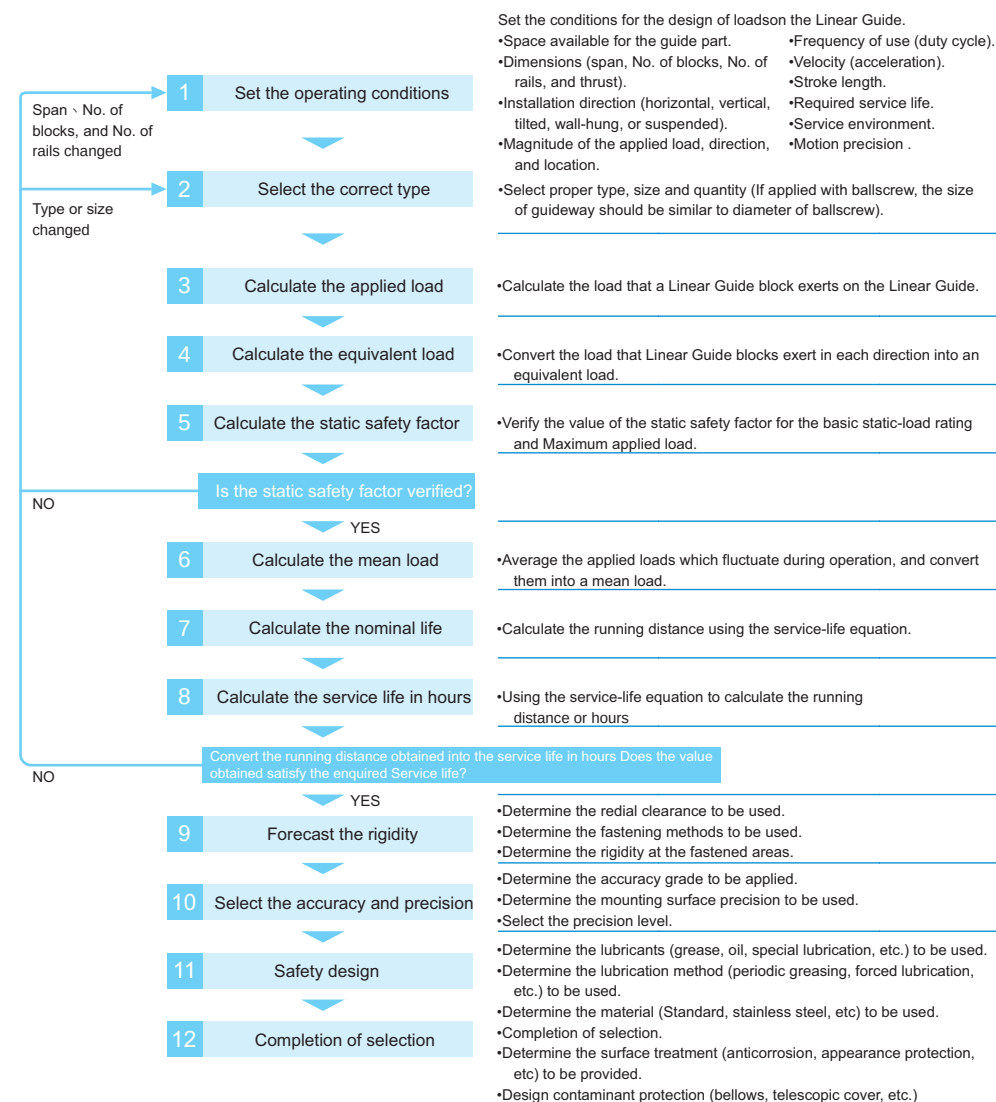

1-3 Basic Load Rating and Service Life of Linear Guide

When determining a model that would best suit your service conditions for a linear motion system, the load carrying capacity and service life of the model must be considered. To consider the load carrying capacity you should know the static safety factor of the model calculated based on the basic static load rating. Service life can be assessed by calculating the nominal life based on the basic dynamic load rating and checking to see if the values thus obtained meet your requirements.

The service life of a linear motion system refers to the total running distance that the linear motion system travels until flaking (the disintegration of a metal surface in scale-like pieces) occurs there to as a result of the rolling fatigue of the material caused by repeated stress on raceways and rolling elements.

Basic Load Rating : There are two basic load ratings for linear motion systems□basic static load rating(C_0), which sets the static permissible limits, and basic dynamic load rating (C).

1-3-1 Basic Static Load Rating (C_0)

If a linear motion system, whether at rest or in motion, receives an excessive load or a large impact, a localized permanent set develops between the raceway and rolling elements. If the magnitude of the permanent set exceeds a certain limit, it hinders the smooth motion of the liner motion system.

The basic static load rating refers to a static load in a given direction with given magnitude such that the sum of the permanent set of the rolling elements and that of the raceway at the contact area under the most stress is 0.0001 times greater than the rolling element diameter. In linear motion systems, the basic static load rating is defined as the radial load. Thus the basic static load rating provides a limit on the static permissible load.

1-3-2 Basic Permissible Moment (M_x , M_y , M_z)

When a Linear Guide gets a force that makes the balls distorted to 1/10,000 of their diameter, we call the force as basic static permissible moment. Values of M_x , M_y , M_z are shown on Fig1.3.1, which suggest 3 axes of moment on a Linear Guide slide.

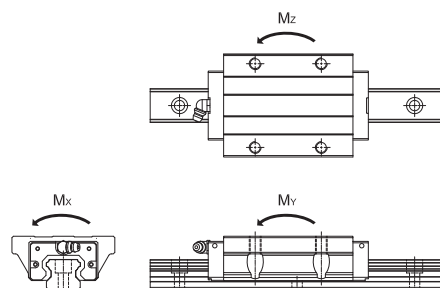


Fig1.3.1

1-3-3 Static Safety Factor f_s

A linear motion system may possibly receive an unpredictable external force due to vibration and impact while it is at rest or is moving or due to inertia resulting from start and stop. It is therefore necessary to consider the static safety factor against operating loads like these. The static safety factor (f_s) indicates the ratio of a linear motion system load carrying capacity 【basic static load rating C_0 】 to the load exerted there on.

$$f_s = \frac{C_0}{P} \text{ or } \frac{M_0}{M}$$

f_s : static safety factor

C_0 : basic static load rating (N)

M_0 : static permissible moment (N-mm)

P : calculated load (N)

M : calculated moment (N-mm)

To calculate a load exerted on the Linear Guide, the mean load necessary for calculating the service life and the maximum load necessary for calculating the static safety factor must be obtained in advance. In a system that is subjected to frequent starts and stops and is placed under machining loads, and one upon which a moment due to an overhang load is forcefully exerted, an excessive, load greater than expected may develop. When selecting the correct type of Linear Guide for your purpose, be sure that the type you are considering can bear the maximum possible load, both when stopped and when in operation. The table below specifies the standard values for the static safety factor.

Table1.3.1 Static Safety Factor f_s

Machine used	Loading conditions	f_s lower limit
Ordinary industrial machine	Receives no vibration or impact	1.0 - 1.3
	Receives vibration and impact	2.0 - 3.0
Machine tool	Receives no vibration or impact	1.0 - 1.5
	Receives vibration and impact	2.5 - 7.0

For large radial loads	$\frac{f_h \cdot f_t \cdot f_c \cdot C_0}{P_R} \geq f_s$
For large reverse-radial loads	$\frac{f_h \cdot f_t \cdot f_c \cdot C_{OL}}{P_L} \geq f_s$
For large lateral loads	$\frac{f_h \cdot f_t \cdot f_c \cdot C_{OT}}{P_T} \geq f_s$

f_s : Static safety factor

C_0 : Basic static-load rating (radial) (N)

C_{OL} : Basic static-load rating (reverse-radial) (N)

C_{OT} : Basic static-load rating (lateral) (N)

P_R : Calculated load (radial) (N)

P_L : Calculated load (reverse-radial) (N)

P_T : Calculated load (lateral) (N)

f_h : Hardness factor (Fig1.3.2)

f_t : Temperature factor (Fig1.3.3)

f_c : Contact factor (Table1.3.2)

1-3-4 (L)

Even when identical linear guideways in a group are manufactured in the same way or applied under the same condition, the service life may be varied. Thus, the service life is used as an indicator for determining the service life of a linear guideway system. The nominal life (L) is defined as the total running distance that 90% of identical linear guideways in a group, when they are applied under the same conditions, can work without developing laking.

1-3-5 Basic Dynamic Load Rating (C)

Basic dynamic load rating (C) can be used to calculate the service life when linear guideway system response to a load. The basic dynamic load rating (C) is defined as a load in a given direction and with a given magnitude that when a group of linear guideways operate under the same conditions. As the rolling element is ball, the nominal life of the linear guideway is 50 km. Moreover, as the rolling element is roller, the nominal life is 100 km.

1-3-6 Calculation of Nominal Life

The service lives of linear motion systems more or less vary from system to system even if they are manufactured to the same specifications and remain in service under the same operating conditions. Hence a guideline for determining the service life of a linear motion system is given based on nominal life, which is defined as follows. The nominal life refers to the total running distance that 90% of identical linear motion systems in a group, when interlocked with one another under the same conditions, can achieve without developing flaking. The nominal life(L) of a linear motion system can be obtained from the basic dynamic load rating (C) and load imposed (P) using the following equations.

For a linear motion system with balls

$$L = \left(\frac{f_h \cdot f_t \cdot f_c}{f_w} \cdot \frac{C}{P_c} \right)^3 \cdot 50$$

For a linear motion system with rollers

$$L = \left(\frac{f_h \cdot f_t \cdot f_c}{f_w} \cdot \frac{C}{P_c} \right)^{\frac{10}{3}} \cdot 100$$

Service-Life Equation

The service life of the Linear Guide can be obtained using the following equation :

$$L = \left(\frac{f_h \cdot f_t \cdot f_c}{f_w} \cdot \frac{C}{P_c} \right)^3 \cdot 50$$

(total distance that can be traveled by at least 90% of a group of Linear Guide operated under the same conditions)

C : basic dynamic-load rating (N)

P_c : calculated load (N)

f_h : hardness factor (Fig1.3.2)

f_t : temperature factor (Fig1.3.3)

f_c : contact factor (Table1.3.3)

f_w : load factor (Table1.3.4)

(Once nominal life (L) is obtained using this equation. The Linear Guide service life can be calculated by using the following equation if the stroke length and the number of reciprocating cycles are constant :

$$L_h = \frac{L \cdot 10^6}{2 \cdot \ell_s \cdot n_1 \cdot 60}$$

L_h : service life in hours (h)

ℓ_s : stroke length (mm)

n₁ : No. of reciprocating cycles per min (min⁻¹)

【f_h : Hardness factor】

To ensure achievement of the optimum load-bearing capacity of the Linear Guide, the raceway hardness must be 58~64HRC. At a hardness below this range, the basic dynamic and Static-load ratings decrease.

The ratings must therefore be multiplied by the

respective hardness factors (f_h). As the Linear Guide has sufficient hardness, f_h for the Linear Guide is 1.0 unless otherwise specified.

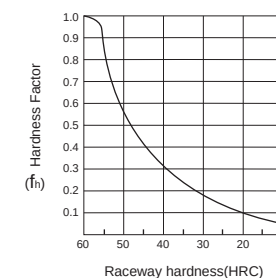


Fig1.3.2 Hardness Factor (f_h)

【f_t : Temperature factor】

For Linear Guide used at ambient temperatures over 100°C, a temperature factor corresponding to the ambient temperature, selected from the diagram below, must be taken into consideration. In addition, please note that selected Linear Guide itself must be a model with high-temperature specifications.

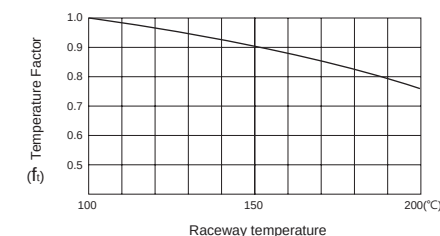


Fig1.3.3 Temperature Factor (f_t)

(Note: When used at ambient temperatures higher than 80°C, the seals, end plates, and ball cages used must be change to those with high-temperature specifications.

【 f_c : Contact factor】

When multiple Linear Guide blocks are used laid over one another, moments and mounting-surface precision will affect operation, making it difficult to achieve uniform load distribution. For Linear Guide blocks used laid over one another, multiply the basic load rating (C), (C0) by a contact factor selected from the table below.

Table 1.3.2

No. of blocks used	Contact factor (f_c)
2	0.81
3	0.72
4	0.66
5	0.61
6 or more	0.6
In normal use	1

Note: When the non-uniform load distribution can be predicted, as in a large system, consider using a contact factor.

【 f_w : Load factor】

In general, machines in reciprocal motion are likely to cause vibration and impact during operation, and it is particularly difficult to determine the magnitude of vibration that develops during high-speed operation as well as that of impact during repeated starting and stopping in normal use. Therefore, where the effects of speed and vibration are estimated to be significant divide the basic dynamic-load rating (C) by a load factor selected from the table below.

Table 1.3.3 Load Factor (f_w)

Vibration and impact	Velocity(V)	f_w
Very Slight	Very Low $V \leq 0.25\text{m/s}$	1~1.2
Slight	Low $0.25 < V \leq 1\text{m/s}$	1.2~1.5
Moderate	Medium $1 < V \leq 2\text{m/s}$	1.5~2
Strong	High $V > 2\text{m/s}$	2~3.5

Calculation Examples :

Application : Machine Center

Block model number : TRH30FE (Basic static load $C_0=88.329\text{kN}$, Basic dynamic load $C=47\text{kN}$)

The calculated load $P_c=2614\text{N}$

The formula of calculating the life time by travel is

$$L = \left(\frac{f_h \cdot f_t \cdot f_c}{f_w} \cdot \frac{C}{P_c} \right)^3 \cdot 50 \text{ km}$$

Since using only 1 block in this application, we take $f_c=1$

Supposed the speed is not very high between 0.25~1m/s, so we take $f_w=1.5$

The temperature of working environment is under 100°C. The temperature factor $f_t=1$

The hardness of raceway is 58~64 HRC, so the hardness $f_h=1$

With all above data, the life time by travel of this application $L = 86112\text{km}$

To calculate the life time by using hours :

We supposed the distance of travel $L_s = 3000\text{mm}$

Times (Back and forth) per mins $N1 = 4 \text{ (min}^{-1}\text{)}$

The life time by travel is 86112km. the distance of travel is 3m (3000mm), so each back and forth is 6m.

The total times of back and forth would be $86112 \times 1000 / 6 = 14352044$

The life time by using minutes is $14352044 / 4 = 3588011 \text{ mins} = 59800 \text{ hours}$

1-3-7 Service-Life Equation Lh

The Service Life can be calculated by operating term and velocity Nominal Life.

$$L_h = \left(\frac{L \cdot 10^3}{V_e \cdot 60} \right) = \left(\frac{C}{P} \right)^3 \cdot \frac{50 \cdot 10^3}{V_e \cdot 60} \cdot \text{hr}$$

Lh : Service Life in Hour L : Nominal life(km)
Ve : Velocity(m/min) C/P : Load Ratio

Calculating Life Time

Formula (A) calculating hour

Ln : Lifetime (h)

L : Nominal life (km)

Ls : Distance of travel (mm)

N1 : Times of travel per minute (min^{-1})

$$L_n = \frac{L \cdot 10^6}{2 \cdot L_s \cdot N1 \cdot 60}$$

Formula (B) calculating year

Ly : Lifetime (year)

L : Nominal life (km)

Ls : Distance of travel (mm)

N1 : Times of travel per minute (min^{-1})

Mn : Minutes of running per day (hr/day)

Hn : Hours of running per day (hr/day)

Dn : Days of running per year (day/year)

$$L_y = \frac{L \cdot 10^6}{2 \cdot L_s \cdot N1 \cdot M \cdot H \cdot D}$$

Example 1 : There is a working station using linear guides with a nominal life of 45000 km, how should we calculate its service life in hours.

Known :

Ls : Distance of travel = 3000mm (mm)

N1 : 4 times of travel per minute (min^{-1})

$$L_n = \frac{L \cdot 10^6}{2 \cdot L_s \cdot N1 \cdot 60} = \frac{45000 \cdot 10^6}{2 \cdot 3000 \cdot 4 \cdot 60} = 31250 \text{ hr}$$

Example 2 : There is a working station using linear guides with a nominal life 7123.5 km, how should we calculate its service life in hours.

Known :

Ls : Distance of travel = 4000mm (mm)

N1 : 5 times of travel per minute (min^{-1})

Ms : Running 60 mins per hour (min/hr)

Hs : Running 24 hours per day (hr/day)

Ds : Running 360 days per year (day/year)

$$L_y = \frac{L \cdot 10^6}{2 \cdot L_s \cdot N1 \cdot M \cdot H \cdot D} = \frac{7123.5 \cdot 10^6}{2 \cdot 4000 \cdot 5 \cdot 60 \cdot 24 \cdot 360} = 3.435 \text{ year}$$

1-4 Working Load

1-4-1 Working Load

The load applied to the Linear Guide, varies with the external force exerted thereon, such as the location of the center of gravity of an object being moved, the location of the thrust developed, inertia due to acceleration and deceleration during starting and stopping, and the machining resistance. To select the correct type of Linear Guide, the magnitude of applied loads must be determined in consideration of the above conditions to calculate accurate applied load.

To obtain the magnitude of an applied load and the service life in hours, the operating conditions of the Linear Guide system must first be set.

- (1) Mass : m (kg)
- (2) Direction of the action load
- (3) Location of the action point (e.g., center of gravity) : L2 L3 h1 (mm)
- (4) Location of the thrust developed : L4h2 (mm)
- (5) Linear Guide system arrangement : LOL1 (mm)
- (6) Velocity diagram
Velocity : V (mm/s)
Time constant : tn (s)
Acceleration : an (mm/s²)
 $a_n = \left(\frac{V}{t_n} \right)$
Gravitational acceleration g=9.8 m/s²
- (7) Duty cycle (No: of reciprocating cycles per min) : N1 (min⁻¹)
- (8) Stroke length : L (mm)
- (9) Mean velocity : Vm (mm/s)
- (10) Required service life in hours : Lh (h)

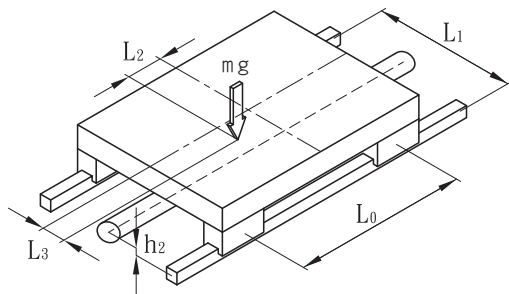


Fig1.4.1

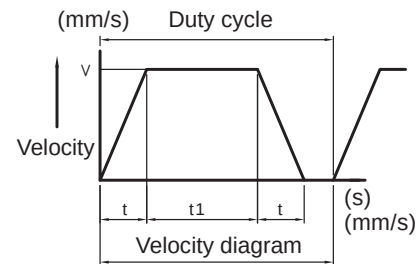




Fig1.4.2



Calculating the Working Load



The load applied to the Linear Guide varies with the external force exerted thereon, such as the location of the center of gravity of an object being moved, the location of the thrust developed, inertia due to acceleration and deceleration during starting and stopping, and the machining resistance. To select the correct type of Linear Guide, the magnitude of applied loads must be determined in consideration of the above conditions. Using the following Table1.4.1, we will now calculate the loads applied to the Linear Guide.



m : Mass	(kg)	g : Gravitational acceleration (m/s ²)	(g=9.8m/s ²)
Ln : Distance	(mm)	V : Velocity	(m/s)
Fn : External force	(N)	tn : Time constant	(s)
Pn : Applied load	(N)	an : Acceleration	(m/s ²)
(radial and reverse-radial directions)		an = ($\frac{V}{t_n}$)	
PnT : Applied load	(mm)		




Table1.4.1

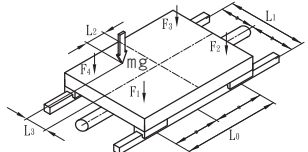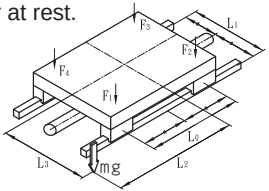N.O.	Operating conditions	Equation for calculating applied load
1	Install in a horizontal position. (Move the block) Measure in uniform motion or at rest. 	$F_1 = \frac{mg}{4} + \frac{mg \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_2 = \frac{mg}{4} - \frac{mg \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_3 = \frac{mg}{4} - \frac{mg \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_4 = \frac{mg}{4} + \frac{mg \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot L_3}{2 \cdot L_1}$
2	Install in an overhung horizontal position. (Move the block) Measure in uniform motion or at rest. 	$F_1 = \frac{mg}{4} + \frac{mg \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_2 = \frac{mg}{4} - \frac{mg \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_3 = \frac{mg}{4} - \frac{mg \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_4 = \frac{mg}{4} + \frac{mg \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot L_3}{2 \cdot L_1}$

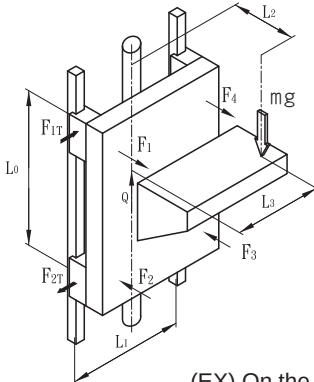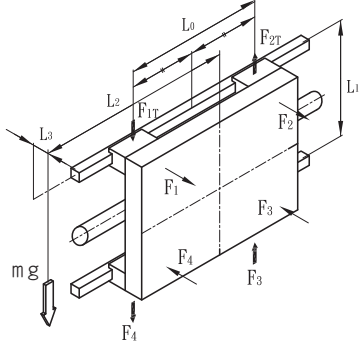NO.	Operating conditions	Equation for calculating applied load
3	Install in a vertical position. Measure in uniform motion or at rest.  (EX) On the vertical axis of industrial robots in automatic painting machines and lifters.	$F_1 = F_2 = F_3 = F_4 = \frac{mg \cdot L_2}{2 \cdot L_0}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{mg \cdot L_3}{2 \cdot L_0}$
4	On a wall. Measure in uniform motion or at rest.  (EX) On cross rails loader travel axis.	$F_1 = F_2 = F_3 = F_4 = \frac{mg \cdot L_3}{2 \cdot L_1}$ $F_{1T} = F_{4T} = \frac{mg}{4} + \frac{mg \cdot L_2}{2 \cdot L_0}$ $F_{2T} = F_{3T} = \frac{mg}{4} - \frac{mg \cdot L_2}{2 \cdot L_0}$

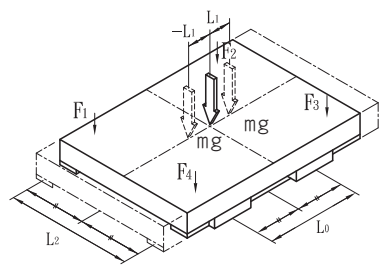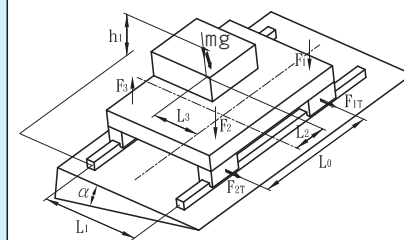NO.	Operating conditions	Equation for calculating applied load
5	Move on Linear Guide rail Install in a horizontal position.  (EX) XY table / Sliding fork.	$F_{1\max} = F_{2\max} = F_{3\max} = F_{4\max} = \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$ $F_{1\min} = F_{2\min} = F_{3\min} = F_{4\min} = \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$
6	Install in a laterally tilted position.  (EX) NC lathe / Carriage (for the lathe).	$F_1 = + \frac{mg \cdot \cos \theta}{4} + \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} + \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_1}$ $F_{1T} = \frac{mg \cdot \sin \theta}{4} + \frac{mg \cdot \sin \theta \cdot L_2}{2 \cdot L_0}$ $F_2 = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} + \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_1}$ $F_{2T} = \frac{mg \cdot \sin \theta}{4} - \frac{mg \cdot \sin \theta \cdot L_2}{2 \cdot L_0}$ $F_3 = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} - \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_1}$ $F_{3T} = \frac{mg \cdot \sin \theta}{4} - \frac{mg \cdot \sin \theta \cdot L_2}{2 \cdot L_0}$ $F_4 = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} - \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_1}$ $F_{4T} = \frac{mg \cdot \sin \theta}{4} - \frac{mg \cdot \sin \theta \cdot L_2}{2 \cdot L_0}$

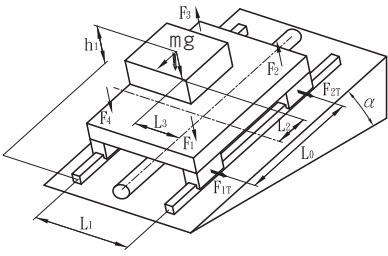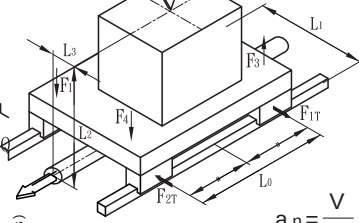NO.	Operating conditions	Equation for calculating applied load
7	Install in a longitudinally tilted position.  (EX) NC lathe / Tool res (for the lathe).	$F_1 = + \frac{mg \cdot \cos \theta}{4} + \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} + \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_0}$ $F_{1T} = + \frac{mg \cdot \sin \theta \cdot L_3}{2 \cdot L_0}$ $F_2 = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} - \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} - \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_0}$ $F_{2T} = - \frac{mg \cdot \sin \theta \cdot L_3}{2 \cdot L_0}$ $F_3 = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} - \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_0}$ $F_{3T} = - \frac{mg \cdot \sin \theta \cdot L_3}{2 \cdot L_0}$ $F_4 = + \frac{mg \cdot \cos \theta}{4} + \frac{mg \cdot \cos \theta \cdot L_2}{2 \cdot L_0} + \frac{mg \cdot \cos \theta \cdot L_3}{2 \cdot L_1} + \frac{mg \cdot \sin \theta \cdot h_1}{2 \cdot L_0}$ $F_{4T} = + \frac{mg \cdot \sin \theta \cdot L_3}{2 \cdot L_0}$
8	Install in a horizontal position subjected to inertia.  (EX) Wagon Truck.	During acceleration $F_1 = F_4 = \frac{mg}{4} - \frac{mg \cdot a_1 \cdot L_2}{2 \cdot L_0 \cdot g}$ $F_2 = F_3 = \frac{mg}{4} + \frac{mg \cdot a_1 \cdot L_2}{2 \cdot L_0 \cdot g}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{mg \cdot a_1 \cdot L_3}{2 \cdot L_0 \cdot g}$ In uniform motion $F_1 = F_2 = F_3 = F_4 = \frac{mg}{4}$ During deceleration $F_1 = F_4 = \frac{mg}{4} - \frac{mg \cdot a_3 \cdot L_2}{2 \cdot L_0 \cdot g}$ $F_2 = F_3 = \frac{mg}{4} + \frac{mg \cdot a_3 \cdot L_2}{2 \cdot L_0 \cdot g}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{mg \cdot a_3 \cdot L_3}{2 \cdot L_0 \cdot g}$

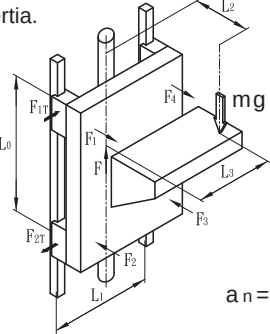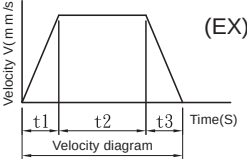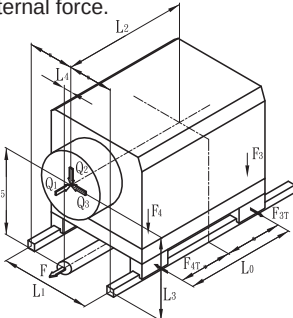NO.	Operating conditions	Equation for calculating applied load
9	Mount in a vertical position subjected to inertia.  (EX) Elevator. 	During acceleration $F_1 = F_2 = F_3 = F_4 = \frac{(mg + mg \cdot a_1/g) \cdot L_2}{2 \cdot L_0}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{(mg + mg \cdot a_1/g) \cdot L_3}{2 \cdot L_0}$ In uniform motion $F_1 = F_2 = F_3 = F_4 = \frac{mg \cdot L_2}{2 \cdot L_0}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{mg \cdot L_2}{2 \cdot L_0}$ During deceleration $F_1 = F_2 = F_3 = F_4 = \frac{(mg - mg \cdot a_3/g) \cdot L_2}{2 \cdot L_0}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{(mg - mg \cdot a_3/g) \cdot L_3}{2 \cdot L_0}$
10	Install on a horizontal position subjected to external force.  (EX) Drill unit / Milling machine / Lathe / Machining center and similar cutting machine.	Under force Q1 $F_1 = F_2 = F_3 = F_4 = \frac{Q_1 \cdot L_5}{2 \cdot L_0}$ $F_{1T} = F_{2T} = F_{3T} = F_{4T} = \frac{Q_1 \cdot L_4}{2 \cdot L_0}$ Under force Q2 $F_1 = F_4 = \frac{Q_2}{4} + \frac{Q_2 \cdot L_2}{2 \cdot L_0}$ $F_2 = F_3 = \frac{Q_2}{4} - \frac{Q_2 \cdot L_2}{2 \cdot L_0}$ Under force Q3 $F_1 = F_2 = F_3 = F_4 = \frac{Q_3 \cdot L_3}{2 \cdot L_1}$ $F_{1T} = F_{4T} = \frac{Q_3}{4} + \frac{Q_3 \cdot L_2}{2 \cdot L_0}$ $F_{2T} = F_{3T} = \frac{Q_3}{4} - \frac{Q_3 \cdot L_2}{2 \cdot L_0}$

1-5 Safety Factor and Load

1-5-1 Equivalent Factors of Linear Guide Block

Where a sufficient installation space is not available you may be obliged to use just one Linear Guide block or two Linear Guide blocks laid over one another for the Linear Guide. In such a setting, the load distribution cannot be uniform and, as a result, an excessive load is exerted in localized areas (e.g., rail ends). Continued use under such conditions may result in flaking in those areas, consequently shortening the service life. In such a case, calculate true load by multiplying the moment value by any one of the moment-equivalent factors specified in Tables.

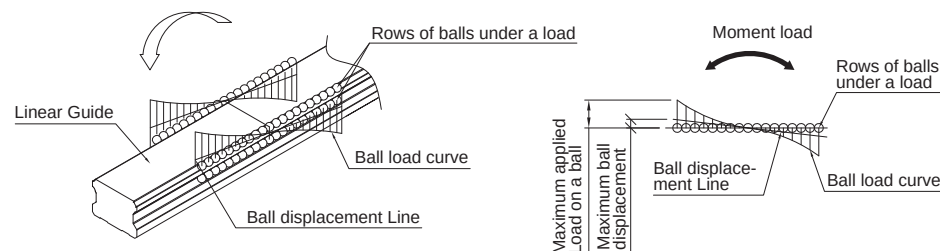


Fig.1.5.1 Ball Load Effected by a Moment

An equivalent-load equation applicable when a moment acts on a Linear Guides is shown below.

$$P = K \cdot M$$

P : equivalent load per Linear Guide (kgf)

K : equivalent moment factor (mm^{-1})

M : developed moment ($\text{kgf} \cdot \text{mm}$)

K_A 、 K_B 、 K_C represent the equivalent moment factors in directions M_A 、 M_B and M_C respectively.

Calculation Examples

Two Linear Guide blocks are used laid over one another.

Model No : TRH30FE

Gravitational Acceleration $g = 9.8\text{m/s}$

Mass $w = 5\text{kgf}$

$MC = 5 \cdot 150 = 750 \text{ (kgf}\cdot\text{mm)}$

$MA = 5 \cdot 200 = 1000 \text{ (kgf}\cdot\text{mm)}$

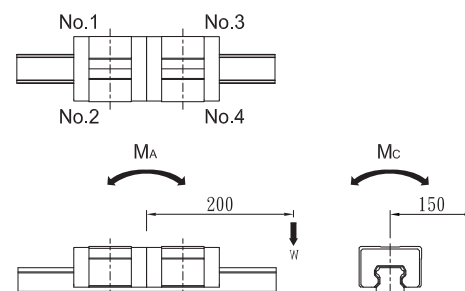


Fig.1.5.2

$$P_1 = K_c \cdot \frac{M_c}{2} + K_A \cdot M_A + \frac{W}{2} = 7.15 \cdot 10^{-2} \cdot \frac{750}{2} + 1.3 \cdot 10^{-2} \cdot 1000 + \frac{5}{2} = 42.3(\text{kgf})$$

$$P_2 = -K_c \cdot \frac{M_c}{2} + K_A \cdot M_A + \frac{W}{2} = -7.15 \cdot 10^{-2} \cdot \frac{750}{2} + 1.3 \cdot 10^{-2} \cdot 1000 + \frac{5}{2} = -11.3(\text{kgf})$$

$$P_3 = K_c \cdot \frac{M_c}{2} - K_A \cdot M_A + \frac{W}{2} = 7.15 \cdot 10^{-2} \cdot \frac{750}{2} - 1.3 \cdot 10^{-2} \cdot 1000 + \frac{5}{2} = 16.3(\text{kgf})$$

$$P_4 = -K_c \cdot \frac{M_c}{2} - K_A \cdot M_A + \frac{W}{2} = -7.15 \cdot 10^{-2} \cdot \frac{750}{2} - 1.3 \cdot 10^{-2} \cdot 1000 + \frac{5}{2} = -37.3(\text{kgf})$$

Note:

1. Since a Linear Guide in a vertical position receives only a moment load, there is no need to apply other loads (w).
2. In some models, load ratings differ depending on the direction of the applied load. With such a model, calculate an equivalent load in a direction in which conditions are comparably bad.

Table1.5.1 TRH-F

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TRH15FN	1.48 x 10 ⁻¹	3.11 x 10 ⁻²	1.48 x 10 ⁻¹	3.11 x 10 ⁻²	1.34 x 10 ⁻¹
TRH15FL	1.26 x 10 ⁻¹	2.70 x 10 ⁻²	1.26 x 10 ⁻¹	2.70 x 10 ⁻²	1.34 x 10 ⁻¹
TRH15FE	1.01 x 10 ⁻¹	2.19 x 10 ⁻²	1.01 x 10 ⁻¹	2.19 x 10 ⁻²	1.34 x 10 ⁻¹
TRH20FN	1.11 x 10 ⁻¹	2.35 x 10 ⁻²	1.11 x 10 ⁻¹	2.35 x 10 ⁻²	9.90 x 10 ⁻²
TRH20FL	1.05 x 10 ⁻¹	2.20 x 10 ⁻²	1.05 x 10 ⁻¹	2.20 x 10 ⁻²	9.90 x 10 ⁻²
TRH20FE	8.00 x 10 ⁻²	1.78 x 10 ⁻²	8.00 x 10 ⁻²	1.78 x 10 ⁻²	9.90 x 10 ⁻²
TRH25FN	1.04 x 10 ⁻¹	2.17 x 10 ⁻²	1.04 x 10 ⁻¹	2.17 x 10 ⁻²	8.62 x 10 ⁻²
TRH25FL	8.82 x 10 ⁻²	1.89 x 10 ⁻²	8.82 x 10 ⁻²	1.89 x 10 ⁻²	8.62 x 10 ⁻²
TRH25FE	7.35 x 10 ⁻²	1.60 x 10 ⁻²	7.35 x 10 ⁻²	1.60 x 10 ⁻²	8.62 x 10 ⁻²
TRH30FL	7.74 x 10 ⁻²	1.64 x 10 ⁻²	7.74 x 10 ⁻²	1.64 x 10 ⁻²	7.15 x 10 ⁻²
TRH30FE	6.12 x 10 ⁻²	1.33 x 10 ⁻²	6.12 x 10 ⁻²	1.33 x 10 ⁻²	7.15 x 10 ⁻²
TRH35FL	6.99 x 10 ⁻²	1.42 x 10 ⁻²	6.99 x 10 ⁻²	1.42 x 10 ⁻²	5.85 x 10 ⁻²
TRH35FE	5.25 x 10 ⁻²	1.15 x 10 ⁻²	5.25 x 10 ⁻²	1.15 x 10 ⁻²	5.85 x 10 ⁻²
TRH45FL	5.80 x 10 ⁻²	1.24 x 10 ⁻²	5.80 x 10 ⁻²	1.24 x 10 ⁻²	4.38 x 10 ⁻²
TRH45FE	4.59 x 10 ⁻²	1.00 x 10 ⁻²	4.59 x 10 ⁻²	1.00 x 10 ⁻²	4.38 x 10 ⁻²
TRH55FL	5.25 x 10 ⁻²	1.07 x 10 ⁻²	5.25 x 10 ⁻²	1.07 x 10 ⁻²	3.78 x 10 ⁻²
TRH55FE	4.08 x 10 ⁻²	8.69 x 10 ⁻³	4.08 x 10 ⁻²	8.69 x 10 ⁻³	3.78 x 10 ⁻²
TRH65FL	4.52 x 10 ⁻²	8.76 x 10 ⁻³	4.52 x 10 ⁻²	8.76 x 10 ⁻³	3.24 x 10 ⁻²
TRH65FE	3.27 x 10 ⁻²	6.77 x 10 ⁻³	3.27 x 10 ⁻²	6.77 x 10 ⁻³	3.24 x 10 ⁻²

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.2 TRH-V

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TRH15VN	1.48 x 10 ⁻¹	3.11 x 10 ⁻²	1.48 x 10 ⁻¹	3.11 x 10 ⁻²	1.34 x 10 ⁻¹
TRH15VL	1.26 x 10 ⁻¹	2.70 x 10 ⁻²	1.26 x 10 ⁻¹	2.70 x 10 ⁻²	1.34 x 10 ⁻¹
TRH20VN	1.11 x 10 ⁻¹	2.35 x 10 ⁻²	1.11 x 10 ⁻¹	2.35 x 10 ⁻²	9.90 x 10 ⁻²
TRH20VL	1.05 x 10 ⁻¹	2.20 x 10 ⁻²	1.05 x 10 ⁻¹	2.20 x 10 ⁻²	9.90 x 10 ⁻²
TRH20VE	8.00 x 10 ⁻²	1.78 x 10 ⁻²	8.00 x 10 ⁻²	1.78 x 10 ⁻²	9.90 x 10 ⁻²
TRH25VN	1.04 x 10 ⁻¹	2.17 x 10 ⁻²	1.04 x 10 ⁻¹	2.17 x 10 ⁻²	8.62 x 10 ⁻²
TRH25VL	8.82 x 10 ⁻²	1.89 x 10 ⁻²	8.82 x 10 ⁻²	1.89 x 10 ⁻²	8.62 x 10 ⁻²
TRH25VE	7.35 x 10 ⁻²	1.60 x 10 ⁻²	7.35 x 10 ⁻²	1.60 x 10 ⁻²	8.62 x 10 ⁻²
TRH30VL	7.74 x 10 ⁻²	1.64 x 10 ⁻²	7.74 x 10 ⁻²	1.64 x 10 ⁻²	7.15 x 10 ⁻²
TRH30VE	6.12 x 10 ⁻²	1.33 x 10 ⁻²	6.12 x 10 ⁻²	1.33 x 10 ⁻²	7.15 x 10 ⁻²
TRH35VL	6.99 x 10 ⁻²	1.42 x 10 ⁻²	6.99 x 10 ⁻²	1.42 x 10 ⁻²	5.85 x 10 ⁻²
TRH35VE	5.25 x 10 ⁻²	1.15 x 10 ⁻²	5.25 x 10 ⁻²	1.15 x 10 ⁻²	5.85 x 10 ⁻²
TRH45VL	5.80 x 10 ⁻²	1.24 x 10 ⁻²	5.80 x 10 ⁻²	1.24 x 10 ⁻²	4.38 x 10 ⁻²
TRH45VE	4.59 x 10 ⁻²	1.00 x 10 ⁻²	4.59 x 10 ⁻²	1.00 x 10 ⁻²	4.38 x 10 ⁻²
TRH55VL	5.25 x 10 ⁻²	1.07 x 10 ⁻²	5.25 x 10 ⁻²	1.07 x 10 ⁻²	3.78 x 10 ⁻²
TRH55VE	4.08 x 10 ⁻²	8.69 x 10 ⁻³	4.08 x 10 ⁻²	8.69 x 10 ⁻³	3.78 x 10 ⁻²
TRH65VL	4.52 x 10 ⁻²	8.76 x 10 ⁻³	4.52 x 10 ⁻²	8.76 x 10 ⁻³	3.24 x 10 ⁻²
TRH65VE	3.27 x 10 ⁻²	6.77 x 10 ⁻³	3.27 x 10 ⁻²	6.77 x 10 ⁻³	3.24 x 10 ⁻²

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.3 TRS-F

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TRS15FS	2.29×10^{-1}	4.39×10^{-2}	2.29×10^{-1}	4.39×10^{-2}	1.34×10^{-1}
TRS15FN	1.48×10^{-1}	3.11×10^{-2}	1.48×10^{-1}	3.11×10^{-2}	1.34×10^{-1}
TRS20FS	2.00×10^{-1}	3.58×10^{-2}	2.00×10^{-1}	3.58×10^{-2}	9.90×10^{-2}
TRS20FN	1.25×10^{-1}	2.60×10^{-2}	1.25×10^{-1}	2.60×10^{-2}	9.90×10^{-2}
TRS25FS	1.60×10^{-1}	3.07×10^{-2}	1.60×10^{-1}	3.07×10^{-2}	8.62×10^{-2}
TRS25FN	1.04×10^{-1}	2.17×10^{-2}	1.04×10^{-1}	2.17×10^{-2}	8.62×10^{-2}
TRS30FS	1.47×10^{-1}	2.57×10^{-2}	1.47×10^{-1}	2.57×10^{-2}	7.15×10^{-2}
TRS30FN	8.65×10^{-2}	1.82×10^{-2}	8.65×10^{-2}	1.82×10^{-2}	7.15×10^{-2}
TRS35FS	1.26×10^{-1}	2.30×10^{-2}	1.26×10^{-1}	2.30×10^{-2}	5.85×10^{-2}
TRS35FN	7.87×10^{-2}	1.61×10^{-2}	7.87×10^{-2}	1.61×10^{-2}	5.85×10^{-2}
TRS45FN	6.89×10^{-2}	1.39×10^{-2}	6.89×10^{-2}	1.39×10^{-2}	4.38×10^{-2}

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.4 TRS-V

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TRS15VS	2.29×10^{-1}	4.39×10^{-2}	2.29×10^{-1}	4.39×10^{-2}	1.34×10^{-1}
TRS15VN	1.48×10^{-1}	3.11×10^{-2}	1.48×10^{-1}	3.11×10^{-2}	1.34×10^{-1}
TRS15VL	1.26×10^{-1}	2.70×10^{-2}	1.26×10^{-1}	2.70×10^{-2}	1.34×10^{-1}
TRS15VE	1.01×10^{-1}	2.19×10^{-2}	1.01×10^{-1}	2.19×10^{-2}	1.34×10^{-1}
TRS20VS	2.00×10^{-1}	3.58×10^{-2}	2.00×10^{-1}	3.58×10^{-2}	9.90×10^{-2}
TRS20VN	1.25×10^{-1}	2.60×10^{-2}	1.25×10^{-1}	2.60×10^{-2}	9.90×10^{-2}
TRS25VS	1.60×10^{-1}	3.07×10^{-2}	1.60×10^{-1}	3.07×10^{-2}	8.62×10^{-2}
TRS25VN	1.04×10^{-1}	2.17×10^{-2}	1.04×10^{-1}	2.17×10^{-2}	8.62×10^{-2}
TRS30VS	1.47×10^{-1}	2.57×10^{-2}	1.47×10^{-1}	2.57×10^{-2}	7.15×10^{-2}
TRS30VN	8.65×10^{-2}	1.82×10^{-2}	8.65×10^{-2}	1.82×10^{-2}	7.15×10^{-2}
TRS30VL	7.74×10^{-2}	1.64×10^{-2}	7.74×10^{-2}	1.64×10^{-2}	7.15×10^{-2}
TRS30VE	6.12×10^{-2}	1.33×10^{-2}	6.12×10^{-2}	1.33×10^{-2}	7.15×10^{-2}
TRS35VS	1.26×10^{-1}	2.30×10^{-2}	1.26×10^{-1}	2.30×10^{-2}	5.85×10^{-2}
TRS35VN	7.87×10^{-2}	1.61×10^{-2}	7.87×10^{-2}	1.61×10^{-2}	5.85×10^{-2}
TRS35VL	6.99×10^{-2}	1.42×10^{-2}	6.99×10^{-2}	1.42×10^{-2}	5.85×10^{-2}
TRS35VE	5.25×10^{-2}	1.15×10^{-2}	5.25×10^{-2}	1.15×10^{-2}	5.85×10^{-2}
TRS45VN	6.89×10^{-2}	1.39×10^{-2}	6.89×10^{-2}	1.39×10^{-2}	4.38×10^{-2}
TRS45VL	5.80×10^{-2}	1.24×10^{-2}	5.80×10^{-2}	1.24×10^{-2}	4.38×10^{-2}
TRS45VE	4.59×10^{-2}	1.00×10^{-2}	4.59×10^{-2}	1.00×10^{-2}	4.38×10^{-2}

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.5 TRC-V

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TRC25VL	8.82×10^{-2}	1.89×10^{-2}	8.82×10^{-2}	1.89×10^{-2}	8.62×10^{-2}
TRC25VE	7.35×10^{-2}	1.60×10^{-2}	7.35×10^{-2}	1.60×10^{-2}	8.62×10^{-2}

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.6 TM-N

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TM07NN	8.88×10^{-1}	6.31×10^{-2}	8.88×10^{-1}	6.31×10^{-2}	2.74×10^{-1}
TM07NL	4.41×10^{-1}	5.16×10^{-2}	4.41×10^{-1}	5.16×10^{-2}	2.74×10^{-1}
TM09NN	4.41×10^{-1}	5.26×10^{-2}	4.41×10^{-1}	5.26×10^{-2}	2.19×10^{-1}
TM09NL	2.76×10^{-1}	4.08×10^{-2}	2.76×10^{-1}	4.08×10^{-2}	2.19×10^{-1}
TM12NN	4.90×10^{-1}	4.32×10^{-2}	4.90×10^{-1}	4.32×10^{-2}	1.64×10^{-1}
TM12NL	2.67×10^{-1}	3.42×10^{-2}	2.67×10^{-1}	3.42×10^{-2}	1.64×10^{-1}
TM15NN	3.60×10^{-1}	3.61×10^{-2}	3.60×10^{-1}	3.61×10^{-2}	1.32×10^{-1}
TM15NL	1.94×10^{-1}	2.76×10^{-2}	1.94×10^{-1}	2.76×10^{-2}	1.32×10^{-1}

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

Table1.5.7 TM-W

Model No.	Equivalent Factors Ka (mm ⁻¹)		Equivalent Factors Kb (mm ⁻¹)		Equivalent Factors Kc (mm ⁻¹)
	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	
TM09WN	2.27×10^{-1}	3.01×10^{-2}	2.27×10^{-1}	3.01×10^{-2}	7.92×10^{-2}
TM09WL	1.30×10^{-1}	2.17×10^{-2}	1.30×10^{-1}	2.17×10^{-2}	7.14×10^{-2}
TM12WN	1.85×10^{-1}	2.28×10^{-2}	1.85×10^{-1}	2.28×10^{-2}	5.20×10^{-2}
TM12WL	1.12×10^{-1}	1.72×10^{-2}	1.12×10^{-1}	1.72×10^{-2}	5.05×10^{-2}
TM15WN	1.56×10^{-1}	2.01×10^{-2}	1.56×10^{-1}	2.01×10^{-2}	3.24×10^{-2}
TM15WL	9.07×10^{-2}	1.47×10^{-2}	9.07×10^{-2}	1.47×10^{-2}	3.07×10^{-2}

Ka : Equivalent moment factor in the pitching direction.

Kb : Equivalent moment factor in the yawing direction.

Kc : Equivalent moment factor in the rolling direction.

1-5-2 Calculating the Equivalent Load

The Linear Guide can bear loads and moments in four directions, including a radial load (P_R), reverse-radial load (P_L), and lateral load (P_T), simultaneously.

P_R : Radial load

P_L : Reverse-radial load

P_T : Lateral load

M_A : Moment in the pitching direction

M_B : Moment in the yawing direction

M_C : Moment in the rolling direction

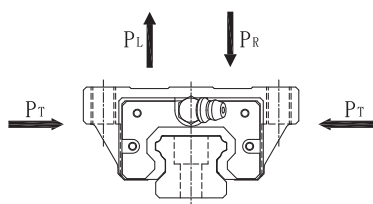


Fig1.5.4 Directions of the Load and Moment Exerted on the Linear Guide

Equivalent load P_E

When more than one load (e.g., radial and lateral loads) is exerted on the Linear Guide simultaneously, the service life and static safety factors should be calculated using equivalent load values obtained by converting all loads involved into radial, lateral, and other loads involved.

Equivalent-load equation

The equivalent-load equations for the Linear Guide differ by guide type. For details, see the relevant sections.

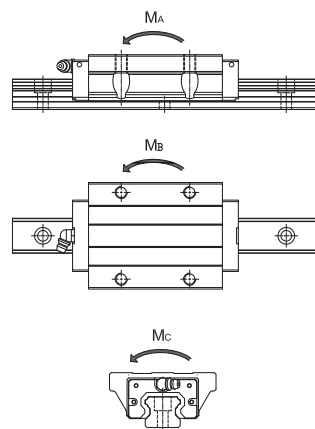


Fig1.5.3

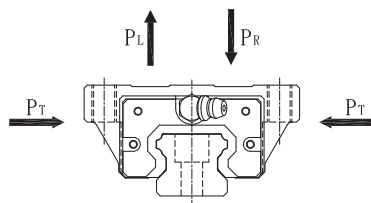


Fig1.5.5 Linear Guide Equivalent load

The equivalent load when a radial load (P_R) and a lateral load (P_T) are applied simultaneously can be obtained using the following equation.

P_E : (equivalent load) = $X \cdot P_{R(L)} + Y \cdot P_T$

P_R : Radial load

P_T : Lateral load

$X \cdot Y=1$

1-6 Calculation of average working load

1-6-1 Calculating the Mean Load

An industrial robot grasps a workpiece using its arm as it advances, moving further under the load. When it returns, the arm has no load other than its tare. In a machine tool, Linear Guide blocks receive varying loads depending on the host-system operating conditions.

The service life of the Linear Guides; therefore, should be calculated in consideration of such fluctuations in load.

The mean load (P_m) is the load under which the service life of the Linear Guide becomes equivalent to that under the varying loads exerted on the Linear Guide blocks

$$P_m = \sqrt[3]{\frac{1}{L} (P_1^3 \cdot L_1 + P_2^3 \cdot L_2 + \dots + P_n^3 \cdot L_n)} \dots \dots \dots (1)$$

(1) For loads that change stepwise

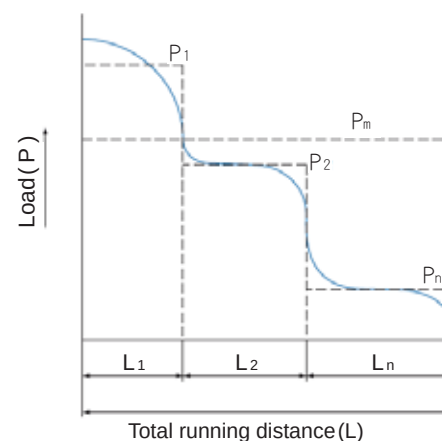


Fig1.6.1

$$P_m = \sqrt[3]{\frac{1}{L} \cdot \sum (P_n^3 \cdot L_n)}$$

P_m : mean load (N)

P_n : varying load (N)

L_c : total running distance (mm)

L_n : running distance under load P_n (mm)

Note : This equation and equation (1) below apply in cases in which the rolling elements are balls.

P_m : mean load (N)

P_n : varying load (N)

L_c : total running distance (mm)

L_n : running distance under load P_n (mm)

Mean Load Calculation Example (II)

(1) Operating conditions-Installations on Rails.

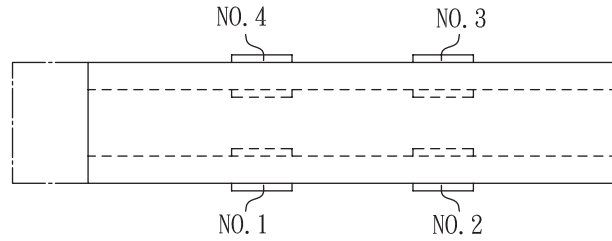


Fig.1.6.8

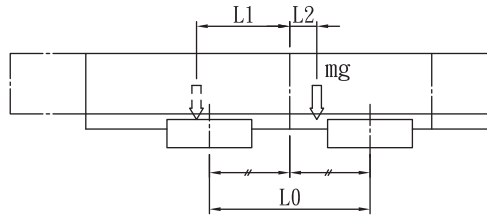


Fig.1.6.9

(2) Load applied to the Linear Guide block

1. At the left of the arm

$$P_{L1} = + \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{L2} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{L3} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{L4} = + \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$$

2. At the right of the arm

$$P_{r1} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{r2} = + \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{r3} = + \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$$

$$P_{r4} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$$

(3) Mean load

$$P_{m1} = \frac{1}{3} (2 \cdot |P_{L1}| + |P_{r1}|)$$

$$P_{m1} = \frac{1}{3} (2 \cdot |P_{L2}| + |P_{r2}|)$$

$$P_{m1} = \frac{1}{3} (2 \cdot |P_{L3}| + |P_{r3}|)$$

$$P_{m1} = \frac{1}{3} (2 \cdot |P_{L4}| + |P_{r4}|)$$

Note: P_{Ln} , P_{rn} represent loads exerted on the Linear Guide block. The suffix "n" indicates the block number in the diagram above.

1-7 Calculation example

1-7-1 Calculation Examples

Example 1

(1) Operating conditions-Horizontal installations subjected to high acceleration and deceleration

Model number : TRH30FE

Basic dynamic-load rating $C = 47\text{kN}$

Basic static-load rating $C_0 = 88.329\text{kN}$

Gravitational acceleration : $g = 9.8 \text{ (m/s}^2\text{)}$

Load : $m_1 = 6000\text{N}$

Load : $m_2 = 3800\text{N}$

Velocity : $V = 0.5 \text{ m/s}$

Time : $t_1 = 0.05\text{s}$

Time : $t_2 = 2.8\text{s}$

Time : $t_3 = 0.15\text{s}$

Acceleration : $\alpha_1 = 10 \text{ m/s}^2$

Acceleration : $\alpha_2 = 3.333 \text{ m/s}^2$

Stroke : $L_s = 1450 \text{ mm}$

Distance : $L_0 = 600 \text{ mm}$

$L_1 = 400 \text{ mm}$

$L_2 = 100 \text{ mm}$

$L_3 = 50 \text{ mm}$

$L_4 = 200 \text{ mm}$

$L_5 = 400 \text{ mm}$

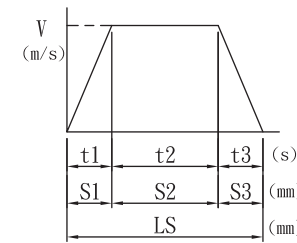


Fig.1.7.1

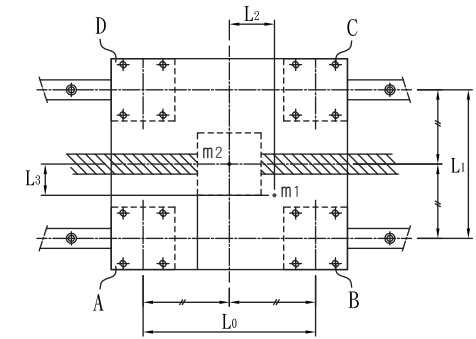


Fig.1.7.2

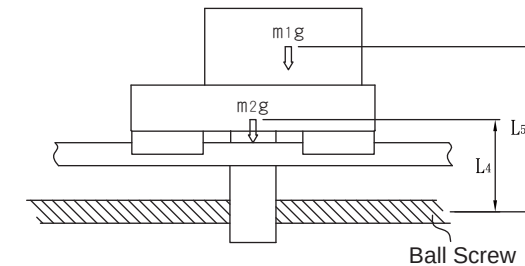


Fig.1.7.3

(2) Load Exerted on the Linear Guide by the Linear Guide Block

Calculate the load that each Linear Guide block exerts.

1. In uniform motion Load applied in radial direction Pn. (Base on the first condition of Load exerted 【please see page14, No.1】 , that's regarding influence of m1g and m2g.

$$P_A = \frac{m_1g}{4} - \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_1g \cdot L_3}{2 \cdot L_1} + \frac{m_2g}{4} = 2325 \text{ N} \quad P_C = \frac{m_1g}{4} + \frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_1g \cdot L_3}{2 \cdot L_1} + \frac{m_2g}{4} = 2575 \text{ N}$$

$$P_B = \frac{m_1g}{4} + \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_1g \cdot L_3}{2 \cdot L_1} + \frac{m_2g}{4} = 3325 \text{ N} \quad P_D = \frac{m_1g}{4} - \frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_1g \cdot L_3}{2 \cdot L_1} + \frac{m_2g}{4} = 1575 \text{ N}$$

2. During acceleration to the left Load applied in radial direction PnLa and lateral direction

PntLa (Base on the 8th condition of load exerted 【please see page 17. No.8】 . The load should allocate on the central of table, and $\frac{m_1g}{4}$ should be re-placed by Pn).

$$P_{ALa} = P_A - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = -362 \text{ N} \quad P_{CLa} = P_C - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 5262.1 \text{ N}$$

$$P_{BLa} = P_B - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 6012.1 \text{ N} \quad P_{DLa} = P_D - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 1112.1 \text{ N}$$

$$P_{ALa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = -255.1 \text{ N} \quad P_{CLa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = 255.1 \text{ N}$$

$$P_{BLa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = 255.1 \text{ N} \quad P_{DLa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = -255.1 \text{ N}$$

3. During deceleration to the left Load applied in radial direction PnLd

$$P_{ALd} = P_A + \frac{m_1g \cdot \alpha_3 \cdot L_5}{2 \cdot d_0 \cdot g} + \frac{m_2g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 3220.6 \text{ N} \quad P_{CLd} = P_C - \frac{m_1g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 1679.4 \text{ N}$$

$$P_{BLd} = P_B - \frac{m_1g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 2429.4 \text{ N} \quad P_{DLd} = P_D + \frac{m_1g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} + \frac{m_2g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 2470.6 \text{ N}$$

Load applied in lateral direction PntLd

$$P_{ALd} = \frac{m_1g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = 85 \text{ N} \quad P_{CLd} = -\frac{m_1g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = -85 \text{ N}$$

$$P_{BLd} = -\frac{m_1g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = -85 \text{ N} \quad P_{DLd} = \frac{m_1g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = 85 \text{ N}$$

4. During acceleration to the right Load applied in radial direction PnRa

$$P_{ARa} = P_A + \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} + \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 4982.1 \text{ N} \quad P_{CRa} = P_C - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = -112.1 \text{ N}$$

$$P_{BRa} = P_B - \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 637.9 \text{ N} \quad P_{DRa} = P_D + \frac{m_1g \cdot \alpha_1 \cdot L_5}{2 \cdot L_0 \cdot g} + \frac{m_2g \cdot \alpha_1 \cdot L_4}{2 \cdot L_0 \cdot g} = 4262.1 \text{ N}$$

Load applied in lateral direction PntLa

$$P_{ALa} = \frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = 255.1 \text{ N} \quad P_{CLa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = -255.1 \text{ N}$$

$$P_{BLa} = -\frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = -255.1 \text{ N} \quad P_{DLa} = \frac{m_1g \cdot \alpha_1 \cdot L_3}{2 \cdot L_0 \cdot g} = 255.1 \text{ N}$$

5. During deceleration to the right Load applied in radial direction P_{nRd} and Load applied in lateral direction P_{ntRd}

$$P_{ARd} = P_A - \frac{m_1 g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2 g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 1429.4 \text{ N}$$

$$P_{BRd} = P_B + \frac{m_1 g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} + \frac{m_2 g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 4220.6 \text{ N}$$

$$P_{CRd} = P_C + \frac{m_1 g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} + \frac{m_2 g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 3470.6 \text{ N}$$

$$P_{DRd} = P_D - \frac{m_1 g \cdot \alpha_3 \cdot L_5}{2 \cdot L_0 \cdot g} - \frac{m_2 g \cdot \alpha_3 \cdot L_4}{2 \cdot L_0 \cdot g} = 679.4 \text{ N}$$

Load applied in lateral direction P_{ntRd}

$$P_{AtRd} = - \frac{m_1 g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = -85 \text{ N}$$

$$P_{CtRd} = \frac{m_1 g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = 85 \text{ N}$$

$$P_{BtRd} = \frac{m_1 g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = 85 \text{ N}$$

$$P_{DtRd} = - \frac{m_1 g \cdot \alpha_3 \cdot L_3}{2 \cdot L_0 \cdot g} = -85 \text{ N}$$

(3) Combined radial and thrus load P_{En}

1. In uniform motion P_{En}

$$P_{EA} = P_A = 2325 \text{ N}$$

$$P_{EC} = P_C = 2575 \text{ N}$$

$$P_{EB} = P_B = 3325 \text{ N}$$

$$P_{ED} = P_D = 1575 \text{ N}$$

2. During acceleration to the left P_{EnLa} P_{EnLa}

$$P_{EALa} = |P_{ALa}| + |P_{AtLa}| = 617 \text{ N}$$

$$P_{EBLa} = |P_{BLa}| + |P_{BtLa}| = 6267.1 \text{ N}$$

$$P_{ECLa} = |P_{CLa}| + |P_{CtLa}| = 5517.1 \text{ N}$$

$$P_{EDLa} = |P_{DLa}| + |P_{DtLa}| = 1367.1 \text{ N}$$

3. During deceleration to the left P_{EnLa}

$$P_{EALd} = |P_{ALd}| + |P_{AtLd}| = 3305.6 \text{ N}$$

$$P_{EBLd} = |P_{BLd}| + |P_{BtLd}| = 2514.4 \text{ N}$$

$$P_{ECLd} = |P_{CLd}| + |P_{CtLd}| = 1764.1 \text{ N}$$

$$P_{EDLd} = |P_{DLd}| + |P_{DtLd}| = 2555.6 \text{ N}$$

4. During acceleration to the right P_{EnRa}

$$P_{EARa} = |P_{ARa}| + |P_{AtRa}| = 5237.2 \text{ N}$$

$$P_{EBRa} = |P_{BRa}| + |P_{BtRa}| = 893 \text{ N}$$

$$P_{ECRa} = |P_{CRa}| + |P_{CtRa}| = 367.2 \text{ N}$$

$$P_{EDRa} = |P_{DRa}| + |P_{DtRa}| = 4517.2 \text{ N}$$

5. During deceleration to the right P_{EnLa}

$$P_{EARd} = |P_{ARd}| + |P_{AtRd}| = 1514.4 \text{ N}$$

$$P_{EBRd} = |P_{BRd}| + |P_{BtRd}| = 4305.6 \text{ N}$$

$$P_{ECRd} = |P_{CRd}| + |P_{CtRd}| = 3555.6 \text{ N}$$

$$P_{EDRd} = |P_{DRd}| + |P_{DtRd}| = 764.4 \text{ N}$$

(4) Static Safety Factor

As shown above, it is during acceleration of the B Linear Guide to the left when the maximum load is exerted on the Linear Guide. Therefore, the static safety factor (f_s) becomes as follows :

$$f_s = \frac{C_0}{6267.1} = \frac{88329}{6267.1} = 14.9$$

(5) Mean Load P_{mn}

Unbalanced load at each Linear Guide block will cause during acceleration Uniform motion, and deceleration mean load (P_{mn}) is a requirement to find out nominal life. First, calculate the move distances (S_1 , S_2 , S_3) during acceleration, uniform motion, and deceleration of Linear.

$$S_1 = \frac{1}{2} t_1 V = \frac{1}{2} (0.05)(0.5)m = 0.0125m = 12.5mm \quad S_3 = \frac{1}{2} t_3 V = (0.15)(0.5)m = 0.0375m = 37.5mm$$

$$S_2 = t_2 V = (2.8)(0.5)m = 1.4m = 1400mm \quad \text{Nominal Life } L_s = S_1 + S_2 + S_3 = 1450mm$$

The mean load on each LM block is as follows :

$$P_{m_A} = \sqrt[3]{\frac{1}{2 \cdot L_s} (P_{EA}^3/a \cdot S_1 + P_{EA}^3 \cdot S_2 + P_{EA}^3/d \cdot S_3 + P_{EA}^3 R_a \cdot S_1 + P_{EA}^3 \cdot S_2 + P_{EA}^3 R_d \cdot S_3)} = 2367.3N$$

$$P_{m_B} = \sqrt[3]{\frac{1}{2 \cdot L_s} (P_{EB}^3/a \cdot S_1 + P_{EB}^3 \cdot S_2 + P_{EB}^3/d \cdot S_3 + P_{EB}^3 R_a \cdot S_1 + P_{EB}^3 \cdot S_2 + P_{EB}^3 R_d \cdot S_3)} = 3355.9N$$

$$P_{m_C} = \sqrt[3]{\frac{1}{2 \cdot L_s} (P_{EC}^3/a \cdot S_1 + P_{EC}^3 \cdot S_2 + P_{EC}^3/d \cdot S_3 + P_{EC}^3 R_a \cdot S_1 + P_{EC}^3 \cdot S_2 + P_{EC}^3 R_d \cdot S_3)} = 2614N$$

$$P_{m_D} = \sqrt[3]{\frac{1}{2 \cdot L_s} (P_{ED}^3/a \cdot S_1 + P_{ED}^3 \cdot S_2 + P_{ED}^3/d \cdot S_3 + P_{ED}^3 R_a \cdot S_1 + P_{ED}^3 \cdot S_2 + P_{ED}^3 R_d \cdot S_3)} = 1638.9N$$

(6) Nominal life L_n (Assume $F_w = 1.5$)

$$(L_A = \frac{C}{f_w \cdot P_{m_A}})^3 \cdot 50 = 115939 \text{ km} \quad (L_C = \frac{C}{f_w \cdot P_{m_C}})^3 \cdot 50 = 86113.86 \text{ km}$$

$$(L_B = \frac{C}{f_w \cdot P_{m_B}})^3 \cdot 50 = 40697 \text{ km} \quad (L_D = \frac{C}{f_w \cdot P_{m_D}})^3 \cdot 50 = 349407.7 \text{ km}$$

※From these calculations, 40697 km (the running distance of Linear Guide No.B) is obtained as the service life of the Linear Guide used in a machine or system under the operating conditions specified above.※

In the example above, we assume that we have two loads (W_1 and W_2). If there is only one load W_1 , W_2 should be re-calculated by being set as zero. The appropriate formula determined by condition of loading.

Example(2)

(1) Operation Conditions-Vertical Installations

Fig. Table (L type) has combined blocks weigh w_1 and w_2 . Furthermore, the mass w_0 is applied during uniform ascent by Distance 1000mm. After the mass is dropped, empty table is removed during uniform descent. The table has total four Linear Guide blocks.

Model number: TRH30FE

(dynamic-load rating : $C = 47 \text{ KN}$)

(static-load rating : $C_0 = 88.329 \text{ KN}$)

Gravitational Acceleration : $g = 9.8 \text{ (m/s}^2\text{)}$

Mass : $m_0g = 2000\text{N}$

Weight of Table1 : $m_1g = 4000\text{N}$

Weight of Table1 : $m_2g = 2000\text{N}$

$L_0 = 300 \text{ mm}$

$L_1 = 80 \text{ mm}$

$L_2 = 50 \text{ mm}$

$L_3 = 280 \text{ mm}$

$L_4 = 150 \text{ mm}$

$L_5 = 250 \text{ mm}$

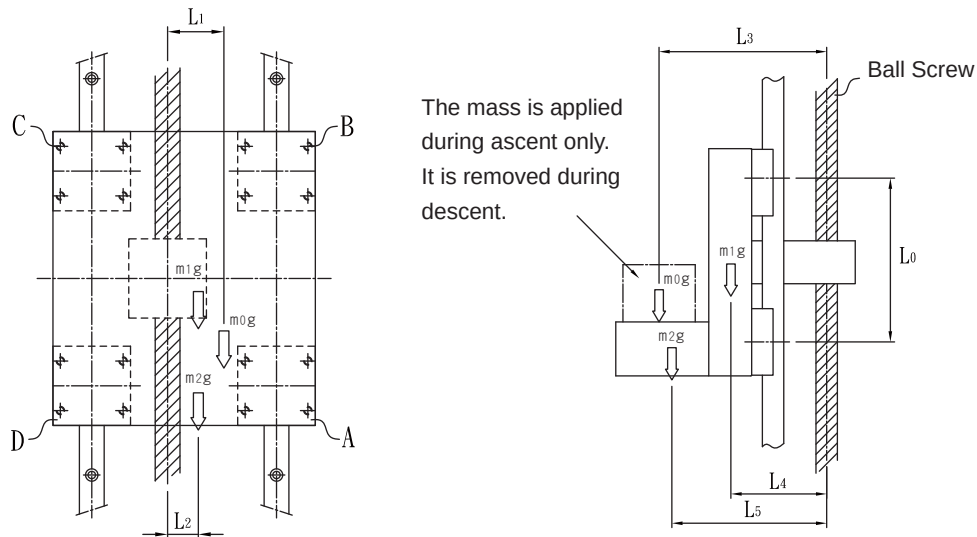


Fig1.7.4 Operating Condition

(2) Load Exerted on the Linear Guide by the Linear Guide Block

Base on the third condition of Linear Guide is regarding vertical motion to figure out load exerted. [please see page 15. No.3] . Combined influence by m_0g , m_1g , m_2g .

1. Load exerted on the Linear Guide in radial direction P_{nU} by the Linear Guide block.

$$P_{AU} = \frac{m_1g \cdot L_4}{2 \cdot L_0} + \frac{m_2g \cdot L_5}{2 \cdot L} + \frac{m_0g \cdot L_3}{2 \cdot L_0} = 2767\text{N} \quad P_{CU} = \frac{m_1g \cdot L_4}{2 \cdot L_0} - \frac{m_2g \cdot L_5}{2 \cdot L} - \frac{m_0g \cdot L_3}{2 \cdot L_0} = -2767\text{N}$$

$$P_{BU} = -\frac{m_1g \cdot L_4}{2 \cdot L_0} - \frac{m_2g \cdot L_5}{2 \cdot L} - \frac{m_0g \cdot L_3}{2 \cdot L_0} = -2767\text{N} \quad P_{DU} = \frac{m_1g \cdot L_4}{2 \cdot L_0} + \frac{m_2g \cdot L_5}{2 \cdot L} + \frac{m_0g \cdot L_3}{2 \cdot L_0} = 2767\text{N}$$

Load exerted on the Linear Guide in lateral direction P_{nTu} by the Linear Guide block.

$$P_{ATu} = \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_2g \cdot L_2}{2 \cdot L} + \frac{m_0g \cdot L_1}{2 \cdot L_0} = 767\text{N} \quad P_{CTu} = -\frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_2g \cdot L_2}{2 \cdot L} - \frac{m_0g \cdot L_1}{2 \cdot L_0} = -767\text{N}$$

$$P_{BTu} = -\frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_2g \cdot L_2}{2 \cdot L} - \frac{m_0g \cdot L_1}{2 \cdot L_0} = -767\text{N} \quad P_{DTu} = \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_2g \cdot L_2}{2 \cdot L} + \frac{m_0g \cdot L_1}{2 \cdot L_0} = 767\text{N}$$

2. Load exerted on the Linear Guide in radial direction P_{nD} by the Linear Guide block.

$$P_{AD} = \frac{m_1g \cdot L_4}{2 \cdot L_0} + \frac{m_2g \cdot L_5}{2 \cdot L} = 1833.3\text{N} \quad P_{CD} = -\frac{m_1g \cdot L_4}{2 \cdot L_0} - \frac{m_2g \cdot L_5}{2 \cdot L} = -1833.3\text{N}$$

$$P_{BD} = -\frac{m_1g \cdot L_4}{2 \cdot L_0} - \frac{m_2g \cdot L_5}{2 \cdot L} = -1833.3\text{N} \quad P_{DD} = \frac{m_1g \cdot L_4}{2 \cdot L_0} + \frac{m_2g \cdot L_5}{2 \cdot L} = 1833.3\text{N}$$

Load exerted on the Linear Guide in lateral direction P_{nTD} by the Linear Guide block

$$P_{ATD} = \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_2g \cdot L_2}{2 \cdot L} + \frac{m_0g \cdot L_1}{2 \cdot L_0} = 500\text{N} \quad P_{CTD} = -\frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_2g \cdot L_2}{2 \cdot L} - \frac{m_0g \cdot L_1}{2 \cdot L_0} = -500\text{N}$$

$$P_{BTD} = -\frac{m_1g \cdot L_2}{2 \cdot L_0} - \frac{m_2g \cdot L_2}{2 \cdot L} - \frac{m_0g \cdot L_1}{2 \cdot L_0} = -500\text{N} \quad P_{DTD} = \frac{m_1g \cdot L_2}{2 \cdot L_0} + \frac{m_2g \cdot L_2}{2 \cdot L} + \frac{m_0g \cdot L_1}{2 \cdot L_0} = 500\text{N}$$

(3) Combined radial and thrust load P_{En}

1. During ascent

$$P_{EAU} = |P_{AD}| + |P_{ATU}| = 3534N$$

$$P_{EBU} = |P_{BD}| + |P_{BTU}| = 3534N$$

$$P_{ECU} = |P_{CD}| + |P_{CTU}| = 3534N$$

$$P_{EDU} = |P_{DD}| + |P_{DTU}| = 3534N$$

2. During descent

$$P_{EAD} = |P_{AD}| + |P_{ATD}| = 2333.3N$$

$$P_{EBD} = |P_{BD}| + |P_{BTD}| = 2333.3N$$

$$P_{ECD} = |P_{CD}| + |P_{CTD}| = 2333.3N$$

$$P_{EDD} = |P_{DD}| + |P_{DTD}| = 2333.3N$$

(4) Static Safety Factor

The static safety factor (f_s) of a machine or system under the operating conditions shown above becomes the following :

$$f_s = \frac{C_0}{3534N} = \frac{88.329}{3534} = 24.99$$

(5) Mean Load P_{mn}

$$P_{m_A} = \sqrt[3]{\frac{1}{2 \ell_S} (P_{EAU}^3 \cdot \ell_S + P_{EAD}^3 \cdot \ell_S)} = 3051.7 \text{ N} \quad P_{m_C} = \sqrt[3]{\frac{1}{2 \ell_S} (P_{ECU}^3 \cdot \ell_S + P_{ECD}^3 \cdot \ell_S)} = 3051.7 \text{ N}$$

$$P_{m_B} = \sqrt[3]{\frac{1}{2 \ell_S} (P_{EBU}^3 \cdot \ell_S + P_{EBD}^3 \cdot \ell_S)} = 3051.7 \text{ N} \quad P_{m_D} = \sqrt[3]{\frac{1}{2 \ell_S} (P_{EDU}^3 \cdot \ell_S + P_{EDD}^3 \cdot \ell_S)} = 3051.7 \text{ N}$$

(6) Nominal life L_n (Assume $f_w=1.2$)

$$L_A = \left(\frac{C}{f_w \cdot P_{mA}} \right)^3 \cdot 50 \text{ km} = 105704.7 \text{ km} \quad L_C = \left(\frac{C}{f_w \cdot P_{mC}} \right)^3 \cdot 50 \text{ km} = 105704.7 \text{ km}$$

$$L_B = \left(\frac{C}{f_w \cdot P_{mB}} \right)^3 \cdot 50 \text{ km} = 105704.7 \text{ km} \quad L_D = \left(\frac{C}{f_w \cdot P_{mD}} \right)^3 \cdot 50 \text{ km} = 105704.7 \text{ km}$$

1-8 Installation of Linear Guide

1-8-1 Datum representation

Jointed rail should be installed by following the arrow sign and ordinal number which is marked on the surface of each rail (see Fig1.8.1) :

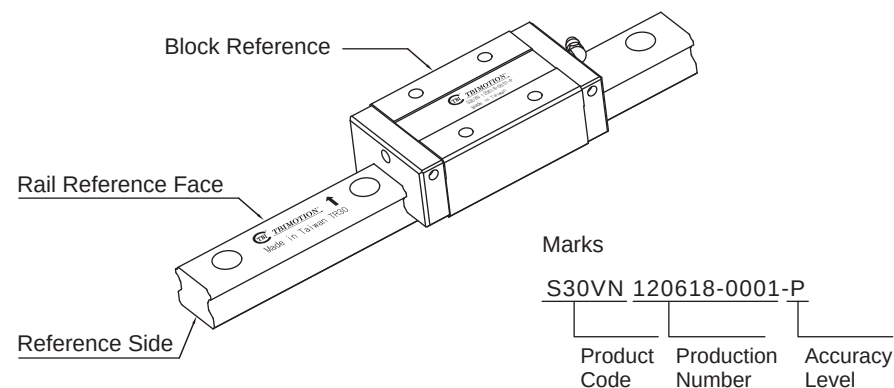


Fig1.8.1 Datum representation

1-8-2 Recognizing of Master Rail

Linear rails to be applied on the same plane are all marked with the same serial number, and "M" is marked at the end of serial number for indicating the master rail, shown as the figure below. The reference side of carriage is the surface where is ground to a specified accuracy. For normal grade (N), it has no mark "M" on rail which means any one of rails with same serial number could be the master rail.

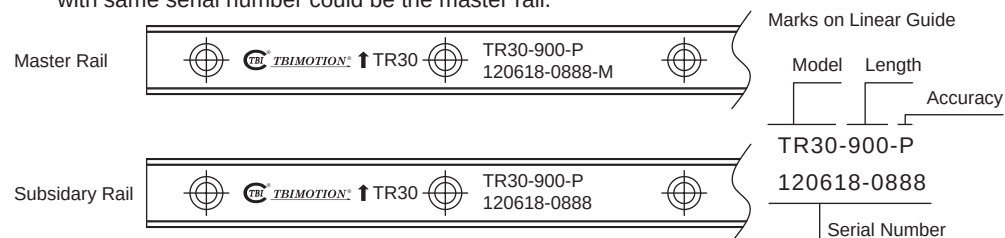


Fig1.8.2 Recognizing of Master Rail

Combined Use of Rail and Carriage

For combined use, the rail and carriage must have the same serial number. When reinstalling the carriage back to the rail, make sure they have the same serial number and the reference side of carriage should be in accordance with that of rail.

1-8-3 For Butt-joint Rail

Accuracy may deviate at joints when carriages pass the joint simultaneously. Therefore, the joints should be interlaced for avoiding such accuracy problem.

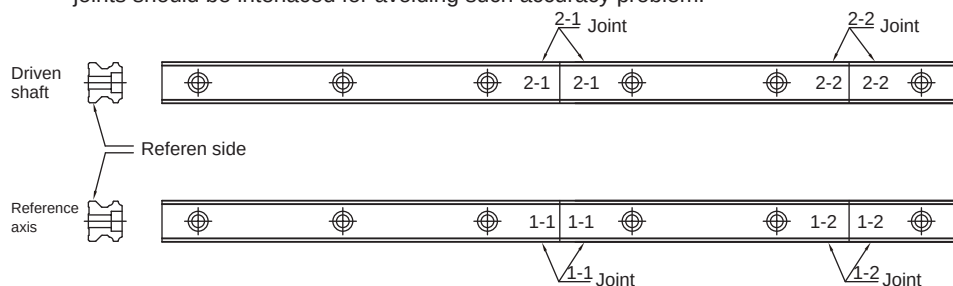


Fig1.8.3 Butt-joint

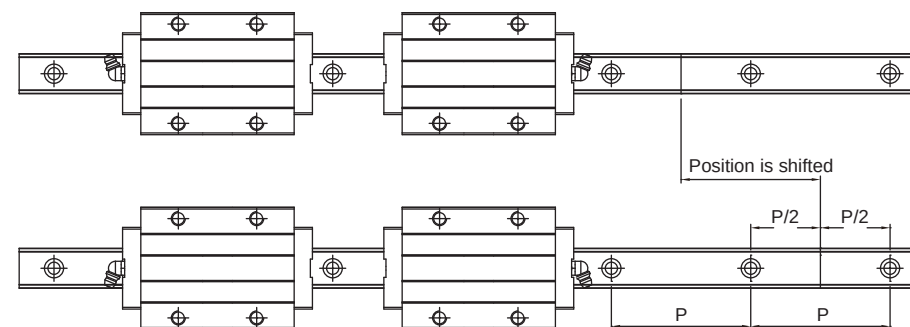


Fig1.8.4







1-8-4 Mounting methods

Linear rail is designed to absorb the load of four dimensions; therefore it can be mounted according to the load and structure of the equipment.

Table 1-8-1








(A)Three-Axis Configuration.	(B)Three-Axis Configuration.

Table 1.8.1

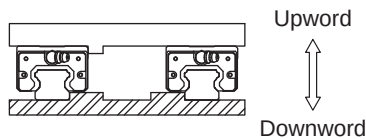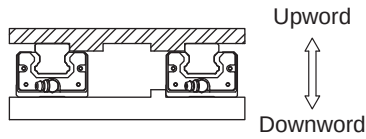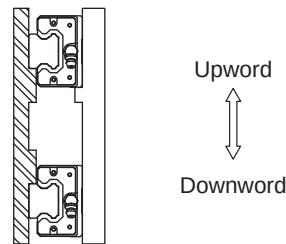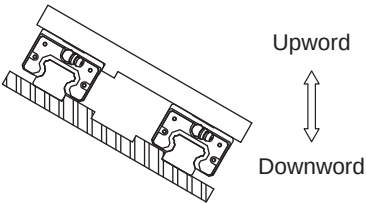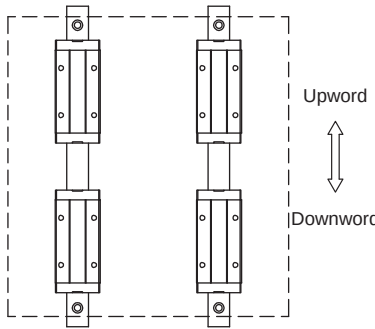Horizontal Configuration.	Two-Axis External Configuration.
	
Upside down Configuration.	Vertical Configuration.
	
Tilted Configuration.	Install on the wall.
	

1-8-5 Common Fastening Method of Linear Guide

Table 1.8.2

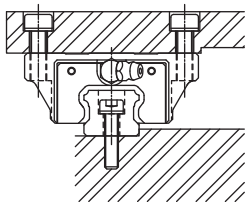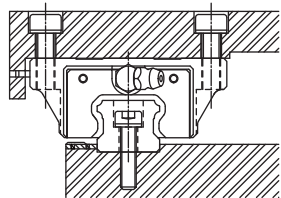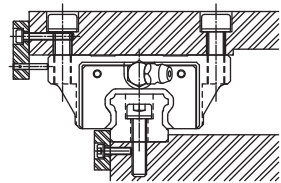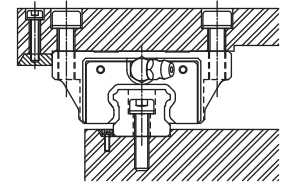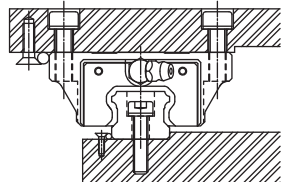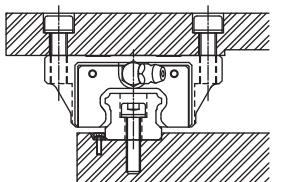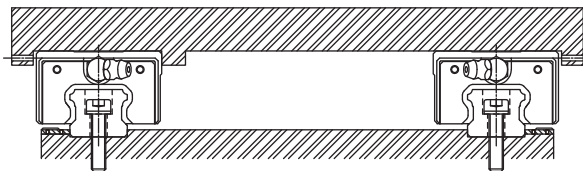Fastened by pressing both Linear Guide blocks and rail against their respective reference surfaces.	Fastened by using push screws.
	
Fastened by using a hold-down plate.	Fastened by using a tapered gib.1
	
Fastened by using screws.	Fastened by using a tapered gib.2
	
A Seeting Where the Host Machine is Subjected to Impact and Vibration.	
	

1-8-6 Mounting the Linear Guide

Mounting Procedures

※※※※※ Sample Installation of the Linear Guide on a Vibration-and-Impact Susceptible

Machine that Requires Rigidity and High Precision. ※※※※※

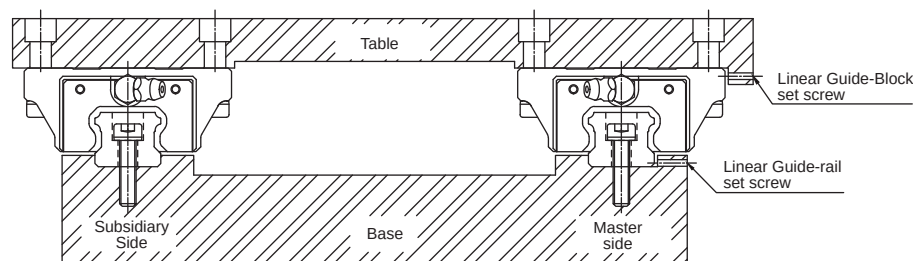


Fig1.8.5 Mounting the Linear Guide on a Machine Susceptible to Vibration and Impact.

Mounting the Linear Guide Rail

(A) Prior to assembly, always remove all burrs, dents, dust, and the like from the mounting surface of the machine on which the Linear Guide is to be installed. (Fig1.8.6)

CAUTION : The Linear Guide is delivered with an anticorrosive oil applied. Prior to assembly, be sure to remove the oil from the reference surface using a wash oil. If the anticorrosive oil is removed, the surface is likely to rust. The application of a low-viscosity spindle oil or the like is therefore recommended.

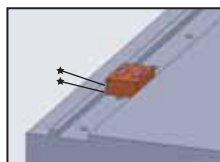


Fig 1.8.6 Checking the Mounting Surface.

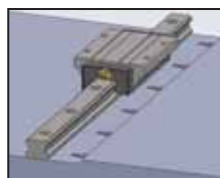


Fig1.8.7 Holding an Linear Guide rail against the Reference Surface

(B) Gently place an Linear Guide rail on the base, and temporarily tighten the bolts so that the rail lightly contacts the mounting surface. Hold the line-marked side of the Linear Guide rail against matching the base-side reference surface (Fig1.8.7)

CAUTION : Use clean bolts to fasten the Linear Guide. When inserting bolts into the Linear Guide rail mounting holes, make sure the threads of the bolt and nut are properly aligned. (Fig1.8.8)

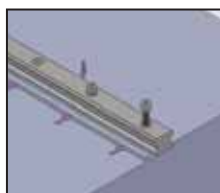


Fig1.8.8 Checking Bolt Play

Table1.8.3 Tightening Torque for Hexagonal-Socket Head Bolts

Unit : N-cm

Model No.	Tightening Torque		
	Iron	Casting	Aluminum
M2	58.2	39.2	29.4
M2.3	78.4	53.9	39.2
M2.6	118	78.4	58.8
M3	196	127	98.0
M4	412	274	206
M5	882	588	441
M6	1370	921	686
M8	3040	2010	1470
M10	6760	4510	3330
M12	11800	7840	5880
M14	15700	10500	7840
M16	19600	13100	9800
M20	38200	25500	19100
M22	51900	34800	26000
M24	65700	44100	32800
M30	130000	87200	65200

(C) Tighten the Linear Guide rail set screws in sequence, until they lightly contact the rail-mounting side surface (Fig1.8.9).

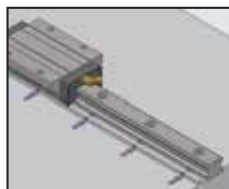


Fig1.8.9 Tightening Set Screws

(D) Using a torque wrench, tightening the mounting bolts to the specified torque (Fig1.8.10).

CAUTION : The sequence for tightening the Linear Guide – rail mounting bolts should start from the center to the end. Following this sequence enables stable accuracy to be achieved.

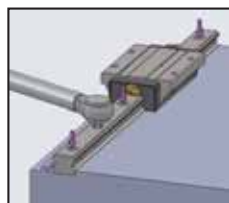


Fig1.8.10 Full Tightening of Mounting Bolts

(E) Following the same procedures for the remaining Linear Guide rails, complete Linear Guide rail installation.

(F) Drive caps into the bolt holes on the Linear Guide rails so that they are flush with the rail top surface.

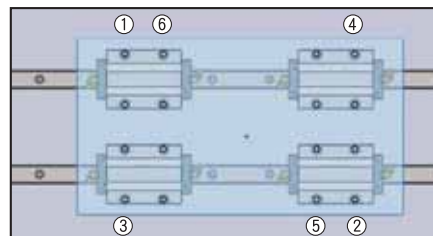


Fig1.8.11

Mounting the Linear Guide Block

(A) Gently place a table on the Linear Guide blocks and temporarily tighten the mounting bolts.

(B) Using set screws, hold the master-rail Linear Guide block against the table reference-side surface, and position the table.

(C) Fully tighten the mounting bolts on both the master and subsidiary sides. This completes Linear Guide block installation.

CAUTION : To ensure uniform fastening of the table, tighten the mounting bolts diagonally, as shown in (Fig1.8.11) in accordance with the numbers.

The method specified above minimizes the time required to ensure the straightness of the Linear Guide-rail. Moreover, there is no need to use the fastening knock pins, thereby greatly reducing the required assembly man-hours.

※※※※※ Sample Installation of the Linear Guide without Set Screws on the Master Linear Guide Rail ※※※※※

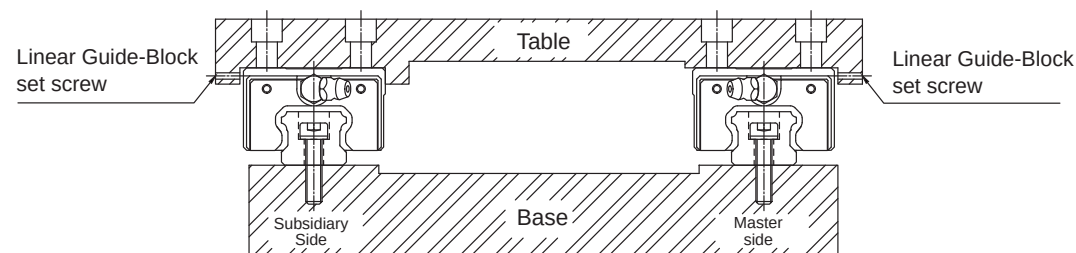


Fig1.8.12 Mounting the Linear Guide without Set Screws on the Master Linear Guide Rail

Mounting the Master Linear Guide Rail

After temporarily tightening the mounting bolts, use a small device or the like to firmly press the rail to the side, against the reference section. Fully tighten the mounting bolts. Repeat this for each mounting bolt in sequence. (Fig1.8.13)



Fig1.8.13 Mounting the master Linear Guide rail

Mounting the Subsidiary Linear Guide Rail

To ensure parallelism of the subsidiary Linear Guide rail with the master Linear Guide rail properly mounted, the following methods are recommended.

Use a Straight Edge

Position a straight edge between the two rails so that it is parallel with the master-Linear Guide-rail-side reference surface, and confirm parallelism using a dial gauge. Using the straight edge as a reference, confirm subsidiary-rail straightness from one end to the other, tightening the mounting bolts in sequence as you go (Fig1.8.14).



Fig1.8.14 Use a straight edge

Move the Table

Fasten two Linear Guide blocks on the master side to the table (or a temporary measurement table). Temporary fasten the subsidiary Linear Guide rail and block to the base and table. From the dial-gauge stand, have a dial gauge contact the subsidiary-rail Linear Guide block side. Move the table from the rail end and check the parallelism between the block and the subsidiary Linear Guide rail, fastening the bolts in sequence as you go. (Fig1.8.15)

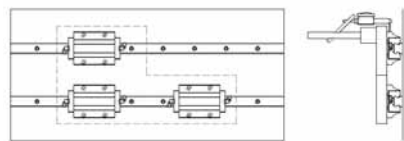


Fig1.8.15 Move the table

Compare to the Master Linear Guide Rail

Make sure the master Linear Guide rail is properly installed. Temporarily fasten the subsidiary Linear Guide rail in place. Place a table on the Linear Guide blocks mounted on the master rail and on the temporarily fastened subsidiary Linear Guide rail. Fully tighten the mounting bolts on the two Linear Guide blocks on the subsidiary rail. With the remaining Linear Guide block on the subsidiary rail temporarily fastened, correct the position of the subsidiary Linear Guide rail, fully tightening its mounting bolts in sequence as you go. (Fig1.8.16)

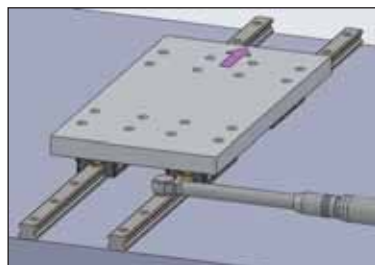


Fig1.8.16 Compare to the master Linear Guide rail

Method Using a Jig

Using a jig as shown in (Fig1.8.17) confirm parallelism between the master-rail-side reference surface and that of the subsidiary rail at each mounting hole, and fully tighten the mounting bolt there.

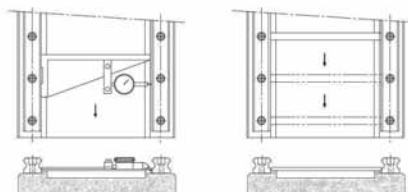


Fig1.8.17

※※※※※ Sample Installation of the Linear Guide without a Reference Section for the Master Linear Guide Rail ※※※※※

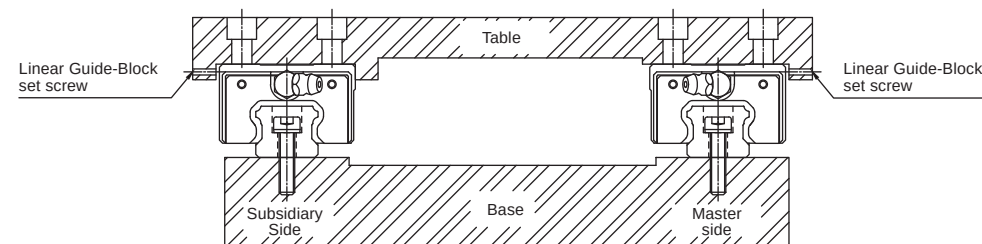


Fig1.8.18 Installation of the Linear Guide without a Reference Section for the Master Linear Guide Rail

Mounting the Master Linear Guide Rail

Use a temporary reference surface

Linear Guide-rail straightness from end to end can be achieved with the aid of a surface temporarily set as the reference surface near the Linear Guide-rail mounting surface on the base. For this method, however, two Linear Guide blocks must be fastened together, positioned on top of each other, while attached to a measurement plate, as shown in Fig1.8.19.

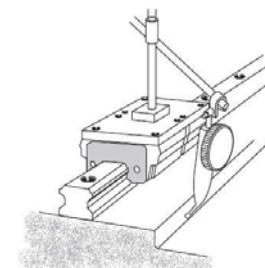


Fig1.8.19 Use a temporary reference surface

Use a straight edge

After temporarily tightening the mounting bolts, use a dial gauge to check the straightness of the Linear Guide-rail-side reference surface from end to end, fully tightening the mounting bolts in sequence as you go, as shown in (Fig1.8.20).

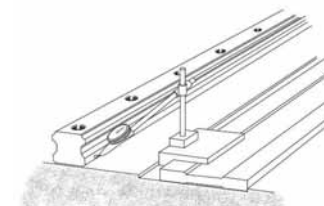


Fig1.8.20 Use a straight edge

To mount the subsidiary Linear Guide rail, follow the procedures specified in the second paragraph on the previous page.

Shoulder Heights and Chamfers

Improper shoulder heights and chamfers of mounting surfaces will cause deviations in accuracy and rail or block interference with the chamfered part. When recommended shoulder heights and chamfers are used, problems with installation accuracy should be eliminated.

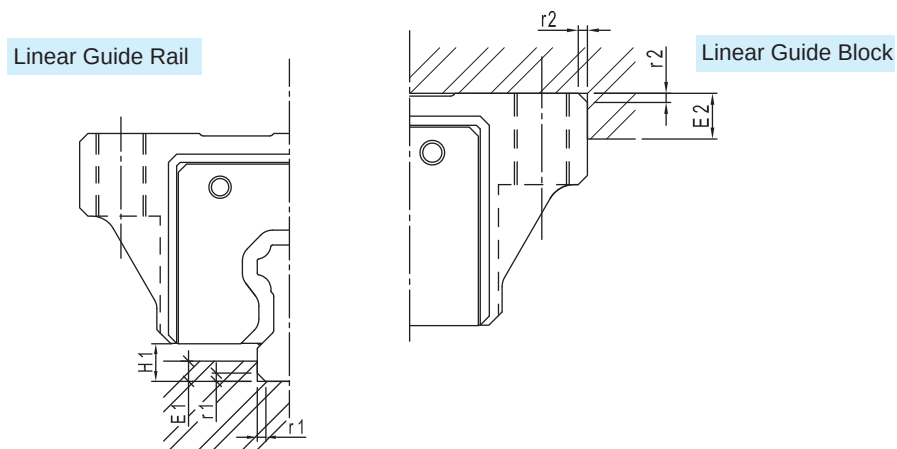


Fig1.8.21

Table 1.8.4 Shoulder Heights and Chamfers

Model No.	Max.chamfers of the rail R1	Max.chamfers of the block R2	Max.chamfers of the rail E1	Max.chamfers of the rail E2	Max.chamfers of the block H1
TR15	0.5	0.5	3	4	3.2
TR20	0.5	0.5	3.5	5	4.6
TR25	1.0	0.9	5	5	5.8
TR30	1.0	1	5	5	7
TR35	1.0	1	6	6	7.5
TR45	1.0	1	8	8	8.9
TR55	1.5	1.5	10	10	13
TR65	1.5	1.5	8	10	14.3

1-9 Friction

The construction of Linear Guide are block, rail and motion system which has rolling elements, such as balls and rollers, placed between two raceways. The rolling motion that rolling elements give rise to reduce the frictional resistance to 1/20 th to 1/40 th of that in a slide guide. Static friction, in particular, is much lower in a linear motion system than in other system, and there is little difference between static and dynamic friction, so that stick-slip does not occur. Therefore, Linear Guide could apply in various precision motion system. Frictional resistance in a linear motion system varies with the type of linear motion system, the magnitude of the preload, the viscosity resistance of the lubricant used the load exerted on the system, and other factors. Table shows Friction of Linear Guide.

Formula of Friction :

$$F = \mu \times W + f$$

F : Friction

W : Load

μ : Friction Coefficient

f : TR Frictional Resistance

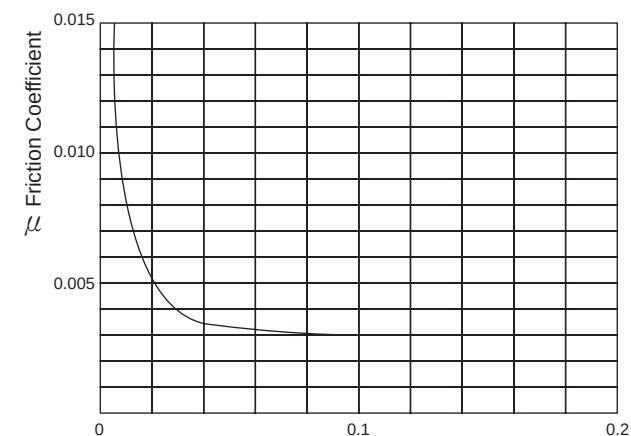


Fig1.9.1

Table 1.9.1 Friction Coefficient μ of Various Linear Motion Systems

Type of Linear Motion System	Friction Coefficient
Linear Guide	0.002~0.003
Ball Spline	0.002~0.003
Linear Guide Roller	0.0050~0.010
Cross Roller Guide	0.0010~0.0025
Linear Ball Slide	0.0006~0.0012

Load ratio(P/C)

P : Load

C : Basic dynamic rating

1-10 Designing of Rigidity

1-10-1 Determining Radial Clearance and the Magnitude of a Preload

Radial Clearance

The radial clearance of the Linear Guide is the displacement of Linear Guide block caused by the vertical plane when the block is lightly pushed forward or backward at the longitudinal center of the Linear Guide rail secured in place.

The radial clearance is divided into Slight Clearance. (ZF), No Preload (ZO), Clearance Z1 (under a light preload), Z2 (under a medium preload) and Z3 (under a heavy preload).The most appropriate clearance can be selected in accordance with the intended applications. The radial clearances and preload values are standardized for each type of Linear Guide.

The radial clearance of the Linear Guide significantly affects its running precision, load-withstanding performance, and rigidity. It is therefore particularly important to select the correct clearance for your purpose. In generally, a negative clearance has a favorable effect on service life and precision, if the Linear Guide is subjected to significant vibration and impact due to reciprocal motion.

Preload

The preload is an internal load exerted on rolling elements in the Linear Guide block, for the purposes of increasing the block rigidity and reducing clearances. Clearance symbols for the Liner Guide, ZF, ZO, Z1, Z2 and Z3 represent negative clearances resulting from a preload and are expressed in negative values. All Linear Guide models (excluding the separate type) are shipped with their clearances adjusted to user specifications. Therefore, it is not necessary for users to adjust the preload themselves. We will select the clearances best suited to your operating conditions. Please contact **TBI MOTION**.

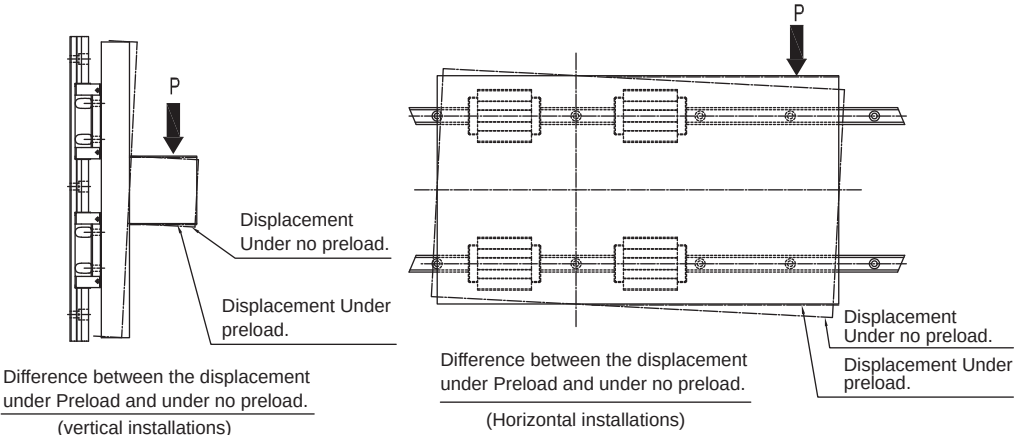


Fig1.10.1 Relationship Between Preload and Displacement

Table1.10.1

	Preload		
	ZF~Z0 Slight Clearance, Zero Preload.	Z1 Zero Clearance, Light Preload.	Z2 Zero Clearance, Medium preload.
Operating conditions	The loading direction is fixed; impact and vibration are slight; two axes are installed in parallel. Very high percision is not required and the sliding resistance must be as low as possible.	The location in under an overhang and a moment load. The Linear Guide is used in a one-axis configuration. The location requires a light load and high precision.	The location requires light rigidity and is subjected to vibration and impact. The application is a heavy-cutting machine tool or the like.
Sample applications	◆Beam-welding machine. ◆Book-binding machine. ◆automatic packing machine. ◆general-industrial-machine. ◆X-and Y-axes. ◆automatic sash-bar finishing machine. ◆welding machine. ◆arc cutter. ◆tool changer. ◆various kinds of maternal feedeer.	◆Grinding-machine table feed shaft. ◆automatic painting machine. ◆industrial robot. ◆various kinds of high-speed material feeder. ◆NC drilling machine. ◆general-industrial-machine. ◆Z-axis. ◆printed-cricuit-board drilling machine. ◆electric discharge machine. ◆measuring instrument. ◆precision XY table.	◆Machining center. ◆NC lathe. ◆grinding-machine grinding -wheel feed shaft. ◆milling machine. ◆vertical-and horizontal-boring machines. ◆tool rest guide. ◆machine-tool Z-axis.

Applied Load and Service Life Considering Preload

When the Linear Guide is used under a preload (medium),the Linear Guide block receives an internal load. Therefore,the service life should be calculated in consideration of thepreload. For preload considerations, please contact us,specifying the model numbers you have selected.

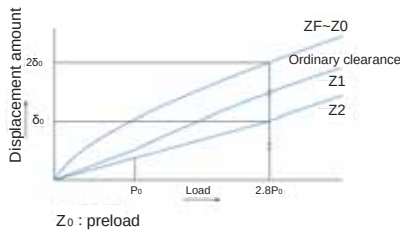


Fig 1.10.2 Rigidity Data

1-10-2 Rigidity

When the Linear Guide receives a load, the balls, Linear Guide blocks, and rails undergo elastic deformation within a permissible range. The ratio of displacement at this deformation to the load received is known as the rigidity value. The rigidity of the Linear Guide increases as the preload increases. Fig shows the differences among the ordinary clearance Z1 and clearance Z2, Z3. As shown, in the case of the four-way equal-load type, the effect of preloading remains valid until the load increases to some 2.8 times the preloadapplied.

$$\delta = \frac{P}{K} \mu m$$

δ : Displacement
 P : Load
 K : Rigidity Value

1-11 Accuracy

1-11-1 Accuracy Standards

The accuracy of Linear Guide is stipulated for each type with regard to dimensional tolerances for running parallelism, height, and width; height difference among Linear Guide blocks installed on the same plane and differences in the rail-to-block lateral distance among Linear Guide blocks installed on the same rail. For details, see the standards tables for the models in question.

Running parallelism

When an Linear Guide block runs on a Linear Guide rail bolted to the reference base, if the Linear Guide block reference surface is not fully parallel to the Linear Guide rail reference surface over the entire length of the rail, the two members have insufficient running parallelism.

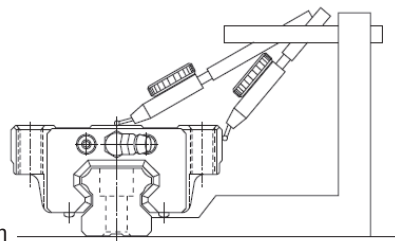


Fig1.11.1 Running parallelism

Difference in height M among Linear Guide blocks

This refers to the difference between the maximum and minimum height (M) of by any Linear Guide block installed on the same plane.

Difference in rail-to-block lateral distance W2 among Linear Guide blocks

This refers to the difference between the maximum and minimum rail-to-block lateral distance (W2) of by any Linear Guide block installed on a Linear Guide rail.

Note.1

With two or more sets of Linear Guide installed in parallel on the same plane, the tolerances for the rail-to-block lateral distance (W2) and the differences therein among Linear Guide blocks apply to the master – rail side only.

Note.2

Accuracy measurements indicate mean values of measurements taken at the center or central area of each Linear Guide block.

Note.3

Linear Guide rails are smoothly curved so that when they are installed on a machine they are easily straightened, and pressing them onto the machine reference base enables the design accuracy to be achieved. If installed on a base lacking rigidity, such as an aluminum base, the bend of LinearGuide rails may affect machine precision. In such a case, the straightness should be set in advance.

1-11-2 Averaging Effect

The Linear Guide incorporates precision balls with high sphericity, enabling a constrained structure to be created with no clearance. Moreover, in a multiple-axis configuration with the axes arranged in parallel to one another, the component Linear Guides therein combine to form an entire constrained guideway.

That is the misalignment of the machine base on which the Linear Guides are installed can be averaged and absorbed by the constrained structure, regardless of the misalignment – incomplete straightness levelness, and parallelism due to errors in machining and assembly of the machine base. The extent of the averaging effect varies with the degree of misalignment, i.e., errors in length and other dimensions the magnitude of the Linear Guide preload, and the number of axes constrained shows measurements of the motion accuracy of the table shown (perpendicularity in the lateral direction), which were taken by performing arbitrary misalignment of either of the two rails of the table. The averaging effect illustrated above makes it easier to create a guideway with a high degree of motion accuracy.

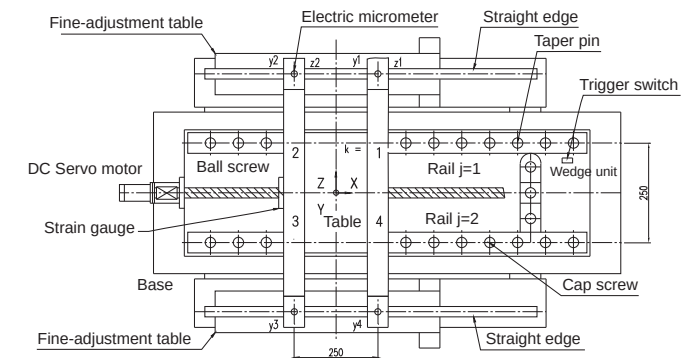


Fig1.11.2

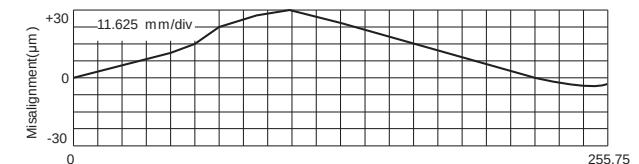


Fig1.11.3 Misalignment profile

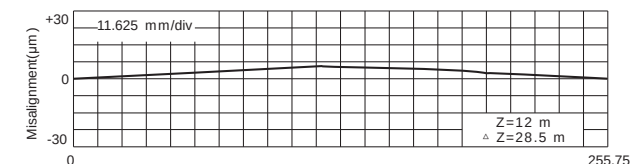


Fig1.11.4 Horizontal displacement of the table

1-12 Lubrication

Lubrication

For long-term use of a linear motion system under normal conditions, good lubrication is a must. If lubricant is not used, rolling parts wear quickly, and the service life of the system is shortened considerably.

A lubricant :

- (1) Reduces friction on moving parts, thereby preventing seizure and lessening wear.
- (2) Forms an oil film on rolling surfaces, thus decreasing stress that develops on the surfaces and safeguarding the system against rolling fatigue.
- (3) Covers metal surfaces with an oil film, thereby preventing rust.

To tap the full functionality of a linear motion system, it is essential to provide lubrication that best meets the system service conditions.

Note: That linear motion systems, even if sealed, cannot completely eliminate leakage of lubricants no matter how negligible the amount of leakage is at any given time. It is therefore necessary to replenish the lubricant periodically according to the operating conditions for the lubricant in question.

Classification of Lubricants

Primarily grease and sliding surface oil are used as lubricants for linear motion systems.

In general a lubricant must:

- | | |
|--------------------------------------|--|
| (1) Form a strong oil film. | (5) Be noncorrosive. |
| (2) Reduce wear as much as possible. | (6) Be highly rust-preventive. |
| (3) Have high wear resistance. | (7) Be free from dust and some moisture. |
| (4) Have high thermal stability. | (8) Be free from significant fluctuations in consistency against repeated agitation of grease. |

Table1.12.1 Lubricants in General Use

Lubricant	Classification	Item
Grease	Lithium-based grease (JS No.2) Urea-base grease (JS No.2)	* 4FB Grease (TBI MOTION) Albania Grease No.2 (Showa Shell Sekiyu) Daphne Eponex Grease No.2 (Idemitsu Kosan) or equivalent.
Oil	Sliding surface oil or turbine oil ISOVG32~68	Super Multi 32 to 68 (Idemitsu Kosan) Vactra No.2S (Mobile Oil) DT Oil (Mobile Oil) Tonner Oil (Showa Shell Sekiyu) or equivalent

※Feeding Should be performed every 100km of travel under normal usage conditions to prevent incomplete lubrication by exhausted lubrication.※

1-13 Precautions of Linear Guideway

Handling

- (1) Tilting the linear guideway may cause the carriage falling out from the rail by their own weight.
- (2) Beating or Dropping the linear guideway may cause its function to be damage, even if the product looks intact.
- (3) Do not disassemble the carriage, this may cause contamination to enter into the carriage or decrease the installation accuracy.

Lubrication

- (1) Please remove the anti-rust oil.
- (2) Please do not mix different kinds of lubrication.
- (3) Lubrication can be varied, please contact **TBI MOTION** before use.

Usage

- (1) The temperature of the place where linear guideways are used should not exceed 80°C.
A higher temperature may damage the plastic end cap, do not exceed 100°C in friction.
- (2) Using under special conditions, such as constant vibration, high dust or the temperature exceed our suggested...etc., please **TBI MOTION** contact .

Storage

When storing the linear guideway, enclose it in a package and store it in a horizontal orientation while avoiding high temperature, low temperature and high humidity.

2-1 The Characteristics of TBI Linear Guide

In an effort to meet customer's requirement, TBI MOTION offers several different types of guides. Except for TR international standard series, TBI MOTION develops TR series with self lubrication system which is designed for environment with high pollution and miniature TM series for small machines and semiconductor industry.

Fig2.1.1 TBI MOTION Linear guide table with all series

Type	Height of Assembly Type	Square	Flange Mounting from Above \ Mounting from Below
TR	High-Assembly	TRH-V	TRH-F
	Low-Assembly	TRS-V	TRS-F
	Middle-Assembly	TRC-V	-
TM	-	TM-N	-
	-	TM-W	-

Fig2.1.2 TBI MOTION Linear Guide - Type & Series

Type	Accessory	Characteristics	End Cap
TR	Standard : Top and Bottom Seal + Wiper	Global Type	Standard type
	U : Inner Seal		
	UZ : Inner Seal+Double end Seals		
	DD : Bottom Seal+Single-lip end seals	Smooth Movement	
	UD : Inner Seal+Single-lip end seals		
	XN : Bottom Seal+Double-lip end seals	Strong dust-proof	Reinforcement Type
	UN : Top Seal+Bottom Seal+Double-lip end seals	Environment with high pollution	
	ZN : Top Seal+Bottom Seal+Two Double-lip end seals		
	WW : Bottom Seal+Wool felt+Double-lip end seals	Self-lubrication/Strong dust-proof	
	WU : Top Seal+Bottom Seal+Wool felt+Double-lip end seals	Application with low rating load	
	WZ : Top Seal+Bottom Seal+Wool felt+Two Double-lip end seals		
TM	-	Standard Miniature type	Miniature type
	-	Wide Miniature type	

2-2 TRH/TRS/TRC International standard linear guide

2-2-1 TBI MOTION The Characteristics of TR Series

Smooth Movement

TBI MOTION The circulation system of TBI Linear Guide Block designed to perform smooth movement.

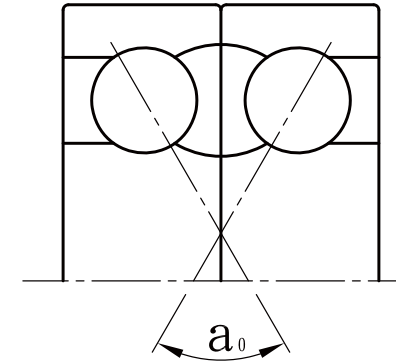


Fig 2.2.1

High Stability

TBI MOTION Linear Guide block designed under TBI's exclusive patent can increase depth of material to improve the strength capacity and prevent from deflection as high stability.

High Durability

TBI MOTION The exclusive contact point design promotes high rigidity. Moreover, self-aligning balances load rating in all directions. This design also improves performance in running accuracy and service life of the Linear Guide.

Easy Installation with Interchangeability

TBI MOTION Linear Guide by TBI is easy for installation even without fixture. The design of seal is combinable either for side seal or inner seal to save material.

2-2-2 The Structure of TR-series

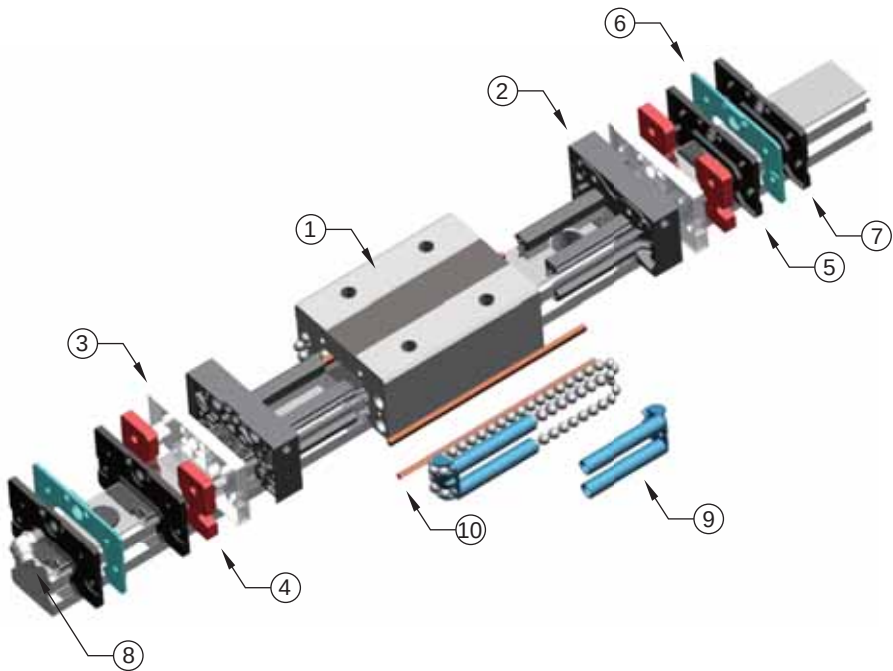


Fig2.2.1

Item	Name	Amount
①	Block	1
②	End Cap	2
③	Oil tank	2
④	Wool felt	4
⑤	End Seal	2
⑥	Spacer	2
⑦	Double end seal	2
⑧	Mounting	1
⑨	Circulation tube	4
⑩	Top+Bottom seal	4

Fig2.2.2

Circulation unit : Block, Rail, End Cap, Steel Balls,
Circulation tube.

Lubrication unit : Grease Fitting.

Anti-Dust Unit : Wiper, Top and Bottom Seal,
Mounting Hole Cap.

2-2-3 TR-series

(Block types)

TBI MOTION offers flange and square types of flange. The assembly height and category lists as below :


Fig2.2.2

Type	Model	Shape	Height	Rail Length	Main Application
Square	TRH-V	Mounting from Above	28	100	- Machine Centers. - NC Lathes. - Food Machine. - Grinding Machines. - CNC Machine. - Heavy Cutting Machines. - Punching Machine. - Injection Molding Machine. - Automation Equipment. - Transportation Equipment. - Sealing machine.
	TRC-V		90	4000	
	TRS-V	Mounting from Above	24	100	
			60	4000	
Flange	TRH-F	Mounting from Above 、 Mounting from Below	24	100	
	TRS-F	Mounting from Above 、 Mounting from Below	24	100	
			90	4000	
			60	4000	

2-2-4 TR Model Number for Non-interchangeable TR Type


TR series can be classified into interchangeable and non-interchangeable types. The sizes are identical; the only difference between the two types is that the accuracy of non-interchangeable types could reach up to UP grade since **TBI MOTION** makes the linear guide set under strict international regulation. Interchangeable blocks and rails can be freely exchanged; however, the accuracy could be up to H grade only due to technical issue. It is much more convenient for those customers who do not need linear guides with very high accuracy to have interchangeable blocks and rails.

Non-interchangeable type code :

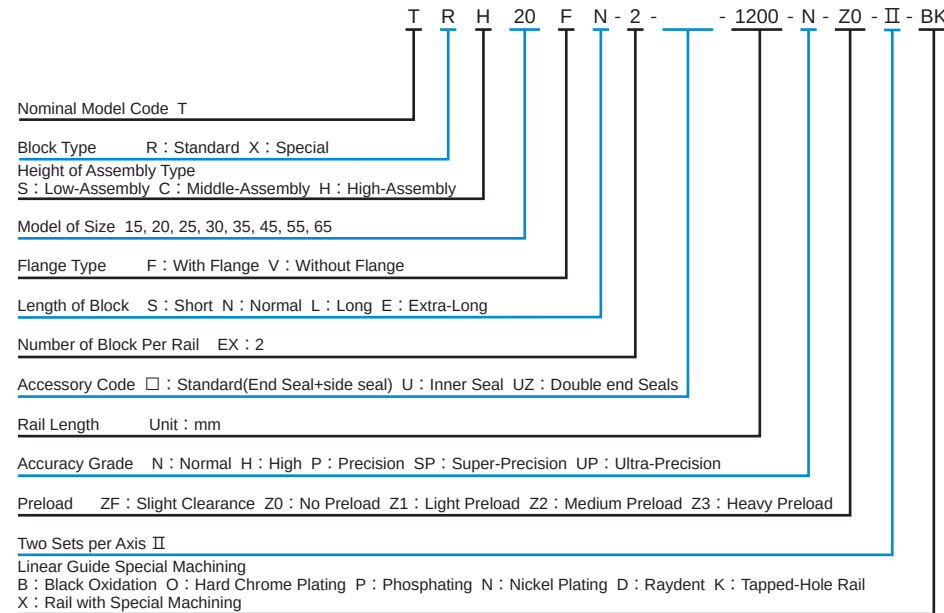


2-2-5 Model Number for Interchangeable TR Type




Interchangeable Type of block :

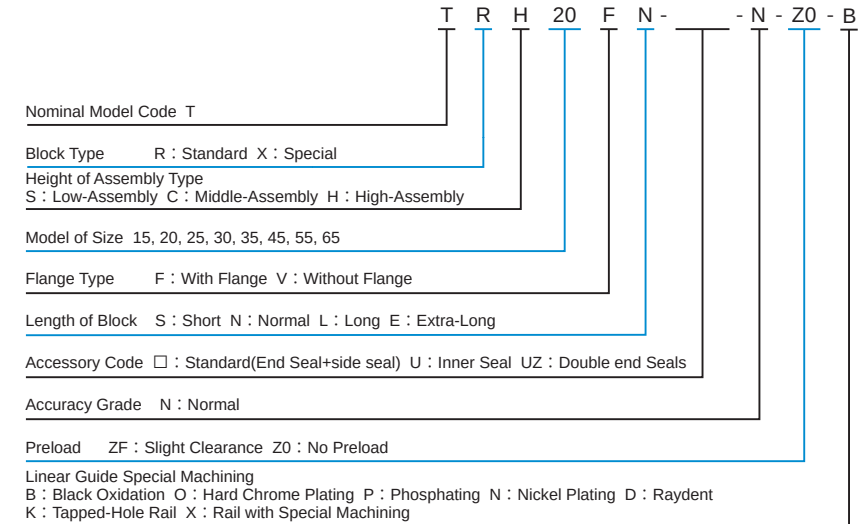

Interchangeable Type of rail :

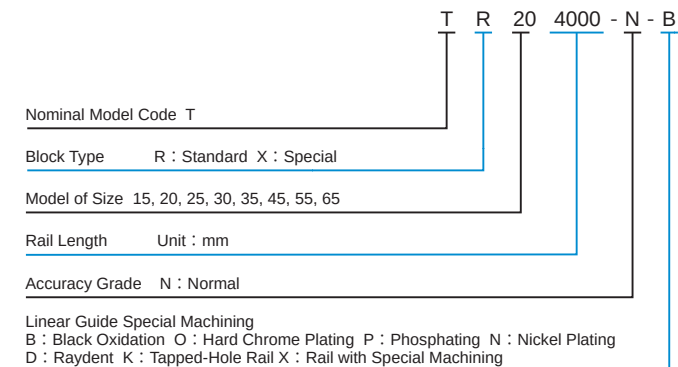



2-2-6 TRH-V Series Dimension Table

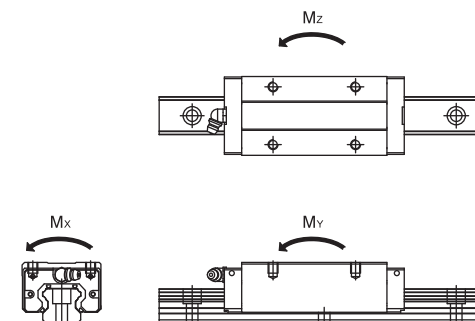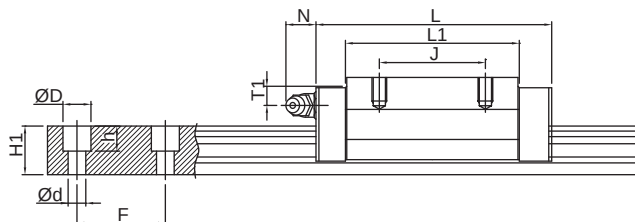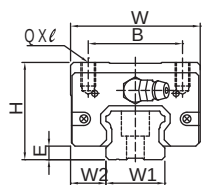

Model No.	Assembly(mm)			Block(mm)								Rail(mm)							
	H	W2	E	W	B	J	L	L1	QXl	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F	
TRH15VN	28	9.5	3.2	34	26	26	55.9	39.5	M4X5	9.5	M4X0.7	7	15	13	7.5	6	4.5	60	
TRH15VL							64.4	48											
TRH20VN	30	12	4.6	44	32	36	74	54	M5X5	6.5	M6X1	14	20	16.5	9.5	8.5	6	60	
TRH20VL							79	59											
TRH20VE							50	98											
TRH25VN	40	12.5	5.8	48	35	35	80	59	M6X8	11.5	M6X1	14	23	20	11	9	7	60	
TRH25VL							92	71											
TRH25VE							50	109											
TRH30VN	45	16	7	60	40	40	95.3	69.3	M8X10	11	M6X1	14	28	23	14	12	9	80	
TRH30VL							106	80											
TRH30VE							60	131											
TRH35VN	55	18	7.5	70	50	50	108	79	M8X10	15	M6X1	14	34	26	14	12	9	80	
TRH35VL							122	93											
TRH35VE							72	152											
TRH45VL	70	20.5	8.9	86	60	60	140	106	M10X15	20.5	PT1/8	12.5	45	32	20	17	14	105	
TRH45VE						80	174	140											
TRH55VL	80	23.5	13	100	75	75	163	118	M12X18	21	PT1/8	12.5	53	44	23	20	16	120	
TRH55VE						95	201.1	156.1											
TRH65VL	90	31.5	14	126	76	70	197	147	M16X20	19	PT1/8	12.5	63	53	26	22	18	150	
TRH65VE						120	256.5	206.5											

Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Single Block	Double Block	Single Block	Double Block	Single Block		
TRH15VN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.13	1.32	
TRH15VL	1343	2574	19,175	20,429	95,224	20,429	95,224	0.2		
TRH20VN	2050	3696	37,334	33,268	157,298	33,268	157,298	0.26	2.28	
TRH20VL	2125	3891	39,299	36,965	176,924	36,965	176,924	0.29		
TRH20VE	2553	5058	51,089	63,229	284,163	63,229	284,163	0.38		
TRH25VN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.54	3.17	
TRH25VL	2875	5254	60,945	59,579	277,678	59,579	277,678	0.55		
TRH25VE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.68		
TRH30VN	3807	6483	90,722	74,970	355,321	74,970	355,321	0.76	4.54	
TRH30VL	4098	7203	100,803	93,100	438,966	93,100	438,966	0.85		
TRH30VE	4791	9004	126,003	147,000	677,068	147,000	677,068	1.12		
TRH35VN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.31	6.27	
TRH35VL	5502	9328	159,512	133,367	656,509	133,367	656,509	1.52		
TRH35VE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	2		
TRH45VL	7572	12808	292,657	220,751	1,030,183	220,751	1,030,183	2.7	10.4	
TRH45VE	8852	16010	365,821	348,554	1,598,703	348,554	1,598,703	3.58		
TRH55VL	14703	21613	571,342	411,729	2,019,184	411,729	2,019,184	3.60	16.1	
TRH55VE	17349	27377	723,699	670,530	3,148,637	670,530	3,148,637	4.70		
TRH65VL	22526	31486	973,074	695,840	3,594,277	695,840	3,594,277	7.76	22.54	
TRH65VE	27895	42731	1,320,601	1,307,568	6,312,759	1,307,568	6,312,759	11.15		



TRH-F Series Dimension Table

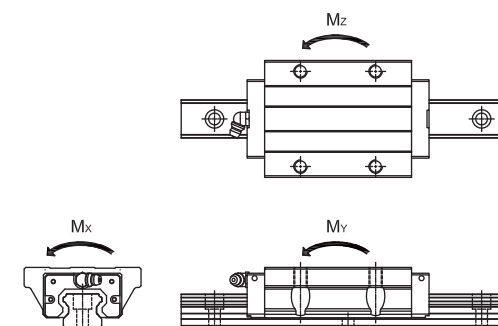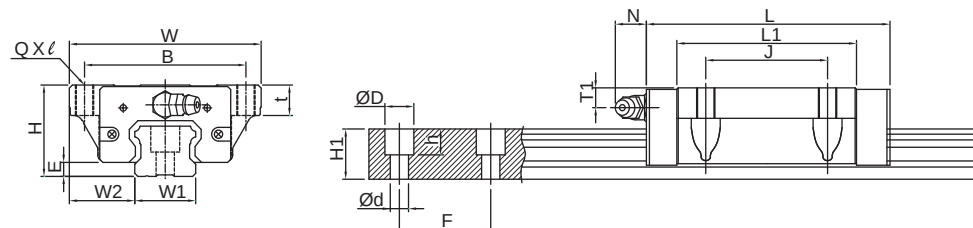

Model No.	Assembly(mm)			Block(mm)											Rail(mm)						
	H	W2	E	W	B	J	t	L	L1	QXℓ	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F		
TRH15FN	24	16	3.2	47	38	30	8	55.9	39.5	M5X8	5.5	M4X0.7	7	15	13	7.5	6	4.5	60		
TRH15FL								64.4	48												
TRH20FN	30	21.5	4.6	63	53	40	10	74	54	M6X10	6.5	M6X1	14	20	16.5	9.5	8.5	6	60		
TRH20FL								79	59												
TRH20FE								98	78												
TRH25FN	36	23.5	5.8	70	57	45	12	80	59	M8X12	7.5	M6X1	14	23	20	11	9	7	60		
TRH25FL								92	71												
TRH25FE								109	88												
TRH30FN	42	31	7	90	72	52	15	95.3	69.3	M10X15	8	M6X1	14	28	23	14	12	9	80		
TRH30FL								106	80												
TRH30FE								131	105												
TRH35FN	48	33	7.5	100	82	62	15	108	79	M10X15	8	M6X1	14	34	26	14	12	9	80		
TRH35FL								122	93												
TRH35FE								152	123												
TRH45FL	60	37.5	8.9	120	100	80	18	140	106	M12X18	10.5	PT1/8	12.5	45	32	20	17	14	105		
TRH45FE								174	140												
TRH55FL	70	43.5	13	140	116	95	29	163	118	M14X17	11	PT1/8	12.5	53	44	23	20	16	120		
TRH55FE								201.1	156.1												
TRH65FL	90	53.5	14	170	142	110	37	197	147	M16X23	19	PT1/8	12.5	63	53	26	22	18	150		
TRH65FE								256.5	206.5												

Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Double Block	Single Block	Double Block	Single Block	Double Block		
TRH15FN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.18	1.32	
TRH15FL	1343	2574	19,175	20,429	95,224	20,429	95,224	0.22		
TRH20FN	2050	3696	37,334	33,268	157,298	33,268	157,298	0.39	2.28	
TRH20FL	2125	3891	39,299	36,965	176,924	36,965	176,924	0.43		
TRH20FE	2553	5058	51,089	63,229	284,163	63,229	284,163	0.58		
TRH25FN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.60	3.17	
TRH25FL	2875	5254	60,945	59,579	277,678	59,579	277,678	0.67		
TRH25FE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.85		
TRH30FN	3807	6483	90,722	74,970	355,321	74,970	355,321	1.01	4.54	
TRH30FL	4098	7203	100,803	93,100	438,966	93,100	438,966	1.18		
TRH30FE	4791	9004	126,003	147,000	677,068	147,000	677,068	1.54		
TRH35FN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.47	6.27	
TRH35FL	5502	9328	159,512	133,367	656,509	133,367	656,509	1.72		
TRH35FE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	2.29		
TRH45FL	7572	12808	292,657	220,751	1,030,183	220,751	1,030,183	2.80	10.4	
TRH45FE	8852	16010	365,821	348,554	1,598,703	348,554	1,598,703	3.79		
TRH55FL	14703	21613	571,342	411,729	2,019,184	411,729	2,019,184	4.22	16.1	
TRH55FE	17349	27377	723,699	670,530	3,148,637	670,530	3,148,637	5.6		
TRH65FL	22526	31486	973,074	695,840	3,594,277	695,840	3,594,277	9.31	22.54	
TRH65FE	27895	42731	1,320,601	1,307,568	6,312,759	1,307,568	6,312,759	12.98		



TRS-V Series Dimension Table

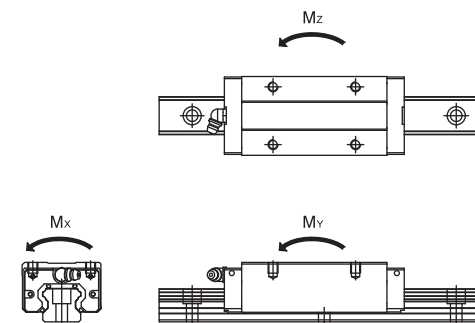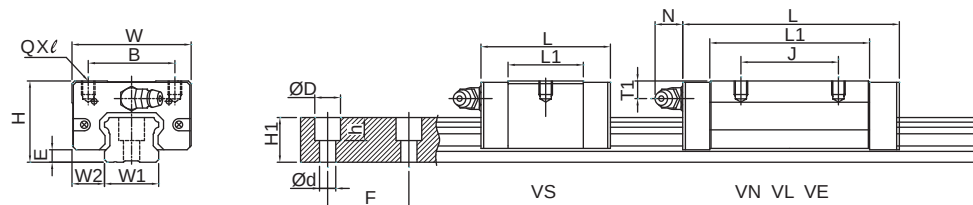

Model No.	Assembly(mm)			Block(mm)								Rail(mm)									
	H	W2	E	W	B	J	L	L1	QXl	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F			
TRS15VS	24	9.5	3.2	34	26	39.3	22.9		M4X5	5.5	M4X0.7	7	15	13	7.5	6	4.5	60			
TRS15VN						26	55.9	39.5													
TRS20VS	28	11	4.6	42	32	47.8	27.8		M5X5	4.5	M6X1	14	20	16.5	9.5	8.5	6	60			
TRS20VN						32	66.7	46.7													
TRS25VS	33	12.5	5.8	48	35	56.2	35.2		M6X6	4.5	M6X1	14	23	20	11	9	7	60			
TRS25VN						35	80	59													
TRS30VS	42	16	7	60	40	66.4	40.4		M8X8	8	M6X1	14	28	23	14	12	9	80			
TRS30VN						40	95.3	69.3													
TRS30VL						40	106	80													
TRS35VS	48	18	7.5	70	50	74.7	45.7		M8X8	8	M6X1	14	34	26	14	12	9	80			
TRS35VN						50	108	79													
TRS35VE						72	152	123													
TRS45VN	60	20.5	8.9	86	60	124.5	90.5		M10X15	10.5	PT1/8	12.5	45	32	20	17	14	105			

Model No.	Rating Load (kgf)		Static permissible moment of load					Weight	
	C	Co	Mx(kgf-mm)	My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Single Block	Double Block	Single Block	Double Block		
TRS15VS	908	1471	10,957	6,420	33,531	6,420	33,531	0.09	1.32
TRS15VN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.15	
TRS20VS	1398	2140	21,615	10,700	59,798	10,700	59,798	0.15	2.28
TRS20VN	1896	3307	33,404	26,459	126,998	26,459	126,998	0.23	
TRS25VS	1943	3002	34,826	18,725	97,890	18,725	97,890	0.25	3.17
TRS25VN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.39	
TRS30VS	2697	3962	55,442	26,950	154,224	26,950	154,224	0.48	4.54
TRS30VN	3807	6483	90,722	74,970	355,321	74,970	355,321	0.77	
TRS30VL	4098	7203	100,803	93,100	438,966	93,100	438,966	0.74	
TRS35VS	3753	5401	92,349	42,896	235,304	42,896	235,304	0.71	6.27
TRS35VN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.15	
TRS35VE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	1.54	
TRS45VN	6758	10887	248,758	158,011	782,271	158,011	782,271	1.98	10.4



TRS-F Series Dimension Table

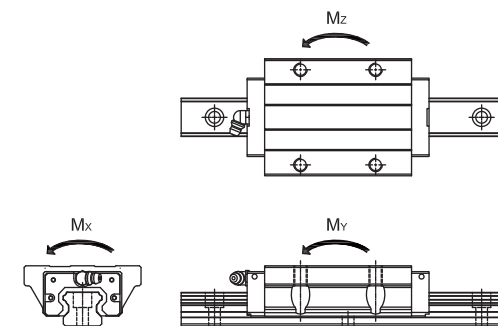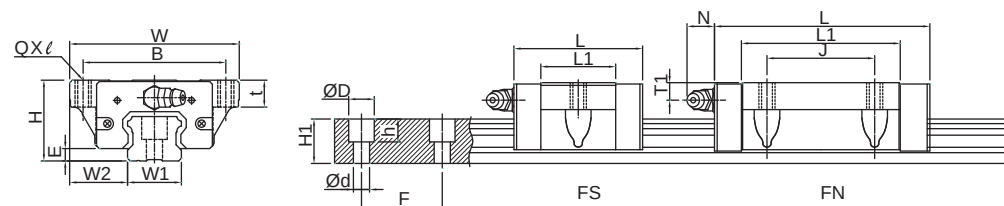

Model No.	Assembly(mm)			Block(mm)										Rail(mm)						
	H	W2	E	W	B	J	t	L	L1	QXℓ	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F	
TRS15FS	24	18.5	3.2	52	41	26	7	39.3	22.9	M5X7	5.5	M4X0.7	7	15	13	7.5	6	4.5	60	
TRS15FN								55.9	39.5											1.32
TRS20FS	28	19.5	4.6	59	49	32	9	47.8	27.8	M6X9	4.5	M6X1	14	20	16.5	9.5	8.5	6	60	
TRS20FN								66.7	46.7											2.28
TRS25FN	33	25	5.8	73	60	35	10	80	59	M8X10	4.5	M6X1	14	23	20	11	9	7	60	

Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Single Block	Double Block	Single Block	Double Block	Single Block		
TRS15FS	908	1471	10,957	6,420	33,531	6,420	33,531	0.12		
TRS15FN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.19		
TRS20FS	1398	2140	21,615	10,700	59,798	10,700	59,798	0.19		
TRS20FN	1896	3307	33,404	26,459	126,998	26,459	126,998	0.29		
TRS25FN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.51		3.17

TRC-V Series Dimension Table

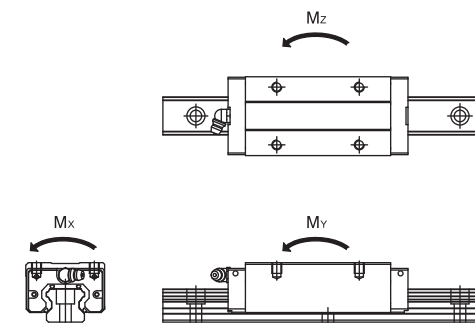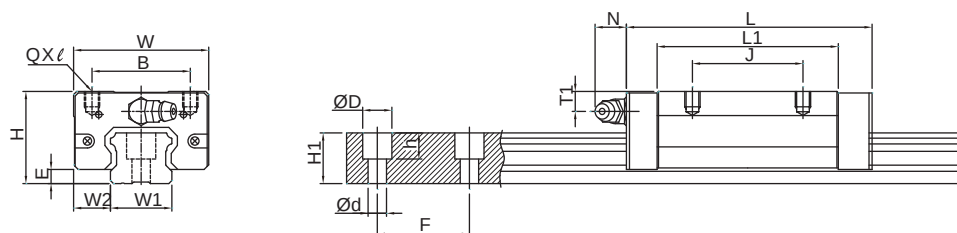

Model No.	Assembly(mm)			Block(mm)										Rail(mm)						
	H	W2	E	W	B	J	L	L1	QXℓ	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F		
TRC25VL	36	12.5	5.8	48	35	50	92	71	M6X6.5	7.5	M6X1	14	23	20	11	9	7	60		
TRC25VE																				3.17

Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Single Block	Double Block	Single Block	Double Block	Single Block		
TRC25VL	2875	5254	60,945	59,579	277,678	59,579	277,678	0.52		
TRC25VE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.65		3.17

2-2-7 The Standard length and maxima length of linear rail

TBI MOTION offer our customer standard and customized rail length to meet the requirement for our customer. TBI suggests that when ordering customized rail length, to prevent unstablize running performance after mounting, the end cap value G should be no greater than 1/2P.

$$L=[n-1] \cdot F+2 \cdot G$$

- L : Total length of rail (mm)
- n : Number of mounting holes
- F : Distance between any two holes (mm)
- G : Distance from the center of the last hole to the edge (mm)

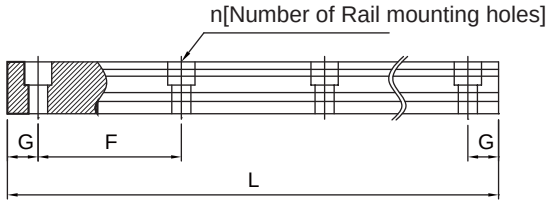


Fig2.2.3

Table2.2.3

Item	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
F : Pitch	60	60	60	80	80	105	120	150
G : Distance to End	20	20	20	20	20	22.5	30	35
L : Max. Length	4000	4000	4000	4000	4000	4000	4000	4000

2-2-8 Type

Besides the standard top mounting type, **TBI MOTION** also offers bottom mounting type rails.

Fig2.2.4

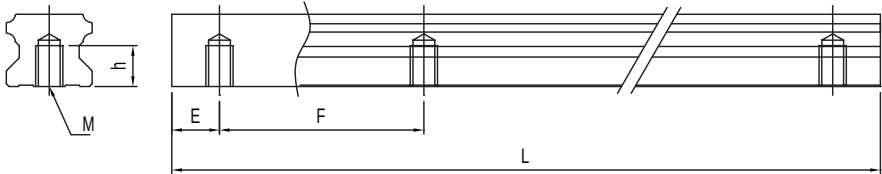
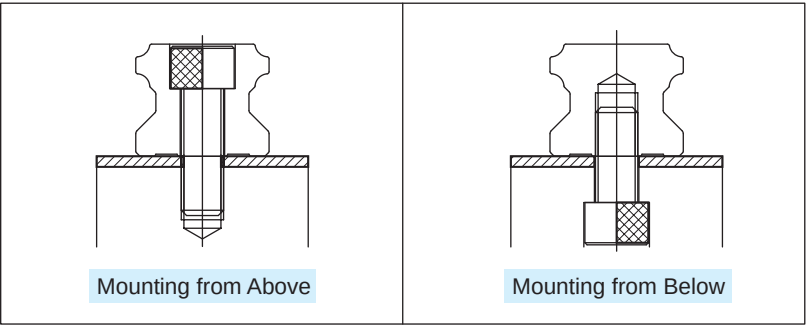


Fig2.2.4 Monting from below

Table2.2.5 Rail Size Chart

Unit : mm

	M	h	E	F
TR15	M5 · 0.8P	8	20	60
TR20	M6 · 1P	10	20	60
TR25	M6 · 1P	12	20	60
TR30	M8 · 1.25P	15	20	80
TR35	M8 · 1.25P	17	20	80
TR45	M12 · 1.75P	24	22.5	105
TR55	M14 · 2P	24	30	120
TR65	M20 · 2.5P	30	35	150

2-2-9 Accuracy Standard

The accuracy standards of TR-Series range, from normal, high, precision, super-precision and ultra-precision. It allows our user to choose according to the accuracy standards of the equipment.


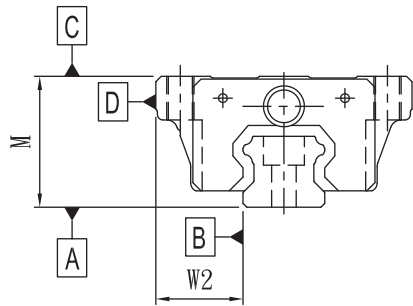


Fig2.10.1 Accuracy Standard

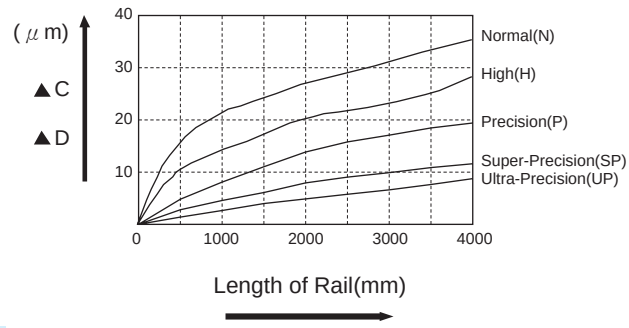

TR Rail Length and Running Accuracy.

Fig2.2.6

Fig2.2.6

Unit : mm

Accuracy Standard										
	TR 15 20					TR 25 30 35				
Accuracy Standard	Normal	High	Precision	Super Precision	Ultra Precision	Normal	High	Precision	Super Precision	Ultra Precision
Item	N	H	P	SP	UP	N	H	P	SP	UP
Tolerance for height M	±0.1	±0.03	0 -0.03	0 -0.015	0 -0.008	±0.1	±0.04	0 -0.04	0 -0.02	0 -0.01
Tolerance for height M difference among Linear Guide Block	0.02	0.01	0.006	0.004	0.003	0.02	0.015	0.007	0.005	0.003
Tolerance for rail-to-block lateral distance W2	±0.1	±0.03	0 -0.03	0 -0.015	0 -0.008	±0.1	±0.04	0 -0.04	0 -0.02	0 -0.01
Tolerance for rail-to-block lateral distance W2 difference among Linear Guide Block	0.02	0.01	0.006	0.004	0.003	0.03	0.015	0.007	0.005	0.003
Running parallelism of Linear Guide Block surface C with respect to surface A	△ C, TR Rail Length and Running Accuracy(Fig2.10.1)					△ C, TR Rail Length and Running Accuracy(Fig2.10.1)				
Running parallelism of Linear Guide Block surface D with respect to surface B	△ D, TR Rail Length and Running Accuracy(Fig2.10.1)					△ D, TR Rail Length and Running Accuracy(Fig2.10.1)				
	TR 45 55					TR 65				
Accuracy Standard	Normal	High	Precision	Super Precision	Ultra Precision	Normal	High	Precision	Super Precision	Ultra Precision
Item	N	H	P	SP	UP	N	H	P	SP	UP
Tolerance for height M	±0.1	±0.05	0 -0.05	0 -0.03	0 -0.02	±0.1	±0.07	0 -0.07	0 -0.05	0 -0.03
Tolerance for height M difference among Linear Guide Block	0.03	0.015	0.007	0.005	0.003	0.03	0.02	0.01	0.007	0.005
Tolerance for rail-to-block lateral distance W2	±0.1	±0.05	0 -0.05	0 -0.03	0 -0.02	±0.1	±0.07	0 -0.07	0 -0.05	0 -0.03
Tolerance for rail-to-block lateral distance W2 difference among Linear Guide Block	0.03	0.02	0.01	0.007	0.005	0.03	0.025	0.015	0.01	0.007
Running parallelism of Linear Guide Block surface C with respect to surface A	△ C, TR Rail Length and Running Accuracy(Fig2.10.1)					△ C, TR Rail Length and Running Accuracy(Fig2.10.1)				
Running parallelism of Linear Guide Block surface D with respect to surface B	△ D, TR Rail Length and Running Accuracy(Fig2.10.1)					△ D, TR Rail Length and Running Accuracy(Fig2.10.1)				

2-2-10 Determining the Magnitude of a Preload

What's Preload

Replacing larger rolling elements helps strengthen the entire rigidity of the carriage while there exists clearance with in ball circulation.

Increasing preload would decrease the vibration and reduce the corrosion caused by running back and forth. However, it would also add the workload within those rolling elements. The greater the preload, the greater the inner workload. Therefore, choosing preload has to consider the effect carefully between vibration and preload.

Table2.2.7 Grade of Preload

C : Dynamic load rating

Grade	Symbol	Preload force
Slight Clearance	ZF	0
No Preload	Z0	0
Light Preload	Z1	0.02C
Medium Preload	Z2	0.05C
Heavy Preload	Z3	0.07C

Table2.2.8 TR Series Radial Clearances

Unit : μm

Preload Model No.	ZF	Z0	Z1	Z2	Z3
TR15	5~12	-4~4	-12~-5	-20~-13	-28~-21
TR20	6~14	-5~5	-14~-6	-23~-15	-32~-24
TR25	7~16	-6~6	-16~-7	-26~-17	-36~-27
TR30	8~18	-7~7	-18~-8	-29~-19	-40~-30
TR35	9~20	-8~8	-20~-9	-32~-21	-44~-33
TR45	10~22	-9~9	-22~-10	-35~-23	-48~-36
TR55	11~24	-10~10	-24~-11	-38~-25	-52~-39
TR65	12~26	-11~11	-26~-12	-41~-27	-56~-42

Table2.2.9 The difference between Interchangeability and Non-Interchangeability

Slight Clearance	Non-Interchangeable					Interchangeable	
	UP	SP	P	H	N	H	N
Preload					Z F		Z F
			Z 0	Z 0	Z 0	Z 0	Z 0
	Z 1	Z 1	Z 1	Z 1	Z 1	Z 1	Z 1
	Z 2	Z 2	Z 2	Z 2	Z 2		
	Z 3	Z 3	Z 3	Z 3			

2-2-11 Grease Nipples

Table2.2.10 Grease Nipples

TR15 M4X0.7P(SD-020) Dust Proof Double Sealed Nipple M4X0.7P(SD-024)	TR45 TR55 TR65 PT1/8(SD-011) Dust Proof Double Sealed Nipple PT1/8(SD-027)
TR20 TR25 TR30 M6X1P(SD-021) Dust Proof Double Sealed Nipple M6X1P(SD-025)	TR35 M6X1P(SD-021) Dust Proof Double Sealed Nipple M6X1P(SD-026)

The standard location of the grease fitting is at both ends of the block, but the nipple can be mounted at each side of block. For lateral installation, we recommend that the nipple be mounted at the non-reference side, otherwise please contact us. It is possible to perform lubrication by using the oil-piping joint.

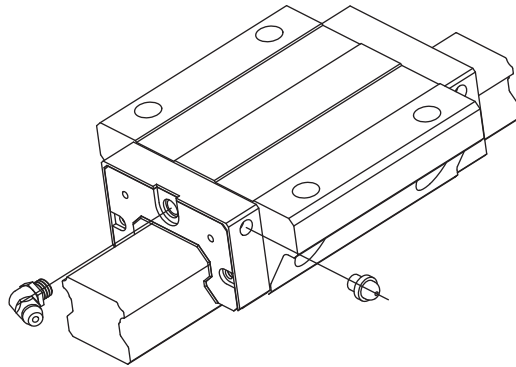


Fig2.2.7 Mounting Location

Table 2.2.11 The lubricant amount for a block filled with grease

Size	Grease(cm ³)
TR15	1.3
TR20	2.5
TR25	2.5
TR30	7
TR35	9
TR45	15.2
TR55	40
TR65	75

Table 2.2.12 Oil refilling rate

Size	Oil refilling rate (cm ² /hr)
TR15	0.2
TR20	0.2
TR25	0.3
TR30	0.3
TR35	0.3
TR45	0.4
TR55	0.5
TR65	0.6

Table 2.2.13 Type of Lubrication Coupler

SD-037 TR15	SD-038 TR35 TR30 TR25 TR20	SD-039 TR65 TR55 TR45
SD-029 TR35 TR30 TR25 TR20	SD-040 TR65 TR55 TR45	SD-041 TR35 TR30 TR25 TR20
SD-042 TR65 TR55 TR45	SD-043 TR35 TR30 TR25 TR20	SD-044 TR65 TR55 TR45

2-2-12 Dust-proof/Linear Guide Self-lubrication Series Accessory

TBI MOTION Linear Guide with Strong Dust-proof End Seal

Characteristics of TBI MOTION Dust-proof End Seal

- 1. Seal Function: Seal design from single-lip to double-lips to prevent more dust go into the block.
- 2. Hardness: Heat treatment for end seals to make hardness higher in order to absorb high impact when operation.
- 3. Environment: Better solution for dust-proof when using double seals in environment with high pollution.
- 4. Lifetime Extension: Double-lip seal prevents dust go into the block and provides a solution for block damage due to dust issue.

TBI MOTION Linear Guide Self-lubrication Series

There is a wool felt accessory between end cap and seals. Wool felt with oil will lubricate the rail when operating; grease nipple is not needed. The design is shown as below.

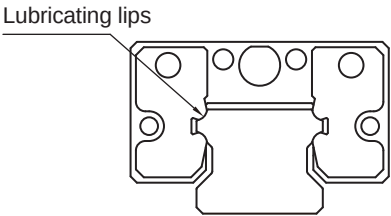


Fig2.2.8

Characteristics:

- 1. Easy Assembly and Removal-- Only screws are needed when assemble and disassemble the accessory.
- 2. Environmentally Friendly-- No need of grease nipple and other equipment to save energy.
- 3. Low Maintenance-- Optimized oil usage prevents leaking, making it the ideal solution for clean working environments. Self-lubricating block is maintenance free in most applications.
- 4. Strong Dust-proof-- With dust-proof accessory, lifetime will be extended.

Table2.2.14 Test

	Control Group	Experiment Group
Test Environment	Standard	Self-lubricating
Dimension	TRH20VL	TRH20VL
Rating Load	1000 kg	1000 kg
Speed	6 m/min	6 m/min
Travel Length	600 mm	600 mm

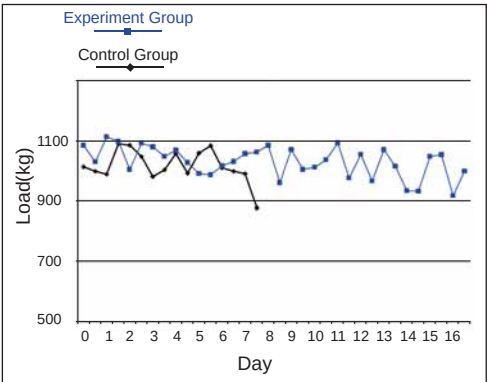


Fig2.2.9

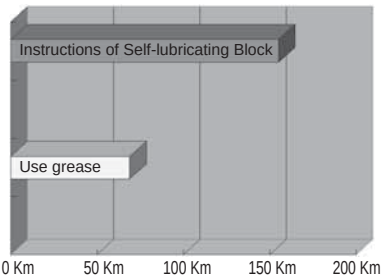


Fig2.2.10

No more grease is added during the test for both standard series and self-lubricating series.

Lifetime Comparison

As shown in the chart, the lifetime of self-lubricating blocks is one time longer than that of standard series blocks.

Instructions of Self-lubricating Block

It is suggested to soak the wool felt in the oil tank for more than 8 hours before using. The wool felt can be refilled with any approved lubrication oil depending on the requirement (ISOVG 32 ~ 68).

Characteristics of Suggested Oil:

- (1) Form a strong oil film.
- (2) Reduce wear as much as possible.
- (3) Have high wear resistance.
- (4) Have high thermal stability.
- (5) Be noncorrosive.
- (6) Be highly rust-preventive.
- (7) Be free from dust and some moisture.

Codes of accessories

If the following accessories are needed, please add the code followed by the model number.
 Special Option : Steel end seal, Steel end cap, Cover Strip ,contact **TBI MOTION**.

Table2.2.15 Codes of accessories

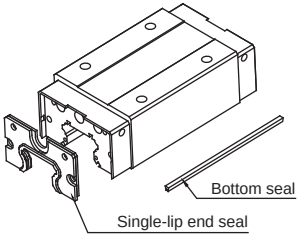
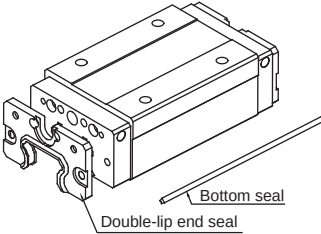
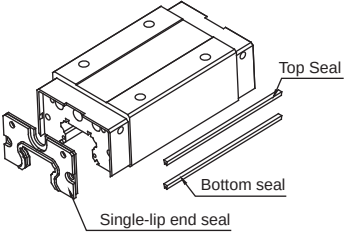
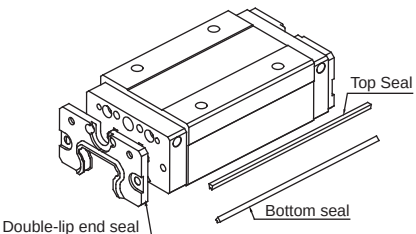
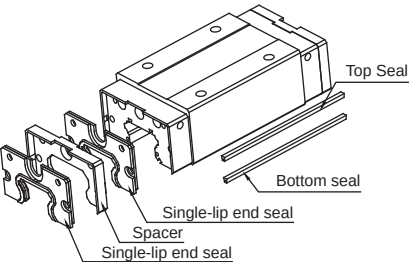
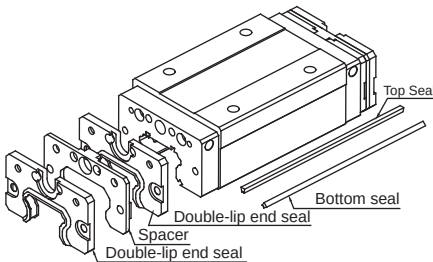
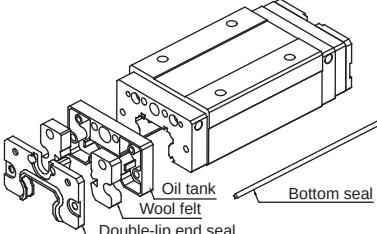
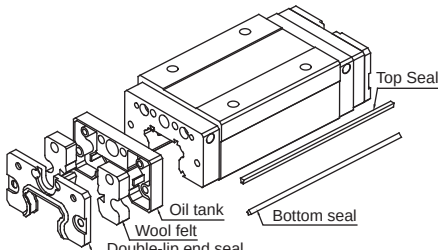
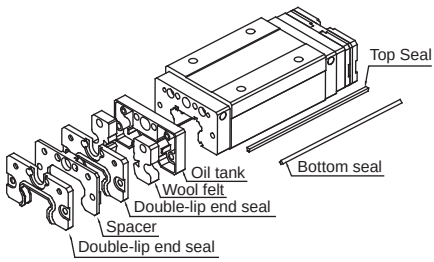
No symbol: Standard Protection(End Seals+Bottom Seals) DD(Single-lip end seals+Bottom seals)	XN(Double-lip end seals+Bottom seals)
	
U(End Seals+Bottom Seals+Top seals) UD(Single-lip end seals+Bottom seals+Top seals)	UN(Double-lip end seals+Bottom seals+Top seals)
	
UZ(Double end seals+Bottom seals+Top seals)	ZN(Two Double-lip end seals+Bottom seals+Top seals)
	

Table2.2.15 Codes of accessories

WW(Double-lip end seals+Bottom seals+Wool felts)

WU(Double-lip end seals+Bottom seals+Top Seals+Wool felts)

WZ(Two Double-lip end seals+Bottom seals+Top Seals+Wool felts)


End seal and Bottom seal

To prevent life reduction caused by iron chips or dust entering the block.

Inner Seal

Efficiently avoid dust from the surface of rail or tapping hole getting inside the block.

Double end seal

Enhances the wiping effect, foreign matter can be completely wiped off.

Double-lip end seals

Double-lip end seal is suitable for environment with high pollution.

Wool felt

Double-lip end seal is suitable for environment with high pollution.

Wool felt lubricates the ball track of the rail to increase the lifetime.

This accessory is suitable for light rating load environment.

Table2.2.16

Spacer	Thickness(mm)
TR15	4
TR20	4.5
TR25	4.5
TR30	4.5
TR35	5
TR45	6
TR55	6
TR65	8

Table2.2.17 TR Type block length of accessories

Unit : mm

Double-lip end seals(XN \ UN)								
Length of Block Code \ Type	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
S	40.5	49.4	57.2	67.4	75.7			
N	57.1	TRS(68.3) TRH(75.6)	81	96.2	109.2	124.5		
L	65.6	80.6	93	107	123	140	150.4	185.5
E	80.6	99.6	110	132	153	174	188.4	245

Two Double-lip end seals(ZN)								
Length of Block Code \ Type	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
S	48.1	58.4	65.6	76.4	84.7			
N	64.7	TRS(77.3) TRH(84.6)	89.4	105.2	118.2	134.5		
L	73.2	89.6	101.4	116	132	150	161.6	196.5
E	88.2	108.6	118.4	141	162	184	199.6	256

Double-lip end seals+Wool felt(WW \ WU)								
Length of Block Code \ Type	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
S	52	69.9	68.7	78.9	87.2			
N	68.6	TRS(79.8) TRH(87.1)	92.5	107.7	120.7	136		
L	77.1	92.1	104.5	118.5	134.5	151.5	161.9	197
E	92.1	111.1	121.5	143.5	164.5	185.5	199.9	256.5

Two Double-lip end seals+Wool felt(WZ)								
Length of Block Code \ Type	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
S	59.6	69.9	77.1	87.9	96.2			
N	76.2	TRS(88.8) TRH(96.1)	100.9	116.7	129.7	146		
L	84.7	101.1	112.9	127.5	143.5	161.5	173.1	208
E	99.7	120.1	129.9	152.5	173.5	195.5	211.1	267.5

Dustproof Rails

Once the Linear Guide in the cutting machine is in operating, dust and foreign matter that enter the Linear Guide may cause abnormal wear and shorten the service life.

Linear Guide rail mounting-hole cap :

Chips and foreign matter clogging the mounting holes of a Linear Guide rail may enter the Linear Guide block. To prevent from this situation, the mounting holes must be closed with dedicated caps, which must be installed to flush with the Linear Guide rail top surface. To insert a dedicated cap into a mounting hole, drive the cap in using a plastic hammer with a flat metal pad placed on the cap until it is flush with the Linear Guide rail top surface.

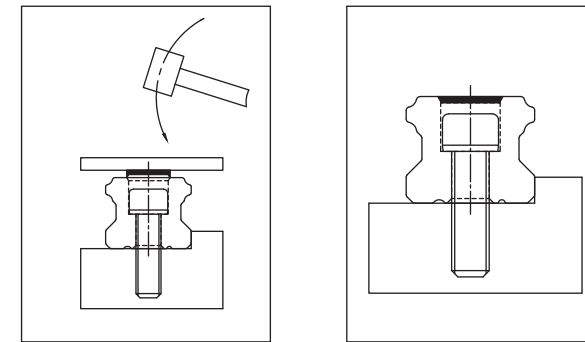


Fig2.2.11 Dustproof Rails

Rail with tapped holes :

Fixing a rail with tapped hole is different from fixing a standard one. A major strength of it is the shape of the tapped hole; dust and chippings would not enter.

2-2-13 Friction

The figure showed in the chart is the maximum friction.

Table2.2.18 End Cap friction rate Unit : kgf

Model No.	End Cap friction rate(Max)
TR15	0.25
TR20	0.35
TR25	0.4
TR30	0.5
TR35	0.7
TR45	1.3
TR55	1.6
TR65	2

2-2-14 Mounting-Surface Dimensional Tolerance

TR series Linear Guide has a Four-Way Equal-Load design, a slight dimensional error in the mounting surface can be absorbed by the natural self-adjusting capability of the product, thus ensuring smooth linear motion. In the table below are the dimensional tolerances for the mounting surface of TR Linear Guide.

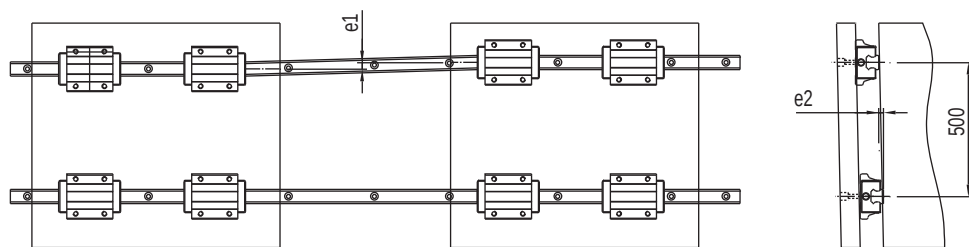


Fig2.2.12

Table2.2.19

Unit : μm

Model No.	Tolerance for Parallelism Between Two Axis(e1)					Tolerance for Parallelism Between Two Axis(e2)				
	Z3	Z2	Z1	Z0	ZF	Z3	Z2	Z1	Z0	ZF
TR15			18	25	35			85	130	190
TR20		18	20	25	35		50	85	130	190
TR25	15	20	22	30	42	60	70	85	130	195
TR30	20	27	30	40	55	80	90	110	170	250
TR35	22	30	35	50	68	100	120	150	210	290
TR45	25	35	40	60	85	110	140	170	250	350
TR55	34	45	50	70	98	130	170	210	300	410
TR65	42	55	60	80	105	150	200	250	350	460

2-3 TM Miniature Linear Guide

2-3-1 The Characteristics of TM Series

Dust-proof design

The stainless bottom seal is the innovative new design of TBI Motion TM series. It prevents effectively the abnormal chips getting into the ball track from the bottom side of the block and keep the good running performance and extend the life time of the slider because the friction is low by keeping some small backlash between the slider and rail.

Standard end seals provide extreme protection from dust, metal scrapers to maintain long service life and lower maintenance period. Unique low friction seal lips provide best smoothness and lower friction.

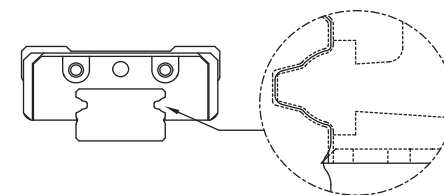


Fig2.3.1

High tensile performance stainless steel reinforcement plate

Dual fully covered stainless steel plates design delivers the best coverage for plastic on each ends. Stainless steel screws are used to strength the rigidity, protection with end cap in order to sustain higher operational speed $V_{\text{max}}=5\text{m/s}$, $a_{\text{max}}=300\text{m/s}^2$. When linear block is equipped with reinforcement plates and dust-proof seal, it can also function as scraper.

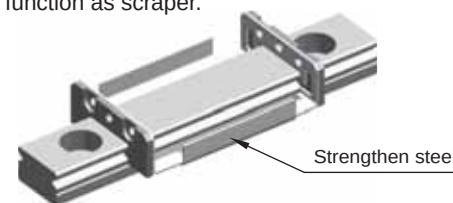


Fig2.3.4

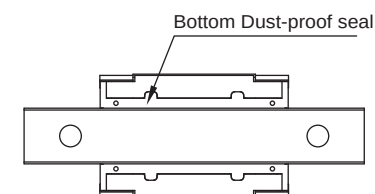


Fig2.3.5

High loading and moment capacity performance

TM Miniature Linear Guide series uses two row re-circulating methods with Gothic 45' contact angle on the rail groove to achieve equal load capacity in four directions. Larger steel balls are used to enhance the loading and torsion resistance performance in limited space.

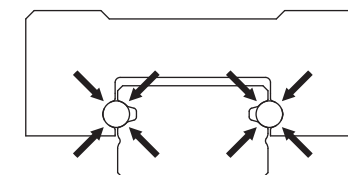


Fig2.3.6 The Gothic 45 degrees four-direction load structure

2-3-2 The structure of TM-series

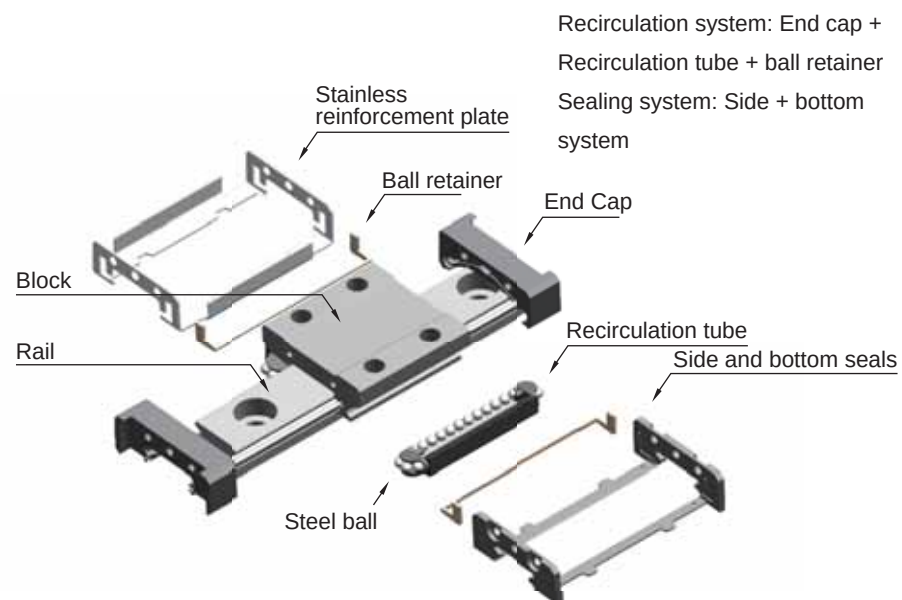
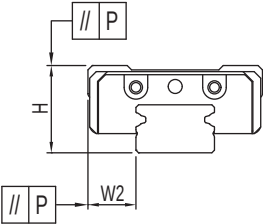


Table2.3.7

2-3-3 Accuracy

TM Miniature Linear Guide provides P、H、N three accuracy grades for customer to choose.


Table2.3.1

	Accuracy (μ m)		Precision P	High H	Normal N
	Tolerance of Height H	H	±10	±20	±40
	Variation of height with different block on same spot of the rail	Δ H	7	15	25
	Tolerance of width W_2	W_2	±15	±25	±40
	Variation with width on different block on same spot of the rail	ΔW_2	10	20	30

Preload

The maximum acceleration of TM-N can reach $V_{max} > 5\text{m/s}$, $a_{max} = 300\text{m/s}^2$ (60m/s^2 before preload).

Table2.3.2 Running parallel precision slide relative to the rails datum

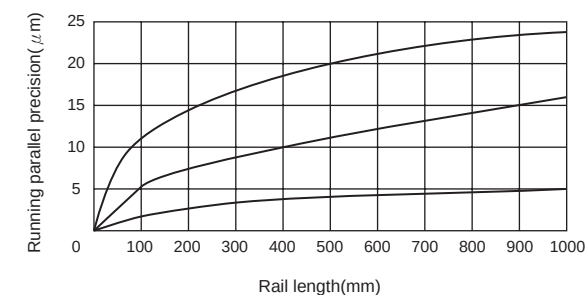

2-3-4 Preload

Preload

TM Miniature Linear Guide offers three preloading level which are ZF, Z0, Z1. A proper preloading will enhance performance on stiffness, precision, and torsion resistance; however an improper preloading will lower service life and increase friction.

Table2.3.3 Table

Preload grade	Pressure	Preload (μm)				Applications
		7	9	12	15	
ZF	Zero Preload	+4~0	+4~0	+5~0	+6~0	Running smoothly
Z0	Slight Clearance	+2~0	+2~0	+2~0	+3~0	Precision applications, Running smoothly
Z1	Light Preload	0~-3	0~-4	0~-5	0~-6	High steel, Precision applications, Running smoothly

Permissible Operational Temperature

The TM Miniature Linear Guide is sufficient to operate between $-40^{\circ}\text{C} \sim +80^{\circ}\text{C}$.

For sudden temperature rise the temperature can reach up to $+100^{\circ}\text{C}$.

2-3-5 Types of lubrication

Grease

When a linear guide is well lubricated, the contact point between rail and rolling steel balls will be separated by 1 micro meter. Therefore, a good lubrication increases the life of linear guide.

Clean room lubrication

Suitable for low dust environment.

Lubrication

General usage, ISO V32~68.

※Special Oil needs by *TBI MOTION* ※

Table 2.3.4

Model	Lubrication amount (cc)	Model	Lubrication amount (cc)
TM07NN	0.3		
TM07NL	0.4		
TM09NN	0.4	TM09WN	0.4
TM09NL	0.6	TM09WL	0.6
TM012NN	0.9	TM012WN	0.9
TM012NL	1.3	TM012WL	1.3
TM015NN	1.4	TM015WN	1.4
TM015NL	2.0	TM015WL	2.0



2-3-6 Order Information

Customized Requirement :

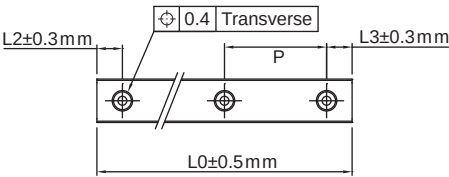


Table 2.3.5

Rail Length	SIZE			
	TM7	TM9	TM12	TM15
Pitch(mm)	15	20	25	40
L2, L3 min	3	4	4	4
L2, L3 max	10	20	20	35
Lmax	1300	1300	1300	1300


2-3-7 Model Number

Length of Block


Perform joint treatment when required lengths exceed 1300. Please contact *TBI MOTION* for detailed information.

Nominal Model Code	T	M	07	W	L	A	-	2	-	-	1000	-	N	A	-	Z0	-	II	-	BK
Block Type	M : Miniature X : Special (Drawing will be provided for special item in order to distinguish the height of the rail.)																			
Model of Size	07, 09, 12, 15																			
Width of Rail	N : Standard W : Wide																			
Length of Block	N : Standard L : Long																			
Material	S : Stainless steel A : Alloy steel																			
Quantity of Block	(Mark 1 when there is only 1 runner block)																			
Seals Type	☐ : Standard (End seal + Side seal)																			
Rail Length	Unit : mm																			
Accuracy Grade	N : Normal H : High P : Precision SP : Super-Precision UP : Ultra-Precision																			
Material	S : Stainless steel A : Alloy steel																			
Preload	ZF : Slight Clearance Z0 : No Preload Z1 : Light Preload																			
Two Sets per Axis	(No need to be marked when there is only one rail) II																			
Linear Guide Special Machining																				
B : Black Oxidation O : Hard Chrome Plating P : Phosphating N : Nickel Plating D : Raydent																				
K : Tapped-Hole Rail X : Rail with Special Machining																				

2-3-8 TM-N Specification

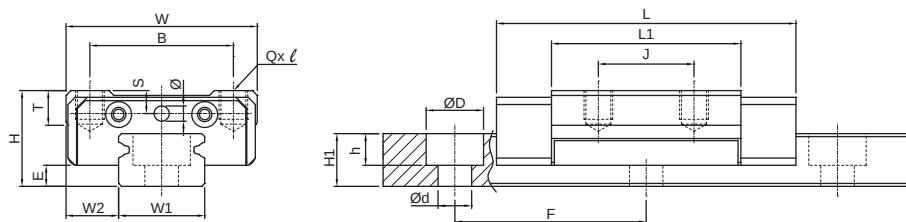


Model No.	Assembly (mm)			Block (mm)								Rail (mm)							
	H	W2	E	W	B	J	T	L	L1	Qxℓ	Ø	W1	H1	ØD	h	Ød	F		
TM07NN	8	5	1.5	17	12	8	2.25	23	12.3	M2x2	1.3	7	4.7	4.2	2.3	2.4	15		
TM07NL	8	5	1.5	17	12	13	2.25	31	20.3	M2x2	1.3	7	4.7	4.2	2.3	2.4	15		
TM09NN	10	5.5	2.2	20	15	10	3.62	30.5	19.8	M3x3	1.3	9	5.5	6	3.3	3.5	20		
TM09NL	10	5.5	2.2	20	15	16	3.62	40.8	30.1	M3x3	1.3	9	5.5	6	3.3	3.5	20		
TM12NN	13	7.5	3	27	20	15	4.54	35	20.6	M3x3.5	1.3	12	7.5	6	4.5	3.5	25		
TM12NL	13	7.5	3	27	20	20	4.54	47.5	33.1	M3x3.5	1.3	12	7.5	6	4.5	3.5	25		
TM15NN	16	8.5	4	32	25	20	5.86	43	27	M3x5	1.3	15	9.5	6	4.5	3.5	40		
TM15NL	16	8.5	4	32	25	25	5.86	60	44	M3x5	1.3	15	9.5	6	4.5	3.5	40		

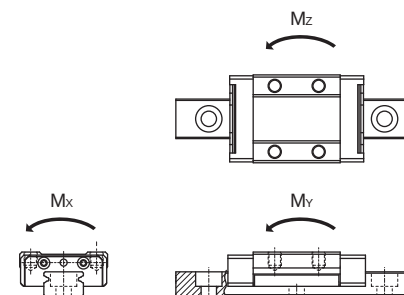


Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Double Block	Single Block	Double Block	Single Block	Double Block		
TM07NN	144	204	745	232	3,234	232	3,234	0.005	0.21	
TM07NL	220	374	1,367	849	7,261	849	7,261	0.009		
TM09NN	220	374	1,713	849	7,117	849	7,117	0.013	0.32	
TM09NL	299	579	2,648	2,099	14,174	2,099	14,174	0.020		
TM12NN	381	536	3,269	1,094	12,391	1,094	12,391	0.024	0.61	
TM12NL	555	919	5,604	3,437	26,857	3,437	26,857	0.039		
TM15NN	581	834	6,336	2,316	23,096	2,316	23,096	0.048	1	
TM15NL	860	1,459	11,088	7,527	52,908	7,527	52,908	0.080		

TM-W Specification

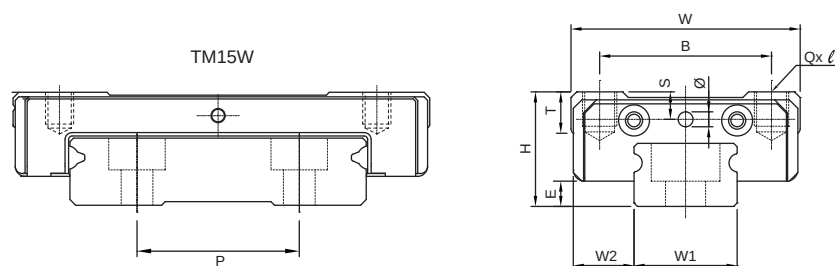

Model No.	Assembly (mm)			Block (mm)								Rail (mm)							
	H	W2	E	W	B	J	T	L	L1	Qxℓ	Ø	W1	H1	ØD	h	Ød	F	P	
TM09WN	12	6	3.4	30	23	12	4	39.1	26.7	M3x3	1.3	18	7.3	6	4.5	3.5	30		
TM09WL	12	6	3.4	30	23	24	4	50.7	38.3	M3x3	1.3	18	7.3	6	4.5	3.5	30		
TM12WN	14	8	3.9	40	28	15	4.5	44.4	29	M3x3.5	1.3	24	8.5	8	4.5	4.5	40		
TM12WL	14	8	3.9	40	28	28	4.5	59.4	44	M3x3.5	1.3	24	8.5	8	4.5	4.5	40		
TM15WN	16	9	4.1	60	45	20	4.8	55.3	38.5	M4x4.5	1.3	42	9.5	8	4.5	4.5	40	23	
TM15WL	16	9	4.1	60	45	35	4.8	74.4	57.6	M4x4.5	1.3	42	9.5	8	4.5	4.5	40	23	

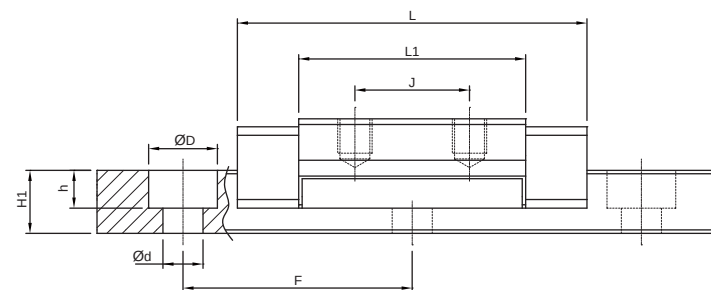

Model No.	Rating Load (kgf)		Static permissible moment of load						Weight	
	C	Co	Mx(kgf-mm)		My(kgf-mm)		Mz(kgf-mm)		Block (kg)	Rail (kg/m)
			Single Block	Double Block	Single Block	Double Block	Single Block	Double Block		
TM09WN	208	368	4,645	1,621	12,205	1,621	12,205	0.03	0.97	
TM09WL	260	509	7,123	3,905	23,411	3,905	23,411	0.043		
TM12WN	313	530	10,190	2,864	23,153	2,864	23,153	0.05	1.47	
TM12WL	415	796	15,748	7,083	46,164	7,083	46,164	0.076		
TM15WN	517	856	26,387	5,459	42,543	5,459	42,543	0.116	2.85	
TM15WL	686	1,283	41,779	14,144	87,256	14,144	87,256	0.175		

LINEAR GUIDE

MEMO

[illegible]