

Alterseat

Your Trusted Office Furniture Manufacturer

INSTRUCTION MANUAL for REVO-101

Alterseat

ALTERSEAT (M) SDN. BHD.

Add: B-1, 20, Jalan Persiaran Jalil 1, Bukit Jalil, 57000 Kuala

Lumpur

Tel: 03-5033 2690

Web: www.alterseat.com

TABLE OF CONTENTS

INTRODUCTION	1
PARTS OF THE CHAIR	2
ATTACHING THE HEADREST	3
CONNECTING THE GAS LIFT	4
CONNECTING THE TOP PIECE WITH LEG	5

INTRODUCTION

Welcome to the Alterseat Team and thank you altering your ergonomic experience with us. This product is manufactured and designed solely by Alterseat (M) Sdn. Bhd.

We specialize in producing and manufacturing **office chairs** for **over 20 years** including other furniture.

Before proceeding into this manual, ensure that after unpacking and before any assembly, all items and parts of installation are clear of any damages. If there are any damages found, immediately contact our **customer service number 03-5033 2690** for assistance.


This product is intended for indoor use. Kindly take time to **read and follow the instructions provided** in the following pages. Install as described and guided in this installation manual. **We accept no liability for damages caused for any improper use.**

From,


Team Alterseat

PARTS OF THE CHAIR


TOP PIECE

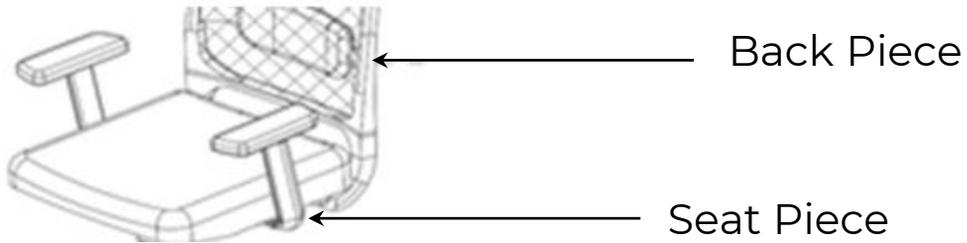

LEG

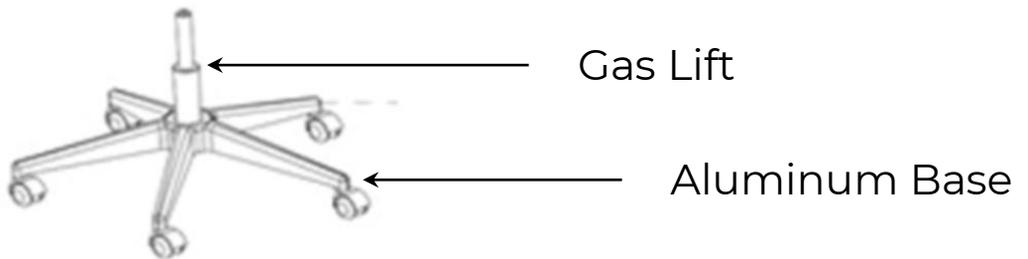


HEAD PIECE

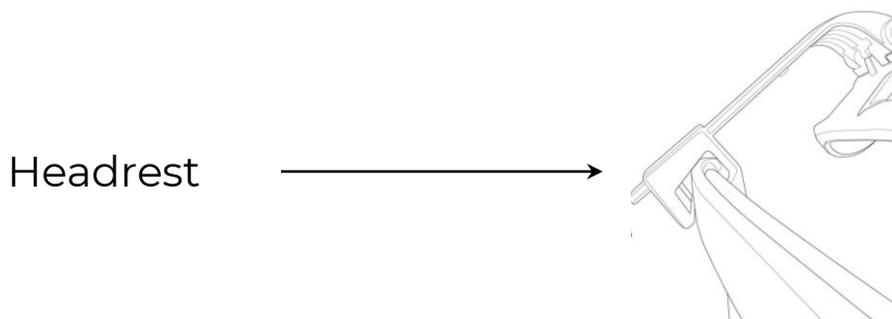


ATTACHING THE HEADREST

HEAD PIECE

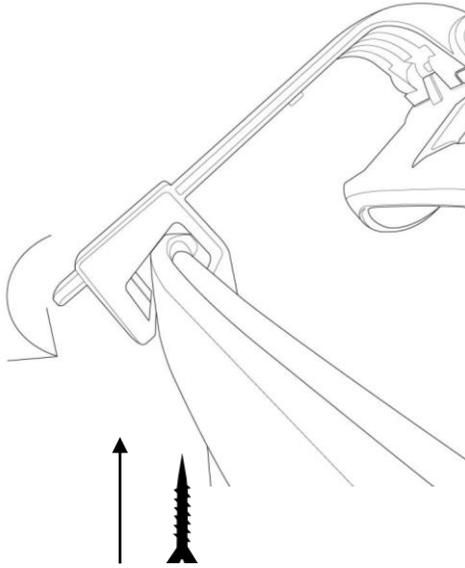

A

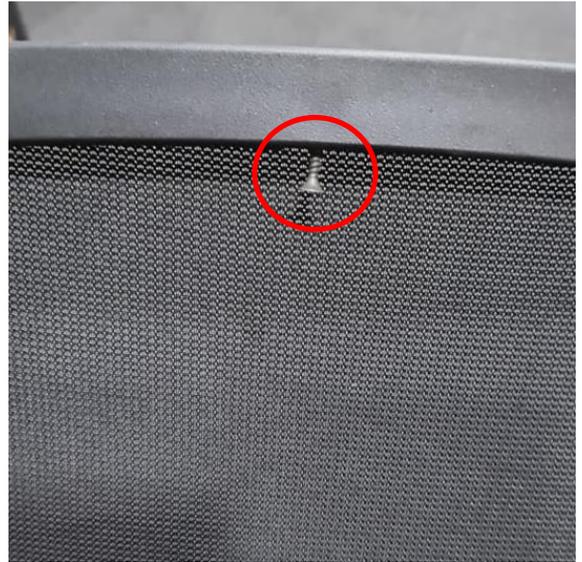


B

INSTRUCTIONS

- A. Using the *Allen Key* provided, remove the 2 screws (loosely attached) to the headrest area of the top piece.
- B. Align the headrest according to the 2 *pilot holes* and tighten the screws with the same *Allen Key* provided.

CONNECTING THE GAS LIFT

GAS LIFT W ALUMINUM BASE

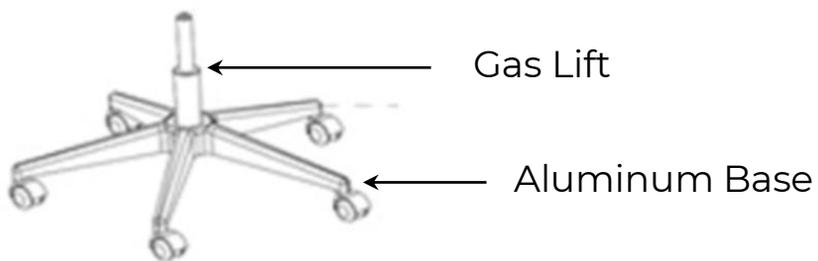

F


INSTRUCTIONS

F. Insert the wider end of the *Gas Lift* into the *Aluminum Base*.

Note: No 'click' sound will be heard.

CONNECTING THE TOP PIECE W LEG

TOP PIECE W LEG PART

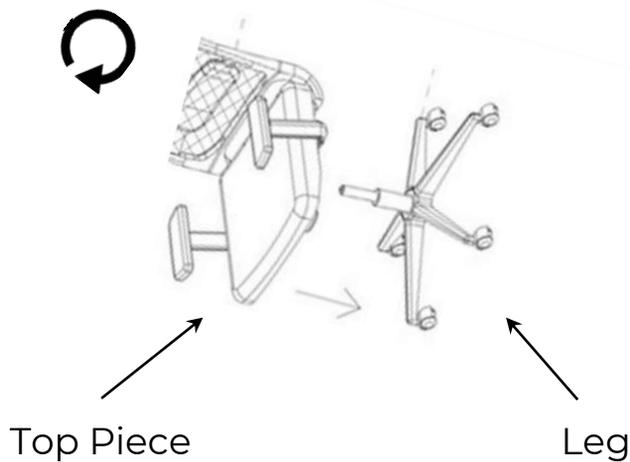

* Perform this step by
slanting at an angle *

G

INSTRUCTIONS

G. Slant the 'Top Piece' on one side. Then insert the 'Leg' from a side angle to connect both segments together.

CONNECTING THE TOP PIECE W LEG

TOP PIECE W LEG PART



H

INSTRUCTIONS

H. Once both parts are successfully connected, lift your chair in an upwards and straight direction. You are now ready to sit with Alterseat!

Alterseat

Your Trusted Office Furniture Manufacturer

THANK YOU