

Xtreme 6020 Bamboo Log Set

(sku 94700880)



The logs are made of a ceramic material that is FRAGILE. Carefully handle each log with both hands.

Overview


This log set is for use with an Xtreme 6020 that has been pre-configured for use with logs. The threaded stud plates are pre-installed to suit these instructions.

Packing List

- (3) #1 Logs
- (3) #2 Logs
- (3) #3 Logs
- (4) #4 Logs

Log Configuration

The logs are arranged in the pattern shown below.

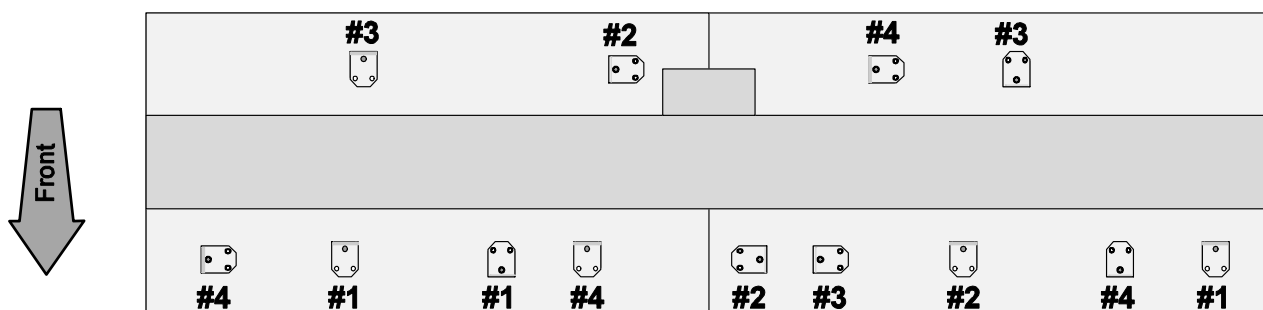

Log Installation

NOTE: The logs should be installed after the fireplace has been installed and tested for proper operation and before installing the crushed glass.

NOTE: Remove the 1/4" hex bolts on the end of each log. These bolts protect the threads during manufacture.


1. Each log has an identification # marked on the bottom (see photo below). Note the press nut on the bottom of the log. This nut threads over the threaded studs on the stud plates.



Xtreme 6020 Bamboo Log Set

(sku 94700880)

2. Starting at the front right log, carefully insert each log into the firebox and spin into position (see photos below). Do not over-tighten the logs. They should be tightened just enough to remain secure.

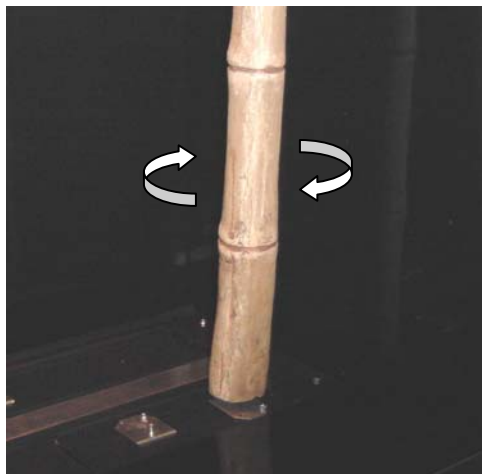

3. Continue to install the remaining logs, referring to the illustration on page 1 for log placement.

HINT: Each log may be placed vertically, or at a slight angle up to 10° from vertical to create an aesthetic arrangement. See the photo to the right for a typical installation.

NOTE: The log set affects airflow inside the fireplace. Adjust the air shutters to fully open position prior to placing the glass. After operating the fireplace to insure proper flame performance, the air shutters may be closed slightly if needed.

4. Once all the logs are in place, install the crushed glass media over the perforated steel (see photo below). Make sure the crushed glass covers the stud plates but does not cover the pilot (see manual for complete details).



5. Replace the glass frame and start the fireplace. Let the fireplace burn for 30 minutes on high and check the logs for sooting. Remove the glass and carefully inspect the areas above the burner for soot accumulation. If any soot is detected, re-adjust the log and repeat this step to insure no sooting occurs.