

Swan SH16310N Column Patio Heater Installation Guide

Swan
designed for life

al fresco


Patio Heaters Assembly
Photo Guide
Models: SH16310N, SH16320N, SH16330N

Please read in conjunction with the printed manual that came with the product
Helpline: 0333 220 6050

Contents

1 SH16310N – COLUMN PATIO HEATER
2 Documents / Resources
3 Related Posts

SH16310N – COLUMN PATIO HEATER

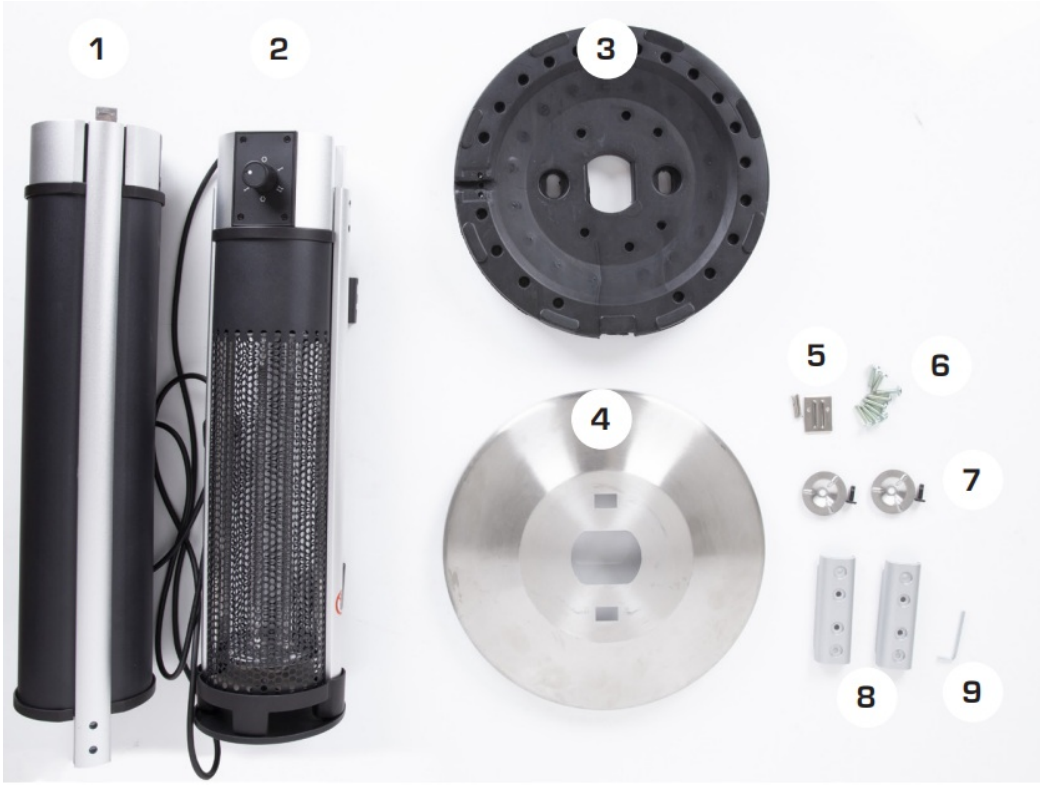


1. Lower body
2. Upper body
3. Base
4. Base cover
5. Cord grip
6. Screws for joint boards
7. Screws & washers for base
8. Joint boards
9. Allen key

You will also need a cross-head screwdriver. Assembly is much easier with two people and reduces the risk of damaging the product.



Thread the plug and cable from the upper body (2) through the channel in the lower body (1)

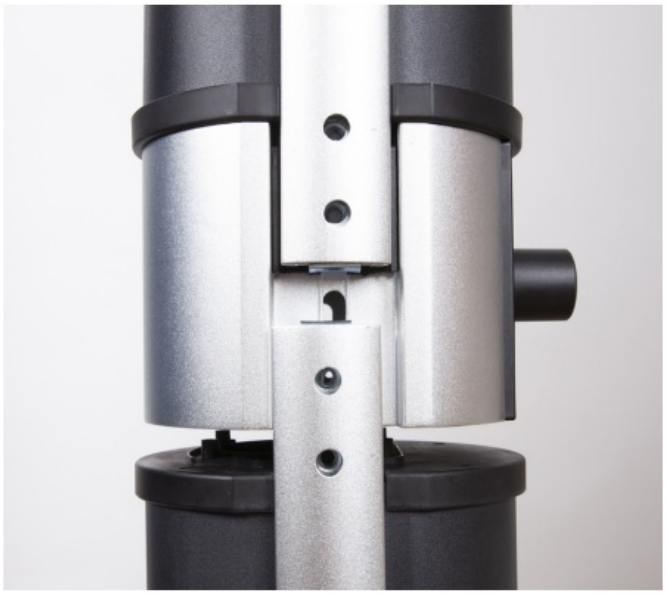

Make sure it goes all the way through. Slide the upper body (2) onto the lower body (1)



Fit the joint boards and secure with the screws (6) using the Allen key provided (9)



Turn the unit upside down (put some cloth down to prevent scratches).
Put the base (3) inside the base cover (4) and thread the plug and cord through the hole in the middle



Fasten the base to the main unit using the screws & washers (7)



Fasten the cord grip (5). Make sure the lip faces upwards

Refer to the manual that came with the product for the operation guide



1. Main body
2. Base cover
3. Base
4. Table top
5. Foot bracket
6. Allen keys – 1 large + 1 small
7. Screws & washers for base
8. Long screws + steel tubes
9. Screws for tabletop


You will also need a cross-head screwdriver. Assembly is much easier with two people and reduces the risk of damaging the product.



Turn the main body (1) upside down (put a cloth down to prevent scratches)
Fit the base cover and thread the plug and cord through the hole in the middle.



Fit the base inside the base cover (2) and align the holes ready for the screws and washers.

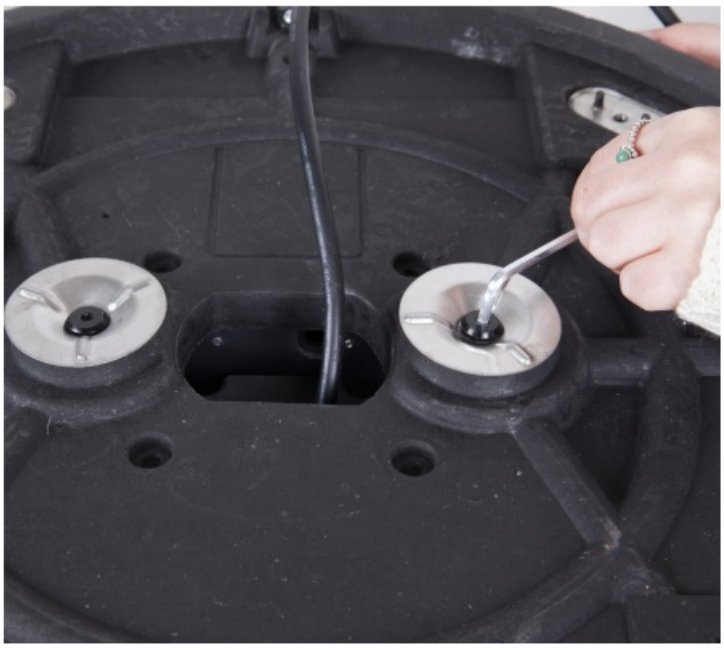

Fit the screws and washers. Leave them slightly loose for the moment. This allows a little movement in the base for the next part…




Get someone to hold the bar base (5) in position.
Thread the long screws through the holes into the steel tubes (8) and into the threaded holes on the bar base.
Don’t fully tighten them until all 3 are fitted



Once all 3 of the long screws are fitted, tighten them all (using the larger allen key)
Finally, tighten the base screws as well (small Allen key)




Fit the cable to the cable tie and fit the castors

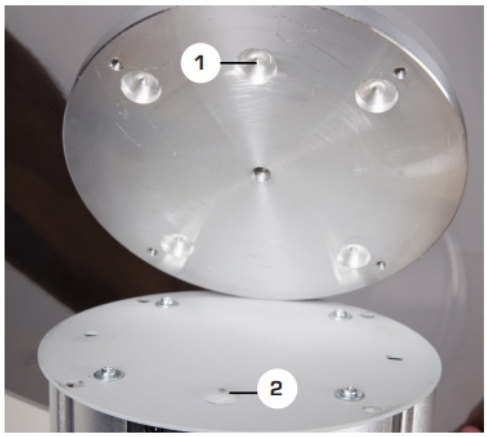



Turn the unit the right way up again & offer up the tabletop.
The holes must line up as shown. The bump (2) must align with the hole (1)
This MUST be a 2 personal task or you risk breaking the tabletop.
Fit the screws to secure the tabletop to the main unit.

Refer to the manual that came with the product for operation guide

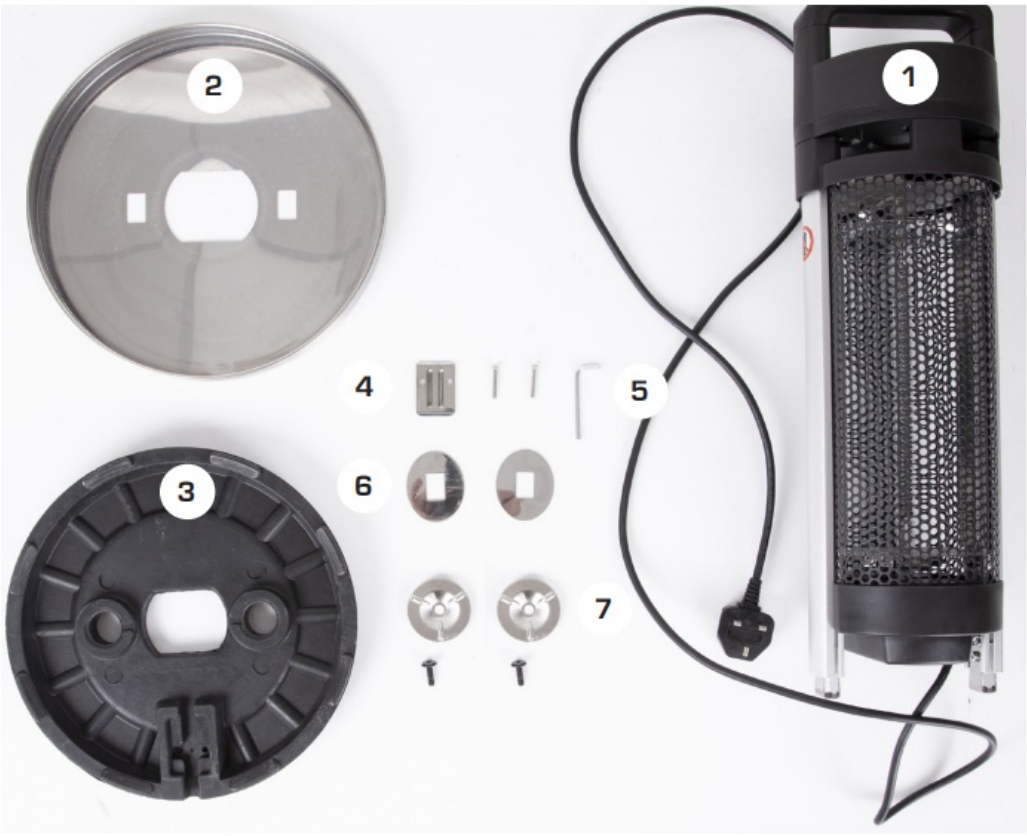

1. Main body
2. Base cover
3. Base
4. Cord grip & screws
5. Allen key
6. Deco board
7. Base screws & washers

You will also need a cross-head screwdriver. Assembly is much easier with two people and reduces the risk of damaging the product.



Fit the deco boards (6) as shown



Put the base (3) inside the base cover (2) and thread the plugs and cord through the hole in the middle. Make sure the 2 mounting holes are aligned.



Fit the base assembly to the main body (1) and tighten the screws and washers (7) as shown.



Fit the cord grip (4) ensuring the lip faces upward.

www.swan-brand.co.uk

http://www.swanproducts.co.uk/index.php



*** on selected products**

Copyright © Swan Products Ltd.

PO Box 3117, Stoke-on-Trent ST4 9GD

Documents / Resources

	Swan SH16310N Column Patio Heater [pdf] Installation Guide SH16310N, SH16320N, SH16330N, SH16310N Column Patio Heater, SH16310N, Column Patio Heater