此说明书有修改


(修改说明书第6页打玻璃胶的描述)

从2018-08-01日后排产单开始


采购需更新给质检


此页供应商不必印刷

# *Installation Manual*

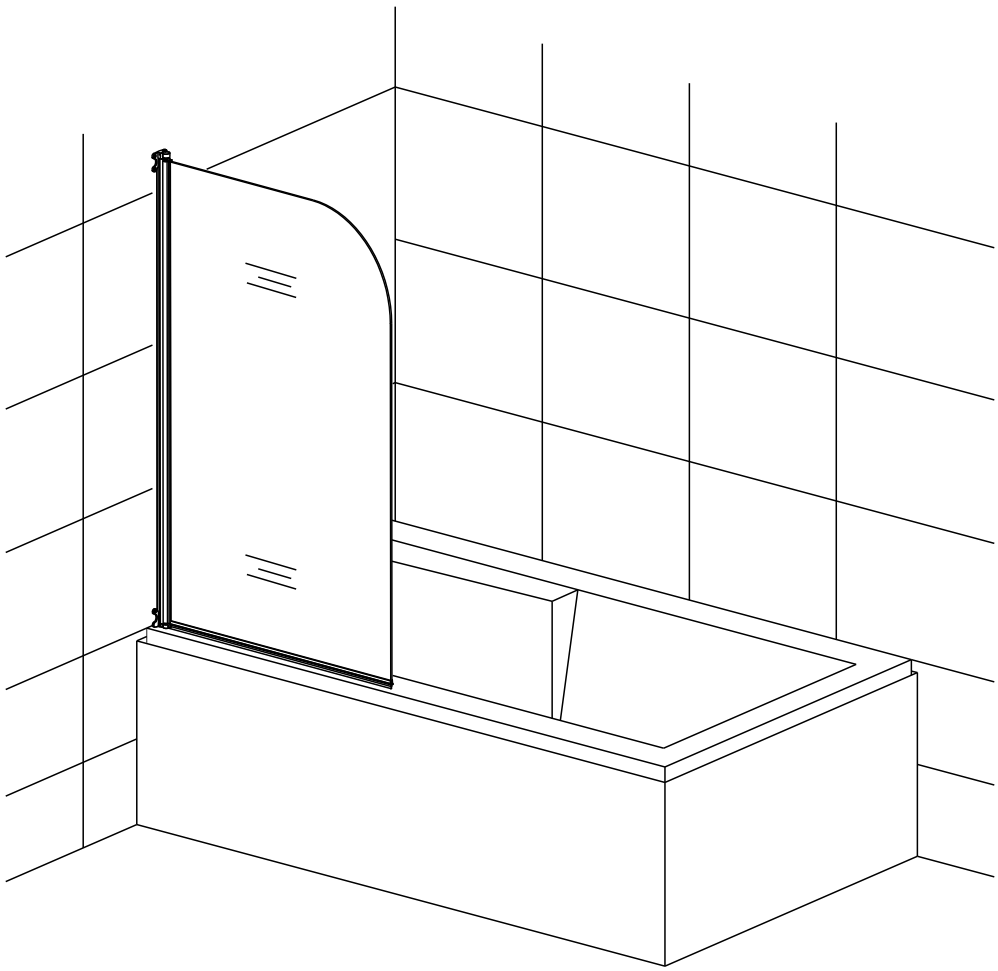


# CAUTIONS

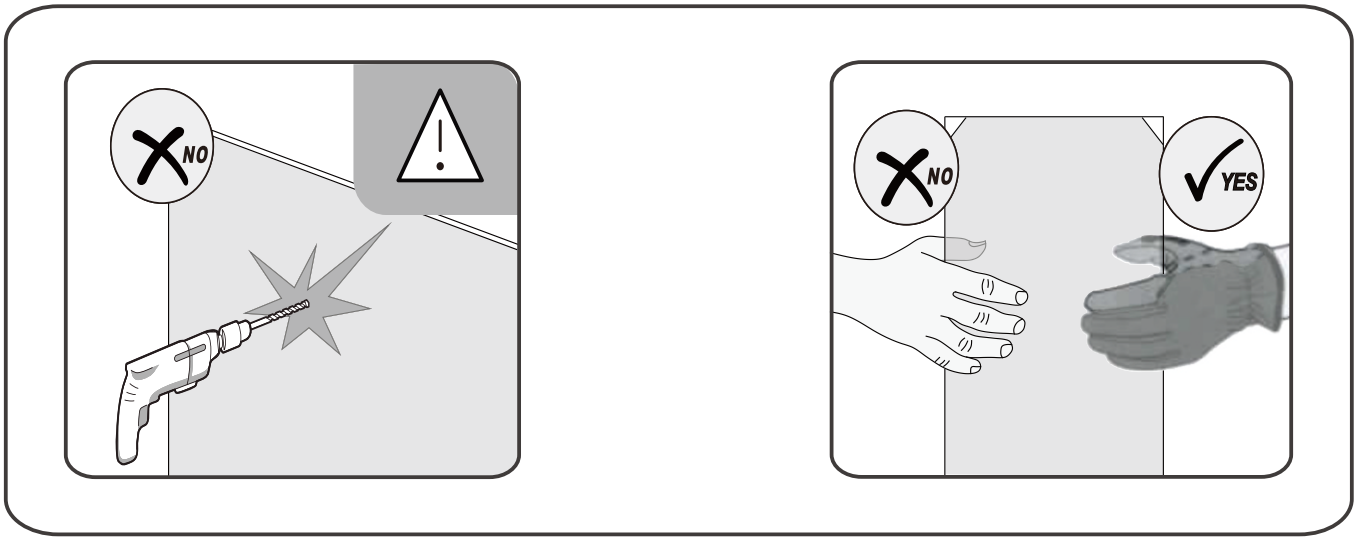
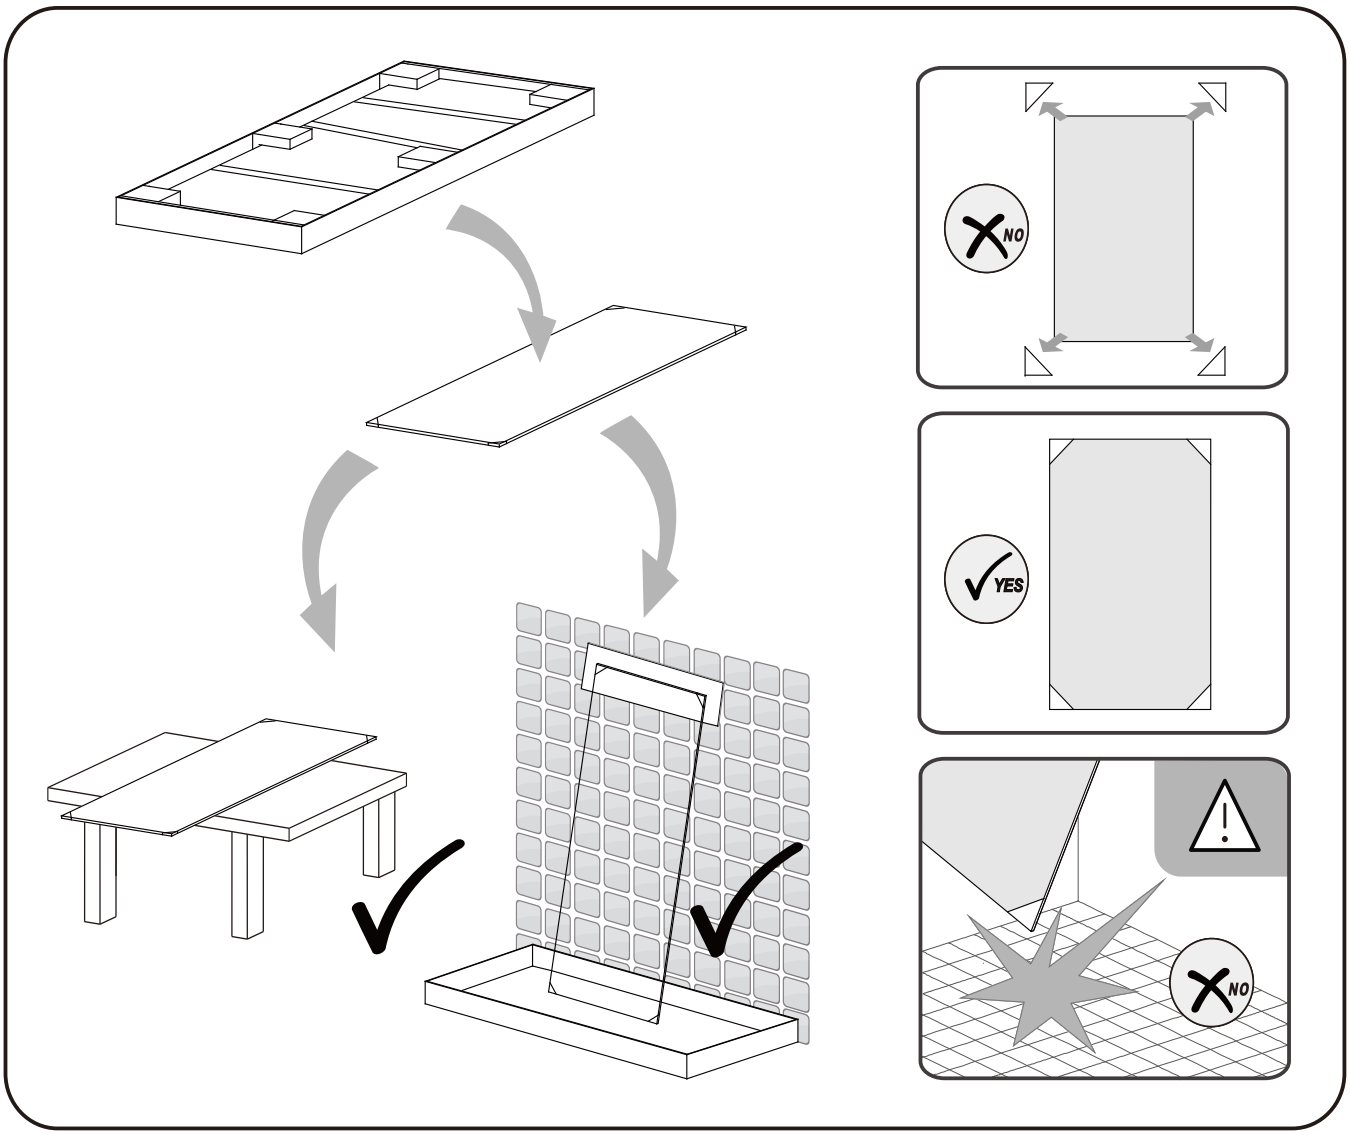
# TOOLS REQUIRED



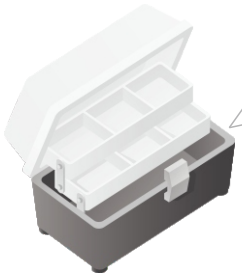


PENCIL




(⌀6 ⌀3.2)
DRILL BIT



SILICONE & GUN




FLAT HEAD & CROSS
HEAD SCREWDRIVER



TAPE MEASURE




SPIRIT LEVE

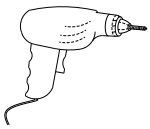







DRILL






RUBBER HAMMER


# PACKING LIST

| | | | | |
|---|---|---|---|---|
| A E1-457  up X1 | B E1-458  down X1 | C E1-453  up X1 | D E1-455  down X1 | E I-432  X6 |
| F B-673  X1 | G C-306  X1 | H C1-007  X1 | I ST4*30  X6 | J I-306  X6 |


# PRODUCT SCHEMATIC DIAGRAM

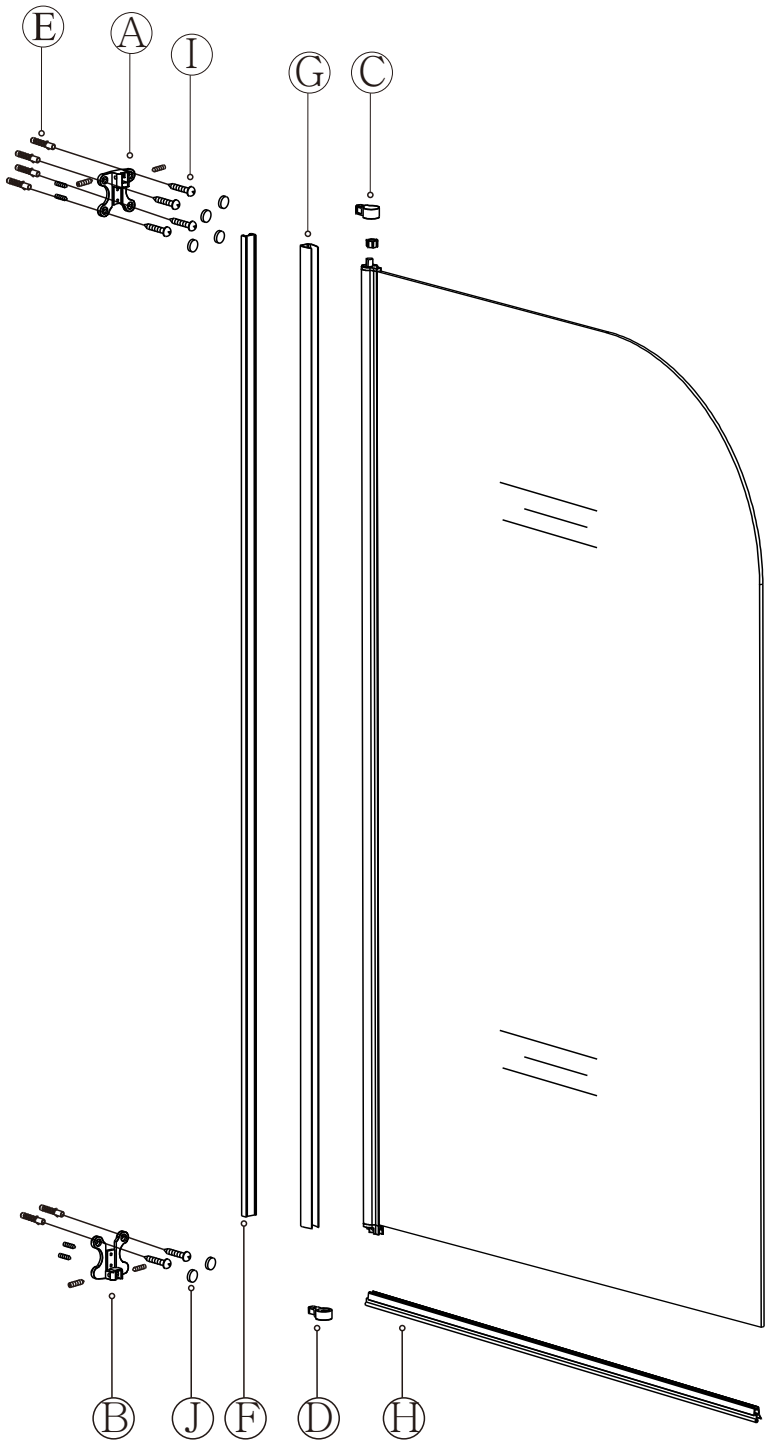


1

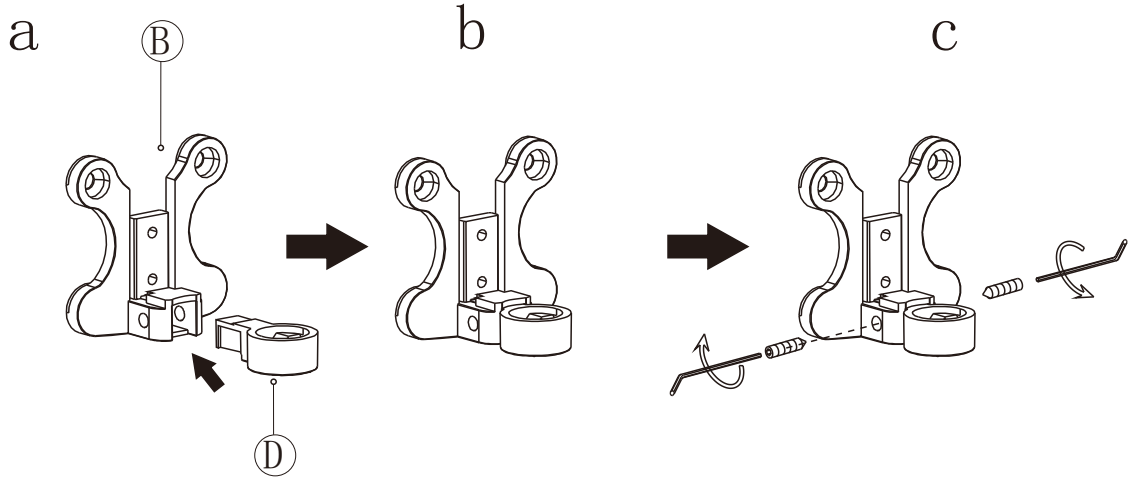



2

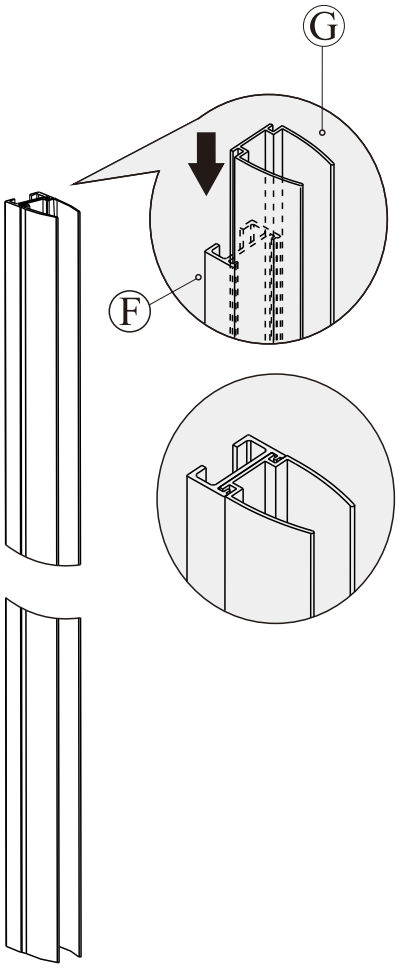



3

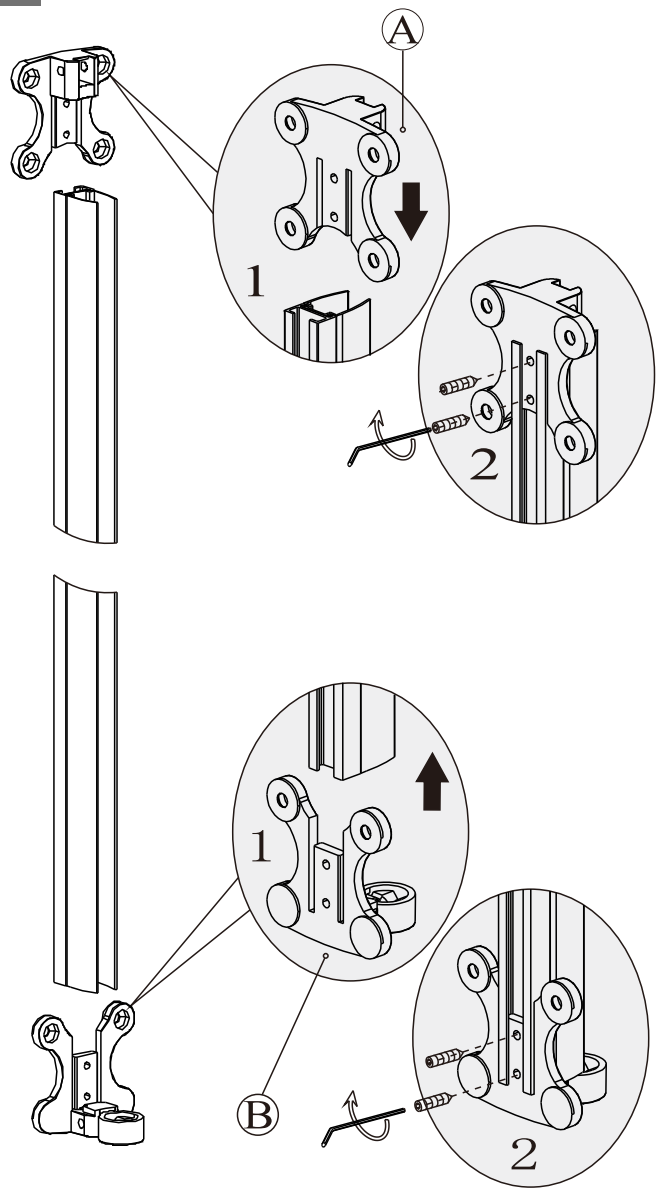


4

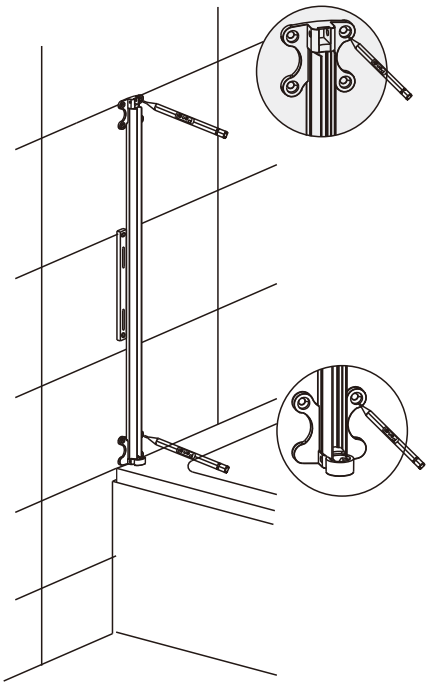


5

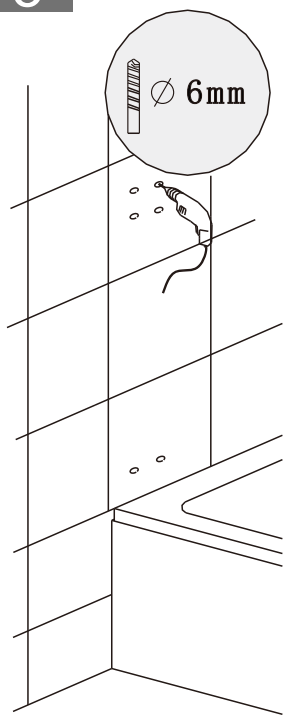



6

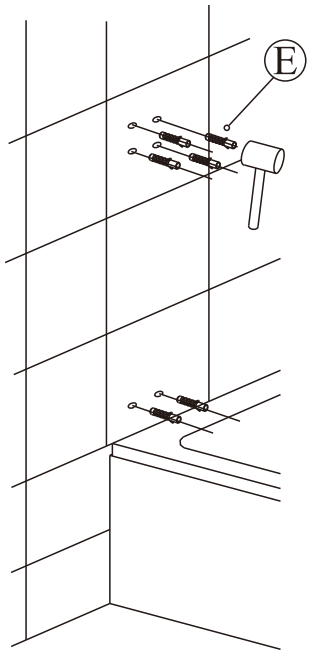



7

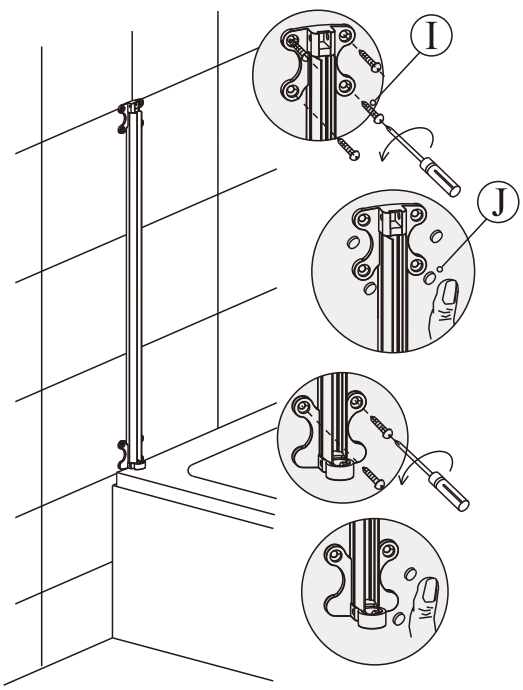



8

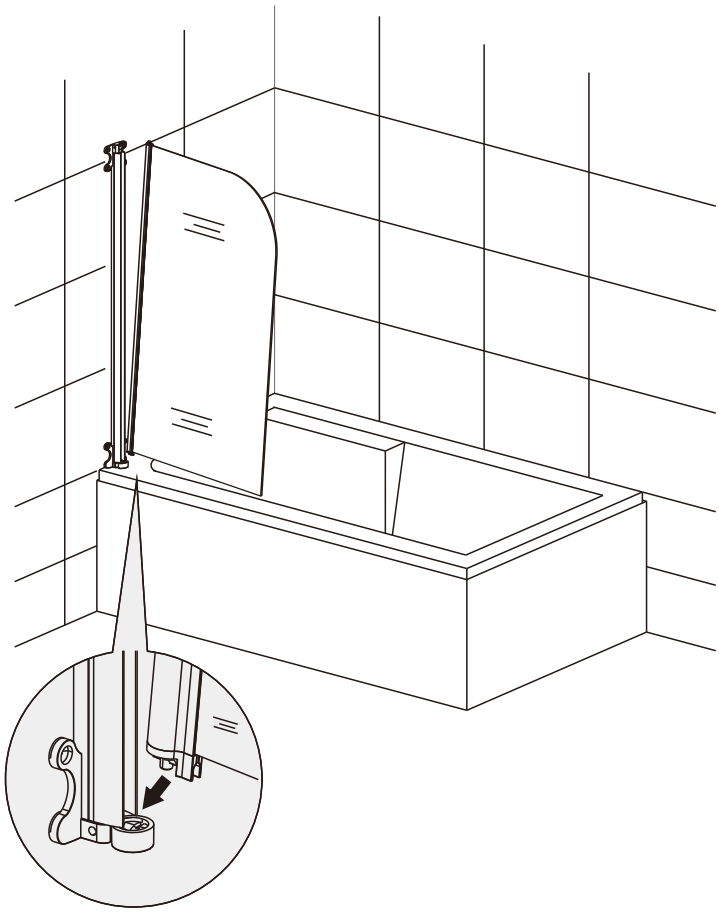

9

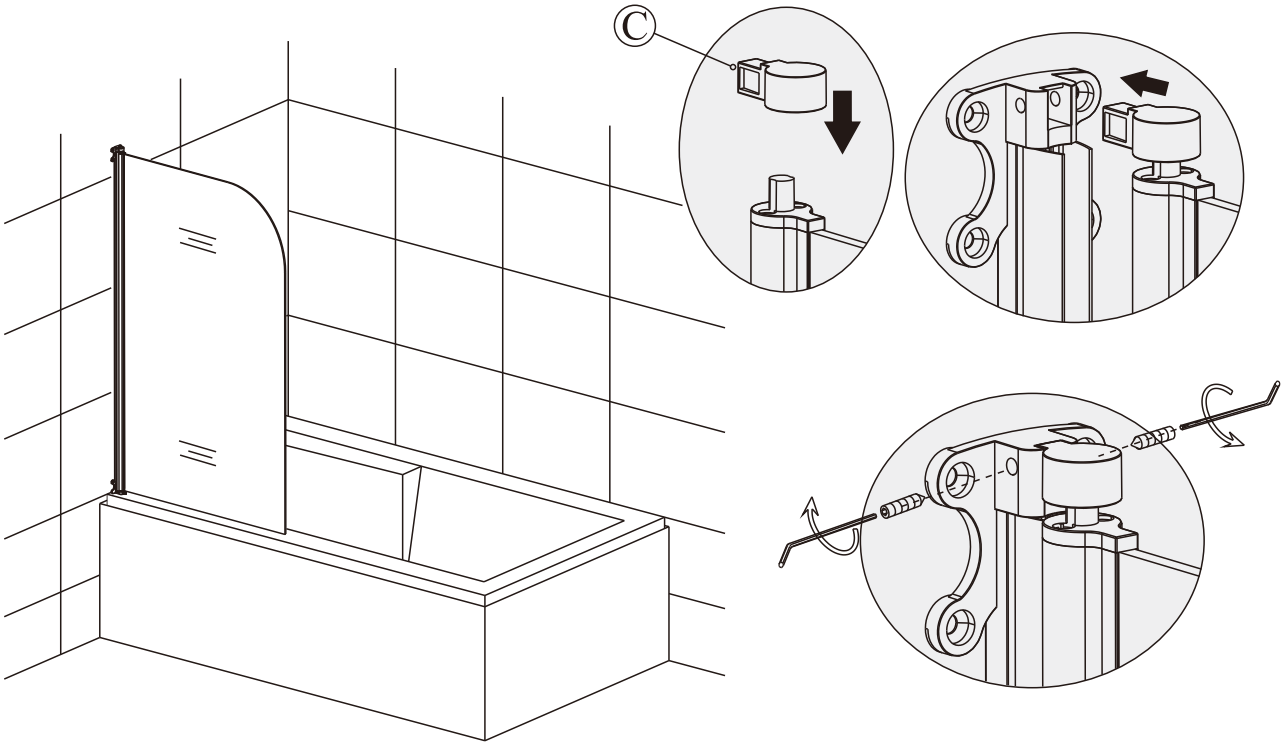



10

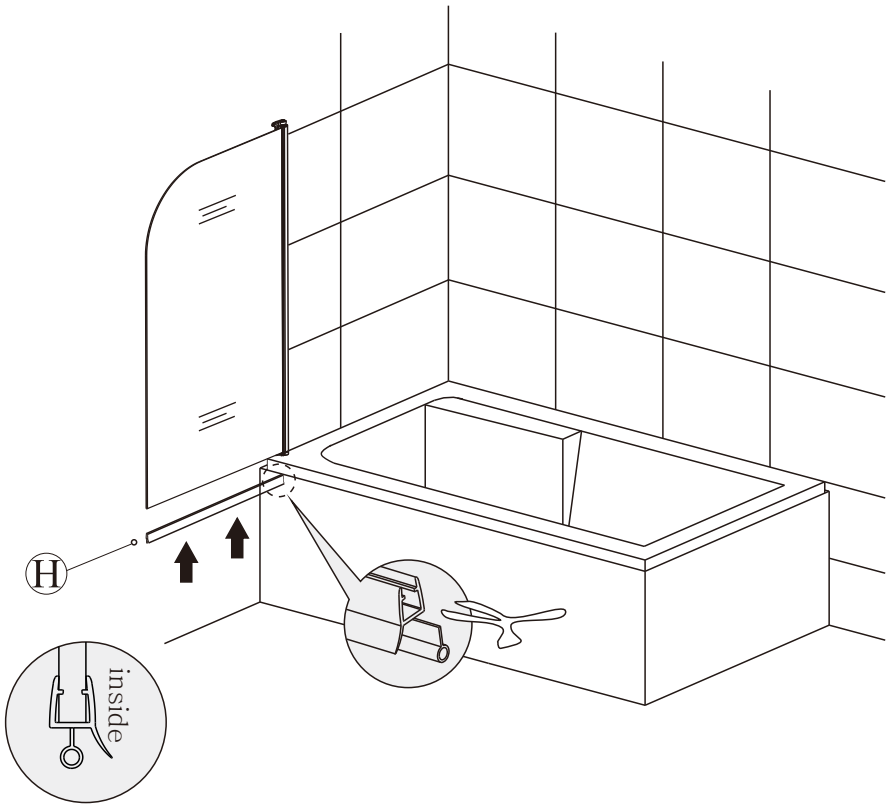

11

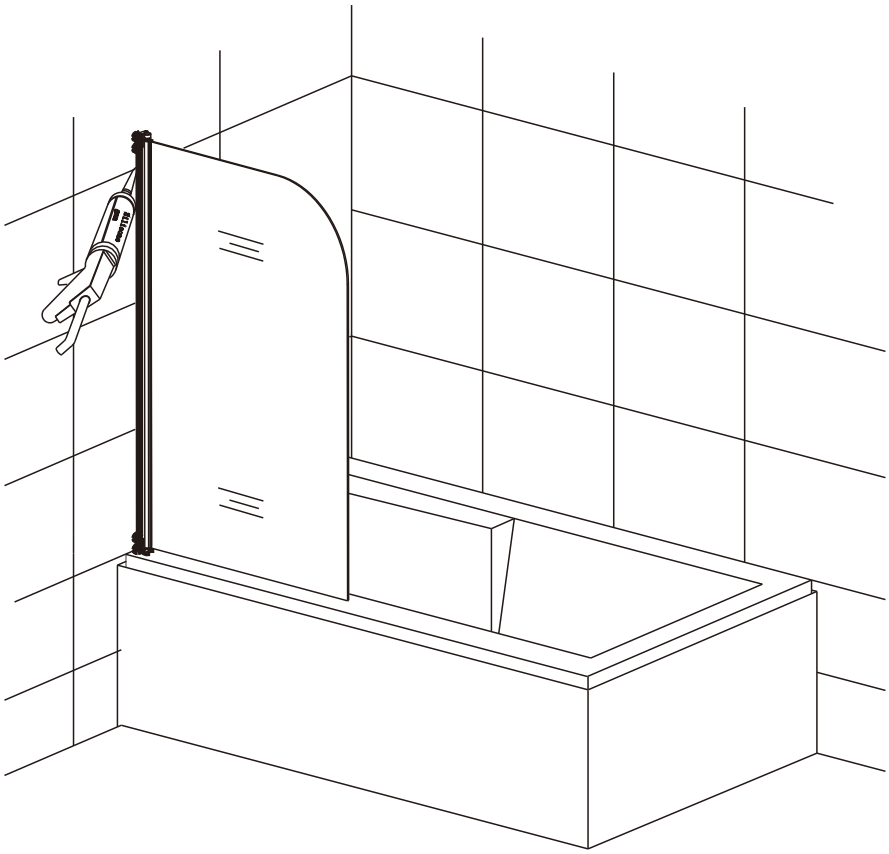

Apply some silicone on the outside edge of the bath screen(between the wall profiles and wall and between the frame and the bath) to enhance waterproof. After installation, it needs 24hours for silicone to dry before being put into use.

## Cleaning & maintenance

Clean the sundries regularly to prevent the drain from being jammed. Usually, clean the shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure,you may clean it by calico with toothpaste,but you need to clean it with water afterwards.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.