
Design Summary for 56GQL (48- and 56-pin functions) MicroStar Junior™ BGA

PCB Design Guidelines


as

JMENTS


Package Via to Board Land Area Configuration

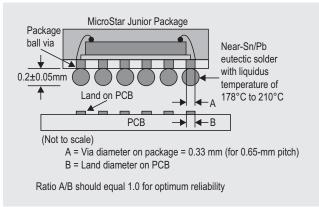


Solder Ball Collapse

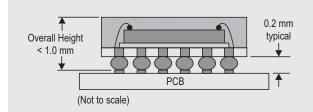


VFBGA Recommended Land Pad Design

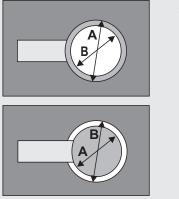

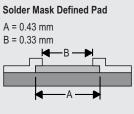






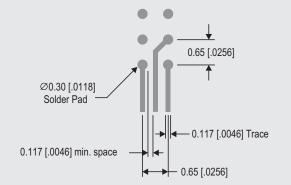

Trace width/spacing for non-solder mask defined = 0.1167 [.0046] Trace width/spacing for solder mask defined with \emptyset 0.33 solder pad = 0.0733 [.0029]

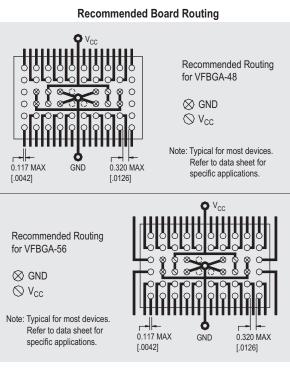

Geometric Dimensional Tolerances

Coplanarity


This geometric dimensioning and tolerancing (GD & T) term [_____]0,08 mm] means that this package meets a coplanarity of 0.08 mm as shown below. Coplanarity is defined as a unilateral tolerance zone measured upward from the seating plane. (Reference ASME Y14.5-1994).

Position Tolerance

This GD & T term $\bigoplus \emptyset 0,05 \$ is described below:

- This is the symbol for true position.
 True position is defined as the theoretically exact centerline location of the solder ball(s).
- Ø 0,05 This symbol/number represents how much the centerline of the solder ball(s) is allowed to vary from it's true position.
 - \mathbb{M} This symbol/letter is defined as the maximum material condition of the solder ball(s) which is 0.45 mm DIA.

The graphic representation is shown below for the top, left solder ball of this package.

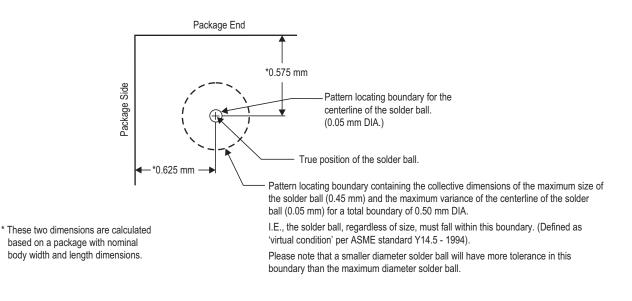


IR Reflow Profile

Ideal (1st and 2nd) Reflow Profile

60 - 90 sec. 90 - 120 sec. 30 - 60 sec. 235°C ±5°C 10-20 sec. 1 - 3°C/sec. max.

Ideal Reflow Profile

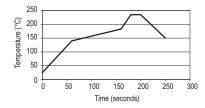


Note:

This is an ideal profile, and actual conditions obtained in any specific reflow oven will vary. This profile is based on convection or RF plus forced convection heating.



Stencil Vitals

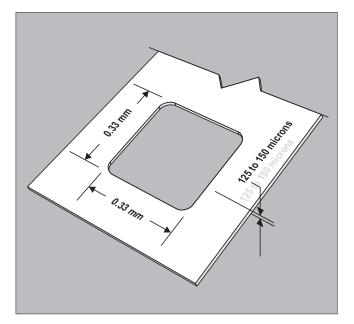


Solder Paste

TI recommends the use of paste when mounting MicroStar Junior BGAs. The use of paste offers the following advantages:


- It acts as a flux to aid wetting of the solder ball to the PCB land.
- The adhesive properties of the paste will hold the component in place during reflow.
- Paste contributes to the final volume of solder in the joint, and thus allows this volume to be varied to give an optimum joint.

Paste selection is normally driven by overall system assembly requirements. In general, the "no clean" compositions are preferred due to the difficulty in cleaning under the mounted components.

Packaging Tape and Reel

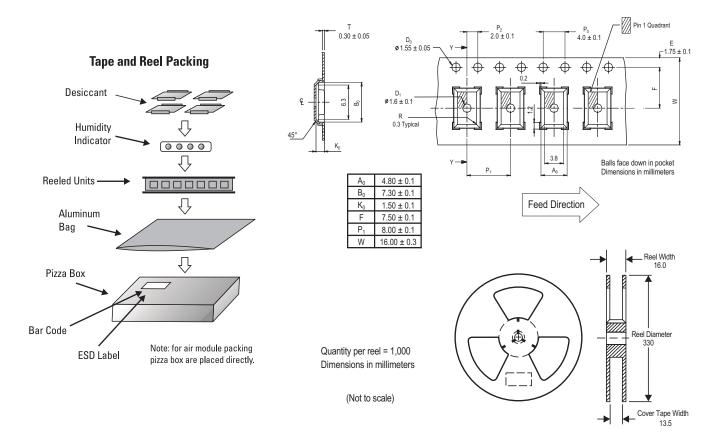


48/56GQL (4.5 x 7.0 mm, 0.65 mm pitch)

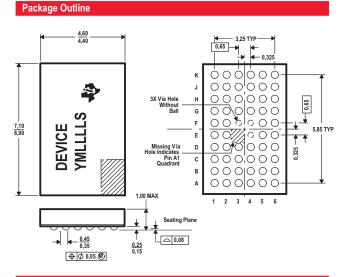

Electrical Characteristics

	<u>R(ohms)</u>	<u>L(nH)</u>	<u>C(pF)</u>
Min.	0.048	1.470	0.182
Mean	0.066	2.257	0.264
Max.	0.116	3.965	0.430

Thermal Characteristics

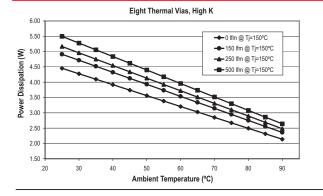


Without Thermal Vias, High K 4.50 ←0 lfm @ Tj=150°C 4 00 - 150 lfm @ Tj=150°C Dissipation (W) ▲ 250 lfm @ Tj=150°C 3.50 3.00 Power 2.50 2.00 1.50 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 Ambient Temperature (°C) Daisy Chain Net List

56GQL TOP VIEW

												A1-B3	J4-K6
1											٦	A2-A3	K4-K5
6	0	G	0	Q	G	G	0	0	\odot	Ø	1	A4-A5	K2-K3
	Q	γΨ	Q	, <i>Y</i>	ıΨ	Ψ	رخ	\mathcal{P}	Ψ	2	1	A6-B4	J3-K1
5	φ	0	φ	Ø	O	O	Ø	φ	Φ	$ \varphi $	1	B5-B6	J1-J2
	Ь	5	\mathbf{H}	d			5	\mathbf{H}	d	' Њ	1	C6-D5	G2-H1
4	0	0	0	0			0	0	0	0	1	C4-C5	H2-H3
3	Q	Ø	\bigcirc	Q			Ø	G	Q	Q	1	D4-D6	G1-G3
	I	6	1	~		~	6	I	~	۱L	1	E5-E6	F1-F2
2	Ū.	IΨ.	Û	ω	$ \varphi $	φ	Q	Ū.	φ	0	1	F5-F6	E1-E2
1	d	Ъ	d	(๙	, Ф	Ψ	S	S	Ф	8	1	G4-G6	D1-D3
'		0	\circ	\cup	\cup	\circ	0	\circ	0	0	1	H4-H5	C2-C3
											-	G5-H6	C1-D1
	A	В	С	D	Е	F	G	Н	J	K		J5-J6	B1-B2

Pinout

Pinout for 48-pin functions

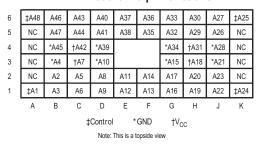

Pinout for 56-pin functions

6	‡A54	A51	A48	A45	A43	A42	A40	A37	A34	‡A31
5	‡A55	A52	A49	A47	A44	A41	A38	A36	A33	‡A30
4	‡A56	A53	†A50	*A46			*A39	†A35	*A32	‡A29
3	‡A1	A4	†A7	*A11			*A18	†A22	*A25	‡A28
2	‡A2	A5	A8	A10	A13	A16	A19	A21	A24	‡A27
1	‡A3	A6	A9	A12	A14	A15	A17	A20	A23	‡A26
	А	В	С	D	Е	F	G	Н	J	К
	‡Control *GND				GND	†V _C	с			

Note: This is a topside view

Package Reliability Data

Test Chip: ALVCH16501, 'B' Die Revision, 85 x 107 mils Preconditioning: JEDEC Level 2 (85°C/60% 168 hr + 3IRR 220°C)	Required Sample Size / #Fails	ALVCH16501GQL Actual Sample Size / # Fails
Simultaneous Switching Life Test (SSLT), 150°C, 300 Hours	39 / 0	39 / 0
Highly Accelerated Life Test (HAST), 130°C, 85% RH, 100 Hours	39 / 0	39 / 0
Temperature Cycle Test, -65°C to 150°C, 1000 Hours	77 / 0	77 / 0
Autoclave, 121°C, 96 Hours	77 / 0	77 / 0
Solderability, 8 Hours	8 / 0	8 / 0
Flammability (UL)	5/0	5 / 0
Flammability (IEC)	5/0	5/0
Thermal Shock	26 / 0	26 / 0
X-Ray, Top View Only	5/0	5 / 0
Physical Dimensions	15 / 0	15 / 0
Manufacturability	pass	pass

Board Level Reliability Data

56 GQL Package Sample Size = 32 Temp Cycle Range -40°C to 125°C No Underfill

Board Thickness (mm)	1.6	0.8	0.8, no Au
0 cycle	0	0	0
250 cycle	0	0	0
500 cycle	0	0	0
750 cycle	0	0	0
1000 cycle	2*	0	0
1250 cycle	15	1	0
1500 cycle	19	8	0
1750 cycle	N/A	20	1
2000 cycle	N/A	N/A	0

* First failure at 951 cycles

t = 0.8 mm, with Au, 50% failure = 1733 cycles

Sockets

Sockets and Socket Manufacturer (Ordering Information)

Yamaichi Socket Numbers:

VFBGA-56 PN# IC280-056-237

Yamaichi Electronics USA, Inc. 2235 Zanker Road San Jose, CA 95131 Phone: (408) 456-0797

Questions and Answers

Board Design/Electrical Issues

Q. Where can the decoupling capacitors go for the VFBGA package?

- A. The recommended capacitance value and number of capacitors for decoupling is a 0.1 mF capacitor for each V_{CC} on the VFBGA package. The decoupling capacitors should be connected as close as possible to the GROUND and V_{CC} planes.
- Q. Any EMI concerns for traces under the package and how can customers design their board to minimize EMI?
- A. EMI can be controlled by minimizing any complex current loops on the PCB trace. Some helpful hints include:
 - Solid ground and power planes be used in the design. Partitioned ground and power planes must be avoided. These ground and power partitions may create complex current loops increasing radiation.
 - Avoid right angles or "T" crosses on the trace. Right angles can cause impedance mismatch and increase trace capacitance causing signal degradation.
 - Minimize power supply loops by keeping power and ground traces parallel and adjancent to each other. Significant package EMI can be reduced by using this method.
 - Use decoupling capacitors as described in the previous question.

Lead-Free

Q. Is TI developing a lead-free version of MicroStar Junior BGAs?

A. Yes, Texas Instruments is working toward eliminating lead in the solder balls to comply with lead-free environmental policies. The lead-free solder is in final evaluation. Only the solder will change, not the package structure or the mechanical dimensions. The solder system under development is based on Sn-Cu-Ag metallurgy. Check with your local TI Field Sales representative for sample availability.

Assembly Process/Yield Considerations

- Q. What size land diameter for these packages should I design on my board?
- A. Land size is the key to board-level reliability, and Texas Instruments strongly recommends following the design rules included in this bulletin.
- Q. Can customers mount MicroStar Junior BGA packages on the bottom side of the PCB board?
- A. Yes, they can and the ideal 2nd reflow profile is the same as the 1st (IR profile is recommended in the bulletin). The root causes for solder ball off are:
 - Excess amount of solder paste during customers board assembly. TI recommends minimizing the amount of solder paste on the bottom side by using a stencil thickness of 0.15 mm with 0.33-mm aperture opening.
 - Moisture absorption also affects the ball off issue. The package was qualified at Moisture Level 2, and has been released at Moisture Level 2A. The first and second reflow must be completed within 4 weeks.

Q. Should I use underfill?

A. No, the package qualification results show that this is not necessary and is only an added process expense.

Q. Can the boards be repaired?

- A. Yes, there are rework and repair tools and profiles available (see references 4 and 7). We strongly recommend that removed packages be discarded.
- Q. How do the board assembly yields of MicroStar Junior BGAs compare to TSSOPs?
- A. Many customers are initially concerned about assembly yields. However, once they had MicroStar Junior BGAs in production, most of them report improved process yields compared to TSSOPs. This is due to the elimination of bent and misoriented leads, the wider terminal pitch than with 0.5-mm pitch TSSOPs, and the ability of these packages to self align during reflow. The collapsing solder balls also mean that the coplanarity is improved over leaded components.

Q. What alignment accuracy is possible?

A. Alignment accuracy for the 0.65-mm pitch package is dependent upon board level pad tolerance, placement accuracy, and solder ball position tolerance. Nominal ball position tolerances are specified at ±50 microns. These packages are self-aligning during solder reflow, so final alignment accuracy may be better than placement accuracy.

Q. Are there specific recommendations for SMT processing?

A. Texas Instruments recommends alignment with the solder balls for the CSP package, although it is possible to use the package outline for alignment. Most customers have found they do not need to change their reflow profile.

Q. Can the solder joints be inspected after reflow?

A. Process yields of 5-ppm rejects are typically seen, so no final inline inspection is required. Some customers are achieving satisfactory results during process setup with lamographic X-ray techniques.

Package (Incoming Inspection)

Q. Is package repair possible? Are tools available?

- A. Yes, some limited package repair is possible, and there are some semi-auto M/C tools available. However, TI does not guarantee the reliability of repaired packages.
- Q. Do the solder balls come off during shipping?
- A. No, this has never been observed. The balls are 100 percent inspected for coplanarity, diameter and other physical properties prior to packing for shipment. Because solder is used during the ball attachment process, uniformly high ball attachment strengths are developed. Also, the ball attachment strength is monitored frequently in the assembly process to prevent ball loss from vibration and other shipping forces.

References

Recommended References:

- 1. MicroStar BGA Packaging Reference Guide SSYZ015
- 2. 96 and 114 ball LFBGA Application Note IDT, Philips Semiconductor and Texas Instruments
- Board Level Reliability Evaluations of 40, 32 and 30 Mil Pitch Ball Grid Array Packages Over -40 to 125°C - Puligandla Viswanadham, Steve Dunford and Ted Carper, Circuit Card Assemblies Center of Excellence Raytheon Systems Co.
- Comprehensive User's Guide for µBGA*Packages www.intel.com/design/flcomp/packdata/297846.htm
- Solder Paste Printing Guidelines for BGA and CSP Assemblies Donald C. Burr, published in SMTJanuary 1999.
- Maintaining BGA Reliability During Rework Stuart Downes and Robert Farrell, published in SMT January 1999.
- 7. BGA Rework Considerations Jennie S. Hwang, published in SMT November 1998.

Internet

TI Semiconductor Home Page

www.ti.com/sc

TI Distributors

www.ti.com/sc/docs/general/distrib.htm

Product Information Centers

Americas

Phone	+1(972) 644-5580
Fax	+1(214) 480-7800
Internet	www.ti.com/sc/ampic

Europe, Middle East, and Africa

Phone

Belgium (English)	+32 (0) 27 45 55 32
France	+33 (0) 1 30 70 11 64
Germany	+49 (0) 8161 80 33 11
Israel (English)	1800 949 0107
Italy	800 79 11 37
Netherlands (English)	+31 (0) 546 87 95 45
Spain	+34 902 35 40 28
Sweden (English)	+46 (0) 8587 555 22
United Kingdom	+44 (0) 1604 66 33 99
Fax	+44 (0) 1604 66 33 34
Email	epic@ti.com
Internet	www.ti.com/sc/epic

Japan

Phone International +81-3-3344-5311 Domestic 0120-81-0026 Fax International +81-3-3344-5317 Domestic 0120-81-0036 Internet International www.ti.com/sc/jpic Domestic www.tij.co.jp/pic

Asia

MicroStar BGA and MicroStar Junior are trademarks of Texas Instruments Incorporated

MicroStar Junior BGA Home Page

www.ti.com/sc/msjunior

Logic Overview Page

www.ti.com/sc/logic

Phone

	0110				
	International	+886-2-23786800			
	Domestic	Local Access Code	TI Number		
	Australia	1-800-881-011	-800-800-1450		
	China	10810	-800-800-1450		
	Hong Kong	800-96-1111	-800-800-1450		
	India	000-117	-800-800-1450		
	Indonesia	001-801-10	-800-800-1450		
	Korea	080-551-2804	-		
	Malaysia	1-800-800-011	-800-800-1450		
	New Zealand	000-911	-800-800-1450		
	Philippines	105-11	-800-800-1450		
	Singapore	800-0111-111	-800-800-1450		
	Taiwan	080-006800	-		
	Thailand	0019-991-1111	-800-800-1450		
Fa	х	886-2-2378-6808			
Email		tiasia@ti.com			
Internet		www.ti.com/sc/apic			

Important Notice: The products and services of Texas Instruments and its subsidiaries described herein are sold subject to TI's standard terms and conditions of sale. Customers are advised to obtain the most current and complete information about TI products and services before placing orders. TI assumes no liability for applications assistance, customer's applications or product designs, software performance, or infringement of patents. The publication of information regarding any other company's products or services does not constitute TI's approval, warranty or endorsement thereof.

