

PACIFIC MILITARY HOLLOW POINTER

DESIGNED FOR USE WITH FULL JACKETED MILITARY CARTRIDGES



AVAILABLE IN:

30 M-I Carbine 8 MM Mauser 30-06 7.35 MM Italian 7.65 Mauser 7.62 Russian 7 MM Mauser

FIG. #1

INSTALLATION PROCEDURE

- 1. Place shell to be hollow pointed into hollow pointer body (9-V12), thread on cap (9-V13) firmly; do not overtighten.
- 2. Thread bushing (9-V10) into top of body and screw down until it rests against bullet; tighten lock nut.
- 3. Insert drill bit (9-V14) into drill holder body (9-V15) and tighten with Allen wrench provided.
- Thread shank (9-V16) into drill holder body (9-V15) and tighten lock nut.

You are now ready to proceed with hollow pointing of your military ammunition.




MANUFACTURED IN THE USA BY PACIFIC GUNSIGHT CO. BOX 4495 LINCOLN 4, NEBRASKA



OPERATING PROCEDURE

- Place shell to be hollow pointed into hollow pointer body (9-V12) and tighten cap. (9-V13)
- Place drill holder shank (9-V16) into electric drill. (¼ inch drill preferred.)
- Insert drill bit into top of bushing (9-V10) as shown in Figure #1, and hollow point the shell. It is best to lubricate the bit frequently with a good grade of cutting oil.
- 4. Unthread cap, remove shell and examine. The hollow point depth should be approximately ¼ inch. (See Figure #2). If any adjustments in depth are needed, they can be readily obtained by raising or lowering drill holder shank (9-V16) and retightening lock nut; remember, you will have to adjust drill bit accordingly.



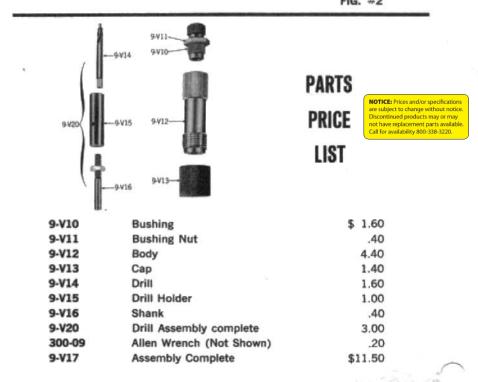

Pacific Gun Sight Company cannot assume any liability for damage which may result from the use of the products or information given herein. This is necessary because Pacific Gun Sight Company has no control over the manner in which products or components are used in the reloading operation.

All prices and/or specifications subject to change without notice