


Installation Instructions – Return Elbow

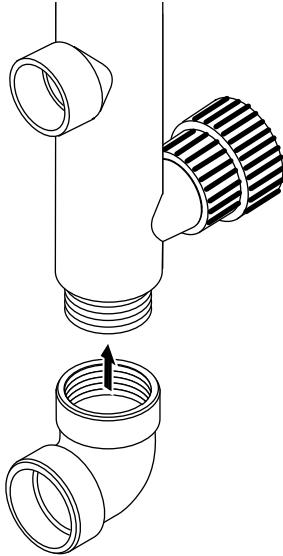

Install the elbow on the bottom of the valve at the job site. Seal the threads with Teflon™ tape (included), Plasto-Joint Stik¹, or RTV silicone.

DO NOT use ordinary pipe joint compound, as it may cause the plastic valve body to crack.

¹ Lake Chemical Co., Chicago, Illinois

™ E.I. DuPont de Nemours and Company Corporation.

Sta-Rite Pool/Spa Group

293 Wright Street, Delavan, WI 53115

North America: 800-752-0183, FAX 800-582-2217

International: 414-728-5551, FAX: 414-728-4461, TELEX: ITT 4970245

Union City, TN • Delavan, WI • Mississauga, Ont. • Murrieta, CA