



SHOCK CORD MOUNT
CUERDA DE TENSION MONTAJE
FIXATION DU SANDOW

(Make a copy if you want to keep instructions.) /
(Tomar una copia si deseas guardar las
instrucciones.) / (Faites une copie si vous voulez
garder les instructions.)


ASSEMBLE ENGINE MOUNT / ENSAMBLAJE DEL SOPORTE DEL MOTOR / ASSEMBLER LE BÂTI MOTEUR

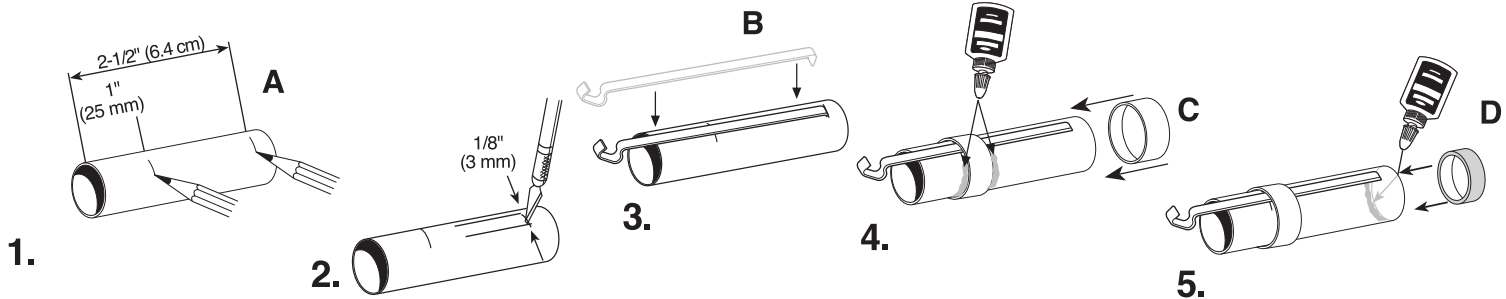


TUBE MARKING / MARCAR EL TUBO / MARQUAGE DU TUBE

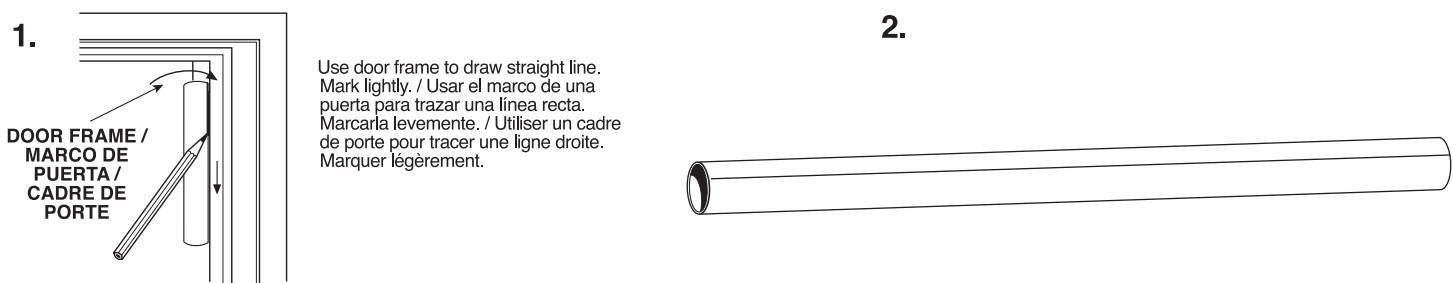


INSTALL ENGINE MOUNT / INSTALAR EL SOPORTE PARA EL MOTOR / INSTALLER LE BÂTI MOTEUR

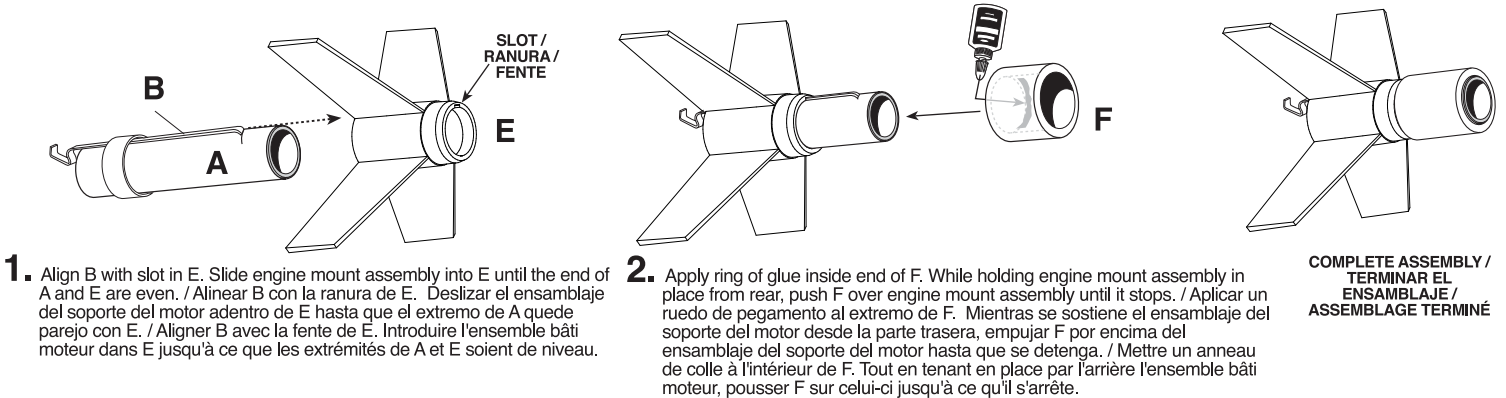


ATTACH BODY TUBE / SUJETAR EL TUBO DEL CUERPO / ATTACHER LE TUBE DU CORPS

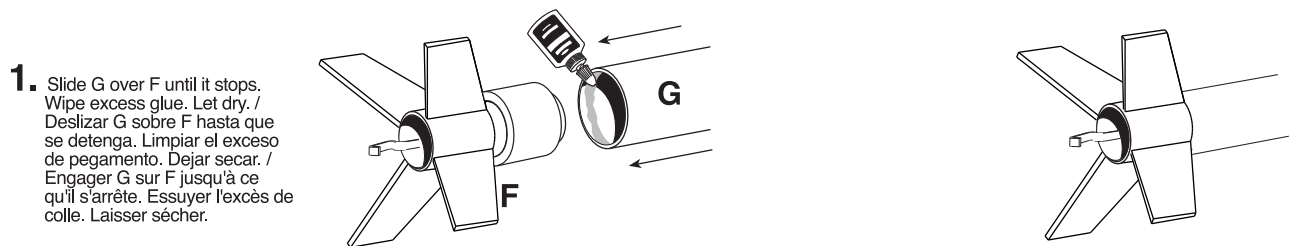


ATTACH LAUNCH LUG RING / PEGAR LA AGARRADERA DE LANZAMIENTO / FIXER LES
COSSES DE LANCEMENTS

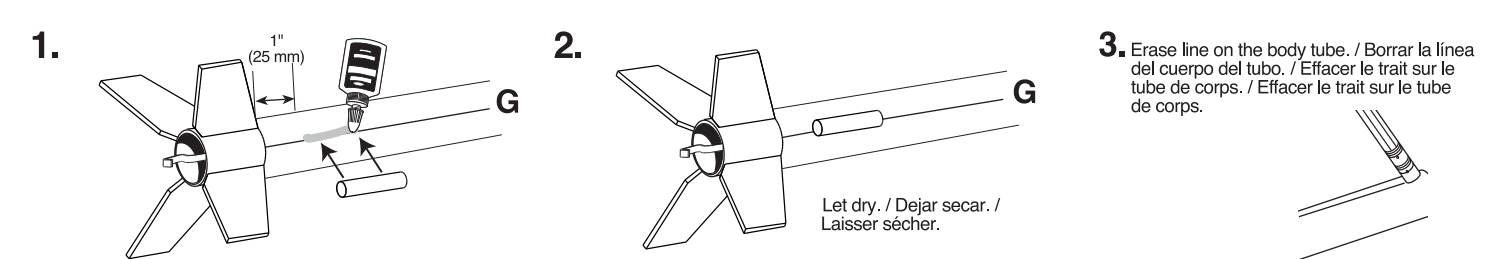


INSTALL SHOCK CORD / INSTALAR LA CUERDA DE TENSION / INSTALLER LE SANDOW

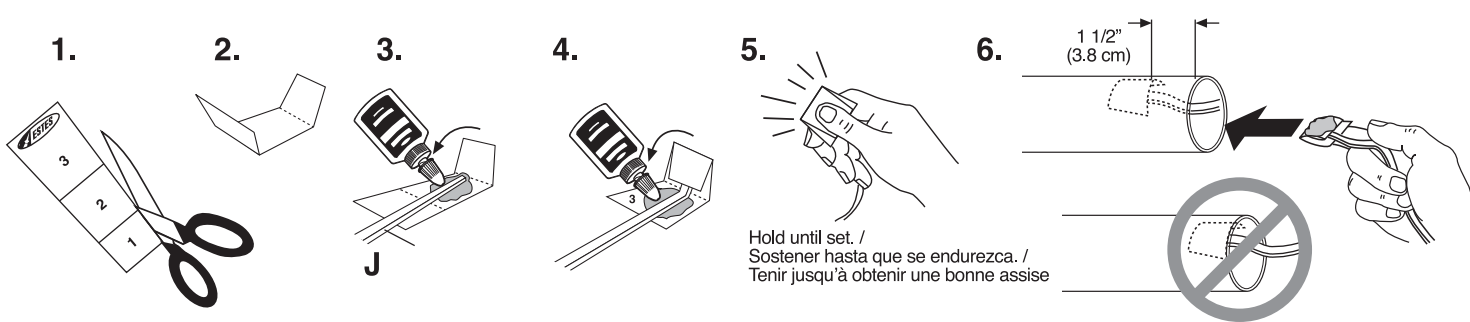

PREPARE RECOVERY SYSTEM / PREPARAR EL SISTEMA DE RECUPERACIÓN / PRÉPARER LE SYSTÈME DE
RÉCUPÉRATION

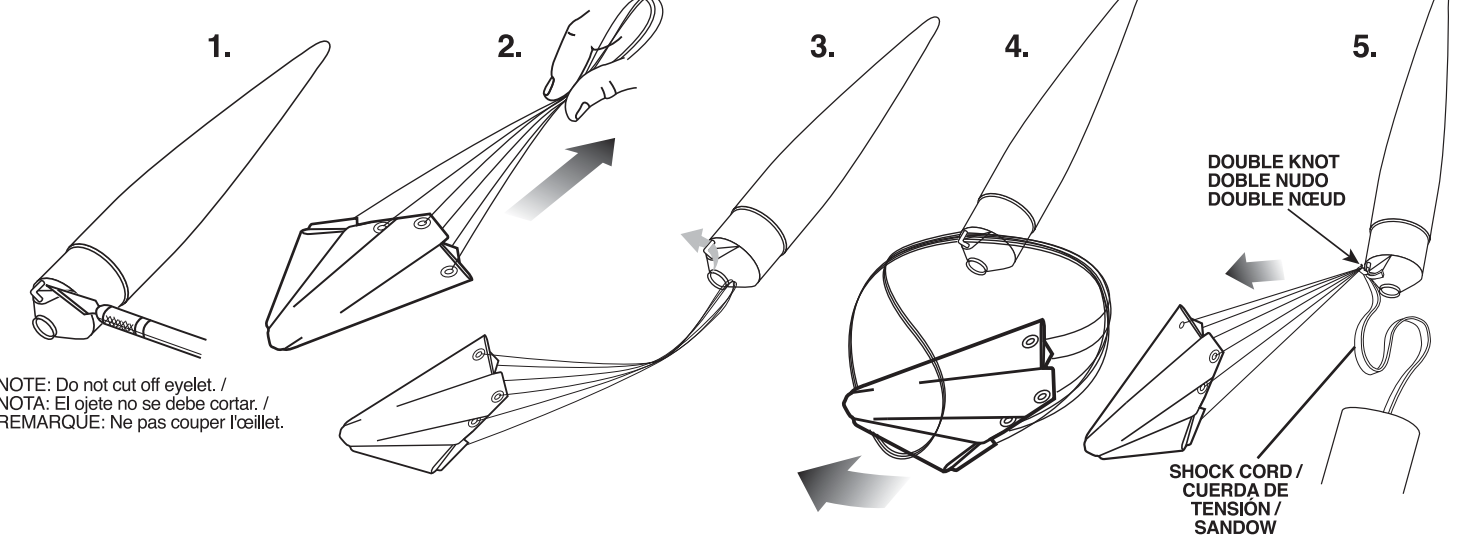

APPLY DECAL / PONER LA CALCOMANÍA / POSER LA DÉCALCOMANIE

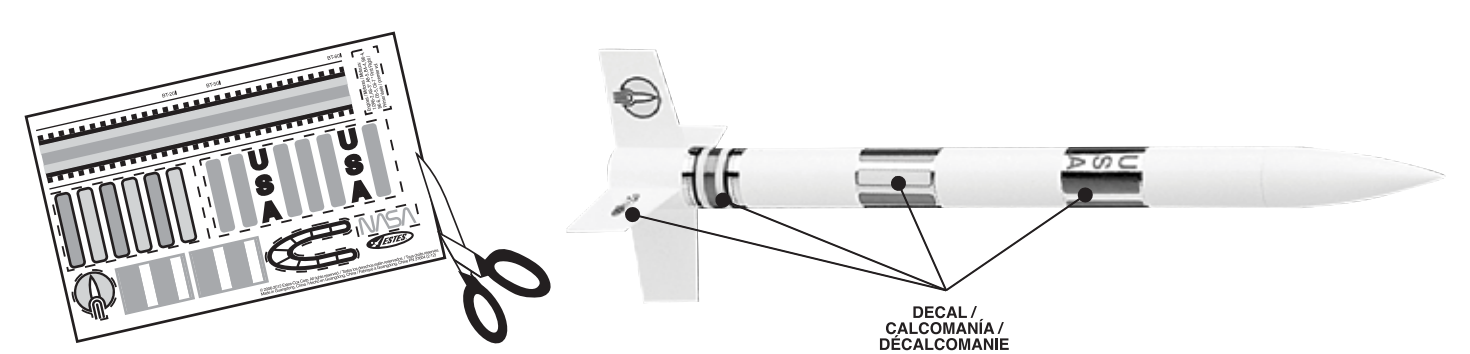

PREPARE FLIGHT RECOVERY / PREPARACIÓN DE LA RECUPERACIÓN DE VUELO /
PRÉPARATION DE LA RÉCUPÉRATION DU VOL

