



Installing this spacer label will help align the logger on the vNet device to prevent bending or breaking of pins when securing a logger. Follow these quick and easy installation instructions to permanently adhere the spacer label to the vNet device.

IMPORTANT: Before proceeding, remove the logger from the vNet device by pressing the button on the left side of the vNet device with a pen and pulling up on the left side of the logger.

Step 1 Peel the adhesive paper strip off the spacer.

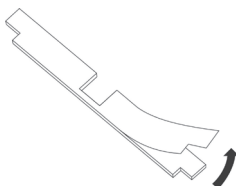


Step 2 Place the spacer face down with the sticky side up. Slide it against the wall of the vNet device so that edges of the spacer fit between the two tabs.

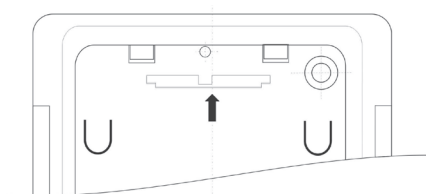


See Reverse

Step 3 Lift the spacer from its horizontal position and place it vertically against the wall of the vNet device (side view is indicated below).

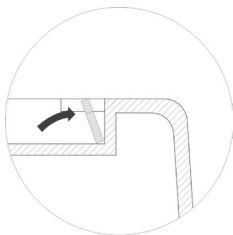

Step 4 Press the spacer firmly against the wall so that it adheres in place.

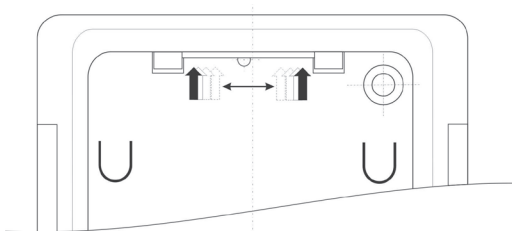

Step 5 Before re-attaching the logger to the vNet device, inspect the vNet connector for any misaligned or bent pins. If you find misaligned or bent pins, contact support as per the information below.

VAISALA

For support or information, call
1-866-861-3388 (or 604-273-
6850) 8am-4pm PST Monday to
Friday, or email [veriteqsupport@](mailto:veriteqsupport@vaisala.com)
vaisala.com

PI215199-A ©Vaisala 2011

This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications — technical included — are subject to change without notice.