




RELAXING**EDGE**

# **OASIS**

## MASSAGE CHAIR

### **USER MANUAL**

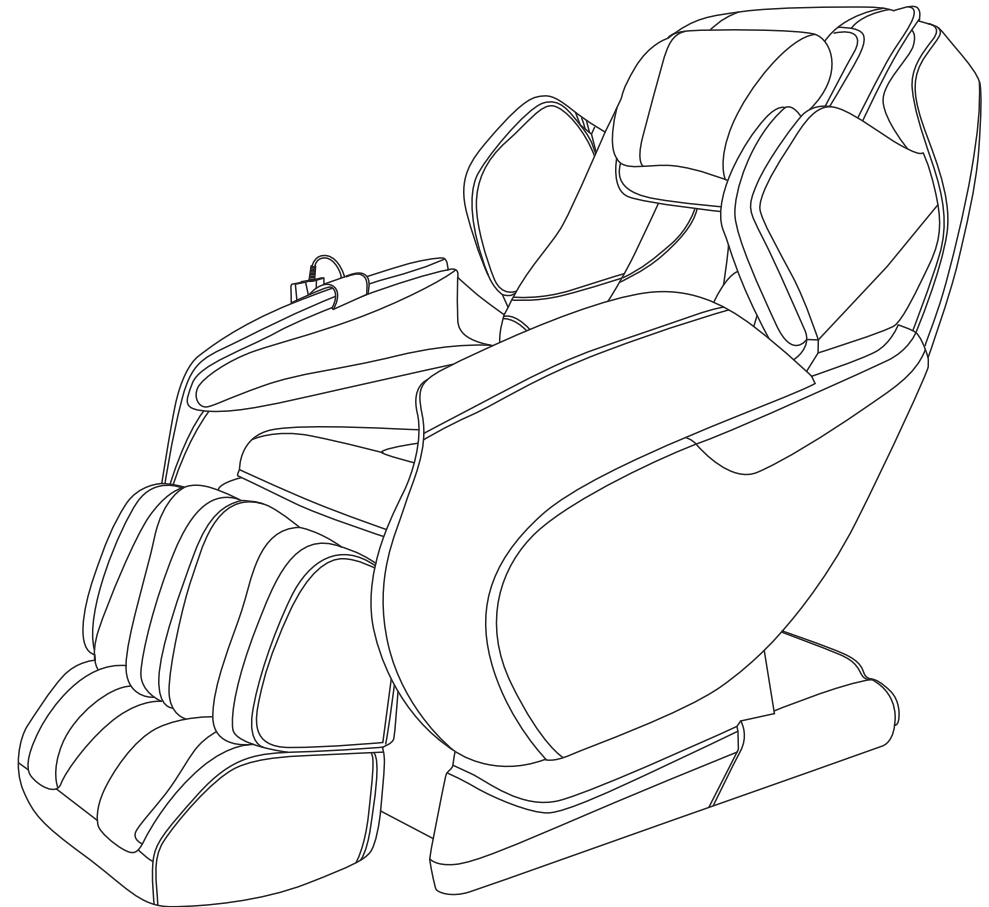

RELAXING**EDGE**

4731 West Post Road, Unit 130  
Las Vegas, NV 89118  
USA: +1 (855) 477-3529  
[info@relaxingedge.com](mailto:info@relaxingedge.com)

[www.relaxingedge.com](http://www.relaxingedge.com)

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

## CONTENTS

---

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	13

## Safety and maintenance

---

### 1. Important Safety Warnings



- Do not allow children to touch any movable part of this product.
- Use the well-grounded power supply unit suitable for this product.
- Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product.
- Operate this product as instructed in this manual.
- Do not use any parts or accessories which are not recommended.
- Do not use this product outdoors.
- Please read the Operation Instructions carefully before operation.
- Never use this product for any other purpose not listed herein.
- 20 minutes of usage each time is recommended.
- Do not use this product if the leather is broken or damaged.
- Do not use this product if the cover or leather is broken or damaged.
- Do not use this product if the radiator hole is covered or blocked.
- Do not drop anything into this product.
- Never fall asleep while using this product.
- Do not use this product if you are drunk or feel unwell.
- Do not use this product within one hour after a meal.
- Do not use this product with excessive force to avoid any injury.
- Do not carry any fragile, explosive, or combustible material in your pocket, such as a mobile phone and lighter when using the massage chair.

### 2. Operating Environment

- Do not use this product in a very moist environment such as the bathroom.
- Stop using this product immediately when the ambient temperature changes sharply.
- Do not use this product in any heavily-dusty or caustic environment.
- Do not use this product in a small space or a place without good ventilation.
- The normal room temperature ranges from 0 °C to 35 °C.
- Do not use this product in an excessively humid room such as a bathroom. Use it at a relative humidity between 20% and 80%.
- Do not use this product outdoors.
- Avoid direct sunlight.
- Keep this product away from any heat source such as a stove and air outlet of an air conditioner.
- Do not use this product during thunder or lightning weather.
- Do not use this product in dusty places.

### 3. The following populations should not use this product:

- Patients with osteoporosis.
- Patients with heart disease or wearing electronic medical devices such as a pacemaker.
- People who have a fever.
- Pregnant women or women on their menstrual period.
- Patients who are injured or have a skin disease.
- When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product.
- People who are told by their physicians to have rest or who feel unwell.
- People whose bodies are wet are forbidden to use this product.
- This product has a hot surface. Persons insensitive to heat must pay attention when using this product.

## Safety and maintenance

---

### 4. Safety Precautions

- Check whether voltage is consistent with the specification of this product.
- Never insert or pull out the plug with a wet hand.
- Do not let water flow into this product to avoid electric shock or cause damage to this product.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.
- Stop using this product at once while it works abnormal, and consult your local supplier.
- Stop using this product if you feel unwell, and consult your health care practitioner.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this product by the personnel responsible for their safety. Children should be supervised to ensure that they do not play with this product.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified staff in order to avoid hazards.

### 5. Product Service and Maintenance

- This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not use a sharp object to stab at this product.
- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.


### 6. Solutions to Ordinary Malfunctions

- If the motor sounds during operation of this product, this is the normal operation sound.
- If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.
- If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

### 7. Storage Conditions

- Storage room temperature: -5 °C to 35 °C.
- Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

## Name and function of components

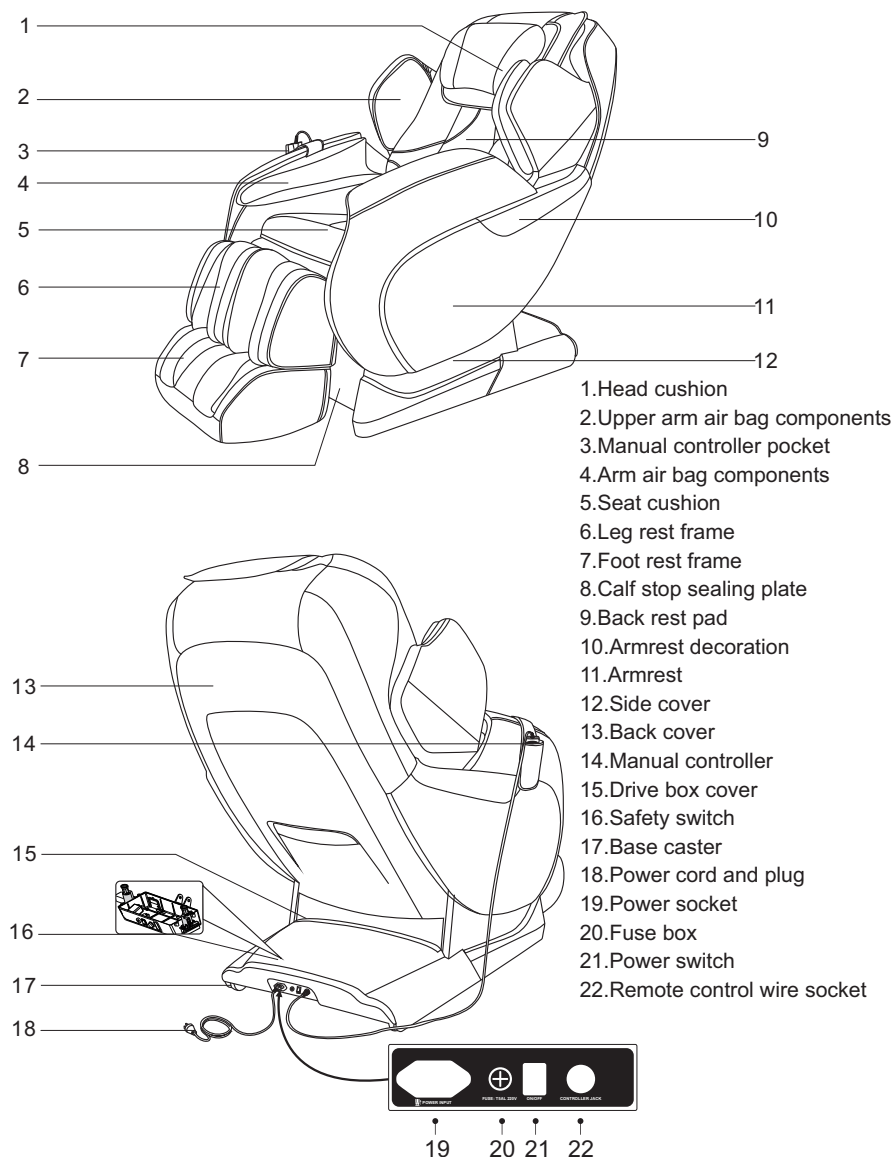


## Function

### Function:

- Designed with a set of vertically movable, four wheel driven muted intelligent massage hands
- Designed with emulation massage methods of shiatsu, kneading, flapping, knocking, simultaneous kneading and flapping
- Set with the shoulder automatic detection and location
- Set with characterized auto massage function: ache-improving, comfort, ease, fast improving experience massage, upper body, lower body six kinds of automatic.
- Set with memory set on function M1 and M2
- Manual massage for the upper body with three options, fixed, partial and overall massage, with five levels of speed adjustable. in the state of flapping, shiatsu and knocking, the width between the two kneading balls is adjustable with three Levels: wide, medium and narrow. On partial and fixed point, the massage hands can move up and down to adjust the massage point accurately.
- Air pressure massage function with three modes: full body air pressure, arms (upper arm set with 4 air bags, arm set with 8 air bags), leg set with 16 air bags, three intensity optional.
- Leg designed with roller massage function at the bottom of foot, two pairs of papillae on toe root rotating massage; on the arch and heel mastoid skin scraping massage.
- On upper arm has two grades width adjustment function(When you adjust to the last grade, to push into the arm about a gear distance then lose your hand and arm device will automatically reset, and so on)in order to adapt to the different shoulder breadth of users.
- Back heating function: carbon fi ber far infrared heat source.
- The footrest use double step less extended to suit for different body heights.
- Backrest frame down slides used technology to deviate from the wall by keeping zero space, reach the maximum space saving
- Leg lifting adjusting, the backrest frame lifting adjusting and automatic lay down mode adjustment function
- L shape back track fitting curves of the body, can realize the zero gravity when back down


Method of usage

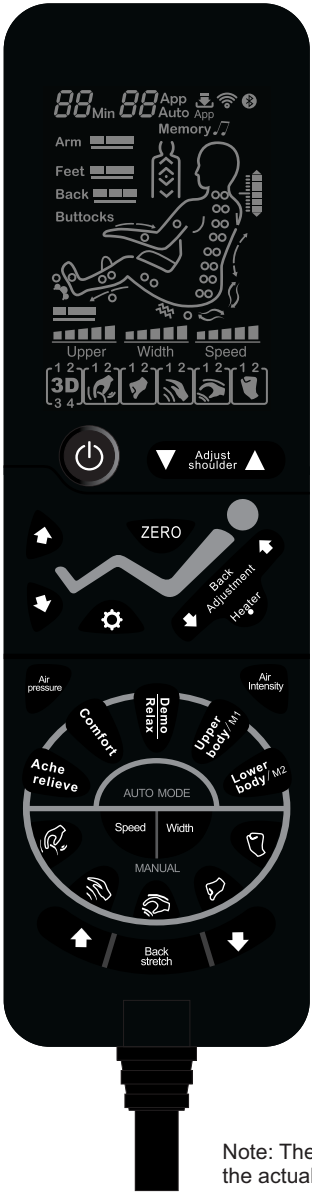

Note: The specific displays referto the actual object of this product!

Method of usage


1.Switch power supply on

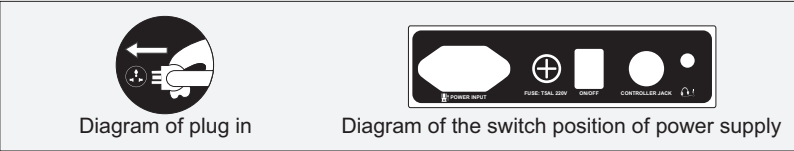

2.Start to massage

- 1). Press power button, massage chair automatically reclining, and start massage.
- 2). Automatic shoulder position and massage acupressure point detection, waiting for the completion of testing.
- 3). If there is difference with the massage balls and the actual shoulder position, youcan adjust the up and down button to a suitable position. Shoulder position has 10 grades adjustable.It will run automatic massage if there is noadjustment on shoulder position within 10 seconds

Button	Description	Display
Adjust shoulder	Move the massage balls upward to a suitable position	Upward arrow icon
	Move the massage balls downward to a suitable position	Downward arrow icon

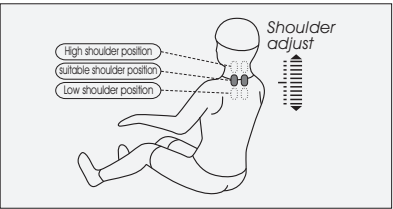







4) Choose massage function to massage

- Memory function massage  
Press button “Upper body / M1 ” or “Lower body /M2 ” for 3 seconds, then enter into memory massage function “M1” or “M2” , it will revert to the previous memory massage mode.















Function	Button	Display
Memory massage	Upper body M1	Menory
	Lower body M2	Menory

## Method of usage













- Characterized auto massage

Function	Button	Feature	Display
Characterized auto massage		Deeply massage on acupressure points, effectively alleviate pain	Auto F1
		Loosen body physique	Auto F2
		Promote blood circulation	Auto F3
		Fast to experience all the massage effect (press for 2S, switch to speed press)	Auto F0
		Massage focus on upper body	Auto F4
		Massage focus on lower body	Auto F5







- Upper body manual massage, lower body manual massage  
1) Upper body manual massage

Function	Button	Adjust Massage Ball	Display
Technique		Speed And Width	
		Speed	
		Speed And Width	
		Speed	
		Speed And Width	
Speed		Three Grades Speed Adjustable	
Width		Three Grades Widths Adjustable	





## Method of usage

Function	Button	Description	Display
Back Stretch		Fixed position (fixed point) massage back and forth	 H0
		Small area (partial area) massage back and forth	 H1
		Overall massage back and forth	 H2
		Upper body massage back and forth	 H3
		Lower body massage back and forth	 H4
		Massage point adjust (in fixed point, partial modes you can adjust the massage position)	Massage hand move up
			Massage hand move down






- Air pressure function massage

Function	Button	Description	Display
Air pressure mode		Three air pressure modes(full body, arm and leg ) for Lower body	Arm  Feet 
Intensity		With three grades adjustable	Arm  Feet 

- Other manual function

Function	Button	Description	Display
Roller		Sole roller: sole roller switch, with 3 speed levels available	
Heating		Far infrared back heating, has warm feeling when it start to work 3 minutes later	



- Other manual function

Function	Button	Description
Calf rise and drop		Calf rest lifting button, press this button, calf restlifting slowly, stop when release it
		Calf rest decline button, press this button, calf rest decline slowly, stop when release it
Backrest rise and drop		Backrest lifting button, press this button, backrest lifting slowly, stop when release it
		Backrest decline button, press this button, backrest decline slowly, stop when release it
Auto lay down mode		with three modes circulation function, when press the button, turn into auto lay downmode.

## Method of usage


### 3. Turn off power, stop massage

- 1) Press power button during massage progress, all massage function will be stop immediately, the backrest and footrest will return to original position automatically, meanwhile you can set up memory function. After rated working time, all massage functions will be finished, meanwhile you can set up memory function, but backrest and footrest won't return to original position.
- 2) Memory store function: After rated working time or switch off, the hand controller displays "Memory" and glitter, remind the users whether need to store the massage mode before turn off, you can press the memory function buttons "M1" or "M2" as you like, store the massage mode.
- 3) Cut off the power of the whole machine.  
Figure (Switch power off)

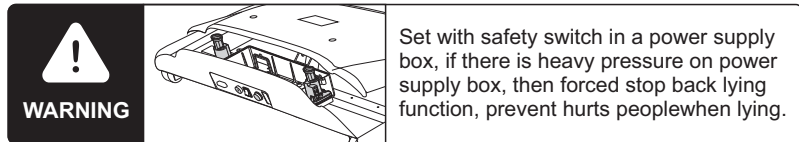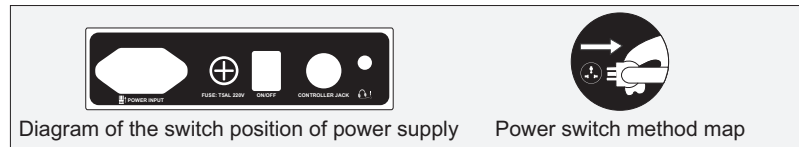


### 4. Calf installation

- Install the rotating shaft in calf fixed axis first, noticed the hole should be aligned, so that the R shape pin assembly (chart 1)
- After calf is connected with the fixed axis aligned, then insert (chart 2)

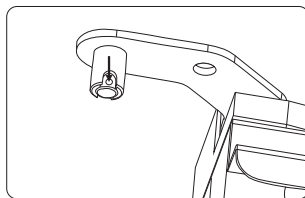


(chart 1)

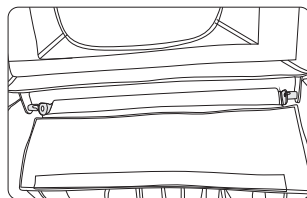


(chart 2)

## Method of usage

- Plug R pin, then moved to the other side of the calf, and the plug R pin (chart 3)
- Finished (chart 4)

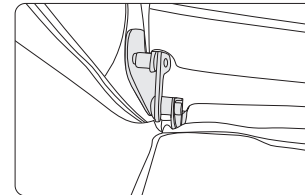


(chart3)

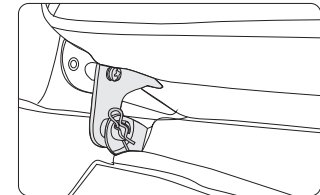


(chart4)

### Note

- When the machine under the working state, with lying and calf rest lifting, you could not apply gravity on the calf, to prevent the massage chair does harm to people before dumping (chart1).
- Ensure the mechanism hands not in the seat part, otherwise will cause uncomfortable in the Buttock when you seating in the chair (chart2).

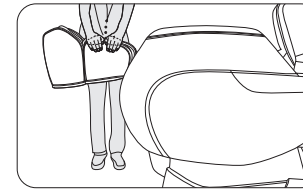



(chart1)

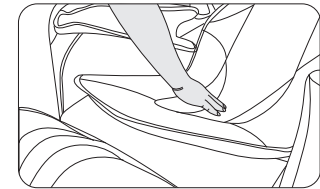


(chart2)

### 5. Head cushions and backrest pad's dismounting and use manual

- Using head cushions can reduce the kneading massage intensity on neck and shoulder, according to your needs to decide whether the head cushions is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushions and backrest pad connected by thread gluing (2).

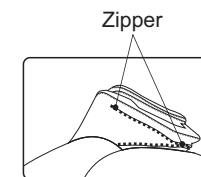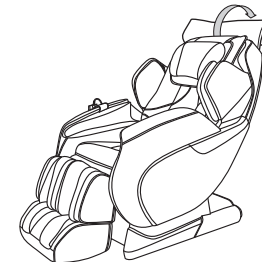

(1)

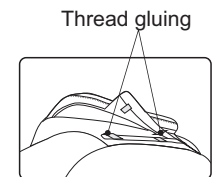


(2)

Method of usage


6.Use double pillow

- Use double pillow to reduce the neck and shoulder massage intensity, so that you can use it as your need. Double pillow can use for different user, you can choose it freely.

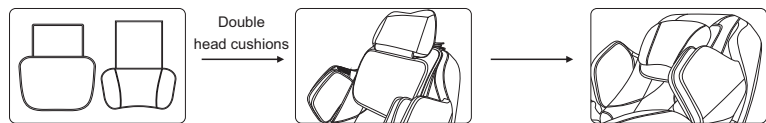

7.Floor Protection

- Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage.

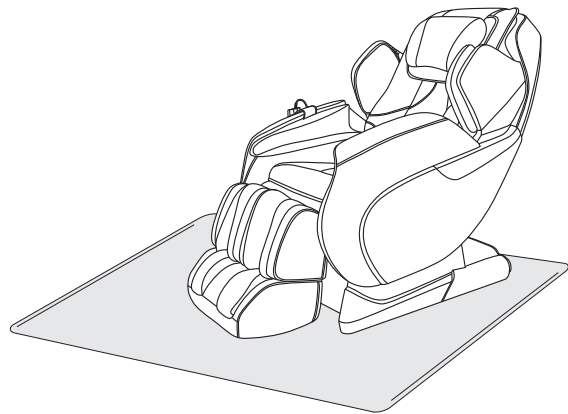


Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf sealing board and backrest cover grooves as the focal point(Please do not lift armrest Directly.)

Method of usage

8.Method of movement

- Make sure that all the wires are pulled away from the massage chair surface; then press the backrest down to a certain angle (with the center of gravity resting on the wheels), you can push the massage chair forward with hands, move it to a suitable position and gently restore it to the normal angle. (Note: During movement, you must turn off the power button first and then unplug the power cord and the remote controller connection wire.)

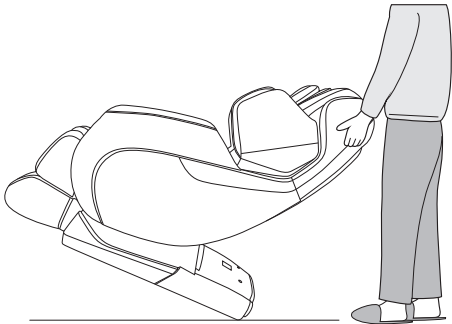

Warning : The rear moving wheels of the massage chair are only suitable for short-distance and slow movement. For long-distance transportation, please use other auxiliary moving tools to move this massage chair!

Product specification

Model: Oasis  
Name: Massage Chair  
Rated voltage: 110-120V~ 60Hz ☐  
220-240V~ 50Hz/60Hz ☐  
Rated power input:150W  
Rated time: 20Min  
Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric &ele-ctron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD