

use



**hp** embedded web server

**hp** LaserJet 2300

**hp** color LaserJet 2500

**hp** LaserJet 4100mfp

**hp** LaserJet 4200

**hp** LaserJet 4300

**hp** color LaserJet 4600

**hp** color LaserJet 5500

**hp** LaserJet 9000mfp



**hp embedded web server**

**user guide**

**© Copyright Hewlett-Packard Company 2003**

All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained in this document or software is subject to change without notice.

EWS v. 5.0

Edition 1, 4/2003

#### **Trademark Credits**

Java™ is a U.S. trademark of Sun Microsystems, Inc.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corp.

Netscape is a U.S. trademark of Netscape Communications Corporation.

# Contents

## 1 Overview

What is an embedded Web server? . . . . .	1
Features . . . . .	1
Additional features with a permanent storage device. . . . .	2
HP Web Jetadmin and the HP Embedded Web Server . . . . .	2
System requirements . . . . .	2
Opening the HP Embedded Web Server . . . . .	2
Navigating through the HP Embedded Web Server . . . . .	3

## 2 Viewing Product Status from the Information Pages

Device Status . . . . .	6
Configuration Page . . . . .	7
Supplies Status . . . . .	9
Event Log . . . . .	10
Usage Page . . . . .	11
Device Information . . . . .	12
Control Panel . . . . .	13

## 3 Configuring the Product from the Settings Pages

Configure Device . . . . .	16
Using the menus on the Configure Device page . . . . .	17
Email . . . . .	18
Configuring outgoing e-mail . . . . .	19
Configuring incoming e-mail . . . . .	19
Alerts . . . . .	20
Using the Alerts page with a product . . . . .	21
Sending e-mail commands to the product . . . . .	23
AutoSend . . . . .	25
Security . . . . .	26
Enabling outgoing e-mail . . . . .	27
Enabling incoming e-mail . . . . .	27
Other Links . . . . .	28
Adding a Link . . . . .	29
Removing a Link . . . . .	29
Device Information . . . . .	29
Language . . . . .	30
Time Services . . . . .	31
Digital Sending . . . . .	32

## 4 Managing Network Operation from the Networking Pages

Overview . . . . .	33
--------------------	----

## 5 Using the Other Links as a resource

hp instant support . . . . .	36
How hp instant support works . . . . .	36
Information you can get from hp instant support . . . . .	36
Order Supplies . . . . .	36
Product Support . . . . .	37

## Index



# 1

# Overview

## What is an embedded Web server?

A Web server provides an environment in which Web programs can run, much in the same way that an operating system, such as Microsoft® Windows®, provides an environment in which programs can run on your computer. A Web browser, such as Microsoft Internet Explorer or Netscape Navigator, can show output from a Web server.

An “embedded” Web server (EWS) resides on a hardware device (such as a printer) or in the firmware, rather than as software that is loaded on a network server.

The advantage of an embedded Web server is that it provides an interface to the product that anyone who has a network-connected computer and a standard Web browser can open and use. No special software needs to be installed or configured.

With the HP Embedded Web Server, you can view product status information, change settings, and manage the product at your computer.

---

### Note

In this guide, the terms “product” and “device” are sometimes used interchangeably. When products or devices are discussed in this guide, the information pertains to HP LaserJet printers, HP color LaserJet printers, and HP LaserJet MFPs unless otherwise noted. For specific information about what features your printer or MFP supports, see the documentation that came with your product.

---

## Features

You can use the HP Embedded Web Server to view product and network status and to manage printing functions from your computer, rather than at the product control panel. With the HP Embedded Web Server, you can do these tasks:

- View control-panel messages and product-status information.
- Determine the remaining life for all supplies.
- Use the **Order Supplies** link to connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
- Gain access to the product's technical support page.
- Gain access to specific support for recent product events.
- View and change tray configurations.
- View and change product configuration.
- View and print information pages, such as the Configuration page.
- Receive alerts about product events, such as when the product is low on supplies, through e-mail.
- Add or customize links to other websites.
- Select the language in which to display the embedded Web server pages.
- View and change network configuration.

## Additional features with a permanent storage device

If you have a permanent storage device installed in your product, such as a hard disk or flash disk, you can view, set up, and retain additional information.

- **Alerts.** Set up four different destination lists, with up to 20 recipients on each of the four lists. (Without the permanent storage device, you can send alerts to only two e-mail addresses.)
- **Other Links.** Add up to five additional links to the websites of your choice. (Without the extra storage, you can add one additional link.)

A hard disk might have come with your product, depending on your product model. If your product does not have a hard disk, you can order one. For more information, see the user guide that came with your product, or go to: [http://www.hp.com/go/buy\\_hp](http://www.hp.com/go/buy_hp) (within the United States) or <http://www.hp.com/country/us/eng/othercountriesbuy.htm>.

## HP Web Jetadmin and the HP Embedded Web Server

HP's Web Jetadmin is a Web-based system management tool that you can use with a Web browser.

The HP Embedded Web Server and Web Jetadmin work together to meet all of your product management needs. You can install and manage networked devices effectively. Network administrators can manage networked devices remotely, from practically anywhere.

The HP Embedded Web Server provides a simple, easy-to-use solution for one-to-one product management in environments that have a limited number of products. However, environments that have several products might want to use HP Web Jetadmin for group product management. With HP Web Jetadmin you can discover, manage, and configure multiple devices simultaneously.

HP Web Jetadmin is available from HP online support (<http://www.hp.com/go/webjetadmin>).

## System requirements

- A Web browser installed on your computer. The HP Embedded Web Server is designed to work best with later versions of most Web browsers. For example, Netscape Navigator 6.2 or later, or Microsoft Internet Explorer 5.01 and later for Macintosh computers or Internet Explorer 6.0 or later for Windows work well with this Web server.
- A transmission control protocol/Internet protocol (TCP/IP)-based network connection.

## Opening the HP Embedded Web Server

### Note

You cannot view the embedded Web server pages from outside of a firewall.

- 1 Open a Web browser.
- 2 In the **Address** or **Go to** field, type the IP address that is assigned to the product (for example, <http://192.168.1.1>) or the host name (for example; [http://www.\[your\\_server\].com](http://www.[your_server].com)).

If you do not know the IP address for the product, it is listed on the Configuration page. See the user guide that came with your product to see how to print a Configuration page at the control panel.



# Navigating through the HP Embedded Web Server

The HP Embedded Web Server has pages that can be used to view product information and change configuration options. You can gain access to these pages by clicking one of the tabs (**Information**, **Settings**, and **Networking**) and then clicking one of the menus on the navigation bar that is located on the left side of the screen.

The following illustration and table provide information about the EWS screens.

The screenshot illustrates the HP Embedded Web Server (EWS) interface for an HP Color LaserJet XXXX printer. The interface is organized into several sections:

- Header:** Displays the HP logo, the printer model (HP Color LaserJet XXXX), and the IP address (15.62.66.172).
- Navigation Bar:** Includes tabs for **Information**, **Settings**, and **Networking**.
- Left Sidebar:** Contains links for **Device Status**, **Configuration Page**, **Supplies Status**, **Event Log**, **Usage Page**, **Device Information**, and **Control Panel**.
- Main Content Area:**
  - Device Status:** Shows the printer's current status, including power save mode and button controls (Pause/Resume, Cancel Current Job, Continue).
  - Supplies:** Displays the remaining toner levels for Black, Cyan, Magenta, and Yellow cartridges, as well as Image Transfer Kit and Image Fuser Kit.
  - Media:** Shows the input/output trays and their status.
  - Capabilities:** Lists printer specifications, including serial number, firmware, duplex mode, and tray capacities.

Challot	EWS screen feature	Description	More information
1	Product name and IP address	View the product name and IP address.	
2	Tabs	<div> <div>Information tab</div> <div>View information about the product. You cannot configure the product from these pages.</div> </div> <div> <div>Settings tab</div> <div>Use the feature on this tab to configure the product.</div> </div> <div> <div>Networking tab</div> <div>View network status and configure the product's network card.</div> </div>	<div>See "Viewing Product Status from the Information Pages" on page 5.</div> <div>See "Configuring the Product from the Settings Pages" on page 15.</div> <div>See "Managing Network Operation from the Networking Pages" on page 33.</div>

Challot	EWS screen feature	Description		More information
3	Menus	Different on each tab	Click a tab to show the menus.	
4	Other Links	hp instant support	Connect to a set of Web resources that help solve problems and describe what additional services are available for your HP product.	<ul style="list-style-type: none"> <li>• See <a href="#">“Using the Other Links as a resource”</a> on page 35.</li> <li>• See <a href="#">“Other Links”</a> on page 28.</li> </ul>
		Order Supplies	Use the Internet to order genuine HP supplies for your HP product.	
		Product Support	Use specific product help from HP's website to solve a problem.	
5	Page content	Different on each menu	Click a menu to show a page.	<ul style="list-style-type: none"> <li>• See <a href="#">“Viewing Product Status from the Information Pages”</a> on page 5.</li> <li>• See <a href="#">“Configuring the Product from the Settings Pages”</a> on page 15.</li> <li>• See <a href="#">“Managing Network Operation from the Networking Pages”</a> on page 33.</li> </ul>

# 2 Viewing Product Status from the Information Pages

The Information pages are for informational purposes only; you cannot configure the printer from these pages. To configure the printer through the EWS, [“Configuring the Product from the Settings Pages” on page 15](#).

The following are the Information pages:

- Device Status (page 6)
- Configuration Page (page 7)
- Supplies Status (page 9)
- Event Log (page 10)
- Usage Page (page 11)
- Device Information (page 12)
- Control Panel (page 13)

---

**Note**

Some products do not support all of these pages.

# Device Status

Use the Device Status page to view the current status of the product. The following illustration and table describe how to use this page.

**HP Color LaserJet XXXX**  
EWS LaserJet XXXX / 15.62.66.172

**1 Information** Settings Networking

**Device Status**

**2** Powersave on

**3** Pause/Resume Button Cancel Current Job Continue

**4 Supplies**

**Toners: (% remaining)**

Black Print Cartridge	19%	Cyan Print Cartridge	59%	Magenta Print Cartridge	99%	Yellow Print Cartridge	24%
Image Transfer Kit	93%	Image Fuser Kit	93%				

[Supplies Details](#)

**5 Media**

Input/Output	Status	Size	Type
Tray 1		ANY SIZE	ANY
Tray 2		11X17	PLAIN
Tray 3		LEGAL	PLAIN
Tray 4		LETTER	PLAIN
STANDARD OUTPUT		N/A	N/A

[Change Settings](#)

**6 Capabilities**

Printer Serial Number: MT60261174  
Firmware Datecode: 20021217 04.009.0  
Duplex: OFF  
Mopier: ON  
4: TRAY 4, 600 Sheets  
3: TRAY 3, 600 Sheets  
2: TRAY 2, 600 Sheets  
1: TRAY 1, 100 Sheets

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Device status	Shows the product’s status (the same as what appears on the control-panel display).
3	Control panel buttons	Use these control-panel buttons just as you would at the product. To select which control-panel buttons appear on this page, go to the Security page on the <b>Settings</b> tab.
4	Supplies	Shows the percentage of life remaining for each supply.
5	Media	Shows the status and configuration information for the input trays and output bins.
6	Capabilities	Lists the accessories that are installed in the product.

# Configuration Page

Use the Configuration page to view current product settings, help troubleshoot printer problems, and verify the installation of optional accessories, such as dual inline memory modules (DIMMs) or paper-handling devices. The following illustration and table describe how to use this page.



EWS LaserJet XXXX / 15.62.66.172  
**HP Color LaserJet XXXX**

**1** Information

Settings

Networking

Device Status

**Configuration Page**

Supplies Status

Event Log

Usage Page

Device Information

Control Panel

Other Links

[hp instant support](#)

[Order Supplies](#)

[Product Support](#)

**2** Device Information

Product Name:	HP Color LaserJet XXXX
Printer Name:	EWS LaserJet XXXX
Printer Model:	C9666A
Printer Serial Number:	MT60261174
Firmware Datecode:	20021217 04.009.0
Service ID:	00000
PS Wait Time-out:	300 seconds
Page Count:	10926
Color Page Count:	9812

**3** Installed Personalities and Options

PCL	(20010402)
PCLXL	(20010402)
POSTSCRIPT	(20010402)
DIMM Slot 1:	Side 1: 16 MB Flash Side 2: 0 MB SDRAM
DIMM Slot 2:	Side 1: 128 MB SDRAM Side 2: Empty
DIMM Slot 3:	Side 1: 128 MB SDRAM Side 2: Empty
DIMM Slot 4:	Empty
DIMM Slot 5:	Empty
EIO1:	HP JetDirect J6057A
EIO2:	Empty
EIO3:	HP J6054B
DISK Storage:	9462 MB Capacity

**4** Memory

Total Memory:	256 MB
DWS:	86.0
Automatic Resource Saving Enabled	

**5** Security

Control Panel Lock:	NONE
Control Panel Password:	DISABLED
Device Type: DISK	Write Protect: DISABLED

**6** Paper Trays and Options

Default Paper Size:	LETTER
Tray 1 Size:	ANY SIZE
Tray 1 Type:	ANY
Tray 2 Size:	11X17
Tray 2 Type:	PLAIN
Tray 3 Size:	LEGAL
Tray 3 Type:	PLAIN
Tray 4 Size:	LETTER
Tray 4 Type:	PLAIN
Duplex Unit	

**Note:** See the table on the following page for information about the callouts.

#### Internal:

##### Input Trays:

- 1: TRAY 1, 100 Sheets
- 2: TRAY 2, 500 Sheets
- 3: TRAY 3, 500 Sheets
- 4: TRAY 4, 500 Sheets


##### Output Bins:

- 1: STANDARD\_OUTPUT, 500 Sheets, Face Down

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Device Information	Lists the serial number, page counts, and other information for the product.
3	Installed Personalities and Options	Lists all of the printer languages that are installed (such as printer command language [PCL] and PostScript [PS]), and lists options that are installed in each DIMM slot and EIO slot.
4	Memory	Lists the memory information, PCL Driver Work Space (DWS), and input/output (I/O) buffering and Resource Saving information.
5	Security	Lists the status of the Control Panel Lock, Control Panel Password, and Write Protect options.
6	Paper Trays and Options	Lists the size and type of media that is specified for each of the trays in the product. If a duplexer or any paper-handling accessories are installed on the product, information about those devices is listed here as well.

# Supplies Status

The Supplies Status page shows more detailed supplies information and provides part numbers for genuine HP supplies. (It is helpful to have the part numbers available when ordering supplies.) The following illustration and table describe how to use this page.



EWS LaserJet XXXX / 15.62.66.172

HP Color LaserJet XXXX

Information

Settings

Networking

1

Device Status

Configuration Page

Supplies Status

Event Log

Usage Page

Device Information

Control Panel

2

Other Links

[hp instant support](#)

[Order Supplies](#)

[Product Support](#)

Supplies Status

Ordering Information:

Hewlett-Packard supplies can be ordered on the internet at <https://www.hp.com/go/ordersupplies-na> or by calling Hewlett-Packard. (Please refer to your printer User Guide for the telephone number).


For highest print quality always use genuine Hewlett-Packard supplies.

3

Black Print Cartridge

19%

HP Part Number: C9730A



Estimated Pages Remaining: 2743

(Based on historical black page coverage of 4%)

Low Reached: NO

Serial Number: 332


Pages printed with this supply: 11694

4

Image Transfer Kit

93%

HP Part Number: C9734A




Estimated Pages Remaining: 111220

Cyan Print Cartridge

59%

HP Part Number: C9731A



Estimated Pages Remaining: 8526

(Based on historical cyan page coverage of 4%)

Low Reached: NO


Serial Number: 631

Pages printed with this supply: 5925

Magenta Print Cartridge

99%

HP Part Number: C9733A



Estimated Pages Remaining: 11716

(Based on historical magenta page coverage of 5%)

Low Reached: NO


Serial Number: 407

Pages printed with this supply: 284

Yellow Print Cartridge

24%

HP Part Number: C9732A



Estimated Pages Remaining: 3629

(Based on historical yellow page coverage of 3%)

Low Reached: NO


Serial Number: 1638

Pages printed with this supply: 11494

Image Fuser Kit

93%

HP Part Number: 110V-C9735A, 220V-C9736A



Estimated Pages Remaining: 139061

**Note:** See the table on the following page for information about the callouts.

Recycling Information:

Please return your used genuine HP supplies to Hewlett-Packard. For more information see: <http://www.hp.com/go/recycle>

ENWW

Supplies Status 9

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Order Supplies	Use this feature to connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
3	Cartridge/Image Drum Information	If available, lists the percent of life remaining and the estimated number of pages remaining before the supply is empty; the total number of pages that have been processed with the supply; the supply serial number and HP part number; and an indication of whether or not the supply has reached the low status.
4	Long-life Supplies Information	If available, lists the percent of life remaining and the estimated number of pages remaining with the supply.

## Event Log

The Event Log shows the most recent printer events, including printer jams, service errors, and other printer errors. The following illustration and table describe how to use this page.

HP Color LaserJet XXXX / 15.62.66.172

**Event Log**

Number of Entries in Use: 22  
Maximum Number of Entries: 50

Number	Page Count	Event	Description or Personality
22	8589	13.12.00	DUPLEX PATH, PAPER LATE JAM
21	8040	55 0404	?
20	8040	55 0000	0.?? PRINTER ERROR
19	7126	54.21.00	Side Registration Sensor Abnormality
18	6668	55 0404	?
17	6668	55 0000	0.?? PRINTER ERROR
16	6584	55 0404	?
15	6584	55 0000	0.?? PRINTER ERROR
14	6561	13.0A.00	TOP OUTPUT BIN, PAPER STOPPED JAM
13	6531	13.0A.00	TOP OUTPUT BIN, PAPER STOPPED JAM
12	6533	55 0404	?
11	6533	55 0000	0.?? PRINTER ERROR
10	5797	41.03.00	LOAD TRAY 3 ? ? 41.3 UNEXPECTED SIZE IN TRAY 3
9	2012	49 4C02	
8	2011	49 4C02	
7	0	49 4C06	
6	2015	49 4C02	
5	1765	55 0404	?
4	1765	55 0000	0.?? PRINTER ERROR
3	1670	13.0A.00	TOP OUTPUT BIN, PAPER STOPPED JAM
2	1668	13.0A.00	TOP OUTPUT BIN, PAPER STOPPED JAM
1	54	81 0180	

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Number	Lists the order in which the errors occurred. The last error to occur has the highest number.
3	Page Count	Lists the number of pages that had been printed from the product when the error occurred.
4	Event	Shows the internal error code for each error.
5	Description or Personality	Indicates whether the error occurred because a problem within a product personality or as a result of a jam.
6	Product Support	Provides access to HP's support website for product-specific troubleshooting information.



# Usage Page

The Usage page gives a page count for each size of media that has passed through the printer, shows the different paper types that were used, and shows the average percentage of toner coverage per page for each color. The following illustration and table describe how to use this page.

## Note

For some products, this page is only available if the product has a permanent storage device installed.

**HP Color LaserJet XXXX**

**Information** Settings Networking

**1** **Usage Page**

**Identification**

S/N: MT60261174  
 Product Name: HP Color LaserJet XXXX  
 Printer Name: EWS LaserJet XXXX

**2** **Usage Totals**

PRINTER Page Size	SIMPLEX Count	SIMPLEX Units	DUPLEX Count	DUPLEX Units	Total
LETTER	1708	1.0	4242	2.0	10192.0
LEGAL	11	1.3	21	2.6	68.9
A4	0	1.0	0	2.0	0.0
EXECUTIVE	0	0.8	0	1.6	0.0
11X17	23	2.0	303	4.0	1258.0
A3	0	2.0	0	4.0	0.0
ENVELOPE #10	0	0.4	0	0.8	0.0
ENVELOPE MONARCH	0	0.3	0	0.6	0.0
ENVELOPE C5	0	0.6	0	1.2	0.0
ENVELOPE DL	0	0.4	0	0.8	0.0
B4(JIS)	0	1.5	0	3.0	0.0
B5(JIS)	0	0.7	0	1.4	0.0
ENVELOPE B5	0	0.7	0	1.4	0.0
CUSTOM	10	1.0	0	2.0	10.0
DPOSTCARD(JIS)	0	1.0	0	2.0	0.0
A5	0	0.5	0	1.0	0.0
8K	0	1.7	0	3.4	0.0
16K	0	0.8	0	1.6	0.0
EXECUTIVE(JIS)	0	1.1	0	2.2	0.0
LETTER ROTATED	0	1.0	0	2.0	0.0
A4 ROTATED	0	1.0	0	2.0	0.0
B5(ISO)	0	1.0	0	2.0	0.0
<b>TOTAL PRINTER USAGE</b>					<b>11528.9</b>

**3** **Black Coverage 3.886%**  
**Cyan Coverage 7.761%**  
**Magenta Coverage 6.381%**  
**Yellow Coverage 7.229%**

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 3.
2	Usage Totals (equivalent)	Indicates the types of pages that have been printed, the number of single-sided pages that have been printed, the number of duplexed pages that have been printed, and the total number of pages that have been printed.
3	Coverage	Indicates the amount of toner used on a page.

# Device Information

The Device Information page shows the device description; asset number; company name and contact person; and the printer's IP address, model, number, and serial number.

**Note** The printer name, asset number, company name, and contact person that appear on this Device Information page on the **Information** tab can be specified on the Device Information page that is located on the **Settings** tab.



EWS LaserJet XXXX / 15.62.66.172  
**HP Color LaserJet XXXX**

Information

Settings

Networking

Device Status

Configuration Page

Supplies Status

Event Log

Usage Page

Device Information

Control Panel

Other Links

[hp instant support](#)

[Order Supplies](#)

[Product Support](#)

Device Information

Device Description:

Asset Number:

Company Name:

Contact Person:

IP Address:

Product Name:

Printer Model:

Printer Serial Number:

EWS LaserJet XXXX

15.62.66.172


HP Color LaserJet XXXX

C9656A

MT60261174

# Control Panel

For products that have a control panel, the Control Panel page shows the product control panel display as if you were standing at the product. Because this view shows the product status, it can help you troubleshoot problems with the product.



EWS LaserJet XXXX / 15.62.66.172  
HP Color LaserJet XXXX





InformationSettingsNetworking

Device Status  
Configuration Page  
Supplies Status  
Event Log  
Usage Page  
Device Information  
Control Panel

Other Links  
[hp instant support](#)  
[Order Supplies](#)  
[Product Support](#)

Control Panel

Powersave on





# 3 Configuring the Product from the Settings Pages

Use the pages on the **Settings** tab to configure the product from your computer. The following are the Settings pages:

- Configure Device (page 16)
- Email (page 18)
- Alerts (page 20)
- AutoSend (page 25)
- Security (page 26)
- Other Links (page 28)
- Device Information (page 29)
- Language (page 30)
- Time Services (page 31)
- Digital Sending (page 32)

---

**Note**


Some products do not support all of these pages.

# Configure Device

You can use the Configure Device page to print information product pages and configure the product *remotely*. The following illustration, table, and example procedure describe how to use this page. The following example shows the **Information** menu options.

**Note** If your product has a control-panel display, these menus are similar to the menus that are available at your product control panel. Some of the product control panel menus are not available from the embedded Web server.

See the documentation that came with your product for more information about the different menus that your product supports.

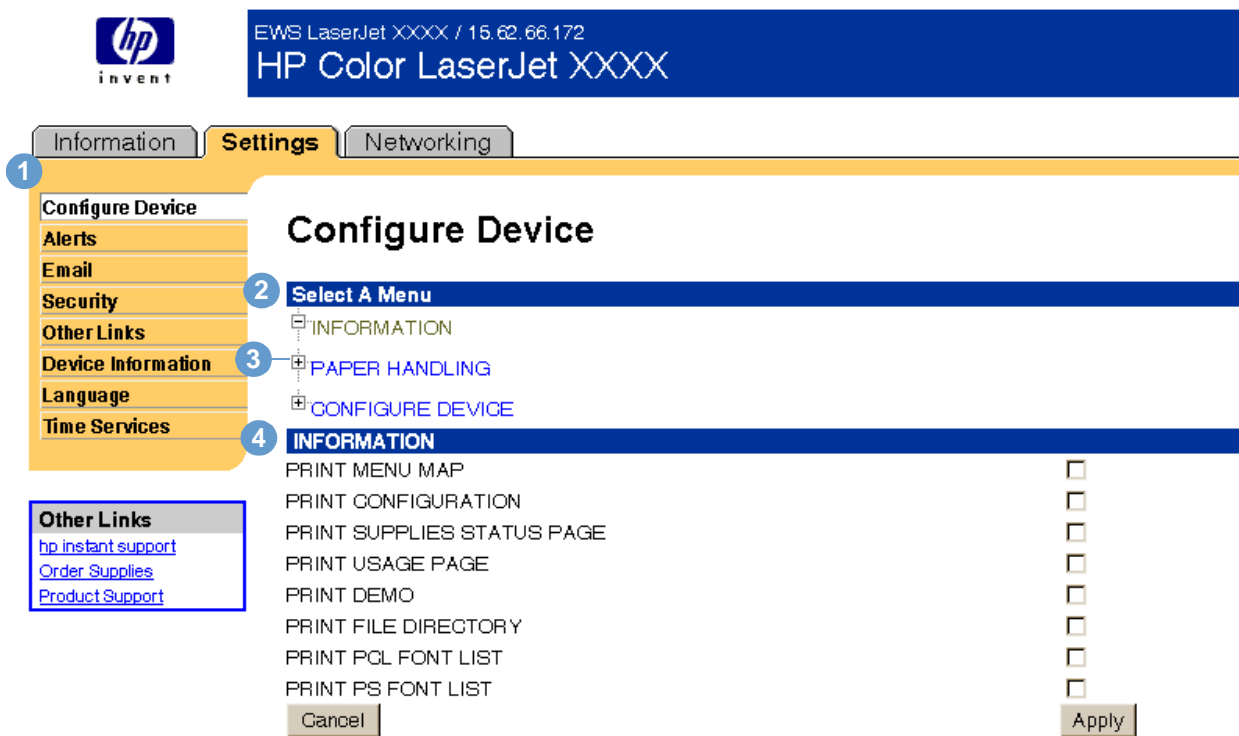

Callout	Area on the page	Information or capability provided by the area	
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server”</a> on page 3.	
2	Select A Menu	<b>Information</b> menu	Print product information pages, which provide details about the product and its configuration.
		<b>Paper Handling</b> menu	Set the type of paper that is in each tray.
		<b>Configure Device</b> menu	Configure the product and thereby affect the product's behavior. For example, you can configure Powersave and product personality settings from this menu.
3	Plus sign	Click the plus sign(+) next to a menu, or click the menu itself, to see the submenus or subentries.	
4	Menu subentries	Gain access to product information or to configure the product.	

## Using the menus on the Configure Device page

This procedure is provided *only* as an example. Other menu items can be set in a similar manner.

---

### Note

Printer drivers and software programs frequently override selections that are made in the **Printing** menu and the **Paper Handling** menu. For more information, see the user guide that came with your product.

Any changes are reflected on the Printer Status page, the Configuration page, and the **Paper Handling** menu.

---

Follow these steps to select the paper size for Tray 1 (example procedure):

- 1 Click **PAPER HANDLING**.
- 2 Next to TRAY 1 SIZE, select **A4** from the list, and then click **Apply** to save the change.

# Email

Use the Email page to configure e-mail settings for outgoing and incoming mail, which allows you to configure product alerts. The following illustration, table, and procedures describe how to use this page.

## Note

For some products, you enable incoming and outgoing e-mail on this page, and for other products you enable e-mail on the Security page.

For some products, this page is called Email Server.

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Outgoing Email	Configure outgoing e-mail if you intend to use the Alerts or AutoSend features. For more information, see <a href="#">“Using the Alerts page with a product” on page 21</a> .
3	Device Email Address	This is the product's e-mail address that appears in product alerts. This is <i>not</i> the e-mail address that you want to use when sending commands to the product. See <a href="#">“Sending e-mail commands to the product” on page 23</a> .
4	Incoming Email	Configure incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see <a href="#">“Sending e-mail commands to the product” on page 23</a> .
5	Set Security	Open the Security page in a new window.



## Configuring outgoing e-mail

It is only necessary to configure outgoing e-mail if you intend to use the Alerts or AutoSend feature.

- 1 Gather the following information. (Your organization's network or e-mail administrator typically provides the information that is required to configure outgoing mail.)
  - The Internet protocol (IP) address of the simple mail transfer protocol (SMTP) mail server on your network. The EWS uses the SMTP Server IP address to relay e-mail messages to other computers.
  - The e-mail domain name suffix that is used to address e-mail messages within your organization.
- 2 Type the SMTP server IP address in the **SMTP Server** text box.
- 3 Type the domain name, and then click **Apply** to save the changes.

## Configuring incoming e-mail

You should configure incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see [“Sending e-mail commands to the product” on page 23](#).

- 1 Establish a Post Office Protocol 3 (POP3) mailbox account for the product on a mail server within your organization's network.

Each POP3 account requires a username and a password. The username combined with the product's domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account username is “product” and the POP3 server is “hp.com”, the product's e-mail address will be “product@hp.com”.

---

### Note

Each product that is configured for incoming mail must have its own POP3 mailbox account on your network's e-mail server.

The POP3 mailbox accounts are typically configured by your organization's network or e-mail administrator.

- 
- 2 Type the IP address of the POP3 mail server in the **POP3 Server** text box.
  - 3 Type username and password for the product's mailbox account, and then click **Apply** to save the changes.

# Alerts

From the Alerts page, you can set up the product to send problem and status alerts to anyone through e-mail messages. More than one individual can receive alerts, with each person receiving only specific alerts. For example, an administrative assistant might be responsible for ordering print cartridges or fixing jams, and could receive advanced warning on cartridge-low situations or be alerted to a jam situation. Similarly, the long-life supplies might be handled by an external service provider who could receive alerts about fuser kits, image drums, and transfer kits. The following illustration, table, and procedures describe how to use this page.

With a permanent storage device, such as a hard disk, installed you can create up to four different destination lists, with up to 20 recipients for each list. (Without the permanent storage device, you can send alerts to only two e-mail addresses.)

## Note

In order for alerts to function, outgoing e-mail must be enabled. To enable outgoing mail, see “Configuring outgoing e-mail” on page 19.

HP invent

EWS LaserJet XXXX / 15.62.66.172

HP Color LaserJet XXXX

Information Settings Networking

1 Configure Device

Alerts

Email

Security

Other Links

Device Information

Language

Time Services

2 Notification Distribution Lists

Edit List1: (your\_name)@(your\_company).com

Edit List2:

Edit List3:

Edit List4:

3 Configure Email Settings

4 Set Security

5 Select Events

Events	List1	List2	List3	List4
<a href="#">Supplies</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Service</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Media Path</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Advisory</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Cancel Apply

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see “Navigating through the HP Embedded Web Server” on page 3.
2	Notification Distribution Lists	Click <b>Edit</b> to create a new destination list or modify an existing list.
3	Configure Email Settings	Open the Email page in a new window.
4	Set Security	Open the Security page in a new window.
5	Select Events	Open the alerts to be sent for each destination list.

## Using the Alerts page with a product

This section contains information about these alerts features:

- [“To configure Alerts” on page 21](#)
- [“To delete destinations and destination lists” on page 23](#)

### To configure Alerts

With a permanent storage device installed, you can set up four different lists, with up to 20 recipients on each of the four lists. Without a hard disk, you have room for only two e-mail addresses.

- 1 If you *do not* have a permanent storage device, type up to two e-mail addresses. Click **Apply** and continue to step 2.

-Or-

If you *do* have a permanent storage device, complete the following steps to change the e-mail list name and add e-mail addresses.

- a. Click **Edit** next to the list that you want to add to or modify.
- b. Type an e-mail address for people who you want to receive alerts, and then click **Add**. In large environments, system administrators can route e-mail addresses to list servers or universal resource locators (URLs) for expanded alerts. You can add one destination at a time and up to 20 total destinations.
- c. For the List Name, type a name, such as Service or Supplies, and then click **Apply**.
- d. Repeat step c to add additional recipient addresses. When you have finished adding recipients, click **Back** to return to the Alerts page.

After you set up the destination lists, you can further refine the event alerts by selecting specific details and options within each event. Continue with the following steps to refine event alerts.

2 Do one of the following:

- Select the check box for an alert category, and then click **Apply** to save your changes. When you select a check box for an alert category, you automatically select all of the individual alerts that are associated with that event category. Continue to step 4.

Alert category	Description
Supplies	Select specific supplies alerts, such as Cartridge Low or Fuser Kit Low.
Service	Select specific events that require service, such as "Printer Error" or "Duplex Error, Check Duplexer".
Media Path	Select events that are associated with the paper path, such as removing a jam or loading a tray.
Advisory	Select advisory events such as "Page too complex" or "Insufficient Memory".

-Or-

- Click an alert category (such as Supplies or Service) to view the individual alerts that are available for that event. Select the individual alerts for each destination list. The following example shows the Supplies Individual Alerts for an HP color LaserJet product.

hp invent

EWS LaserJet XXXX / 15.62.66.172  
HP Color LaserJet XXXX

Information **Settings** Networking

Configure Device  
Alerts  
Email  
Security  
Other Links  
Device Information  
Language  
Time Services

**Alerts**

Follow links to set threshold values

Select Events

Events	List1	List2	List3	List4
Supplies				
<a href="#">Cartridge Low</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Fuser Kit Low</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Transfer Kit Low</a>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Cartridge Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fuser Kit Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Transfer Kit Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Cancel

Email Contents

Help

Apply

Back

[Configure Email Settings](#)

[Set Security](#)

**Other Links**  
[hp instant support](#)  
[Order Supplies](#)  
[Product Support](#)

- 3 Click any individual alerts that are hyperlinks (underlined with blue) to set a threshold value. Set the threshold value for the individual event, and then click **OK** or **Apply**.

The threshold value for Supplies is a percentage, 0 percent through 20 percent, that represents the amount of supply that remains. For example, if you set the threshold value for the “Cartridge Low (Order)” alert at 15 percent, the product sends you an e-mail alert message when 15 percent of the print-cartridge life remains.

The threshold value for service and for the paper path is a user-specified number of minutes. This is the amount of time that an event will be ignored before an e-mail alert message is sent. For example, you might want to set the threshold value for the “Tray Open” alert to 10 minutes to allow someone to close the tray after loading the tray or clearing a jam.

- 4 Click **Email Contents** to select the information that you want to be included with your e-mail alert messages, such as supplies and usage information. You can configure the e-mail contents differently for each alert category.

---

**Note**

For some products, the list of available attachments that can be included as part of all e-mail alerts messages is available by clicking the **Choose Attachments** button, which is located on the main Alerts page.

---

For these products, the selected attachments are used for all destinations or destination lists.

- 5 Click **Apply** to save the information, and then click **Back** twice to return to the main Alerts page.
- 6 Repeat steps 1 through 5 for each additional list.

### To delete destinations and destination lists

- You must delete all of the destination e-mails in a list in order to delete the list.

## Sending e-mail commands to the product

Another method for receiving information pages is by requesting them from the product. When outgoing and incoming mail are configured, the product can attach information pages, such as the supplies status page or Configuration page, to e-mail messages. You can use this feature to solve a problem or check the status of supplies.

### To request information pages by using an e-mail message

When composing a message to the product, you must properly format the **To**, **From**, and **Subject** fields in your e-mail program.

- 1 Enable the outgoing and incoming e-mail by following the instructions that are listed in this chapter. (For more information, see [“Security” on page 26](#).)
- 2 From your e-mail program, compose a message to the product by completing the following steps:
  - a In the **To** field, type the product’s e-mail address. The username combined with the product’s domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account username is “product” and the POP3 server is “hp.com”, the product’s e-mail address will be “product@hp.com”.
  - b Your e-mail program should automatically complete the **From** field as your return e-mail address.

- c In the **Subject** field, type the appropriate text for the format and page that you would like to attach. You can request a Configuration page, a Supplies Status page, or an AutoSend page. For example, if you would like to attach the Configuration page in HTML format, type "this.configpage?configpage=email&format=html".

Page	HTML format	XML format	Text format
Configuration page	this.configpage?configpage=email&format=html	this.configpage?configpage=email&format=xml	this.configpage?configpage=email&format=text
Supplies Status page	this.configpage?suppliespage=email&format=html	this.configpage?suppliespage=email&format=xml	this.configpage?suppliespage=email&format=text
AutoSend page	not applicable	this.configpage?autosend=email&format=xml	not applicable

**3** Click **Send**.

The product checks for new e-mail messages once every 3 minutes. When the product receives the e-mail message, it generates a reply and sends the requested information back to the sender's e-mail address (as specified in the **From** field of the original e-mail message).

---

**Note**


Depending on delays in the network and your organization's mail server, a response might take from 1 minute to several hours to arrive back in your e-mail program's Inbox.

If the **To**, **From**, and **Subject** fields are not properly formatted in your e-mail message, the product does not send a message in response.

---

Use the AutoSend page to send device configuration and supplies usage information periodically to Hewlett-Packard. This feature enables you to have a relationship with Hewlett-Packard that is designed to provide you with services that include but are not limited to proactive cartridge replacement, pay-per-page contracts, support agreements, and usage tracking. The following illustration, table, and procedure describe how to use this page.

**Note** The AutoSend page is only available for the HP LaserJet 2300 series printer.

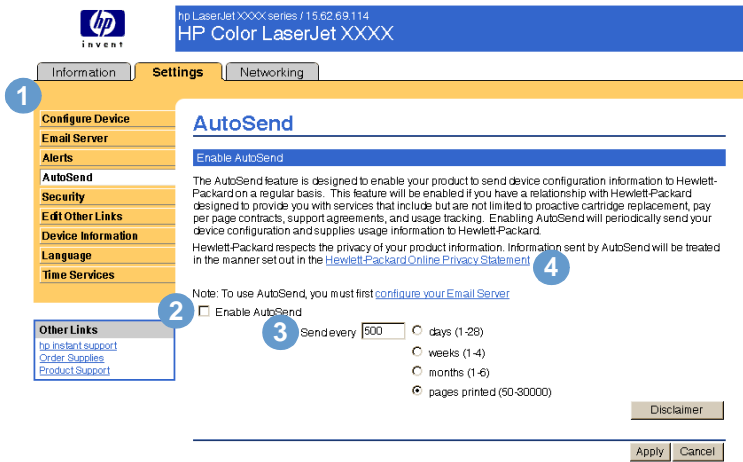

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see “ <a href="#">Navigating through the HP Embedded Web Server</a> ” on page 3.
2	Enable AutoSend	Select this check box to enable the AutoSend feature.
3	Send every [interval]	Select the interval at which you want the product to send the product configuration and supplies usage information to HP.
4	Hewlett-Packard Online Privacy Statement	View more information about how HP treats the information that is sent by AutoSend.

To enable the AutoSend feature

- 1 Enable the outgoing and incoming e-mail by following the instructions that are listed in this chapter. (For more information, see “[Security](#)” on page 26.)
- 2 Select the **Enable AutoSend** check box.
- 3 Click an option to specify the interval at which you want the product to send the product configuration and supplies usage information to HP, and then type the number of days, weeks, months, or pages printed.
- 4 Click **Apply**.

The following illustration and table describe how to use this page.

HP Color LaserJet XXXX / 15.62.66.172

Information **Settings** Networking

**1** Configure Device  
Alerts  
Email  
**Security**  
Other Links  
Device Information  
Language  
Time Services

**2 Password**

A security password can be set to prevent unauthorized users from remotely configuring the printer or gaining access to functionality reserved for the network administrator.

Username: laserjet  
New Password:   
Verify Password:

Cancel Apply

**Security**

**3 Display On Device Status Page**  
☒ Cancel Job Button  
☒ Pause/Resume Button

Cancel Apply

**4 Enable Email**  
☒ Outgoing Mail  
☒ Incoming Mail

**5 [Configure Email Settings](#)**

Callout	Area on the page	Information or capability provided by the area
<b>1</b>	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
<b>2</b>	Password	Set a password to control who can cancel jobs remotely or gain access to the Settings pages. The username is already set as “laserjet”. After the password has been set, users are prompted to type a password when they open the Settings pages.
<b>3</b>	Display on Device Status Page	Select the control-panel buttons that you want to appear on the Device Status page (on the <b>Information</b> tab).
<b>4</b>	Enable Email	Enable or disable outgoing or incoming e-mail.  <b>Note</b> For some products, you enable incoming and outgoing e-mail on this page, and for other products you enable e-mail on the Email page.
<b>5</b>	Configure Email Settings	Open the Email page in a new window.



## Enabling outgoing e-mail

It is only necessary to enable outgoing e-mail if you intend to use the Alerts or AutoSend feature.

---

### Note

After you enable outgoing e-mail, configure it by following the instructions in [“Email” on page 18](#).

- Select the **Enable Outgoing Email** check box, and then click **Apply** to save the changes.

## Enabling incoming e-mail

You should enable incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see [“Sending e-mail commands to the product” on page 23](#).

---

### Note

After you enable incoming e-mail, configure it by following the instructions in [“Email” on page 18](#).

- Select the **Enable Incoming Email** check box, and then click **Apply** to save the changes.

## Other Links

Use the Other Links page to add or customize up to five links to the websites of your choice (see the following note). These links appear on the left navigational bar throughout the embedded Web server pages. Three permanent links (hp instant support, Order Supplies, and Product Support) have already been established. The following illustration, table, and procedures describe how to use this page.

**Note** With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.

Callout	Area on the page	Information or capability provided by the area	
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .	
2	Add Link	Add a user-defined link.	
3	User-defined Links	Lists the user-defined links that have been added. Use this area to delete links.	
4	Other Links	<b>hp instant support</b>	Connect to Web resources that help you to solve specific problems and determine what additional services are available for your product. (Detailed information, including serial number, error conditions, and status, is forwarded to Hewlett-Packard's Customer Care. Hewlett-Packard treats this information as confidential.)
		<b>Order Supplies</b>	Connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
		<b>Product Support</b>	Gain access to specific product help from the HP website.

## Adding a Link

- 1 Under **Add Link**, type the URL and the name as you would like them to appear in the embedded Web server pages.
- 2 Click **Add Link**.

## Removing a Link

- 1 Under **User-defined Links**, select the link or links that you would like to remove.
- 2 Click **Remove Selected Link**.

## Device Information

Use the Device Information page to name the product and assign an asset number to it. You can add the name of the primary contact for information about the product. The product IP address, product model, product number, and serial number are also available on this page.


The screenshot shows the HP Color LaserJet XXXX Device Information page. The page has a blue header with the HP logo and the text 'EWS LaserJet XXXX / 15.62.66.172' and 'HP Color LaserJet XXXX'. Below the header is a navigation bar with tabs for 'Information', 'Settings', and 'Networking'. The 'Settings' tab is selected. On the left side, there is a sidebar with a list of settings: 'Configure Device', 'Alerts', 'Email', 'Security', 'Other Links', 'Device Information', 'Language', and 'Time Services'. The 'Device Information' option is highlighted. Below the sidebar, there is a section titled 'Device Information' with a blue header. This section contains a form with the following fields: 'Device Description' (EWS LaserJet XXXX), 'Asset Number' (empty), 'Company Name' (empty), 'Contact Person' (empty), 'IP Address' (15.62.66.172), 'Product Name' (HP Color LaserJet XXXX), 'Printer Model' (C9656A), and 'Printer Serial Number' (MT60261174). At the bottom right of the form are 'Cancel' and 'Apply' buttons.

**Note** If you make any changes on the Device Information page, click **Apply** to save the changes.

The information that is typed here appears on the Device Information page that can be opened from the **Information** tab. It also appears in e-mail messages that are sent from the product. This might be useful if you need to locate the product to replace supplies or fix a problem.

# Language

Use the Language page to select the language in which the embedded Web server pages appear. The following illustration and table describe how to use this page.

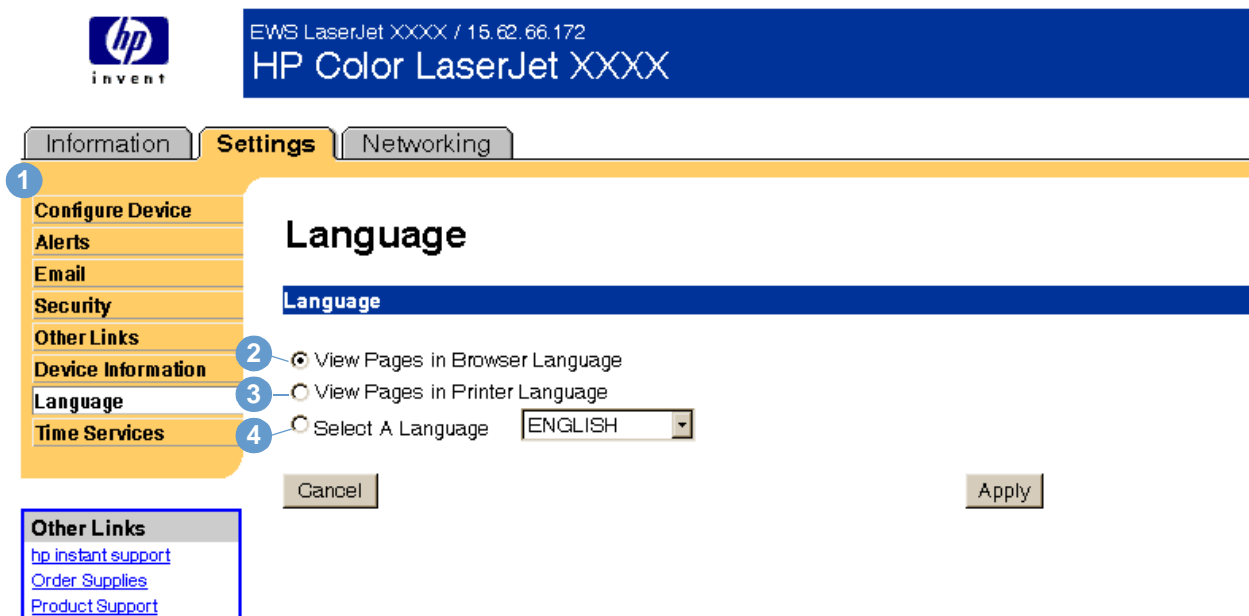

## CAUTION

Selecting **View Pages in Printer Language** or **Select a Language** changes the language for everyone who uses the embedded Web server.

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	View Pages in Browser Language (default)	Use this feature to detect which language is selected for your Web browser and displays the embedded Web server pages in the same language.
3	View Pages in Printer Language	Use this feature to detect which language is selected for the product control panel and displays the embedded Web server pages in the same language.
4	Select A Language	Display the embedded Web server pages in the selected language from these choices: <ul style="list-style-type: none"><li>English</li><li>French</li><li>German</li><li>Italian</li><li>Spanish</li><li>Swedish</li><li>Danish</li><li>Norwegian</li><li>Dutch</li><li>Finnish</li><li>Portuguese</li></ul>

## Note

The default language is the language that the Web browser is currently using. If your browser and control panel both use a language that is not available for the embedded Web server, English is selected as the default.

If you make any changes on the Language page, click **Apply** to save your changes.

# Time Services

Use the Time Services page to update the product time, configure time servers and the port on the network, and specify the frequency with which the product synchronizes with the time service. The following illustration and table describe how to use this page.

The screenshot shows the HP Color LaserJet XXXX Time Services page. The page has a blue header with the HP logo and the text 'EWS LaserJet XXXX / 15.62.66.172 HP Color LaserJet XXXX'. Below the header is a navigation bar with tabs for 'Information', 'Settings', and 'Networking'. The 'Settings' tab is selected. On the left side of the 'Settings' tab is a sidebar with a list of settings: 'Configure Device', 'Alerts', 'Email', 'Security', 'Other Links', 'Device Information', 'Language', and 'Time Services'. The 'Time Services' setting is selected. The main area of the page is titled 'Time Services' and contains the following fields and buttons:

- Current Device Time:** 1 Jan 1970 00:00:00 GMT. A 'Get Time' button is next to it.
- Network Time Server Address:** 15.62.66.176
- Synchronize Time with Server every:** 24 (1-168) hours
- Local Port to Receive Time from Server:** 1230 (1100-1900)
- Time Server Status:** Timeout waiting for response from server
- Buttons: 'Cancel', 'Use Defaults', and 'Apply'.

Callout	Area on the page	Information or capability provided by the area
1	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3</a> .
2	Current Device Time	Shows the Coordinated Universal Time (UTC). This is updated when you open the Time Services page or when you click the <b>Get Time</b> button.
3	Network Time Server Address	Lists the IP address of a Network Time Server that the product uses to set the Current Device Time.
4	Synchronize Time with Server every	Lists how often the product will refresh its current time with the Network Time Server.
5	Local Port to Receive Time from Server	Lists the port that the product uses to retrieve data from the Network Time Server.
6	Time Server Status	Shows the current status of the connection to the Network Time Server.
7	Get Time	When clicked, updates the Current Device Time.
8	Use Defaults	Replaces the current settings with the default settings.

## Digital Sending

For products that have digital sending capabilities, such as an MFP, this page opens a configuration applet for your browser that you can use to configure various digital sending options and settings. Use the Digital Sending pages to do these tasks:

- Add the administrator's contact information: name, e-mail address, phone number, and location.
- Enable and configure the Send-to-Email features of the MFP.
- Enable users to use a centralized network address book.
- View the job information and error events.

---

### Note

Click the **Help** button for more information about the Digital Sending pages.

# 4 Managing Network Operation from the Networking Pages

## Overview

Use the Networking pages to configure and manage your printer on your network. The appearance and features of the Networking pages will differ, depending on the model and version of your HP Jetdirect print server. The following screen is similar to what you might see when you click **Networking**. From the left navigational bar, click the Networking menu for the page that you want to view.

hp invent

EWS5 / 15.62.66.172  
hp color LaserJet XXXX

Information Settings **Networking**

**1**

**CONFIGURATION**  
Network Settings  
Other Settings  
Select Language

**SECURITY**  
Settings  
Authorization  
Mgmt. Protocols

**DIAGNOSTICS**  
Network Statistics  
Protocol Info  
Configuration Page

**2** Other Links  
Help  
Support  
HP Home

### Network Settings

TCP/IP IPX/SPX AppleTalk DLC/LLC SNMP

IP Configuration Method:

**Manual** Note: A change in IP Address will result in loss of connectivity to the browser.

Host Name:

IP Address:

Subnet Mask:

Default Gateway:

Domain Name:

Primary WINS Server:

Secondary WINS Server:

Syslog Server:

Syslog Maximum Messages:

Syslog Priority:

Idle Timeout:  Seconds

TTL/SLP:

System Contact:

System Location:

LPD Banner Page:

Apply Cancel

Callout	Area on page	Information or capability provided by area on page
<b>1</b>	EWS tabs and menus	For more information, see <a href="#">“Navigating through the HP Embedded Web Server” on page 3.</a>
<b>2</b>	Help	Click <b>Help</b> for more information about the options on the <b>Networking</b> tab.

Depending on your HP Jetdirect print server model and operating version, the following are some tasks that you can perform from the Networking pages:

- Change network configuration settings for various types of network connections.
- Enable or disable printing protocols.
- Set up a support contact and support URLs.
- Set up a password to control who can remotely access the Networking pages.
- Configure the security of your product through the use of passwords, access lists, and management protocols.
- View general network status information, including network statistics that are stored on the print server, for network troubleshooting or optimization.
- View protocol information for all supported network connections.
- Display the HP Jetdirect Configuration page.
- Set the frequency at which the embedded Web server checks the network status.


For more information about the Networking pages, see the following sources:

- **Help.** On each Networking page, a Help link under **Other Links** provides a description of the networking features and helpful tips for using them. Also, from the Help page you can gain access to additional help from HP's website.
- **HP Jetdirect Print Server Administrator's Guide.** This guide is normally available on the software CD that came with your product. To download the most recent version of the guide, go to: [http://www.hp.com/support/net\\_printing](http://www.hp.com/support/net_printing).



# 5 Using the Other Links as a resource

The Other Links area contains three permanent links that provide quick access to product-specific information, such as interactive troubleshooting and ordering information for HP genuine supplies.

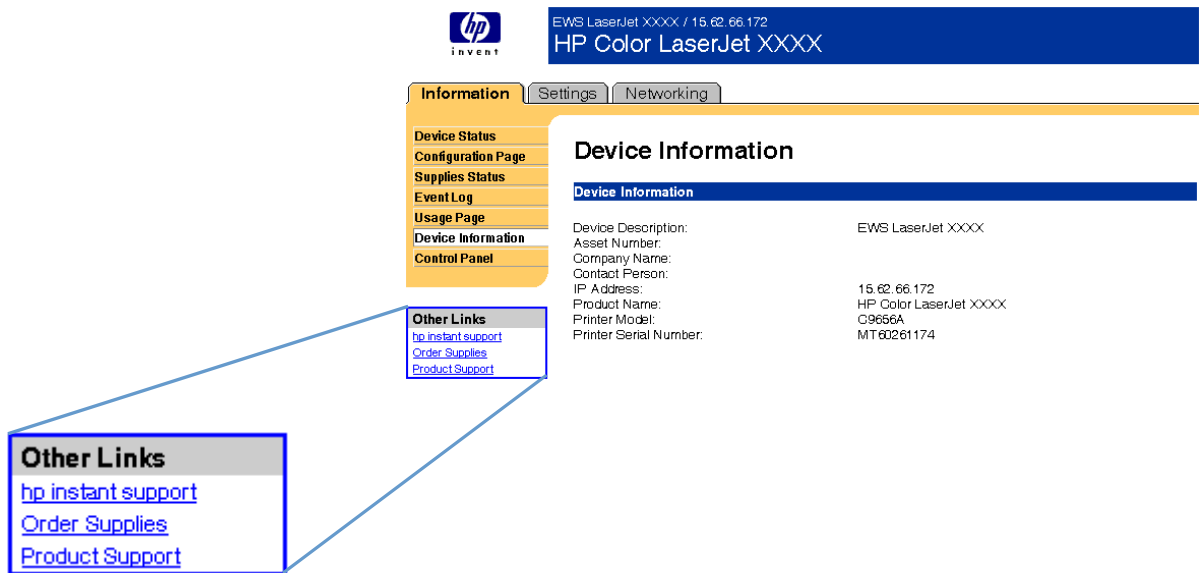

## Note

You can use the Edit Other Links page on the **Settings** tab to add or customize up to five links to the websites of your choice. (With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.) These links appear on the left navigational bar throughout the embedded Web server pages. For more information, see “Other Links” on page 28.

## hp instant support

Hewlett-Packard offers hp instant support, an internet-based support system that collects diagnostic information from your product and matches it with HP's information database. At hp instant support, you can find intelligent solutions that help you resolve problems quickly and easily.

### How hp instant support works

Information is gathered from your product and securely transmitted to Hewlett-Packard when you click **hp instant support**. The hp instant support website reads the product data to analyze the product's current status. The website creates a customized Web page that appears in the browser window and contains easy-to-follow text and visual aids. The hp instant support website also directs you to additional services that are available for your product.

Before any of the product data is sent to Hewlett-Packard for analysis, you can view all of the information (for example, serial number, error conditions, and product status) that will be forwarded. Hewlett-Packard treats this information as confidential.

### Information you can get from hp instant support

The hp instant support website provides these tools for troubleshooting and for maintenance:

- Firmware and software updates.
- Troubleshooting for recent events that are listed on the Event Log. For example, the product might show a jam as the most recent event listed in the event Log. The hp instant support website detects the event and provides troubleshooting information for the jam.
- Support packs.
- Product documentation, such as user guides and getting started guides.

## Order Supplies

The **Order Supplies** link connects you to a Web page that facilitates your online ordering of supplies from a reseller of your choice. The supplies that you need are preselected. You can change quantities or select additional items. Your items are added to the shopping cart, ready for checkout, ensuring that the correct supplies are ordered through your selected reseller.

## Product Support

The **Product Support** link connects you to a Web page that brings together a comprehensive menu of support resources that business people need. From this Web page, you can accomplish these tasks and more:

- Find a list of HP products at one site: desktops, workstations, servers, storage devices, printer, scanners, digital imaging, and mobile devices.
- Obtain technical support. Solve a problem; find information to set up, install, and configure your product; discover and use a product; maintain your product; upgrade and migrate your product software and driver; and recycle products or dispose of them correctly.
- Gain access to self-solve resources such as FAQs, user documentation, features and specifications, and product compatibility information.
- Collaborate with HP and with your peers through discussion groups, e-mail support, and phone support.
- Use task-based navigation to identify the task area that you want to work on and quickly discover related topics and tools.

In addition, you can find these features: hot topics, a subscription center, product rebate offers and other announcements, and training and education opportunities.



# Index

## A

- accessing embedded Web server 2
- accessories, verifying installed 7
- alerts
  - deleting destination lists 23
  - e-mailing information pages 23
  - features 2, 20
  - incoming e-mail configuration 19, 27
  - outgoing mail configuration 19, 27
- asset number 12
- AutoSend 25

## B

- browser, required 2
- buttons, control panel 6

## C

- cartridge
  - ordering 28, 36
  - status 9
  - usage information 11
- Configuration menu 16
- Configuration page 7
- Configure Device page 16
- consumables. *See* supplies
- contact person 29
- control panel
  - buttons 6
  - menus 16
- Control Panel page 13
- counts, page 11
- customer support
  - instant 28, 36
  - product 37

## D

- destination lists
  - defined 20
  - deleting 23
- Device Information page 12, 29
- Device Status page 6
- Digital Sending pages 32
- DIMMs, verifying installed 7

## E

- Edit Other Links page 35
- e-mail
  - alerts 20
  - incoming, configuring 19, 27
  - information pages 23
  - outgoing, configuring 19, 27
- e-mail support 37
- embedded Web server, defined 1
- error messages 10
- Event Log 10

## F

- FAQs 37
- features 1
- firewalls 2

- flash disks, features available with 2

## G

- Go button 26
- group product management 2

## H

- hard disks, features available with 2
- help
  - instant support 28, 36
  - product support 37
- hp instant support 28, 36
- HP Jetdirect Print Server Administrator's Guide 34
- HP Web Jetadmin 2

## I

- incoming e-mail configuration 19, 27
- Information menu 16
- information pages
  - available 5
  - e-mailing 23
- ink cartridge. *See* print cartridge
- IP address
  - e-mail configuration 19
  - locating 2, 12
- IP-based network 2

## J

- Jetadmin, HP Web 2
- Job Cancel button 26

## K

- keys, control panel 6

## L

- Language page 30
- links
  - editing 28
  - features 2
- log, event 10

## M

- mailbox configuration 19, 27
- media usage 11
- memory, verifying installed 7
- menus, control panel 16
- messages, error 10

## N

- navigating 3
- Networking pages 33
- networks
  - types supported 2
  - Web Jetadmin 2

## O

- online help
  - instant support 28, 36
  - product support 37

- opening embedded Web server 2
- ordering
  - hard disks 2
  - supplies 28, 36
- Other Links area 35
- Other Links page 28
- outgoing mail configuration 19, 27

## P

- page counts 11
- Paper Handling menu 16
- paper usage 11
- password 26
- phone support 37
- POP3 configuration 19, 27
- print cartridge
  - ordering 28, 36
  - status 9
  - usage information 11
- product support 37

## R

- recycle supplies 37
- remote configuration 16

## S

- Security page 26
- serial number 12
- Settings pages 15
- status
  - alerts 20
  - e-mailing information pages 23
  - network 33
  - supplies 9
- supplies
  - AutoSend feature 25
  - ordering 28, 36
  - status page 9
  - usage information 11
- Supplies Status page 9
- support
  - instant 28, 36
  - product 37
- system requirements 2

## T

- technical support
  - instant 28, 36
  - product 37
- Time Services page 31
- toner cartridge. *See* print cartridge
- troubleshooting
  - Configuration page 7
  - instant support 28, 36
  - product support 37

## U

- usage information, AutoSend 25
- Usage page 11
- username 26

## W

- Web browser, required 2
- Web Jetadmin 2
- websites, support
  - instant 28, 36
  - product 37





i n v e n t

copyright © 2003  
Hewlett-Packard Company

[www.hp.com](http://www.hp.com)