



INTELLibed® SLEEP GENIUS™

INTELLIBED SLEEP GENIUS SMART BASE OWNER'S MANUAL

SERIES 3030

CONTENTS

- 1-2 Safety Precautions and Usage Statements
- 3 Parts List
- 4 Base Overview
- 5 Quick Reference Guide
- 6-7 Installation Guide
- 8-9 Remote Control
- 10 Headboard Bracket Installation Guide
- 11 Battery Backup Strap.
- 12-13 Setting Up Two Bases
- 14 Bluetooth Setup
- 15 Pair Remote.
- 16 Sound Bar Setup
- 17 Troubleshooting



SAFETY PRECAUTIONS AND USAGE STATEMENTS

Attention: Important Safety Disclaimers

Read all instructions before using your adjustable base. Save these instructions.

To reduce the risk of shock, burns, fire or injury:

Always unplug the base from the electrical outlet before servicing any part of the base. To reduce risk of electric shock, unplug the base before cleaning. To safely disconnect, ensure the base is in a flat position with all motors off, and unplug from power source. Keep the power cord away from heated surfaces. Never operate the base when the air openings are blocked. Keep air openings free of lint, hair and the like. Do not drop or insert any object into any opening.

Discontinue use of the bed base and contact a qualified service center if: it has a damaged cord or plug, if it is not working properly, or it has been dropped into water.

Only use this bed base for its intended use as described in this manual. Do not use accessories/attachments that are not recommended by the manufacturer.

Close supervision is required when the bed base is used by or near children, convalescents or disabled persons.

Outlet Safety:

For optimal safety and operation, plug bed base into a surge protector (not included).

The bed base should only be plugged directly into a wall outlet or surge protector (strongly recommended). Improper connection of the equipment can result in the risk of electrical shock, electrical fire or faulty operation of this bed base. If the plug does not fit your outlet, contact a qualified electrician to install a suitable outlet. Unauthorized modification or failure to use a wall outlet or surge

protector could void the electrical portion of your warranty.

Warranty Warning:

Do not open or tamper with control box, motors, or remote (with the exception of battery compartments). The warranty will be void if the internal workings of these components are tampered with. For complete warranty information visit www.ergomotion.com or refer to the warranty card included with the base.

In-Home Use and Hospital Disclaimer:

Ergomotion adjustable bed bases are designed solely for in-home use. This base was not designed as a hospital bed and is not designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or near explosive gases.

Pacemaker Notice:

It is possible that some pacemakers may falsely interpret the optional massage feature vibrations as movement/exercise. This is a common occurrence with any product that creates a vibrating movement and may not affect the pacemaker. Please consult your physician before using the massage feature.

Pets and Small Children:

Immediately dispose of all packing materials as it may pose a smothering risk to small children and pets. To avoid injury, it is not advised to allow children and small pets to play on or under the bed. Children should not operate the bed base without adult supervision.

Safety Features:

SAFETY PRECAUTIONS AND USAGE STATEMENTS

Castors (optional leg accessory) are equipped with locking wheels to prevent unwanted movement. Even when locked and unable to roll, it is possible for the casters to slide. Free release head and foot motors are designed to lower the mattress by retracting only with gravity, never pulling downwards, which minimizes pinch points.

Product Ratings:

The lift motors are not designed to operate continuously for more than [2] minutes in an [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

Weight Limits:

This product is not rated to support weights exceeding 850 pounds. This product is not rated to support weights in excess of 850 pounds inclusive of the mattress and bedding. The base will structurally support this weight, provided it is evenly distributed across the bed base. The adjustable base is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty

Acoustics:

The massage function will emit a noticeable tone during operation. As the massage intensity level is increased, the tone will intensify. The volume of this tone is directly related to the location environment. For example, when demonstrated in a show room, the surrounding environmental noise will cover some of the massage noise. However, when installed in a home setting with wooden floors, carpeted or not, the massage volume will be more noticeable. In normal base operation, the wheels which allow the bed to maintain its distance from the wall, will make contact with the steel platform supports of the base creating a contact noise. When

entering, exiting or shifting weight on the base, this contact noise may be audible as the wheels make contact. This is normal.

Fabric Care:

To prolong the life of your fabric, protect from direct sunlight whenever possible. For spot cleaning, wipe area with a light damp sponge or vacuum with a soft brush attachment to remove particles. Keep at a minimum of 30cm (12 inches) away from direct heat sources.

For deeper cleaning, blot liquid spills with a clean dry cloth. Wipe with a clean cloth dampened with warm water. Do not wet excessively. A soft bristle brush may be used to remove ingrained soil. Avoid scratching by gentle brushing. Wipe with a clean cloth dampened with warm water to remove residues. Dry in shade away from direct heat.

If persistent marks remain visible after cleaning, seek professional advice

FCC Compliance: SAVE THESE INSTRUCTIONS.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's right to operate the device.

Radio Frequency: 2.4 GHz

PARTS LIST

Before discarding the packing materials- ensure all the parts are accounted for.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.

- A) Wireless Remote Control and (3) AAA batteries
- B) Mattress Retainer Bar (1)*
- C) Legs (4)
- D) Power Cord (1)
- E) Power Supply (1)
- F) Battery Backup Strap (1)*
- G) Connecting Strap*‡
- H) SmartSync™ Cord (1) ‡
- I) Sound Bar

Misc Parts (not included):


- J) Surge Protector (1)
- K) 9 Volt Batteries (2)

* These items are attached to the base for shipping purposes. Carefully remove from base and set aside.

‡ Only included in Twin, Twin Long, Queen Split and Cal King Split bases.


A) 	B)* 	C) 
D) 	E) 	F)* 
G)* ‡ 	H) ‡ 	I) 
MISC-NOT INCLUDED		
J) 	K) 	

BASE OVERVIEW

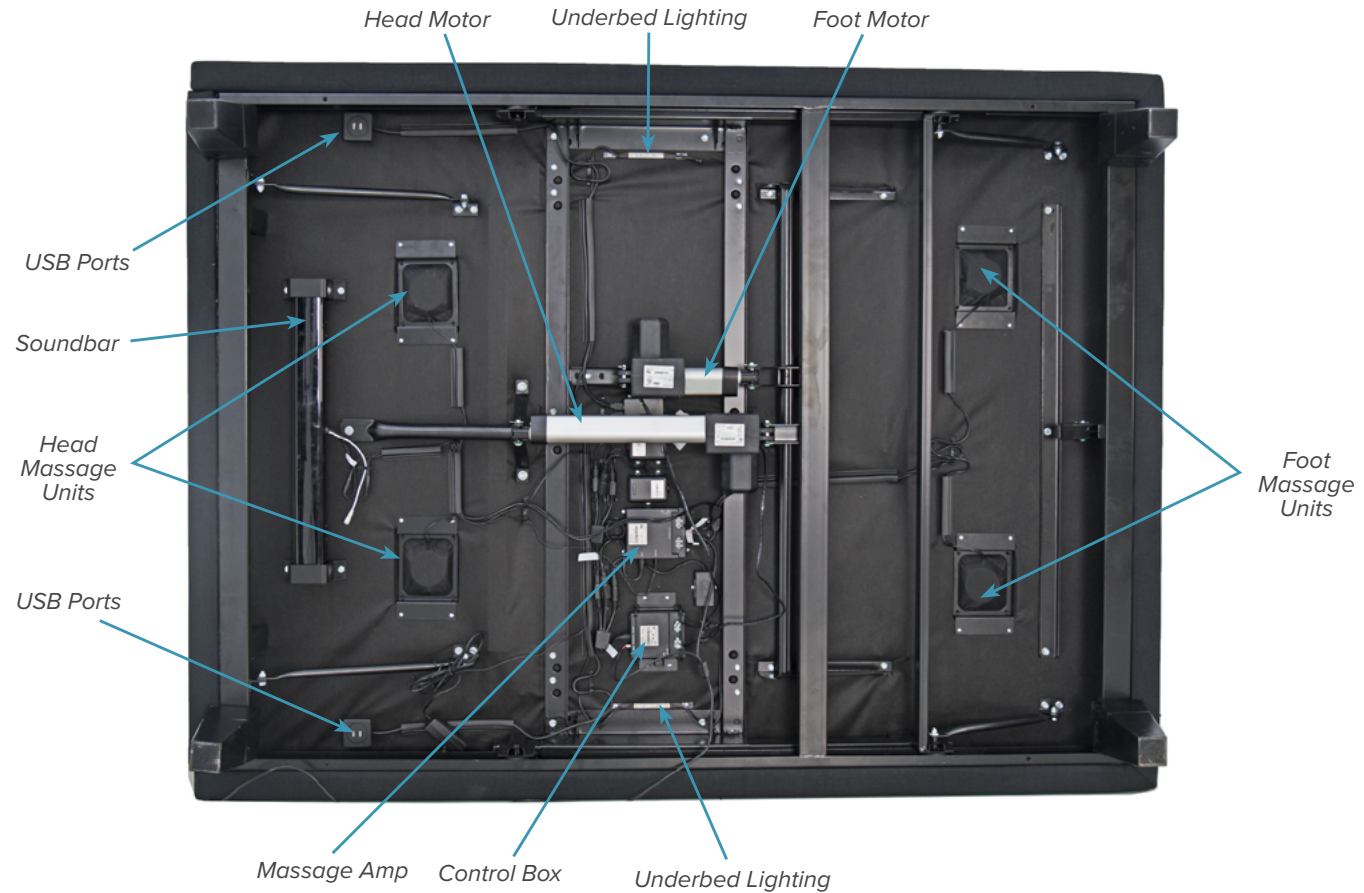

QUICK REFERENCE GUIDE

Not to scale. For illustration purposes only. Read all instructions before beginning installation.

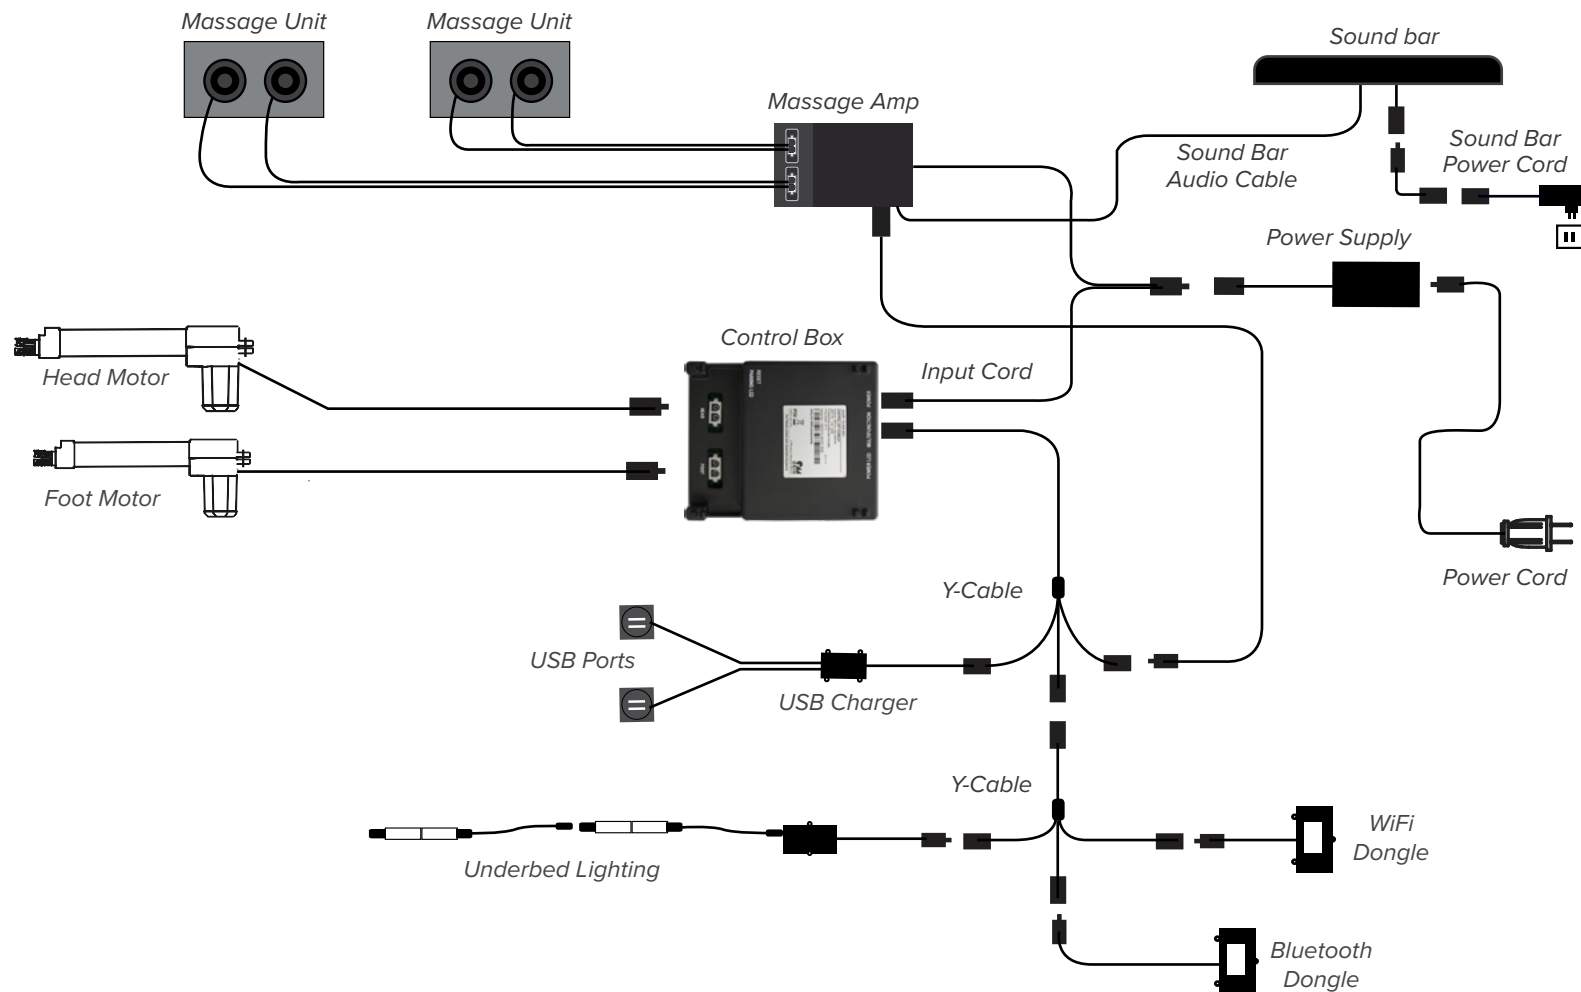

INSTALLATION GUIDE

Always use two people when setting up the base.

STEP 1

Place the bed base box in a desired location with the bottom of the box facing up.

Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.



STEP 2

Remove the bed base from the box keeping the bottom of the base facing upwards.

STEP 3

To install headboard brackets: See detailed installation instructions on page 10.

To install the legs, thread the washer over the screw on the leg. Next, screw the leg into the nutsert on the frame. **Do not over tighten.**



The legs untwist into separate sections for custom leg height options.

STEP 4

To sync two bases with the SmartSync™ cord - see pages 12-13.

Locate the Battery Backup Strap. Ensure that it is easily accessible when the base is turned to its upright position.



INSTALLATION GUIDE

STEP 5

Uncoil input cord (connected to control box's power port) and plug into Power Supply.



STEP 6

Uncoil the Power Cord and connect to the Power Supply. Place Power Supply on the ground and extend from the base. Ensure that the Power Supply and all attached cords are directed toward the desired surge protector.



STEP 7

Carefully flip the base over on to its legs. **Important:** Two people are required to move the bed base. Do not drag across the floor. Do not rest frame on its side, excessive pressure may damage the legs.

STEP 8

Plug the base into a power source. **A surge protector is strongly recommended.**



STEP 9

Ensure batteries are correctly installed in the back of the remote.

Quickly test functions to verify proper setup before placing mattress on base. Press FLAT to return the base to a flat position.

STEP 10

Insert each end of the mattress retainer bar into the inserts at the foot of the base until the retainer bar is secured in place.



Basic setup is now complete! See page 8-9 for remote control operating instructions.

REMOTE CONTROL

REMOTE OVERVIEW



MESSAGE FEATURE



The HEAD button will turn on the head massage. Cycle through 3 massage intensities.



The FOOT button will turn on the foot massage. Cycle through 3 massage intensities.



The TIMER/ALL OFF button starts massage at level 2. Select a 10, 20 or 30 minute message interval. Pressing a fourth time will turn off massage.



The lights on the top of the remote indicates a 10, 20 or 30 minute timer setting. Massage will automatically shut off after 10 minutes if the massage timer isn't set.



REMOTE CONTROL

ADJUST



The HEAD ▲ ▼ arrows lift and lower the head section of the base.



The FOOT ▲ ▼ arrows lift and lower the foot section of the base.



ONE TOUCH BUTTONS

ZERO G

One touch ZERO-G preset position. Zero-G adjusts your legs to a higher level than your heart helping to relieve pressure off the lower back and promote circulation.



One touch FLAT preset position.



Preset Position #1



Preset Position #2



Preset Position #3



TO PROGRAM THE PRESET POSITIONS:







Articulate the head and foot to your desired position. Next, press and hold one of the preset buttons [I, II, III] for 7 seconds. The position is now saved.

NOTE: To restore the preset buttons back to their original factory settings, hold **FLAT** and **ZERO-G** simultaneously for at least 10 seconds. The original presets will be restored.

HEADBOARD BRACKET INSTALLATION GUIDE (OPTIONAL)

Use of headboard brackets is optional.

A 9/16" & 1/2" socket and crescent wrench are necessary to complete installation.

HEADBOARD BRACKET COMPONENTS					
Headboard Bracket (2)	T-Bracket (2)	Spacer (2)	Long Bolt (8)	Short Bolt (10)	Nut (18)
					

STEP 1

- Align the hole in the bracket to the brass sleeve into which the leg threads. Hold the bracket in place and screw the leg into the base until it is snug. DO NOT OVERTIGHTEN. Too much force may cause the leg to spin freely.
- Align the tab with the hole in the frame (located towards the foot of the base) and use a short bolt and nut to secure the bracket. Make sure the bolt is tight.



STEP 2

Attach the plastic spacer and T-Bracket.

- Measure the distance between the mounting holes on the headboard and install the spacer and attachment plate to accommodate the headboard.
- To install the plastic spacer and attachment plate, you will need (2) long bolts and (2) nuts. Place the spacer and attachment plate in the desired location and slip the bolts through the holes with the head of the bolt facing outward. Position the bolts diagonally on the spacer. Use the 9/16" socket and wrench to tighten the bolts.



STEP 3

You may now connect your headboard to the attachment plates using the remaining short bolts and nuts to secure it to the brackets. The heads of the bolts will face outward. Use a 9/16" socket and 1/2" wrench to tighten the bolts.

BATTERY BACKUP STRAP

For emergency use only, in case of a power outage.

Batteries are not to be used for normal operation of the bed.

STEP 1

Disconnect the Power Supply from the input power cord.


STEP 2

Connect the Battery Backup Strap to the (2) Alkaline 9 Volt batteries. Do not mix brand name Batteries.



STEP 3

Connect the end of the Battery Backup Strap to the input power cord that is attached to the control box.

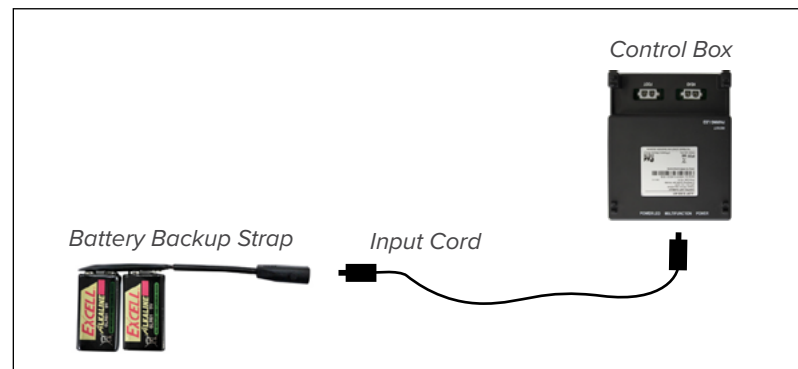

Note: Detach the Battery Backup Strap after the emergency is over, as the system will continue to draw power from the batteries even if not in use.

SETTING UP TWO BASES

Connecting straps are secured to the base frame upon delivery.

OVERVIEW

If a split setup is being installed, plastic connecting straps are provided (one per base) to secure the bases together. Use both straps to secure the head and foot portions together.



STEP 1

With the bases in their desired location, slightly loosen both legs to allow the strap to fit on the leg bolt, between the leg washer and frame.



STEP 2

Slide side (a) of the connecting strap onto leg bolt. Swing the strap and connect side (b) to the leg bolt. Secure the strap by shifting to the left.




STEP 3

Re-tighten legs. Do not over tighten. Use the remaining strap and repeat on other end of the base.

TO SYNC A SPLIT AUDIO SETUP

Ensure two same speakers models are within effective range of bluetooth and are both powered on, but neither have been connected with other devices. Two audio systems can be wirelessly connected and synchronously controlled.

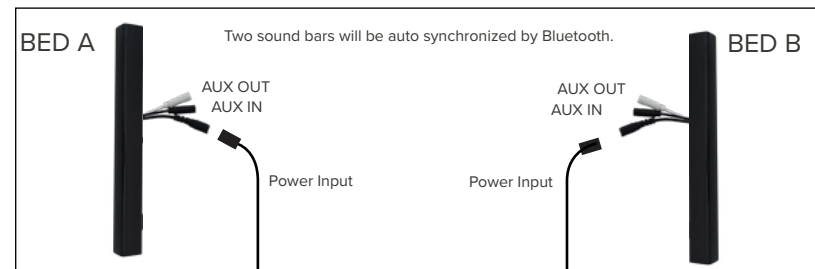

SETTING UP TWO BASES

A Sync Cord is included with the base. Not available on Queen, Full or Full-Long size bases. The Sync Cord connects the two control boxes to a single remote for the synchronization of two bases. This process is most commonly used for syncing two connected TXL bases.

STEP 1

Unplug bases from power source.

STEP 2

Connect the Sync Cord to the Multifunction port of each Control Box.


STEP 3

Plug bases back into the power source.

STEP 4

Check to ensure all cords are securely attached. Both remotes will now operate both bases simultaneously.

The system is now linked. Pressed buttons on either remote will control the two bases simultaneously.

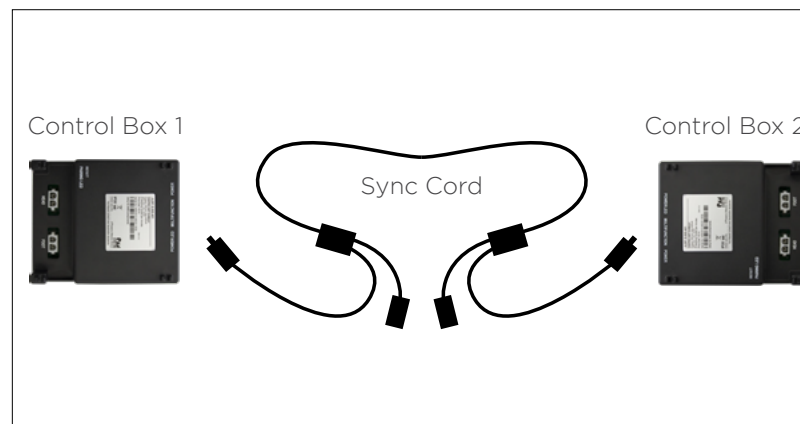

PERFORMANCE NOTES

If bases become mismatched, returning the bases to the flat positions will re-sync the mechanical positions.

BLUETOOTH SETUP

To operate the base from a smart device, download “Intellibed Sleep Genius” application to the desired smart device from the App Store (Apple) or Google Play Store(Android).

STEP 1

Plug the bed into power supply and ensure that your Bluetooth is enabled on your smart device.

STEP 2

Open the Intellibed Sleep Genius app and select your configuration.



STEP 3

Name your base. If multiple bases are available select a base and tap ‘Identify’ to raise the head of the selected base. If setting up a single base select Done when your base name is entered or tap Next Base to repeat this process if you have a split or second base to setup.




STEP 4

Go to your smart device's Bluetooth settings and connect Ergo Sound.



STEP 5

Setup is complete.

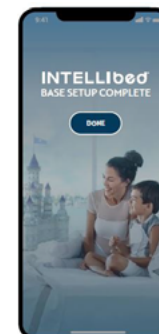


PAIR REMOTE

The original remote that comes in the box is already paired to the bed base. No further action is required.
In the event that the remote is not paired with the base, follow the steps below.

STEP 1

Unplug the Power Cord from your power outlet. Wait 1 minute, then plug it back in to your power outlet. Perform Step 2 within 10 seconds, while the control box light is flashing.

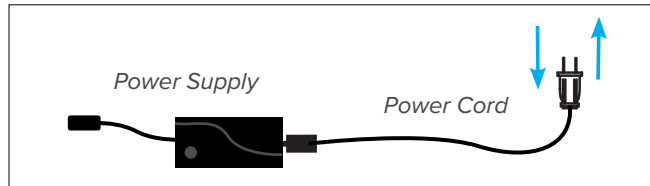

STEP 3

The remote is now paired to the adjustable base. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again.

STEP 2

Press and hold the PAIR button on the back of the remote. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the LED light on the control box will stop flashing. Release the PAIR button.




SOUND BAR SETUP

To operate the sound bar from a smart device, follow the instructions below.

STEP 1

Ensure that the Sound Bar Power Cord attached to the Sound Bar is plugged into a power source. A surge protector is recommended.

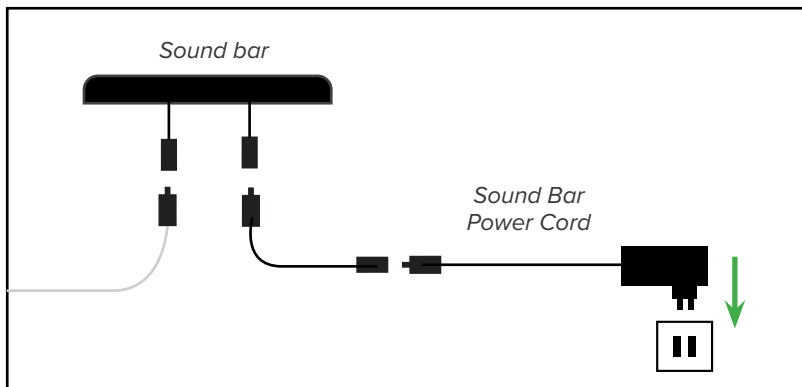

STEP 2

Locate Bluetooth® settings on the smart device. Select the Bluetooth® device that begins with "**Ergo sounds**".

STEP 3

Once connected, you may use the smart device to wirelessly stream music. Use the smart device to control volume level. To further customize volume levels, see NOTES section below.

NOTES:

- **To switch devices:** Turn off Bluetooth® on active device or select the active device in your Bluetooth® settings and press "forget this device". You may now pair another device.
- **To sync a split audio setup:** Ensure the same two speaker models are within effective range of Bluetooth® and are both powered on. Also ensure that neither speaker has been connected with other devices. Two audio systems can be wirelessly connected and synchronously controlled.

TROUBLESHOOTING

If one or more functions on the bed base have stopped operating:

- Check under the bed base to verify that the wired connections are secure and that there are no cords or bedding obstructing the movement of the base.
- Check to ensure the green LED light is illuminated on the control box. If there is no light, verify that the input and power cords are properly connected.
- Unplug the base for 1 hour to reset the electronic components.
- Plug bed base into a different electrical outlet, or test current outlet with another working appliance (a grounded, electrical surge protector is recommended).

If issue is not resolved by following the instructions above, locate serial number on warranty card or back of remote and call

Ergomotion Customer Service: 1-888-550-3746

+

+

+

+

Nationwide Customer Service

Phone 1-888-550-3746
Fax 805-979-9399
Email info@ergomotion.com
Web www.ergomotion.com