

UM2131 User manual

ST25 Android™ NFC tap application

Introduction

This document describes the functionalities of the ST25 Android™ NFC tap application. This document helps the user to understand the application features and how to use them.

The ST25 Android™ NFC tap application operates with at least STMicroelectronics NFC products belonging to the LRI EEPROM tags, M24SR, M24LR, ST25DV-I2C, ST25DV-PWM series Dynamic NFC Tags and ST25TA, ST25TV series NFC / RFID tags.

The ST25 Android™ NFC tap application is linked to the STSW-ST25001 and STSW-ST25002 software categories.

June 2018 UM2131 Rev 5 1/54

Contents UM2131

Contents

1	List	of acro	nyms and definitions	6	
2	Ovei	rview .		7	
	2.1	Prerec	juisites	7	
	2.2	Function	onalities overview	8	
3	Appl	lication	description	9	
	3.1	Welcome screen			
	3.2	Tag detail			
		3.2.1	Tag info		
		3.2.2	NDEF		
		3.2.3	CC file	3	
		3.2.4	SYSTEM file	4	
		3.2.5	Memory dump1	5	
	3.3	NDEF	editor	6	
		3.3.1	NDEF editor access	6	
		3.3.2	NDEF editor operations	7	
		3.3.3	NDEF records	8	
4	Tag :	main fe	atures	7	
	4.1	Memory features			
		4.1.1	Read memory		
		4.1.2	Write memory		
		4.1.3	Dump memory	9	
		4.1.4	Fill memory	0	
	4.2	Regist	ers management	1	
	4.3	Config	uration protection	2	
	4.4	_	management		
	4.5	Areas security status			
		4.5.1	Area password		
		4.5.2	R/W permissions		
		4.5.3	Present password		
		4.5.4	Change password		
			= :		



6	Revis	ion history	53
	5.3	Picture transfers	52
	5.2	Firmware update	51
	5.1	Stopwatch	50
5	Demo	onstrations use cases	50
	4.15	Pulse-width modulation control	46
	4.14	Pulse-width modulation configuration	
	4.13	Electronic article surveillance	
	4.12	Kill tag	
	4.11	Untraceable mode	41
	4.10	Lock block	40
	4.9	Tamper detect	39
	4.8	Counter	38
	4.7	Data transfer	37
	4.6	Mailbox management	37

List of figures UM2131

List of figures

Figure 1.	ST25 Android™ NFC tap application overview	. 7
Figure 2.	Welcome screen	10
Figure 3.	Tag detail	
Figure 4.	Tag info screen	
Figure 5.	NDEF screen	13
Figure 6.	CC file screen	14
Figure 7.	System file screen	15
Figure 8.	Memory dump screen	16
Figure 9.	NDEF editor access screens	17
Figure 10.	NDEF edition	
Figure 11.	Discover a NDEF Multi Records	
Figure 12.	NDEF TEXT screen	
Figure 13.	NDEF URI screens	
Figure 14.	NDEF VCard screen	
Figure 15.	NDEF AAR screen	
Figure 16.	NDEF Wi-Fi [®] screen	
Figure 17.	NDEF Bluetooth® screen	23
Figure 18.	NDEF SMS screen	
Figure 19.	NDEF Email screen	
Figure 20.	NDEF Bluetooth® LE screen.	
Figure 21.	Tag features access examples	
Figure 22.	Read memory screens	
Figure 23.	Write memory screen	
Figure 24.	Dump memory screen	
Figure 25.	Fill memory screen	
Figure 26.	Registers management screens	
Figure 27.	Configuration protection screen	
Figure 28.	Areas management screens	
Figure 29.	Area security status screen	
Figure 30.	Area password screen	
Figure 30.	R/W permissions screens	
Figure 31.	Present password screens	
Figure 32.	Change password screens	
Figure 33.	Mailbox management screen	
-	Data transfer screens	
Figure 35.		
Figure 36.	Counter configuration screens	
Figure 37.	Tamper detect screens (ST25TV tags)	
Figure 38.		
Figure 39.	Untraceable mode screen	
Figure 40.	Kill tag screen	
Figure 41.	Electronic article surveillance screen	
Figure 42.	Electronic article surveillance alarm screen	
Figure 43.	PWM configuration features	
Figure 44.	PWM control (normal mode)	
Figure 45.	PWM control (expert mode)	
Figure 46.	PWM control (musics mode)	
Figure 47.	Stopwatch screen	
Figure 48.	Firmware update screens	51



UM2131	List of figures	
Figure 49.	Picture transfer screens	52



5/54

1 List of acronyms and definitions

AAR: Android™ Application Record

BLE: Bluetooth® Low Energy
CC: Capability Container
DAR: Display Aspect Ratio

FW: Firmware

I²C: Inter-integrated circuit

IEC: International Electro-technical Commission **ISO**: International Organization for Standardization

ISO/IEC 14443: Proximity standard
ISO/IEC 15693: Vicinity standard
NDEF: NFC Data Exchange Format
NFC: Near Field Communication

NFC Forum: Association of industry actors promoting the NFC technology

PWD: Password

PWM:Pulse-width modulation

RF: Radio Frequency

Tag: PICC in form of a patch, key fob or any similar device, without own power source and not generating RF electromagnetic field, capable of communicating with a reader / writer

PICC (VICC): Proximity (Vicinity) IC Card: a technology subset, defined in ISO/IEC standards for cards, with a defined set of commands

URI: Unified Resource Identifier **URL**: Unified Resource Locator



UM2131 Overview

2 Overview

This chapter presents the main features of the ST25 Android $^{\text{TM}}$ NFC tap application as well as the prerequisites to use it.

2.1 Prerequisites

The prerequisites to run the Android™ application are:

- An Android™ Mobile phone or reader with NFC enabled
- Minimum Android™ version: API level 15 corresponding to Android™ 4.0.4 [Ice Cream Sandwich]

The ST25 Android™ NFC tap application is available on:

- ST site: www.st.com
- Google play: https://play.google.com/store/apps/details?id=com.st.st25nfc

Note: Pictures used within this document illustrate the various application features. They are based on version 1.0.0 of the application. Some discrepancies may be noticed between this documentation and the application itself.



Figure 1. ST25 Android™ NFC tap application overview

Note:

For more details regarding ST25 devices, refer to their corresponding datasheets (available on www.st.com).



UM2131 Rev 5 7/54

Overview UM2131

2.2 Functionalities overview

The ST25 Android™ NFC tap application allows managing the following STMicroelectronics products:

- LRI EEPROM tags.
- M24SR series Dynamic NFC Tags (M24SR Nucleo shield and M24SR Discovery board).
- M24LR series Dynamic NFC Tags.
- ST25TA series NFC/RFID tags (CLOUD ST25TA02K-P board).
- ST25DV-I2C series Dynamic NFC Tags.
- ST25TV series NFC tags.
- ST25DV-PWM series Dynamic NFC Tags.

It supports the ISO14443 protocol to communicate with STMicroelectronics tags (ST25TA family) and Dynamic NFC tags (M24SR family).

It supports the ISO15693 protocol to communicate with STMicroelectronics tags (LRI family), Dynamic NFC tags (M24LR family) as well as devices from the ST25TV series NFC tags, ST25DV-PWM, and ST25DV-I2C series Dynamic NFC Tags.

The ST25 Android™ NFC tap application demonstrates such product features as:

- Read / Write NDEF message, NFC forum compliant example.
 - Text, URI, SMS, Email, VCard, AAR, Wi-Fi[®], Bluetooth[®].
- Tag information retrieval [CC file, System File^(a)].
- Tools functionalities (Counters and GPO control according to tag)^(a).
- Password management [Password authentication, tag Read Only/Write Only]^(a).
- Energy harvesting^(a).
- Specific demo use cases usually implemented to work with STMicroelectronics Discovery boards and kits^(a).

8/54 UM2131 Rev 5



a. For ST products

3 Application description

The application is composed of the following main activities:

- Welcome screen (refer to Section 3.1)
- NDEF editor screen (refer to Section 3.3)
- Tag detail screen (refer to Section 3.2) with a series of tabs dedicated to main features:
 - Tag info (refer to Section 3.2.1)
 - NDEF (refer to Section 3.2.2)
 - CC file (refer to Section 3.2.3)
 - SYSTEM file (refer to Section 3.2.4)
 - Memory dump (refer to Section 3.2.5)
- Drawer menu allowing access to tag available features
 - NFC forum:
 - Tag info, NDEF editor (refer to Section 3.3.1), and CC file
 - Tag features (refer mostly to Chapter 4):
 System file, memory dump, register management, areas management, areas content editor, areas security status, mailbox management, data transfer, counter, tamper detection, Lock block, Untraceable mode, Kill tag and Electronic article surveillance.
 - Tag demonstrations (refer to Chapter 5):
 Stopwatch transfer, firmware update and picture transfer

The following sections describe the main activities and associated functionalities or demonstration use cases included in each tab.

3.1 Welcome screen

When the application is started, the welcome screen is displayed as illustrated in *Figure 2*. It invites the user to "tap" a tag.

When the tag has been discovered, and depending on the product discovered, sections including tabs become available or not.

Note: If NFC is not enabled, a message is displayed inviting to use the NFC configuration menu.

577

UM2131 Rev 5 9/54



Figure 2. Welcome screen

If a tag is tapped, the application starts the tag detail activity (refer to Section 3.2).

The drawer menu is updated according to tag and features. Demonstrations, if any, can be started from drawer menus.

3.2 Tag detail

This activity is started when a tag is discovered. Available screen and tabs are shown in *Figure 3*. Tab availabilities depend on the product discovered.



★ .al 100% ■ 13:42 ST25DV Tag detail TAG INFO CC FILE SYSTEM FILE Select the ST25DV Dynamic NFC/RFID tag NFC type V - ISO/IEC 15693 ufacturer: STMicroelectronics UID : E002240000367940 Memory size (bytes): :512 bytes Slide the screen to Tech list : android.nfc.tech.NfcV android.nfc.tech.Ndef tabs

Figure 3. Tag detail

The following subsections describe the main features of each tab.

- TAG INFO: Provides information dealing with the tag (Manufacturer, Memory size, and UID among others)
- NDEF: Displays the content of the NDEF, if any, according to the application implemented ones. Refers to the NDEF editor section for available list and screens.
- CC FILE: Provides CC file information if any
- SYSTEM FILE: Provides System file information if any (ST products)
- MEMORY DUMP: Provides ways to Write/Read memory or dump/fill memory to/from file

3.2.1 Tag info

Provides information related to the tag such as the manufacturer, the memory size or the UID as shown in *Figure 4*.

577

UM2131 Rev 5 11/54



Figure 4. Tag info screen

3.2.2 NDEF

The NDEF tab displays the content of the NDEF, if any decoded, according to the application implemented ones as shown in *Figure 5*.

Available lists and screens are detailed in Section 3.3: NDEF editor on page 16.



≱ ... 100% 13:45 ***** ... 100% ■ 14:09 ≡ ST25TA02K-P **≡** ST25DV TAG INFO NDEF CC FILE SYSTEM FILE TAG INFO NDEF CC FILE SYSTEM FILE ST25TA02K-P ST25DV NFC type V - ISO/IEC 15693 NFC/RFID tag Dynamic NFC/RFID tag Area1 : NDEF message containing 1 record(s): Area1: NDEF message containing 2 record(s): Contact E-mail record Edit this yeard NDEF record Edit this Email NDEF record Contact Edit this yeard NDEF record

Figure 5. NDEF screen

3.2.3 CC file

Provides CC file information if any as shown in Figure 6.



UM2131 Rev 5

13/54

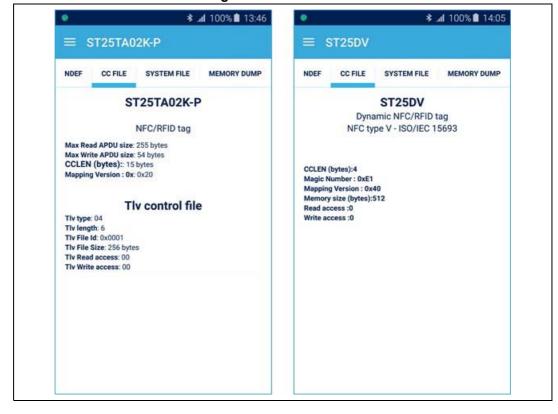


Figure 6. CC file screen

3.2.4 SYSTEM file

Provides information retrieved from the System file and more (registers, counter) associated with the product discovered. as shown in *Figure 7*.



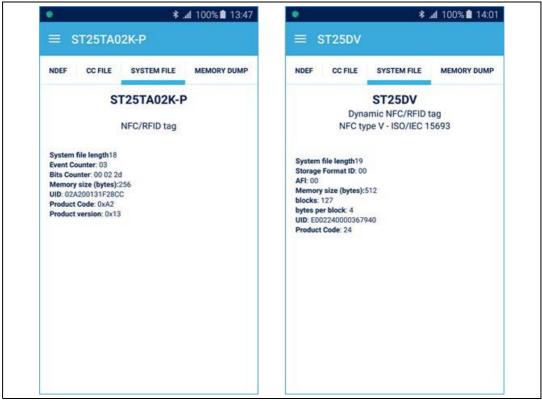


Figure 7. System file screen

3.2.5 Memory dump

Refer to Section 4.1: Memory features on page 27 for details about the possibilities provided by this activity. The memory dump screen is shown in Figure 8.



UM2131 Rev 5 15/54

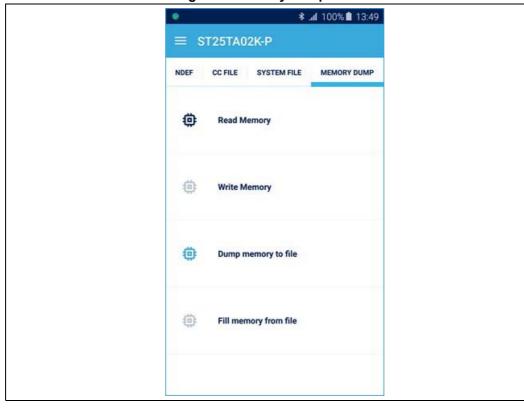


Figure 8. Memory dump screen

3.3 NDEF editor

The NDEF editor screen enables to create, build, and modify NDEF messages containing one or more records.

3.3.1 NDEF editor access

The NDEF editor can be started from the following main screens:

- **Drawer** > **NDEF editor** in the NFC forum menu group for NFC related topics related to Area 1
- Drawer > Areas Content Editor for tag full features in case of multiple areas available
 on the tag. This feature first presents the tag areas for selection, then the NDEF editor
 for the edition of functionalities.

Figure 9 shows NDEF editor access screens.

57

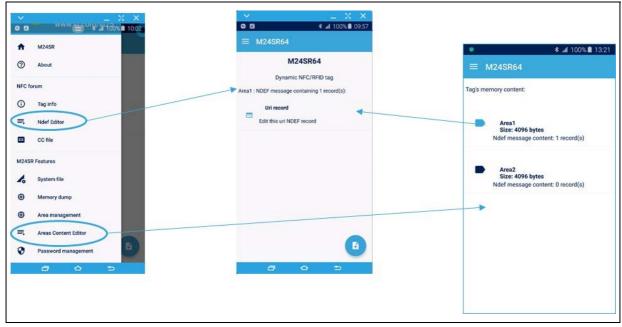


Figure 9. NDEF editor access screens

3.3.2 NDEF editor operations

The NDEF editor screen enables to read the NDEF content of an NFC tag or write an NDEF message into it. A NDEF message is made of one or more NDEF records. The NDEF editor screen displays all the NDEF records present in the tag.

As shown in Figure 10, the user can:

- Click on an NDEF record to view its content and edit it using the *pencil* icon, or delete it using the *recycle bin* icon.
- Click on the bottom-right '+' button to add an NDEF record. The user can select a record type among all possible types.



UM2131 Rev 5 17/54

★ .d 100% 13:30 * .dl 100% 11: Select the NDEF record to add M24SR64 Dynamic NFC/RFID tag Create a SMS NDEF record http://www. st.com Area1: NDEF message containing 1 record(s): Text record Create a plain text NDEF record Edit this uri NDEF record Uri record Create a uri NDEF record E-mail record Create an Email NDEF record Create a voard NDEF record Wifi record Create a Wifi handover NDEF record 4 Bluetooth record

Figure 10. NDEF edition

When a click on a disk pictogram is performed as shown in *Figure 11*, the built message is written on the tag as a NDEF message that can contain multiple records.

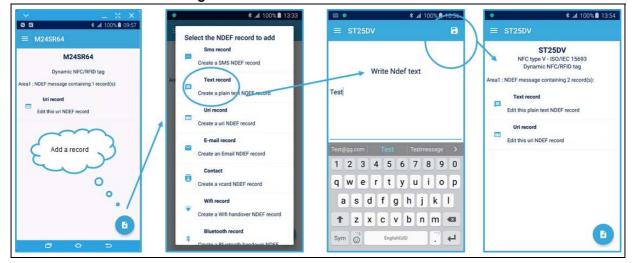


Figure 11. Discover a NDEF Multi Records

3.3.3 NDEF records

This section describes the main available NDEF records that can be used to compose a NDEF message within the NDEF editor activity.

TEXT

Displays NDEF TEXT edition fields and enables to write a text NDEF message as shown in *Figure 12*.

18/54 UM2131 Rev 5

≱ ... 100% 10:56 ≡ ST25DV • Write Ndef text Test 1 2 3 4 5 6 7 8 9 0 q w e r t y u i o p asdfghj k 1 ZX С v b n m 🖾 4 English(US) Sym 🕝

Figure 12. NDEF TEXT screen

URI

Displays NDEF URI edition fields and enables to write a URI NDEF message as shown in *Figure 13*.



UM2131 Rev 5 19/54

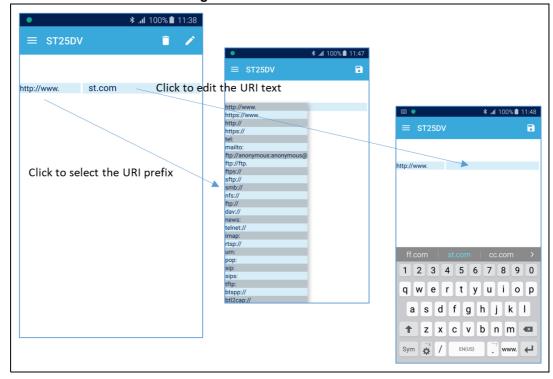


Figure 13. NDEF URI screens

Contact

Displays NDEF VCard edition fields and enables to write a VCard NDEF message as shown in *Figure 14*.





Figure 14. NDEF VCard screen

Options:

- GetContact button to get a contact from the phone list and initiate all fields from the selected contact
- Capture from camera
- Export photo check box used to include the image into the NDEF message
- A slider is available under the picture to adjust the image size to fit within the tag
 available size

AAR

Displays NDEF AAR edition fields and enables to write an AAR NDEF message as shown in *Figure 15*.



UM2131 Rev 5 21/54

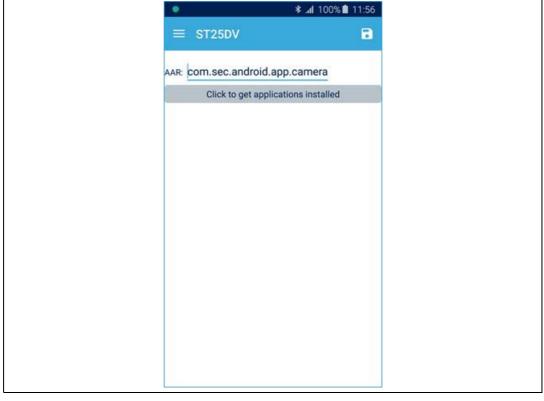


Figure 15. NDEF AAR screen

The selection of an installed application helps to retrieve the AAR message from an application already installed

Wi-Fi®

Displays NDEF Wi-Fi $^{\rm I\! B}$ edition fields and enables to write a Wi-Fi $^{\rm I\! B}$ NDEF message as shown in *Figure 16*.




Figure 16. NDEF Wi-Fi® screen



Bluetooth[®]

Displays NDEF Bluetooth[®] edition fields and enables to write a Bluetooth[®] NDEF message as shown in *Figure 17*.



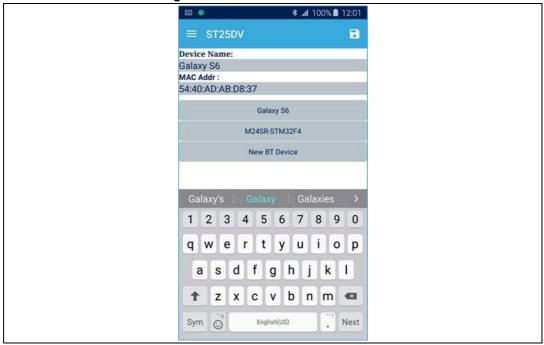



UM2131 Rev 5 23/54

SMS

Displays NDEF SMS edition fields and enables to write a SMS NDEF message as shown in *Figure 18*.

≱ .d 100% 13:28 8 Write Ndef sms 1 2 3 × 5 4 6 Done 7 8 9 0 *

Figure 18. NDEF SMS screen

Email

Displays NDEF Email edition fields and enables to write an email NDEF message as shown in *Figure 19*.

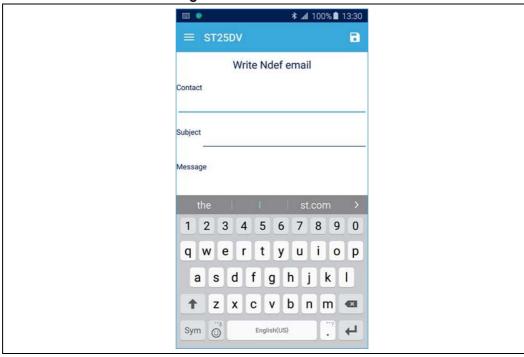


Figure 19. NDEF Email screen

Bluetooth[®] Low Energy

Displays NDEF Bluetooth® Low Energy edition fields and enables to write a BLE NDEF message as shown in *Figure 20*.



UM2131 Rev 5 25/54

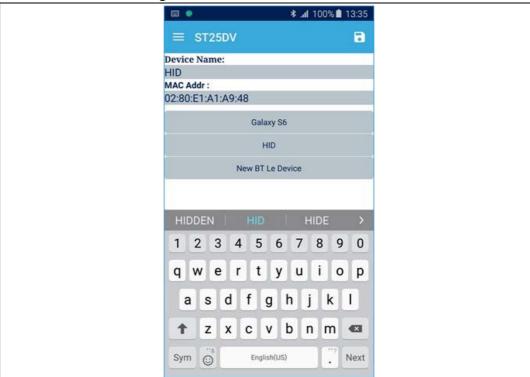


Figure 20. NDEF Bluetooth® LE screen



UM2131 Tag main features

4 Tag main features

This chapter describes the tag main features that can be reached from the **Drawer** > <**Tag name> features** menu. Examples for various tags are shown in **Figure 21**.



Figure 21. Tag features access examples

4.1 Memory features

The memory features illustrated in *Section 4.1.1* to *Section 4.1.4* provide ways of reading or writing to tag memory with the possibility to store or restore memory content to or from a file.

4.1.1 Read memory

The read memory feature enables to dump a number of bytes from the memory starting at a given address. Read memory screen examples are shown in *Figure 22*.

UM2131 Rev 5 27/54

Tag main features UM2131

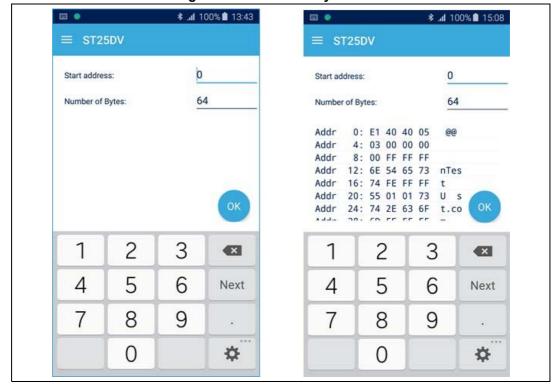


Figure 22. Read memory screens

4.1.2 Write memory

The write memory feature enables to write a given value to the memory at a given address. A write memory screen example is shown in *Figure 23*.

UM2131 Tag main features

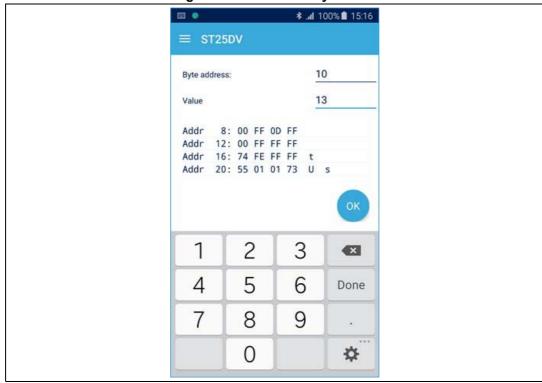


Figure 23. Write memory screen

4.1.3 Dump memory

The dump memory feature enables to write to a given file a number of bytes from the memory starting at a given address. A dump memory screen example is shown in *Figure 24*.

Tag main features UM2131

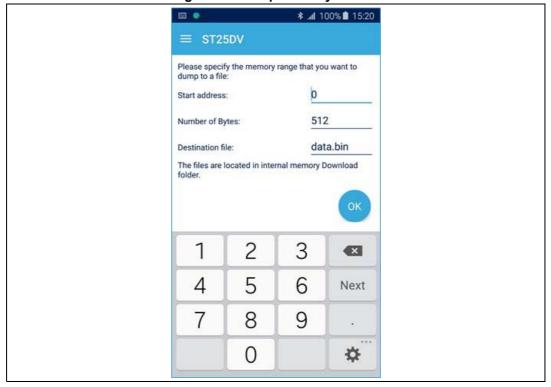


Figure 24. Dump memory screen

4.1.4 Fill memory

The fill memory feature enables to write the content of a given file to the memory starting at a given address. A fill memory screen example is shown in *Figure 25*.

UM2131 Tag main features

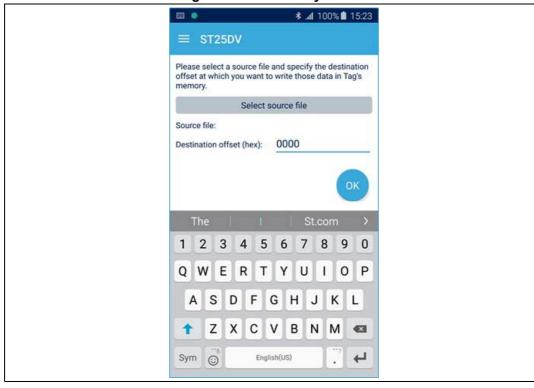


Figure 25. Fill memory screen

4.2 Registers management

This section illustrates the way to configure tag registers if any. The configuration of tag registers is tag-implementation specific including:

- Display of registers values
- · Change of registers values
- · Refresh of registers values
- Tag update and write of values to tag

Registers management example are shown in *Figure 26*.

UM2131 Rev 5 31/54

Tag main features UM2131

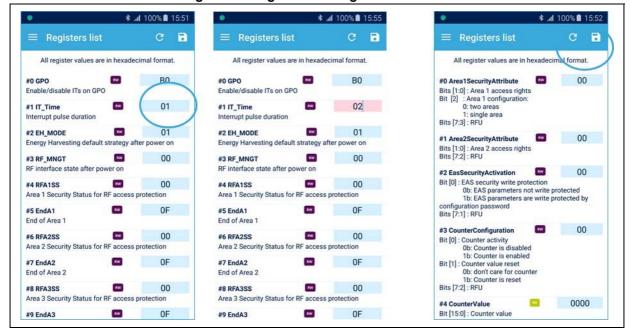


Figure 26. Registers management screens

4.3 Configuration protection

The configuration protection screen is specific to some tags like ST25DV-I2C and ST25TV. The configuration password is needed each time the user wants to change a configuration register.

This screen allows:


- The presentation of the configuration password
- Changing the configuration password
- Permanently locking the configuration. In that case, it is not be possible anymore to change any register through RF.

Note: it is still possible to unlock the products with an l^2C interface, like the ST25DV-I2C tags, through their l^2C interface.



UM2131 Tag main features

Figure 27. Configuration protection screen

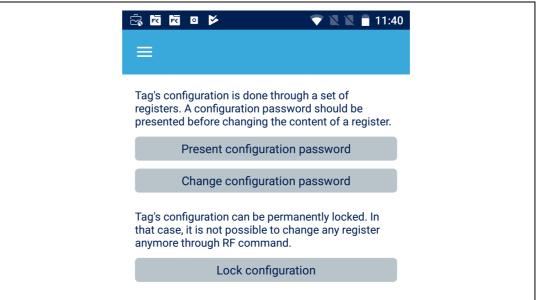

4.4 Areas management

This section illustrates the way to configure the tag memory with areas. This configuration is tag-dependent and tag-implementation specific.

Areas management example screens are shown in Figure 28.

* .d 100% ■ 15:44 **३ ... 100%** 15:45 **≱** "1 100% 1 15:46 8 Move the bottom edge of Area1, Area2, Area3 to change the number of areas and their sizes. Select a memory configuration: Select a memory configuration: 1 single area of 2 Kbits. (Area protected by a 64 bits password) 1 single area 2 areas Area4 will take all the 2 independent areas of 1 Kbits each.
(Each area protected by a 32 bits password) remaining space up to the end of the tag's memory. O 3 areas Update TAG O 4 areas Selected area: O Area 1 O 5 areas O Area 2 O 6 areas Area 3 O 7 areas Fine tuning of selected area's end: O 8 areas Update TAG Area 1 128 32 192 48 Area 3 24 Area 4 TOTAL 512 128

Figure 28. Areas management screens



UM2131 Rev 5 33/54

Tag main features UM2131

4.5 Areas security status

This section and its sub-sections illustrate the way to configure the tag areas security status which is usually composed of a password and R/W permission. The configuration of tag areas security status is tag-dependent and tag-implementation specific including:

- Change of area password
- Change of area R/W permission
- Password presentation
- Password change

The area security status main screen is shown in Figure 29.



Figure 29. Area security status screen


4.5.1 Area password

Figure 30 shows a tag area password configuration example.

34/54 UM2131 Rev 5

UM2131 Tag main features


Figure 30. Area password screen

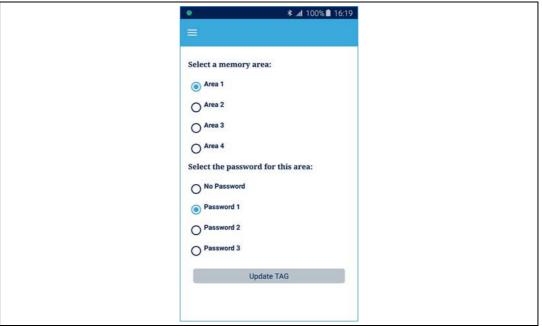

4.5.2 R/W permissions

Figure 31 shows a tag R/W attributes configuration example.

Figure 31. R/W permissions screens

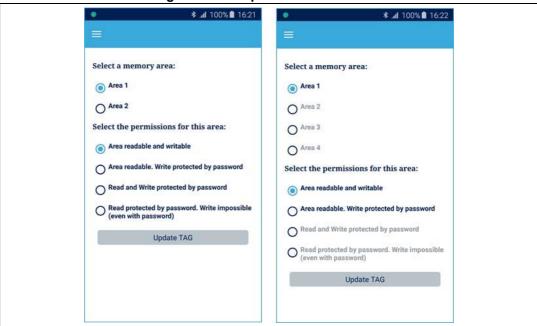

4.5.3 Present password

Figure 32 shows a tag password presentation example.



UM2131 Rev 5 35/54

Tag main features UM2131

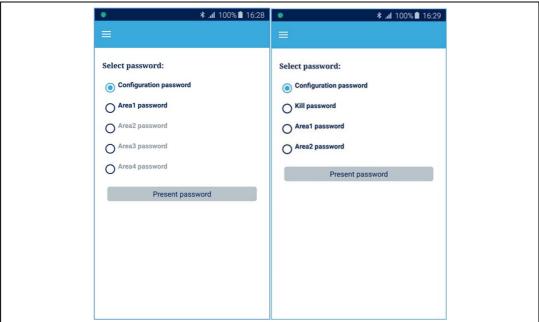


Figure 32. Present password screens

4.5.4 Change password

Figure 33 illustrates ways to change tag passwords.

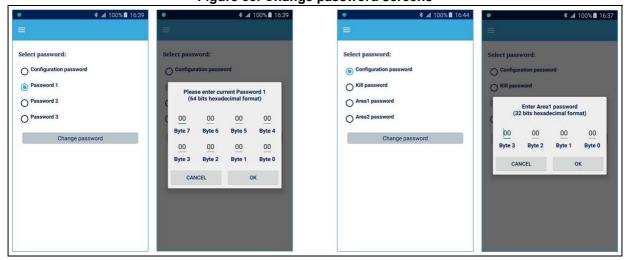


Figure 33. Change password screens

4.6 Mailbox management

This section illustrates the way to configure the tag mailbox. The configuration of the tag mailbox is specific to the tag and possible for ST25DV-I2C products only. The main configuration items are listed below.

- Mailbox field status
- Refresh status
- Mailbox reset
- Mailbox enable

The mailbox management screen is shown in *Figure 34*.

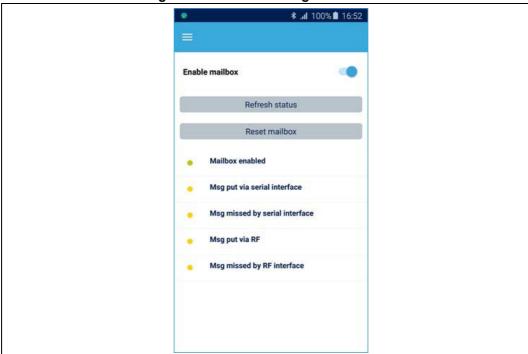


Figure 34. Mailbox management screen

4.7 Data transfer

The Fast Transfer Mode basic demonstration illustrates the data transfer features of ST25DV-I2C products. This demonstration is dedicated to the ST25DV-I2C tag and requires a specific firmware driving the TAG through I²C on a Discovery board. The firmware reads and/or writes the data to transfer.

Note:

Refer to ST25DV-DISCOVERY firmware for details. The Mailbox must be enabled first through firmware or RF (refer to the mailbox management features introduced in Section 4.6).

The data transfer features are:

- Write to tag: select a size and send random data to host / tag (buffer size)
- Read from tag: read buffer from tag (size is provided by host)
- Write tag from file: enable to send file content to host / tag

57/

UM2131 Rev 5 37/54

Possible data transfer actions are:

- Start the transfer
- Stop the transfer
- Pause the transfer
- Resume the transfer

Data transfer observability is provided by means of the following status:

- A progression bar is displayed during the transfer
- · A stopwatch counter is displayed and triggered by actions

Figure 35 shows examples of data transfer screens.



Figure 35. Data transfer screens

4.8 Counter

Some tags like ST25TA02K and ST25TV have their counter incremented when the user reads from, or writes to their memory, with slight differences depending on the tag.

- Depending on the features of the tag, the counter configuration screen allows:
- · Activating the counter
- Displaying the current value of the counter
- Locking the counter
- · Reseting the counter
- Selecting if the counter is incremented by read or write operations

47/

Figure 36 shows the counter configuration screens for an ST25TV tag as well as for an ST25TA02K tag.

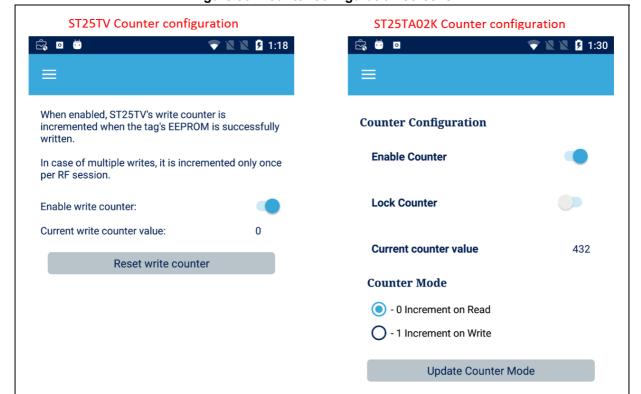


Figure 36. Counter configuration screens

4.9 Tamper detect

The tamper detection feature is specific to ST25TV tags.

Each time the ST25TV tag is powered on, it checks if there is a closed loop between pins TD0 and TD1. This feature can for instance be used to check if a good, for example a bottle, has been opened (tampered).

Figure 37 shows the tamper detect screens for an ST25TV tag with the corresponding register for each of the two detection cases.

57

UM2131 Rev 5 39/54

💎 🖹 🖹 1:18 **1:22** =Tamper detect status (collected when the tag was Tamper detect status (collected when the tag was powered ON): powered ON): TD0 TD0 Tamper Detect Register TD1 TD1 00h 01h

Figure 37. Tamper detect screens (ST25TV tags)

4.10 Lock block

This feature is specific to NFC Type 5 tags.


In NFC Type 5 tags, the memory is divided into blocks of a given number of bytes. For STMicroelectronics Type 5 products, each block is made of 4 bytes.

The *Lock block* screen allows reading the status of each block (locked or unlocked) and the permanent lock of any block in the memory. This action is irreversible. It can be used when the user wants to be sure that the content of the block(s) will never be changed.

Figure 38 shows a Lock block screen example.

40/54 UM2131 Rev 5

Figure 38. Lock block screen

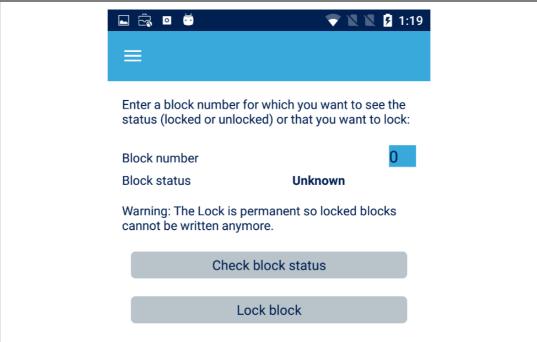

The Lock block and Area Read/Write permissions described in Section 4.5.2: R/W permissions on page 35 are two possible means to prevent the modification of parts of the memory:

- Lock block is permanent and must be done for each block one by one
- Area configuration is global and applicable to a whole area. The area can be protected
 by password for read, write, or both. It also offers a mode for which the content of the
 area cannot be written anymore. This is the mode for which the reading of the memory
 is protected by password and the writing is impossible, even if the password is
 presented.

4.11 Untraceable mode

This feature is specific to ST25TV products.


The *Untraceable mode* screen allows enabling the *Untraceable mode* feature. Once enabled, the tag is no more seen by NFC Type 5 inventory. However, it is possible to communicate with it if its UID is known. For doing so, the *Untraceable mode* password must be presented (the UID must be specified in the command). The tag answers to every command.

Figure 39 shows the Untraceable mode screen.



UM2131 Rev 5 41/54

Figure 39. Untraceable mode screen

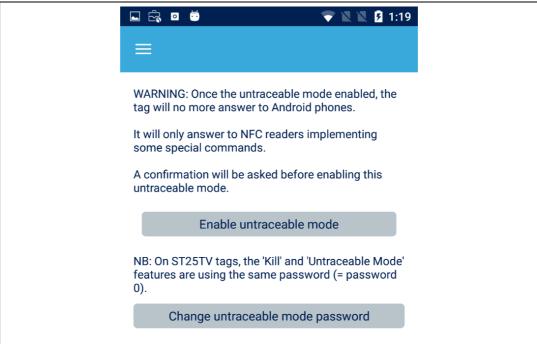

Caution: If the *Untraceable mode* is enabled, the tag cannot be discovered by smartphones.


4.12 Kill tag

This feature is specific to ST25TV products. It can be used to permanently kill the tag.

The *Lock kill password* button allows preventing modifications of the kill password. Once activated, it is not possible anymore to change the kill password.

Figure 40 shows the Kill tag screen.

Figure 40. Kill tag screen

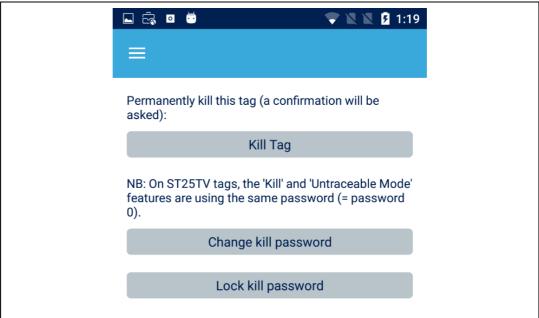

4.13 Electronic article surveillance

This feature is specific to ST25TV products.

Electronic article surveillance (EAS) can for instance be used if the tag is used to control goods to like books, CDs, DVDs, and others in a library. NFC gate readers at the library exits raise an alarm each time an article, with EAS enabled, goes through the gates.

Figure 41 shows the screen allowing the configuration of the *Electronic article surveillance* feature.

UM2131 Rev 5 43/54

💎 🔌 🖎 📝 1:19 Electronic Article Surveillance demo Once enabled, the Electronic Article Surveillance will trigger an alarm every times the tag is read by a NFC Gate (for example at the exit of a shop or library) Enable EAS **EAS protection:** EAS not protected EAS protected by configuration password EAS permanently locked EAS ID (free to use identifier. 16 bits hex value): 1234 EAS Telegram containing article description: (32 Bytes max) Ex: CD Beethoven 5th symphony **Update TAG**

Figure 41. Electronic article surveillance screen

With this screen, the user can:

- Enable Electronic article surveillance
- Set the *Electronic article surveillance* protection:
 - This protection is needed to prevent a user of the library to disable the alarm. Only library employees are able to disable the EAS protection when an article is rented thanks to the configuration password.
 - The EAS can be permanently locked. In such a case, it is not possible to disable it
 and the only way to turn the alarm off is to kill the tag. This can be used when the
 EAS is used to protect a product in a shop. Once the product is purchased, the tag
 can be killed.
- The EAS ID is a 16-bit identifier, which can be set freely to identify the article.
- The EAS Telegram is a text limited to 32 characters describing the article.

The ST25 Android™ NFC tap application demonstrates how the EAS alarm can be handled. Each time a ST25TV tag is found by the inventory, the application checks if the Electronic Article Surveillance is enabled. If it is enabled, it raises an alarm as illustrated in *Figure 42*.

44/54 UM2131 Rev 5



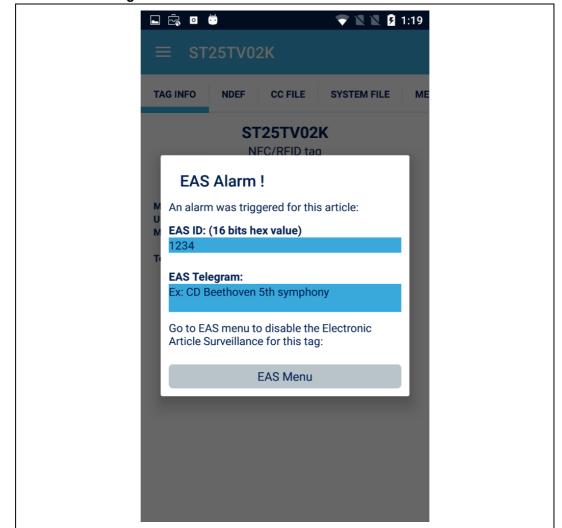


Figure 42. Electronic article surveillance alarm screen

4.14 Pulse-width modulation configuration

This feature is specific to ST25DV-PWM products.

Due to RF high-sensitivity levels, and because of the switching noise generated by a PWM output (by construction), the adjustment of different PWM parameters is proposed in order to improve the coexistence between the PWM interface and the RF interface:

- PWM output driver trimming
- PWM output coexistence with RF interface


Also available in the configuration, the PWM control access rights, which allows to define R/W permissions and password for PWM control area.

577

UM2131 Rev 5 45/54

Figure 43 shows the PWM configuration features.

Figure 43. PWM configuration features

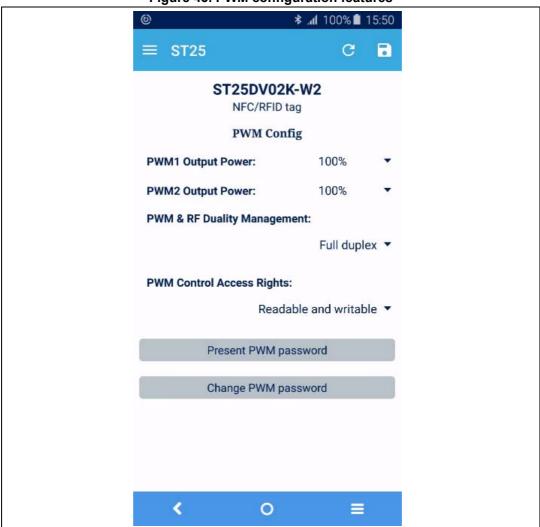

4.15 Pulse-width modulation control

This feature is specific to ST25DV-PWM products.

PWM control enables to set PWM registers using the following main setting attributes:

- Disable/Enable PWM
- Period value
- Pulse-width value

Four profiles are available with different level of detail and features:

- Normal: sets the duty cycle of each PWM with simple bar sliders (frequency already set through the Expert mode).
- **Expert**: provides detail setting for PWM attributes and corresponding registers values.
- Auto: demonstrator use case that allows autonomous changing of the duty cycle on the 2 channels, like one going up and the other down. Same as the normal profile with automatic setting.
- Musics: demonstrator use case that enables the playback of music note using frequency/period setting. A simple finite music list is available for selection (a buzzer must be connected to the PWM1 output for playback).

Figure 44 shows the PWM control in normal mode.

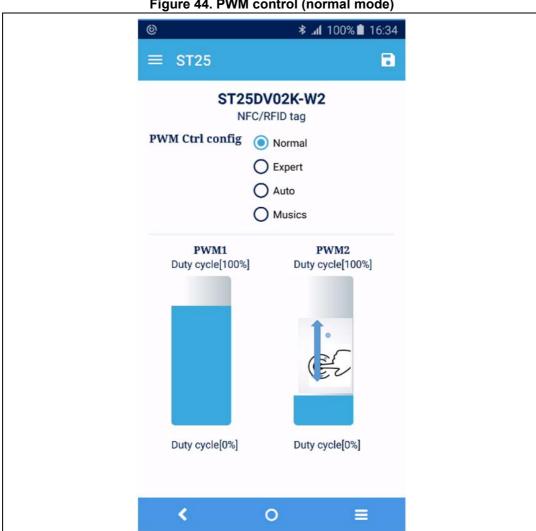


Figure 44. PWM control (normal mode)

UM2131 Rev 5 47/54

Figure 45 shows the PWM control in expert mode.

Figure 45. PWM control (expert mode)


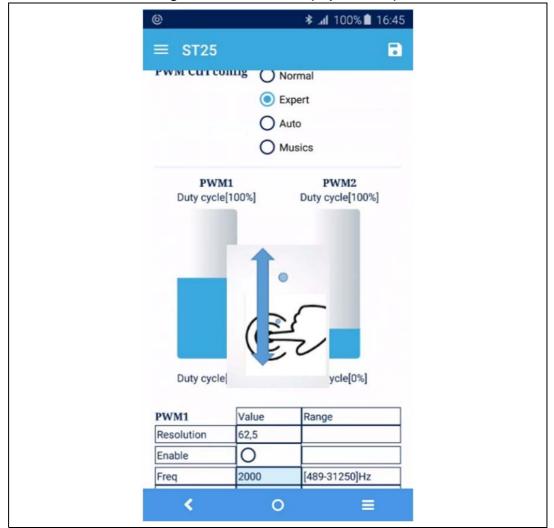


Figure 46 shows the PWM control in musics mode.

Figure 46. PWM control (musics mode)

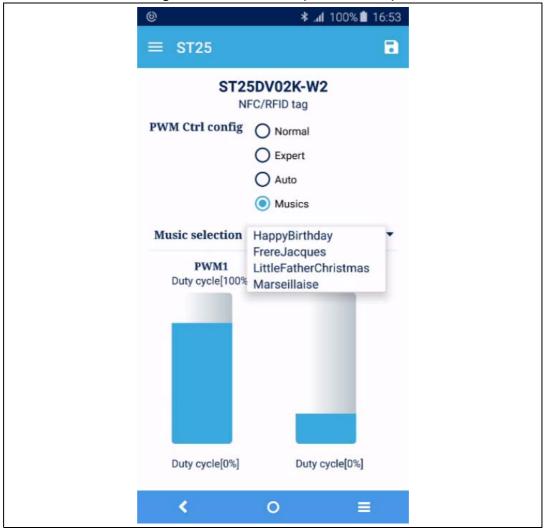

5 Demonstrations use cases

The demonstrations are product specific. The available demonstrations related to a given product can be reached through the tag drawer demonstration menu.

Note: Some demonstrations require boards with specific firmwares associated.

5.1 Stopwatch

Stopwatch demo [ST25DV-I2C product only] - Discovery board

This demonstration is dedicated to the ST25DV-I2C tag and requires a specific firmware driving the TAG through I²C on a Discovery board. The firmware reads and/or writes the data to transfer.

Note: Refer to ST25DV-DISCOVERY firmware for details.

The stopwatch feature is:

Stopwatch information transfer between Phone and board

Possible stopwatch actions are:

- Start the transfer
- Stop the transfer
- Pause the transfer
- · Resume the transfer

Stopwatch observability is provided by means of the following status:

A stopwatch counter is displayed and triggered by actions

The stopwatch screen is shown in Figure 47.

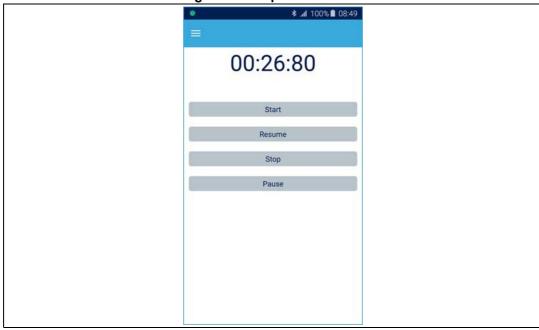


Figure 47. Stopwatch screen

5.2 Firmware update

Firmware update demo [ST25DV-I2C product only] - Discovery board

This demonstration is dedicated to the ST25DV-I2C tag and requires a specific firmware driving the TAG through I²C on a Discovery board. The firmware reads and/or writes the data to transfer.

Note: Refer to ST25DV-DISCOVERY firmware for details.

The firmware update features is:

Pick a firmware to upload: enables to send file content to host through tag
 Password exchange is part of the transfer protocol. Refers to ST25DV-DISCOVERY firmware documentation for default settings

Possible firmware update actions are:

- Start the transfer
- Stop the transfer
- Pause the transfer
- Resume the transfer

Firmware update observability is provided by means of the following status:

- A progression bar is displayed during the transfer
- A stopwatch counter is displayed and triggered by actions

Figure 48 shows examples of firmware update screens.

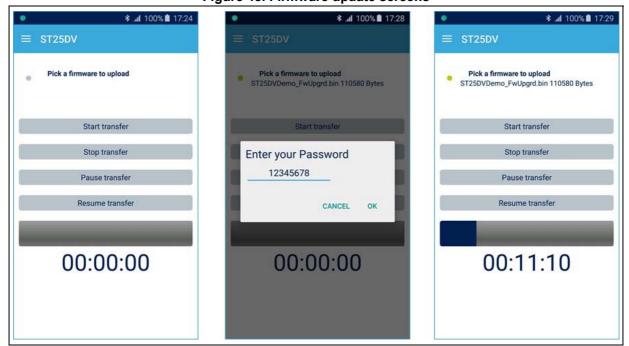


Figure 48. Firmware update screens

Note: Firmware files must be put on the phone in folder Download\bintouploadforstSt25FWU.

57

UM2131 Rev 5 51/54

5.3 Picture transfers

Picture transfer demo [ST25DV-I2C product only] - Discovery board

This demonstration is dedicated to the ST25DV-I2C tag and requires a specific firmware driving the TAG through I²C on a Discovery board. The firmware reads and/or writes the data to transfer.

Note: Refer to ST25DV-DISCOVERY firmware for details.

The picture transfer features are:

- Take a picture to upload: phone camera usage and picture taken is sent to host through tag.
- Download picture from tag: host is the master and initiate protocol to download picture from host through tag
- Pick a picture to upload: phone gallery usage and picture selected is sent to host through tag

Possible picture transfer actions are:

- Start the transfer
- Stop the transfer
- Pause the transfer
- · Resume the transfer

Picture transfer observability is provided by means of the following status:

- · A progression bar is displayed during the transfer
- A stopwatch counter is displayed and triggered by actions

Figure 49 shows examples of picture transfer screens.

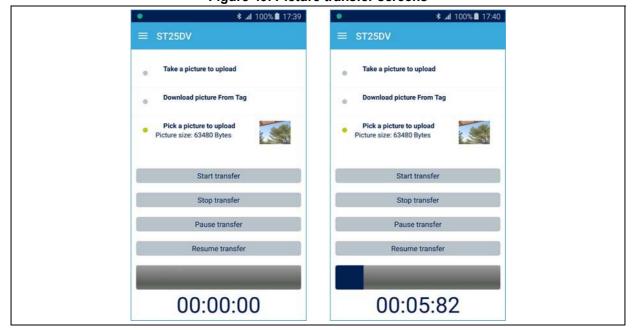


Figure 49. Picture transfer screens

Note: For download features, start the demonstration on board first and then click on the start button of the application.

7/

UM2131 Revision history

6 Revision history

Table 1. Document revision history

Date	Revision	Changes
27-Feb-2017	1	Initial release.
30-May-2017	2	Full document update in relation with the application update: sections updated and reordered in all chapters. All figures updated.
08-Jun-2017	3	Updated application URL in Section 2.1: Prerequisites.
10-Apr-2018	4	Document scope extended to the ST25TV series NFC tags and new feature descriptions added or updated: - Updated Section 2.2: Functionalities overview - Updated Section 3.3.2: NDEF editor operations - Added Section 4.3: Configuration protection - Added Section 4.8: Counter - Added Section 4.9: Tamper detect - Added Section 4.10: Lock block - Added Section 4.11: Untraceable mode - Added Section 4.12: Kill tag - Added Section 4.13: Electronic article surveillance Application renamed "ST25 Android™ NFC tap application".
26-Jun-2018	5	Document scope extended to PWM features: - Updated Introduction - Updated Section 2.2: Functionalities overview - Added Section 4.14: Pulse-width modulation configuration - Added Section 4.15: Pulse-width modulation control

IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2018 STMicroelectronics - All rights reserved

54/54 UM2131 Rev 5