


REED

Model R9800

Digital Scale

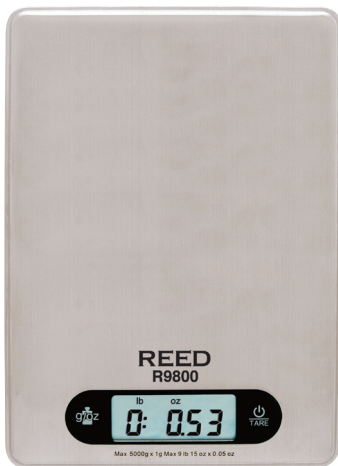

Instruction Manual

www.reedinstruments.com

REED Instruments

1-877-849-2127 | info@reedinstruments.com | www.reedinstruments.com

Table of Contents

Safety	2
Features.....	3
Specifications.....	3
Operating Instructions.....	4-5
Auto shut off.....	5

Safety

To ensure that you get the optimal performance of your scale please adhere to the following guidelines:

- Please ensure the scale is placed on a clean and leveled surface before each use.
- Never place an item that exceeds the total capacity of 5000 g or 9 lbs 15 oz on this unit. If this does occur, the screen will show an error message “-----”. Doing this may damage the scale immediately and placing a weight in excess of scale capacity on the platform is not covered under warranty.
- Let the scale acclimatize to room temperature before using in order to allow the internal components to stabilize.

Features


- Stainless steel top
- 5000g / 9lbs 15oz capacity
- 1g increments
- User selectable unit of measure
- Large LCD screen
- Quick response
- Low battery indicator
- Overload indicator
- Tare
- Auto power off

Specifications

Capacity	5000g / 9lbs 15oz
Resolution	0.1oz / 1g (min 0.2oz / 2g start)
Display	LCD 55 mm x 21 mm
Units	g / lbs / oz
Tare	Yes
Auto off	Yes
Auto zero	Yes
Low battery indicator	Yes
Over load indicator	Yes
Power	2 x AAA batteries
Platform size	8.3" x 5.9" x 0.5" (210 x 150 x 12 mm)
Certification	CE


Operating Instructions

Insert 2 x “AAA” batteries into the scale



Power on

Press  button to turn on the scale, “88888” will display on the screen. When “0 oz” appears the scale is ready to use.



Measure weight

Place the items to be measured in the middle of the stainless steel platform, the weight value will go up quickly and display on the screen.



Tare

Place an empty plate on the platform if needed, then when the weight value is steady, press the  button to set the scale's zero point.



REED Instruments

1-877-849-2127 | info@reedinstruments.com | www.reedinstruments.com

Change the measurement unit weight

The default measurement is in oz/lb. You can change the measurement value to g by pressing the  button. (Note: if the rate of gram to libra is very small, and the weight is too light, lb will show 0).



Auto shut off:

Unit will automatically shut off after 2 minutes of idle use.

For service on this or any other REED product or information on other REED products, contact REED Instruments at info@reedinstruments.com.

REED Instruments

1-877-849-2127 | info@reedinstruments.com | www.reedinstruments.com

Notes

Notes

Notes
