

Replacement Parts

E87010-A0092-T010-A4-87JC

Pump Panel
Size 2, 2½

August, 2019




WARNING

Hazardous voltage
Can cause death or serious injury.

Disconnect main power and control voltages before installation or maintenance on this equipment.

IMPORTANT


THESE INSTRUCTIONS DO NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT, NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE PURCHASER'S PURPOSES, THE MATTER SHOULD BE REFERRED TO THE LOCAL SIEMENS SALES OFFICE. THE CONTENTS OF THIS INSTRUCTION MANUAL SHALL NOT BECOME PART OF OR MODIFY ANY PRIOR OR EXISTING AGREEMENT, COMMITMENT OR RELATIONSHIP. THE SALES CONTRACT CONTAINS THE ENTIRE OBLIGATION OF SIEMENS. THE WARRANTY CONTAINED IN THE CONTRACT BETWEEN PARTIES IS THE SOLE WARRANTY OF SIEMENS. ANY STATEMENTS CONTAINED HEREIN DO NOT CREATE NEW WARRANTIES OR MODIFY THE EXISTING WARRANTY.

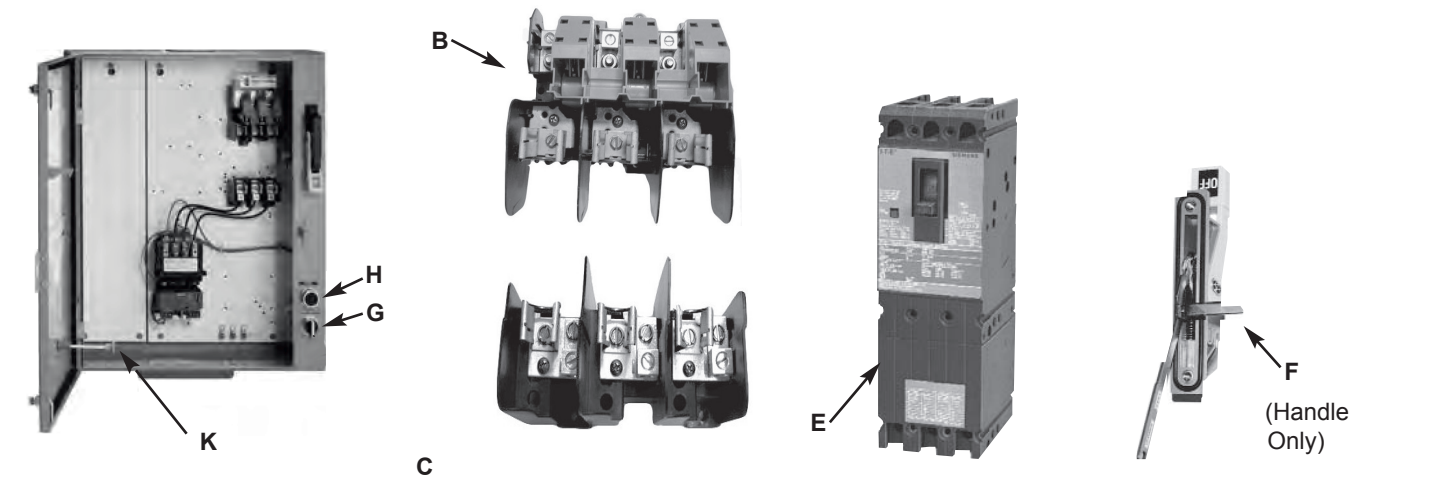

Item	Part Name	Part Number		
B	Switch Block Assembly with Fuse Clips	250V	60A	HFB22
			100A	HFB63
		600V	60A	HFB62
			100A	HFB63
C	Fuse ClipKit (Class R)	250V	60A	HBB22 & HR612
		600V	60A	HBB62 & HR62
		250V / 60 0V	100A	HBB63 & HR63
E	MotorCircuit Protector	600VAC	30A	ED63A030
			40A	ED63A040
			50A	ED63A050
			100A	ED63A100
F	Complete Handle Assembly Yoke, Lever, (Not Shown)	for Disconnect	75D68257103	
		for Circuit Breaker	75D68257080	
F	Handle Only	for Disconnect	75D73944015	
		for Circuit Breaker	75D73944025	
G	H-O-A Selector Switch Components			
		30 mm Selector Switch Actuator	3SU10622DL600AA0	
		Module Holder	3SU15500AA100AA0	
		N.O. Contact Module	3SU14001AA101BA0 (Qty 2)	
H	Start Push Button Components	Contact Module Plate for Dust Resistance	3SU19000AY610AA0	
		30 mm Momentary Push Button Actuator	3SU10600JB100AA0	
		Module Holder	3SU15500AA100AA0	
K	Reset Assembly	N.O. Contact Module	3SU14001AA101BA0	
		Contact Module Plate for Dust Resistance	3SU19000AY610AA0	

NOTE:
When ordering replacement parts give catalog number of control and part name and number.

NOTE:
When ordering replacement parts, give catalog number of control and part name and number.

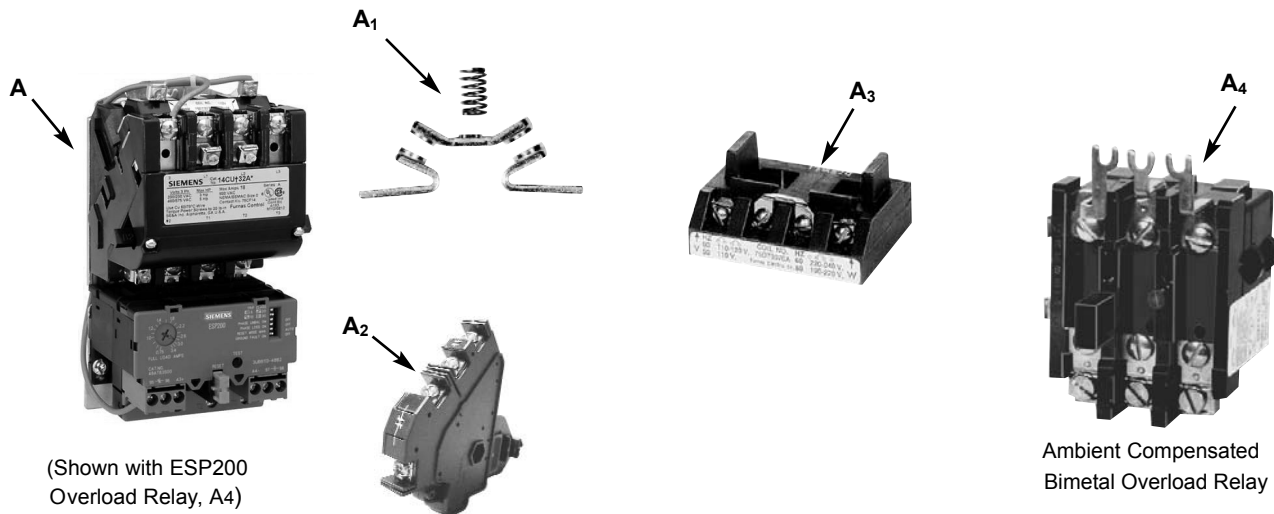

Item	Part Name	Part Number		
A	Starter with ESP200	Motor FLA		
		Size 2	13-52A	14FUF32A*
		Size 2½	25-100A	14GUG32A*
	Starter with Ambient Compensated Bimetal	Size 2		14FP32A*81
A1	Contacts & Spring, One Complete Pole	Size 2		75FF14
		Size 2½		75GF14
A2	Auxiliary Contact			49AB10
A3	Coil	50 Hertz		
		60 Hertz		
		110-120 / 220-240V	110 / 190-220V	75D73070A
		220-240 / 440-480V	190-220 / 380-440V	75D73070C
		200-208V		75D73070D
		550-600V	550V	75D73070E
A4	ESP200 Overload Relay Only	Motor FLA		
		Size 2	13-52A48BTF3S00	(3UB81334FW2)
		Size 2½	25-100A48BTG3S00	(3UB81334GW2)
	Ambient Compensated Bimetal Overload Relay			48GC38AA3

Coil Table		NOTE: When ordering replacement parts, give catalog number of control and part name and number. Replace the (*) with letter from the coil table.
60 Hz Voltage	Letter	
110-120/220-240	A	
220-240/440-480	C	
200-208	D	
550-600	E	