

KLQ6129 SERVICE MANUAL

Apply to 6129 11V8X0001-09 Russian

HIGER BUS COMPANY OVERSEAS SERVICE CUSTOMER DEPARTMENT

仅供参考 不准翻印 如资料与实物不符时，以实物为准 出版时以最新资料为准

This is for reference only. The real products and the latest version of the manual shall prevail.

2011.05.15

说明:

1. 本手册基本根据出厂时的装备整理而成。
2. 考虑到手册的通用性, 本手册除包含本批车的装备外, 可能还包括同系列车的可能的选用装置。
3. 定单中的特别的装备的维修手册可能不全, 今后我们会逐步补写完整。
4. 本手册内容仅供参考, 如与实物不符, 请以实物为准; 本司保留不经通知对资料内容修改的权力。
5. 本书以成书前收集到的最新资料整合汇编而成。
6. 对于公交车, 尽可能涵盖空调、暖风、报站器、喊话器、投币机、电子显示屏、行车记录仪、GPS 导行系统、倒车监视器、视听系统(含收音机)。
7. 欢迎使用后对我们提出宝贵意见, 以便改进。
8. 维修时购买配件请以配件图册为准。

海外客户服务部

2011.05.15

Note:

1. This manual is edited on basis of the configuration of the vehicles.
2. Besides the configuration of the vehicles, this manual also contains the instruction of the optional parts which fit the same models of vehicles.
3. Some special equipment may not be mentioned in this manual, which can be supplied later if they are needed.
4. This manual is for reference only. If it is inconsistent with the factual equipment, the factual one shall prevail. We reserve the right to amend the manual without notification in advance.
5. The manual is edited according to the latest documents.
6. Concerning city bus, it covers the air-conditioning, heaters, destination speaker, microphone, and fares box, electronic display, vehicle data recorder, GPS and audiovisual system(including radio recorder).
7. We appreciate your suggestions of this manual.
8. shop parts basing for catalog while service vehicle.

TEL: 0512-62582609

FAX: 0512-62584058

MAIL: higerservice@higer.com.cn

Address: No.288, the East Road of the Suhong Road, Suzhou Industry Park, Jiangsu Province, China

Postal code: 215126

HIGER BUS COMPANY OVERSEAS SERVICE CUSTOMER DEPARTMENT

仅供参考 不准翻印 如资料与实物不符时, 以实物为准 出版时以最新资料为准

This is for reference only. The real products and the latest version of the manual shall prevail.

2011.05.15

Contents

No.	Item	Name
1	3906_00001	General Information
2	3906_10016	ISLe Operation and Maintenance Manual
3	3906_11010	Cummins SCR Emission Post-treatment System
4	3906_11004	Engine Accessory For Cummins Euro
5	3906_16001	Clutch System Service Manual
6	3906_17014	Manual Transmission_QJ S6-160 With three cable EN
7	3906_22001	Propeller Shaft
8	3906_24003	Rear Axle_For Fangsheng With Drum brake
9	3906_30008	Front Axle_ FangSheng with Disc Brake
10	3906_29005	Air Suspension for Neway
11	3906_31001	Service Manual of wheel and tyre
12	3906_34002	Steering System_For 9.6-12M Coach
13	3906_35502	Braking System Air Brake and Valve
14	3906_35001	Retarder mechanical part
15	3906_35003	hongquan retarder manual.pdf
16	3906_35004	WABCO-ABS manual
17	3906_99001	Centralized Lubrication
18	3906_38001	Instrument Panel Service Manual
19	3906_53001	Window Service Manual
20	3906_53002	Compartment Door Service Manual
21	3906_57001	Service Manual of Roof Hatch
22	3906_61001	Passenger Door Service Manual
23	3906_67001	Seat Service Manual
24	3906_82001	Rear View Mirror
25	3906_82003	Use and Maintenance Manual for Fire Extinguisher
26	3906_36003	AP-S90 Electric Car Radio instruction manual
27	3906_37005	Vehicle electronic clock Service Manual
28	3906_37011	WIPER and Washer Service Manual
29	3906_81001	Air conditioning
30	3906_81501	Heating System and defroster
31	3906_81501_3	Webasto electronic injection heater
32	3906_37001	Electrical System For 9.7-12M Coach
33	3906_37007	Repair & Maintenance Manual of Vehicle Battery
34	3906_37008	Service Manual of Starter
35	3906_37004	Prestolite Alternator Manual
36	Annex	Wire harness


HIGER BUS COMPANY OVERSEAS SERVICE CUSTOMER DEPARTMENT

仅供参考 不准翻印 如资料与实物不符时, 以实物为准 出版时以最新资料为准


This is for reference only. The real products and the latest version of the manual shall prevail.

2011.05. 15

37V8X-24100-AMP

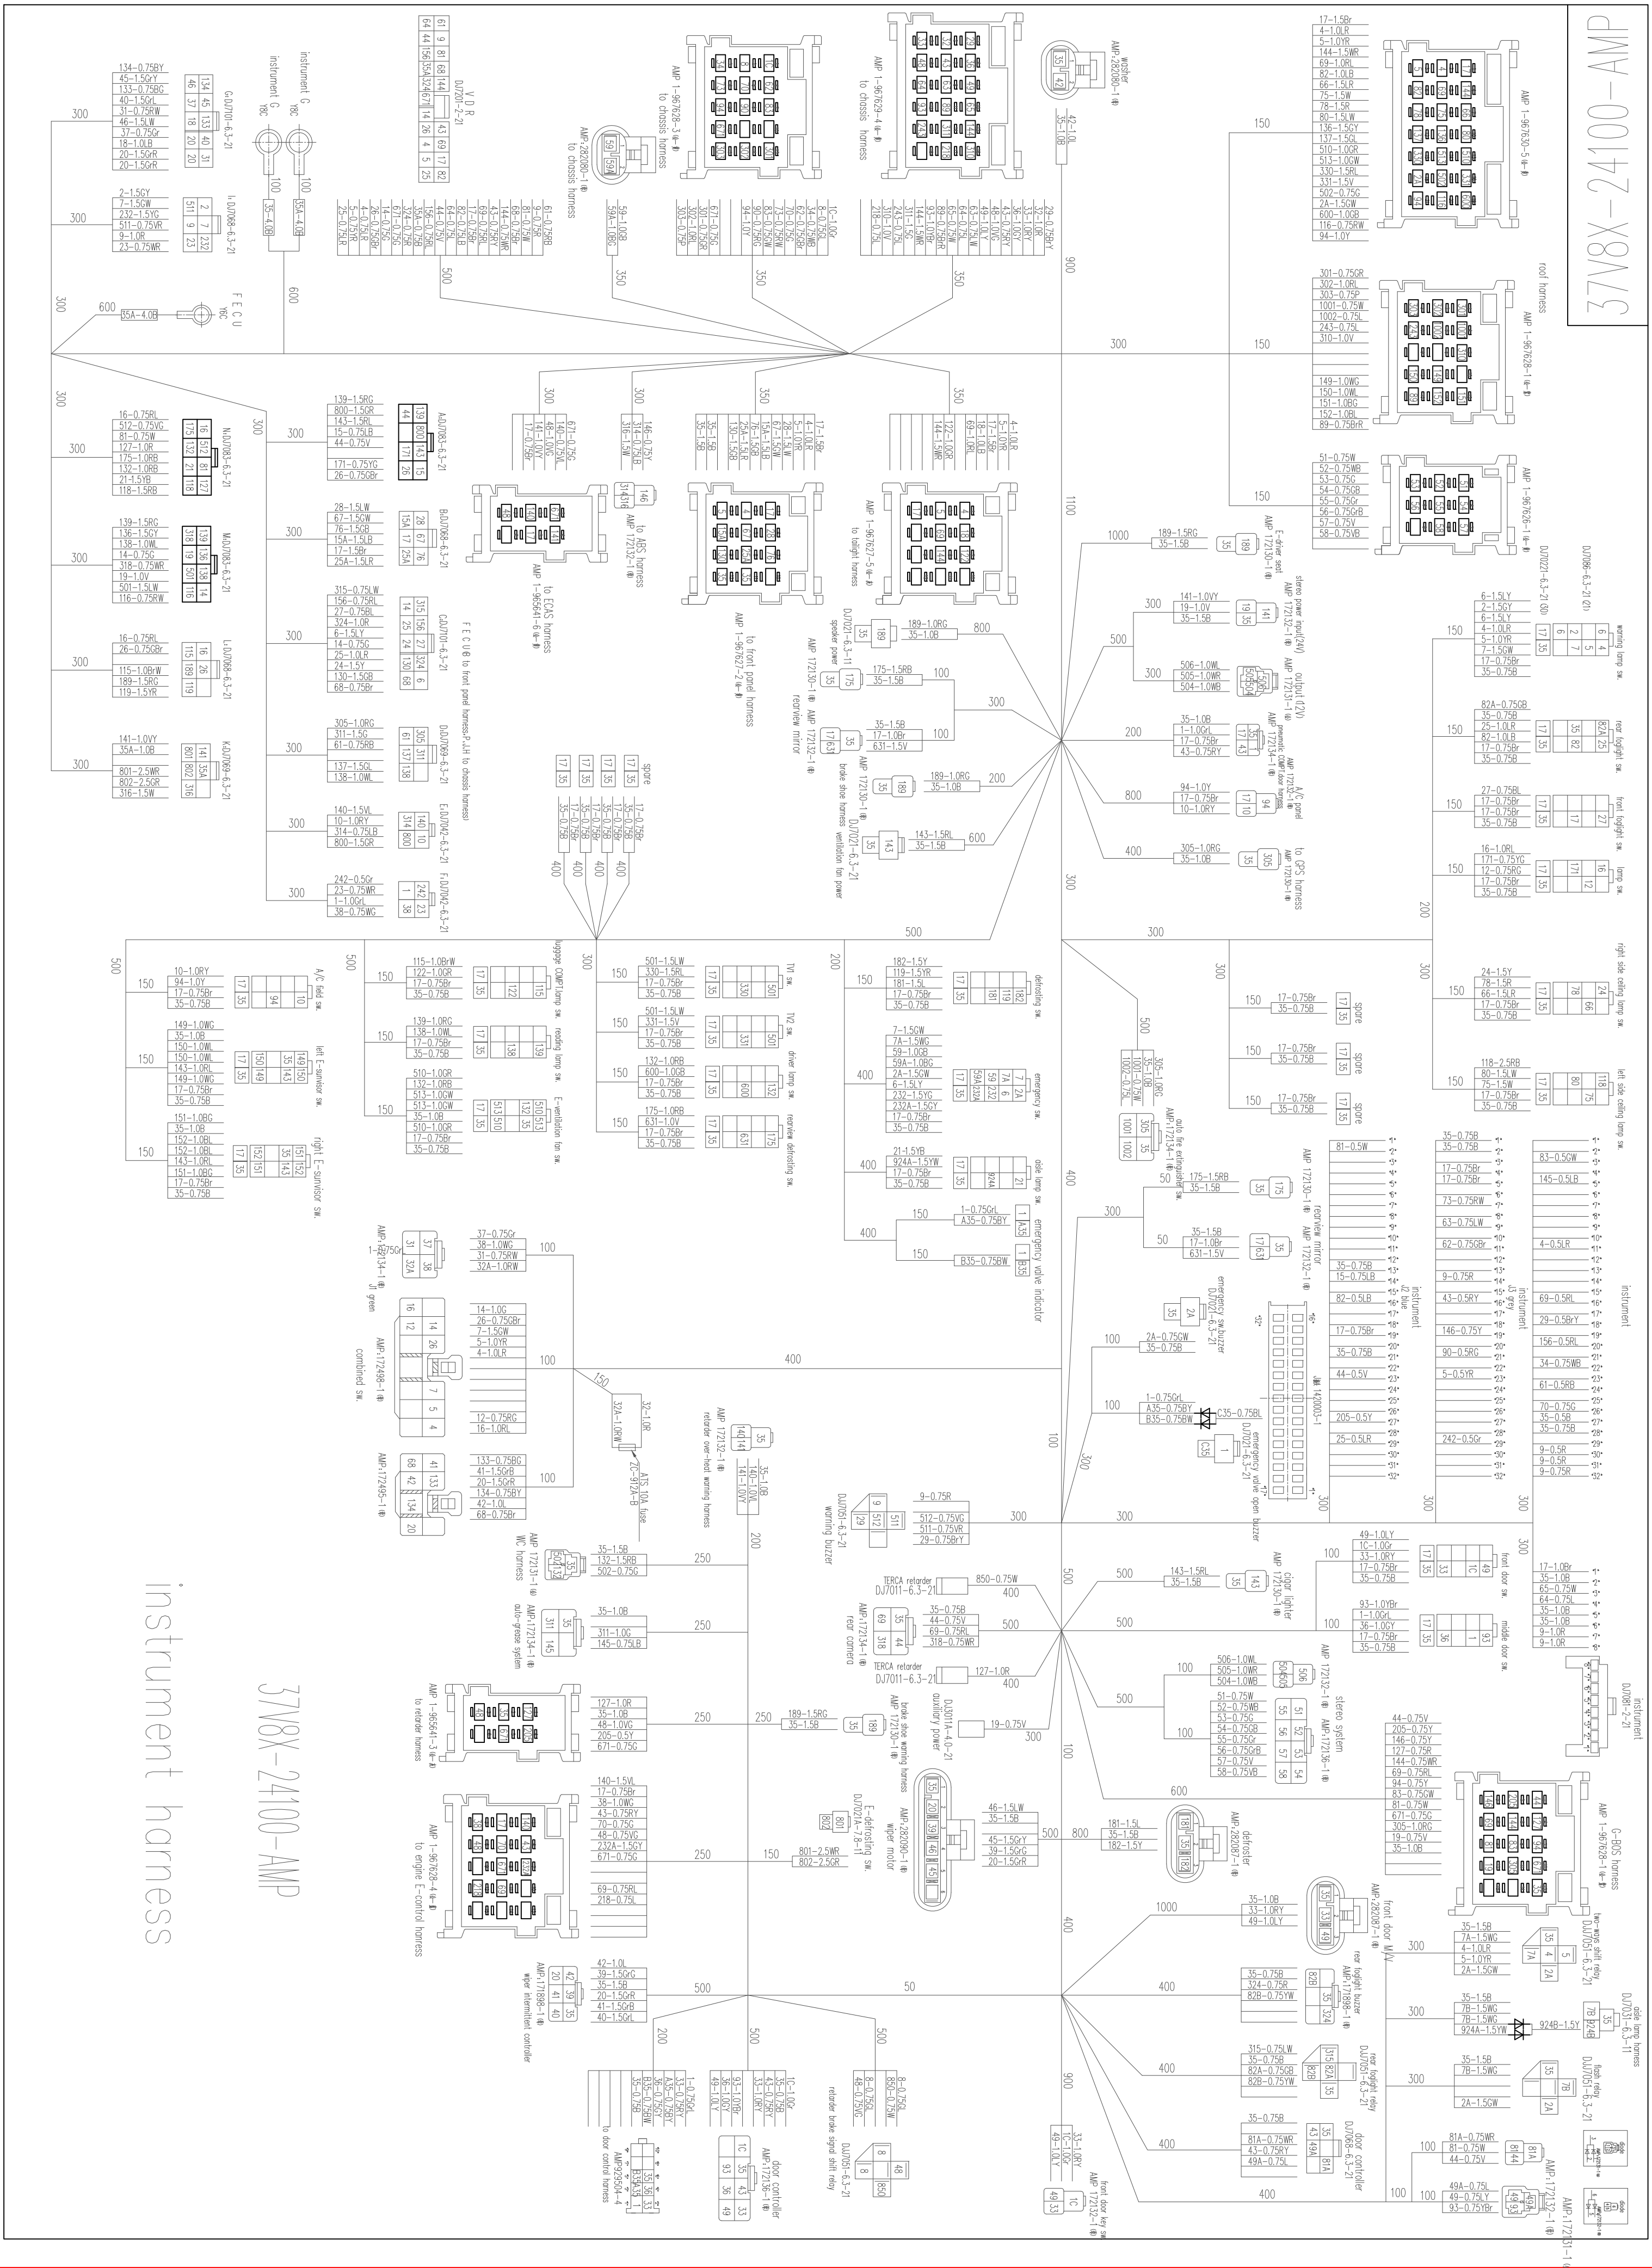


mechanical sn.




37V8X-24200-AMP

rear connector
AMP 282080-1


1 2 3 4 5

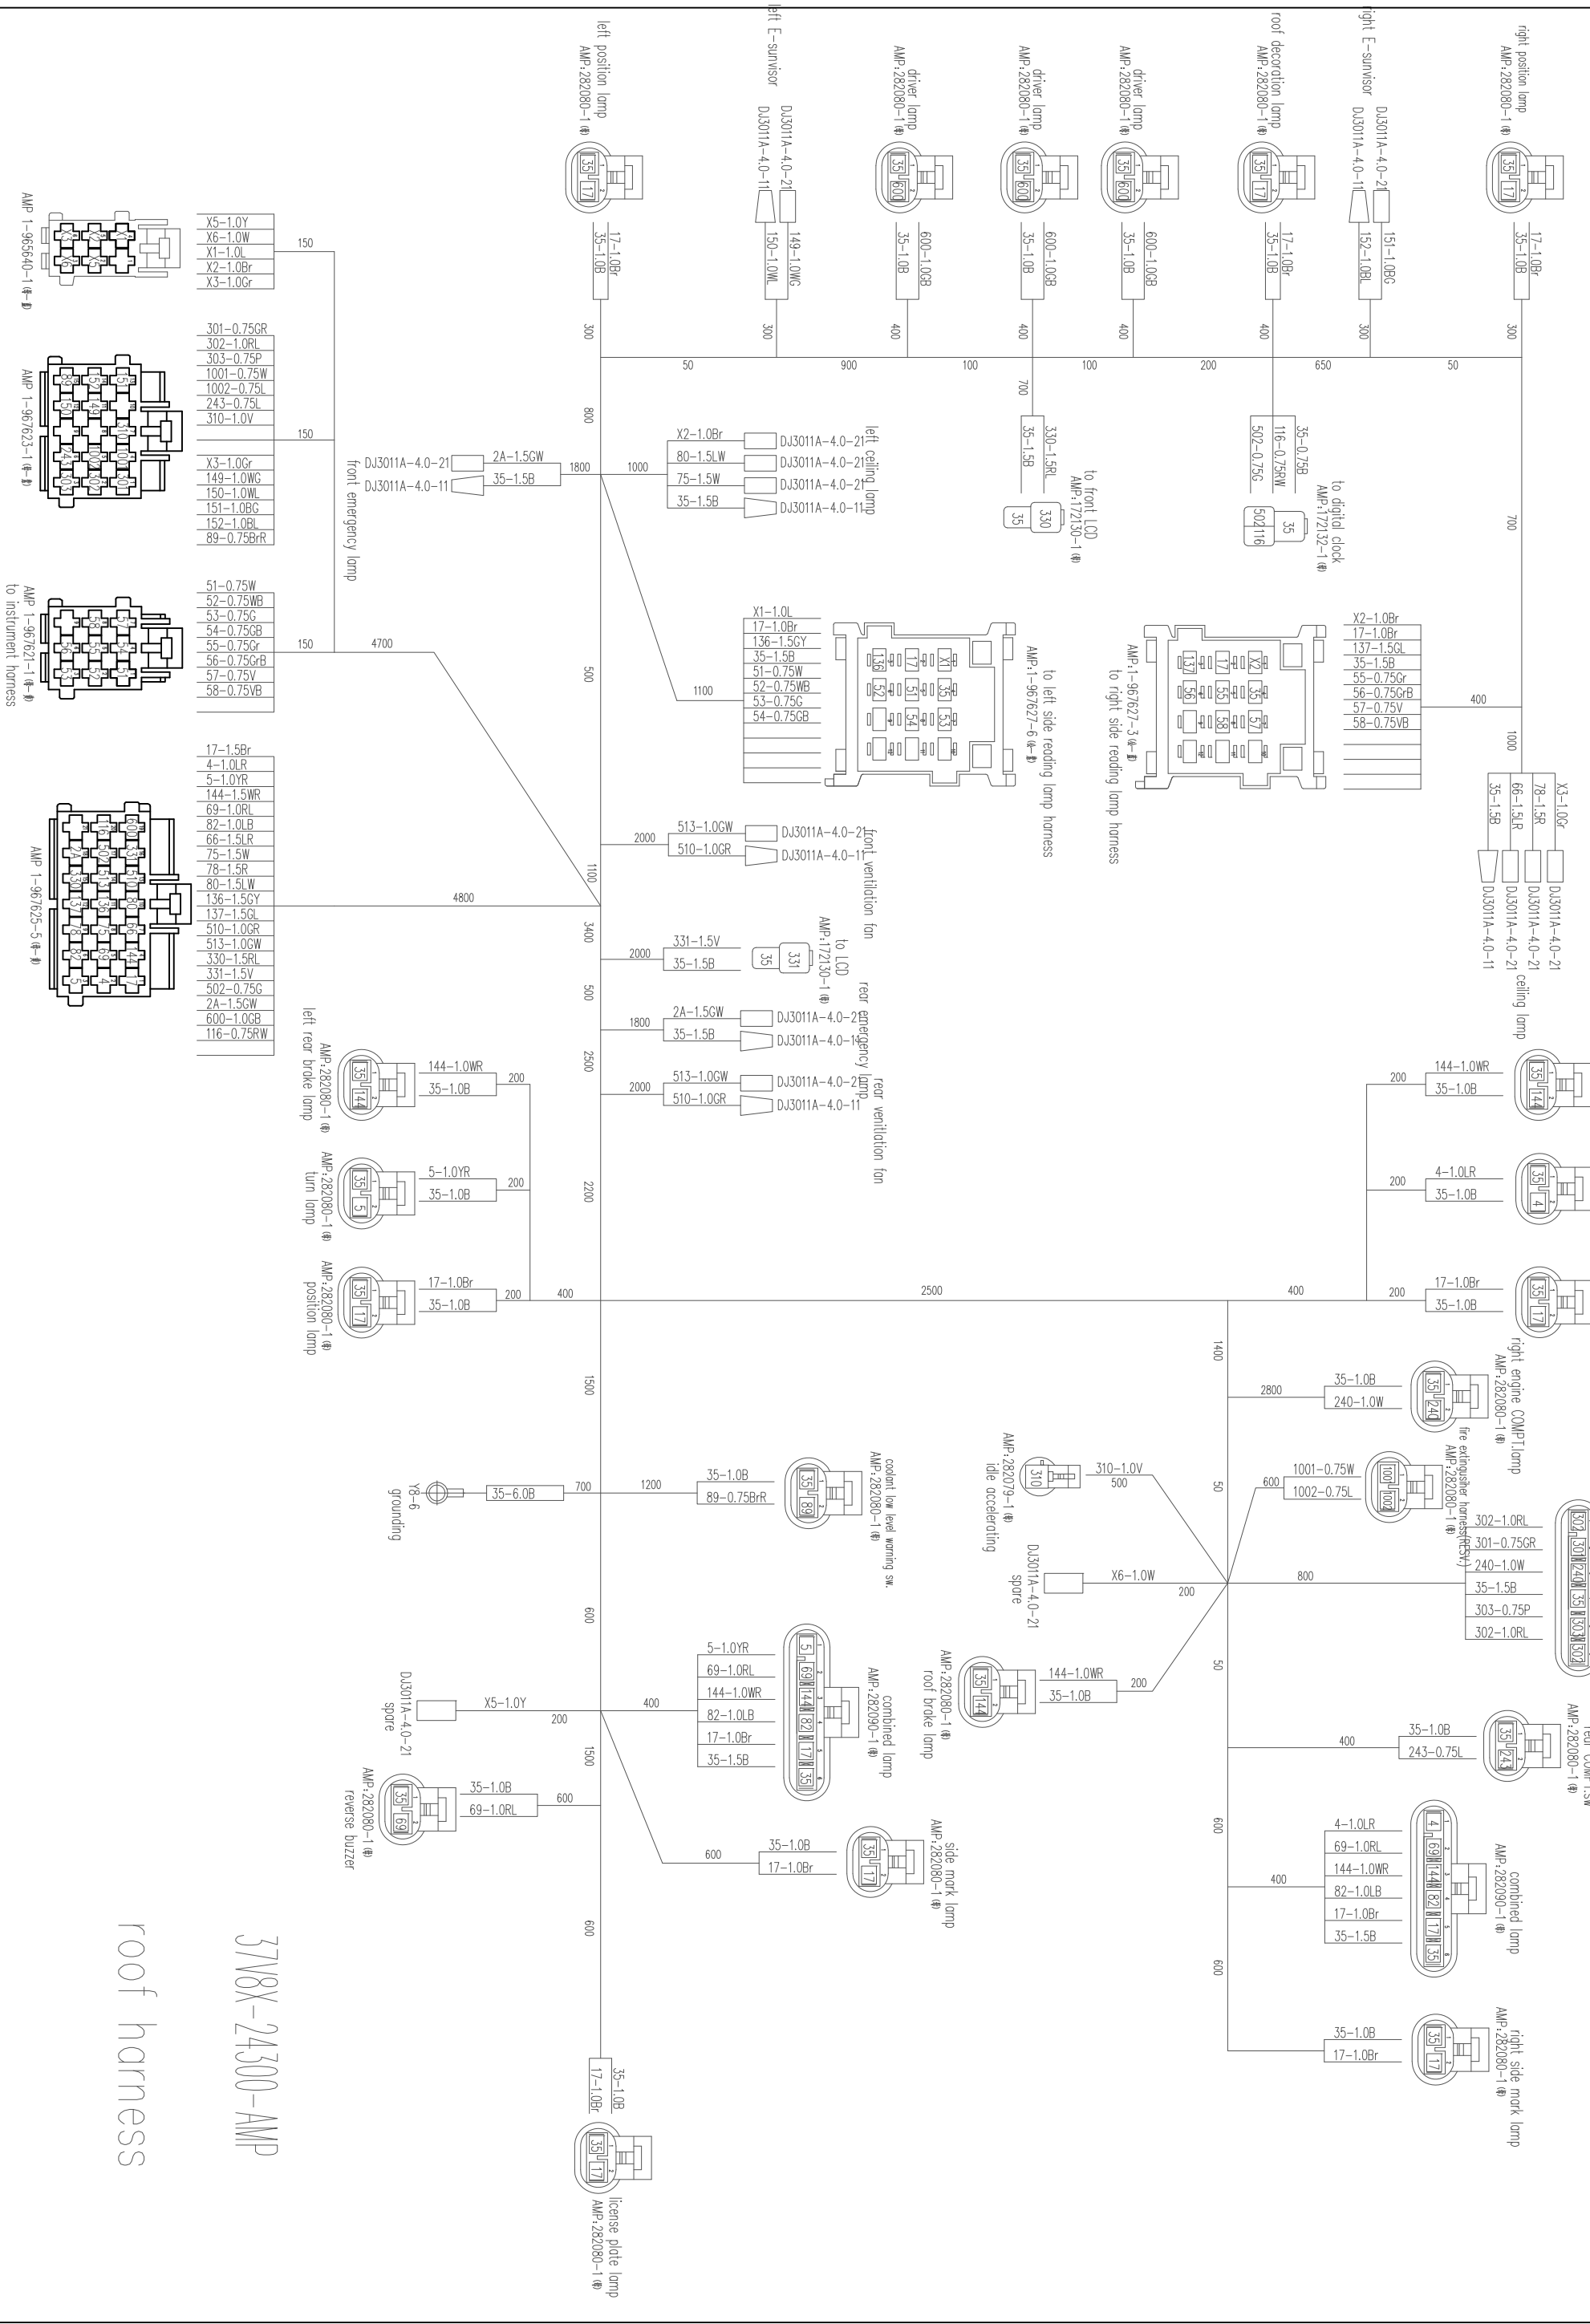

door pump control wire harness

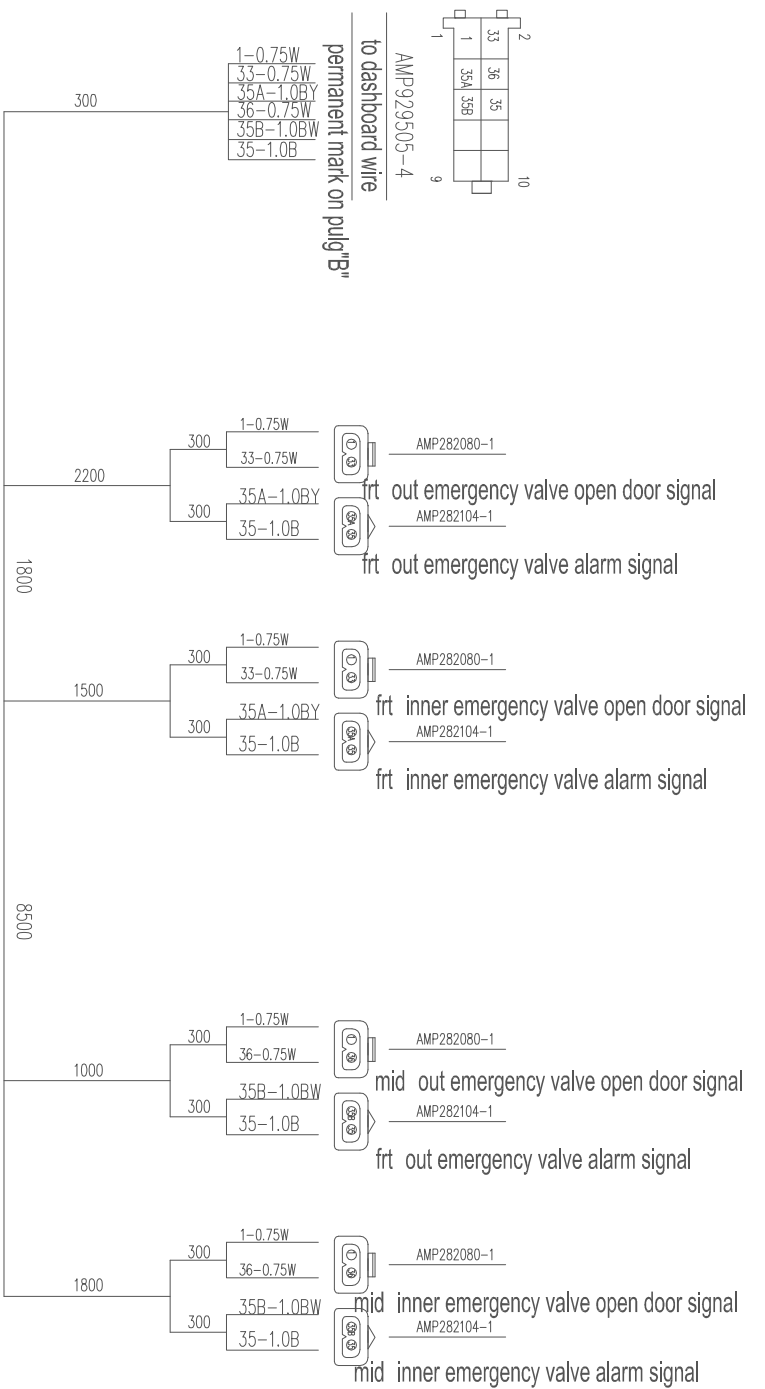

37UC2-24450-B1

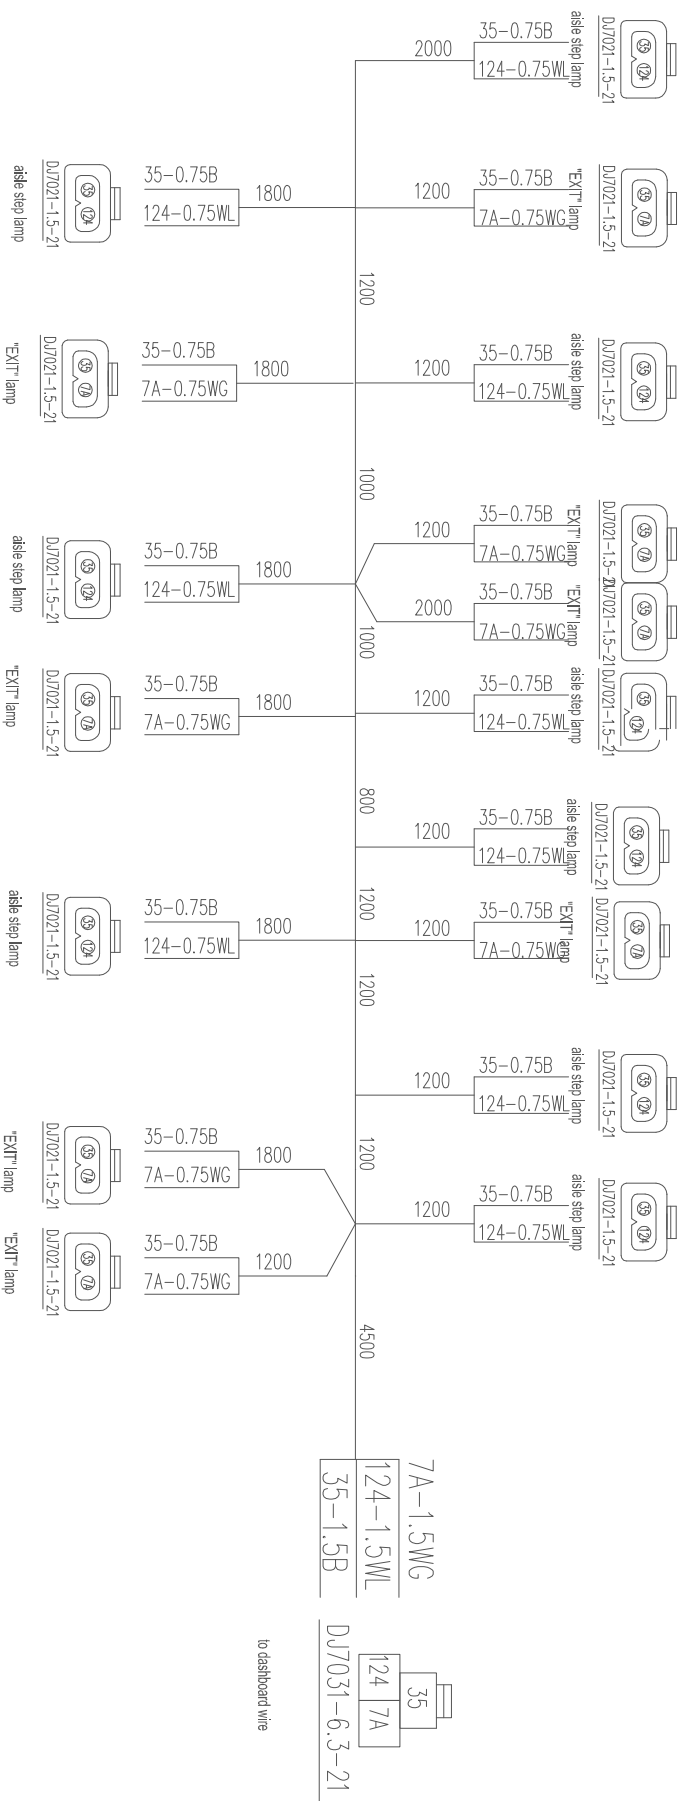

aisle lamp auxiliary wire harness

37V5S-24605

- 1.
- 2.

37VON-24800-AMP

right 1 speaker 8Ω

right 2 speaker 8Ω

right 3 speaker


right 4 speaker 8Ω

right 5 speaker 8Ω

right 6 speaker 8Ω

right 7 speaker 8Ω

right 8 speaker 8Ω

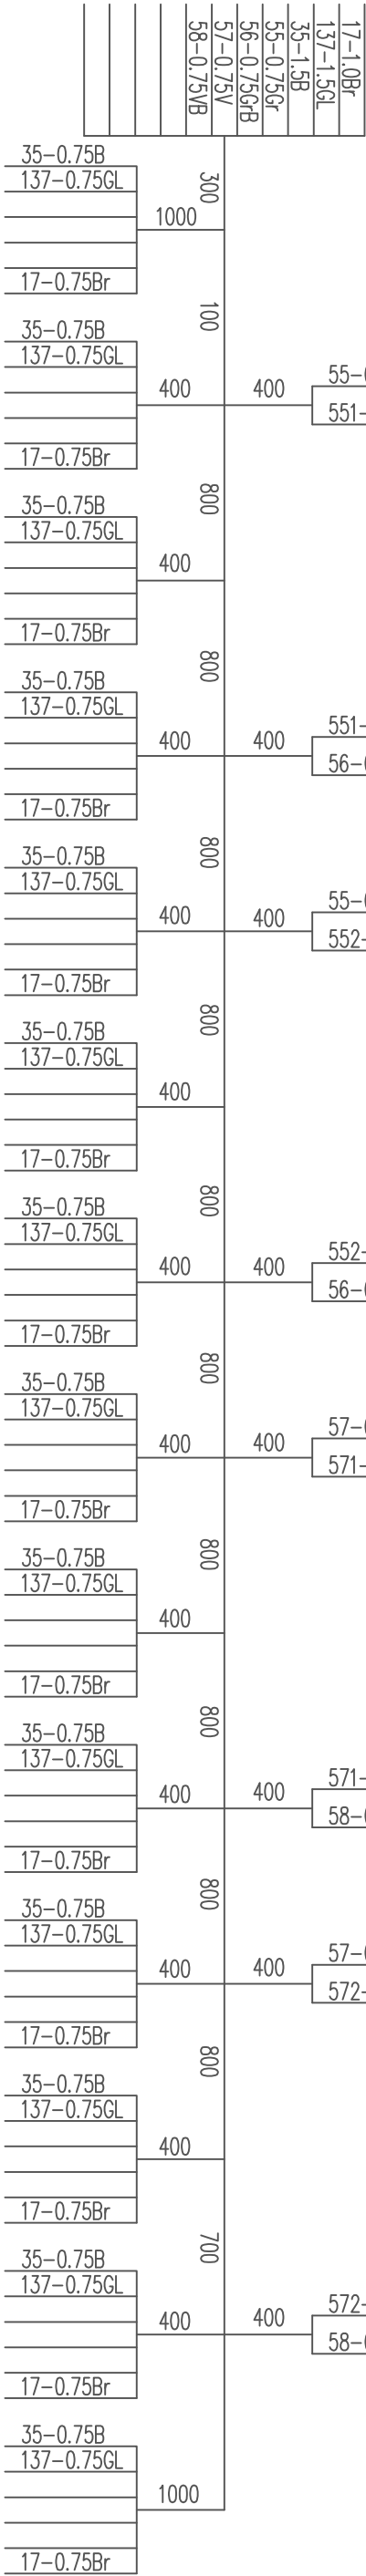

left 1 speaker 8Ω

left 2 speaker 8Ω

left 3 speaker 8Ω


left 4 speaker 8Ω

left 5 speaker 8Ω


left 6 speaker 8Ω

left 7 speaker 8Ω


left 8 speaker 8Ω

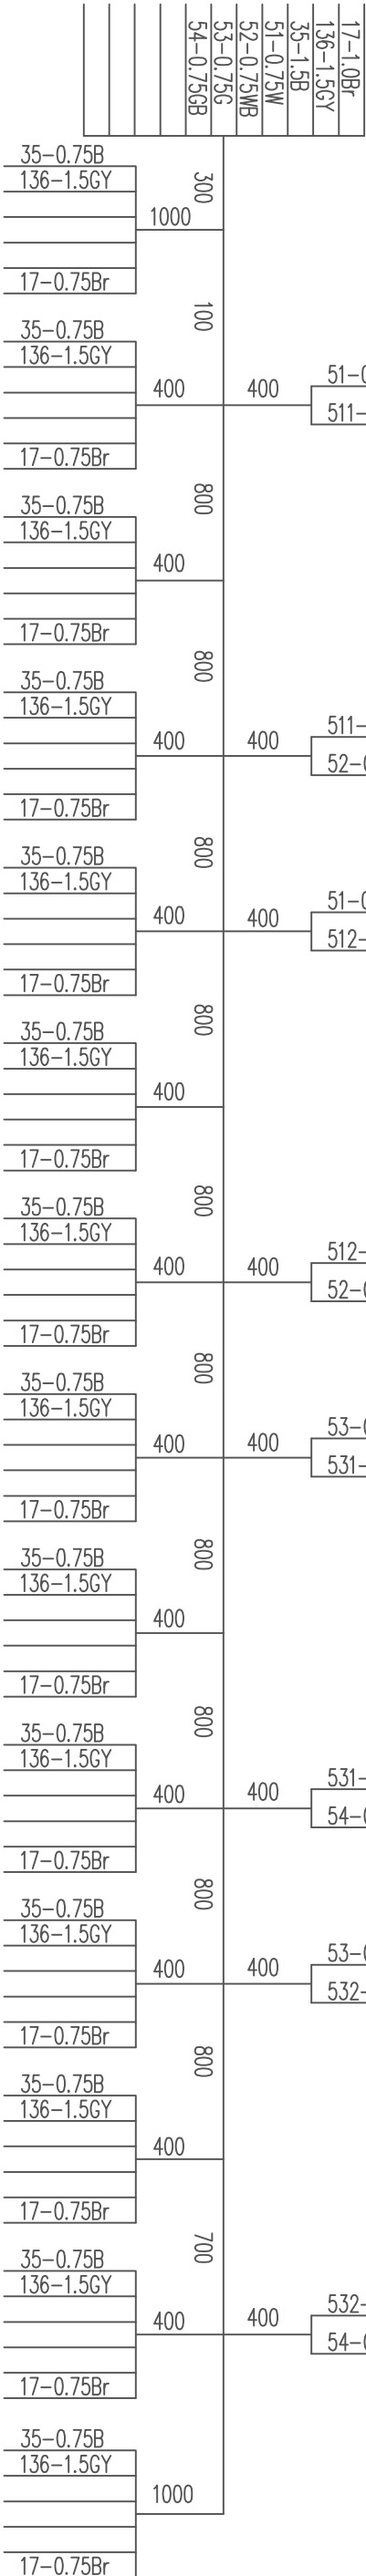

AMP:1-967622-3 (4-#) to roof harness right side



AMP:171898-1 (4-#) to reading lamp

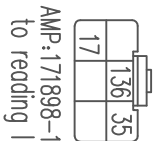


AMP:171898-1 (4-#) to reading lamp


37VON-24800-AMP

reading lamp harness

AMP:1-967622-6 (4-#) to roof harness left side

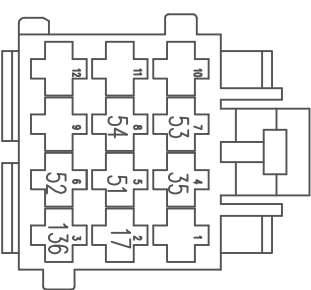


37VON-24500-AMP

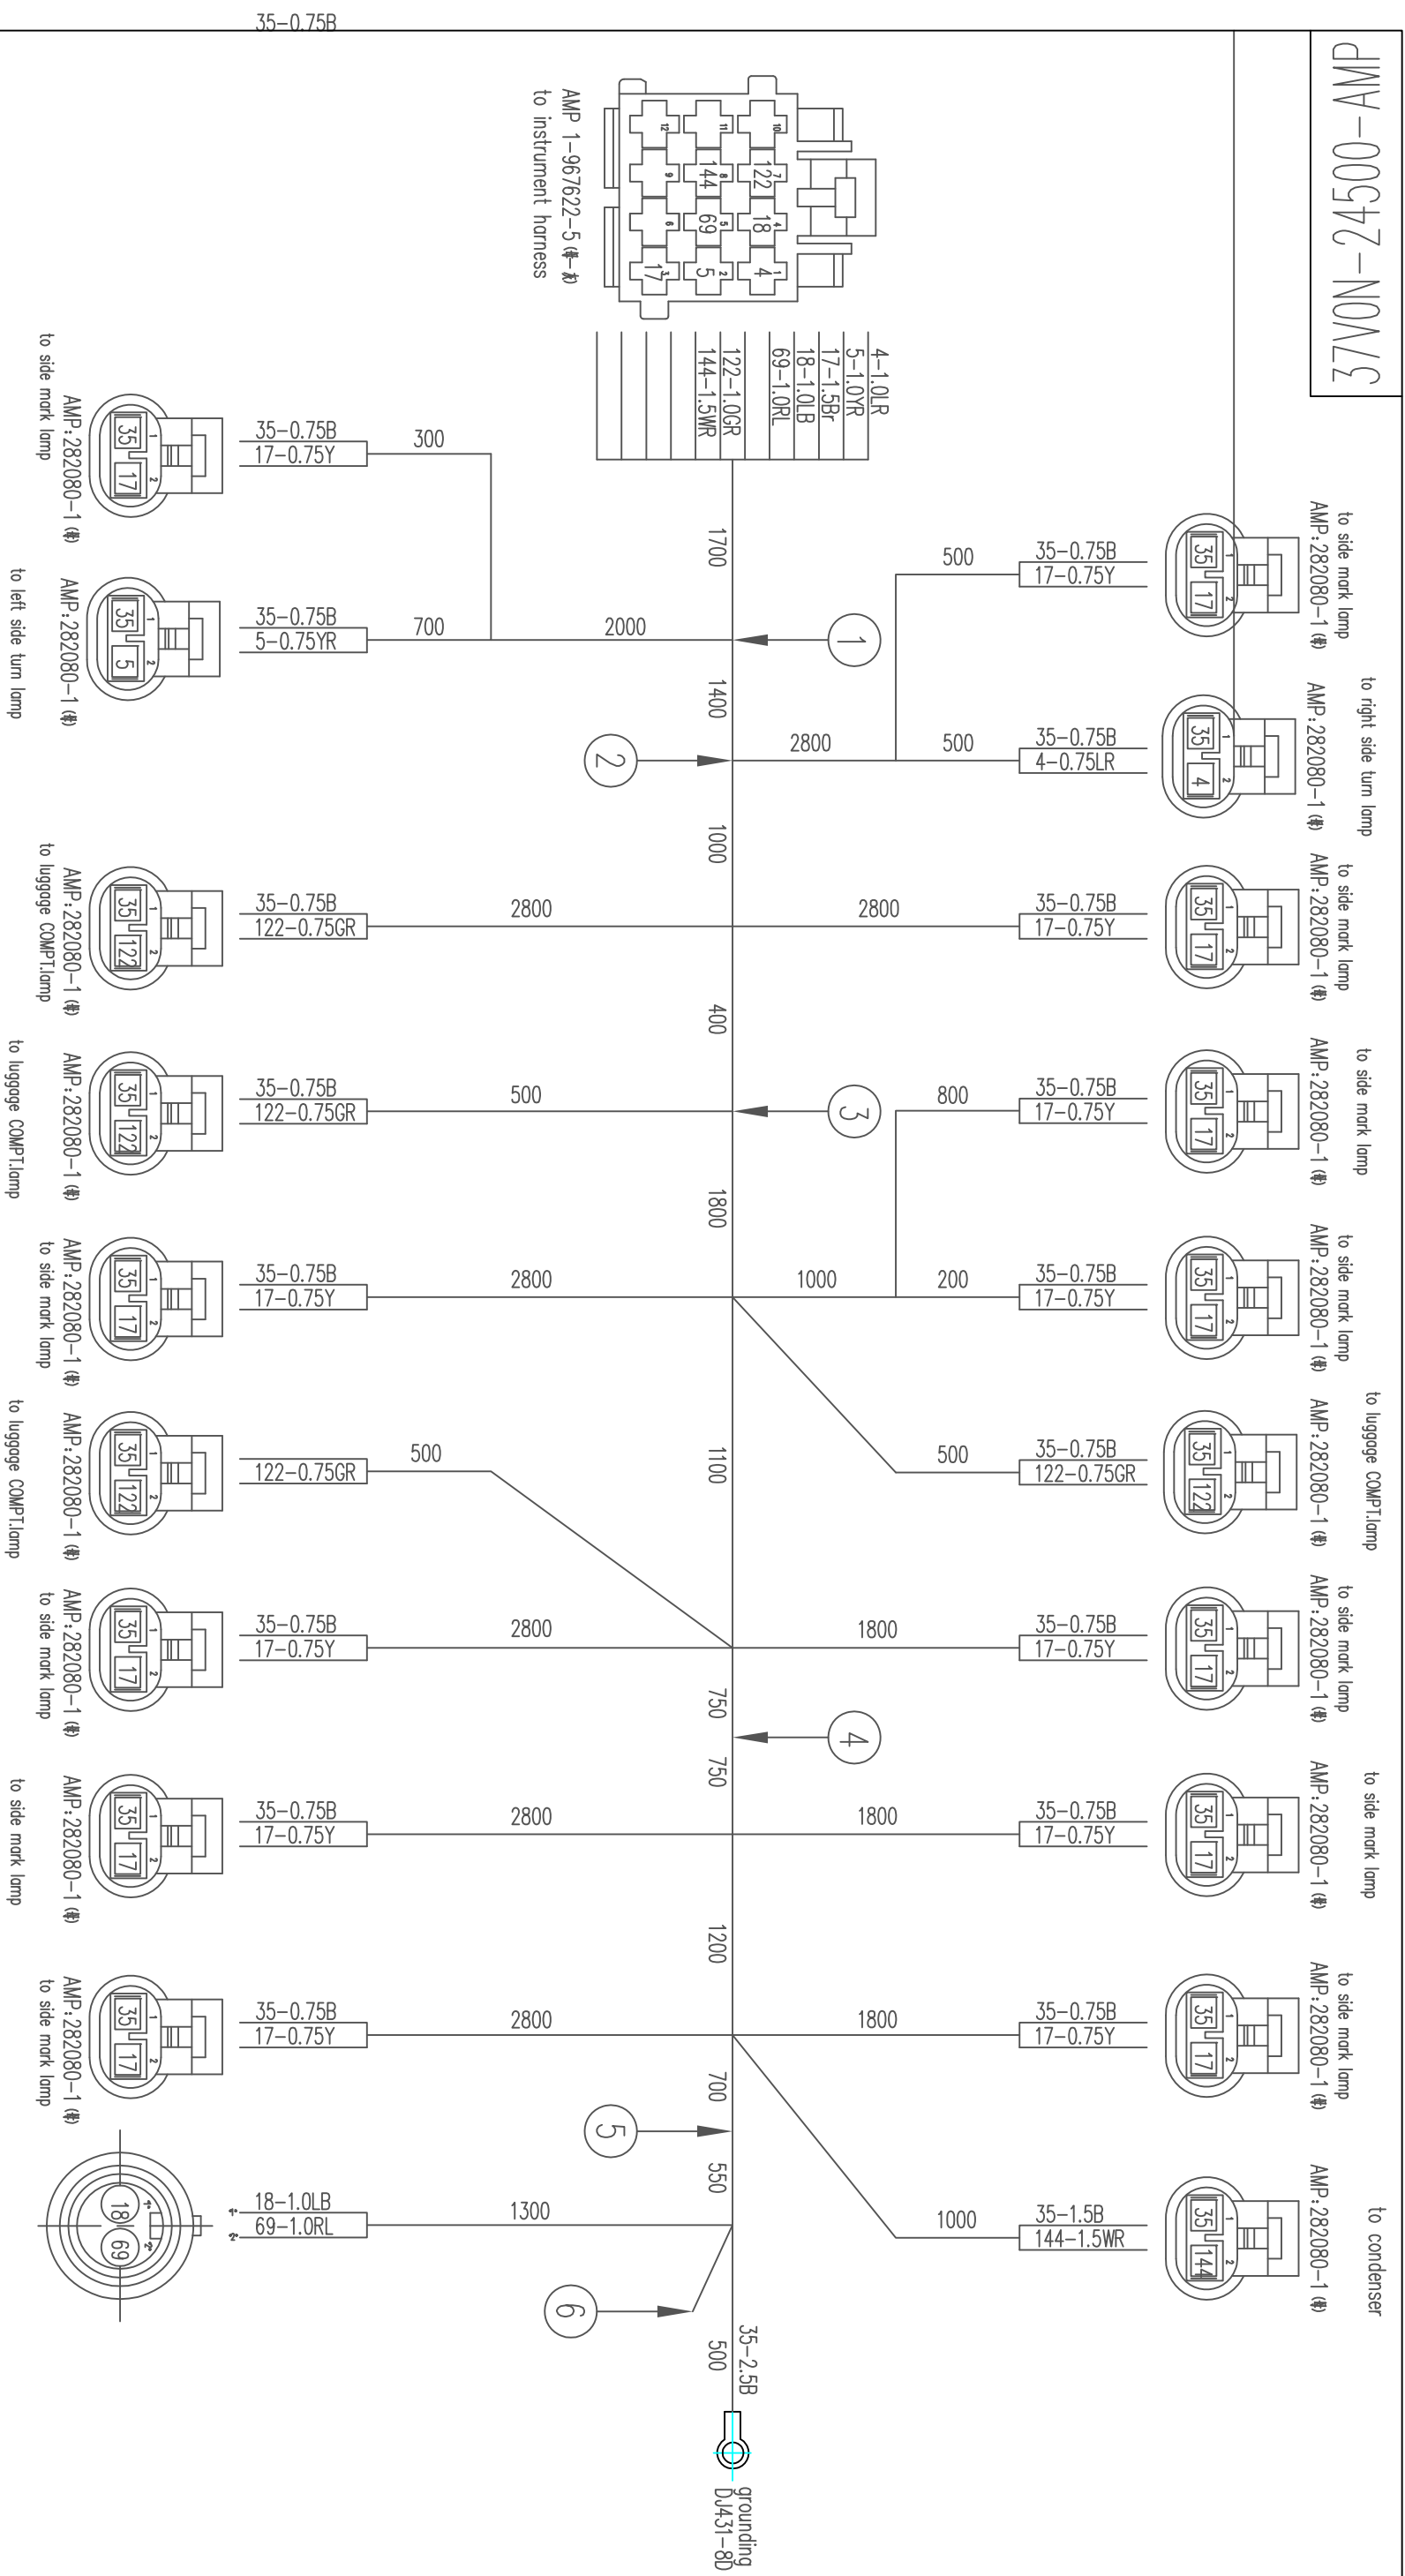

37VON-24500-AMP


tailight harness

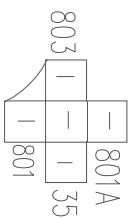

DJ7051-6.3-21

继电器 relay

35-0.75B
801A-2.5WR
801-2.5WR
803-0.75RB

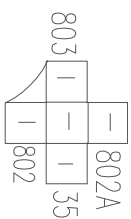

DJ7051-6.3-21

继电器 relay

35-0.75B
802A-2.5GR
802-2.5GR
803-0.75RB

DJ7021-6.3-21
前挡电除霜电源 (左)



802A-2.5GR
800

deforst switch
前挡除霜开关



35-0.75B
803-0.75RB
801-0.75WR
803-0.75RB


1000

1500

300

300

500



35-0.75B
ground

801A-2.5WR
800



DJ7021-6.3-21

前挡电除霜电源 (右)

electric defrost

power(right)


DJ7021A-7.8-21

接线表表

connect to dashboard

wire harness

starter

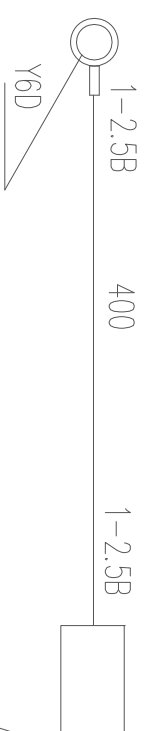

400

1-2.5B

DJ7011-7.8-21

DJ7011-7.8-11


2件

37SE4-24905


电除霜线束
electric defrost
wire harness

1:2

P4W-00472-X8A/C

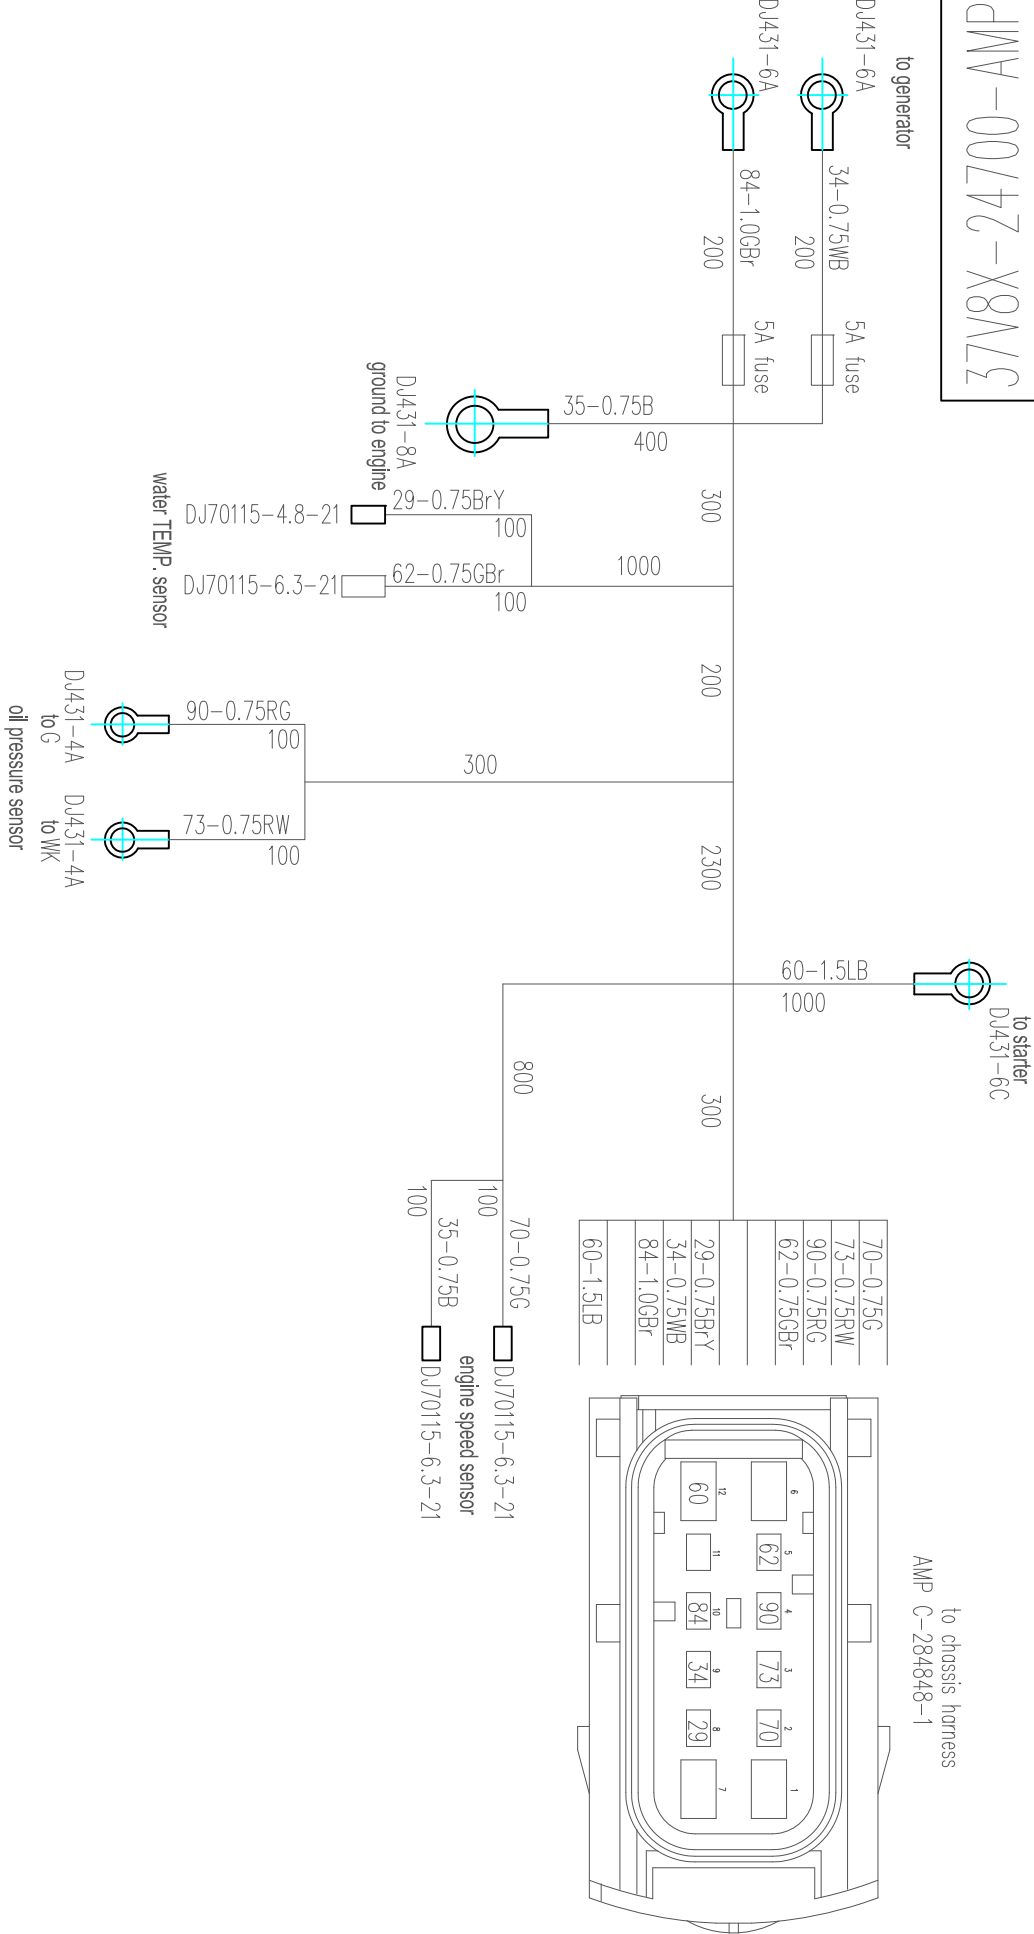


ISLE engine harness 37V8X-24700-AMP

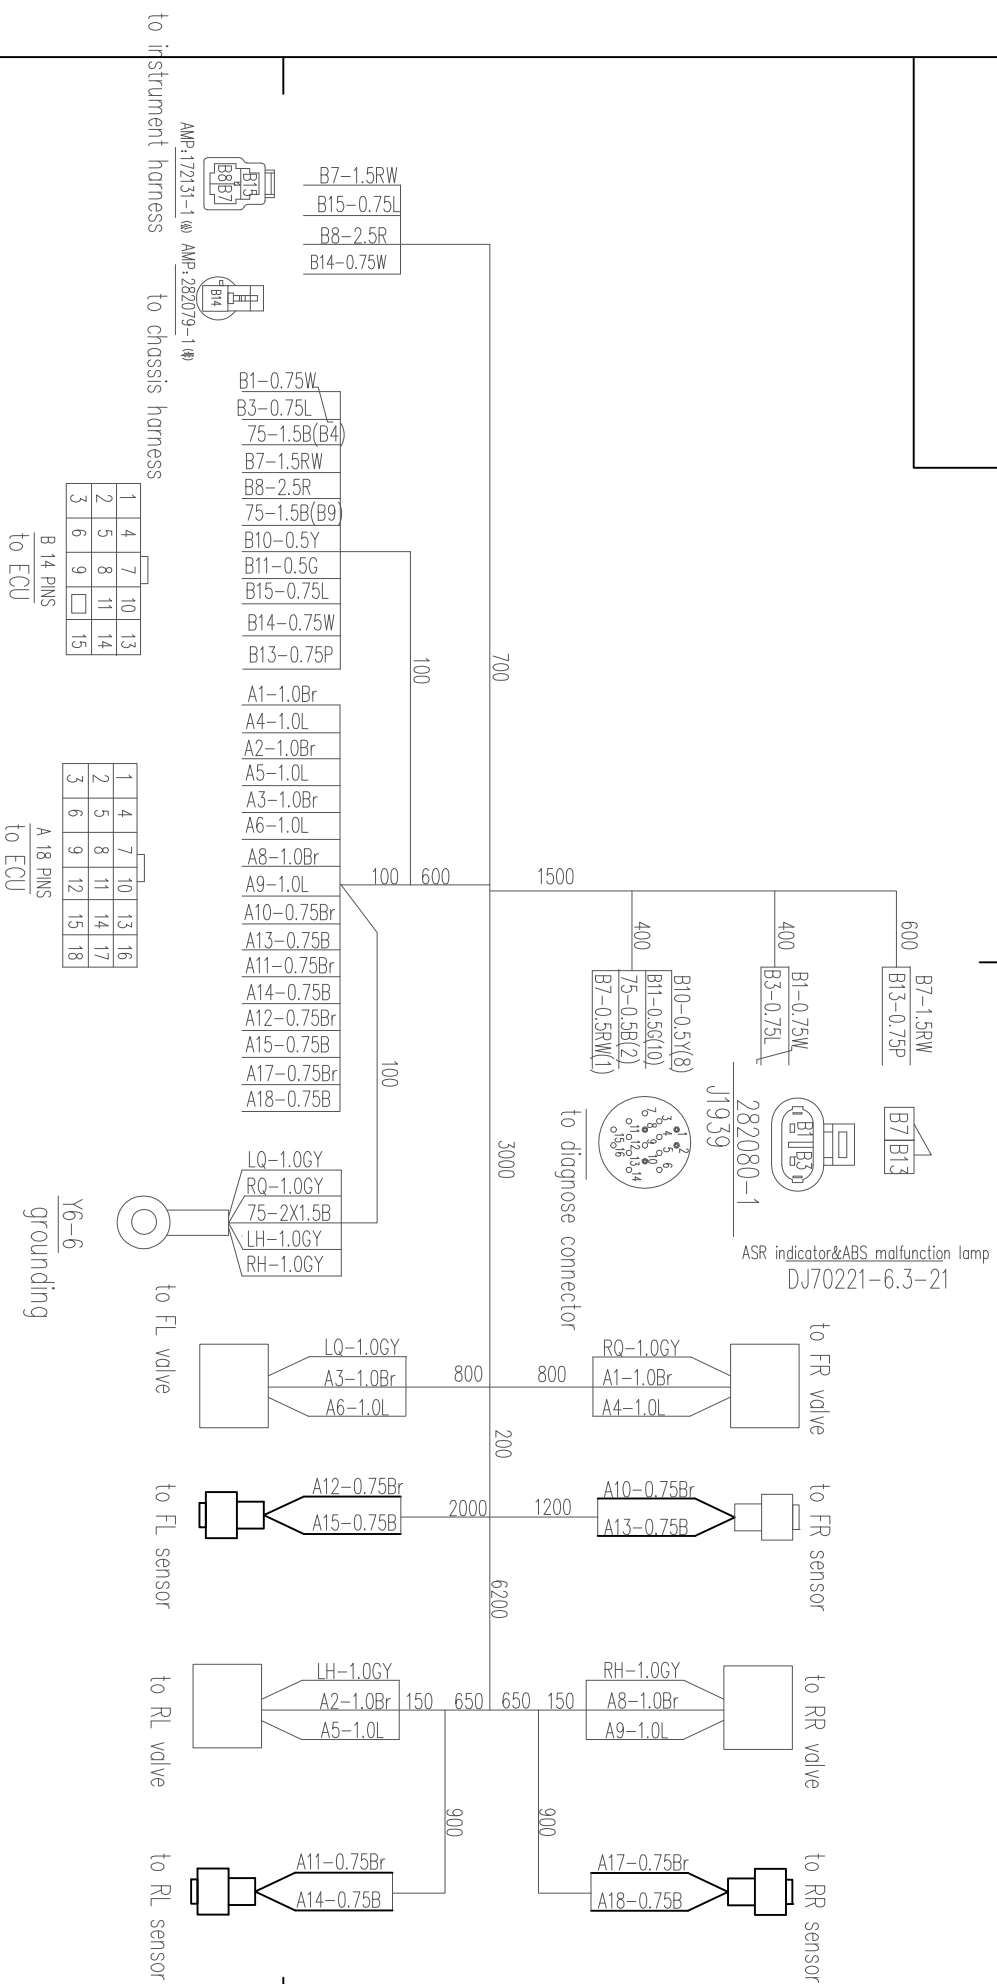

37VJ2-24190-AMP

WABCO ABS harness


37V8X-24400-AMP

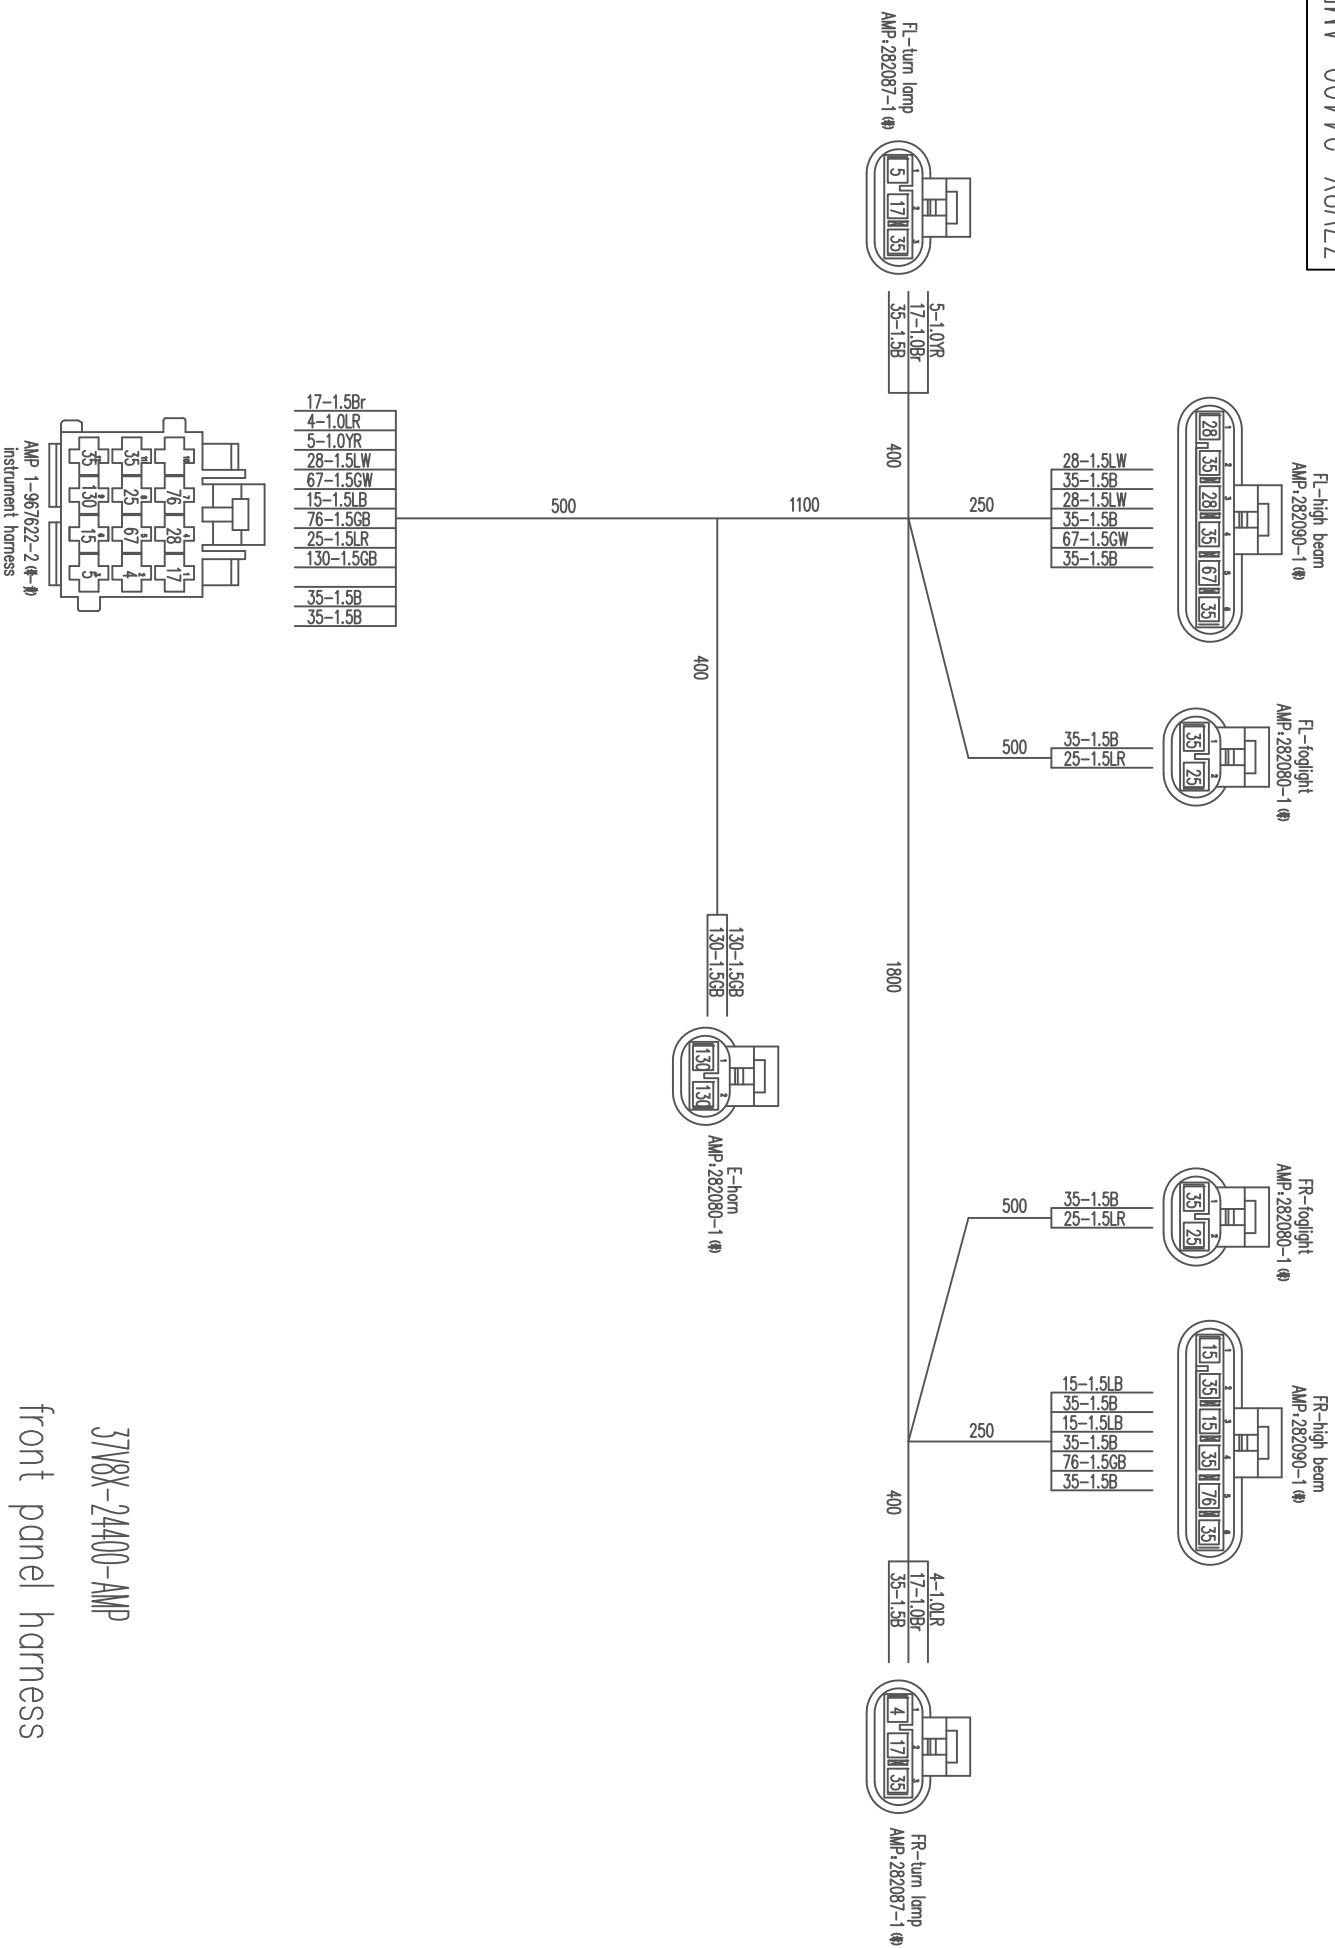

37V8X-24400-AMP

front panel harness


37VON-24975A-AMP

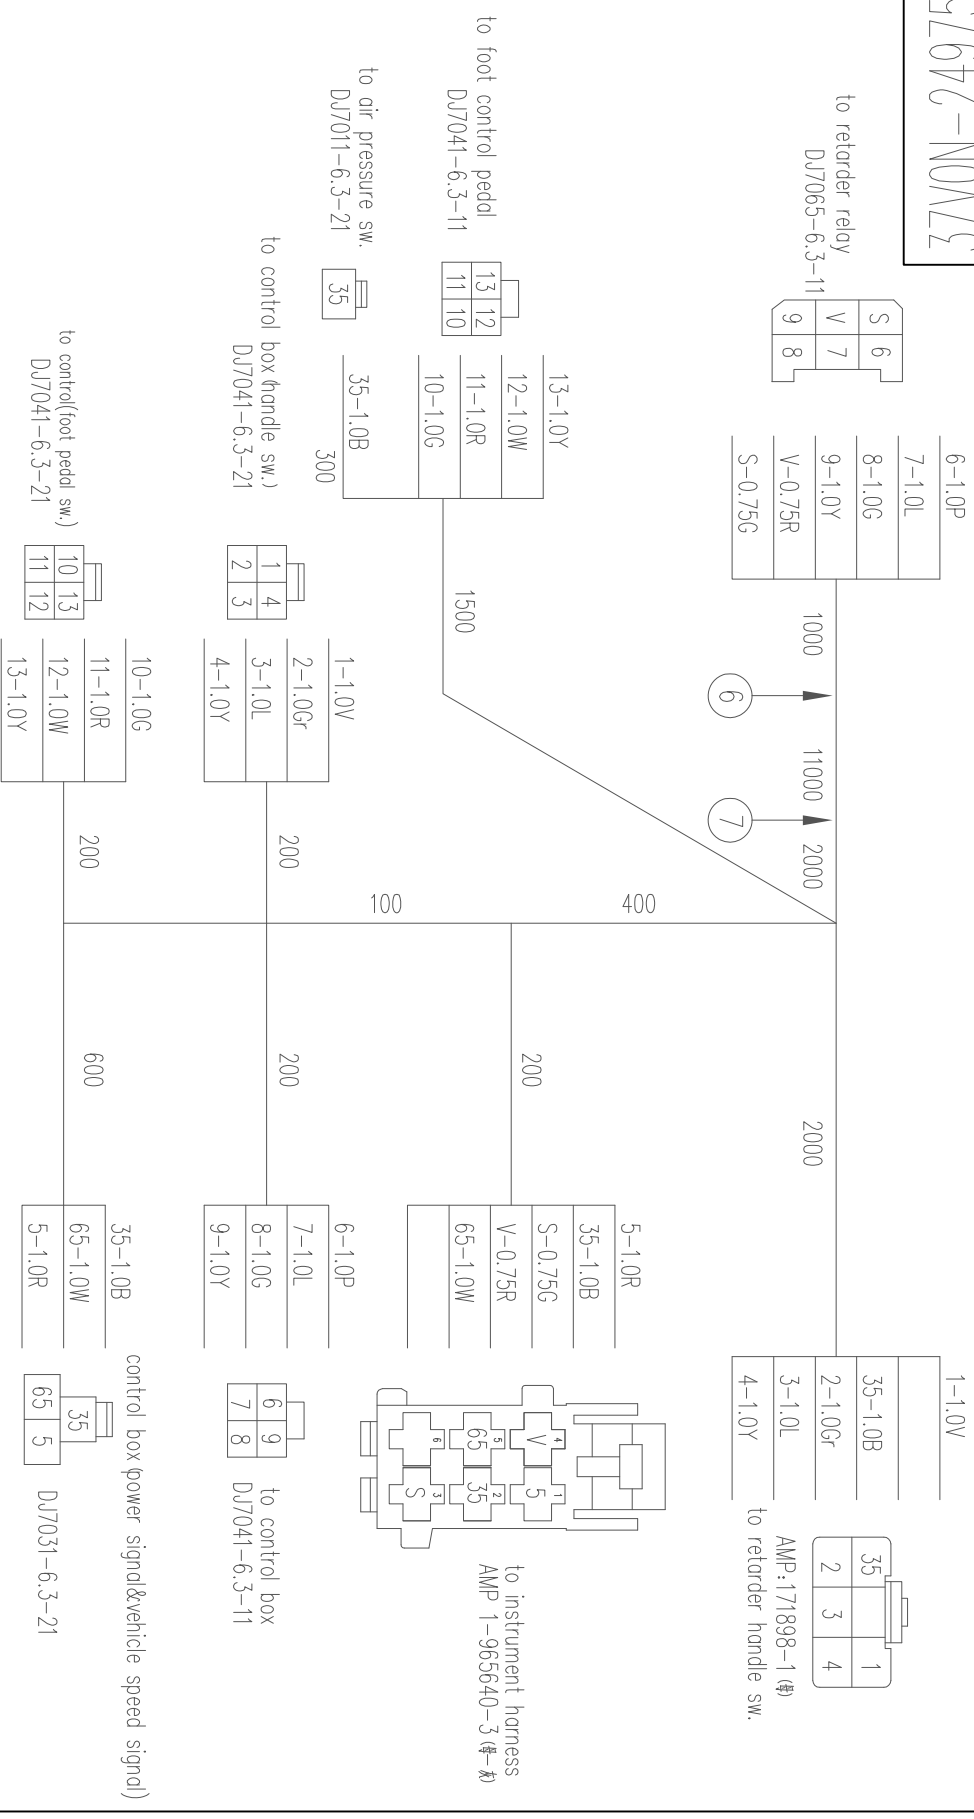

37WON-24975A-AMP


retarder control harness

37VON-24207

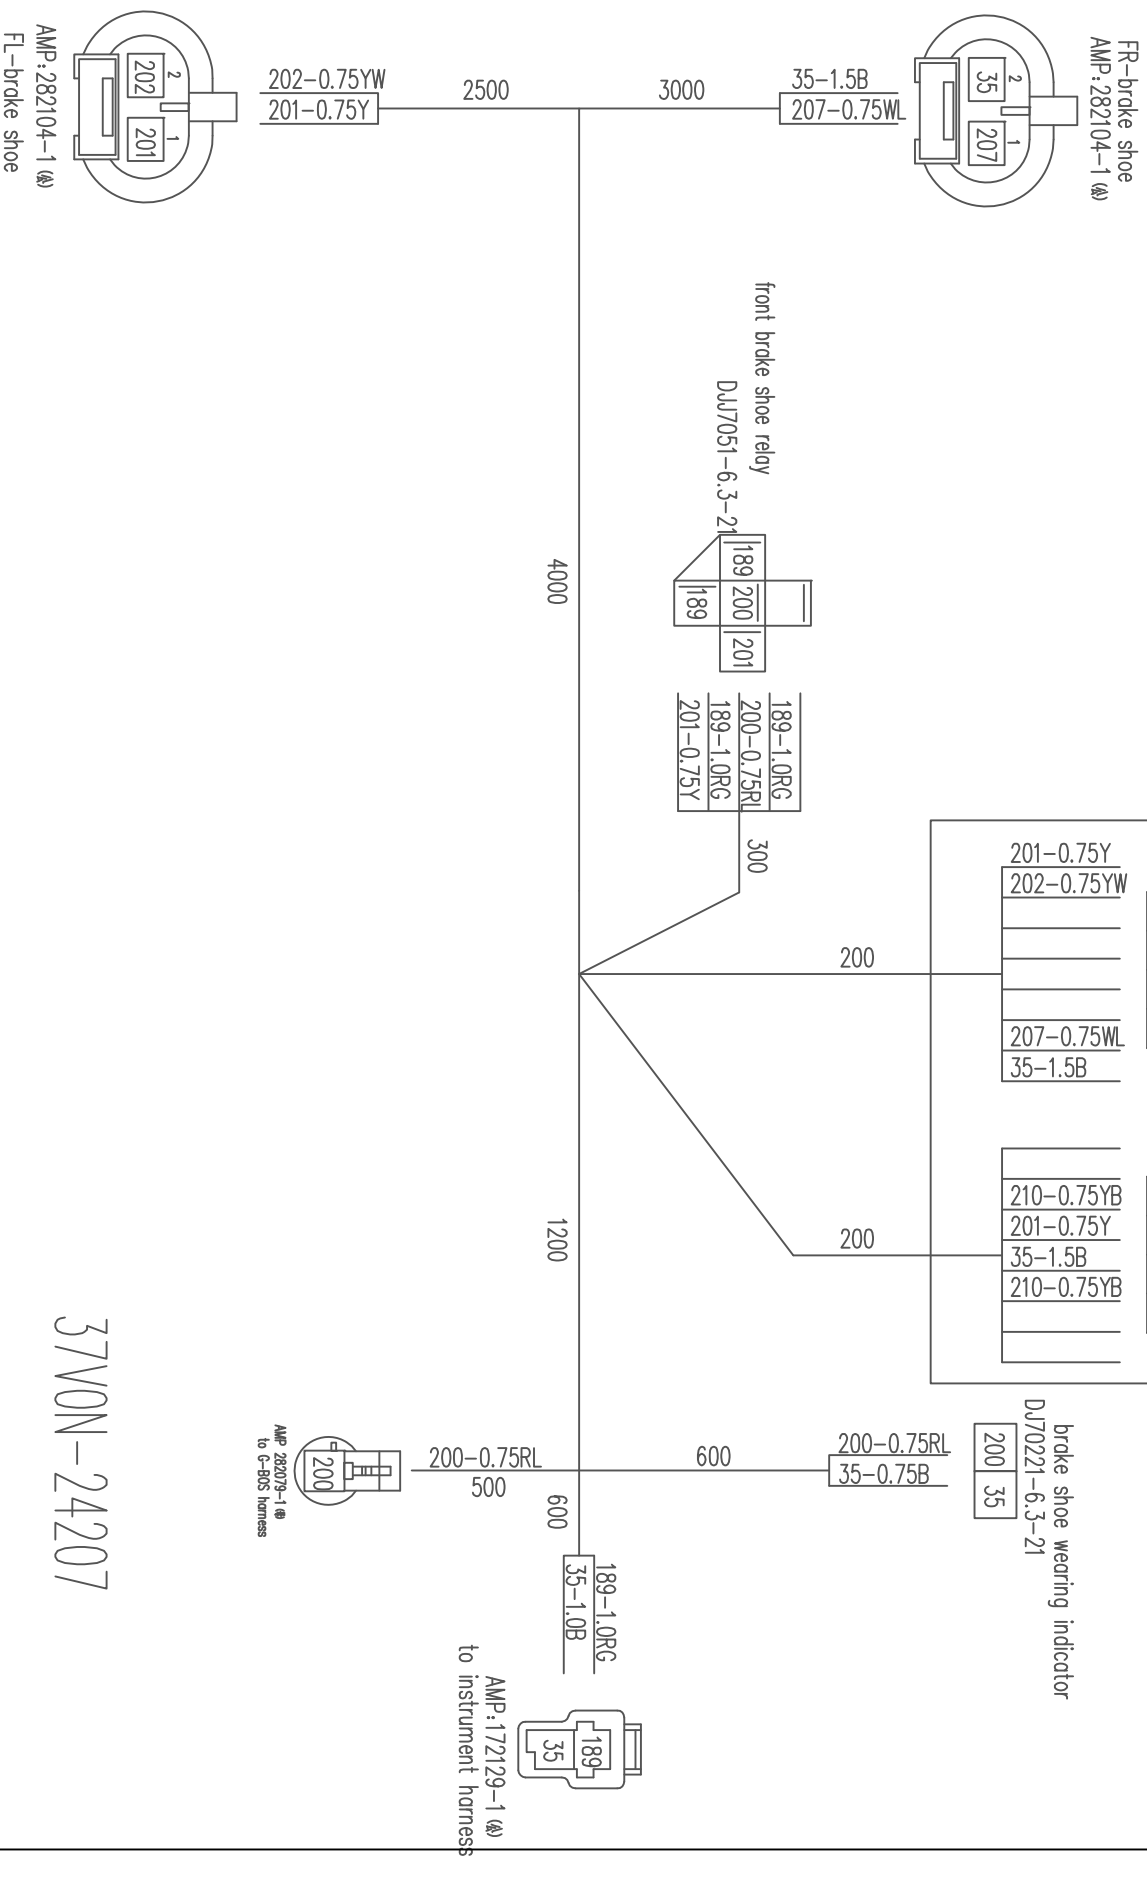


brake shoe warning harness

37VON-24900-AMP

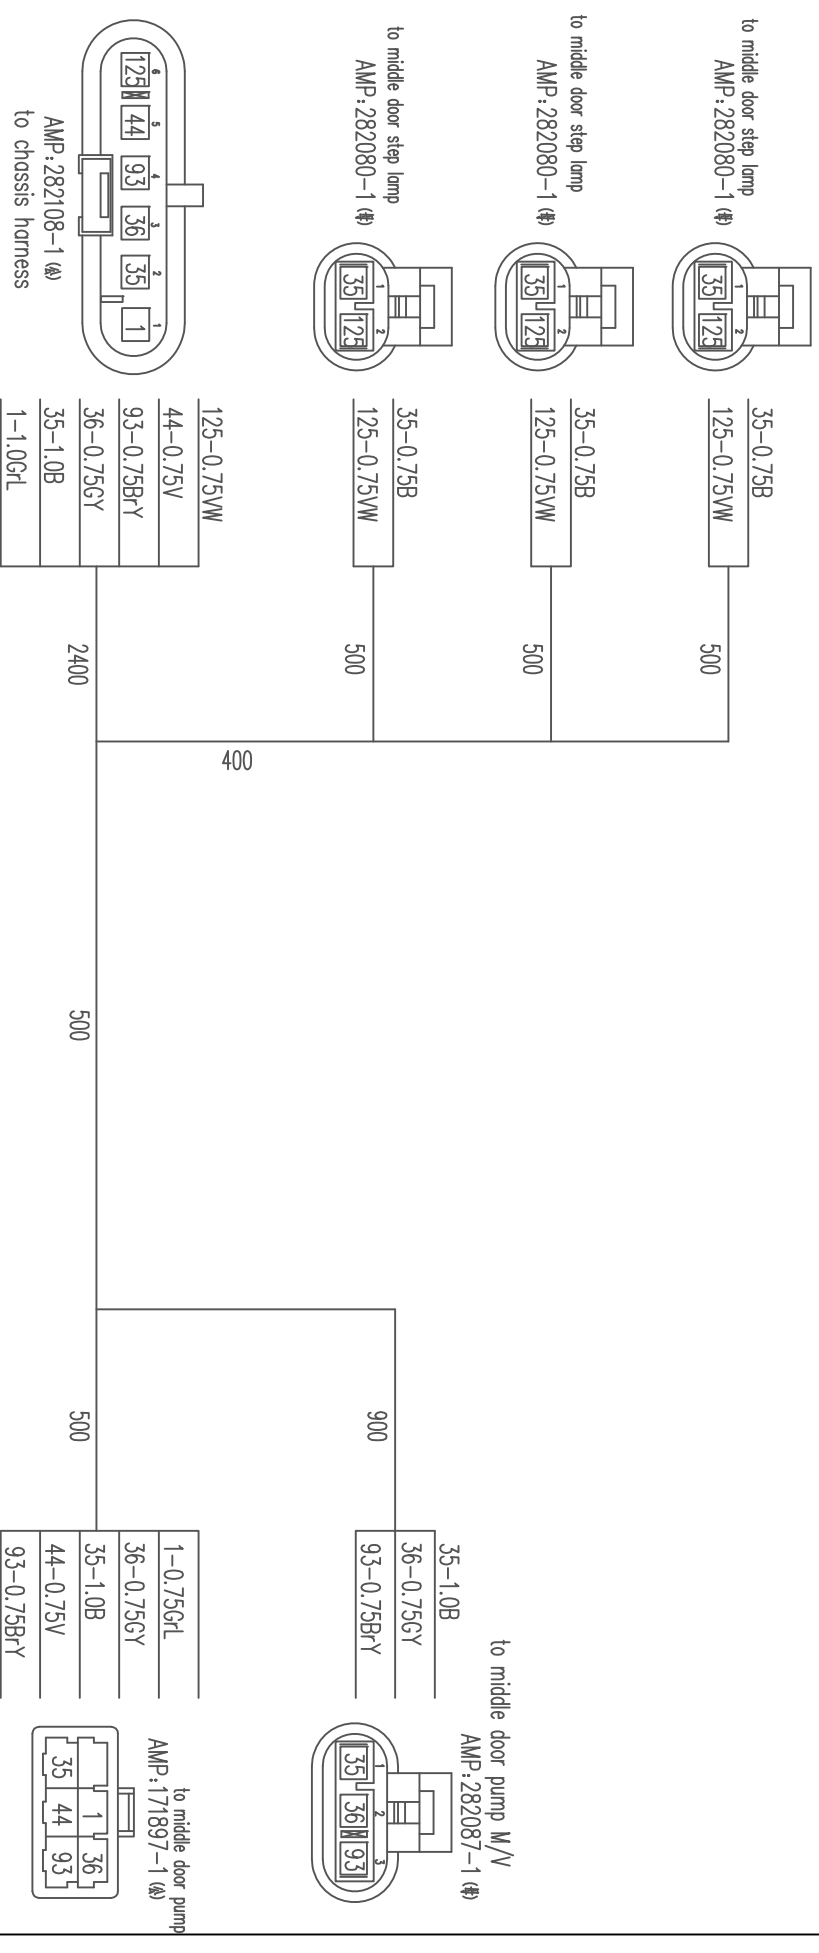

37VON-24900-AMP

middle door pump harness

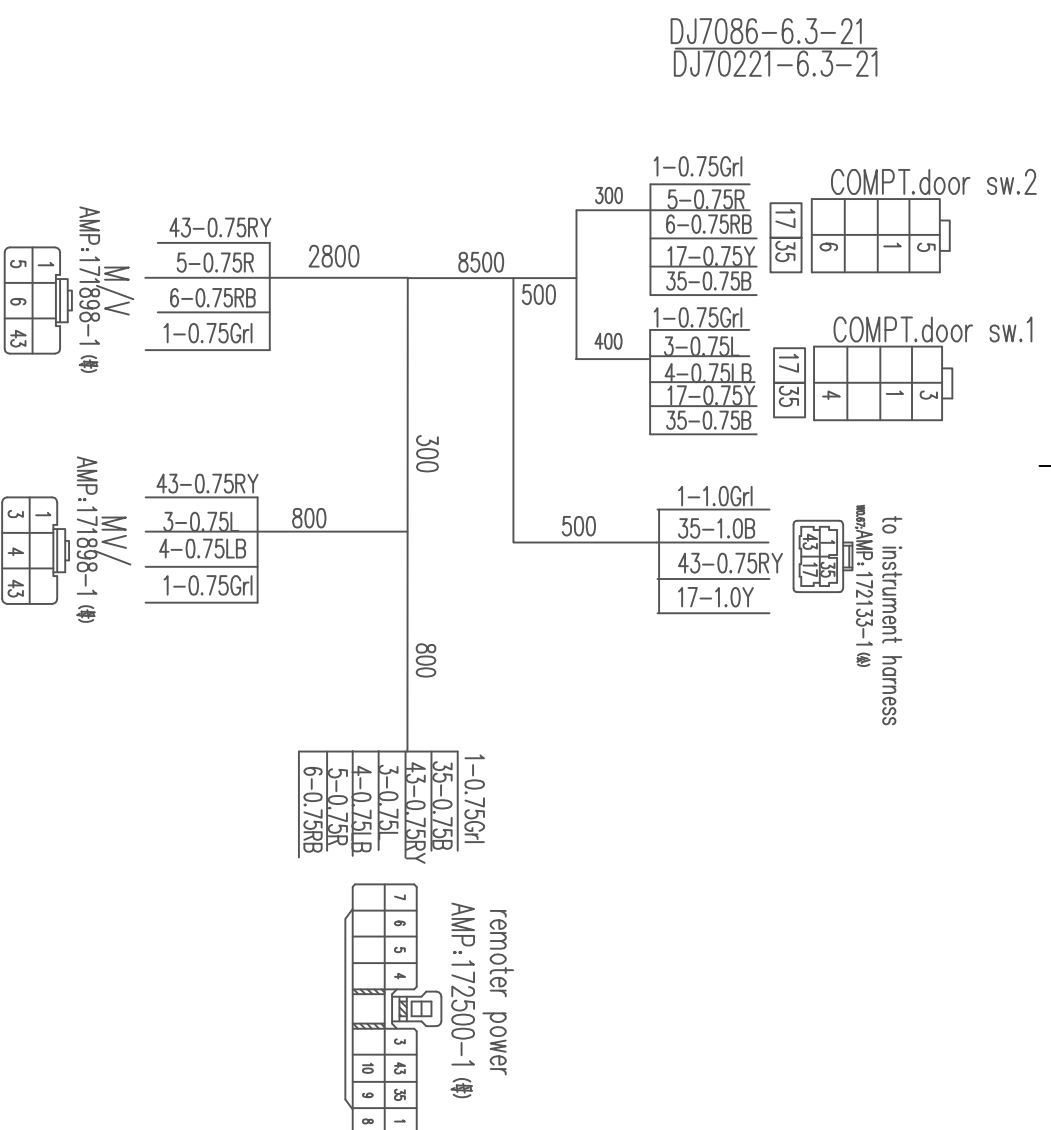

37U01-24196-AMP

remote luggage COMPT.harness

Y10-25 D-35B 350 D-35B Y8-25
ground to retarder

to power control assy.

I-10.0R
I-10.0R
II-10.0R
II-10.0R

3300

to retarder

I-10.0R
I-10.0R
II-10.0R
II-10.0R


Y6-10

Y6-10

37118-24974A

retarder power control
wire harness

20247-8VSLC

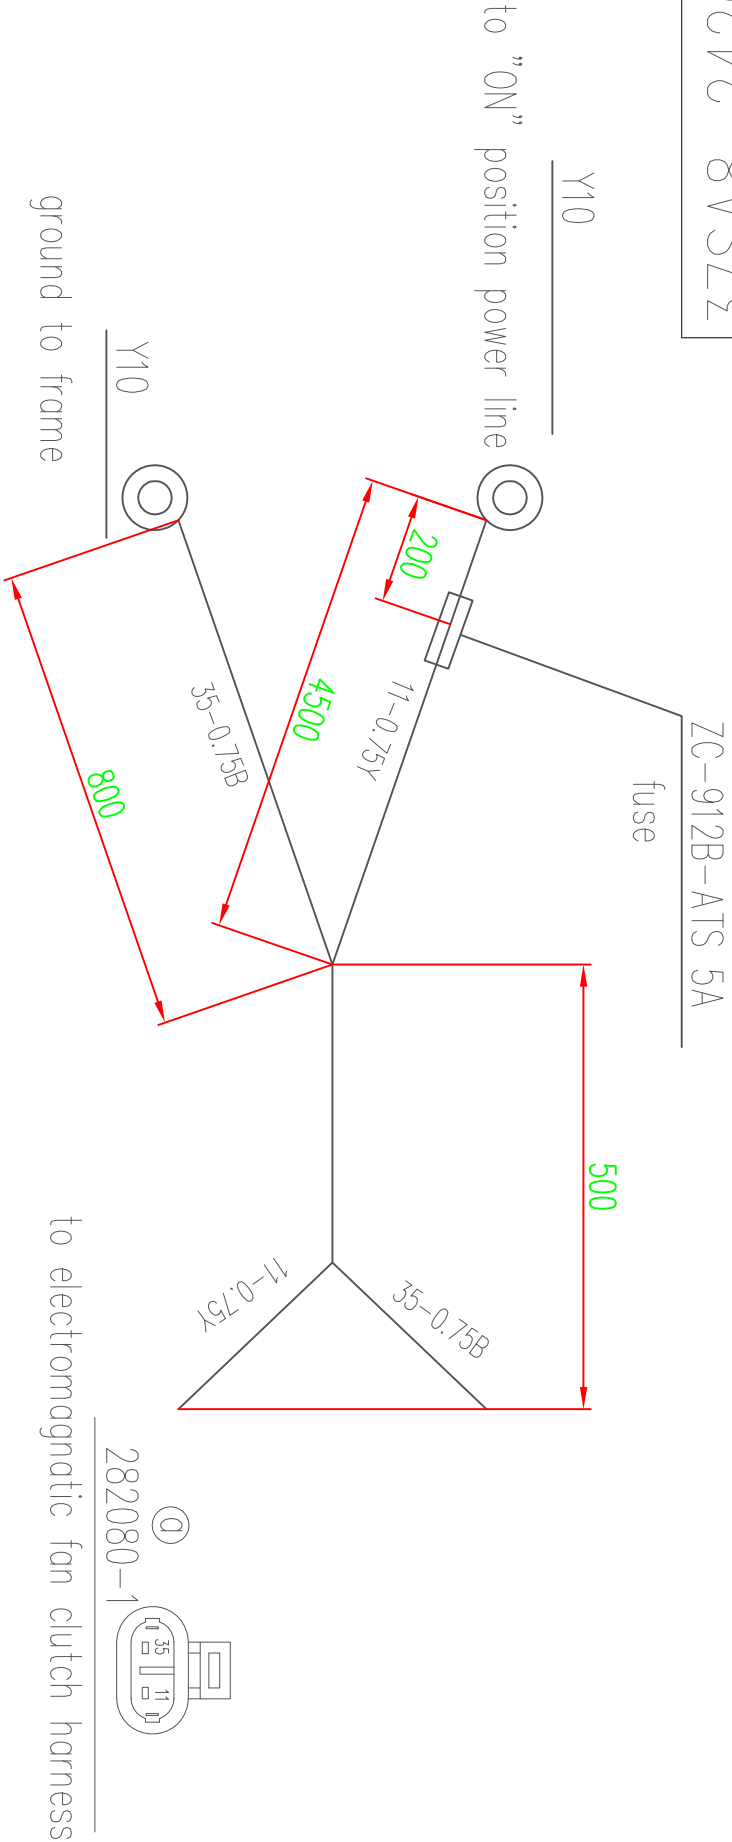

37SA6-24201

electromagnetic fan clutch harness

<u>Y6-6</u>	<u>M-10B</u>	<u>300</u>	<u>M-10B</u>	<u>Y8-6</u>
to power control device				grounding


<u>Y10-35</u>	<u>X-35R</u>	<u>1000</u>	<u>X-35R</u>	<u>Y8-35</u>
manual sw.				to power control unit

<u>Y8-35</u>	<u>X-35R</u>	<u>1800</u>	<u>X-35R</u>	<u>Y10-35</u>
manual sw.				to power control unit

37L18-24974B
retarder power harness

microphone socket

microphone plug

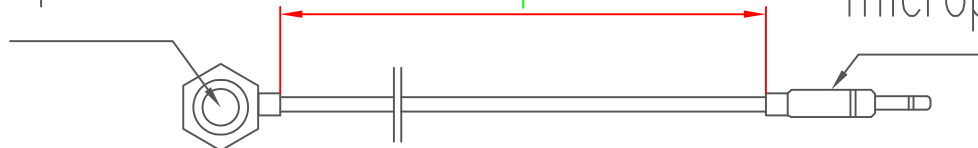

	35-0.75B
	67-0.75W
	85-0.75R
microphone plug	

microphone socket harness

37V07-24803