


LOGITECH BCC950 CONFERENCE WEBCAM SET-UP QUICK REFERENCE GUIDE V1


The Logitech BCC950 is NOT a stand-alone unit and will need to connect to a laptop or PC via a USB cable and an AC power outlet. The 4 main components which comprise the BCC950 are shown below:



This is the base unit, which connects via USB to the computer

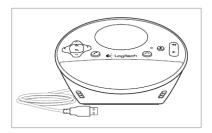

This is the webcam

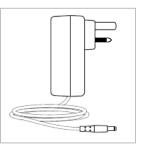

The power supply plugs into the base unit



This is the eyelevel stand for the webcam

Together, these components can be used in either base mode, or extended to eye-level:



This is the webcam fitted to the base unit




This is the webcam with the eye-level stand fitted

SETTING UP THE UNIT

Power on the laptop or computer you will be using with the webcam.



Attach the Webcam to the Base Unit

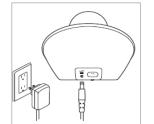

Connect the power supply to the rear socket of the base unit and an AC outlet



Connect the base unit to the computer with the USB cable



Attach the stand if required

Note: if you wish to use the eye-level stand, you MUST disconnect the AC power BEFORE attaching or removing the webcam. You can now launch the video conferencing software on the computer.

Please ensure the stand is fitted using the correct orientation, as shown below:

Top Stand Connector:



Bottom Stand Connector:




© The content of this document is the copyright of Nottinghamshire Health Informatics Service (NHIS). Unless stated otherwise, you may only use this material for your personal use, private study, research or in-house use. You must not copy, distribute or publish any material produced by NHIS unless formal permission is obtained from the copyright holder



LOGITECH BCC950 CONFERENCE WEBCAM SET-UP QUICK REFERENCE GUIDE V1

BASE UNIT CONTROLS

The base unit allows for full control of the conference call, from answering and ending calls to controlling the webcam.

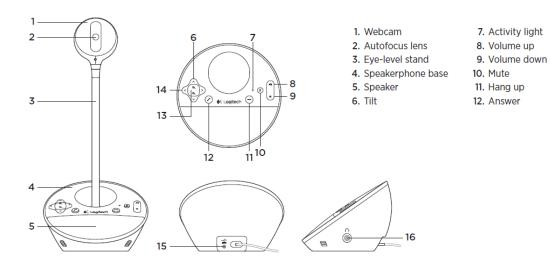

13. Zoom

- 14. Pan
- 15. Power port
- 16. 3.5mm earphone jack

Use the *Tilt, Zoom & Pan* controls (6, 13 & 14 above) to adjust the webcam image. *IMPORTANT*: Do not rotate/tilt the camera manually as it may damage the device.

The Volume of the Base Unit speaker can be adjusted (8 & 9 above)

Once you have launched the video conferencing software, you can *Mute, Hang Up,* or *Answer* a call (10, 11 & 12 above) from the Base Unit. (This feature may not work with some video conferencing software. Use the software to answer and end a call).

BASE UNIT ACTIVITY LIGHT

The Activity Light will display the status of the Base Unit as follows:

- > Blue: The webcam is in an active call
- > Flashing Blue: A call is being received
- > *Red*: The audio is muted
- > Flashing Red: The unit is establishing a USB connection with the host computer

CONTACT: SERVICE DESK 01623 410310 or Ext 4040 IT TRAINING 01623 622515 Ext 6111