




# *New* REVO 110

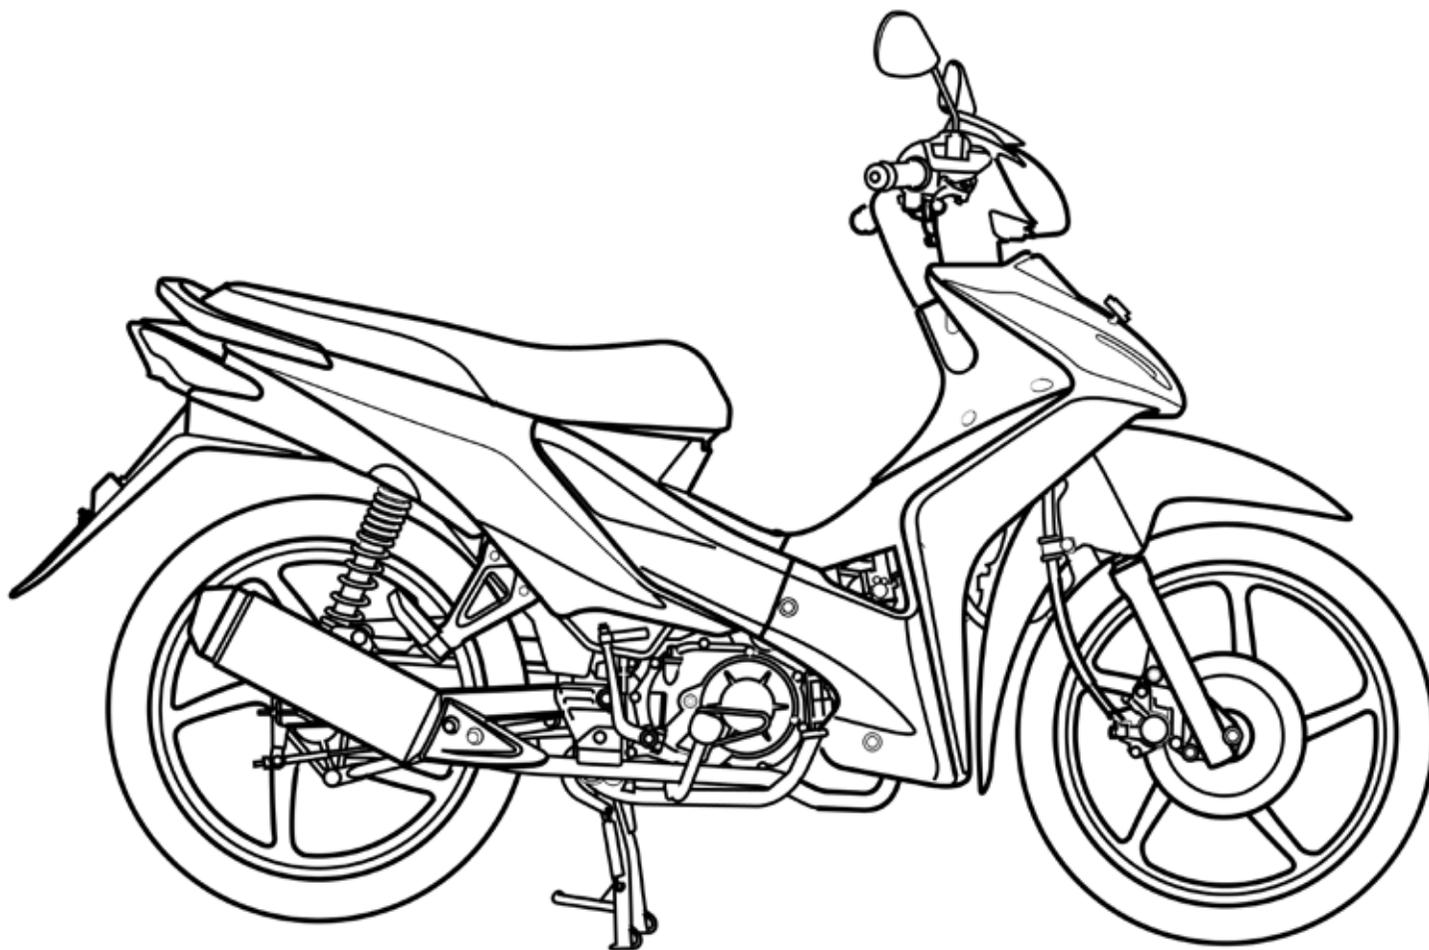

## **PARTS CATALOG EDISI 2**

TST 10 PC 002

PT Astra Honda Motor

## PETUNJUK PEMAKAIAN PARTS CATALOG

Parts catalog ini digunakan untuk memesan/mencari parts pengganti; di dalamnya terdapat semua parts dan waktu kerja standard (F.R.T.) untuk tipe sepeda motor **HONDA REVO 110**

### I. CARA MEMESAN PARTS

#### 1. Informasi yang diperlukan

Pemesan parts pengganti sebaiknya mencantumkan Part Number dan Nomor seri seperti diterangkan dibawah. Hal ini diperlukan oleh karena setiap perubahan dan modifikasi pada parts telah didaftarkan di HONDA berikut nomor part dan Nomor seri yang bersangkutan.

Nomor-nomor yang dibutuhkan :

- (a) Parts mesin : Part Number dan Nomor seri mesin
- (b) Parts rangka : Part Number dan Nomor seri rangka
- (c) Parts karburator : Part Number dan Nomor identifikasi karburator


#### 2. Perubahan-perubahan

Perubahan-perubahan pada parts catalog ini akan dimuat dalam Parts Bulletin yang diterbitkan sebagai pelengkap dari pada parts catalog ini. Bila jumlah perubahan-perubahan cukup banyak, pada suatu waktu dapat diterbitkan edisi baru yang disesuaikan daripada parts catalog ini, dan masing-masing edisi akan diberikan nomor urut pada sampulnya. Kami menganjurkan agar Sdr. selalu menyimpan parts bulletin bersama parts catalog ini, agar informasi parts Sdr. selalu lengkap dan up-to-date.


### II. CARA MEMBACA PARTS CATALOG

#### 1. Susunan nomor part

(contoh) Parts umum (General parts)

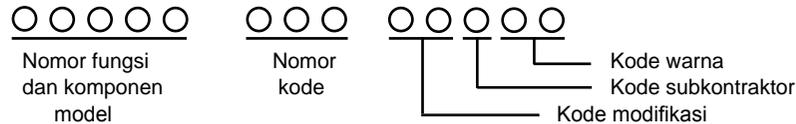

(contoh) Baut-baut, mur-mur dan standar parts lain.

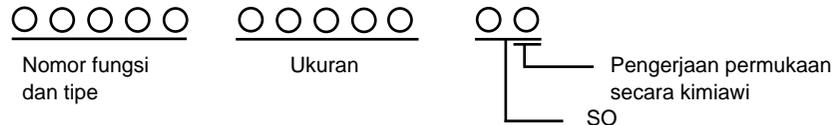

## 2. Kode warna

Kode warna pada bagian belakang nomor part menunjukkan warna part tersebut. Kode-kode ZA, ZB, ZC dan seterusnya tidak secara langsung menunjukkan warna part, melainkan warna dapat dilihat dari kode HONDA pada kolom "Part Number" di sebelahnya nomor part yang bersangkutan.

Kode Warna		Warna
Kode pabrik	Kode HONDA	
FMB	NH-1	Black
SSM	NH-131M	Starlight Silver Metalic
AGM	NH229MU	Anchor Gray Metalic
WRD	R258	Winning Red

## 3. Singkatan-singkatan

Dibawah ini adalah daftar singkatan-singkatan yang digunakan di dalam parts catalog, sebagai berikut :

ASSY..... Assembly	L.E.D ..... Light emitting diode
COMP ..... Complete.	MPH ..... Miles per hour
R..... Right	L (100L)..... Link(100 Links)
L ..... Left	A.C ..... Alternating current
STD ..... Standard	D.C ..... Direct current
MM ..... Milimeter	IN..... Inlet
G ..... Gram	EX. .... Exhaust
T(22)..... Tooth (22Teeth)	FR ..... Front
A..... Ampere	RR..... Rear
V ..... Volt	Hex..... Hexagonal
W..... Watt	A.M..... Attaching mark
WL..... With labelling	T.M ..... Transcript mark
WOL..... Without labelling	C.D.I ..... Capacitive
KPH..... Kilometers per hour	Discharge Ignition

## 4. Dimensi-dimensi

Semua ukuran diberikan dalam satuan milimeter (mm) kecuali untuk peluru baja (steel balls), ban luar (tires) dan ban dalam (tire tubes).

Part	Contoh	Pengertian
Bolt (Screw)	6x12	diameter 6mm, panjang 12mm
Pin	8x14	diameter 8mm, panjang 14mm
O-Ring	9.5x1.6	diameter 9,5mm, tebal 1,6mm
Oil seal	14x24x5	diameter dalam 14 mm, diameter luar 24 mm, tebal 5mm
Tube	5x130	diameter dalam 5mm, panjang 130mm

## 5. Parts yang digantikan oleh part lain

Nomor part yang diletakkan dibawah nama part pada kolom "Description" menunjukkan bahwa nomor part disebelahnya telah diganti dengan nomor part tersebut. Pergantian parts sedemikian (supersedence) dapat dilakukan oleh HONDA tanpa pemberitahuan apapun.

## 6. Part yang dipersatukan (Assemblies)

Part pada gambar yang dikelilingi dengan garis terputus-putus tersedia sebagai parts yang dipersatukan. Masing-masing komponen daripada susunan parts itu dapat juga diperoleh secara terpisah.

## 7. Jumlah yang diperlukan

Angka didalam kolom "Q'ty" menunjukkan jumlah part tersebut yang dipakai di dalam bagian yang bersangkutan.

## 8. ilustrasi

Gambar-gambar parts yang dimuat di dalam part catalog ini disediakan untuk mempermudah pengenalan part dan mungkin berbeda daripada bentuk part sebenarnya.

## 9. Nama part

Nama part tidak diterjemahkan kedalam bahasa Indonesia, melainkan tetap menggunakan istilah resminya didalam bahasa Inggris, agar seragam dengan istilah internasional yang dipakai di seluruh dunia oleh Honda Motor Co.,Ltd.

## 10. Model dan nomor seri yang berlaku



Model-model, kode daerah pemasaran dan nomor seri yang berlaku didalam parts catalog ini dapat diidentifikasi sebagai berikut dibawah ini.

Model	Kode daerah pemasaran	Tipe	No. Seri Mesin yang berlaku mulai	No. Seri Rangka yang berlaku mulai	No. Identifikasi Karburator yang berlaku
ANF110	2IN 3IN	Indonesia Indonesia	JBC1E*****1 JBC2E*****1	MH1JBC11*****1 MH1JBC11*****1	PB7UA <span style="border: 1px solid black; padding: 0 2px;">A</span>

\* Dari nomor identifikasi karburator, hanya dipakai bagian yang digaris bawah di dalam contoh dibawah

PB7UA A KC

### 11. Lokasi nomor seri pada sepeda motor

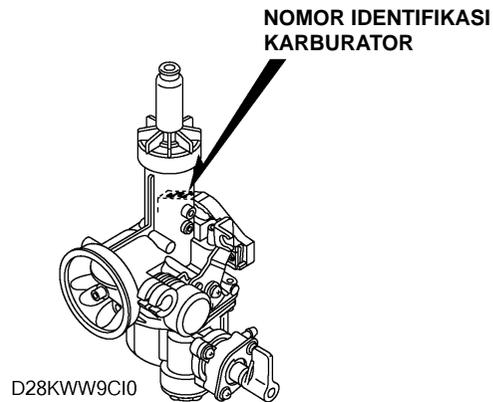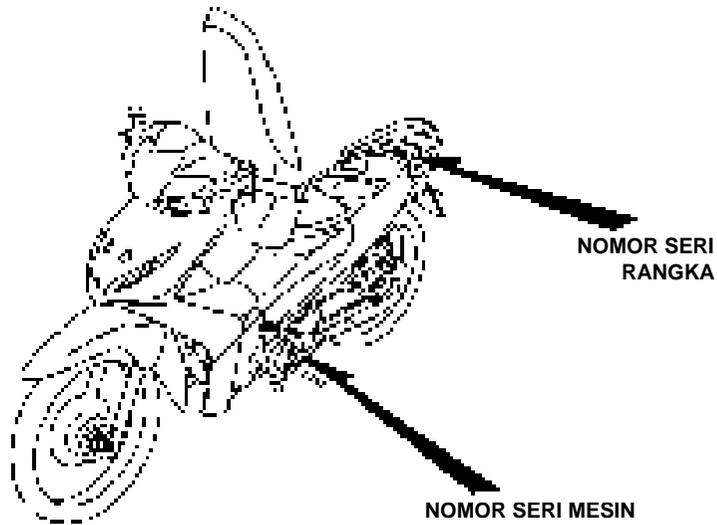

### III. CARA MEMAKAI FLAT RATE TIME (F.R.T.)

F.R.T. (Flate Rate Time) yang terletak di halaman paling akhir buku ini dipakai untuk menentukan waktu kerja standard yang diperbolehkan untuk penggantian parts.

F.R.T untuk parts yang tidak tercantum didalam buku ini harus ditentukan dari jenis pekerjaan yang erat hubungannya dengan penggantian parts tersebut.

#### 1. F.R.T. didasarkan atas kondisi servis sebagai berikut :

- Disamping waktu servis yang sebenarnya ditambahkan lagi waktu ekstra.
- Waktu standard yang ditentukan didasarkan atas persyaratan bahwa alat-alat servis yang diperlukan seperti terdaftar didalam buku pedoman reparasi sudah siap tersedia, dan pekerjaan dilakukan oleh seorang mekanik dengan ketrampilan normal.
- Waktu yang dibutuhkan untuk pemeriksaan dan percobaan pemakaian setelah diservis, dimasukkan juga kedalam F.R.T.

#### 2. Metode perhitungan

Waktu pekerjaan ditulis dalam sepersepuluh jam untuk mempermudah perhitungan. (contoh) 0.3 = 18 menit

$$5.6 = 5 \text{ jam dan } 36 \text{ menit}$$

DAFTAR KONVERSI			
Jam	Menit	Jam	Menit
0.1	6	0.6	36
0.2	12	0.7	42
0.3	18	0.8	48
0.4	24	0.9	54
0.5	30	1.0	60

#### 3. Menghitung F.R.T.

Jika beberapa pekerjaan dilakukan sekaligus, hitunglah sebagai berikut :

- Pekerjaan yang tidak berhubungan  
F.R.T. untuk pekerjaan diperoleh dengan menjumlahkan F.R.T. untuk setiap part yang diganti  
(contoh) Penggantian cylinder dan clutch spring

Service item/Bagian yang diservis	F.R.T.
Cylinder	1.4
Clutch spring	0.7

$$\text{F.R.T. untuk pekerjaan ini adalah : } 1.4 + 0.7 = 2.1$$

## b. Pekerjaan yang terulang

Ambillah F.R.T. untuk part terakhir yang akan diganti.

(contoh) Penggantian piston dan cylinder head gasket.

Service item/Bagian yang diservis	F.R.T.
Cylinder head gasket	1.0
Piston	1.5

F.R.T. untuk pekerjaan ini adalah : 1.5

## c. Pekerjaan yang sebagian berhubungan

Jumlahkan F.R.T. untuk semua parts yang diganti dan kurangi dengan F.R.T. untuk pekerjaan yang terulang.

(contoh) Penggantian gear shift drum dan crankshaft assembly.

Service item/Bagian yang diservis	F.R.T.
Gearshift drum	* 3.9
Crankshaft	* 4.1
Pembongkaran crankcase	* 3.7

F.R.T. untuk pekerjaan ini adalah :  $(3.9 + 4.1) - 3.7 = 4.3$

Pekerjaan yang terulang adalah pembongkaran crankcase.

\* F.R.T. dengan tanda (\*) termasuk menurunkan dan memasang kembali mesin.

## 4. Pekerjaan lain disamping penggantian parts

## a. Penurunan dan pemasangan

No.	Service item/Bagian yang diservis	F.R.T.
1.	Mesin	1.5
2.	Kepala silinder	1.1
3.	Karburator	0.4

No.	Service item/Bagian yang diservis	F.R.T.
1.	Pemeriksaan waktu pengapian	0.2
2.	Penyetelan dan pembersihan busi	0.1
3.	Penyetelan tappet	0.3
4.	Penyetelan stasioner karburator	0.1
5.	Pemeriksaan oli mesin (tidak termasuk penggantian oli mesin)	0.1
6.	Penyetelan kopling	0.1
7.	Pembersihan elemen saringan udara	0.3
8.	Pengukuran tekanan kompresi	0.1
9.	Pemeriksaan cairan baterai dan berat jenisnya	0.2
10.	Pengukuran tinggi pelampung karburator	0.6
11.	Pembersihan saringan oli mesin	0.6
12.	Penyetelan gas tangan	0.1

## Rangka


No.	Service item/Bagian yang diservis	F.R.T.
1.	Penyetelan rem depan	0.1
2.	Penyetelan rem belakang	0.1
3.	Pemeriksaan cara kerja rem	0.1
4.	Penyetelan arah lampu depan	0.1
5.	Rantai roda (termasuk penyetelan tegangan rantai tetapi tidak termasuk penggantian sprocket)	0.1

## b. Pembongkaran


No.	Service item/Bagian yang diservis	F.R.T.
1.	Karburator	0.7

# ENGINE GROUP


**E-1 CYLINDER HEAD COVER**

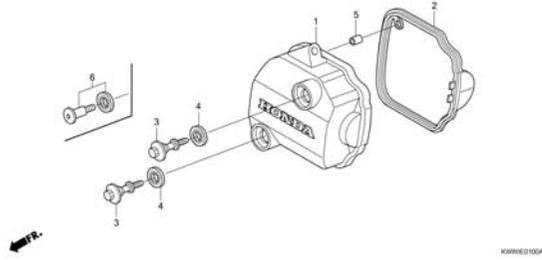


**E-2 CYLINDER HEAD**

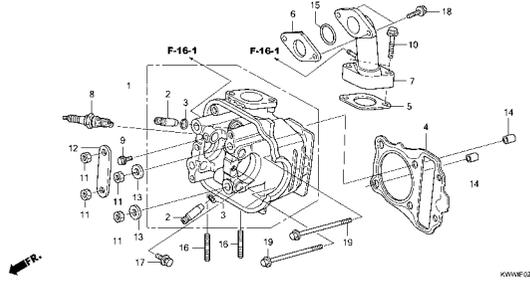


**E-3 CAMSHAFT/VALVE**

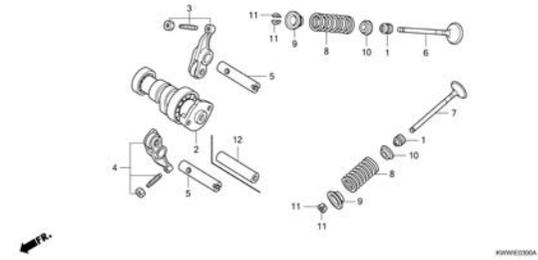


**E-4 CAM CHAIN/TENSIONER**

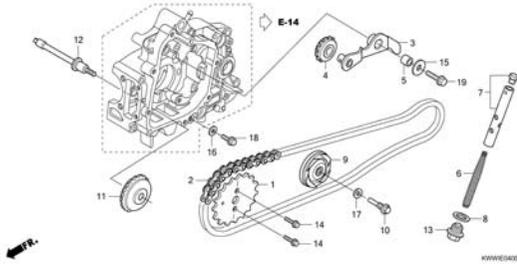


**E-5 CYLINDER**

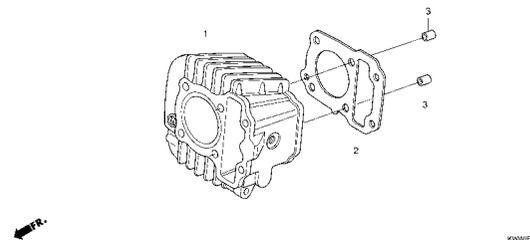


**E-6 RIGHT CRANKCASE COVER**

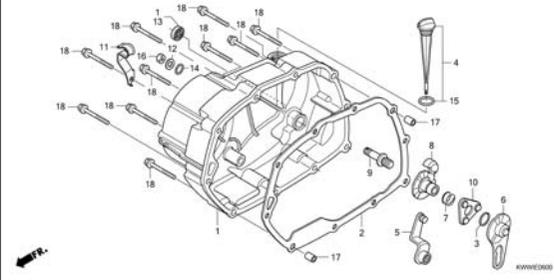


**E-7 ONE WAY CLUTCH**

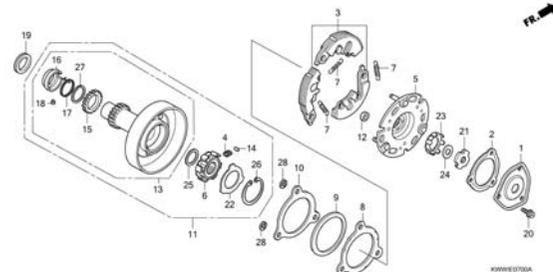

**E-8 CLUTCH (F.C.C)**

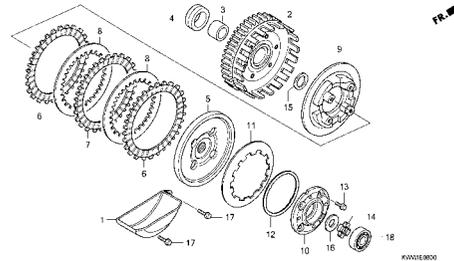

**E-8 CLUTCH (EXEDY)**

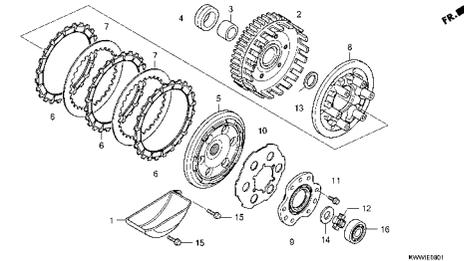


2

# ENGINE GROUP


E-9

OIL PUMP

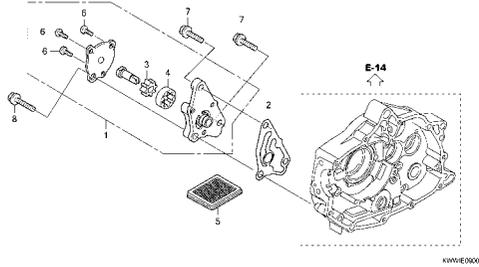


E-10

LEFT CRANKCASE COVER

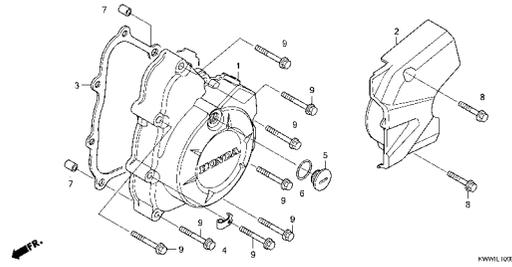


E-11

GENERATOR

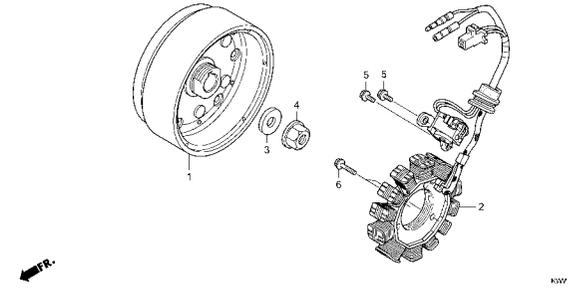


E-12

STARTING CLUTCH

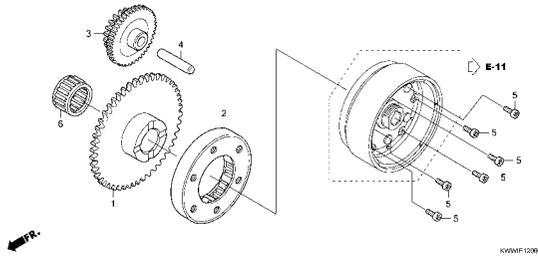


E-13

STARTING MOTOR

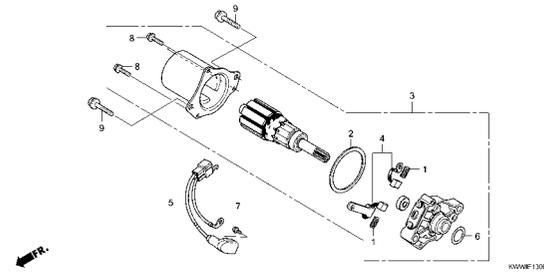


E-14

CRANKCASE

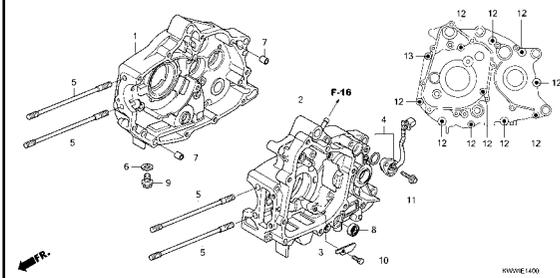


E-15

CRANKSHAFT/PISTON

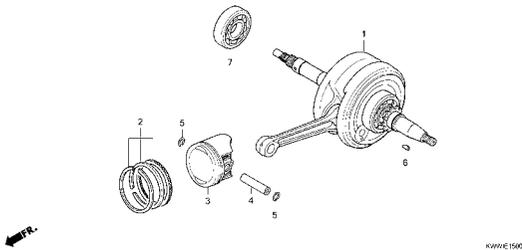


E-16

TRANSMISSION

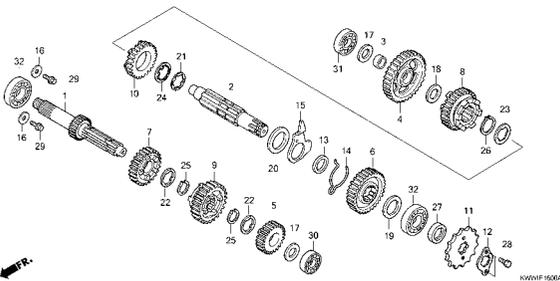

E-17


GEARSHIFT DRUM

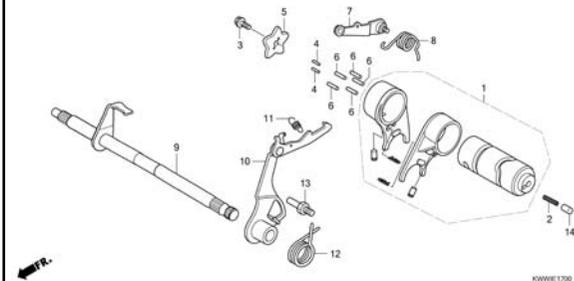

# ENGINE GROUP


E-18

KICK STARTER SPINDLE

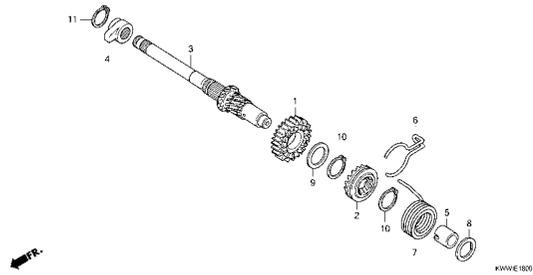

E-19


CARBURETOR

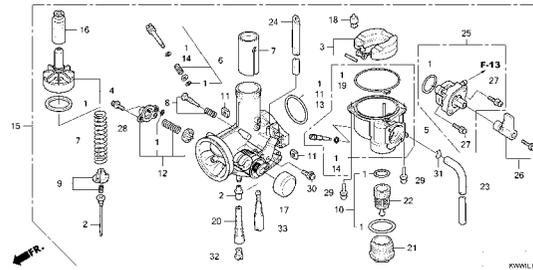


2

# FRAME GROUP


**F-1 HEADLIGHT**

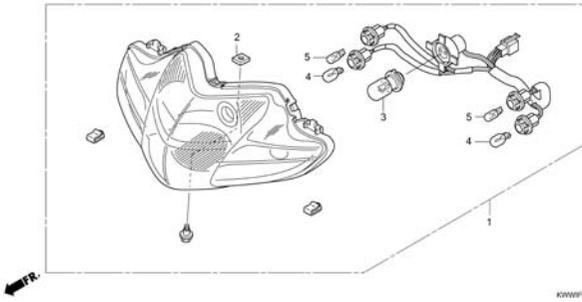


**F-2 METER**

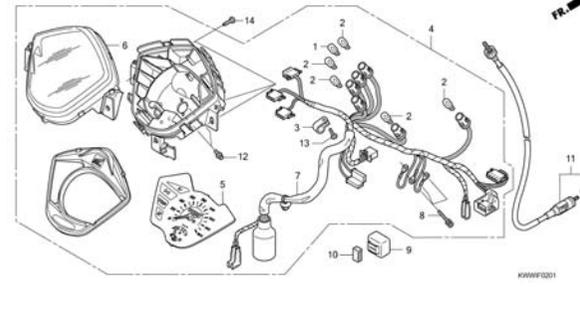


**F-3 SWITCH / CABLE**

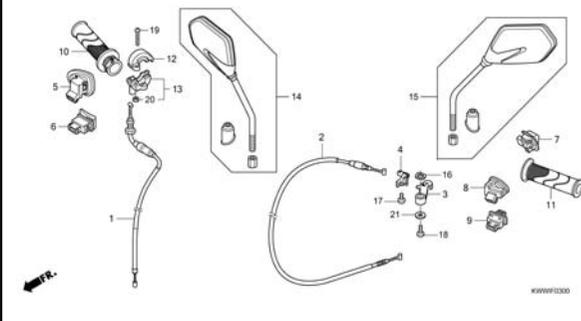


**F-4 FR. BRAKE MASTER CYLINDER**

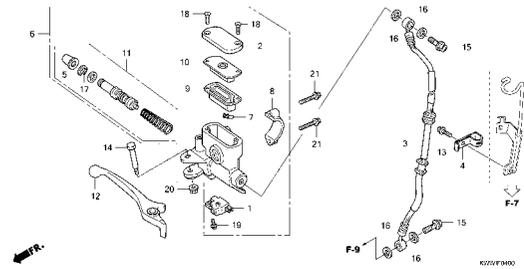


**F-5 HANDLE PIPE/ HANDLE COVER**

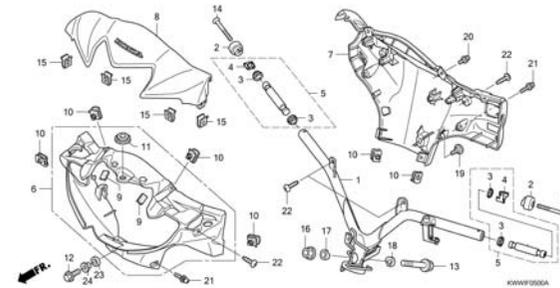


**F-6 STEERING STEM**

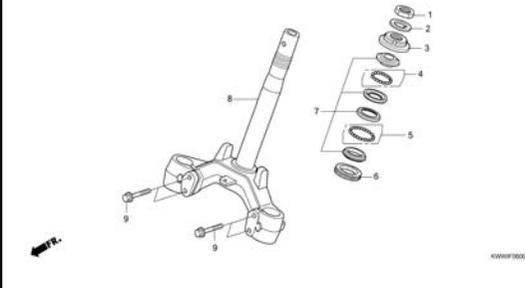


**F-7 FRONT FENDER**

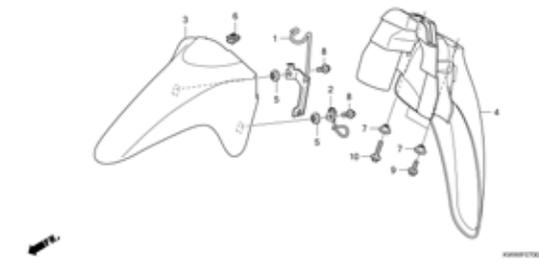

**F-8 FRONT FORK**

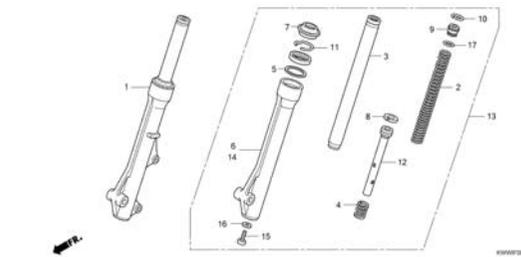

**F-9 FRONT BRAKE CALIPER**

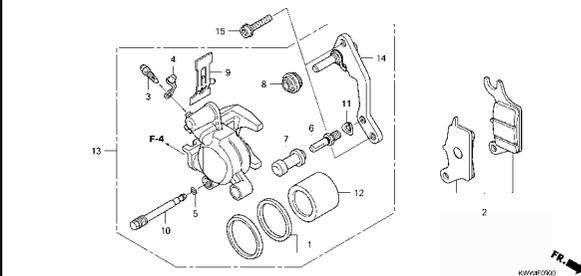


# FRAME GROUP


<p><b>F-10 FRONT WHEEL (SW)</b></p>	<p><b>F-10-1 FRONT WHEEL (CW)</b></p>	<p><b>F-11 REAR BRAKE PANEL</b></p>
<p><b>F-12 REAR WHEEL (SW)</b></p>	<p><b>F-12-1 REAR WHEEL (CW)</b></p>	<p><b>F-13 FUEL TANK</b></p>
<p><b>F-14 SEAT / BATTERY</b></p>	<p><b>F-15 BODY COVER</b></p>	<p><b>F-16 AIR CLEANER</b></p>

# FRAME GROUP


F-16-1 AIR SUCTION VALVE

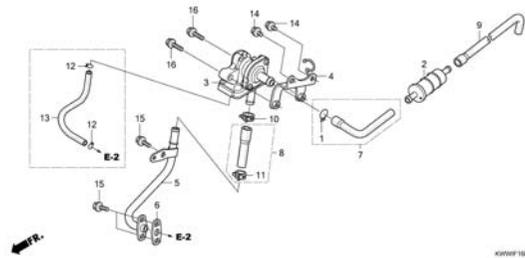


F-17 EXHAUST MUFFLER

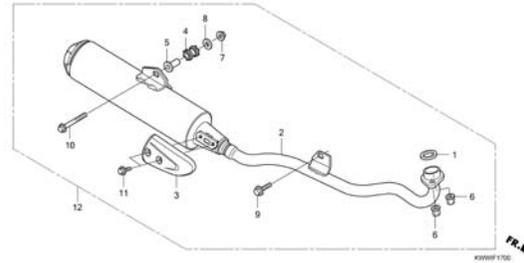


F-18 PEDAL/KICK STARTER ARM

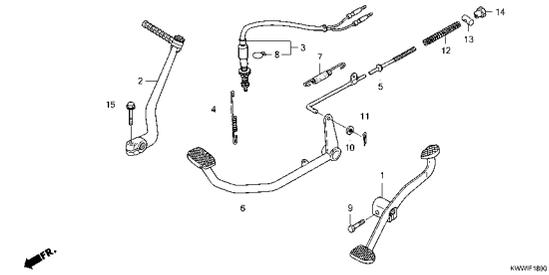


F-19 STEP

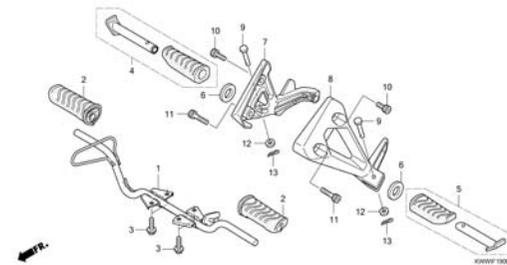


F-20 STAND

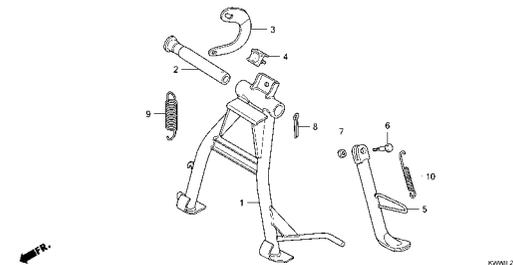


F-21 SWINGARM

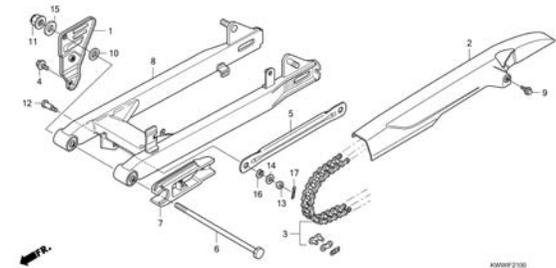


F-22 REAR CUSHION

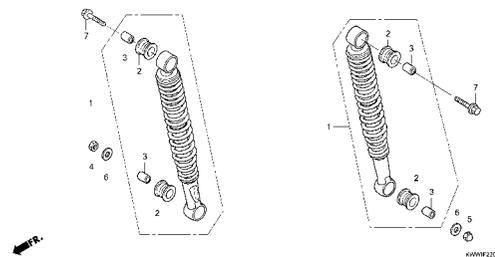

F-23 REAR FENDER

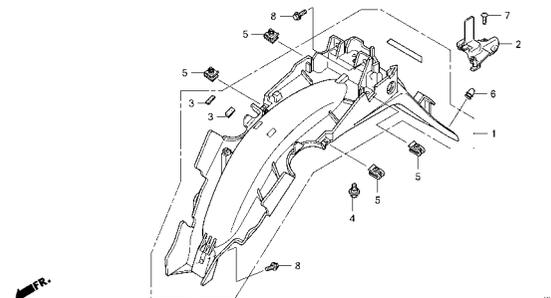


F-24 REAR COMBINATION LIGHT

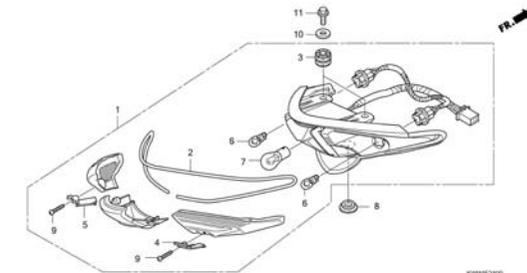


# FRAME GROUP


**F-25 WIRE HARNESS**

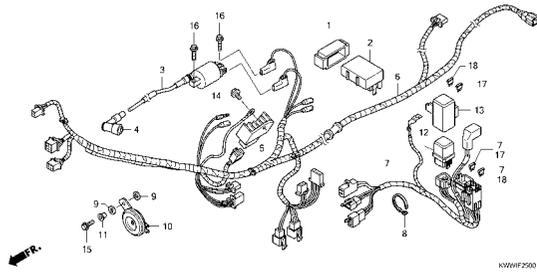


**F-26 FRAME BODY**

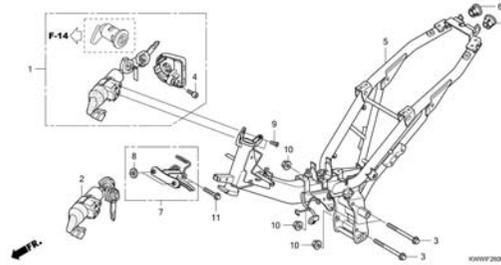


**F-27 FRONT COVER**

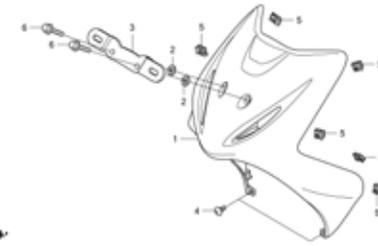


**F-28 MAIN PIPE COVER**

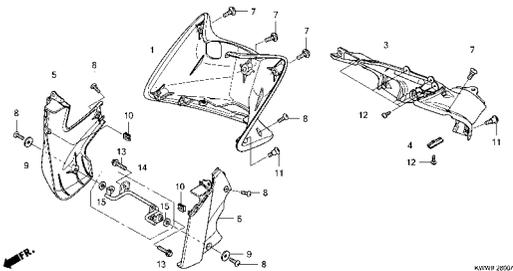


**F-29 TOOLS**

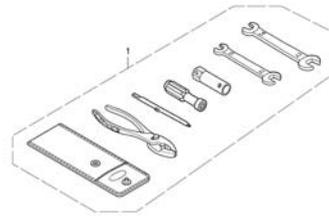


**F-30 CAUTION LABEL**

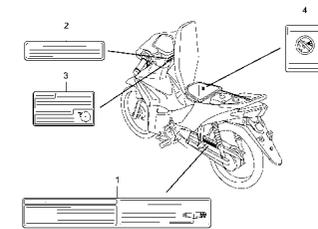

**F-31 MARK/ STRIPE**

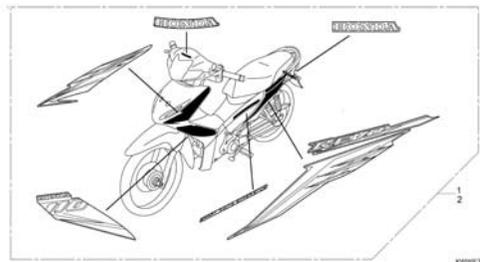


**F-31-1 MARK/ STRIPE**

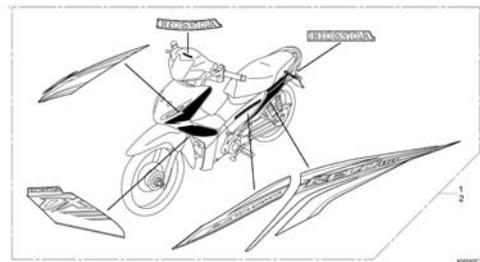

3


# E - 1 Cylinder Head Cover

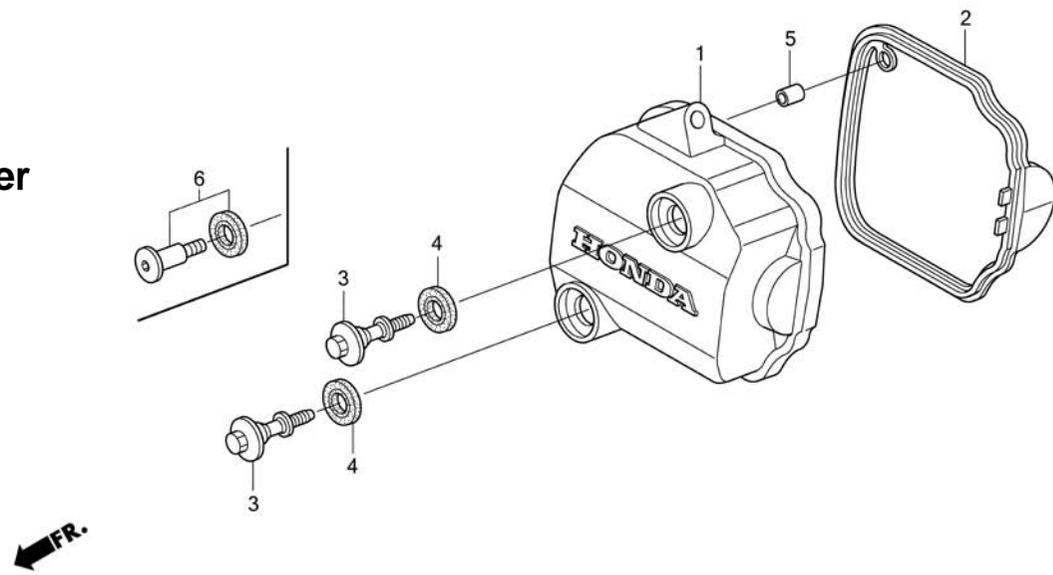

KWWIE0100A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 COVER, CYLINDER HEAD.....	0.1	1	12310-KWB-600	COVER COMP., CYLINDER HEAD	1	1	1	
2 GASKET, CYLINDER HEAD COVER..	0.1	2	12391-KWB-600	GASKET, HEAD COVER	1	1	1	
		3	90017-GCC-000	BOLT, HEAD COVER	-	-	2	
		4	90543-MV9-671	RUBBER, MOUNTING	2	2	2	
		5	90701-KFM-900	DOWEL PIN, SPECIAL, 8X14	1	1	1	
		6	9001A-KWC-900	BOLT, HEAD COVER ASSY	2	2	-	


## E - 2 Cylinder Head

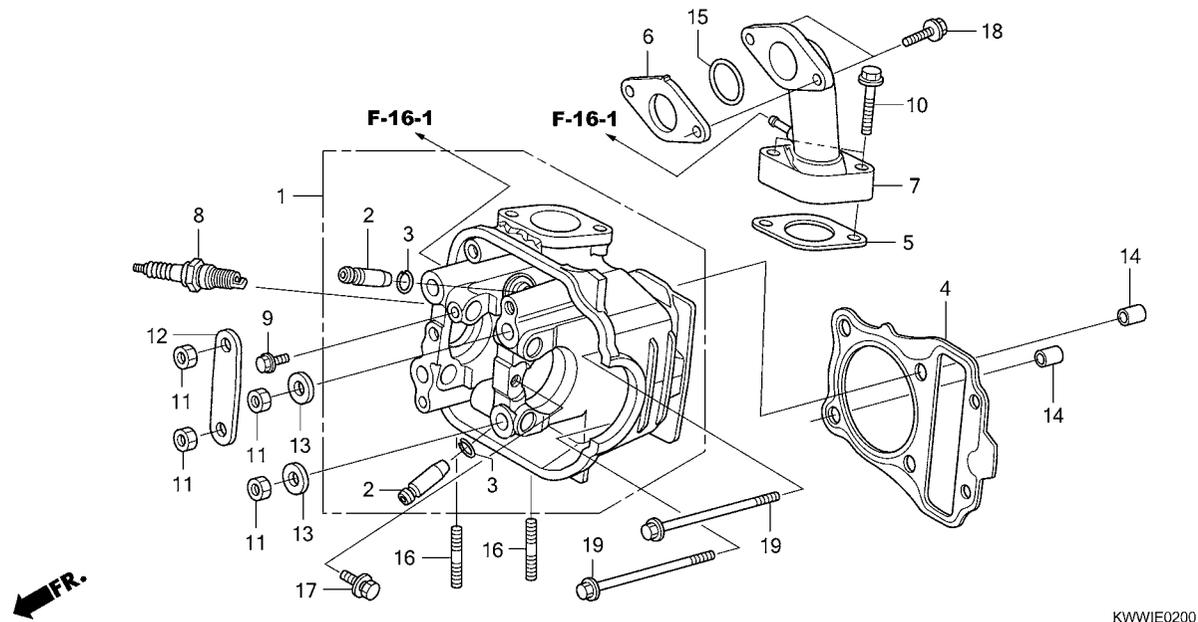

KWWIE0200

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 HEAD, CYLINDER.....	1.7	1	1220B-KWB-920	HEAD SUB ASSY., CYLINDER	1	1	1	
.TERMASUK: Penggantian dan penyeltan Valve		2	12204-KVY-901	GUIDE, VALVE (OS)	2	2	2	
		3	12206-KPL-900	CLIP, VALVE GUIDE	2	2	2	
2 GUIDE, INTAKE VALVE(ONE).....	1.7	4	12251-KWB-601	GASKET, CYLINDER HEAD	1	1	1	
.TERMASUK: Reaming		5	16201-KWB-921	GASKET, CARBURETOR INSULATOR	1	1	1	
.TERMASUK: Penggantian dan penyeltan Valve		6	16211-KPH-901	INSULATOR, CARBURETOR	1	1	1	
		7	17110-KWB-920	PIPE COMP., INLET	1	1	1	
GUIDE, EXHAUST VALVE(ONE).....	1.7	8	31916-KWB-601	PLUG, SPARK (CPR6EA-9S)	1	1	1	
.TERMASUK: Reaming		9	31926-KWB-601	PLUG, SPARK (U20EPR9S)	1	1	1	
.TERMASUK: Penggantian dan penyeltan Valve		9	90002-KWB-600	BOLT, FLANGE, 5X12	1	1	1	
		10	90004-GHB-690	BOLT, FLANGE, 6X32	2	2	2	
		11	90201-GCC-000	NUT, HEX., 7MM	4	4	4	
GUIDE, VALVE :FOR 1 VEHICLE.....	2.0	11	90201-GCC-000	NUT, HEX., 7MM	4	4	4	
.TERMASUK: Reaming		12	90401-KVY-900	PLATE, PLUNGER	1	1	1	
.TERMASUK: Penggantian dan penyeltan Valve		13	90402-KWB-600	WASHER, 7.2X16X2.5	2	2	2	
		14	90701-KFM-901	DOWEL PIN, SPECIAL, 8X14	2	2	2	
		15	91304-GB1-900	O-RING, 25X2.4	1	1	1	
4 GASKET, CYLINDER HEAD.....	0.8	16	92900-08032-1E	BOLT, STUD, 8X32	2	2	2	
		17	93404-06012-00	BOLT-WASHER, 6X12	1	1	1	
6 INSULATOR, THROTTLE BODY/ CARBURETOR .....	0.2	18	96001-06022-00	BOLT, FLANGE, 6X22	2	2	2	
7 MANIFOLD, INTAKE.....	0.3	19	96001-06100-00	BOLT, FLANGE, 6X100	2	2	2	
8 PLUG, SPARK.....	0.1							


## E - 3 Camshaft / Valve

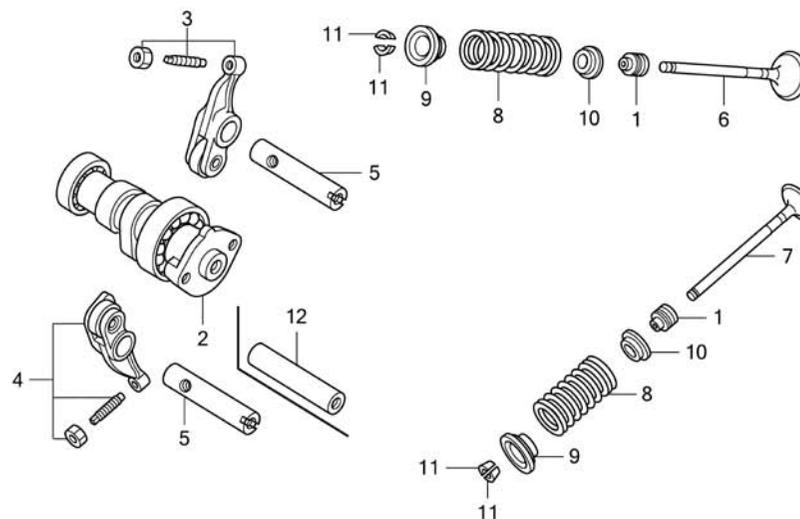

KWWIE0300A


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2 CAMSHAFT .....	1.0	1	12209-GB4-682	SEAL, VALVE STEM (ARAI)	2	2	2	
.TERMASUK: Penyetelan Valve		2	14100-KWB-920	CAMSHAFT COMP.	1	1	1	
3 ARM, INTAKE VALVE ROCKER(ONE)	1.0	3	1443A-KWB-920	ARM ASSY., IN. VALVE ROCKER	1	1	1	
.TERMASUK: Penyetelan Valve		4	1444A-KWB-920	ARM ASSY., EX. VALVE ROCKER	1	1	1	
4 ARM, EXHAUST VALVE ROCKER (ONE).....	1.0	5	14451-KWB-600	SHAFT, ROCKER ARM	1	1	2	
.TERMASUK: Penyetelan Valve		6	14711-KWB-600	VALVE, IN.	1	1	1	
ARM, VALVE ROCKER		7	14721-KVY-900	VALVE, EX.	1	1	1	
:FOR 1 VEHICLE.....	1.0	8	14751-KWB-600	SPRING, VALVE	2	2	2	
.TERMASUK: Penyetelan Valve		8	14751-KWB-921	SPRING, VALVE	2	2	2	
		9	14771-GB4-680	RETAINER, VALVE SPRING	2	2	2	
6 VALVE, INTAKE(ONE).....	1.3	10	14775-KVY-900	SEAT, VALVE SPRING	2	2	2	
.TERMASUK: Penggantian		11	14781-MA6-000	COTTER, VALVE	4	4	4	
7 VALVE, EXHAUST(ONE).....	1.3	12	14461-KVB-900	SHAFT, EX. ROCKER ARM	1	1	-	
.TERMASUK: Penggantian								
VALVE :FOR 1 VEHICLE.....	1.5							
.TERMASUK: Penggantian								
8 (1,9,10,11) SPRING AND/OR STEM SEAL, INTAKE VALVE(ONE).....	1.1							
SPRING AND/OR STEM SEAL, EXHAUST VALVE(ONE).....	1.1							
SPRING AND/OR STEM SEAL, VALVE :FOR 1 VEHICLE.....	1.2							

## E - 4 Cam Chain / Tensioner

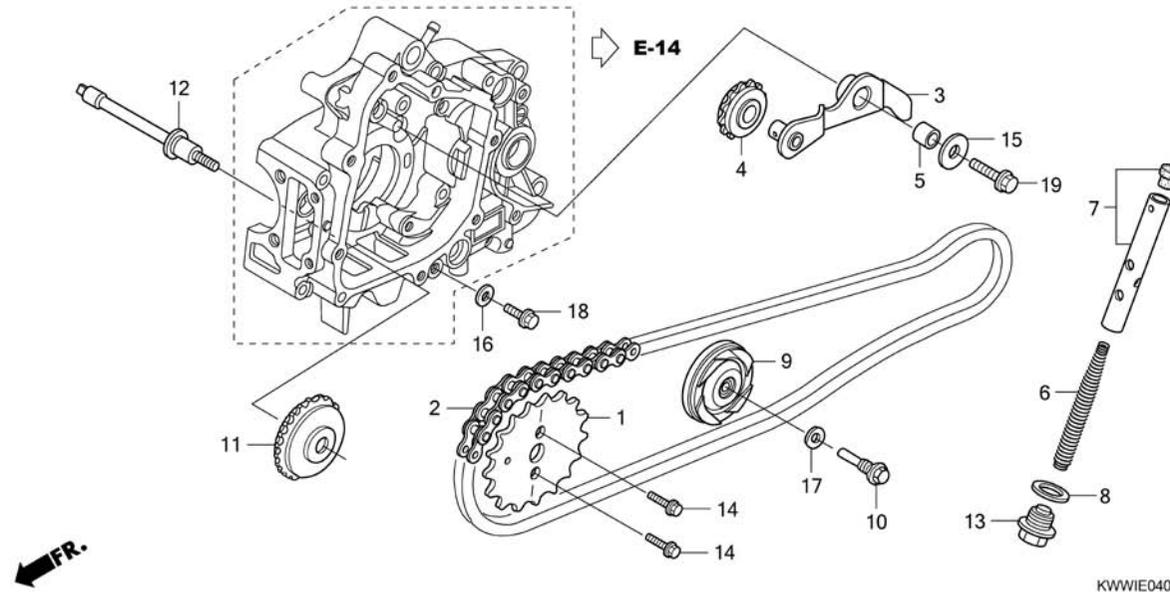

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SPROCKET, CAM.....	0.4	1	14321-KWB-600	SPROCKET, CAM (32T)	1	1	1	
2 CHAIN, CAM.....	1.6	2	14401-KWB-601	CHAIN, CAM (90L)	1	1	1	
3 ARM, CAM CHAIN TENSIONER.....	0.6		14401-KWB-920	CHAIN, CAM (90L)	(1)	(1)	(1)	
4 ROLLER(S), CAM CHAIN TENSIONER	0.6	3	14500-KWB-600	ARM COMP., CAM CHAIN TENSIONER	1	1	1	
		4	14502-086-001	ROLLER, CAM CHAIN TENSIONER	1	1	1	
7 (6,8) ROD, CAM CHAIN TENSIONER		5	14531-KWB-600	COLLAR, CAM CHAIN TENSIONER	1	1	1	
PUSH.....	0.3	6	14541-GB4-682	SPRING, CAM CHAIN TENSIONER	1	1	1	
9 ROLLER, CAM CHAIN GUIDE.....	0.9	7	1455A-KTL-6B0	PUSH ROD ASSY., TENSIONER	1	1	1	
		8	90544-KF0-000	WASHER, SEALING, 14MM	1	1	1	
11 SPROCKET, CAM CHAIN GUIDE.....	2.8	9	14610-KWB-600	ROLLER COMP., CAM CHAIN GUIDE	1	1	1	
.TERMASUK: Pelepasan dan pema-		10	14615-KFL-851	PIN, GUIDE ROLLER	1	1	1	
sangan mesin								
12 BOLT, CAM CHAIN GUIDE ROLLER..	2.8	11	14670-KWB-600	SPROCKET COMP., CAM CHAIN	1	1	1	
.TERMASUK: Pelepasan dan pema-		12	14675-KWB-600	SPINDLE, CAM CHAIN GUIDE	1	1	1	
sangan mesin		13	90081-035-000	BOLT, SEALING, 14MM	1	1	1	
		14	90083-KWB-8A0	BOLT, KNOCK, 5MM	2	2	2	
		15	90404-KWB-600	WASHER, 8.5X26X2.3	1	1	1	
		16	90463-ML7-000	WASHER, SEALING, 6.5MM	1	1	1	
		17	90475-KWB-600	WASHER, 8MM	1	1	1	
		18	95701-06018-00	BOLT, FLANGE, 6X18	1	1	1	
		19	95701-08025-08	BOLT, FLANGE, 8X25	1	1	1	

# E- 5 Cylinder

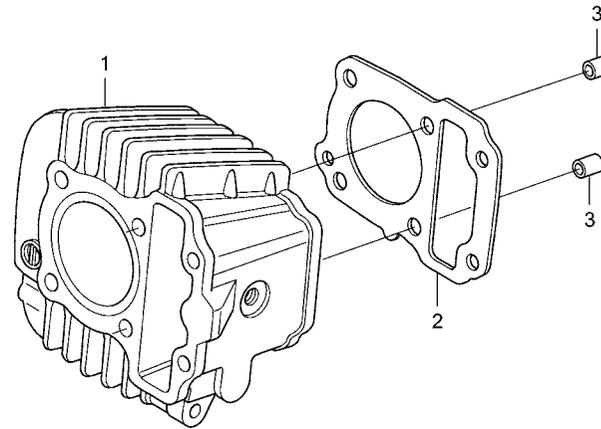


FR.

KWWIE0500


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 CYLINDER.....	1.1	1	12100-KWB-920	CYLINDER COMP.	1	1	1	
2 GASKET, CYLINDER .....	1.0	2	12191-KWB-921	GASKET, CYLINDER	1	1	1	
		3	90701-KFM-901	DOWEL PIN, SPECIAL, 8X14	2	2	2	

# E - 6 Right Crankcase Cover

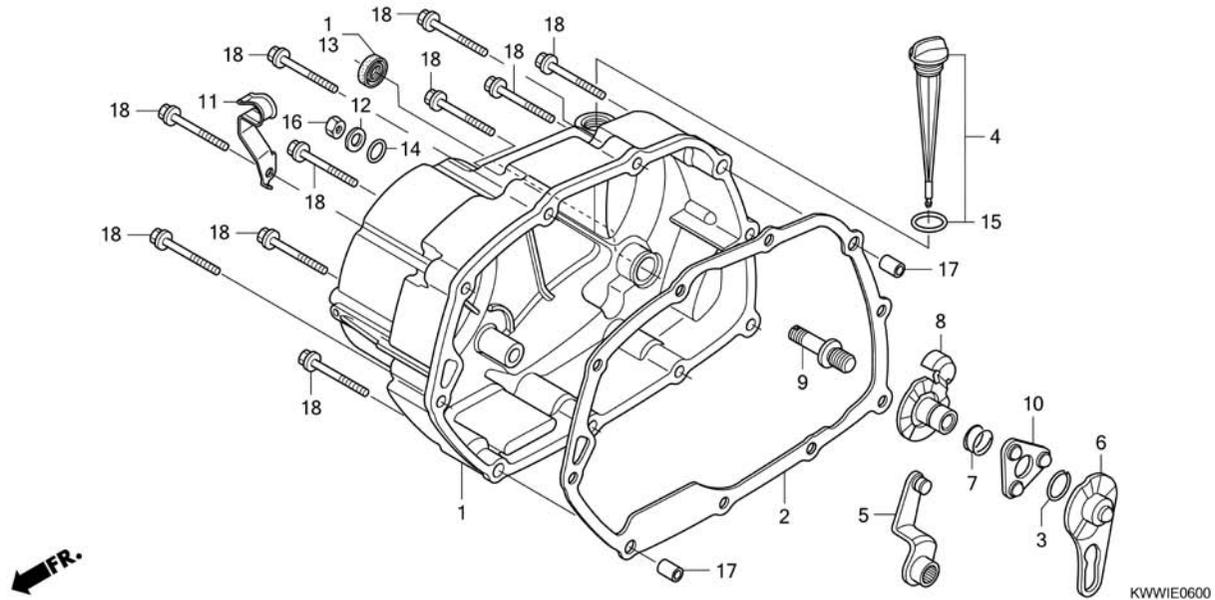

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 COVER, CRANKCASE :RIGHT .....	0.8	1	11331-KWB-600	COVER COMP., R. CRANKCASE	1	1	1	
2 GASKET, CRANKCASE COVER :		2	11394-KWB-920	GASKET, R. CRANKCASE COVER	1	1	1	
RIGHT.....	0.6	3	13115-GN5-911	CLIP, PISTON PIN, 13MM	1	1	1	
5 LEVER, CLUTCH .....	0.7	4	1565A-KWB-920	GAUGE, OIL LEVEL ASSY	1	1	1	
6 (7,10) PLATE, CLUTCH CAM.....	0.6	5	22810-KTL-740	LEVER COMP., CLUTCH	1	1	1	
8 PLATE, CLUTCH CAM LIFTER.....	0.7	6	22823-KWB-600	PLATE, CLUTCH LIFTER CAM	1	1	1	
9 SCREW, CLUTCH ADJUSTING.....	0.7	7	22825-KWB-600	SPRING, CAM PLATE SIDE	1	1	1	
12 OIL SEAL, KICK STARTER SPINDLE..	0.7	8	22830-KWB-600	PLATE COMP., CLUTCH LIFTER	1	1	1	
		9	22846-KPH-901	BOLT, CLUTCH ADJUSTING	1	1	1	
		10	22860-KWB-601	RETAINER COMP., BALL	1	1	1	
		11	32906-KWW-A00	CLIP, HIGH TENSION CORD &	1	1	1	
		12	90485-040-000	WASHER, 8MM	1	1	1	
		13	91202-KRS-971	OIL SEAL, 13.8X24X5	1	1	1	
		14	91303-001-000	O-RING, 8MM	1	1	1	
		15	91307-035-001	O-RING, 18X3	1	1	1	
		16	94030-08000	NUT, HEX., 8MM	1	1	1	
		17	94301-08141	DOWEL PIN, 8X14	2	2	2	
		18	96001-06040-00	BOLT, FLANGE, 6X40	10	10	10	


# E - 7 One Way Clutch

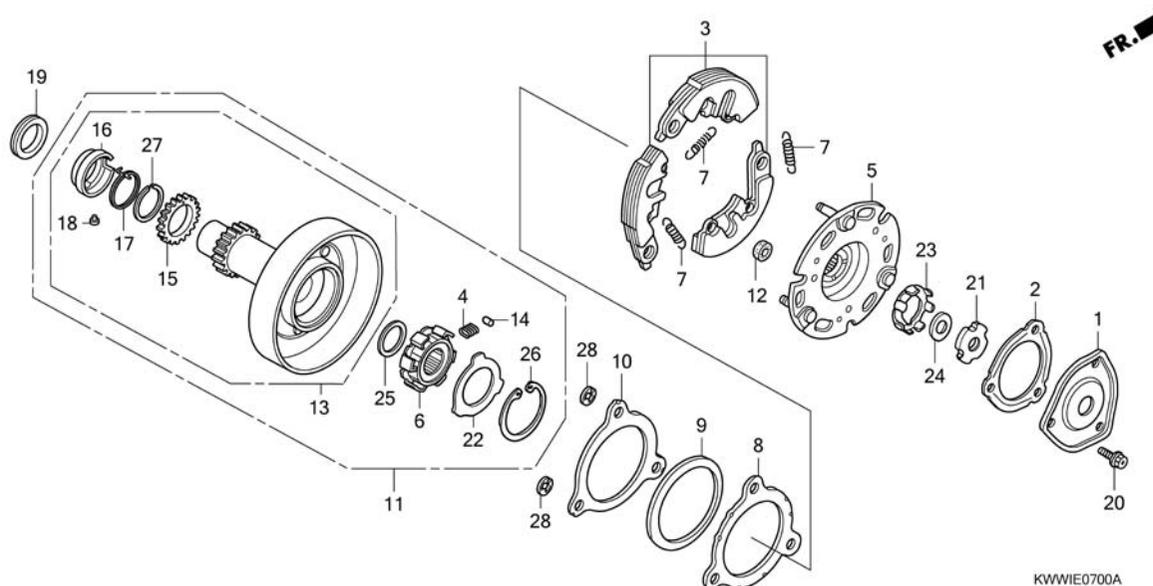

KWWIE0700A


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2) COVER, OIL FILTER .....	0.6	1	15431-HF7-010	COVER, OIL FILTER	1	1	1	
3 (7,12,27) WEIGHT SET, CLUTCH.....	0.9	2	15439-KWB-920	GASKET, OIL FILTER	-	-	1	
5 PLATE, CLUTCH DRIVE .....	0.9		15439-KPH-900	GASKET, OIL FILTER	1	1	-	
		3	22535-KWB-305	WEIGHT SET, PRIMARY CLUTCH	1	1	1	
6 (4,28) INNER, ONE-WAY CLUTCH....	0.9	4	22606-GN5-911	SPRING, ONE WAY RETAINER	6	6	6	
		5	22610-KWB-600	PLATE COMP., PRIMARY DRIVE	1	1	1	
11 OUTER, PRIMARY CLUTCH .....	0.9							
13 GEAR, PRIMARY DRIVE .....	1.0	6	22630-KWB-600	INNER COMP., ONE-WAY CLUTCH	1	1	1	
		7	22641-KWB-600	SPRING, PRIMARY CLUTCH	3	3	3	
			22641-KWW-A01	SPRING, PRIMARY CLUTCH (EXEDY)	(3)	(3)	(3)	
		8	22642-KFL-851	WASHER, CLUTCH SIDE	1	1	1	
		9	22643-KFL-D00	SPRING, SIDE FRICTION	1	1	1	
		10	22644-KFL-852	PLATE, CLUTCH SIDE	1	1	1	
		11	22660-KWB-601	OUTER ASSY., PRIMARY CLUTCH	1	1	1	
		12	22804-GB2-880	RUBBER, CLUTCH DAMPER	3	3	3	
		13	23120-KTL-740	GEAR COMP., PRIMARY DRIVE	1	1	1	
		14	91101-GB2-001	ROLLER, 5X8	6	6	6	
			91101-KWW-A01	ROLLER, 5X8 (EXEDY)	(6)	(6)	(6)	
		15	23122-KTL-740	SUB GEAR (17T)	1	1	1	
			23122-KWW-A01	SUB GEAR (17T) (EXEDY)	(1)	(1)	(1)	
		16	23123-KFL-851	RETAINER, SPRING	1	1	1	
			23123-KWW-A01	RETAINER, SPRING (EXEDY)	(1)	(1)	(1)	
		17	23124-GCE-901	SPRING, SUB GEAR	1	1	1	
			23124-KWW-A01	SPRING, SUB GEAR (EXEDY)	(1)	(1)	(1)	

# E - 7 One Way Clutch

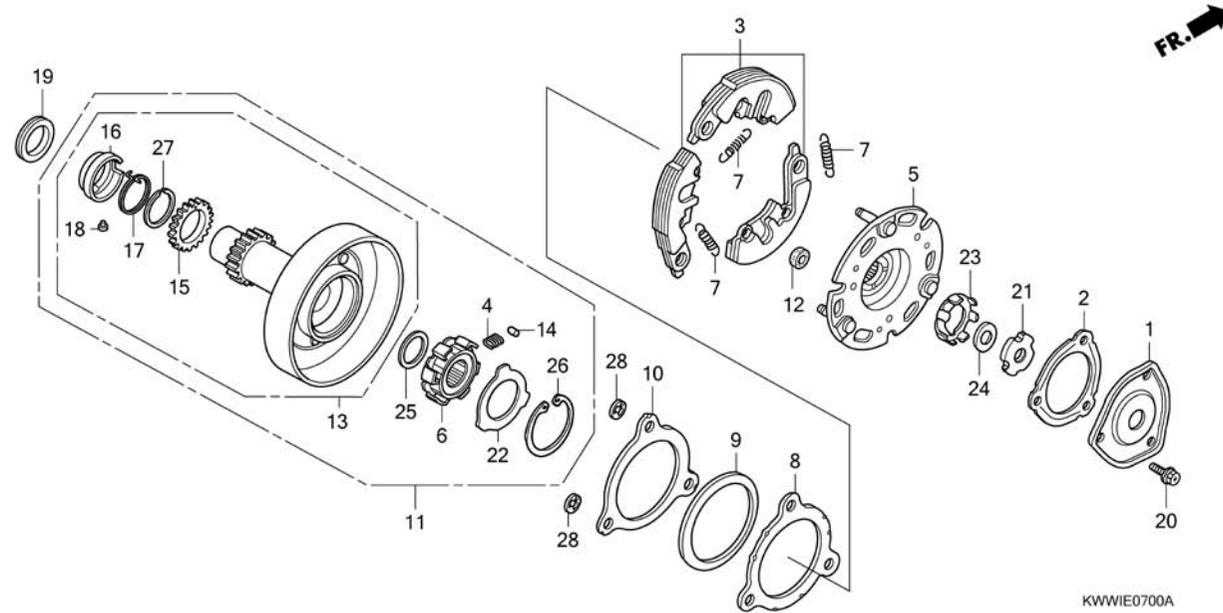

KWWIE0700A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		18	23125-GN5-910	PIN	1	1	1	
		19	23126-KWB-600	COLLAR, 19X28X4	1	1	1	
		20	90083-KFL-850	BOLT, SPECIAL FLANGE, 5X8	3	3	3	
		21	90231-087-010	NUT, LOCK, 14MM	1	1	1	
		22	90401-GB2-000	WASHER, 30X45X0.8	1	1	1	
			90401-KWW-A01	WASHER (EXEDY)	(1)	(1)	(1)	
		23	90431-GN5-910	WASHER, LOCK	1	1	1	
		24	90432-086-000	WASHER B, LOCK	1	1	1	
		25	90433-KWB-600	WASHER, 17X23X1.5	1	1	1	
			90433-KWW-A01	WASHER, 17X23X1.5 (EXEDY)	(1)	(1)	(1)	
		26	90455-GB2-000	CIRCLIP, INTERNAL, 45MM	1	1	1	
			90455-KWW-A01	CIRCLIP, INTERNAL, 45MM	(1)	(1)	(1)	
		27	90603-KWW-A01	SET RING, 23MM (EXEDY)	1	1	1	
			90603-POX-000	SET RING, 23MM	(1)	(1)	(1)	
		28	90605-KWW-A01	CIRCLIP, 7MM (EXEDY)	3	3	3	
			90605-166-720	CIRCLIP, 7MM	(3)	(3)	(3)	

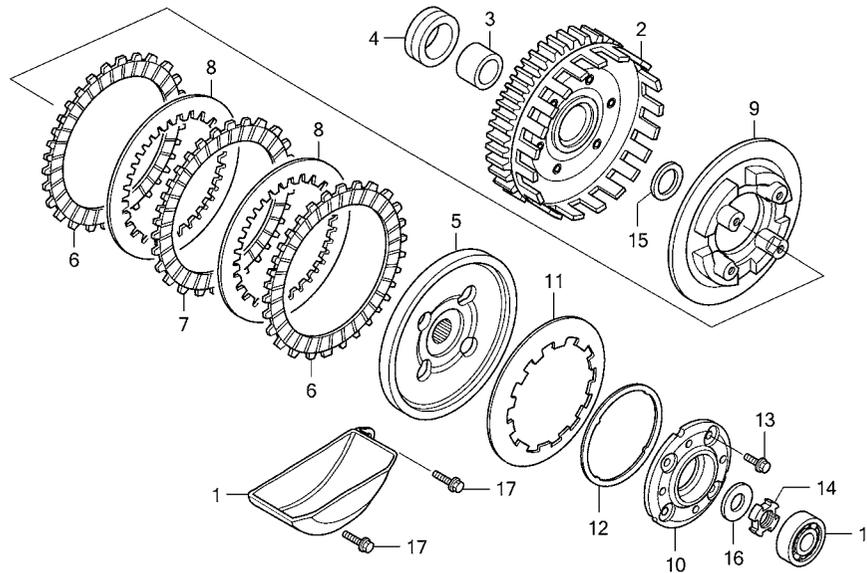


**E - 8  
Clutch  
(F.C.C)**

KWWIE0800

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SEPARATOR, OIL.....	0.9	1	15661-GN5-911	PLATE, OIL SEPARATOR	1	1	1	
2 OUTER, CLUTCH.....	0.9	2	22110-KWB-931	OUTER COMP., CLUTCH	1	1	1	
5 CENTER, CLUTCH .....	1.1	3	22115-KPH-900	GUIDE, CLUTCH OUTER	1	1	1	
6 (7,8) DISC, CLUTCH FRICTION .....	1.1	4	22116-KWB-600	COLLAR, CLUTCH OUTER	1	1	1	
9 PLATE, CLUTCH PRESSURE .....	1.1	5	22121-KWB-601	CENTER, CLUTCH	1	1	1	
10 PLATE, CLUTCH LIFTER.....	0.9	6	22201-KWB-603	DISK, CLUTCH FRICTION	2	2	2	
11 SPRING, CLUTCH .....	0.9	7	22204-KWB-603	DISK B, CLUTCH FRICTION	1	1	1	
18 BEARING, CLUTCH LIFTER.....	0.7	8	22321-KWB-601	PLATE, CLUTCH	2	2	2	
		9	22351-KWB-601	PLATE, CLUTCH PRESSURE	1	1	1	
		10	22361-KWB-601	PLATE, CLUTCH LIFTER	1	1	1	
		11	22401-KWB-601	SPRING, CLUTCH	1	1	1	
		12	22402-KWB-601	SEAT, CLUTCH SPRING	1	1	1	
		13	90050-KWB-601	BOLT, SPECIAL FLANGE, 6X16	4	4	4	
		14	90231-198-000	NUT B, LOCK, 14MM	1	1	1	
		15	90403-KPH-901	WASHER, THRUST, 17MM	1	1	1	
		16	90501-GBL-730	WASHER, 14MM	1	1	1	
		17	95701-06020-00	BOLT, FLANGE, 6X20	2	2	2	
		18	HB6200	BEARING, RADIAL BALL, 6200	1	1	1	

# E - 8 - 1


## Clutch (Exedy)

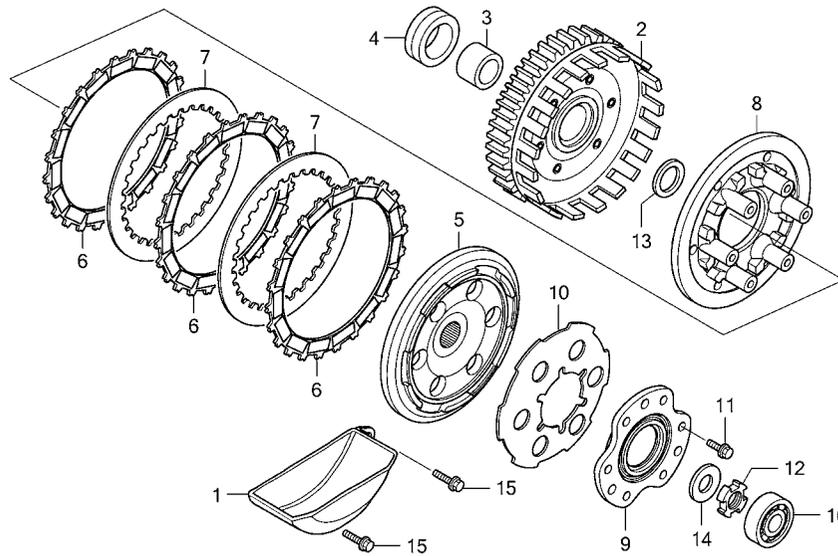

KWWIE0801

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SEPARATOR, OIL.....	0.9	1	15661-GN5-910	PLATE, OIL SEPARATOR	1	1	1	
2 OUTER, CLUTCH.....	0.9	2	22110-KWW-A01	OUTER COMP., CLUTCH	1	1	1	
5 CENTER, CLUTCH .....	1.1	3	22115-KPH-900	GUIDE, CLUTCH OUTER	1	1	1	
		4	22116-KWB-600	COLLAR, CLUTCH OUTER	1	1	1	
6 (7,8) DISC, CLUTCH FRICTION .....	1.1	5	22121-KWW-A01	CENTER, CLUTCH	1	1	1	
9 PLATE, CLUTCH PRESSURE .....	1.1	6	22201-KWW-A01	DISK, CLUTCH FRICTION	3	3	3	
10 PLATE, CLUTCH LIFTER.....	0.9	7	22321-KWW-A01	PLATE, CLUTCH	2	2	2	
11 SPRING, CLUTCH .....	0.9	8	22351-KWW-A01	PLATE, CLUTCH PRESSURE	1	1	1	
18 BEARING, CLUTCH LIFTER.....	0.7	9	22361-KWW-A01	PLATE, CLUTCH LIFTER	1	1	1	
		10	22401-KWW-A01	SPRING, CLUTCH	1	1	1	
		11	90050-KWW-A01	BOLT, SPECIAL FLANGE, 5X16	6	6	6	
		12	90231-198-000	NUT B, LOCK, 14MM	1	1	1	
		13	90403-KWW-A01	WASHER, THRUST, 17MM	1	1	1	
		14	90501-GBL-730	WASHER, 14MM	1	1	1	
		15	95701-06020-00	BOLT, FLANGE, 6X20	2	2	2	
		16	HB6200	BEARING, RADIAL BALL, 6200	1	1	1	


**E - 9**  
**Oil Pump**

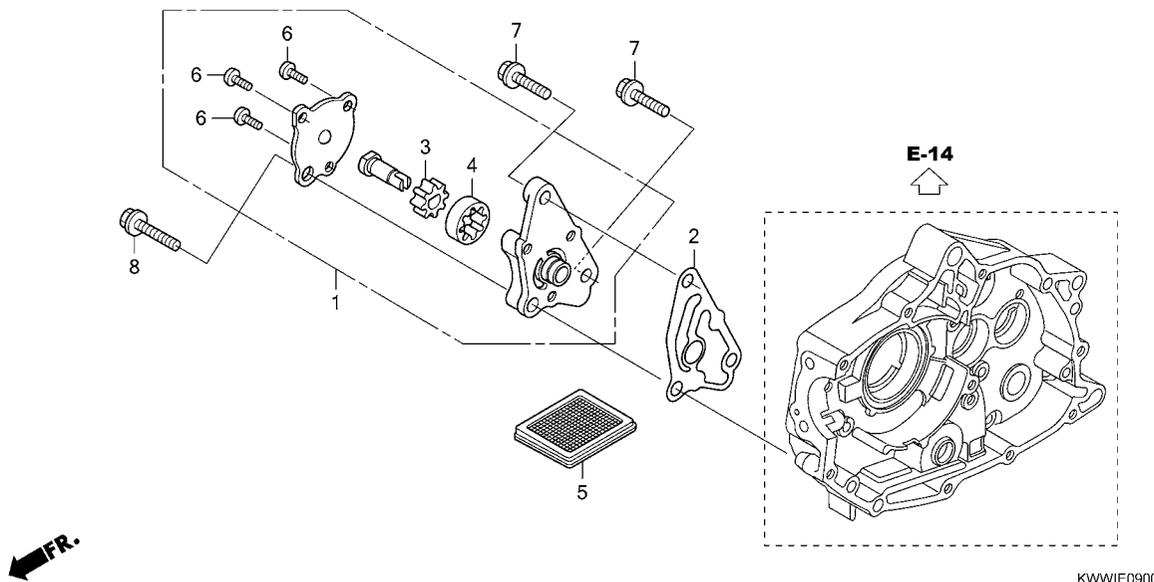

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2) PUMP ASSY., OIL.....	0.7	1	15100-KWB-920	PUMP ASSY., OIL	1	1	1	
5 SCREEN, OIL FILTER.....	0.6	2	15119-KWB-600	GASKET, OIL PUMP BODY	1	1	1	
		3	15331-GF6-000	ROTOR, OIL PUMP INNER	1	1	1	
		4	15332-GF6-000	ROTOR, OIL PUMP OUTER	1	1	1	
		5	15421-035-010	SCREEN, OIL FILTER	1	1	1	
		6	93500-05010-0A	SCREW, PAN, 5X10	3	3	3	
		7	96001-06016-00	BOLT, FLANGE, 6X16	2	2	2	
		8	96001-06022-00	BOLT, FLANGE, 6X22	1	1	1	

# E - 10


## Left Crankcase Cover

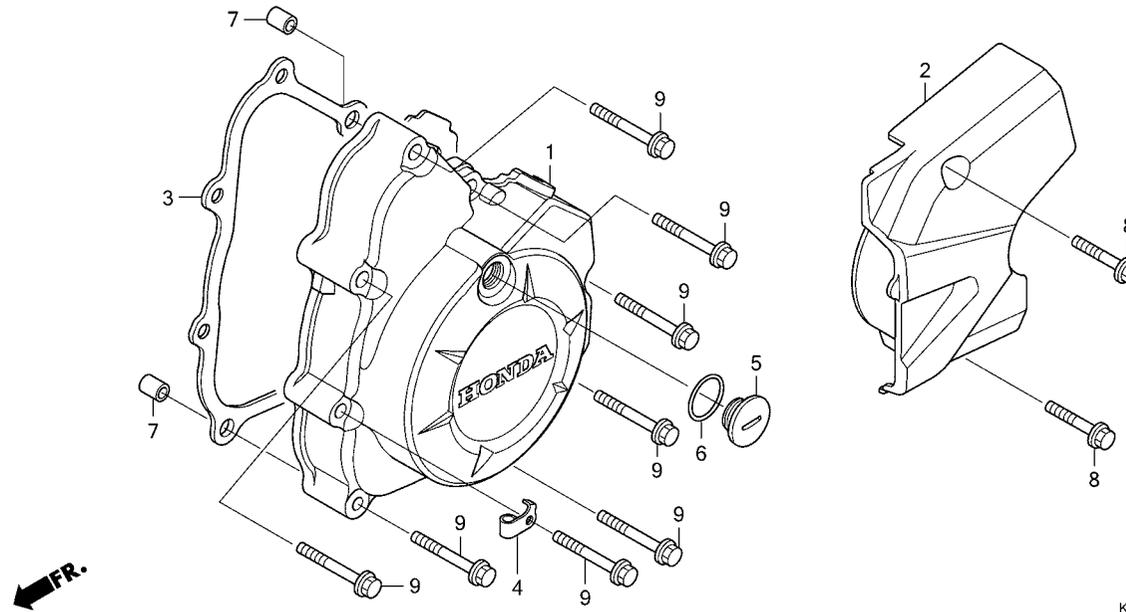

KWWIE1000

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 COVER, CRANKCASE :LEFT.....	0.4	1	11341-KWB-600	COVER, L. CRANKCASE	1	1	1	
2 COVER, CRANKCASE :LEFT REAR...	0.1	2	1136A-KWB-920	COVER COMP., L. RR. CRANKCASE	1	1	1	
3 GASKET, CRANKCASE COVER :		3	11395-KWB-920	GASKET, L. CRANKCASE COVER	1	1	1	
4 LEFT.....	0.3	4	16236-KWW-A00	CLAMPER, OVER FLOW	1	1	1	
		5	90084-GN5-640	CAP, A.C. GENERATOR	1	1	1	
		6	91303-377-001	O-RING, 13.8X2.5	1	1	1	
		7	94301-08141	DOWEL PIN, 8X14	2	2	2	
		8	96001-06025-00	BOLT, FLANGE, 6X25	2	2	2	
		9	96001-06035-00	BOLT, FLANGE, 6X35	8	8	8	

# E - 11 Generator

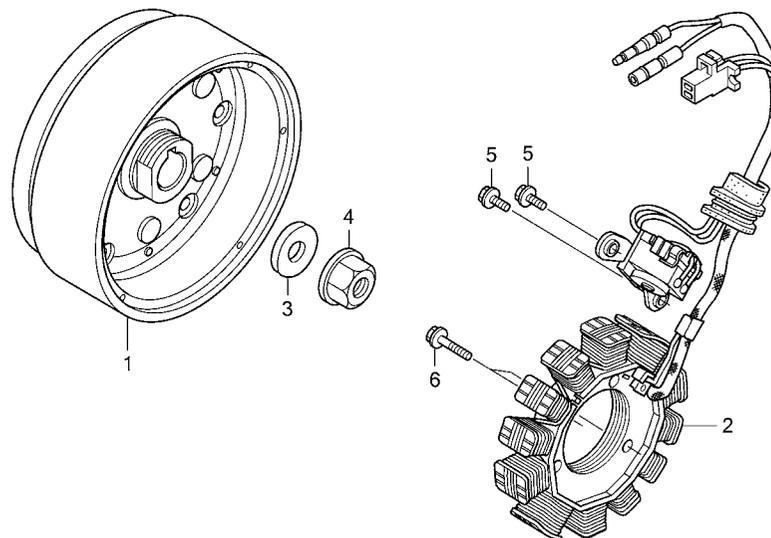


FR.

KWWIE1100

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 ROTOR OR FLYWHEEL.....	0.5	1	31110-KWB-921	FLYWHEEL COMP.	1	1	1	
2 STATOR .....	0.6	2	31120-KWB-921	STATOR COMP.	1	1	1	
		3	90403-KM9-000	WASHER, 10X24	1	1	1	
		4	94050-10000	NUT, FLANGE, 10MM	1	1	1	
		5	96001-06016-00	BOLT, FLANGE, 6X16	2	2	2	
		6	96001-06020-00	BOLT, FLANGE, 6X20	2	2	2	

# E - 12


## Starting Clutch

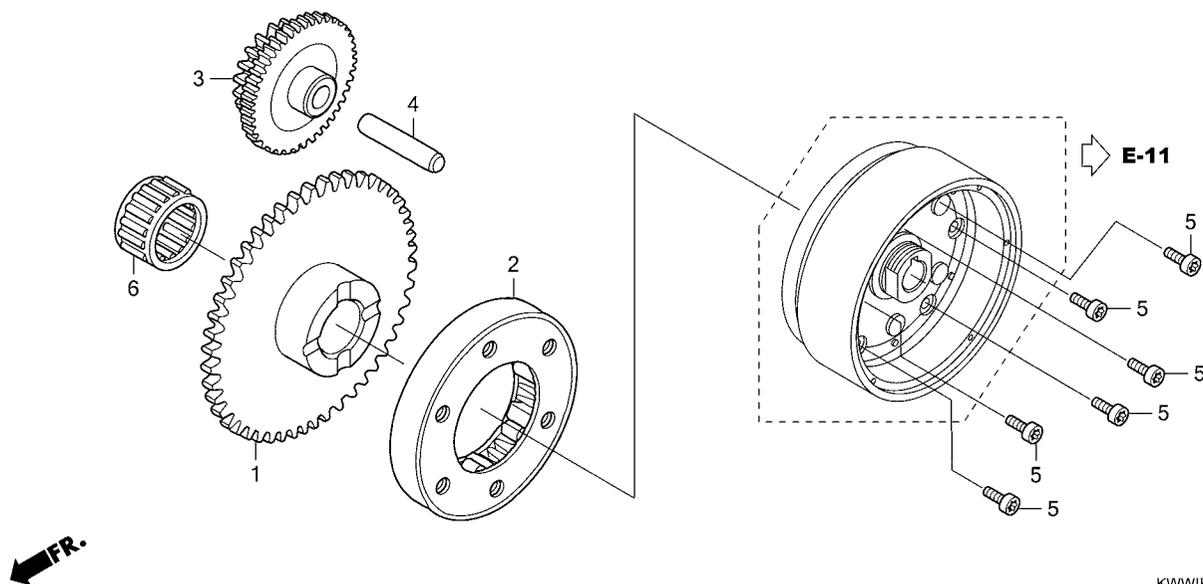

KWWIE1200

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (6) GEAR, STARTER DRIVEN.....	0.4	1	28110-KWB-920	GEAR COMP., STARTER DRIVEN	1	1	1	
2 CLUTCH, STARTING ONE WAY.....	0.5	2	28120-KPH-701	CLUTCH ASSY., ONE WAY (EXEDY)	1	1	1	
3 (4) GEAR, STARTER REDUCTION.....	0.3		28120-KWB-921	CLUTCH ASSY., ONE WAY	(1)	(1)	(1)	
		3	28130-KWB-920	GEAR COMP., STARTER REDUCTION	1	1	1	
		4	28132-KPH-900	SHAFT, REDUCTION GEAR	1	1	1	
		5	90085-KTC-920	BOLT, SOCKET, 6X14	6	6	6	
		6	91005-KWB-921	BEARING, NEEDLE, 20X26X18.2	1	1	1	


# E - 13 Starting Motor

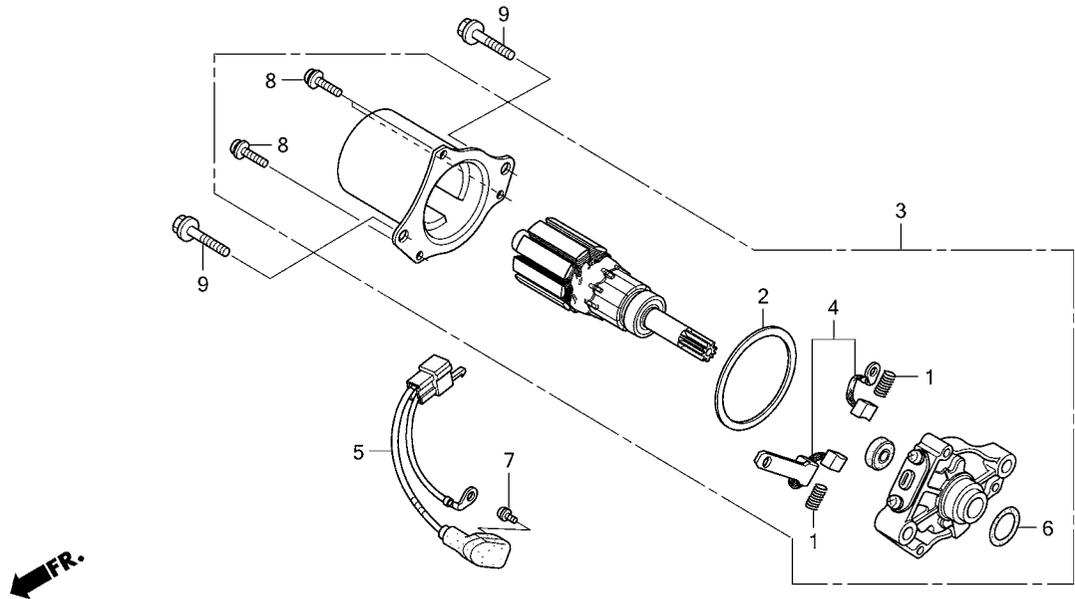

KWWWIE1300

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
3 MOTOR, STARTING.....	0.5	1	31204-KG8-004	SPRING, CARBON BRUSH	2	2	2	
4 (1) TERMINAL, BRUSH (STARTER)...	0.7	2	31206-GW3-004	PACKING	1	1	1	
5 SUB HARNESS, STARTER.....	0.3	3	31210-KWB-921	MOTOR UNIT, STARTER	1	1	1	
		4	32101-GW3-780	BRUSH SET	1	1	1	
		5	32105-KWB-921	SUB CORD, STARTER MOTOR	1	1	1	
		6	91309-KEE-630	O-RING	1	1	1	
		7	93892-04006-08	SCREW-WASHER, 4X6	1	1	1	
		8	93892-05016-08	SCREW-WASHER, 5X16	3	3	3	
		9	96001-06032-00	BOLT, FLANGE, 6X32	2	2	2	

# E - 14 Crankcase

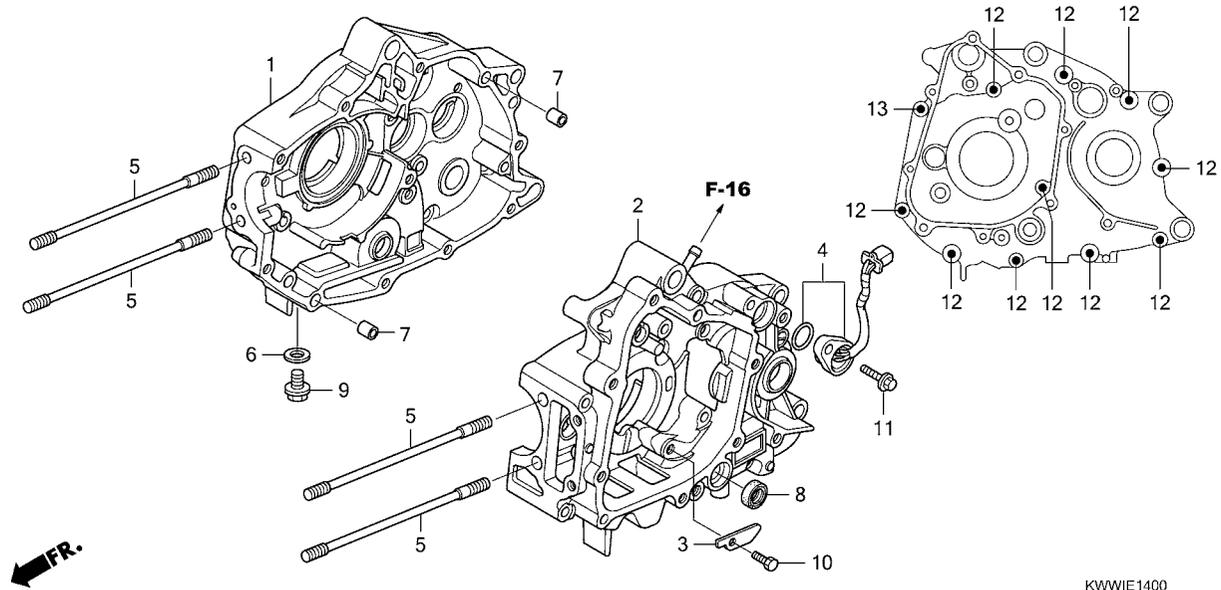


KWWIE1400

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 CRANKCASE :RIGHT..... .TERMASUK: Pelepasan dan pemasangan mesin	3.4	1	11101-KWB-600	CRANKCASE COMP., R.	1	1	1	
		2	11201-KWB-920	CRANKCASE COMP., L.	1	1	1	
2 CRANKCASE :LEFT ..... .TERMASUK: Pelepasan dan pemasangan mesin	3.0	3	11218-KWB-600	PLATE, OIL STOPPER	1	1	1	
		4	35759-KWB-921	CONTACT ASSY., CHANGE SWITCH	1	1	1	
4 SWITCH, GEAR CHANGE.....	0.2	4	35759-KWW-A40	CONTACT ASSY., CHANGE SWITCH	(1)	-	-	
		5	90031-KWB-600	BOLT, STUD, 7X180.5	4	4	4	
8 OIL SEAL, GEARSHIFT SPINDLE.....	1.2	6	90407-259-000	PACKING, DRAIN COCK, 12.5X20	1	1	1	
		7	90703-HC4-001	DOWEL PIN, 10X14	2	2	2	
CRANKCASE :BOTH..... .TERMASUK: Pelepasan dan pemasangan mesin	3.7	8	91208-KWB-601	OIL SEAL, 11.6X22X7	1	1	1	
		9	92800-12000	BOLT, DRAIN PLUG, 12MM	1	1	1	
10 SWITC, GEAR CHANGE.....	0.2	10	93101-KWB-8A0	BOLT, HEX., 6X14	1	1	1	
		11	95701-06018-00	BOLT, FLANGE, 6X18	1	1	1	
12 SWITC, GEAR CHANGE.....	0.2	12	96001-06060-00	BOLT, FLANGE, 6X60	10	10	10	
		13	96001-06075-01	BOLT, FLANGE, 6X75	1	1	1	

## E - 15

### Crankshaft / Piston

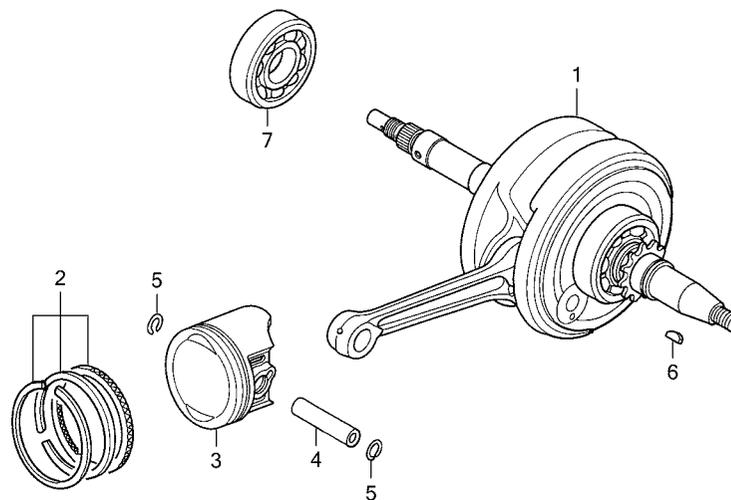


FR.

KWWWIE1500

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes	
					SW	CW	DX		
1 CRANKSHAFT.....	3.5	1	13004-KWW-A40	CRANKSHAFT ASSY	1	1	1		
		2	13011-KWB-305	RING SET, PISTON (STD.)	1	1	1		
.TERMASUK: Pelepasan dan pemasangan mesin			13021-KWB-305	RING SET, PISTON (0.25)	(1)	(1)	(1)		
			13031-KWB-305	RING SET, PISTON (0.50)	(1)	(1)	(1)		
			13041-KWB-305	RING SET, PISTON (0.75)	(1)	(1)	(1)		
			13051-KWB-305	RING SET, PISTON (1.00)	(1)	(1)	(1)		
3 (2,4,5) RING, PISTON AND/OR PISTON (ONE).....	1.2								
7 BEARING, CRANKSHAFT :RIGHT.....	3.4	3	13101-KWB-920	PISTON (STD.)	1	1	1		
			13102-KWB-920	PISTON (0.25)	(1)	(1)	(1)		
.TERMASUK: Pelepasan dan pemasangan mesin			13103-KWB-920	PISTON (0.50)	(1)	(1)	(1)		
			13104-KWB-920	PISTON (0.75)	(1)	(1)	(1)		
			13105-KWB-920	PISTON (1.00)	(1)	(1)	(1)		
			4	13111-087-001	PIN, PISTON	1	1	1	
			5	13115-GN5-911	CLIP, PISTON PIN, 13MM	2	2	2	
		6	90741-003-010	KEY, WOODRUFF, 4MM	1	1	1		
		7	91001-KWW-A01	BEARING, RADIAL BALL, 63/22	1	1	1		


# E - 16 Transmission

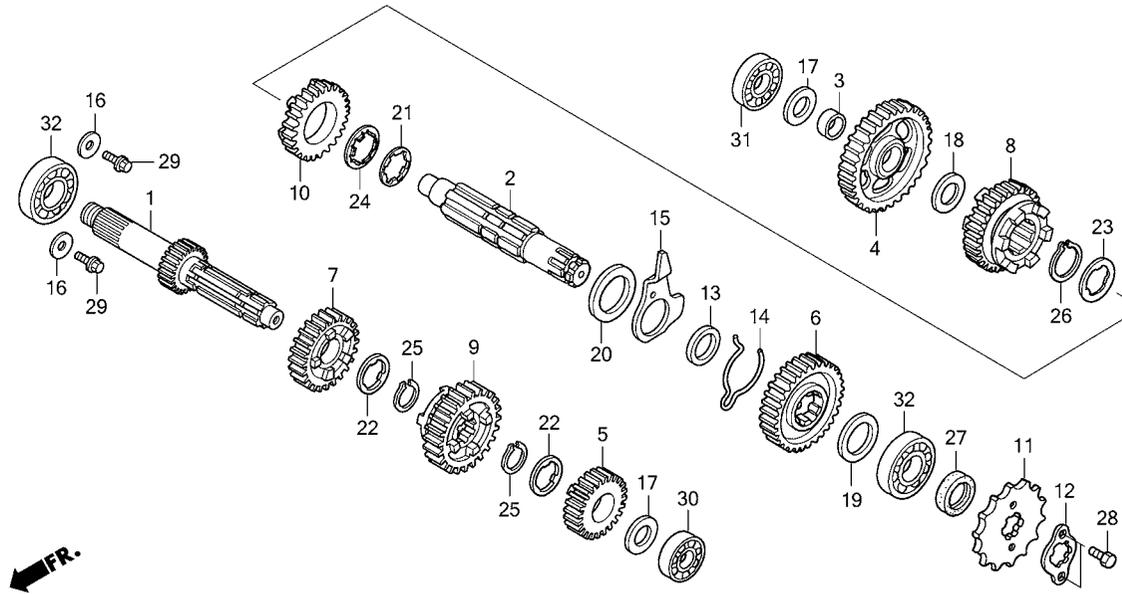

KWWIE1600A

Service item	F. R. T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (5,7,9) MAINSHAFT, TRANSMISSION .TERMASUK: Pelepasan dan pemasangan mesin	2.9	1	23211-KWW-62Z	MAINSHAFT (13T)	1	1	1	
		2	23221-KWW-62Z	COUNTERSHAFT	1	1	1	
.Penggantian countershaft tambahkan	0.2	3	23415-KPH-901	BUSH, 15MM	1	1	1	
		4	23421-KWB-600	GEAR, COUNTERSHAFT LOW (34T)	1	1	1	
2 (4,6,8,10) COUNTERSHAFT, TRANSMISSION .....	2.9	5	23431-KWW-620	GEAR, MAINSHAFT SECOND (18T)	1	1	1	
		6	23441-KWB-600	GEAR, COUNTERSHAFT SECOND	1	1	1	
.TERMASUK: Pelepasan dan pemasangan mesin	0.2	7	23451-KWW-620	GEAR, MAINSHAFT THIRD (22T)	1	1	1	
		8	23461-KWW-620	GEAR, COUNTERSHAFT THIRD (25T)	1	1	1	
.Penggantian countershaft tambahkan	0.2	9	23471-KWW-620	GEAR, MAINSHAFT FOURTH (24T)	1	1	1	
		10	23481-KWW-620	GEAR, COUNTERSHAFT FOURTH	1	1	1	
11 SPROCKET, DRIVE.....	0.2	11	23801-KWB-600	SPROCKET, DRIVE (14T)	1	1	1	
30 BEARING, MAINSHAFT :LEFT.....	2.9	12	23802-GN5-911	PLATE, FIXING	1	1	1	
		13	23911-KPH-901	COLLAR, LOCK PLATE	1	1	1	
.TERMASUK: Pelepasan dan pemasangan mesin	0.2	14	24305-KWB-600	SPRING, CHANGE FRICTION	1	1	1	
		15	24306-KWB-600	PLATE, DRUM LOCK	1	1	1	
31 BEARING, COUNTERSHAFT :RIGHT	3.6	16	90403-KWB-600	WASHER, 6X19X2.3	2	2	2	
		17	90412-KPH-901	WASHER, SPECIAL, 12X23	2	2	2	
.TERMASUK: Pelepasan dan pemasangan mesin	0.2	18	90412-187-001	WASHER, THRUST, 15MM	1	1	1	
		19	90452-GB4-771	WASHER, THRUST, 17MM	1	1	1	
		20	90452-413-001	WASHER, THRUST, 20MM	1	1	1	

# E - 16 Transmission

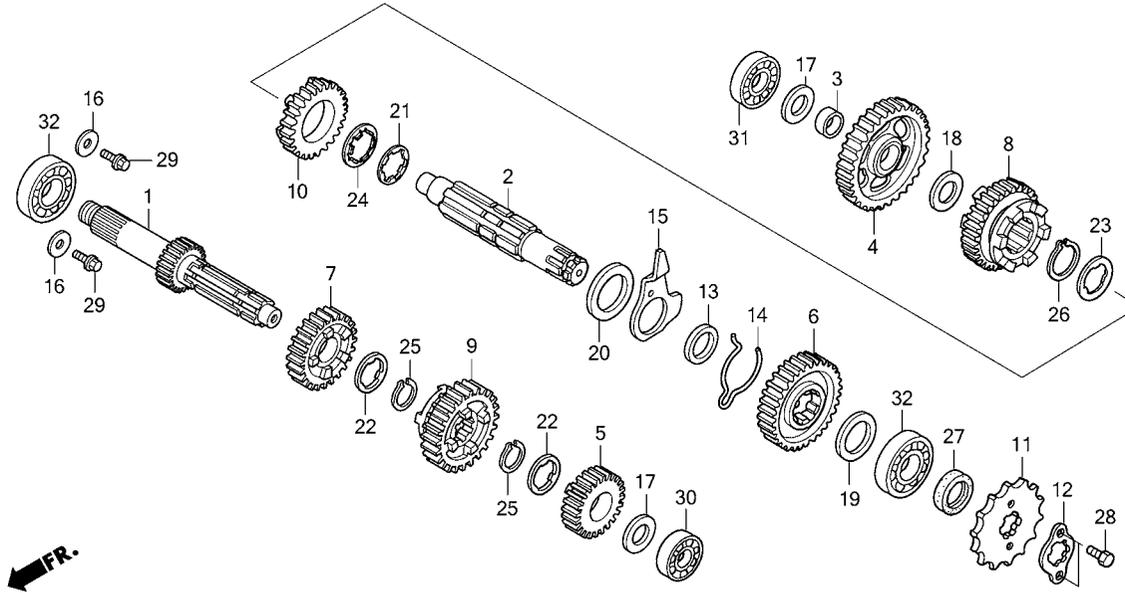


KWWIE1600A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
32 BEARING, MAINSHAFT :RIGHT..... .TERMASUK: Pelepasan dan pemasangan mesin	3.6	21	90461-KWB-600	WASHER, SPLINE, 20MM	1	1	1	
		22	90461-035-003	WASHER, SPLINE, 17MM	2	2	2	
BEARING, MAINSHAFT :BOTH..... .TERMASUK: Pelepasan dan pemasangan mesin	3.8	23	90461-459-010	WASHER, SPLINE, 20MM	1	1	1	
		24	90465-KWB-600	WASHER, LOCK, 20MM	1	1	1	
BEARING, COUNTERSHAFT :LEFT.. .TERMASUK: Pelepasan dan pemasangan mesin	2.9	25	90601-001-005	CIRCLIP, EXTERNAL, 17MM	2	2	2	
		26	90601-459-000	CIRCLIP, 20MM	1	1	1	
BEARING, COUNTERSHAFT :BOTH .TERMASUK: Pelepasan dan pemasangan mesin	3.8	27	91204-KWB-601	OIL SEAL, 17X29X5	1	1	1	
		28	92101-06010	BOLT, HEX., 6X10	2	2	2	
BEARING, MAINSHAFT AND COUNTERSHAFT :ALL ..... .TERMASUK: Pelepasan dan pemasangan mesin	4.0	29	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	
		30	HB6001	BEARING, RADIAL BALL, 6001	1	1	1	
		31	HB6201	BEARING, RADIAL BALL, 6201	1	1	1	
		32	HB6203	BEARING, RADIAL BALL, 6203	2	2	2	

# E - 17


## Gearshift Drum

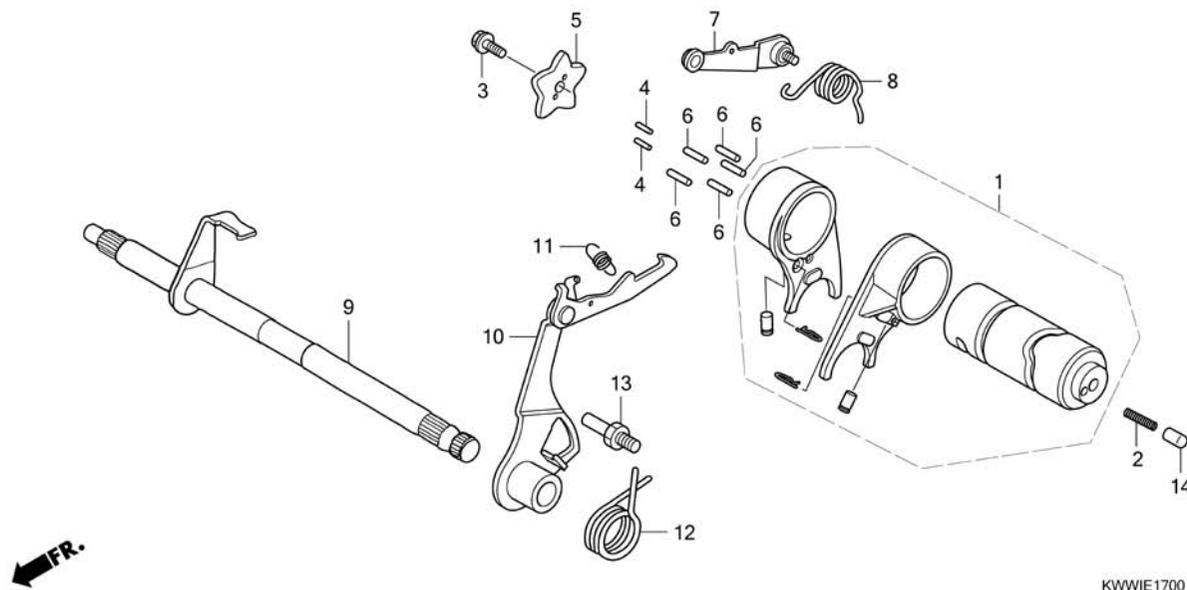

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2,3) FORK, GEARSHIFT .....	2.7	1	2430A-KWW-A40	DRUM ASSY, GEAR SHIFT	1	1	1	
.TERMASUK: Pelepasan dan pemasangan mesin		2	35752-KPH-901	SPRING, CHANGE SWITCH CONTACT	1	1	1	
		3	90071-171-010	BOLT, KNOCK, 6MM	1	1	1	
4 DRUM, GEARSHIFT .....	2.7	4	96220-30100	ROLLER, 3X10	2	2	2	
.TERMASUK: Pelepasan dan pemasangan mesin		5	24411-KWB-600	PLATE, GEARSHIFT DRUM STOPPER	1	1	1	
5 PLATE, GEARSHIFT DRUM STOPPER .....	1.0	6	24421-200-001	PIN, GEARSHIFT DRUM	5	5	5	
		7	24430-KWB-8A0	ARM COMP., SHIFT DRUM STOPPER	1	1	1	
7 (8) STOPPER OR SPRING, SHIFT DRUM .....	1.0	8	24435-GB4-721	SPRING, GEARSHIFT DRUM STOPPER	1	1	1	
9 SPINDLE, GEARSHIFT .....	1.1	9	24610-KWB-600	SPINDLE COMP., GEARSHIFT	1	1	1	
10 (12) ARM, GEARSHIFT .....	1.1	10	24630-KWB-600	ARM COMP., GEARSHIFT	1	1	1	
		11	24641-041-000	SPRING, GEARSHIFT ARM	1	1	1	
		12	24651-041-001	SPRING, GEARSHIFT RETURN	1	1	1	
		13	24652-KPH-900	PIN, SHIFT RETURN SPRING	1	1	1	
		14	35751-KPH-900	CAP, CHANGE SWITCH CONTACT	1	1	1	

## E - 18


### Kick Starter Spindle

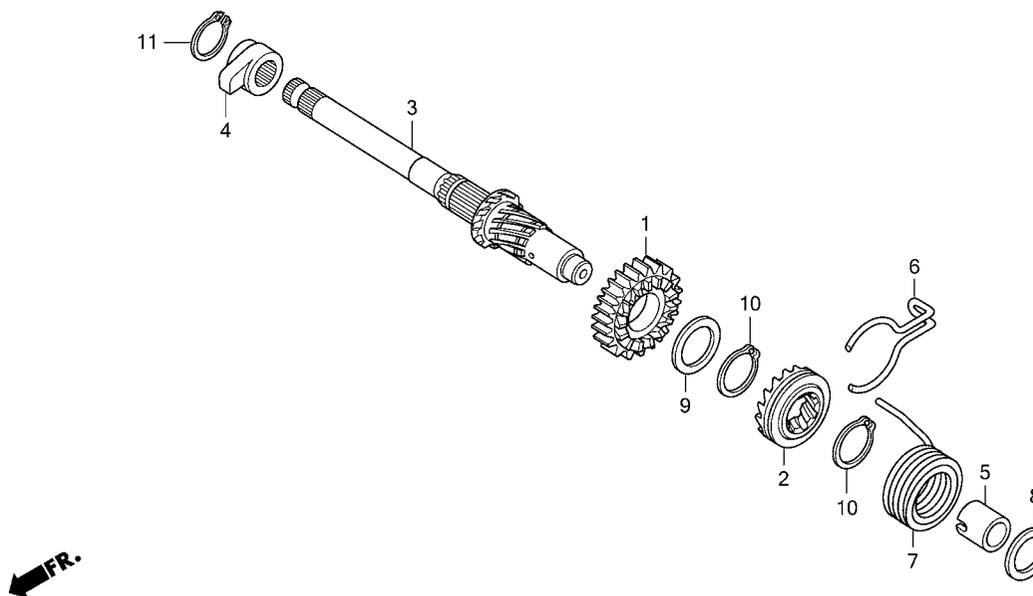

KWWIE1800


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2,6) PINION, KICK STARTER ..... .TERMASUK: Pelepasan dan pemasangan mesin	2.8	1	28211-KWB-600	PINION, KICK STARTER (23T)	1	1	1	
		2	28221-KWB-600	RATCHET, STARTER DRIVE	1	1	1	
3 SPINDLE, KICK STARTER..... .TERMASUK: Pelepasan dan pemasangan mesin	2.8	3	28251-KWB-600	SPINDLE, KICK STARTER	1	1	1	
		4	28262-KWB-600	RETAINER, KICK SPINDLE	1	1	1	
		5	28265-KWB-600	COLLAR, KICK SPRING	1	1	1	
7 SPRING, KICK STARTER RETURN... .TERMASUK: Pelepasan dan pemasangan mesin	2.8	6	28271-KWB-600	SPRING, FRICTION STARTER GEAR	1	1	1	
		7	28281-KWB-600	SPRING, KICK RETURN	1	1	1	
		8	90451-KGH-901	WASHER, SPECIAL, 14MM	1	1	1	
		9	90454-107-002	WASHER, THRUST, 20MM	1	1	1	
		10	90605-200-001	SET RING, 20MM	2	2	2	
		11	94510-16000	CIRCLIP, EXTERNAL, 16MM	1	1	1	

# E - 19 Carburetor

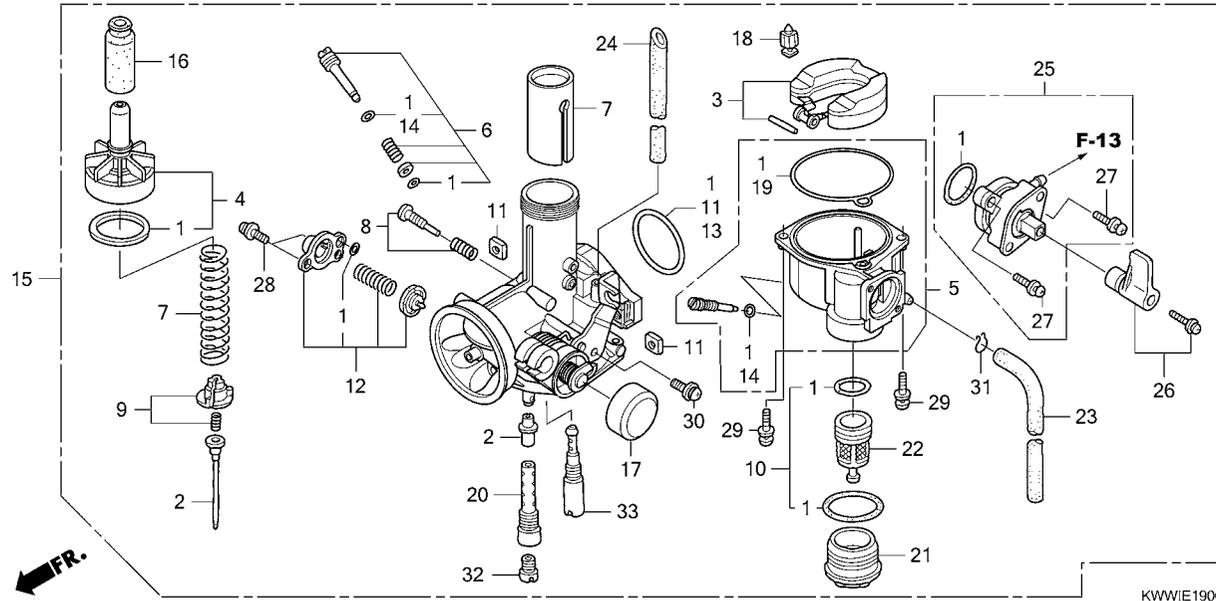

Service item	F. R. T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2 NEEDLE, JET .....	0.7	1	16010-KSS-901	GASKET SET	1	1	1	
3 (18) FLOAT OR FLOAT VALVE .....	0.6	2	16012-KWB-921	NEEDLE SET, JET	1	1	1	
4 TOP SET, CARBURETOR .....	0.2	3	16013-KPG-901	FLOAT SET	1	1	1	
5 CHAMBER, FLOAT .....	0.5	4	16014-KWB-921	TOP SET	1	1	1	
7 VALVE, THROTTLE .....	0.3	5	16015-KVV-901	CHAMBER SET, FLOAT	1	1	1	
12 VALVE, AIR CUT .....	0.1	6	16016-KPH-901	SCREW SET	1	1	1	
15 CARBURETOR ASSEMBLY .....	0.6	7	16022-KWB-921	VALVE SET, THROTTLE	1	1	1	
		8	16028-KTT-901	SCREW SET	1	1	1	
		9	16037-KPH-901	PLATE SET, VALVE	1	1	1	
25 COCK ASSY., FUEL .....	0.2	10	16040-KEV-900	GASKET SET	1	1	1	
32 (20,33) JET, MAIN .....	0.6	11	16041-GB5-D30	NUT SET, SQUARE	1	1	1	
		12	16048-KPH-901	VALVE SET, AIR CUT	1	1	1	
		13	16075-GHB-B40	O-RING, 2.4X25	1	1	1	
		14	16075-GHB-640	O-RING, 1.3X4.3	2	2	2	
		15	16100-KWW-010	CARBURETOR ASSY. (PB7UB A)	1	1	1	
		16	16148-KB1-921	CAP, CABLE SEALING	1	1	1	
		17	16148-141-881	CAP, CHOKE DUST	1	1	1	
		18	16155-KRS-861	VALVE COMP., FLOAT	1	1	1	
		19	16163-GFP-901	GASKET, FLOAT CHAMBER	1	1	1	
		20	16165-KWB-921	HOLDER, NEEDLE JET	1	1	1	


# E - 19 Carburetor

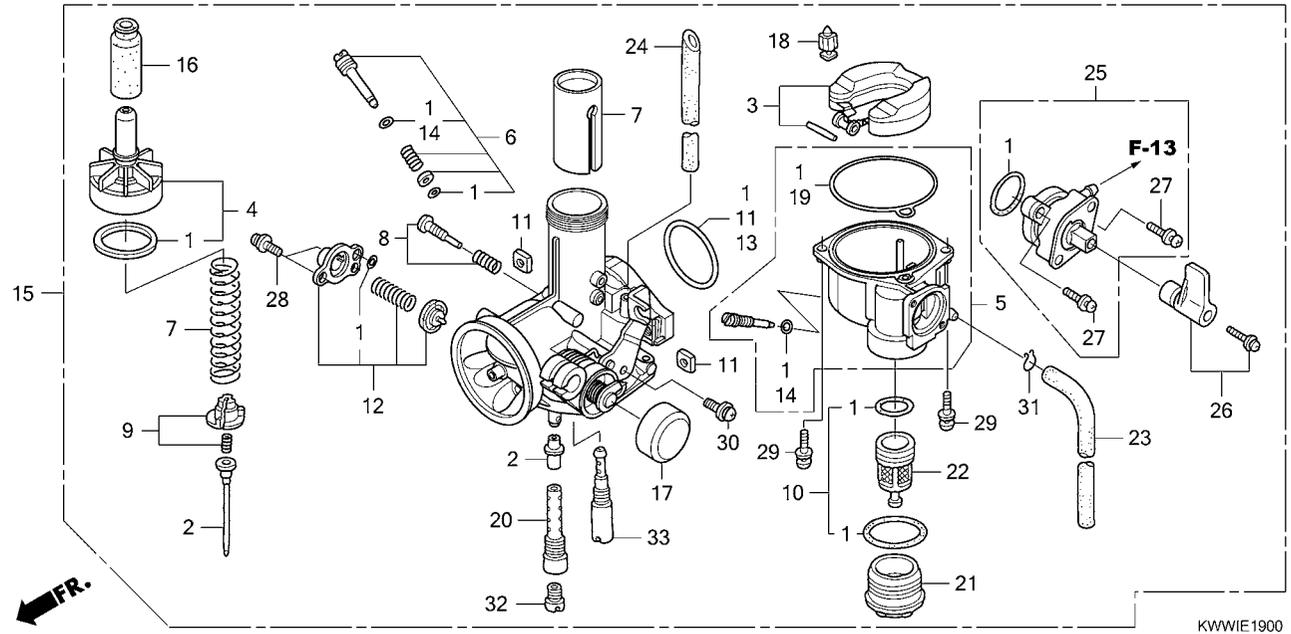

KWWIE1900

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		21	16175-GB0-911	CUP, FUEL STRAINER	1	1	1	
		22	16176-GB0-911	SCREEN, FUEL STRAINER	1	1	1	
		23	16198-GC7-004	TUBE, OVERFLOW	1	1	1	
		24	16199-KWW-A01	TUBE, AIR VENT	1	1	1	
		25	16951-KSS-901	BODY SET, COCK	1	1	1	
		26	16963-KSS-901	LEVER SET, COCK	1	1	1	
		27	93892-03012-18	SCREW-WASHER, 3X12	2	2	2	
		28	93892-04010-18	SCREW-WASHER, 4X10	2	2	2	
		29	93892-04014-08	SCREW-WASHER, 4X14	2	2	2	
		30	93892-05010-08	SCREW-WASHER, 5X10	1	1	1	
		31	95002-02659	CLIP, TUBE (B6.5)	1	1	1	
		32	99101-KSS-088	JET, MAIN, #88	1	1	1	
		33	99103-KPH-0350	JET, SLOW, #35	1	1	1	


# F - 1 Headlight

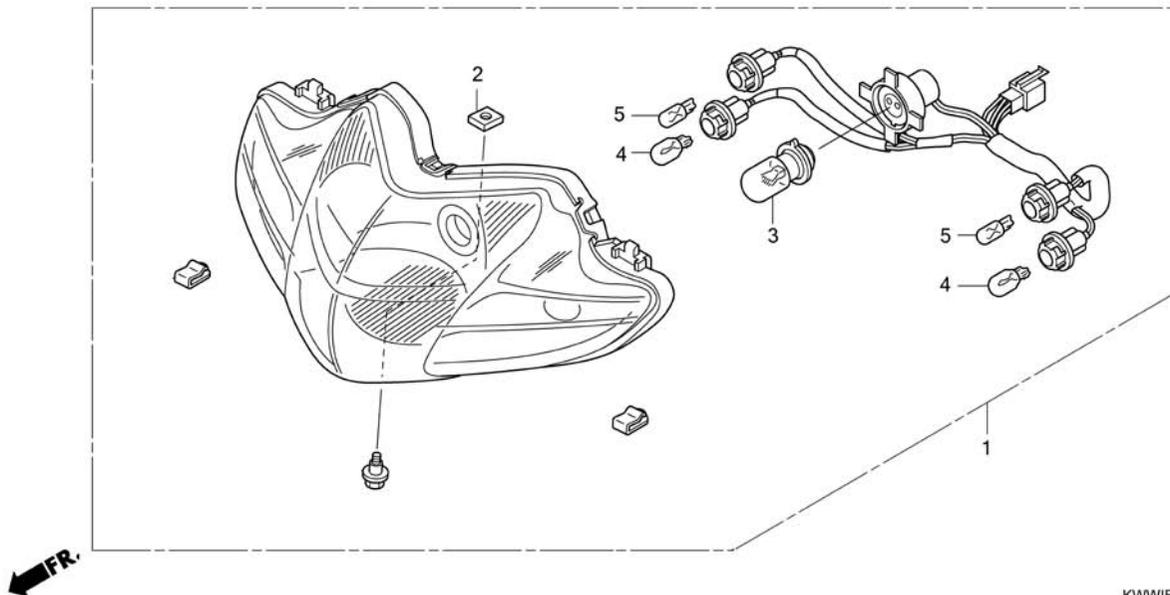

KWWIF0100

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SOCKET, HEADLIGHT.....	0.2	1	33100-KWW-A41	LIGHT ASSY, HEAD	1	1	1	
2 HEADLIGHT UNIT .....	0.3	2	33115-KBA-830	NUT, ADJUST	1	1	1	
4 BULB, HEADLIGHT .....	0.2	3	34901-KPH-881	BULB, HEADLIGHT	1	1	1	
5 BULB, WINKER :FRONT .....	0.2	4	34905-KAN-W01	BULB, WINKER (12V 10W)	2	2	2	
BULB, WINKER :FOR 1 VEHICLE .....	0.3							
5 BULB, WEDGE BASE (T10)		5	34908-GA7-701	BULB, WEDGE BASE (T10)	2	2	2	
6 BULB, POSITION LIGHT .....	0.2							

# F - 2 Meter

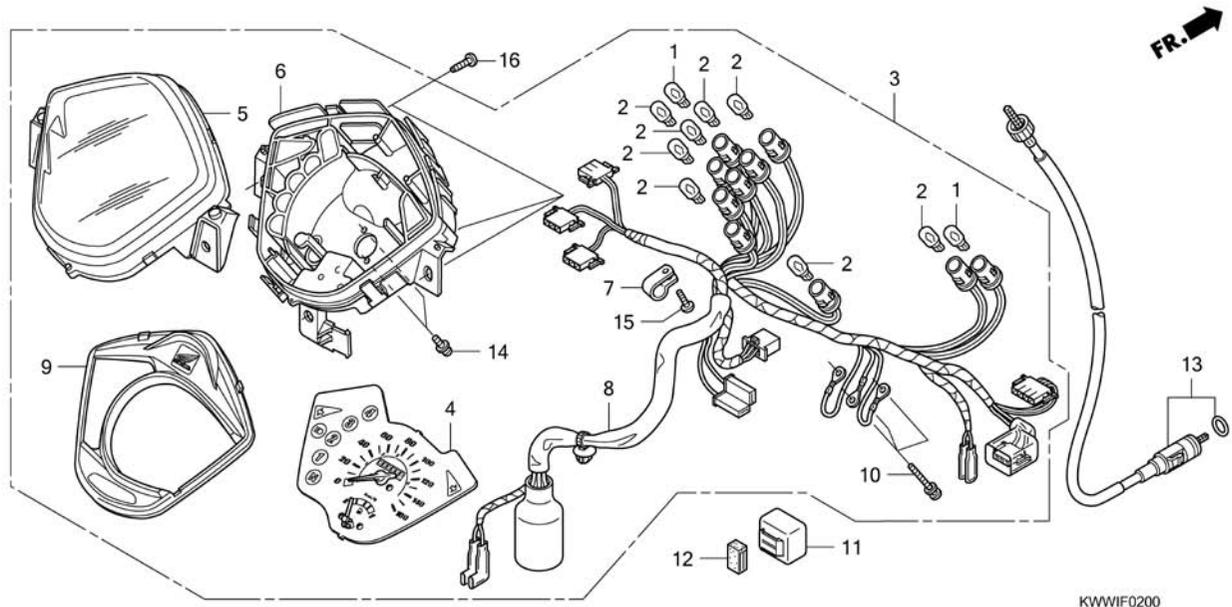


KWWIF0200

3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2) BULB, METER .....	0.3	1	34908-GA7-701	BULB, WEDGE BASE (T10) (12V 3.4W)	-	2	2	
3 METER ASSY., COMBINATION .....	0.8	3	34909-KVR-600	BULB, WEDGE BASE (T10) (12V 3.4W)	-	(2)	(2)	
4 METER, COMBINATION .....	1.0	2	34908-KVE-900	BULB, WEDGE BASE (T10) (12V 1.7W)	-	8	8	
			34908-MB9-871	BULB, WEDGE BASE (T10) (12V 1.7W)	-	(8)	(8)	
5 LENS, METER .....	0.8	3	37200-KWW-A01	SPEEDOMETER ASSY.	-	1	1	
6 CASE, METER .....	0.9	4	37210-KWW-A01	METER COMP., SPEED & FUEL	-	1	1	
8 SOCKET ASSY., METER BULB .....	0.8	5	37211-KWW-A01	GLASS	-	1	1	
11 RELAY, WINKER .....	0.4	6	37212-KWW-A01	CASE COMP., UNDER	-	1	1	
13 CABLE, SPEEDOMETER .....	0.4	7	37215-KS3-901	CLAMP	-	1	1	
		8	37224-KWW-A01	SOCKET COMP.	-	1	1	
		9	37230-KWW-A01	PLATE ASSY., REFLECTING	-	1	1	
		10	37305-KE5-008	SCREW-WASHER, 3X22	-	3	3	
		11	38301-GBG-911	RELAY COMP., WINKER	-	1	1	
		12	38306-KK4-000	SUSPENSION, WINKER RELAY	-	1	1	
		13	44830-KWW-A00	CABLE COMP., SPEEDOMETER	-	1	1	
		14	90035-166-008	SCREW-WASHER, SPECIAL, 4X10	-	2	2	
		15	90109-MZ5-008	SCREW, TAPPING, 4X14	-	1	1	
		16	93903-25310	SCREW, TAPPING, 5X16	-	3	3	


# F - 2 - 1 Meter

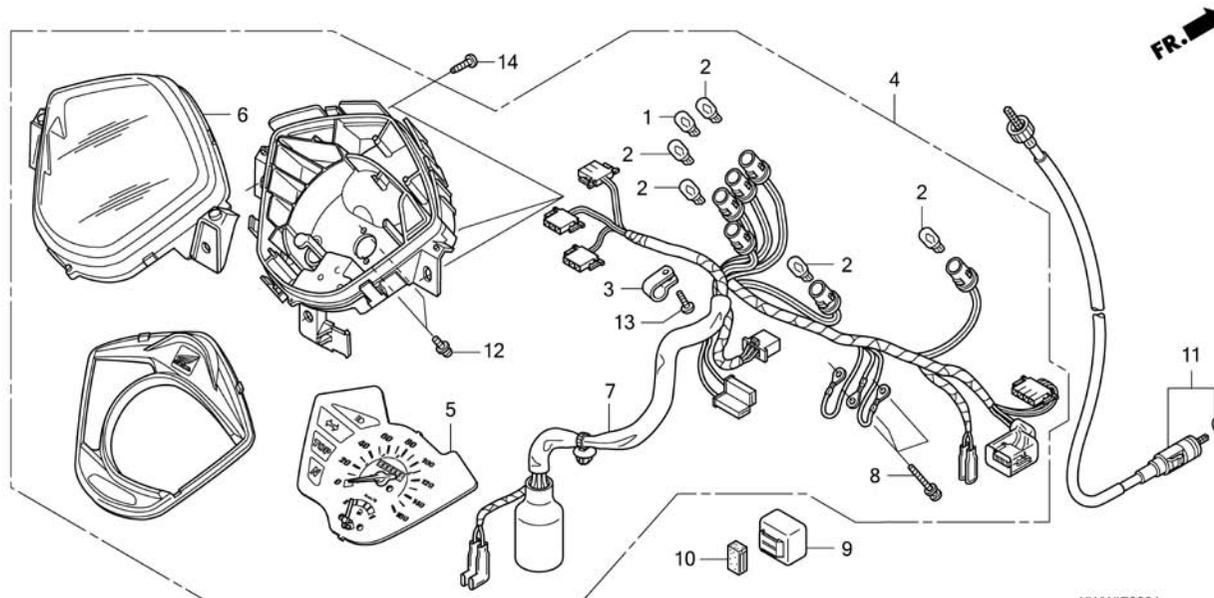

KWWIF0201


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2) BULB, METER .....	0.3	1	34908-GA7-701	BULB, WEDGE BASE (T10)	1	-	-	
3 METER ASSY., COMBINATION .....	0.8		34909-KVR-600	BULB, WEDGE BASE (T10)	(1)	-	-	
4 METER, COMBINATION .....	1.0	2	34908-KVE-900	BULB, WEDGE BASE (T10)	5	-	-	
			34908-MB9-871	BULB, WEDGE BASE (T10)	(5)	-	-	
5 LENS, METER .....	0.8	3	37121-MZ0-760	CLAMP	1	-	-	
6 CASE, METER .....	0.9	4	37200-KWW-A41	SPEEDOMETER ASSY.	1	-	-	
8 SOCKET ASSY., METER BULB .....	0.8	5	37210-KWW-A41	METER COMP., SPEED & FUEL	1	-	-	
11 RELAY, WINKER .....	0.4	6	37211-KWW-A01	GLASS	1	-	-	
13 CABLE, SPEEDOMETER .....	0.4	7	37224-KWW-A41	SOCKET COMP.	1	-	-	
		8	37305-KE5-008	SCREW-WASHER, 3X22	3	-	-	
		9	38301-GBG-911	RELAY COMP., WINKER	1	-	-	
		10	38306-KK4-000	SUSPENSION, WINKER RELAY	1	-	-	
		11	44830-KWW-A00	CABLE COMP., SPEEDOMETER	1	-	-	
		12	90035-166-008	SCREW-WASHER, SPECIAL, 4X10	2	-	-	
		13	90109-MZ5-008	SCREW, TAPPING, 4X14	1	-	-	
		14	93903-25310	SCREW, TAPPING, 5X16	3	-	-	

### F - 3 Switch / Cable

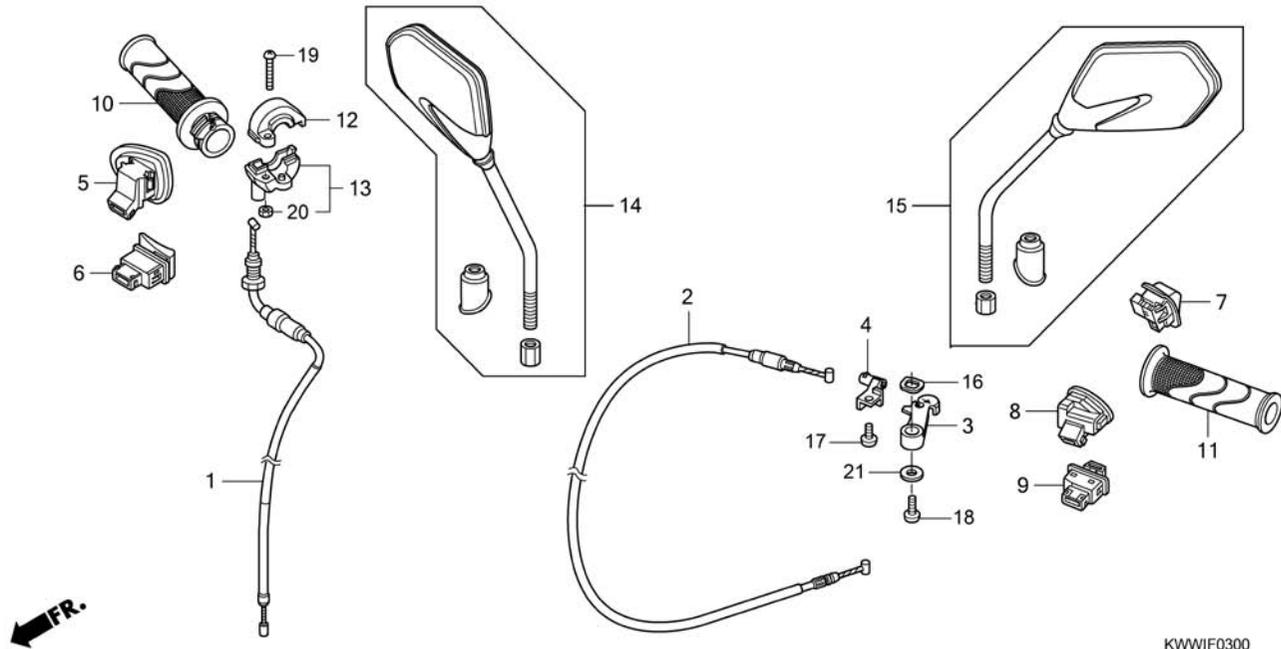

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 CABLE, THROTTLE .....	0.7	1	17910-KWW-A00	CABLE COMP., THROTTLE	1	1	1	
2 CABLE, CHOKE .....	0.5	2	17950-KWW-A00	CABLE COMP., CHOKE	1	1	1	
3 LEVER, CHOKE :HANDLE SIDE .....	0.1	3	17961-KFM-900	LEVER, CHOKE	1	1	1	
5 SWITCH, LIGHTING .....	0.4	4	17962-KTM-850	STOPPER, CABLE	1	1	1	
		5	35150-KWW-A01	SWITCH UNIT, LIGHTING	1	1	1	
6 SWITCH, STARTER .....	0.4	6	35160-KWW-A01	SWITCH UNIT, STARTER	1	1	1	
7 SWITCH, DIMMER .....	0.4	7	35170-KWW-A01	SWITCH UNIT, DIMMER	1	1	1	
8 SWITCH, HORN .....	0.4	8	35180-KWW-A01	SWITCH UNIT, HORN	1	1	1	
9 SWITCH, WINKER .....	0.4	9	35200-KWW-A01	SWITCH UNIT, WINKER	1	1	1	
10 GRIP, THROTTLE .....	0.4	10	53140-KWW-A40	GRIP COMP., THROTTLE	1	1	1	
11 GRIP, HANDLE :LEFT .....	0.1	11	53166-KWB-600	GRIP, L. HANDLE	1	1	1	
13 HOUSING, THROTTLE .....	0.4	12	53167-KFM-900	HOUSING, UPPER THROTTLE	1	1	1	
		13	53168-KFM-900	HOUSING, UNDER THROTTLE	1	1	1	
		14	88110-KWW-A40	MIRROR ASSY., R	1	1	1	
		15	88120-KWW-A40	MIRROR ASSY., L.	1	1	1	
		16	90442-147-000	WASHER, WAVE	1	1	1	
		17	93500-05010-0G	SCREW, PAN, 5X10	1	1	1	
		18	93500-05012-0G	SCREW, PAN, 5X12	1	1	1	
		19	93500-05025-0G	SCREW, PAN, 5X25	1	1	1	
		20	94001-05070-0S	NUT, HEX., 5MM	1	1	1	
		21	94103-0570	WASHER, PLAIN, 5MM	1	1	1	


# F - 4 Fr. Brake Master Cylinder

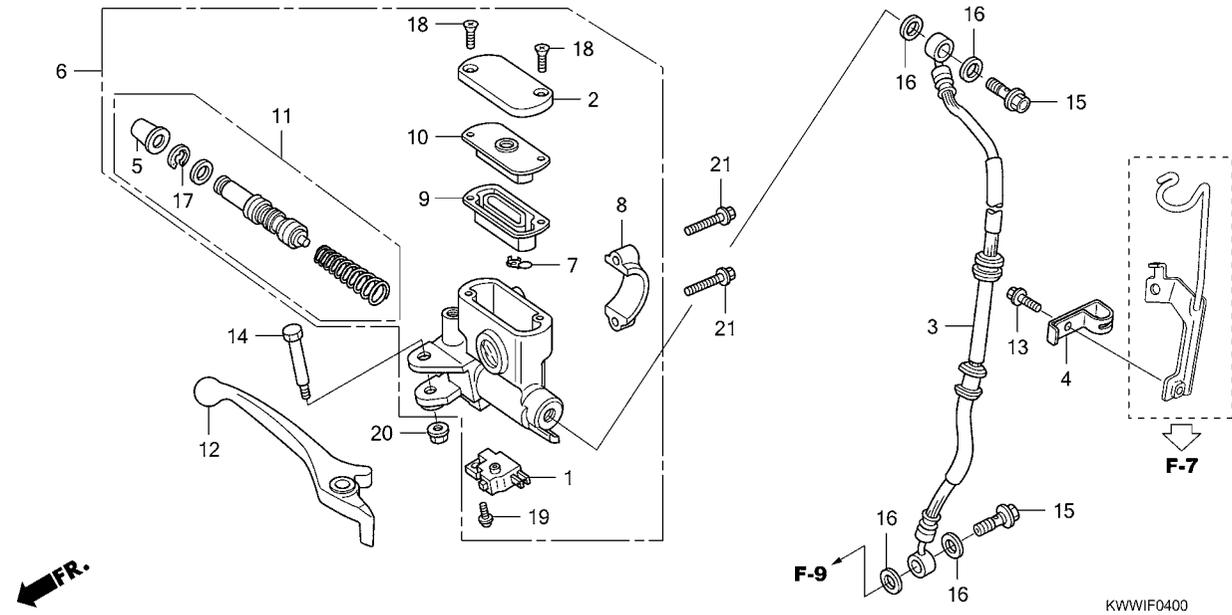

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SWITCH, FRONT STOP.....	0.2	1	35340-KWB-601	SWITCH ASSY., FR. STOP	1	1	1	
3 HOSE, FRONT BRAKE.....	0.6	2	43513-KBP-882	CAP, MASTER CYLINDER	1	1	1	
		3	45126-KWW-A40	HOSE COMP., FR. BRAKE	1	1	1	
		4	45157-KWW-A00	CLAMPER B, BRAKE HOSE	1	1	1	
6 CYLINDER, FRONT BRAKE MASTER	0.6	5	45504-410-004	BOOT COMP.	1	1	1	
		6	45510-KWB-600	CYLINDER SUB ASSY., FR. BRAKE	1	1	1	
9 DIAPHRAGM, FRONT BRAKE		7	45512-MA6-007	PROTECTOR	1	1	1	
MASTER CYLINDER .....	0.1	8	45517-GW0-751	HOLDER, MASTER CYLINDER	1	1	1	
11 PISTON SET, FRONT BRAKE		9	45520-GW0-912	DIAPHRAGM	1	1	1	
MASTER .....	0.6	10	45521-GW0-913	PLATE, DIAPHRAGM	1	1	1	
12 LEVER, HANDLE :RIGHT .....	0.3	11	45530-KVY-911	CYLINDER SET, MASTER	1	1	1	
		12	53175-KRS-T80	LEVER, R. STEERING HANDLE	1	1	1	
		13	90102-KGH-900	BOLT, FLANGE, 6X10	1	1	1	
		14	90114-KGH-901	BOLT, HANDLE LEVER PIVOT	1	1	1	
		15	90145-GAZ-981	BOLT, OIL, 10X22	2	2	2	
		16	90545-300-000	WASHER, OIL BOLT	4	4	4	
		17	90651-MA5-672	CIRCLIP	1	1	1	
		18	93600-04012-1G	SCREW, FLAT, 4X12	2	2	2	
		19	93893-04012-18	SCREW-WASHER, 4X12	1	1	1	
		20	94050-0600	NUT, FLANGE, 6MM	1	1	1	
		21	95701-06022-01	BOLT, FLANGE, 6X22	2	2	2	

# F - 5

## Handle Pipe / Handle Cover

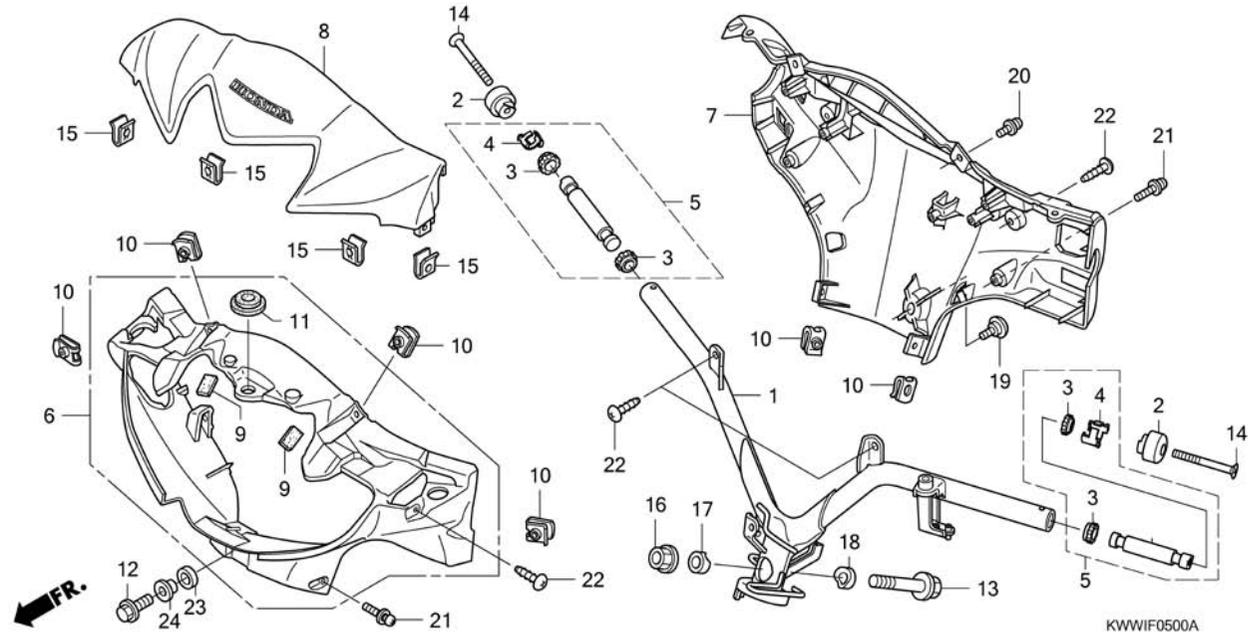


3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 PIPE, STEERING HANDLE .....	1.1	1	53100-KWW-A40	PIPE COMP., STEERING HANDLE	1	1	1	
5 WEIGHT B, HANDLE :LEFT .....	0.2	2	53105-KWB-600	WEIGHT A, STEERING HANDLE	2	2	2	
WEIGHT B, HANDLE :RIGHT .....	0.2	3	53106-KR3-000	RUBBER A, HANDLE WEIGHT	4	4	4	
WEIGHT B, HANDLE :BOTH .....	0.4	4	53108-KR3-770	RING, HANDLE WEIGHT SNAP	2	2	2	
		5	5312A-KWB-920	WEIGHT B, ASSY STEERING HANDLE	2	2	2	
6 COVER, HANDLE :FRONT .....	0.3	6	5312B-KWW-A00	COVER, FR. HANDLE SET	1	1	1	
7 COVER, HANDLE :REAR .....	0.5	7	5320C-KWW-A00	COVER, RR. HANDLE SET	1	1	1	
COVER, HANDLE :BOTH .....	0.5	8	53203-KWW-A00FMB	COVER, HANDLE TOP	1	1	1	
8 COVER, HANDLE :UPPER .....	0.1	9	64341-KWW-A00	RUBBER, CUSHION	2	2	2	
		10	64521-MN5-000	NUT, CLIP, 4MM	6	6	6	
		11	83601-MN5-000	GROMMET, SIDE COVER	1	1	1	
		12	96001-06016-00	BOLT, FLANGE, 6X16	1	1	1	
		13	90106-GN5-900	BOLT, FLANGE, 10X50	1	1	1	
		14	90191-KWB-600	SCREW, OVAL, 6X45	2	2	2	
		15	90302-KWW-A00	NUT, SPRING, 4MM	4	4	4	
		16	90304-KGH-901	NUT, U, 10MM	1	1	1	
		17	90501-KPH-880	COLLAR A, HANDLE SETTING	1	1	1	
		18	90505-KPH-880	COLLAR B, HANDLE SETTING	1	1	1	
		19	91509-GE2-760	SCREW, PAN, 5X11.5	1	1	1	
		20	93891-04012-07	SCREW-WASHER, 4X12	2	2	2	


# F - 5

## Handle Pipe / Handle Cover

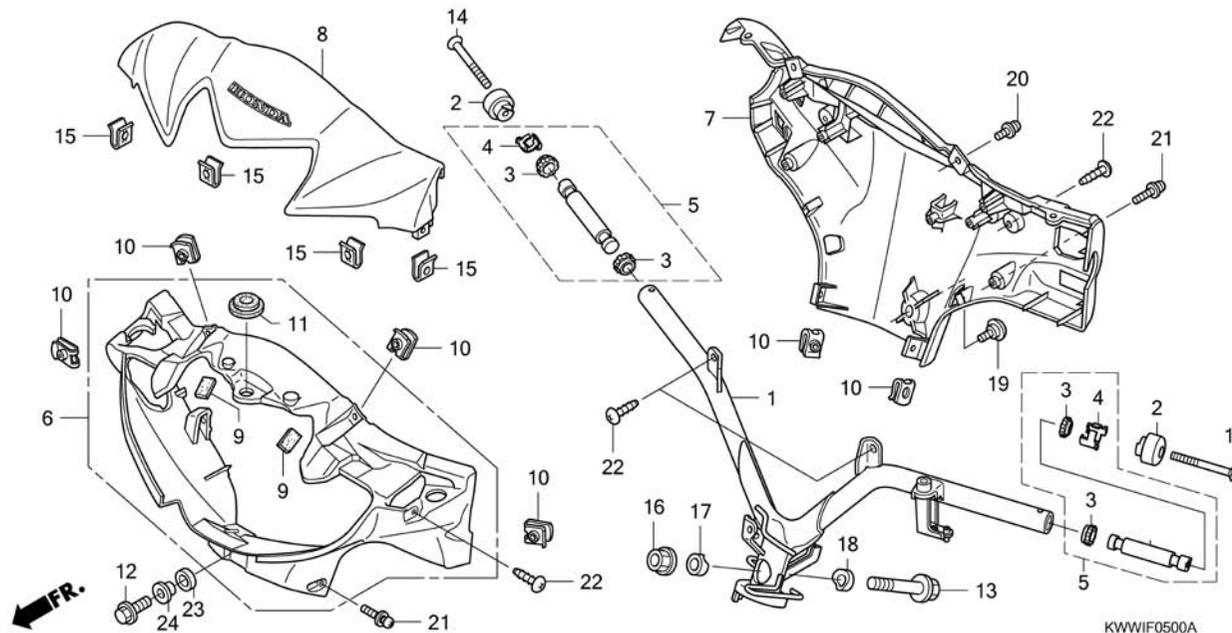

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		21	93891-04016-08	SCREW-WASHER, 4X16	4	4	4	
		22	93903-24481	SCREW, TAPPING, 4X16	6	6	6	
		23	90501-KWW-A00	RUBBER, HANDLE MOUNTING	1	1	1	
		24	90503-KBP-900	COLLAR, MAIN SIDE COVER	1	1	1	

# F - 6 Steering Stem

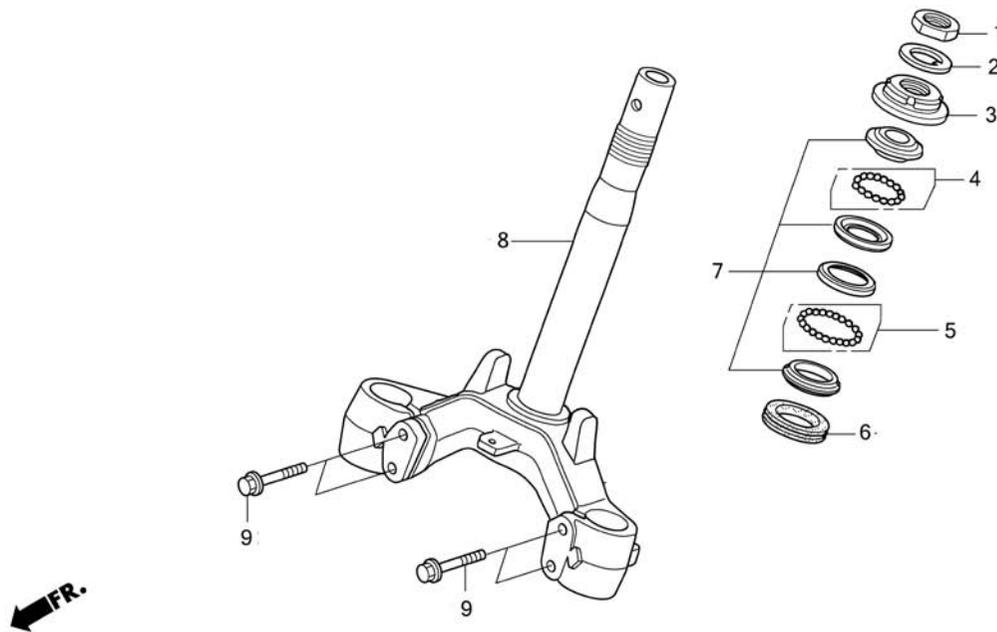


KWWIF0600

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
3 RACE, STEERING BALL :UPPER.....	1.4	1	50306-GN5-901	NUT, STEERING STEM LOCK	1	1	1	
4 RACE, STEERING BALL :LOWER.....	1.4	2	53216-GN5-830	WASHER, STEERING STEM NUT	1	1	1	
RACE, STEERING BALL :BOTH.....	1.4	3	53220-GN5-900	THREAD COMP., STEERING HEAD	1	1	1	
6 RACE, STEERING TOP CONE.....	0.8	4	06530-GBG-B20	BALL SET, STEEL, #6X23	1	1	1	
7 (9) RACE, STEERING BOTTOM CONE.	1.5	5	06531-GBG-B20	BALL SET, STEEL, #6X29	1	1	1	
10 STEM OR SHAFT ASSY., STEERING..	1.4	6	53214-GN5-900	DUST SEAL, STEERING HEAD	1	1	1	
11 THREAD, STEERING HEAD TOP.....	0.8	7	06535-GN5-505	RACE STEERING KIT	1	1	1	
		8	53200-KWW-A40	STEM COMP, STEERING	1	1	1	
		9	95801-10045-00	BOLT, FLANGE, 10X45	4	4	4	

# F - 7


## Front Fender

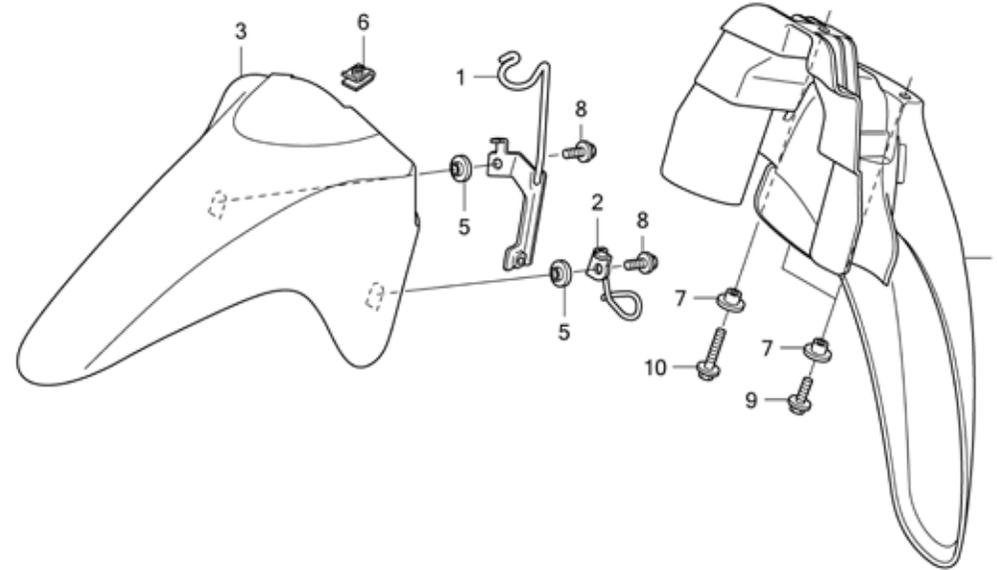

KWWIF0700A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
3 FENDER A, FRONT.....	0.3	1	45156-KWW-A40	CLAMPER, BRAKE HOSE	1	1	1	
4 FENDER B, FRONT .....	0.4	2	45465-KTL-740	GUIDE, FR. BRAKE CABLE	1	1	1	
		3	61100-KWW-A00FMB	FENDER A, FR.	1	1	1	
		4	61200-KWW-A00	FENDER B, FR.	1	1	1	
		5	81312-KPH-900	COLLAR, FR. FENDER	2	2	2	
		6	90305-KWW-A00	NUT, CLIP, 6MM	1	1	1	
		7	90503-KBP-900	COLLAR, MAIN SIDE COVER	3	3	3	
		8	96001-06012-01	BOLT, FLANGE, 6X12	2	2	2	
		9	96001-06014-00	BOLT, FLANGE, 6X14	2	2	2	
		10	96001-06025-00	BOLT, FLANGE, 6X25	1	1	1	

# F - 8 Front Fork


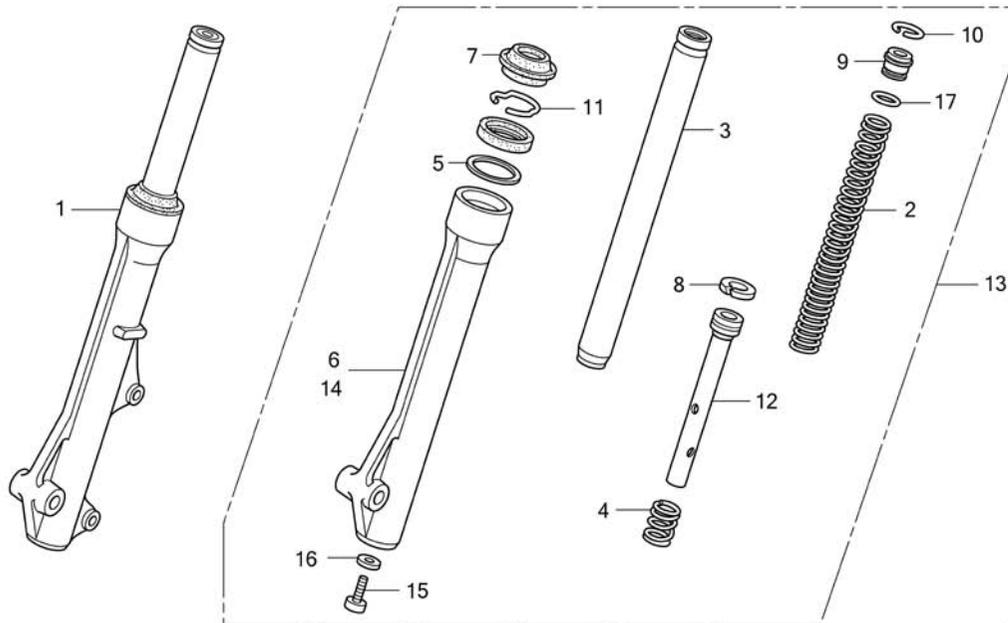


KWWIF0800

3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 FORK ASSY., FRONT :RIGHT .....	0.5	1	51400-KWW-A31	FORK ASSY., R. FR. (SILVER)	-	-	1	
FORK ASSY., FRONT :BOTH .....	0.7		51400-KWW-A01	FORK ASSY., R. FR. (BLACK)	1	1	-	
2 SPRING, FRONT FORK :LEFT .....	0.7	2	51401-KWW-A01	SPRING, FR. FORK	2	2	2	
SPRING, FRONT FORK :RIGHT .....	0.7	3	51410-KWB-921	PIPE COMP., FR. FORK	2	2	2	
SPRING, FRONT FORK :BOTH .....	1.0	4	51412-GN5-901	SPRING, REBOUND	2	2	2	
3 PIPE, FRONT FORK :LEFT .....	0.8	5	51412-KWB-601	RING, BACK UP	2	2	2	
PIPE, FRONT FORK :RIGHT .....	0.8							
PIPE, FRONT FORK :BOTH .....	1.3	6	51420-KWW-A31	CASE COMP., R. FR. BOTTOM (SILVER)	-	-	1	
			51420-KWW-A01	CASE COMP., R. FR. BOTTOM (BLACK)	1	1	-	
6 CASE, BOTTOM :RIGHT .....	0.9	7	51425-GN5-901	SEAL, DUST	2	2	2	
		8	51437-KWB-601	RING, PISTON	2	2	2	
13 SEAL SET, FRONT FORK :LEFT .....	0.9	9	51454-KEV-881	SEAT B, SPRING	2	2	2	
SEAL SET, FRONT FORK :RIGHT .....	0.9	10	51456-KPH-901	RING, STOPPER	2	2	2	
SEAL SET, FRONT FORK :BOTH .....	1.5							
14 FORK ASSY., FRONT :LEFT .....	0.5	11	51466-065-901	RING, OIL SEAL STOPPER	2	2	2	
FORK ASSY., FRONT :BOTH .....	0.7	12	51470-KWW-A01	PIPE, SEAT	2	2	2	
15 CASE, BOTTOM :LEFT .....	0.9	13	51500-KWW-A31	FORK ASSY., L. FR. (SILVER)	-	-	1	
CASE, BOTTOM :BOTH .....	1.5		51500-KWW-A01	FORK ASSY., L. FR. (BLACK)	1	1	-	
		14	51520-KWW-A31	CASE COMP., L. FR. BOTTOM (SILVER)	-	-	1	
			51520-KWW-A01	CASE COMP., L. FR. BOTTOM (BLACK)	1	1	-	
		15	90116-KV3-702	BOLT, SOCKET, 8MM	2	2	2	
		16	90544-283-000	WASHER, SPECIAL, 8MM	2	2	2	
		17	91356-GM0-003	O-RING	2	2	2	

# F - 9 Front Brake Caliper

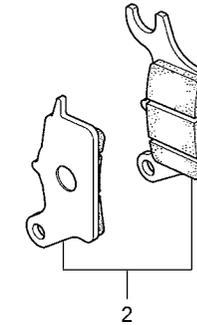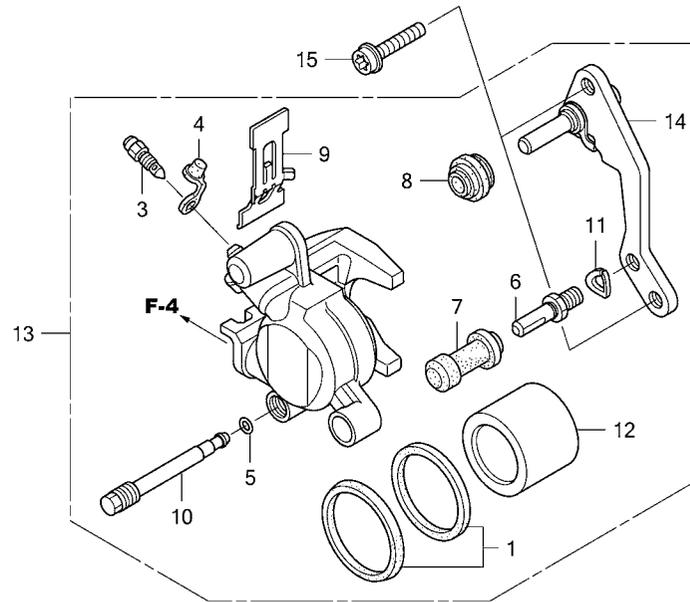


KWWIF0900 **FR.** →

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2 SHOE(PAD) SET, BRAKE :FRONT.....	0.1	1	06451-961-405	SEAL SET, PISTON	1	1	1	
12 (1) PISTON, FRONT BRAKE CALIPER	0.5	2	06455-KWB-601	PAD SET, FR.	1	1	1	
.TERMASUK: Uji coba pengereman		3	43352-568-004	SCREW, BLEEDER	1	1	1	
13 CALIPER, FRONT BRAKE .....	0.4	4	43353-461-772	CAP, BLEEDER	1	1	1	
.TERMASUK: Uji coba pengereman		5	45111-MAJ-G42	RING, STOPPER	1	1	1	
14 BRACKET, FRONT CALIPER .....	0.2	6	45131-GZ0-007	BOLT, PIN	1	1	1	
		7	45132-166-017	BOOT, PIN BUSH	1	1	1	
		8	45133-MA3-007	BOOT B	1	1	1	
		9	45208-KWB-601	SPRING, PAD	1	1	1	
		10	45215-KPH-951	PIN, HANGER	1	1	1	
		11	45216-166-007	WASHER, WAVE	1	1	1	
		12	45218-KWB-601	PISTON	1	1	1	
		13	45250-KWB-921	CALIPER SUB ASSY., R. FR.	1	1	1	
		14	45290-KWB-601	BRACKET SUB ASSY., FR.	1	1	1	
		15	90131-KPH-881	BOLT, TORX, 8X25	2	2	2	

# F - 10


## Front Wheel (Spoke Wheel)

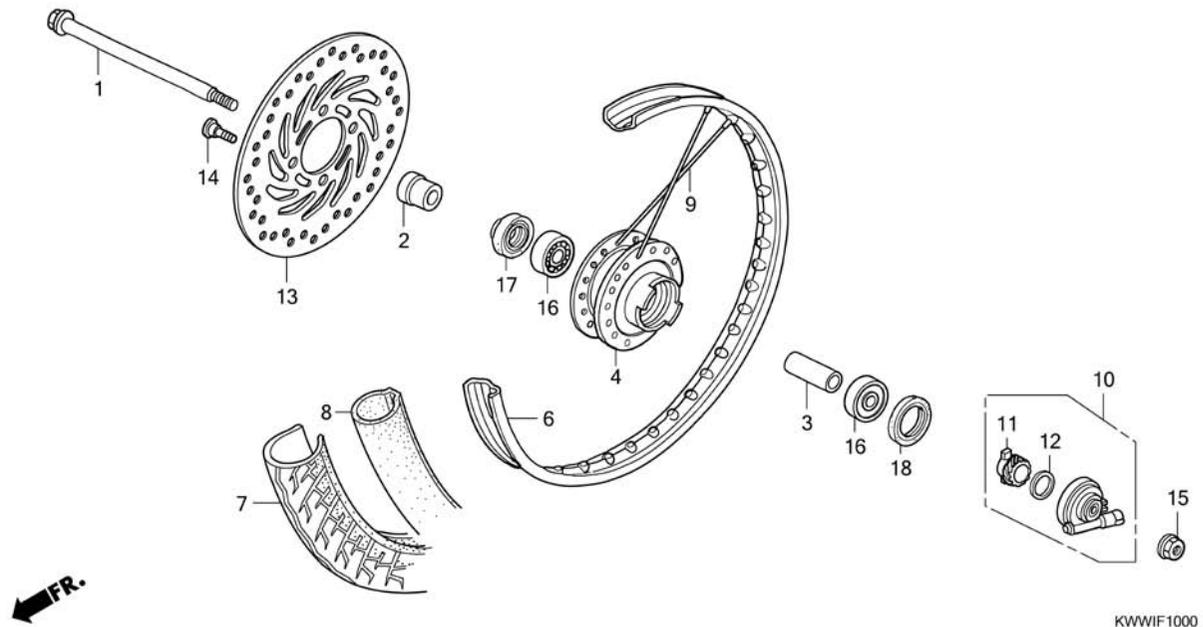

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 AXLE, FRONT WHEEL .....	0.2	1	44301-KWB-600	AXLE, FR. WHEEL	1	-	-	
4 HUB, FRONT WHEEL .....	2.3	2	44311-KWB-920	COLLAR, FR. WHEEL SIDE	1	-	-	
5 FRONT WHEEL .....	0.8	3	44620-KPH-950	COLLAR, FR. AXLE DISTANCE	1	-	-	
6 RIM, WHEEL :FRONT .....	2.2	4	44601-KWB-600	HUB., FR. WHEEL				
7 FRONT TIRE(ONE) .....	0.7			*NH255M* ..... SHIMMER SILVER METALLIC	1	-	-	
8 TUBE, FRONT TIRE(ONE) .....	0.7	6	42701-030-008	RIM, FR. WHEEL	1	-	-	
10 GEARBOX ASSY., SPEEDOMETER ..	0.2	7	44711-KWW-010	TIRE, FR. (70/90-17 M/C 38P)	1	-	-	
		8	22517-250-170	TUBE, TIRE (70/90-17 M/C)	1	-	-	
13 DISC, FRONT BRAKE .....	0.3	9	1111-183	SPOKE SET, 11X183.5	36	-	-	
16 -3 BEARING, FRONT WHEEL(ONE) ..	0.4	10	44800-KWB-600	BOX ASSY., SPEEDOMETER GEAR	1	-	-	
		11	44806-KWB-600	GEAR, SPEEDOMETER (19T)	1	-	-	
		12	44809-KFM-900	WASHER, SPEEDOMETER GEAR	1	-	-	
		13	45251-KWB-921	DISK, FR. BRAKE	1	-	-	
		14	90105-KGH-901	BOLT, BRAKE DISK, 8X24	4	-	-	
		15	90306-KGH-901	NUT, U, 12MM	1	-	-	
		16	HB6201RS	BEARING, RADIAL BALL, 6201U	2	-	-	
		17	91251-KPH-901	DUST SEAL, 21X37X7	1	-	-	
		18	91251-KWB-601	DUST SEAL, 42X54X7	1	-	-	

# F - 10 - 1


## Front Wheel (Casting Wheel)

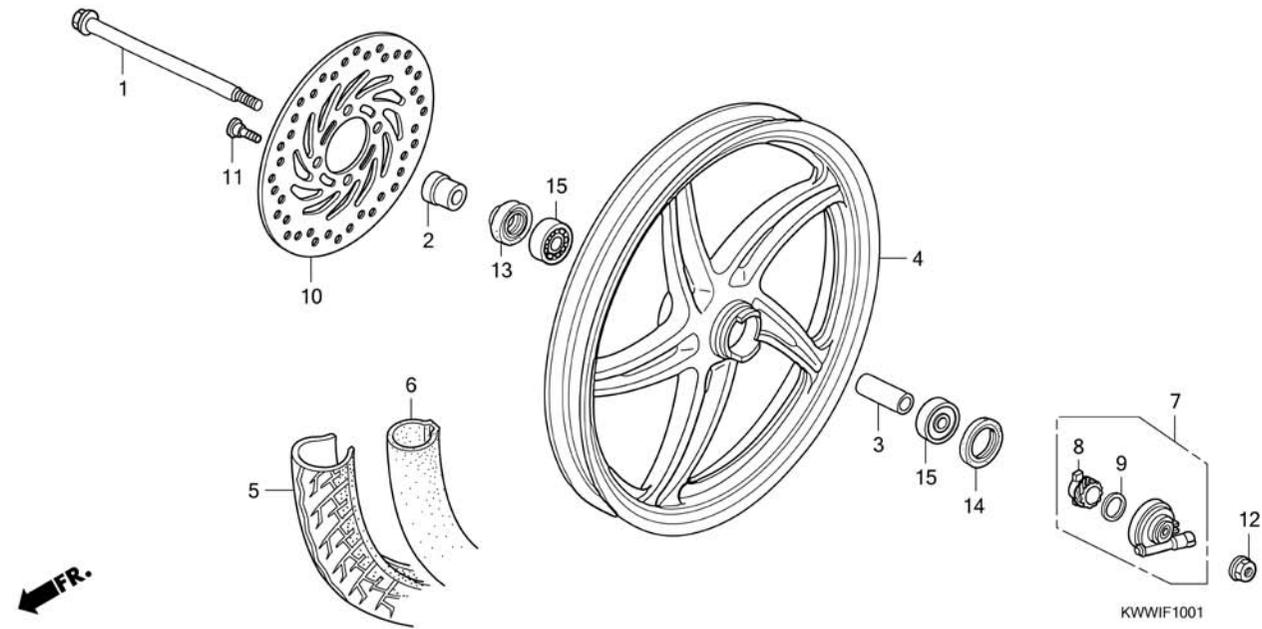

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 AXLE, FRONT WHEEL .....	0.2	1	44301-KWB-600	AXLE, FR. WHEEL	-	1	1	
4 FRONT WHEEL .....	0.8	2	44311-KWB-920	COLLAR, FR. WHEEL SIDE	-	1	1	
5 FRONT TIRE(ONE) .....	0.7	3	44620-KPH-951	COLLAR, FR. AXLE DISTANCE	-	1	1	
6 TUBE, FRONT TIRE(ONE) .....	0.7	4	44601-KWW-A1Z	WHEEL FR. *NH303M* ..... BLACK	-	1	1	
7 GEARBOX ASSY., SPEEDOMETER..	0.2	5	44711-KWW-A01	TIRE, FR. (70/90-17 M/C 38P)	-	1	1	
10 DISC, FRONT BRAKE .....	0.3	6	22517-250-170	TUBE, TIRE (70/90-17 M/C)	-	1	1	
13 (3) BEARING, FRONT WHEEL(ONE)	0.4	7	44800-KWB-600	BOX ASSY., SPEEDOMETER GEAR	-	1	1	
		8	44806-KWB-600	GEAR, SPEEDOMETER (19T)	-	1	1	
		9	44809-KFM-900	WASHER, SPEEDOMETER GEAR	-	1	1	
		10	45251-KWB-921	DISK, FR. BRAKE	-	1	1	
		11	90105-KGH-901	BOLT, BRAKE DISK, 8X24	-	4	4	
		12	90306-KGH-901	NUT, U, 12MM	-	1	1	
		13	91251-KPH-901	DUST SEAL, 21X37X7	-	1	1	
		14	91251-KWB-601	DUST SEAL, 42X54X7	-	1	1	
		15	HB62012RS	BEARING, RADIAL BALL, 6201UU	-	2	2	

# F - 11


## Rear Brake Panel

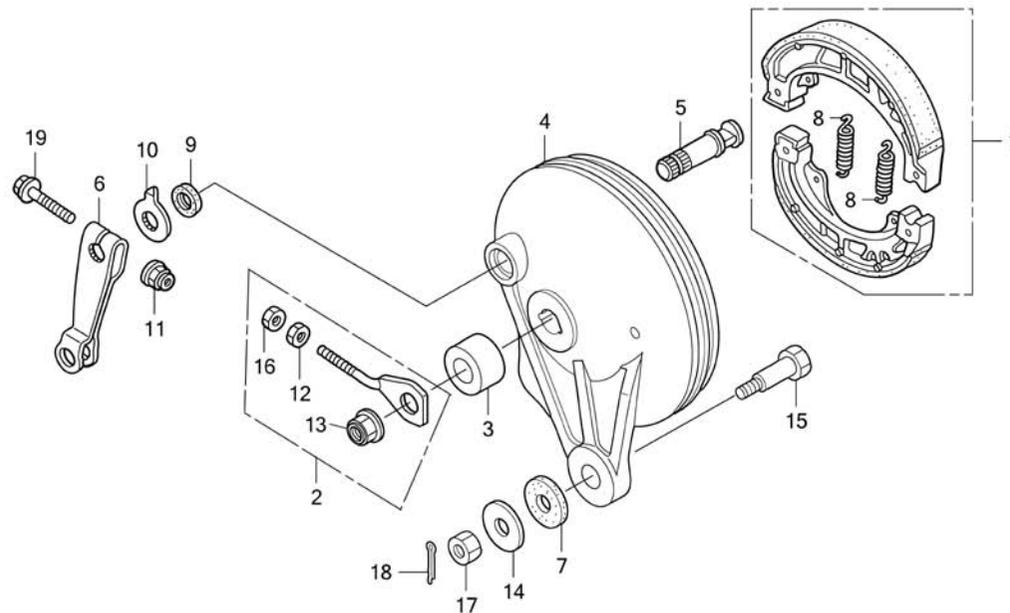

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 SHOE(PAD) SET, BRAKE :REAR .....	0.4	1	43125-KPH-903	SHOE SET, BRAKE	1	1	1	
4 (5) PANEL, REAR BRAKE .....	0.5	2	4054A-KWW-A00	ADJUSTER, R. CHAIN ASSY	1	1	1	
6 ARM, BRAKE :REAR .....	0.1	3	42313-GBG-B20	COLLAR, RR. BRAKE PANEL SIDE	1	1	1	
		4	43100-KPH-700	PANEL COMP., RR. BRAKE				
				*NH255M* ..... SHIMMER SILVER METALLIC	1	-	-	
			43100-KPH-700ZC	*NH303M* ..... BLACK	-	1	1	
		5	43141-KTM-850	CAM, RR. BRAKE	1	1	1	
		6	43410-KWB-600	ARM, RR. BRAKE	1	1	1	
		7	43434-ME1-670	RUBBER, STOPPER ARM	1	1	1	
		8	45133-028-000	SPRING, BRAKE SHOE	2	2	2	
		9	45134-250-001	DUST SEAL, BRAKE CAM	1	1	1	
		10	45145-KFM-900	INDICATOR, FR. BRAKE	1	1	1	
		11	90301-KGH-901	NUT, U, 6MM	1	1	1	
		12	90302-KBP-900	NUT, SPECIAL, 6MM	1	1	1	
		13	90306-KGH-901	NUT, U, 12MM	1	1	1	
		14	90505-425-000	WASHER, 8MM	1	1	1	
		15	92811-10000	BOLT A, BRAKE STOPPER	1	1	1	
		16	94001-06000-0S	NUT, HEX., 6MM	1	1	1	
		17	94001-08000-0S	NUT, HEX., 8MM	1	1	1	
		18	94201-20150	PIN, SPLIT, 2.0X15	1	1	1	
		19	95701-06035-00	BOLT, FLANGE, 6X35	1	1	1	

# F - 12


## Rear Wheel (Spoke Wheel)

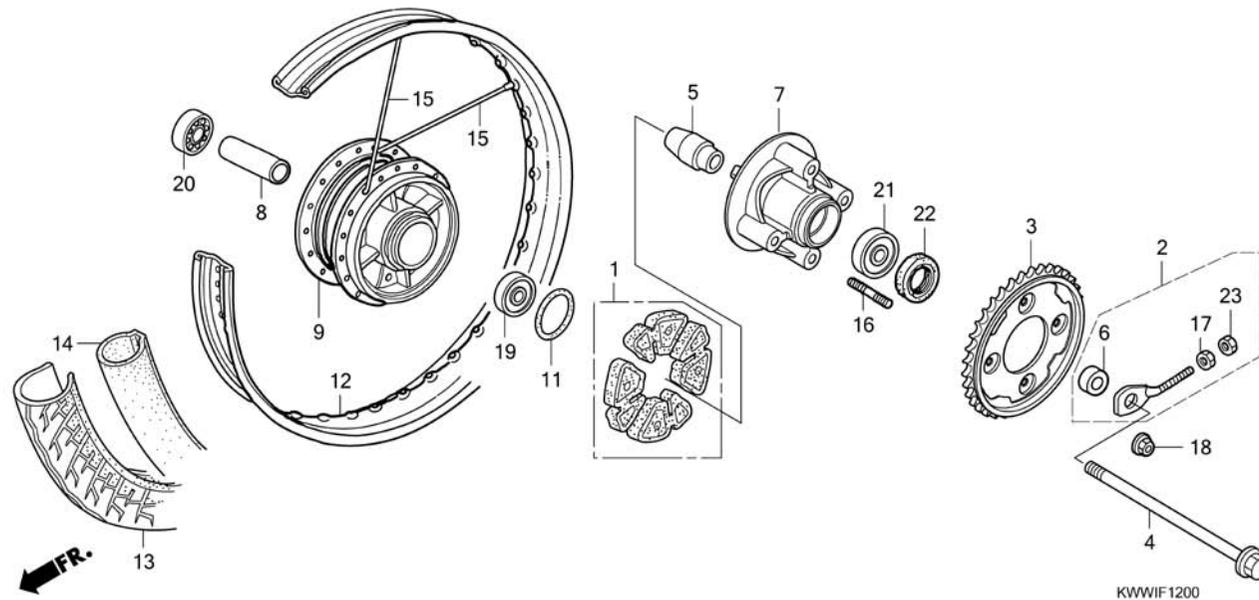

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 DAMPER, REAR WHEEL.....	0.3	1	41241-KWB-601	DAMPER SET, WHEEL	1	-	-	
3 SPROCKET, FINAL DRIVEN.....	0.4	2	4054A-KWW-A00	ADJUSTER, R. CHAIN ASSY	1	-	-	
4 AXLE, REAR WHEEL .....	0.3	3	41200-KWB-930	SPROCKET COMP., FINAL DRIVEN	1	-	-	
7 FLANGE ASSY., FINAL DRIVEN .....	0.4	4	42301-KWB-600	AXLE, RR. WHEEL	1	-	-	
9 HUB, REAR WHEEL .....	2.4	5	42303-KWW-B60	SLEEVE, RR. WHEEL	1	-	-	
10 REAR WHEEL .....	0.8	6	42304-KFM-900	COLLAR, RR. WHEEL SIDE	1	-	-	
12 RIM, WHEEL :REAR .....	2.3	7	42611-KWB-600	FLANGE., FINAL DRIVEN	1	-	-	
13 REAR TIRE(ONE) .....	0.8	8	42620-KFL-851	COLLAR, RR. AXLE DISTANCE	1	-	-	
14 TUBE, REAR TIRE(ONE) .....	0.8	9	42601-KPH-900	HUB., RR. SHIMMER SILVER METALLIC	1	-	-	
19 (8,20)BEARING, REAR WHEEL(ONE)	0.5	11	42653-001-004	O-RING, 40.5X3	1	-	-	
21 BEARING, FINAL DRIVEN FLANGE...	0.5	12	42701-383-703	RIM, RR. WHEEL (1.60X17)	1	-	-	
		13	42711-KWB-922	TIRE, RR.	1	-	-	
			42711-KWW-010	TIRE, RR.	1	-	-	
		14	27517-000-000	TUBE, TIRE	1	-	-	
		15	1110-159NS	SPOKE SET	36	-	-	
		16	90128-KWB-600	BOLT, STUD, 8X18	4	-	-	
		17	90302-KBP-900	NUT, SPECIAL, 6MM	1	-	-	
		18	90309-KPH-971	NUT, U, 8MM	4	-	-	
		19	HB6201RS	BEARING, RADIAL BALL, 6201U	1	-	-	
		20	HB6301RS	BEARING, RADIAL BALL, 6301U	1	-	-	
		21	HB6203RS	BEARING, RADIAL BALL, 6203U	1	-	-	
		22	91251-KPH-881	DUST SEAL, 27X40X4.5	1	-	-	
		23	94001-06000-0S	NUT, HEX., 6MM	1	-	-	


# F - 12 - 1

## Rear Wheel (Casting Wheel)

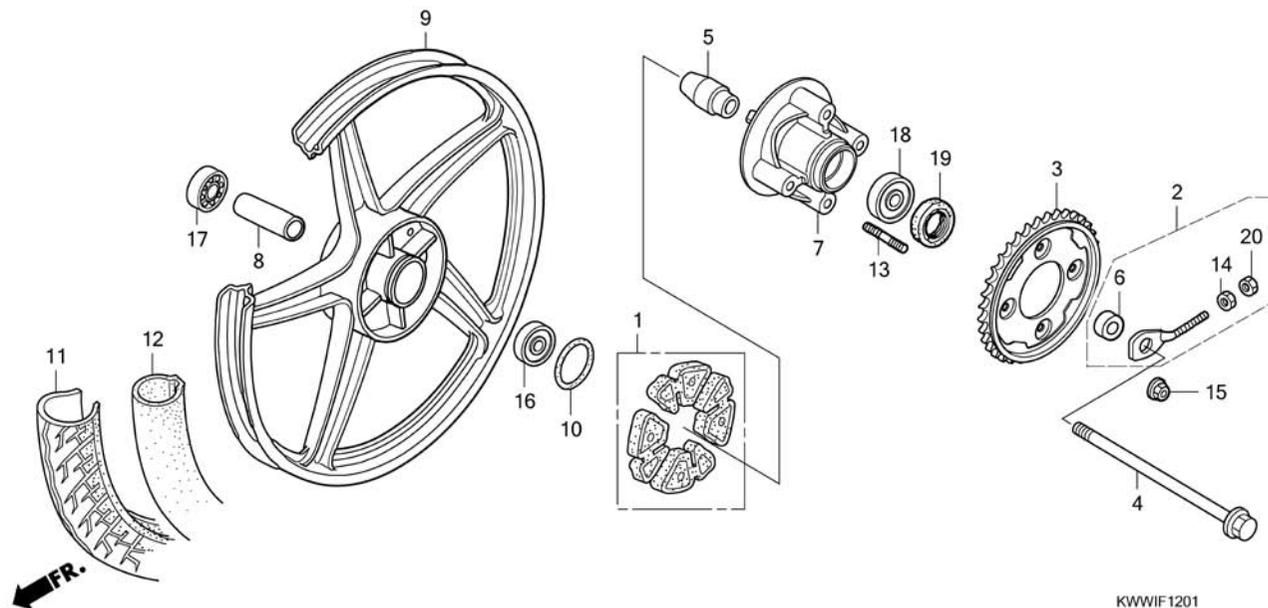

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 DAMPER, REAR WHEEL.....	0.3	1	41241-KWB-601	DAMPER SET, WHEEL	-	1	1	
3 SPROCKET, FINAL DRIVEN.....	0.4	2	4054A-KWW-A00	ADJUSTER, R. CHAIN ASSY	-	1	1	
4 AXLE, REAR WHEEL .....	0.3	3	41200-KWB-930	SPROCKET COMP., FINAL DRIVEN	-	1	1	
7 FLANGE ASSY., FINAL DRIVEN .....	0.4	4	42301-KWB-600	AXLE, RR. WHEEL	-	1	1	
9 REAR WHEEL .....	0.8	5	42303-KWW-B60	SLEEVE, RR. WHEEL	-	1	1	
11 REAR TIRE(ONE) .....	0.8	6	42304-KFM-900	COLLAR, RR. WHEEL SIDE	-	1	1	
12 TUBE, REAR TIRE(ONE) .....	0.8	7	42611-KWB-600	FLANGE., FINAL DRIVEN	-	1	1	
16 (17) BEARING, REAR WHEEL(ONE).	0.5	8	42620-KFL-851	COLLAR, RR. AXLE DISTANCE	-	1	1	
.Replace 1 bearing add	0.1	9	42601-KWW-A1Z	WHEEL RR. *NH303M* .....	-	1	1	BLACK
18 BEARING, FINAL DRIVEN FLANGE..	0.5	10	42653-001-004	O-RING, 40.5X3	-	1	1	
		11	42711-KWB-922	TIRE, RR.	-	1	1	
			42711-KWW-010	TIRE, RR.	-	1	1	
		12	27517-000-000	TUBE, TIRE	-	1	1	
		13	90128-KWB-600	BOLT, STUD, 8X18	-	4	4	
		14	90302-KBP-900	NUT, SPECIAL, 6MM	-	1	1	
		15	90309-KPH-971	NUT, U, 8MM	-	4	4	
		16	HB6201RS	BEARING, RADIAL BALL, 6201U	-	1	1	
		17	HB6301RS	BEARING, RADIAL BALL, 6301U	-	1	1	
		18	HB6203RS	BEARING, RADIAL BALL, 6203U	-	1	1	
		19	91251-KPH-881	DUST SEAL, 27X40X4.5	-	1	1	
		20	94001-06000-0S	NUT, HEX., 6MM	-	1	1	

# F - 13 Fuel Tank

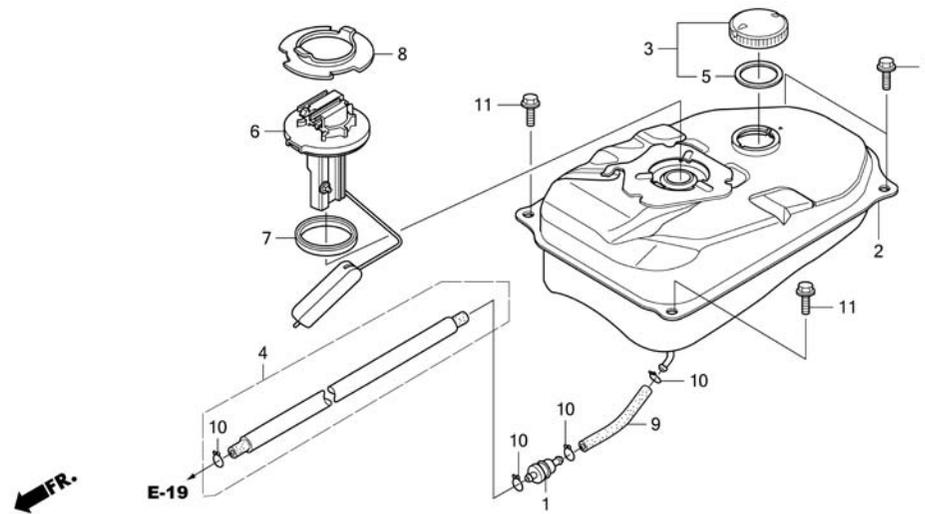


KWWWIF1300

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1	03	1	16910-KFM-902	STRAINER COMP., FUEL	1	1	1	
2	1	2	17510-KWB-920	TANK COMP., FUEL	1	1	1	
4	0.3	3	17620-KGH-600	CAP, FUEL FILLER	1	1	1	
6	0.2	4	1763A-KWW-A00	TUBE FUEL ASSY, 5.3X580	1	1	1	
		5	17631-KEV-900	PACKING, FUEL FILLER CAP	1	1	1	
		6	37800-KWB-921	FUEL UNIT	1	1	1	
		7	37801-GA7-700	PACKING, BASE	1	1	1	
		8	37802-KTL-740	RETAINER, FUEL UNIT	1	1	1	
		9	95001-55045-40	TUBE, FUEL, 5.3X45	1	1	1	
		10	95002-02100	CLIP, TUBE (B10)	4	4	4	
		11	95701-06012-00	BOLT, FLANGE, 6X12	4	4	4	

# F - 14


## Seat / Battery

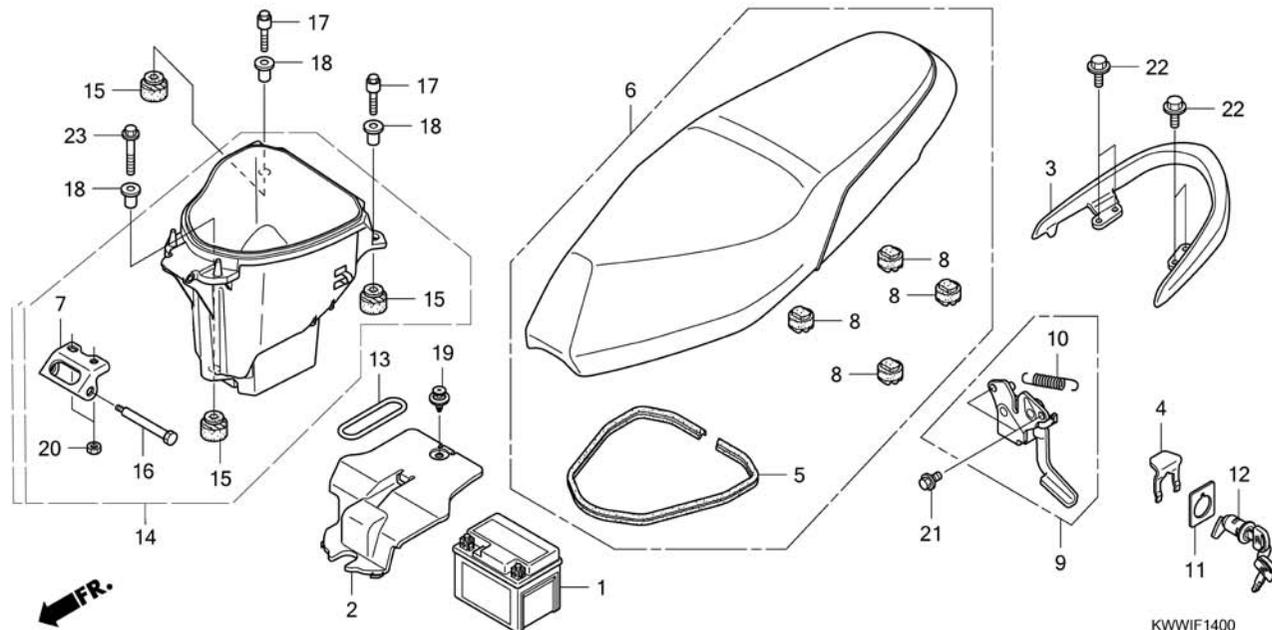

3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 BATTERY .....	0.2	1	31500-KWW-A01	BATTERY (GTZ4V)	1	1	1	
3 RAIL, GRAB :REAR .....	0.1	2	50381-KWB-920	COVER, BATTERY	1	1	1	
6 SEAT :DOUBLE .....	0.1	3	50400-KWW-620	RAIL, RR. GRAB	1	1	1	
7 HINGE, SEAT .....	0.1	4	75581-GN8-920	SPRING, LOCK KEY SETTING	1	1	1	
9 CATCH, SEAT :REAR SIDE .....	0.4	5	77115-KWB-600	RUBBER, SEAL	1	1	1	
		6	77200-KWW-A40	SEAT ASSY., DOUBLE	1	1	1	
		7	77201-KWB-600	HINGE, SEAT	1	1	1	
12 KEY, SEAT LOCK .....	0.2	8	77214-KWW-A40	RUBBER B, SEAT SETTING	4	4	4	
13 BOX, LUGGAGE .....	0.4	9	77230-KWW-A00	CATCH COMP., SEAT	1	1	1	
		10	77234-GN2-000	SPRING, SEAT LOCK	1	1	1	
		11	77236-GW0-000	WASHER, SEAT LOCK	1	1	1	
		12	77240-KTM-851	LOCK ASSY., SEAT	-	1	1	
			77240-KTM-691	LOCK ASSY., SEAT	1	-	-	
		13	80124-KPH-700	BAND (ECU)	1	1	1	
		14	8125A-KWW-A00	BOX LUGGAGE ASSY	1	1	1	
		15	81253-KPH-900	RUBBER, LUGGAGE BOX MOUNTING	3	3	3	
		16	90105-KPH-900	BOLT, SEAT HINGE	1	1	1	
		17	90129-KWB-600	BOLT, SPECIAL, 6X30	2	2	2	
		18	90502-KPH-900	COLLAR, 6.2X20	3	3	3	
		19	90634-KPG-900	CLIP, BATTERY COVER	1	1	1	
		20	94001-06070-0S	NUT, HEX., 6MM	2	2	2	
		21	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	
		22	95701-08014-07	BOLT, FLANGE, 8X14	4	4	4	
		23	96001-06030-00	BOLT, FLANGE, 6X30	1	1	1	

# F - 15 Body Cover

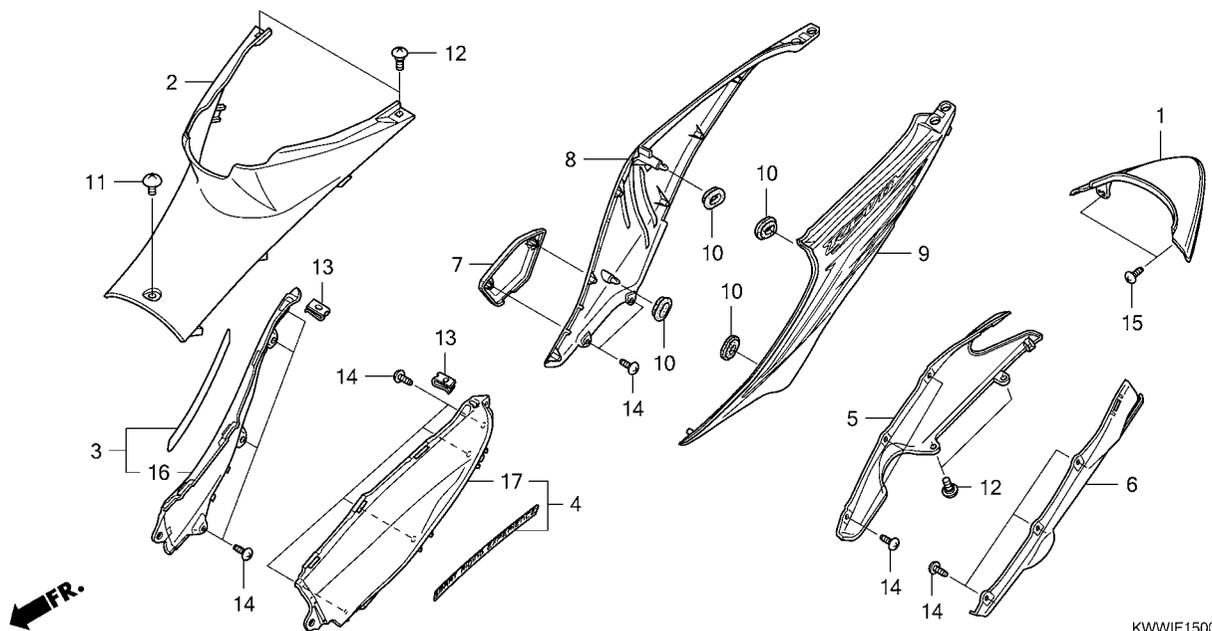


KWWIF1500A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1	COVER, BODY :REAR .....	0.2	33708-KWW-A00	COVER, TAIL	1	1	1	
2	COVER, BODY :CENTER .....	0.1	64340-KWW-A00	COVER, CENTER	1	1	1	
3	COVER, SIDE :RIGHT .....	0.3	64325-KWW-A00FMB	COVER, R. CENTER SIDE (WL)	1	1	1	
4	COVER, SIDE :LEFT .....	0.3	64330-KWW-A00FMB	COVER, L. CENTER SIDE (WL)	1	1	1	
5	COVER, SIDE :BOTH .....	0.4	64480-KWW-A00	COVER, R. RR. BODY	1	1	1	
6	COVER, BODY SIDE :RIGHT .....	0.3	64490-KWW-A00	COVER, L. RR. BODY	1	1	1	
7	COVER, BODY SIDE :LEFT .....	0.3	64560-KWW-A00	COVER, R. BODY LOWER	1	1	1	
8	COVER, BODY SIDE :BOTH .....	0.4	64410-KWW-A00FMB	COVER, R. BODY (WL)	1	1	1	
8	COVER, BODY :RIGHT .....	0.3	64410-KWW-A00SSM	*NH1*..... BLACK	1	1	1	
9	COVER, BODY :LEFT .....	0.3	64410-KWW-A00AGM	*NH-131M* .... STARLIGHT SILVER METALIC	-	(1)	(1)	
9	COVER, BODY :BOTH .....	0.4	64410-KWW-A00WRD	*NH229MU* .... ANCHOR GRAY METALLIC	-	(1)	(1)	
			64410-KWW-A00WRD	*R258* ..... WINNING RED	-	(1)	(1)	
		9	64420-KWW-A00FMB	COVER, L. BODY (WL)	1	1	1	
			64420-KWW-A00SSM	*NH1*..... BLACK	1	1	1	
			64420-KWW-A00AGM	*NH-131M* .... STARLIGHT SILVER METALIC	-	(1)	(1)	
			64420-KWW-A00WRD	*NH229MU* .... ANCHOR GRAY METALLIC	-	(1)	(1)	
			64420-KWW-A00WRD	*R258* ..... WINNING RED	-	(1)	(1)	
		10	83551-GE2-000	GROMMET, AIR CLEANER CASE	4	4	4	
		11	90107-KGH-600	SCREW, 6X12	1	1	1	
		12	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	6	6	6	
		13	90677-KAN-T00	NUT, CLIP, 5MM	2	2	2	
		14	93903-24310	SCREW, TAPPING, 4X12	16	16	16	
		15	93903-24380	SCREW, TAPPING, 4X12	2	2	2	
		16	64325-KWW-A40	COVER, R. CENTER SIDE	1	-	-	
		17	64330-KWW-A40	COVER, L. CENTER SIDE	1	-	-	

# F - 16

## Air Cleaner

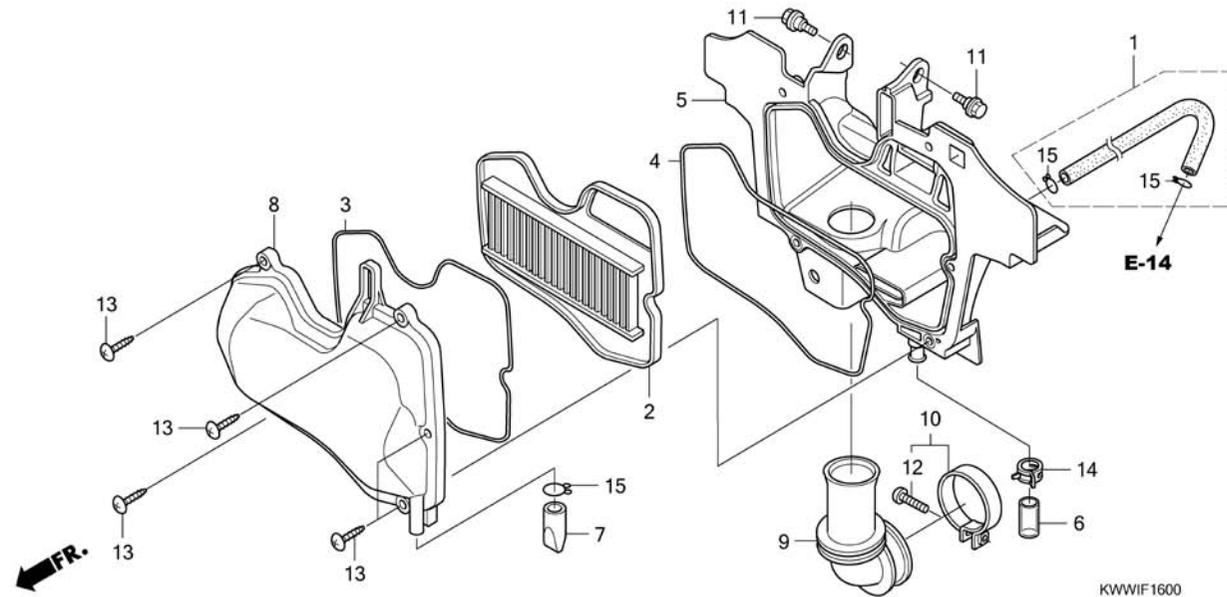


3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2 ELEMENT, AIR CLEANER.....	0.2	1	1576A-KWB-920	HOSE ASSY, BREATHER	1	1	1	
5 CASE, AIR CLEANER.....	0.6	2	17210-KWB-920	ELEMENT COMP., AIR CLEANER	1	1	1	
		3	17213-KWB-600	SEAL, AIR CLEANER COVER	1	1	1	
8 COVER, AIR CLEANER CASE.....	0.2	4	17214-KWB-920	SEAL, AIR CLEANER CASE	1	1	1	
9 TUBE, AIR CLEANER CONNECTING	0.6	5	17230-KWW-A00	CASE., AIR CLEANER	1	1	1	
		6	17227-KPK-900	TUBE, VINYL, 11X15X35	1	1	1	
		7	17234-KWW-B80	TUBE, AIR CLEANER DRAIN	1	1	1	
		8	17231-KWB-920	COVER., AIR CLEANER	1	1	1	
		9	17253-KWB-920	TUBE, AIR CLEANER CONNECTING	1	1	1	
		10	17255-329-000	BAND A, AIR CLEANER CONNECTING	1	1	1	
		11	90116-KVB-900	BOLT, FLANGE, 6MM	2	2	2	
		12	93500-05025-0G	SCREW, PAN, 5X25	1	1	1	
		13	93903-25510	SCREW, TAPPING, 5X25	5	5	5	
		14	95002-41300-08	CLAMP, TUBE (D13)	1	1	1	
		15	95002-80001	CLIP, TUBE (C12)	3	3	3	

# F - 16 - 1


## Air Suction Valve

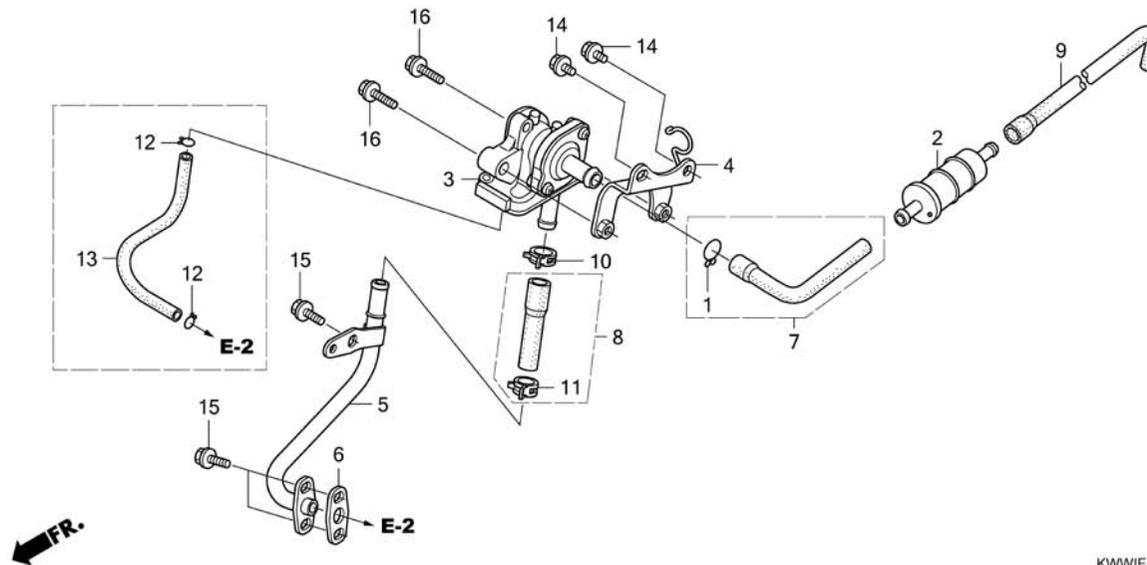

KWWIF1601A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2	0.2	1	15771-KV6-000	CLIP, OIL DRAIN TUBE	1	1	1	
3	0.3	2	17260-KFL-D00	FILTER COMP., AIR	1	1	1	
6	0.2	3	18600-KWW-A01	VALVE ASSY., AIR SUCTION	1	1	1	
10	0.2	4	18620-KWW-A00	STAY, AIR SUCTION VALVE	1	1	1	
	0.2	5	18640-KWB-920	PIPE COMP., AIR FEED	1	1	1	
		6	18645-MT4-730	GASKET, AIR FEED PIPE	1	1	1	
		7	1865A-KWB-920	TUBE A, AI ASSY	1	1	1	
		8	1865B-KWB-920	TUBE B, AI ASSY	1	1	1	
		9	18654-KWW-A00	TUBE C, AIR SUCTION VALVE	1	1	1	
		10	19509-KPH-900	CLAMP, TUBE (D19)	1	1	1	
		11	90678-MN5-000	CLIP, FUEL HOSE	1	1	1	
		12	95002-02070	CLIP, TUBE (B7)	2	2	2	
		13	9500B-KWB-920	TUBE ASSY, 3.5X110	1	1	1	
		14	95701-06008-00	BOLT, FLANGE, 6X8	2	2	2	
		15	96001-06016-00	BOLT, FLANGE, 6X16	3	3	3	
		16	96001-06018-00	BOLT, FLANGE, 6X18	2	2	2	


# F - 17 Exhaust Muffler

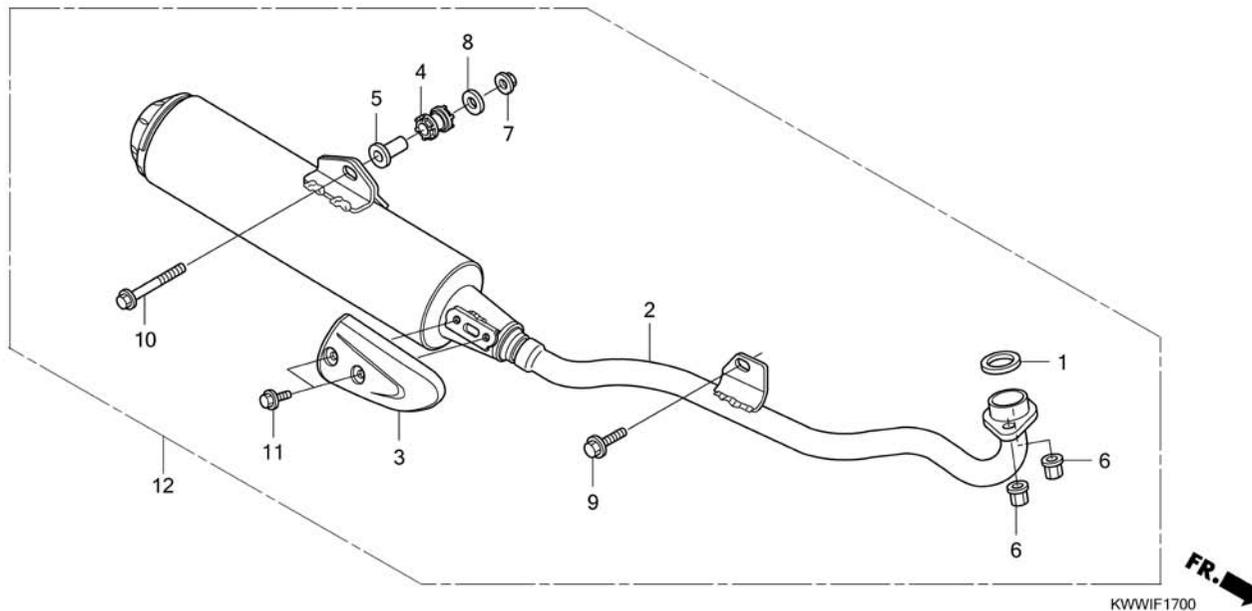

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 GASKET, EXHAUST PIPE.....	0.2	1	18291-GE2-920	GASKET, EX. PIPE	1	1	1	
2 MUFFLER.....	0.2	2	18350-KWW-A00	MUFFLER COMP., EX.	1	1	1	
		3	18355-KWB-920	COVER, MUFFLER	1	1	1	
		4	18421-KBA-900	RUBBER, MUFFLER MOUNTING	1	1	1	
		5	18422-KWW-A40	COLLAR, PILLION STEP	1	1	1	
		6	90301-KWB-600	NUT, FLANGE, 8MM	2	2	2	
		7	94050-08000	NUT, FLANGE, 8MM	1	1	1	
		8	94103-08000	WASHER, PLAIN, 8MM	1	1	1	
		9	95701-08012-01	BOLT, FLANGE, 8X12	1	1	1	
		10	95701-08045-00	BOLT, FLANGE, 8X45	1	1	1	
		11	96001-06008-00	BOLT, FLANGE, 6X8	2	2	2	
		12	18300-KWW-A00	MUFFLER ASSY, EX	1	1	1	

# F - 18


## Pedal / Kick Arm

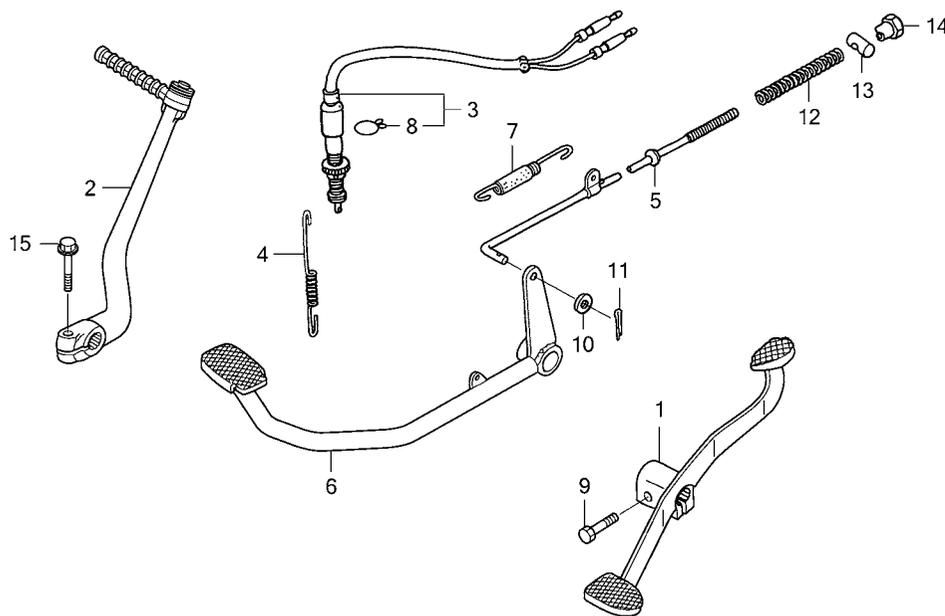

KWWIF1800

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 PEDAL, GEAR CHANGE .....	0.1	1	24701-KWW-621	PEDAL, GEAR CHANGE	1	1	1	
2 ARM, KICK STARTER .....	0.1	2	28300-KWY-710	ARM ASSY., KICK STARTER	-	-	1	
3 SWITCH, REAR STOP :PEDAL SIDE.	0.3	3	28300-KVR-960	ARM ASSY., KICK STARTER	1	1	-	
5 ROD, REAR BRAKE.....	0.5	3	35350-KWB-920	SWITCH ASSY., RR. STOP	1	1	1	
		4	35357-KCC-900	SPRING, STOP SWITCH	1	1	1	
6 PEDAL, REAR BRAKE.....	0.5	5	43451-KWB-600	ROD COMP., RR. BRAKE	1	1	1	
		6	46500-KWB-920	PEDAL COMP., BRAKE	1	1	1	
		7	46513-KBP-900	SPRING ASSY., RR. BRAKE RETURN	1	1	1	
		8	90601-KAF-003	CLIP, SWITCH COVER	1	1	1	
		9	92101-06020-0A	BOLT, HEX., 6X20	1	1	1	
		10	94101-05000	WASHER, PLAIN, 5MM	1	1	1	
		11	94201-20150	PIN, SPLIT, 2.0X15	1	1	1	
		12	95014-73100	SPRING A, BRAKE ROD	1	1	1	
		13	95015-32001	JOINT B, BRAKE ARM	1	1	1	
		14	95015-42000	NUT B, BRAKE ROD ADJUSTING	1	1	1	
		15	95701-06025-00	BOLT, FLANGE, 6X25	1	1	1	


# F - 19 Step

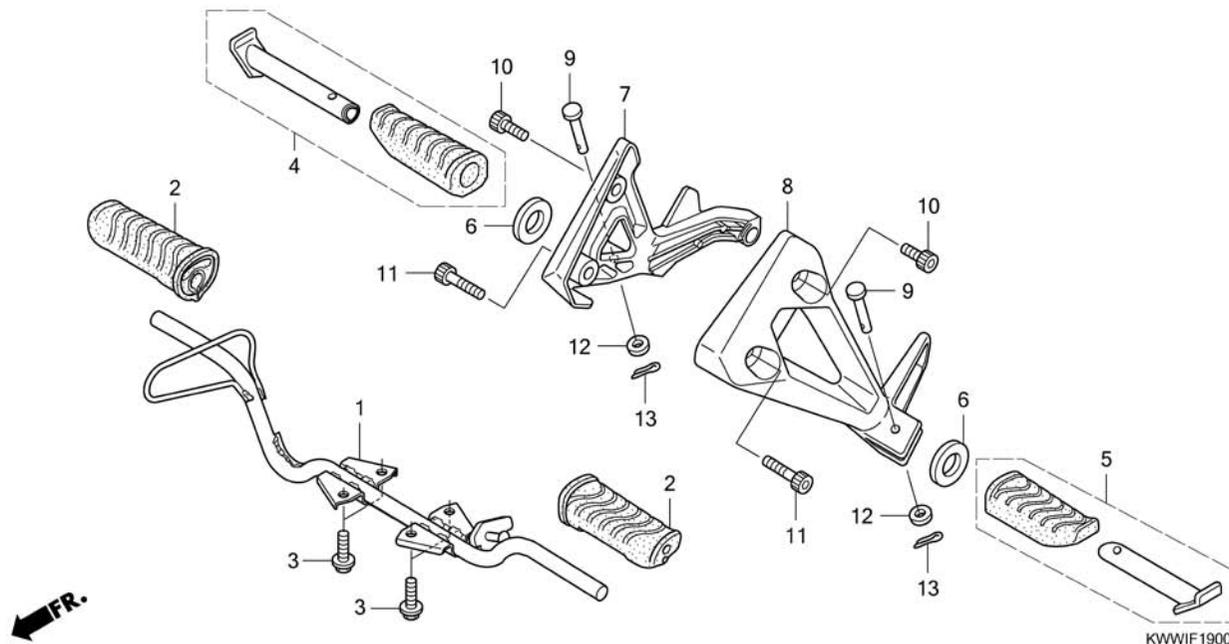

3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 BAR, STEP.....	0.4	1	50610-KWW-B80	BAR COMP., STEP	1	1	1	
2 RUBBER, STEP :LEFT.....	0.1	2	50661-KWB-600	RUBBER, STEP	2	2	2	
RUBBER, STEP :RIGHT .....	0.1	3	95701-08018-00	BOLT, FLANGE, 8X18	4	4	4	
RUBBER, STEP :BOTH .....	0.1	4	50713-KWW-9A0	BAR, R. PILLION STEP SET	1	1	1	
4 (3) BAR, PILLION STEP :RIGHT.....	0.1	5	50714-KWW-9A0	BAR, L. PILLION STEP SET	1	1	1	
5 (3) BAR, PILLION STEP :LEFT.....	0.1							
		6	50715-KE8-000	PLATE, PILLION STEP SIDE	2	2	2	
7 BRACKET, PILLION STEP :RIGHT.....	0.2	7	50715-KWW-A40	HOLDER, R. PILLION STEP	1	1	-	
8 BRACKET, PILLION STEP :LEFT.....	0.2	8	50716-KWB-600	HOLDER, L. PILLION STEP	1	1	1	
BRACKET, PILLION STEP :BOTH.....	0.4	9	90131-KWB-600	PIN, PILLION STEP	2	2	2	
		10	90135-KWB-600	BOLT, SOCKET, 8X16	2	2	2	
		11	90136-KWB-600	BOLT, SOCKET, 8X32	2	2	2	
		12	94101-06000	WASHER, PLAIN, 6MM	2	2	2	
		13	94201-16150	PIN, SPLIT, 1.6X15	2	2	2	


# F - 20 Stand

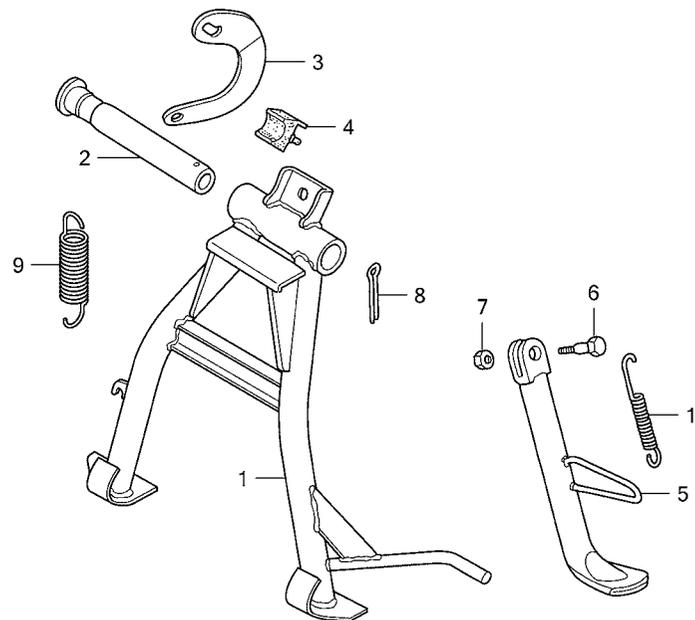

KWWIF2000

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 (2) STAND, MAIN .....	0.5	1	50500-KWB-920	STAND COMP., MAIN	1	1	1	
5 BAR, SIDE STAND .....	0.2	2	50512-KWW-620	SHAFT, RR. BRAKE PIVOT	1	1	1	
		3	50523-KWB-920	HOOK, MAIN STAND SPRING	1	1	1	
9 (3) SPRING, MAIN STAND .....	0.2	4	50524-397-000	RUBBER, STAND STOPPER	1	1	1	
10 SPRING, SIDE STAND .....	0.1	5	50530-KWB-920	BAR COMP., SIDE STAND	1	1	1	
		6	90108-223-000	SCREW, SIDE STAND PIVOT	1	1	1	
		7	94002-10000-0S	NUT, HEX., 10MM	1	1	1	
		8	94201-30300	PIN, SPLIT, 3.0X30	1	1	1	
		9	95014-71102	SPRING A, MAIN STAND	1	1	1	
		10	95014-72102	SPRING A, SIDE STAND	1	1	1	



# F - 21 Swingarm

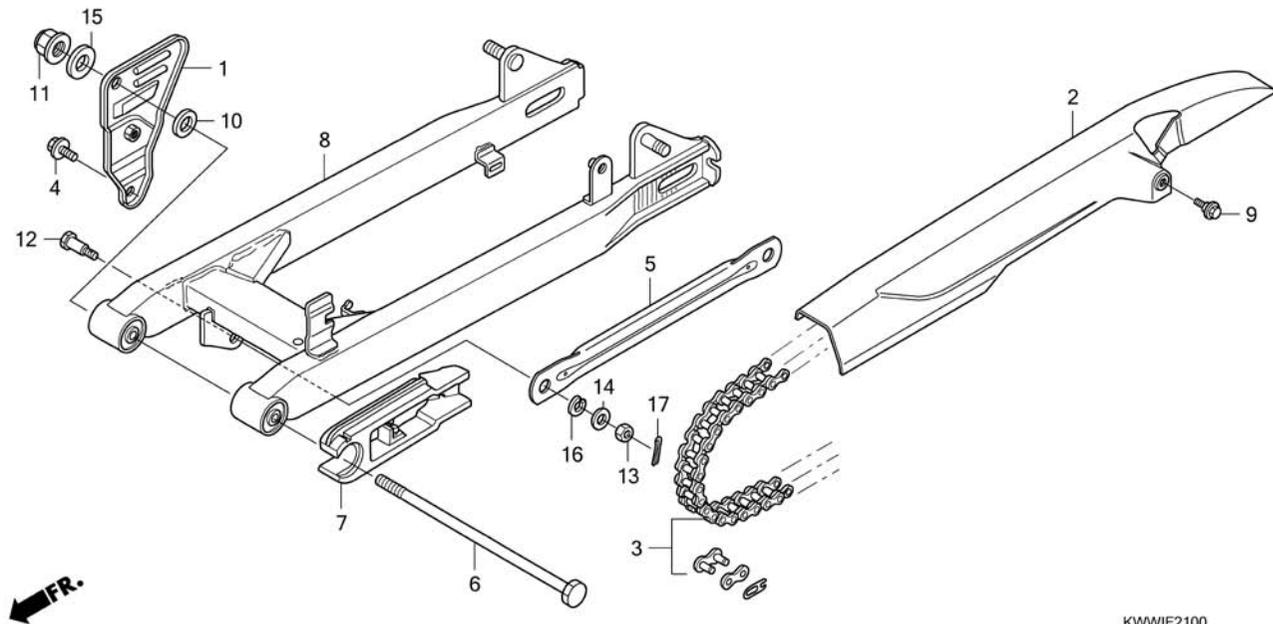

KWWIF2100

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
2 CASE, DRIVE CHAIN .....	0.1	1	18315-KWB-920	BRACKET, MUFFLER	1	1	1	
3 CHAIN, DRIVE .....	0.2	2	40510-KWB-600	CASE, DRIVE CHAIN	1	1	1	
5 ARM, REAR BRAKE STOPPER .....	0.3	3	40530-KWB-602	CHAIN, DRIVE (RK420SL-102RJ)	1	1	1	
		3	40530-KWB-921	CHAIN, DRIVE (420DX-102RB)	1	1	1	
7 SLIDER, CHAIN .....	0.3	4	95701-08012-01	BOLT, FLANGE, 8X12	1	1	1	
8 SWINGARM ASSEMBLY .....	0.8	5	43431-KWB-600	ARM, RR. BRAKE STOPPER	1	1	1	
		6	52101-KWB-920	BOLT, SWINGARM PIVOT	1	1	1	
		7	52170-KWB-600	SLIDER, CHAIN	1	1	1	
		8	5210A-KWW-A40	SWINGARM SET, RR.	1	1	1	
		9	90111-187-000	BOLT, FLANGE, 6MM	1	1	1	
		10	90122-KWB-600	WASHER, PIVOT BOLT	1	1	1	
		11	90306-KGH-901	NUT, U, 12MM	1	1	1	
		12	92812-10000	BOLT A, STOPPER ARM	1	1	1	
		13	94001-08000-0S	NUT, HEX., 8MM	1	1	1	
		14	94101-08000	WASHER, PLAIN, 8MM	1	1	1	
		15	94101-12000	WASHER, PLAIN, 12MM	1	1	1	
		16	94111-10000	WASHER, SPRING, 10MM	1	1	1	
		17	94201-20150	PIN, SPLIT, 2.0X15	1	1	1	

# F - 22 Rear Cushion

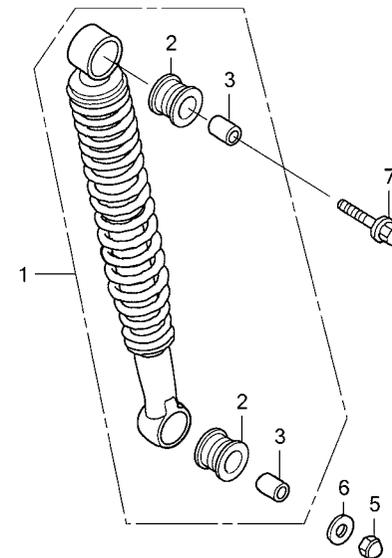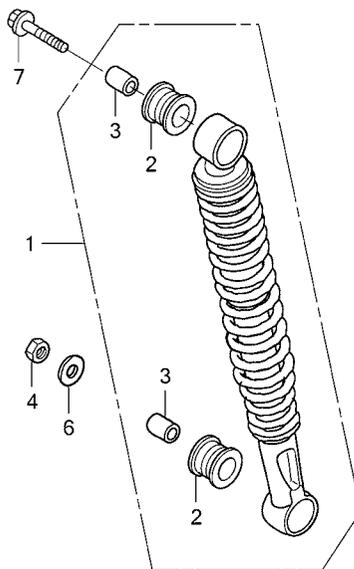


KWWIF2200



Service item	F.R.T.	No.	Part Number	Description	QTY			Notes	
					SW	CW	DX		
1	CUSHION ASSY., REAR :LEFT .....	0.3	1	52400-KWW-A01	CUSHION ASSY., RR.	2	2	2	
	CUSHION ASSY., REAR :RIGHT .....	0.3		52400-KWW-A31	CUSHION ASSY., RR	-	-	2	
	CUSHION ASSY., REAR :BOTH .....	0.4	2	52485-KVY-901	BUSH, RUBBER	4	4	4	
			3	52486-GA7-003	COLLAR, RUBBER BUSH	4	4	4	
			4	94001-10000-0S	NUT, HEX., 10MM	1	1	1	
			5	94021-10000-1S	NUT, CAP, 10MM	1	1	1	
			6	94101-10000	WASHER, PLAIN, 10MM	2	2	2	
			7	95801-10035-00	BOLT, FLANGE, 10X35	2	2	2	

**F - 23**  
**Rear Fender**

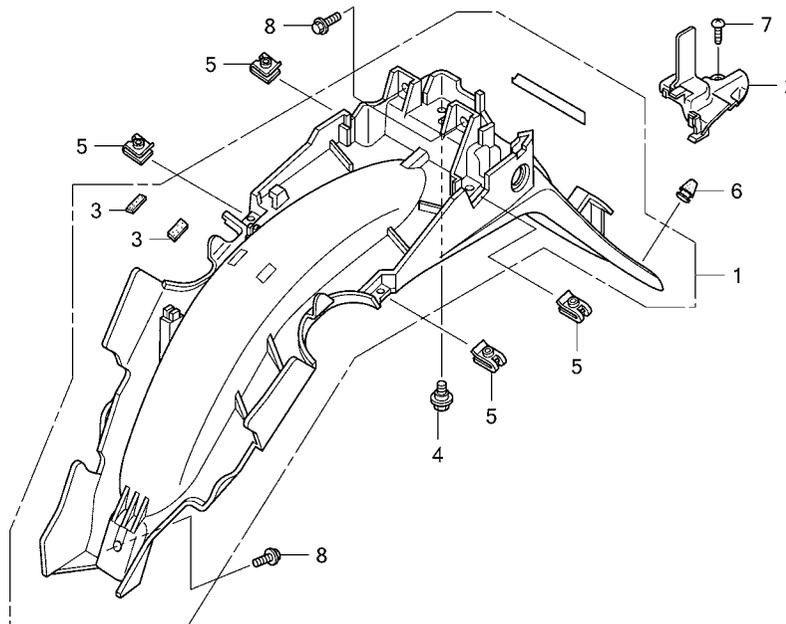


KWWIF2300

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 FENDER, REAR.....	0.6	1	8010A-KWW-A40	FENDER ASSY, RR.	1	1	1	
		2	80120-KWW-A00	COVER, SEAT LOCK	1	1	1	
		3	81257-KWC-900	RUBBER, PROTECTOR	2	2	2	
		4	90116-KVB-900	BOLT, FLANGE, 6MM	1	1	1	
		5	90677-KAN-T00	NUT, CLIP, 5MM	4	4	4	
		6	90899-422-610	PLUG, CONE TYPE	-	-	1	
		7	93903-24380	SCREW, TAPPING, 4X12	1	1	1	
		8	95701-06012-00	BOLT, FLANGE, 6X12	3	3	3	

# F - 24


## Rear Combination Light

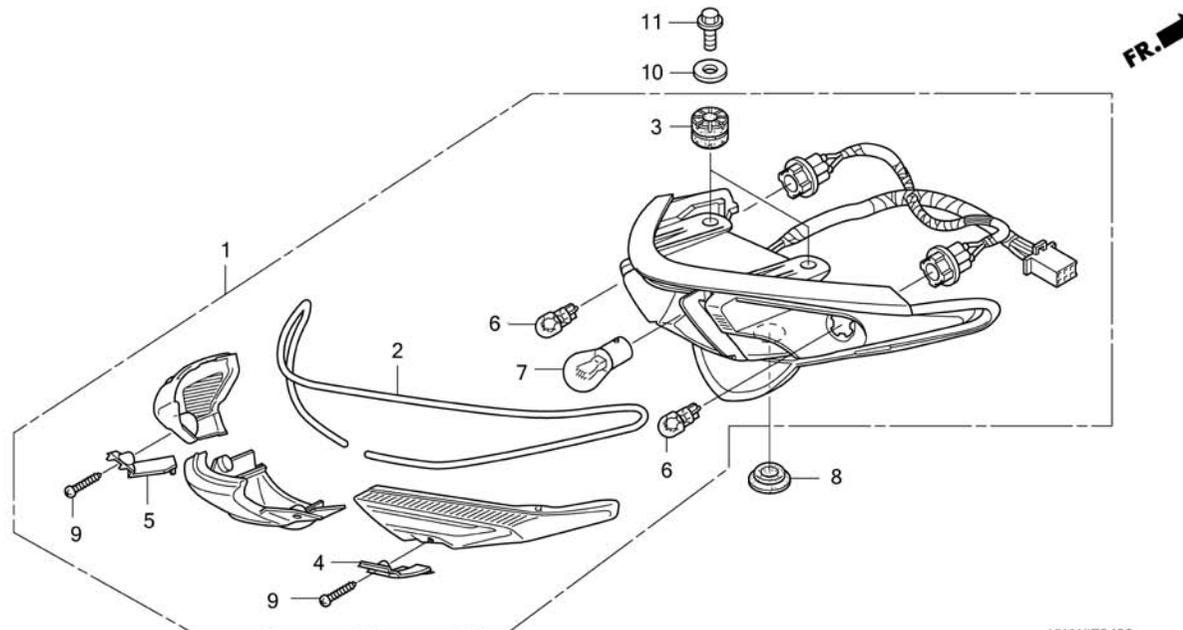

KWWIF2400

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 TAILLIGHT UNIT.....	0.1	1	33700-KWW-A41	LIGHT ASSY., RR. COMBINATION	1	1	1	
4 BASE, TAILLIGHT .....	0.2	2	33705-KWW-A01	PACKING	1	1	1	
10 (2) BULB, WINKER :REAR .....	0.1	3	33705-KW7-900	RUBBER A, TAILLIGHT MOUNTING	2	2	2	
.NOTE: Same time for two units		4	33706-KWW-A01	COVER, R. DUMMY	1	1	1	
BULB, WINKER :FOR 1 VEHICLE.....	0.3	5	33756-KWW-A01	COVER, L. DUMMY	1	1	1	
11 (2) BULB, TAILLIGHT .....	0.1	6	34905-KAN-W01	BULB, WINKER (12V 10W)	2	2	2	
		7	34906-GB6-921	BULB, TAILLIGHT (12V 18/5W)	1	1	1	
		8	83601-MN5-000	GROMMET, SIDE COVER	1	1	1	
		9	93901-24680	SCREW, TAPPING, 4X25	2	2	2	
		10	94103-06000	WASHER, PLAIN, 6MM	2	2	2	
		11	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	

# F - 25 Wire Harness

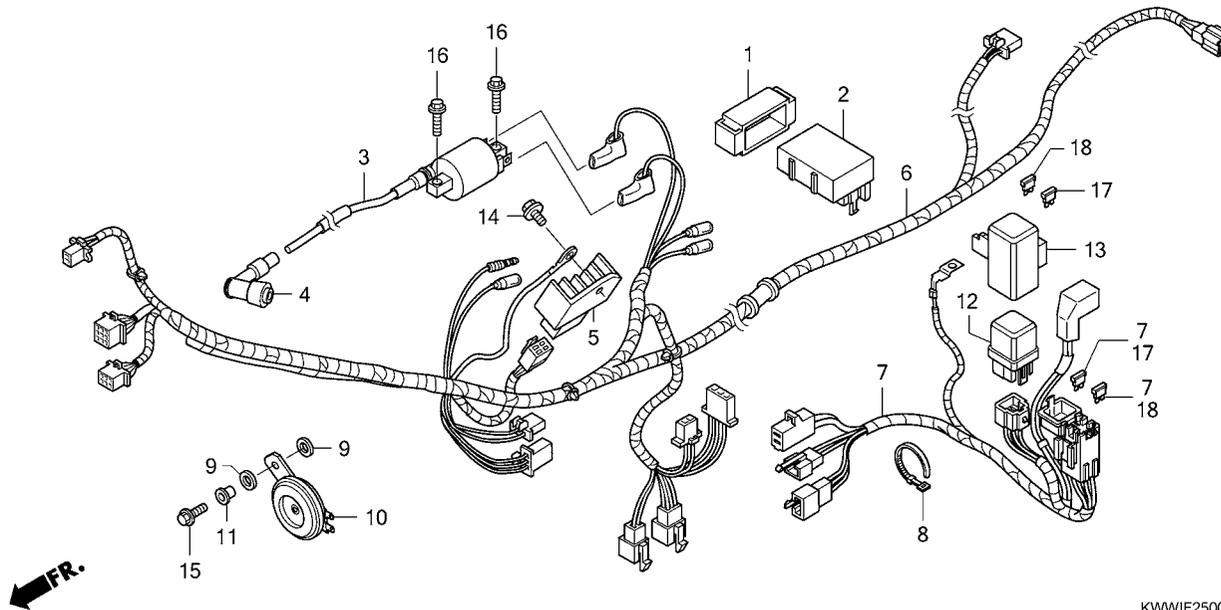


KWWIF2500

3


Service item	F.R.T.	No.	Part Number	Description	QTY			Notes	
					SW	CW	DX		
2	IGNITION CONTROL MODULE.....	0.3	1	30401-KTE-910	CUSHION, C.D.I. UNIT	1	1	1	
3	COIL, IGNITION .....	0.4	2	30410-KWB-921	C.D.I. UNIT	1	1	1	
5	RECTIFIER, REGULATE .....	0.3	3	30500-KWW-A01	COIL ASSY., IGNITION	1	1	1	
6	HARNESS, WIRE .....	0.9	4	30700-KWW-A01	CAP ASSY., NOISE SUPPRESSOR	1	1	1	
7	SUB HARNESS, BATTERY .....	0.3	5	31600-KVB-N51	RECTIFIER COMP., REGULATOR	1	1	1	
10	HORN(S) .....	0.2	6	32100-KWW-A40	HARNESS, WIRE	1	-	-	
12	RELAY, STARTER .....	0.2	32100-KWW-A50	HARNESS, WIRE	-	1	1		
			7	32103-KWW-A40	SUB HARNESS, BATTERY	1	1	1	
			8	32161-KRS-600	BAND B1, WIRE	1	1	1	
			9	33714-KL3-620	RUBBER, TAILLIGHT BRACKET	2	2	2	
			10	38110-KWW-A41	HORN COMP. (HIGH)	1	1	1	
			11	38117-KPH-880	COLLAR, HORN SETTING	1	1	1	
			12	38501-KPH-901	RELAY COMP., STARTER	1	1	1	
			13	38506-KVB-931	SUSPENSION, STARTER RELAY	1	1	1	
			14	95701-06014-00	BOLT, FLANGE, 6X14	1	1	1	
			15	95701-06016-00	BOLT, FLANGE, 6X16	1	1	1	
			16	95701-06020-00	BOLT, FLANGE, 6X20	2	2	2	
			17	98200-30750	FUSE, (7.5A)	2	2	2	
			18	98200-31000	FUSE, (10A)	2	2	2	

# F - 26 Frame Body

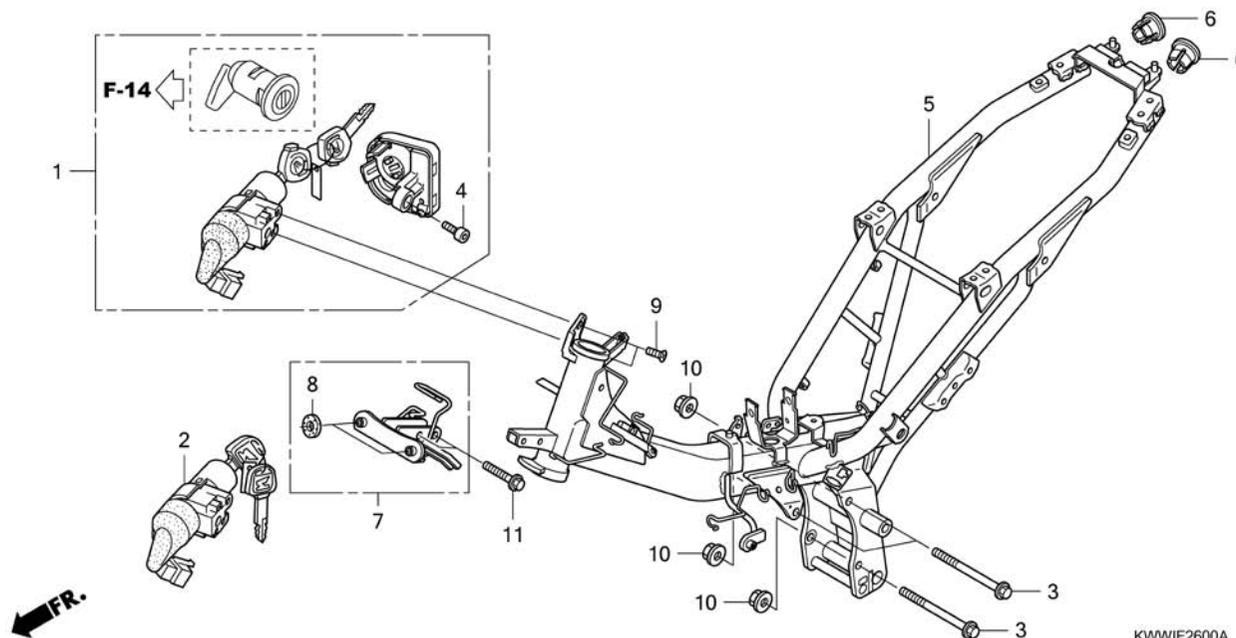

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
1 KEY SET .....	1.6	1	35010-KWW-A00	KEY SET	-	1	1	
2 SWITCH, COMBINATION & LOCK ....	1.5		35010-KWB-920	KEY SET	1	-	-	
3 BODY, FRAME .....	6.0	2	35100-KWW-A01	SWITCH ASSY., COMBINATION & LOCK	-	1	1	
			35100-KWB-920	SWITCH COMP., COMBINATION &	1	-	-	
		3	95801-10110-08	BOLT, FLANGE, 10X110	3	3	3	
5 BODY, FRAME .....	5.7	4	35109-KWW-A01	BOLT, SOCKET, 5X8	-	1	1	
7 STAY, FRONT COVER .....	0.3		35109-KWB-920	BOLT, SOCKET, 5X8	1	-	-	
		5	50100-KWW-A40	BODY COMP., FRAME	1	1	1	
		6	50196-KWW-A00	CAP, FRAME BODY END	2	2	2	
		7	64220-KWW-A40	STAY SET, FR. TOP COVER	1	1	1	
		8	64510-KWW-A00	RUBBER, FR. TOP COVER	2	2	2	
		9	90164-028-000	SCREW, U-LOCK FLAT, 6X12	2	2	2	
		10	94050-10080	NUT, FLANGE, 10MM	3	3	3	
		11	95701-08032-00	BOLT, FLANGE, 8X32	2	2	2	

# F - 27 Front Cover

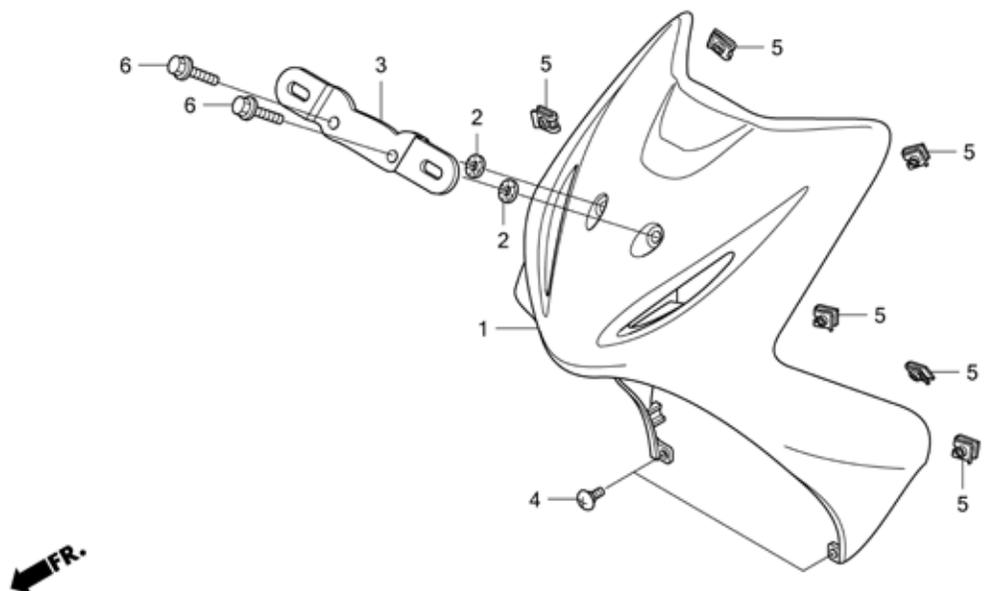


KWWIF2700

3

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes		
					SW	CW	DX			
1 COVER, FRONT.....	0.2	1	64500-KWW-A00FMB	COVER SET, FR. TOP (WL)						
				*NH1*.....	BLACK	1	1	1		
				64500-KWW-A00SSM	*NH-131M* .....	STARLIGHT SILVER METALIC	-	1	1	
				64500-KWW-A00AGM	*NH229MU* ....	ANCHOR GRAY METALLIC	-	1	1	
			64500-KWW-A00WRD	*R258* .....	WINNING RED	-	1	1		
			2	63500-KWW-A00	RUBBER, FR. TOP COVER	2	2	2		
			3	81110-KVB-930	BRACKET, FR. NUMBER PLATE	1	1	1		
			4	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	2	2	2		
			5	90677-KAN-T00	NUT, CLIP, 5MM	8	8	8		
			6	95701-06032-00	BOLT, FLANGE, 6X32	2	2	2		

# F - 28


## Main Pipe Cover

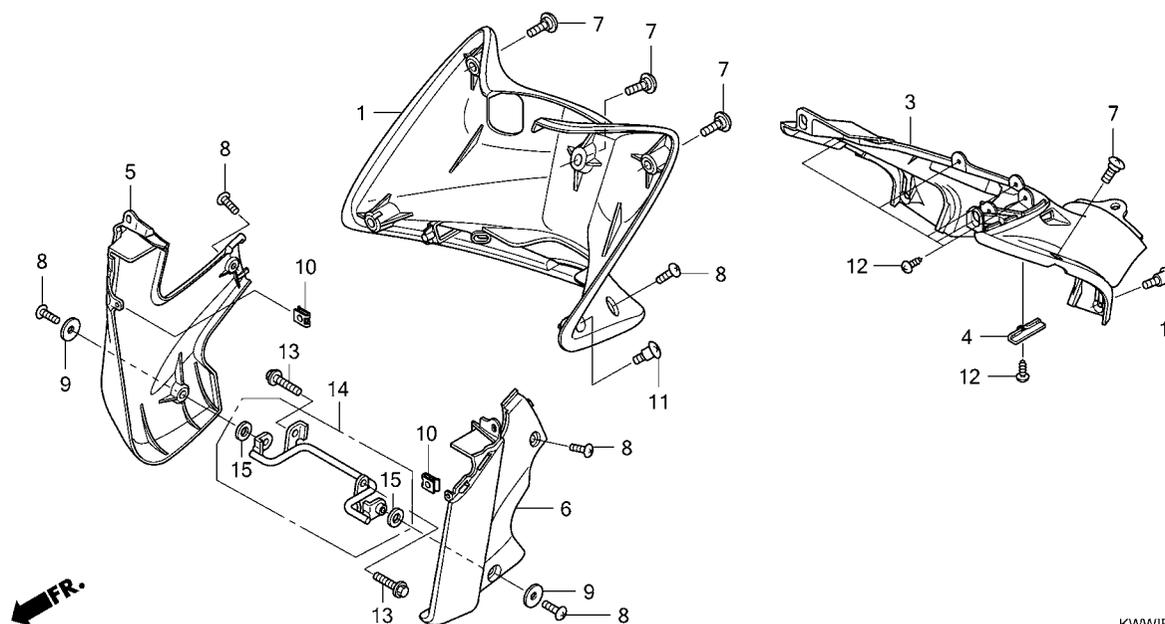

KWWIF2800A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes	
					SW	CW	DX		
1	PANEL, INNER :UPPER .....	0.4	1	64310-KWW-600	COVER, FR. MAIN PIPE	1	1	1	
3	PANEL, INNER :LOWER .....	0.4	3	64320-KWW-A00	COVER, RR. MAIN PIPE	1	1	1	
	PANEL, INNER :BOTH .....	0.4	4	64321-KWW-A00	GUARD, WATER	1	1	1	
5	COVER, MAIN PIPE SIDE :RIGHT ....	0.1	5	64400-KWW-A00FMB	COVER, R. MAIN PIPE SIDE *NH1* .... BLACK	-	1	1	
				64400-KWW-A40	COVER, R. MAIN PIPE SIDE	1	-	-	
6	COVER, MAIN PIPE SIDE :LEFT .....	0.1	6	64450-KWW-A00FMB	COVER, L. MAIN PIPE SIDE *NH1* .... BLACK	-	1	1	
	COVER, MAIN PIPE SIDE :BOTH .....	0.2		64450-KWW-A40	COVER, L. MAIN PIPE SIDE	1	-	-	
			7	90104-KPH-901	SCREW, SPECIAL, 5MM	5	5	5	
			8	90107-KGH-600	SCREW, 6X12	6	6	6	
			9	90501-KST-920	WASHER, SEAT MOUNTING, 6MM	2	2	2	
			10	90677-KAN-T00	NUT, CLIP, 5MM	2	2	2	
			11	91422-KVB-900	SCREW, SPECIAL PAN, 5MM	4	4	4	
			12	93903-24310	SCREW, TAPPING, 4X12	6	6	6	
			13	96001-06016-00	BOLT, FLANGE, 6X16	-	-	2	
				96001-06020-00	BOLT, FLANGE, 6X20	2	2	-	
			14	64360-KWW-A00	STAY SET, LOWER COVER	1	1	1	
			15	64510-KWW-A00	RUBBER, FR. TOP COVER	2	2	2	


# F - 29 Tools

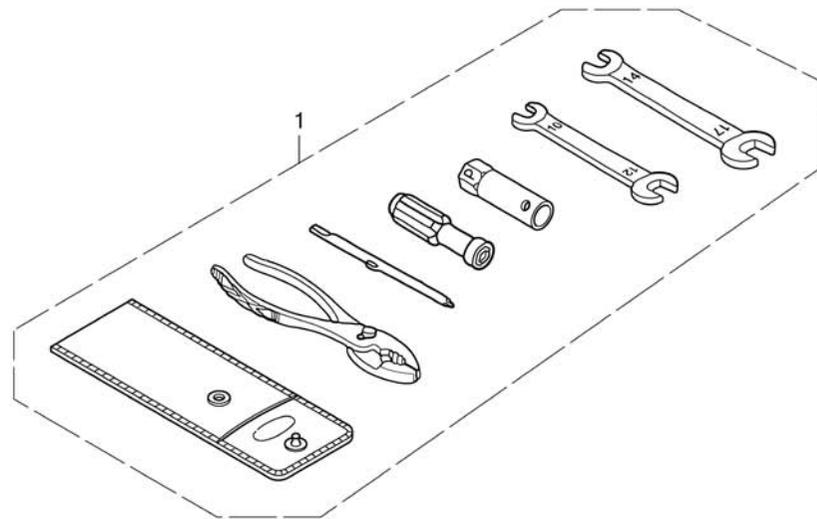

KWWIF2900

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		1	89010-KWW-A00	TOOL SET	1	1	1	

**F - 30**  
**Caution Label**

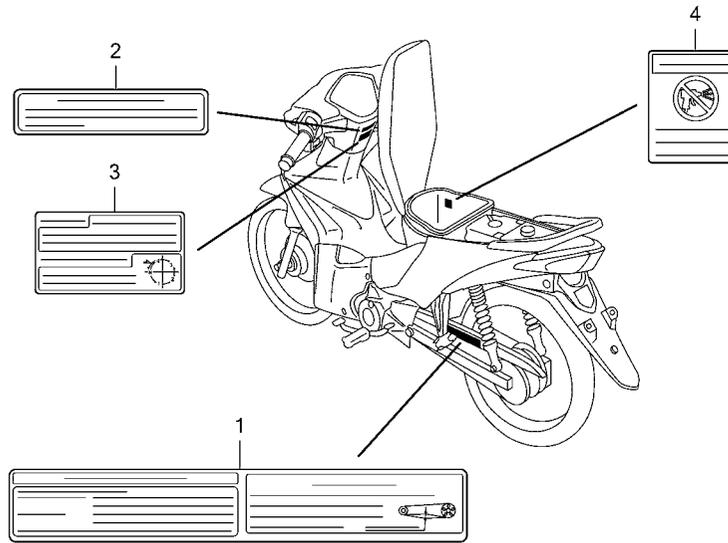


KWWIF3000A

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		1	87505-KWB-920	LABEL, TIRE & DRIVE CHAIN	1	1	1	
		2	87513-KPH-880ZB	LABEL, ENGINE STARTER *TWHITE*	1	1	1	
		3	87560-KPH-880ZA	MARK, DRIVE CAUTION *TWHITE*	1	1	1	
		4	87509-KWW-A40	LABEL, AIR CLEANER ELEMENT	1	1	-	

## F - 31


### Mark / Stripe

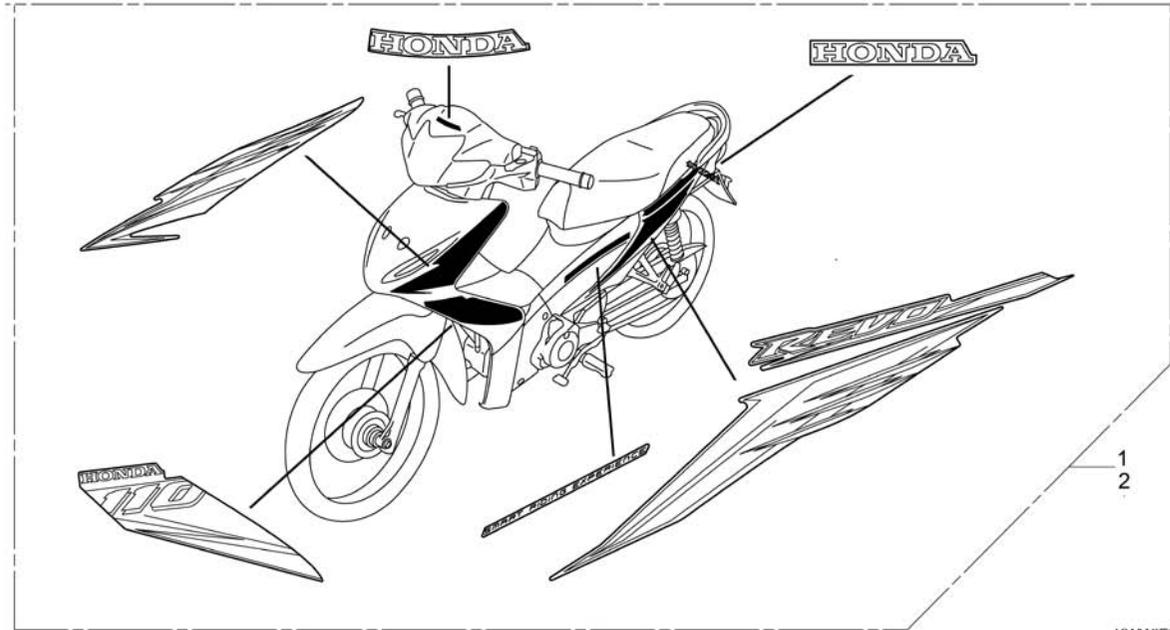

KWWIF3100

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes	
					SW	CW	DX		
		1	871X0-KWW-A40ZAR	STRIPE, R. BLACK RED (METEOR RED)	1	-	-	NEW	
			871X0-KWW-A40ZBR	STRIPE, R. BLACK BLUE (SONIC BLUE)	(1)	-	-	NEW	
			871X0-KWW-A40ZCR	STRIPE, R. BLACK SILVER (RAZOR SILVER)	(1)	-	-	NEW	
		2		871X0-KWW-A40ZAL	STRIPE, L. BLACK RED (METEOR RED)	1	-	-	NEW
				871X0-KWW-A40ZBL	STRIPE, L. BLACK BLUE (SONIC BLUE)	(1)	-	-	NEW
				871X0-KWW-A40ZCL	STRIPE, L. BLACK SILVER (RAZOR SILVER)	(1)	-	-	NEW
		1		871X0-KWW-A50ZAR	STRIPE, R. BLACK (PHANTOM BLACK)	-	1	-	NEW
				871X0-KWW-A50ZBR	STRIPE, R. RED BLACK (LAVA RED)	-	(1)	-	NEW
				871X0-KWW-A50ZCR	STRIPE, R. SILVER BLACK (STARLIGHT SILVER)	-	(1)	-	NEW
				871X0-KWW-A50ZDR	STRIPE, R. GREY BLACK (ANCHOR GREY)	-	(1)	-	NEW
		2		871X0-KWW-A50ZAL	STRIPE, L. BLACK (PHANTOM BLACK)	-	1	-	NEW
				871X0-KWW-A50ZBL	STRIPE, L. RED BLACK (LAVA RED)	-	(1)	-	NEW
871X0-KWW-A50ZCL	STRIPE, L. SILVER BLACK (STARLIGHT SILVER)			-	(1)	-	NEW		
871X0-KWW-A50ZDL	STRIPE, L. GREY BLACK (ANCHOR GREY)			-	(1)	-	NEW		

**F - 31 - 1**  
**Mark / Stripe**  
**(Deluxe)**

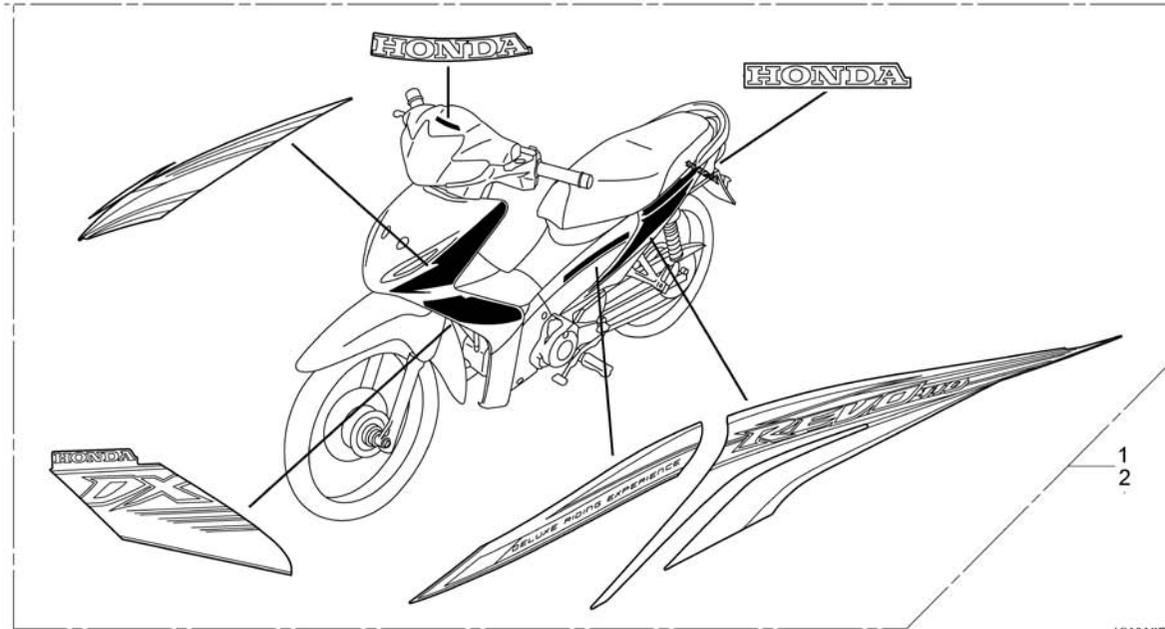

KWWIF3100

Service item	F.R.T.	No.	Part Number	Description	QTY			Notes
					SW	CW	DX	
		1	871X0-KWW-A60ZAR	STRIPE, R. RED SILVER (INFERNO RED)	-	-	1	NEW
			871X0-KWW-A60ZBR	STRIPE, R. BLACK SILVER (AFFINITY BLACK)	-	-	(1)	NEW
			871X0-KWW-A60ZCR	STRIPE, R. BROWN SILVER (GUSTO BROWN)	-	-	(1)	NEW
		2	871X0-KWW-A60ZAL	STRIPE, L. RED SILVER (INFERNO RED)	-	-	1	NEW
			871X0-KWW-A60ZBL	STRIPE, L. BLACK SILVER (AFFINITY BLACK)	-	-	(1)	NEW
			871X0-KWW-A60ZCL	STRIPE, L. BROWN SILVER (GUSTO BROWN)	-	-	(1)	NEW

## I N D E X S P A R T N U M B E R

Part Number	Block No.								
<b>(00000)</b>									
06451-961-405	F9	1443A-KWB-920	E3	16075-GHB-640	E19	18620-KWW-A00	F16-1	22830-KWB-600	E6
06455-KWB-601	F9	1444A-KWB-920	E3	16075-GHB-B40	E19	18640-KWB-920	F16-1	22846-KPH-901	E6
06530-GBG-B20	F6	14451-KWB-600	E3	16100-KWW-010	E19	18645-MT4-730	F16-1	22860-KWB-601	E6
06531-GBG-B20	F6	14461-KVB-900	E3	16148-141-881	E19	18654-KWW-A00	F16-1	23120-KTL-740	E7
06535-GN5-505	F6	14500-KWB-600	E4	16148-KB1-921	E19	1865A-KWB-920	F16-1	23122-KTL-740	E7
		14502-086-001	E4	16155-KRS-861	E19	1865B-KWB-920	F16-1	23122-KWW-A01	E7
<b>(10000)</b>		14531-KWB-600	E4	16163-GFP-901	E19	19509-KPH-900	F16-1	23123-KFL-851	E7
1110-159NS	F12	14541-GB4-682	E4	16165-KWB-921	E19	<b>(20000)</b>		23123-KWW-A01	E7
11101-KWB-600	E14	1455A-KTL-6B0	E4	16175-GB0-911	E19	22110-KWB-931	E8	23124-GCE-901	E7
1111-183	F10	14610-KWB-600	E4	16176-GB0-911	E19	22110-KWW-A01	E8-1	23124-KWW-A01	E7
11201-KWB-920	E14	14615-KFL-851	E4	16198-GC7-004	E19	22115-KPH-900	E8	23125-GN5-910	E7
11218-KWB-600	E14	14670-KWB-600	E4	16199-KWW-A01	E19	22115-KPH-900	E8-1	23126-KWB-600	E7
11331-KWB-600	E6	14675-KWB-600	E4	16201-KWB-921	E2	22116-KWB-600	E8	23211-KWW-62Z	E16
11341-KWB-600	E10	14711-KWB-600	E3	16211-KPH-901	E2	22116-KWB-600	E8-1	23221-KWW-62Z	E16
1136A-KWB-920	E10	14721-KVY-900	E3	16236-KWW-A00	E10	22121-KWB-601	E8	23415-KPH-901	E16
11394-KWB-920	E6	14751-KWB-600	E3	16910-KFM-902	F13	22121-KWW-A01	E8-1	23421-KWB-600	E16
11395-KWB-920	E10	14751-KWB-921	E3	16951-KSS-901	E19	22201-KWB-603	E8	23431-KWW-620	E16
12100-KWB-920	E5	14771-GB4-680	E3	16963-KSS-901	E19	22201-KWW-A01	E8-1	23441-KWB-600	E16
12191-KWB-921	E5	14775-KVY-900	E3	17110-KWB-920	E2	22204-KWB-603	E8	23451-KWW-620	E16
12204-KVY-901	E2	14781-MA6-000	E3	17210-KWB-920	F16	22321-KWB-601	E8	23461-KWW-620	E16
12206-KPL-900	E2	15100-KWB-920	E9	17213-KWB-600	F16	22321-KWW-A01	E8-1	23471-KWW-620	E16
12209-GB4-682	E3	15119-KWB-600	E9	17214-KWB-920	F16	22351-KWB-601	E8	23481-KWW-620	E16
1220B-KWB-920	E2	15331-GF6-000	E9	17227-KPK-900	F16	22351-KWW-A01	E8-1	23801-KWB-600	E16
12251-KWB-601	E2	15332-GF6-000	E9	17230-KWW-A00	F16	22361-KWB-601	E8	23802-GN5-911	E16
12310-KWB-600	E1	15421-035-010	E9	17231-KWB-920	F16	22361-KWW-A01	E8-1	23911-KPH-901	E16
12391-KWB-600	E1	15431-HF7-010	E7	17234-KWW-B80	F16	22401-KWB-601	E8	24305-KWB-600	E16
13004-KWW-A40	E15	15439-KPH-900	E7	17253-KWB-920	F16	22401-KWW-A01	E8-1	24306-KWB-600	E16
13011-KWB-305	E15	15439-KWB-920	E7	17255-329-000	F16	22402-KWB-601	E8	2430A-KWW-A40	E17
13021-KWB-305	E15	1565A-KWB-920	E6	17260-KFL-D00	F16-1	22517-250-170	F10	24411-KWB-600	E17
13031-KWB-305	E15	15661-GN5-910	E8-1	17510-KWB-920	F13	22517-250-170	F10-1	24421-200-001	E17
13041-KWB-305	E15	15661-GN5-911	E8	17620-KGH-600	F13	22535-KWB-305	E7	24430-KWB-8A0	E17
13051-KWB-305	E15	1576A-KWB-920	F16	17631-KEV-900	F13	22606-GN5-911	E7	24435-GB4-721	E17
13101-KWB-920	E15	15771-KV6-000	F16-1	1763A-KWW-A00	F13	22610-KWB-600	E7	24610-KWB-600	E17
13102-KWB-920	E15	16010-KSS-901	E19	17910-KWW-A00	F3	22630-KWB-600	E7	24630-KWB-600	E17
13103-KWB-920	E15	16012-KWB-921	E19	17950-KWW-A00	F3	22641-KWB-600	E7	24641-041-000	E17
13104-KWB-920	E15	16013-KPG-901	E19	17961-KFM-900	F3	22641-KWW-A01	E7	24651-041-001	E17
13105-KWB-920	E15	16014-KWB-921	E19	17962-KTM-850	F3	22642-KFL-851	E7	24652-KPH-900	E17
13111-087-001	E15	16015-KVV-901	E19	18291-GE2-920	F17	22643-KFL-D00	E7	24701-KWW-621	F18
13115-GN5-911	E6	16016-KPH-901	E19	18300-KWW-A00	F17	22644-KFL-852	E7	27517-000-000	F12
13115-GN5-911	E15	16022-KWB-921	E19	18315-KWB-920	F21	22660-KWB-601	E7	27517-000-000	F12-1
14100-KWB-920	E3	16028-KTT-901	E19	18350-KWW-A00	F17	22804-GB2-880	E7	28110-KWB-920	E12
14321-KWB-600	E4	16037-KPH-901	E19	18355-KWB-920	F17	22810-KTL-740	E6	28120-KPH-701	E12
14401-KWB-601	E4	16040-KEV-900	E19	18421-KBA-900	F17	22823-KWB-600	E6	28120-KWB-921	E12
14401-KWB-920	E4	16041-GB5-D30	E19	18422-KWW-A40	F17	22825-KWB-600	E6	28130-KWB-920	E12
		16048-KPH-901	E19	18600-KWW-A01	F16-1			28132-KPH-900	E12

## INDEKS PART NUMBER

Part Number	Block No.								
28211-KWB-600	E18	34908-GA7-701	F2	38117-KPH-880	F25	43353-461-772	F9	45510-KWB-600	F4
28221-KWB-600	E18	34908-GA7-701	F2-1	38301-GBG-911	F2	43410-KWB-600	F11	45512-MA6-007	F4
28251-KWB-600	E18	34908-KVE-900	F2	38301-GBG-911	F2-1	43431-KWB-600	F21	45517-GW0-751	F4
28262-KWB-600	E18	34908-KVE-900	F2-1	38306-KK4-000	F2	43434-ME1-670	F11	45520-GW0-912	F4
28265-KWB-600	E18	34908-MB9-871	F2	38306-KK4-000	F2-1	43451-KWB-600	F18	45521-GW0-913	F4
28271-KWB-600	E18	34908-MB9-871	F2-1	38501-KPH-901	F25	43513-KBP-882	F4	45530-KVY-911	F4
28281-KWB-600	E18	34909-KVR-600	F2	38506-KVB-931	F25	44301-KWB-600	F10	46500-KWB-920	F18
28300-KVR-960	F18	34909-KVR-600	F2-1			44301-KWB-600	F10-1	46513-KBP-900	F18
28300-KWY-710	F18	35010-KWB-920	F26	<b>(40000)</b>		44311-KWB-920	F10		
	<b>(30000)</b>	35010-KWW-A00	F26	40510-KWB-600	F21	44311-KWB-920	F10-1	<b>(50000)</b>	
30401-KTE-910	F25	35100-KWB-920	F26	40530-KWB-602	F21	44601-KWB-600	F10	50100-KWW-A40	F26
30410-KWB-921	F25	35100-KWW-A01	F26	40530-KWB-921	F21	44601-KWW-A1Z	F10-1	50196-KWW-A00	F26
30500-KWW-A01	F25	35109-KWB-920	F26	4054A-KWW-A00	F11	44620-KPH-950	F10	50306-GN5-901	F6
30700-KWW-A01	F25	35109-KWW-A01	F26	4054A-KWW-A00	F12	44620-KPH-951	F10-1	50381-KWB-920	F14
31110-KWB-921	E11	35150-KWW-A01	F3	4054A-KWW-A00	F12-1	44711-KWW-010	F10	50400-KWW-620	F14
31120-KWB-921	E11	35160-KWW-A01	F3	41200-KWB-930	F12	44711-KWW-A01	F10-1	50500-KWB-920	F20
31204-KG8-004	E13	35170-KWW-A01	F3	41200-KWB-930	F12-1	44800-KWB-600	F10	50512-KWW-620	F20
31206-GW3-004	E13	35180-KWW-A01	F3	41241-KWB-601	F12-1	44800-KWB-600	F10-1	50523-KWB-920	F20
31210-KWB-921	E13	35200-KWW-A01	F3	41241-KWB-601	F12	44806-KWB-600	F10	50524-397-000	F20
31500-KWW-A01	F14	35340-KWB-601	F4	42301-KWB-600	F12	44806-KWB-600	F10-1	50530-KWB-920	F20
31600-KVB-N51	F25	35350-KWB-920	F18	42301-KWB-600	F12-1	44809-KFM-900	F10	50610-KWW-B80	F19
31916-KWB-601	E2	35357-KCC-900	F18	42303-KWW-B60	F12	44809-KFM-900	F10-1	50661-KWB-600	F19
31926-KWB-601	E2	35751-KPH-900	E17	42303-KWW-B60	F12-1	44830-KWW-A00	F2	50713-KWW-9A0	F19
32100-KWW-A40	F25	35752-KPH-901	E17	42304-KFM-900	F12	44830-KWW-A00	F2-1	50714-KWW-9A0	F19
32100-KWW-A50	F25	35759-KWB-921	E14	42304-KFM-900	F12-1	45111-MAJ-G42	F9	50715-KE8-000	F19
32101-GW3-780	E13	35759-KWW-A40	E14	42313-GBG-B20	F11	45126-KWW-A40	F4	50715-KWW-A40	F19
32103-KWW-A40	F25	37121-MZ0-760	F2-1	42601-KPH-900	F12	45131-GZ0-007	F9	50716-KWB-600	F19
32105-KWB-921	E13	37200-KWW-A01	F2	42601-KWW-A1Z	F12-1	45132-166-017	F9	51400-KWW-A01	F8
32161-KRS-600	F25	37200-KWW-A41	F2-1	42611-KWB-600	F12-1	45133-028-000	F11	51400-KWW-A31	F8
32906-KWW-A00	E6	37210-KWW-A01	F2	42611-KWB-600	F12-1	45133-MA3-007	F9	51401-KWW-A01	F8
33100-KWW-A41	F1	37210-KWW-A41	F2-1	42620-KFL-851	F12	45134-250-001	F11	51410-KWB-921	F8
33115-KBA-830	F1	37211-KWW-A01	F2	42620-KFL-851	F12-1	45145-KFM-900	F11	51412-GN5-901	F8
33700-KWW-A41	F24	37211-KWW-A01	F2-1	42653-001-004	F12	45156-KFM-900	F7	51412-KWB-601	F8
33705-KW7-900	F24	37212-KWW-A01	F2	42653-001-004	F12-1	45156-KWW-A40	F4	51420-KWW-A01	F8
33705-KWW-A01	F24	37215-KS3-901	F2	42701-030-008	F10	45157-KWW-A00	F4	51420-KWW-A31	F8
33706-KWW-A01	F24	37224-KWW-A01	F2	42701-383-703	F12	45208-KWB-601	F9	51425-GN5-901	F8
33708-KWW-A00	F15	37224-KWW-A41	F2-1	42711-KWB-922	F12	45215-KPH-951	F9	51437-KWB-601	F8
33714-KL3-620	F25	37230-KWW-A01	F2	42711-KWB-922	F12-1	45216-166-007	F9	51454-KEV-881	F8
33756-KWW-A01	F24	37305-KE5-008	F2	42711-KWW-010	F12	45218-KWB-601	F9	51456-KPH-901	F8
34901-KPH-881	F1	37305-KE5-008	F2-1	42711-KWW-010	F12-1	45250-KWB-921	F9	51466-065-901	F8
34905-KAN-W01	F1	37800-KWB-921	F13	43100-KPH-700	F11	45251-KWB-921	F10	51470-KWW-A01	F8
34905-KAN-W01	F24	37801-GA7-700	F13	43100-KPH-700ZC	F11	45251-KWB-921	F10-1	51500-KWW-A01	F8
34906-GB6-921	F24	37802-KTL-740	F13	43125-KPH-903	F11	45290-KWB-601	F9	51500-KWW-A31	F8
34908-GA7-701	F1	38110-KWW-A41	F25	43141-KTM-850	F11	45465-KTL-740	F7	51520-KWW-A01	F8
				43352-568-004	F9	45504-410-004	F4	51520-KWW-A31	F8

## INDEXS PART NUMBER

Part Number	Block No.								
52101-KWB-920	F21	64410-KWW-A00WRD	F15	871X0-KWW-A40ZCL	F31	90106-GN5-900	F5	90401-KWW-A01	E7
5210A-KWW-A40	F21	64420-KWW-A00AGM	F15	871X0-KWW-A40ZCR	F31	90107-KGH-600	F15	90402-KWB-600	E2
52170-KWB-600	F21	64420-KWW-A00FMB	F15	871X0-KWW-A50ZAL	F31	90107-KGH-600	F28	90403-KM9-000	E11
52400-KWW-A01	F22	64420-KWW-A00SSM	F15	871X0-KWW-A50ZAR	F31	90108-223-000	F20	90403-KPH-901	E8
52400-KWW-A31	F22	64420-KWW-A00WRD	F15	871X0-KWW-A50ZBL	F31	90109-MZ5-008	F2	90403-KWB-600	E16
52485-KVY-901	F22	64450-KWW-A00FMB	F28	871X0-KWW-A50ZBR	F31	90109-MZ5-008	F2-1	90403-KWW-A01	E8-1
52486-GA7-003	F22	64450-KWW-A40	F28	871X0-KWW-A50ZCL	F31	90111-187-000	F21	90404-KWB-600	E4
53100-KWW-A40	F5	64480-KWW-A00	F15	871X0-KWW-A50ZCR	F31	90114-KGH-901	F4	90407-259-000	E14
53105-KWB-600	F5	64490-KWW-A00	F15	871X0-KWW-A50ZDL	F31	90115-KW7-900	F15	90412-187-001	E16
53106-KR3-000	F5	64500-KWW-A00AGM	F27	871X0-KWW-A50ZDR	F31	90115-KW7-900	F27	90412-KPH-901	E16
53108-KR3-770	F5	64500-KWW-A00FMB	F27	871X0-KWW-A60ZAL	F31-1	90116-KV3-702	F8	90431-GN5-910	E7
5312A-KWB-920	F5	64500-KWW-A00SSM	F27	871X0-KWW-A60ZAR	F31-1	90116-KVB-900	F16	90432-086-000	E7
5312B-KWW-A00	F5	64500-KWW-A00WRD	F27	871X0-KWW-A60ZBL	F31-1	90116-KVB-900	F23	90433-KWB-600	E7
53140-KWW-A40	F3	64510-KWW-A00	F26	871X0-KWW-A60ZBR	F31-1	90122-KWB-600	F21	90433-KWW-A01	E7
53166-KWB-600	F3	64510-KWW-A00	F28	871X0-KWW-A60ZCL	F31-1	90128-KWB-600	F12	90442-147-000	F3
53167-KFM-900	F3	64521-MN5-000	F5	871X0-KWW-A60ZCR	F31-1	90128-KWB-600	F12-1	90451-KGH-901	E18
53168-KFM-900	F3	64560-KWW-A00	F15	87505-KWB-920	F30	90129-KWB-600	F14	90452-413-001	E16
53175-KRS-T80	F4	<b>(70000)</b>		87509-KWW-A40	F30	90131-KPH-881	F9	90452-GB4-771	E16
53200-KWW-A40	F6	75581-GN8-920	F14	87513-KPH-880ZB	F30	90131-KWB-600	F19	90454-107-002	E18
53203-KWW-A00FMB	F5	77115-KWB-600	F14	87560-KPH-880ZA	F30	90135-KWB-600	F19	90455-GB2-000	E7
5320C-KWW-A00	F5	77200-KWW-A40	F14	88110-KWW-A40	F3	90136-KWB-600	F19	90455-KWW-A01	E7
53214-GN5-900	F6	77201-KWB-600	F14	88120-KWW-A40	F3	90145-GAZ-981	F4	90461-035-003	E16
53216-GN5-830	F6	77214-KWW-A40	F14	89010-KWW-A00	F29	90164-028-000	F26	90461-459-010	E16
53220-GN5-900	F6	77230-KWW-A00	F14	<b>(90000)</b>		90191-KWB-600	F5	90461-KWB-600	E16
<b>(60000)</b>		77234-GN2-000	F14	90002-KWB-600	E2	90201-GCC-000	E2	90463-ML7-000	E4
61100-KWW-A00FMB	F7	77236-GW0-000	F14	90004-GHB-690	E2	90231-087-010	E7	90465-KWB-600	E16
61200-KWW-A00	F7	77240-KTM-691	F14	90017-GCC-000	E1	90231-198-000	E8	90475-KWB-600	E4
63500-KWW-A00	F27	77240-KTM-851	F14	9001A-KWC-900	E1	90231-198-000	E8-1	90485-040-000	E6
64220-KWW-A40	F26	<b>(80000)</b>		90031-KWB-600	E14	90301-KGH-901	F11	90501-GBL-730	E8
64310-KWW-600	F28	8010A-KWW-A40	F23	90035-166-008	F2	90301-KWB-600	F17	90501-GBL-730	E8-1
64320-KWW-A00	F28	80120-KWW-A00	F23	90035-166-008	F2-1	90302-KBP-900	F11	90501-KPH-880	F5
64321-KWW-A00	F28	80124-KPH-700	F14	90050-KWB-601	E8	90302-KBP-900	F12	90501-KST-920	F28
64325-KWW-A00FMB	F15	81110-KVB-930	F27	90050-KWW-A01	E8-1	90302-KBP-900	F12-1	90501-KWW-A00	F5
64325-KWW-A40	F15	81253-KPH-900	F14	90071-171-010	E17	90302-KWW-A00	F5	90502-KPH-900	F14
64330-KWW-A00FMB	F15	81257-KWC-900	F23	90081-035-000	E4	90304-KGH-901	F5	90503-KBP-900	F5
64330-KWW-A40	F15	8125A-KWW-A00	F14	90083-KFL-850	E7	90305-KWW-A00	F7	90503-KBP-900	F7
64340-KWW-A00	F15	81312-KPH-900	F7	90083-KWB-8A0	E4	90306-KGH-901	F10	90505-425-000	F11
64341-KWW-A00	F5	83551-GE2-000	F15	90084-GN5-640	E10	90306-KGH-901	F10-1	90505-KPH-880	F5
64360-KWW-A00	F28	83601-MN5-000	F5	90085-KTC-920	E12	90306-KGH-901	F11	90543-MV9-671	E1
64400-KWW-A00FMB	F28	83601-MN5-000	F24	90102-KGH-900	F4	90306-KGH-901	F21	90544-283-000	F8
64400-KWW-A40	F28	871X0-KWW-A40ZAL	F31	90104-KPH-901	F28	90309-KPH-971	F12	90544-KF0-000	E4
64410-KWW-A00AGM	F15	871X0-KWW-A40ZAR	F31	90105-KGH-901	F10	90309-KPH-971	F12-1	90545-300-000	F4
64410-KWW-A00FMB	F15	871X0-KWW-A40ZBL	F31	90105-KGH-901	F10-1	90401-GB2-000	E7	90601-001-005	E16
64410-KWW-A00SSM	F15	871X0-KWW-A40ZBR	F31	90105-KPH-900	F14	90401-KVY-900	E2	90601-459-000	E16

## INDEKS PART NUMBER

Part Number	Block No.								
90601-KAF-003	F18	92900-08032-1E	E2	94101-10000	F22	95701-08014-07	F14	HB6203	E16
90603-KWW-A01	E7	93101-KWB-8A0	E14	94101-12000	F21	95701-08018-00	F19	HB6203RS	F12
90603-POX-000	E7	93404-06012-00	E2	94103-0570	F3	95701-08025-08	E4	HB6203RS	F12-1
90605-166-720	E7	93500-05010-0A	E9	94103-06000	F24	95701-08032-00	F26	HB6301RS	F12
90605-200-001	E18	93500-05010-0G	F3	94103-08000	F17	95701-08045-00	F17	HB6301RS	F12-1
90605-KWW-A01	E7	93500-05012-0G	F3	94111-10000	F21	95801-10035-00	F22		
90634-KPG-900	F14	93500-05025-0G	F3	94201-16150	F19	95801-10045-00	F6		
90651-MA5-672	F4	93500-05025-0G	F16	94201-20150	F11	95801-10110-08	F26		
90677-KAN-T00	F15	93600-04012-1G	F4	94201-20150	F18	96001-06008-00	F17		
90677-KAN-T00	F23	93891-04012-07	F5	94201-20150	F21	96001-06012-01	F7		
90677-KAN-T00	F27	93891-04016-08	F5	94201-30300	F20	96001-06014-00	F7		
90677-KAN-T00	F28	93892-03012-18	E19	94301-08141	E6	96001-06016-00	E9		
90678-MN5-000	F16-1	93892-04006-08	E13	94301-08141	E10	96001-06016-00	E11		
90701-KFM-900	E1	93892-04010-18	E19	94510-16000	E18	96001-06016-00	F5		
90701-KFM-901	E2	93892-04014-08	E19	95001-55045-40	F13	96001-06016-00	F16-1		
90701-KFM-901	E5	93892-05010-08	E19	95002-02070	F16-1	96001-06016-00	F28		
90703-HC4-001	E14	93892-05016-08	E13	95002-02100	F13	96001-06018-00	F16-1		
90741-003-010	E15	93893-04012-18	F4	95002-02659	E19	96001-06020-00	E11		
90899-422-610	F23	93901-24680	F24	95002-41300-08	F16	96001-06020-00	F28		
91001-KWW-A01	E15	93903-24310	F15	95002-80001	F16	96001-06022-00	E2		
91005-KWB-921	E12	93903-24310	F28	9500B-KWB-920	F16-1	96001-06022-00	E9		
91101-GB2-001	E7	93903-24380	F15	95014-71102	F20	96001-06025-00	E10		
91101-KWW-A01	E7	93903-24380	F23	95014-72102	F20	96001-06025-00	F7		
91202-KRS-971	E6	93903-24481	F5	95014-73100	F18	96001-06030-00	F14		
91204-KWB-601	E16	93903-25310	F2	95015-32001	F18	96001-06032-00	E13		
91208-KWB-601	E14	93903-25310	F2-1	95015-42000	F18	96001-06035-00	E10		
91251-KPH-881	F12	93903-25510	F16	95701-06008-00	F16-1	96001-06040-00	E6		
91251-KPH-881	F12-1	94001-05070-0S	F3	95701-06012-00	E16	96001-06060-00	E14		
91251-KPH-901	F10	94001-06000-0S	F11	95701-06012-00	F13	96001-06075-01	E14		
91251-KPH-901	F10-1	94001-06000-0S	F12	95701-06012-00	F14	96001-06100-00	E2		
91251-KWB-601	F10	94001-06000-0S	F12-1	95701-06012-00	F23	96220-30100	E17		
91251-KWB-601	F10-1	94001-06070-0S	F14	95701-06012-00	F24	98200-30750	F25		
91303-001-000	E6	94001-08000-0S	F11	95701-06014-00	F25	98200-31000	F25		
91303-377-001	E10	94001-08000-0S	F21	95701-06016-00	F25	99101-KSS-088	E19		
91304-GB1-900	E2	94001-10000-0S	F22	95701-06018-00	E4	99103-KPH-0350	E19		
91307-035-001	E6	94002-10000-0S	F20	95701-06018-00	E14				
91309-KEE-630	E13	94021-10000-1S	F22	95701-06018-00	E14				
91356-GM0-003	F8	94030-08000	E6	95701-06020-00	E8	(HB)			
91422-KVB-900	F28	94050-0600	F4	95701-06020-00	E8-1	HB6001	E16		
91509-GE2-760	F5	94050-08000	F17	95701-06020-00	F25	HB6200	E8		
92101-06010	E16	94050-10000	E11	95701-06020-00	F4	HB6200	E8-1		
92101-06020-0A	F18	94050-10000	E11	95701-06022-01	F4	HB6201	E16		
92800-12000	E14	94050-10080	F26	95701-06025-00	F18	HB6201RS	F10-1		
92811-10000	F11	94101-05000	F18	95701-06032-00	F27	HB6201RS	F10		
92812-10000	F21	94101-06000	F19	95701-06035-00	F11	HB6201RS	F12		
		94101-08000	F21	95701-08012-01	F17	HB6201RS	F12-1		
				95701-08012-01	F21				

## INDEKS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
<b>(A)</b>					
ADJUSTER, R. CHAIN ASSY	F11	BODY SET, COCK	E19	BOLT, FLANGE, 6X25	F18
ADJUSTER, R. CHAIN ASSY	F12	BOLT A, BRAKE STOPPER	F11	BOLT, FLANGE, 6X30	F14
ADJUSTER, R. CHAIN ASSY	F12-1	BOLT A, STOPPER ARM	F21	BOLT, FLANGE, 6X32	E2
ARM ASSY., EX. VALVE ROCKER	E3	BOLT, BRAKE DISK, 8X24	F10	BOLT, FLANGE, 6X32	E13
ARM ASSY., IN. VALVE ROCKER	E3	BOLT, BRAKE DISK, 8X24	F10-1	BOLT, FLANGE, 6X32	F27
ARM ASSY., KICK STARTER	F18	BOLT, CLUTCH ADJUSTING	E6	BOLT, FLANGE, 6X35	E10
ARM ASSY., KICK STARTER	F18	BOLT, DRAIN PLUG, 12MM	E14	BOLT, FLANGE, 6X35	F11
ARM COMP., CAM CHAIN TENSIONER	E4	BOLT, FLANGE, 10X110	F26	BOLT, FLANGE, 6X40	E6
ARM COMP., GEARSHIFT	E17	BOLT, FLANGE, 10X35	F22	BOLT, FLANGE, 6X60	E14
ARM COMP., SHIFT DRUM STOPPER	E17	BOLT, FLANGE, 10X45	F6	BOLT, FLANGE, 6X75	E14
ARM, RR. BRAKE	F11	BOLT, FLANGE, 10X50	F5	BOLT, FLANGE, 6X8	F16-1
ARM, RR. BRAKE STOPPER	F21	BOLT, FLANGE, 5X12	E2	BOLT, FLANGE, 6X8	F17
AXLE, FR. WHEEL	F10	BOLT, FLANGE, 6MM	F16	BOLT, FLANGE, 8X12	F17
AXLE, FR. WHEEL	F10-1	BOLT, FLANGE, 6MM	F21	BOLT, FLANGE, 8X12	F21
AXLE, RR. WHEEL	F12	BOLT, FLANGE, 6MM	F23	BOLT, FLANGE, 8X14	F14
AXLE, RR. WHEEL	F12-1	BOLT, FLANGE, 6X10	F4	BOLT, FLANGE, 8X18	F19
		BOLT, FLANGE, 6X100	E2	BOLT, FLANGE, 8X25	E4
		BOLT, FLANGE, 6X12	E16	BOLT, FLANGE, 8X32	F26
		BOLT, FLANGE, 6X12	F7	BOLT, FLANGE, 8X45	F17
		BOLT, FLANGE, 6X12	F13	BOLT, HANDLE LEVER PIVOT	F4
		BOLT, FLANGE, 6X12	F14	BOLT, HEAD COVER	E1
		BOLT, FLANGE, 6X12	F23	BOLT, HEAD COVER ASSY	E1
		BOLT, FLANGE, 6X12	F24	BOLT, HEX., 6X10	E16
		BOLT, FLANGE, 6X14	F7	BOLT, HEX., 6X14	E14
		BOLT, FLANGE, 6X14	F25	BOLT, HEX., 6X20	F18
		BOLT, FLANGE, 6X16	E9	BOLT, KNOCK, 5MM	E4
		BOLT, FLANGE, 6X16	E11	BOLT, KNOCK, 6MM	E17
		BOLT, FLANGE, 6X16	F5	BOLT, OIL, 10X22	F4
		BOLT, FLANGE, 6X16	F16-1	BOLT, PIN	F9
		BOLT, FLANGE, 6X16	F25	BOLT, SEALING, 14MM	E4
		BOLT, FLANGE, 6X16	F28	BOLT, SEAT HINGE	F14
		BOLT, FLANGE, 6X18	E4	BOLT, SOCKET, 5X8	F26
		BOLT, FLANGE, 6X18	E14	BOLT, SOCKET, 5X8	F26
		BOLT, FLANGE, 6X18	F16-1	BOLT, SOCKET, 6X14	E12
		BOLT, FLANGE, 6X20	E8	BOLT, SOCKET, 8MM	F8
		BOLT, FLANGE, 6X20	E8-1	BOLT, SOCKET, 8X16	F19
		BOLT, FLANGE, 6X20	E11	BOLT, SOCKET, 8X32	F19
		BOLT, FLANGE, 6X20	F25	BOLT, SPECIAL FLANGE, 5X16	E8-1
		BOLT, FLANGE, 6X20	F28	BOLT, SPECIAL FLANGE, 5X8	E7
		BOLT, FLANGE, 6X22	E2	BOLT, SPECIAL FLANGE, 6X16	E8
		BOLT, FLANGE, 6X22	E9	BOLT, SPECIAL, 6X30	F14
		BOLT, FLANGE, 6X22	F4	BOLT, STUD, 7X180.5	E14
		BOLT, FLANGE, 6X25	E10	BOLT, STUD, 8X18	F12
		BOLT, FLANGE, 6X25	F7	BOLT, STUD, 8X18	F12-1
<b>(B)</b>					
BALL SET, STEEL, #6X23	F6				
BALL SET, STEEL, #6X29	F6				
BAND (ECU)	F14				
BAND A, AIR CLEANER CONNECTING	F16				
BAND B1, WIRE	F25				
BAR COMP., SIDE STAND	F20				
BAR COMP., STEP	F19				
BAR, L. PILLION STEP SET	F19				
BAR, R. PILLION STEP SET	F19				
BATTERY (GTZ4V)	F14				
BEARING, NEEDLE, 20X26X18.2	E12				
BEARING, RADIAL BALL, 6001	E16				
BEARING, RADIAL BALL, 6200	E8				
BEARING, RADIAL BALL, 6200	E8-1				
BEARING, RADIAL BALL, 6201	E16				
BEARING, RADIAL BALL, 6201U	F10				
BEARING, RADIAL BALL, 6201U	F12				
BEARING, RADIAL BALL, 6201U	F12-1				
BEARING, RADIAL BALL, 6201UU	F10-1				
BEARING, RADIAL BALL, 6203	E16				
BEARING, RADIAL BALL, 6203U	F12				
BEARING, RADIAL BALL, 6203U	F12-1				
BEARING, RADIAL BALL, 63/22	E15				
BEARING, RADIAL BALL, 6301U	F12				
BEARING, RADIAL BALL, 6301U	F12-1				
BODY COMP., FRAME	F26				



## INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
COVER, L. CRANKCASE	E10	DOWEL PIN, SPECIAL, 8X14	E5	GAUGE, OIL LEVEL ASSY	E6
COVER, L. DUMMY	F24	DRUM ASSY, GEAR SHIFT	E17	GEAR COMP., PRIMARY DRIVE	E7
COVER, L. MAIN PIPE SIDE	F28	DUST SEAL, 21X37X7	F10	GEAR COMP., STARTER DRIVEN	E12
COVER, L. MAIN PIPE SIDE *NH1* .... BLACK	F28	DUST SEAL, 21X37X7	F10-1	GEAR COMP., STARTER REDUCTION	E12
COVER, L. RR. BODY	F15	DUST SEAL, 27X40X4.5	F12	GEAR, COUNTERSHAFT FOURTH	E16
COVER, MUFFLER	F17	DUST SEAL, 27X40X4.5	F12-1	GEAR, COUNTERSHAFT LOW (34T)	E16
COVER, OIL FILTER	E7	DUST SEAL, 42X54X7	F10	GEAR, COUNTERSHAFT SECOND	E16
COVER, R. BODY (WL)	F15	DUST SEAL, 42X54X7	F10-1	GEAR, COUNTERSHAFT THIRD (25T)	E16
COVER, R. BODY LOWER	F15	DUST SEAL, BRAKE CAM	F11	GEAR, MAINSHAFT FOURTH (24T)	E16
COVER, R. CENTER SIDE	F15	DUST SEAL, STEERING HEAD	F6	GEAR, MAINSHAFT SECOND (18T)	E16
COVER, R. CENTER SIDE (WL)	F15	<b>(E)</b>		GEAR, MAINSHAFT THIRD (22T)	E16
COVER, R. DUMMY	F24	ELEMENT COMP., AIR CLEANER	F16	GEAR, SPEEDOMETER (19T)	F10
COVER, R. MAIN PIPE SIDE	F28	<b>(F)</b>		GEAR, SPEEDOMETER (19T)	F10-1
COVER, R. MAIN PIPE SIDE *NH1* .... BLACK	F28	FENDER A, FR.	F7	GLASS	F2
COVER, R. RR. BODY	F15	FENDER ASSY, RR.	F23	GLASS	F2-1
COVER, RR. HANDLE SET	F5	FENDER B, FR.	F7	GRIP COMP., THROTTLE	F3
COVER, RR. MAIN PIPE	F28	FILTER COMP., AIR	F16-1	GRIP, L. HANDLE	F3
COVER, SEAT LOCK	F23	FLANGE., FINAL DRIVEN	F12	GROMMET, AIR CLEANER CASE	F15
COVER, TAIL	F15	FLANGE., FINAL DRIVEN	F12-1	GROMMET, SIDE COVER	F5
COVER., AIR CLEANER	F16	FLOAT SET	E19	GROMMET, SIDE COVER	F24
CRANKCASE COMP., L.	E14	FLYWHEEL COMP.	E11	GUARD, WATER	F28
CRANKCASE COMP., R.	E14	FORK ASSY., L. FR. (BLACK)	F8	GUIDE, CLUTCH OUTER	E8
CRANKSHAFT ASSY	E15	FORK ASSY., L. FR. (SILVER)	F8	GUIDE, CLUTCH OUTER	E8-1
CUP, FUEL STRAINER	E19	FORK ASSY., R. FR. (SILVER)	F8	GUIDE, FR. BRAKE CABLE	F7
CUSHION ASSY., RR	F22	FORK ASSY., R. FR. (BLACK)	F8	GUIDE, VALVE (OS)	E2
CUSHION ASSY., RR.	F22	FUEL UNIT	F13	<b>(H)</b>	
CUSHION, C.D.I. UNIT	F25	FUSE, (10A)	F25	HARNESS, WIRE	F25
CYLINDER COMP.	E5	FUSE, (7.5A)	F25	HARNESS, WIRE	F25
CYLINDER SET, MASTER	F4	<b>(G)</b>		HEAD SUB ASSY., CYLINDER	E2
CYLINDER SUB ASSY., FR. BRAKE	F4	GASKET SET	E19	HINGE, SEAT	F14
<b>(D)</b>		GASKET SET	E19	HOLDER, L. PILLION STEP	F19
DAMPER SET, WHEEL	F12	GASKET, AIR FEED PIPE	F16-1	HOLDER, MASTER CYLINDER	F4
DAMPER SET, WHEEL	F12-1	GASKET, CARBURETOR INSULATOR	E2	HOLDER, NEEDLE JET	E19
DIAPHRAGM	F4	GASKET, CYLINDER	E5	HOLDER, R. PILLION STEP	F19
DISK B, CLUTCH FRICTION	E8	GASKET, CYLINDER HEAD	E2	HOOK, MAIN STAND SPRING	F20
DISK, CLUTCH FRICTION	E8	GASKET, EX. PIPE	F17	HORN COMP. (HIGH)	F25
DISK, CLUTCH FRICTION	E8-1	GASKET, FLOAT CHAMBER	E19	HOSE ASSY, BREATHER	F16
DISK, FR. BRAKE	F10	GASKET, HEAD COVER	E1	HOSE COMP., FR. BRAKE	F4
DISK, FR. BRAKE	F10-1	GASKET, L. CRANKCASE COVER	E10	HOUSING, UNDER THROTTLE	F3
DOWEL PIN, 10X14	E14	GASKET, OIL FILTER	E7	HOUSING, UPPER THROTTLE	F3
DOWEL PIN, 8X14	E6	GASKET, OIL FILTER	E7	HUB., FR. WHEEL	F10
DOWEL PIN, 8X14	E10	GASKET, OIL PUMP BODY	E9	HUB., RR. SHIMMER SILVER METALLIC	F12
DOWEL PIN, SPECIAL, 8X14	E1	GASKET, R. CRANKCASE COVER	E6	<b>(I)</b>	
DOWEL PIN, SPECIAL, 8X14	E2			INDICATOR, FR. BRAKE	F11

## INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
INNER COMP., ONE-WAY CLUTCH	E7	NUT, CLIP, 5MM	F27	O-RING, 40.5X3	F12
INSULATOR, CARBURETOR	E2	NUT, CLIP, 5MM	F28	O-RING, 40.5X3	F12-1
<b>(J)</b>		NUT, CLIP, 6MM	F7	O-RING, 8MM	E6
JET, MAIN, #88	E19	NUT, FLANGE, 10MM	E11	OUTER ASSY., PRIMARY CLUTCH	E7
JET, SLOW, #35	E19	NUT, FLANGE, 10MM	F26	OUTER COMP., CLUTCH	E8
JOINT B, BRAKE ARM	F18	NUT, FLANGE, 6MM	F4	OUTER COMP., CLUTCH	E8-1
<b>(K)</b>		NUT, FLANGE, 8MM	F17	<b>(P)</b>	
KEY SET	F26	NUT, FLANGE, 8MM	F17	PACKING	E13
KEY SET	F26	NUT, HEX., 10MM	F20	PACKING	F24
KEY, WOODRUFF, 4MM	E15	NUT, HEX., 10MM	F22	PACKING, BASE	F13
<b>(L)</b>		NUT, HEX., 5MM	F3	PACKING, DRAIN COCK, 12.5X20	E14
LABEL, AIR CLEANER ELEMENT	F30	NUT, HEX., 6MM	F11	PACKING, FUEL FILLER CAP	F13
LABEL, ENGINE STARTER *TWHITE*	F30	NUT, HEX., 6MM	F12	PAD SET, FR.	F9
LABEL, TIRE & DRIVE CHAIN	F30	NUT, HEX., 6MM	F12-1	PANEL COMP., RR. BRAKE	F11
LEVER COMP., CLUTCH	E6	NUT, HEX., 6MM	F14	PEDAL COMP., BRAKE	F18
LEVER SET, COCK	E19	NUT, HEX., 7MM	E2	PEDAL COMP., BRAKE	F18
LEVER, CHOKE	F3	NUT, HEX., 8MM	E6	PEDAL, GEAR CHANGE	F18
LEVER, R. STEERING HANDLE	F4	NUT, HEX., 8MM	F11	PIN	E7
LIGHT ASSY, HEAD	F1	NUT, HEX., 8MM	F21	PIN, GEARSHIFT DRUM	E17
LIGHT ASSY., RR. COMBINATION	F24	NUT, HEX., 8MM	E7	PIN, GUIDE ROLLER	E4
LOCK ASSY., SEAT	F14	NUT, LOCK, 14MM	F11	PIN, HANGER	F9
LOCK ASSY., SEAT	F14	NUT, SPECIAL, 6MM	F12	PIN, PILLION STEP	F19
<b>(M)</b>		NUT, SPECIAL, 6MM	F12	PIN, PISTON	E15
MAINSHAFT (13T)	E16	NUT, SPECIAL, 6MM	F12-1	PIN, SHIFT RETURN SPRING	E17
MARK, DRIVE CAUTION *TWHITE*	F30	NUT, SPRING, 4MM	F5	PIN, SPLIT, 1.6X15	F19
METER COMP., SPEED & FUEL	F2	NUT, STEERING STEM LOCK	F6	PIN, SPLIT, 2.0X15	F11
METER COMP., SPEED & FUEL	F2-1	NUT, U, 10MM	F5	PIN, SPLIT, 2.0X15	F18
MIRROR ASSY., L.	F3	NUT, U, 12MM	F10	PIN, SPLIT, 2.0X15	F21
MIRROR ASSY., R	F3	NUT, U, 12MM	F10-1	PIN, SPLIT, 2.0X15	F20
MOTOR UNIT, STARTER	E13	NUT, U, 12MM	F11	PIN, SPLIT, 3.0X30	F20
MUFFLER ASSY, EX	F17	NUT, U, 12MM	F21	PINION, KICK STARTER (23T)	E18
MUFFLER COMP., EX.	F17	NUT, U, 6MM	F11	PIPE COMP., AIR FEED	F16-1
<b>(N)</b>		NUT, U, 8MM	F12-1	PIPE COMP., FR. FORK	F8
NEEDLE SET, JET	E19	NUT, U, 8MM	F12	PIPE COMP., INLET	E2
NUT B, BRAKE ROD ADJUSTING	F18	<b>(O)</b>		PIPE COMP., STEERING HANDLE	F5
NUT B, LOCK, 14MM	E8	OIL SEAL, 11.6X22X7	E14	PIPE, SEAT	F8
NUT B, LOCK, 14MM	E8-1	OIL SEAL, 13.8X24X5	E6	PISTON	F9
NUT SET, SQUARE	E19	OIL SEAL, 17X29X5	E16	PISTON (0.25)	E15
NUT, ADJUST	F1	O-RING	E13	PISTON (0.50)	E15
NUT, CAP, 10MM	F22	O-RING	F8	PISTON (0.75)	E15
NUT, CLIP, 4MM	F5	O-RING, 1.3X4.3	E19	PISTON (1.00)	E15
NUT, CLIP, 5MM	F15	O-RING, 13.8X2.5	E10	PISTON (STD.)	E15
NUT, CLIP, 5MM	F23	O-RING, 18X3	E6	PLATE ASSY., REFLECTING	F2
		O-RING, 2.4X25	E19	PLATE COMP., CLUTCH LIFTER	E6
		O-RING, 25X2.4	E2	PLATE COMP., PRIMARY DRIVE	E7
				PLATE SET, VALVE	E19

## INDEKS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
PLATE, CLUTCH	E8	RING, BACK UP	F8	SCREW, PAN, 5X11.5	F5
PLATE, CLUTCH	E8-1	RING, HANDLE WEIGHT SNAP	F5	SCREW, PAN, 5X12	F3
PLATE, CLUTCH LIFTER	E8	RING, OIL SEAL STOPPER	F8	SCREW, PAN, 5X25	F3
PLATE, CLUTCH LIFTER	E8-1	RING, PISTON	F8	SCREW, PAN, 5X25	F16
PLATE, CLUTCH LIFTER CAM	E6	RING, STOPPER	F8	SCREW, SIDE STAND PIVOT	F20
PLATE, CLUTCH PRESSURE	E8	RING, STOPPER	F9	SCREW, SPECIAL PAN, 5MM	F28
PLATE, CLUTCH PRESSURE	E8-1	ROD COMP., RR. BRAKE	F18	SCREW, SPECIAL, 5MM	F28
PLATE, CLUTCH SIDE	E7	ROLLER COMP., CAM CHAIN GUIDE	E4	SCREW, TAPPING, 4X12	F15
PLATE, DIAPHRAGM	F4	ROLLER, 3X10	E17	SCREW, TAPPING, 4X12	F15
PLATE, DRUM LOCK	E16	ROLLER, 5X8	E7	SCREW, TAPPING, 4X12	F23
PLATE, FIXING	E16	ROLLER, 5X8 (EXEDY)	E7	SCREW, TAPPING, 4X12	F28
PLATE, GEARSHIFT DRUM STOPPER	E17	ROLLER, CAM CHAIN TENSIONER	E4	SCREW, TAPPING, 4X14	F2
PLATE, OIL SEPARATOR	E8	ROTOR, OIL PUMP INNER	E9	SCREW, TAPPING, 4X14	F2-1
PLATE, OIL SEPARATOR	E8-1	ROTOR, OIL PUMP OUTER	E9	SCREW, TAPPING, 4X16	F5
PLATE, OIL STOPPER	E14	RUBBER A, HANDLE WEIGHT	F5	SCREW, TAPPING, 4X25	F24
PLATE, PILLION STEP SIDE	F19	RUBBER A, TAILLIGHT MOUNTING	F24	SCREW, TAPPING, 5X16	F2
PLATE, PLUNGER	E2	RUBBER B, SEAT SETTING	F14	SCREW, TAPPING, 5X16	F2-1
PLUG, CONE TYPE	F23	RUBBER, CLUTCH DAMPER	E7	SCREW, TAPPING, 5X25	F16
PLUG, SPARK (CPR6EA-9S)	E2	RUBBER, CUSHION	F5	SCREW, U-LOCK FLAT, 6X12	F26
PLUG, SPARK (U20EPR9S)	E2	RUBBER, FR. TOP COVER	F27	SCREW, VISOR SPECIAL SETTING	F15
PROTECTOR	F4	RUBBER, FR. TOP COVER	F26	SCREW, VISOR SPECIAL SETTING	F27
PUMP ASSY., OIL	E9	RUBBER, FR. TOP COVER	F28	SCREW-WASHER, 3X12	E19
PUSH ROD ASSY., TENSIONER	E4	RUBBER, HANDLE MOUNTING	F5	SCREW-WASHER, 3X22	F2
		RUBBER, LUGGAGE BOX MOUNTING	F14	SCREW-WASHER, 3X22	F2-1
		RUBBER, MOUNTING	E1	SCREW-WASHER, 4X10	E19
		RUBBER, MUFFLER MOUNTING	F17	SCREW-WASHER, 4X12	F4
		RUBBER, PROTECTOR	F23	SCREW-WASHER, 4X12	F5
		RUBBER, SEAL	F14	SCREW-WASHER, 4X14	E19
		RUBBER, STAND STOPPER	F20	SCREW-WASHER, 4X16	F5
		RUBBER, STEP	F19	SCREW-WASHER, 4X6	E13
		RUBBER, STOPPER ARM	F11	SCREW-WASHER, 5X10	E19
		RUBBER, TAILLIGHT BRACKET	F25	SCREW-WASHER, 5X16	E13
				SCREW-WASHER, SPECIAL, 4X10	F2
				SCREW-WASHER, SPECIAL, 4X10	F2-1
				SEAL SET, PISTON	F9
				SEAL, AIR CLEANER CASE	F16
				SEAL, AIR CLEANER COVER	F16
				SEAL, DUST	F8
				SEAL, VALVE STEM (ARAI)	E3
				SEAT ASSY., DOUBLE	F14
				SEAT B, SPRING	F8
				SEAT, CLUTCH SPRING	E8
				SEAT, VALVE SPRING	E3
				SET RING, 20MM	E18
				SET RING, 23MM	E7

**(R)**

**(S)**

## INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
SET RING, 23MM (EXEDY)	E7	SPRING, STOP SWITCH	F18	SUSPENSION, WINKER RELAY	F2-1
SHAFT, EX. ROCKER ARM	E3	SPRING, SUB GEAR	E7	SWINGARM SET, RR.	F21
SHAFT, REDUCTION GEAR	E12	SPRING, SUB GEAR (EXEDY)	E7	SWITCH ASSY., COMBINATION & LOCK	F26
SHAFT, ROCKER ARM	E3	SPRING, VALVE	E3	SWITCH ASSY., FR. STOP	F4
SHAFT, RR. BRAKE PIVOT	F20	SPRING, VALVE	E3	SWITCH ASSY., RR. STOP	F18
SHOE SET, BRAKE	F11	SPROCKET COMP., CAM CHAIN	E4	SWITCH COMP., COMBINATION &	F26
SLEEVE, RR. WHEEL	F12	SPROCKET COMP., FINAL DRIVEN	F12	SWITCH UNIT, DIMMER	F3
SLEEVE, RR. WHEEL	F12-1	SPROCKET COMP., FINAL DRIVEN	F12-1	SWITCH UNIT, HORN	F3
SLIDER, CHAIN	F21	SPROCKET, CAM (32T)	E4	SWITCH UNIT, LIGHTING	F3
SOCKET COMP.	F2	SPROCKET, DRIVE (14T)	E16	SWITCH UNIT, STARTER	F3
SOCKET COMP.	F2-1	STAND COMP., MAIN	F20	SWITCH UNIT, WINKER	F3
SPEEDOMETER ASSY.	F2-1	STATOR COMP.	E11		
SPEEDOMETER ASSY.	F2	STAY SET, FR. TOP COVER	F26	<b>(T)</b>	
SPINDLE COMP., GEARSHIFT	E17	STAY SET, LOWER COVER	F28	TANK COMP., FUEL	F13
SPINDLE, CAM CHAIN GUIDE	E4	STAY, AIR SUCTION VALVE	F16-1	THREAD COMP., STEERING HEAD	F6
SPINDLE, KICK STARTER	E18	STEM COMP, STEERING	F6	TIRE, FR. (70/90-17 M/C 38P)	F10-1
SPOKE SET	F12	STOPPER, CABLE	F3	TIRE, FR. (70/90-17 M/C 38P)	F10
SPOKE SET, 11X183.5	F10	STRAINER COMP., FUEL	F13	TIRE, RR.	F12
SPRING A, BRAKE ROD	F18	STRIPE, L. BLACK (PHANTOM BLACK)	F31	TIRE, RR.	F12-1
SPRING A, MAIN STAND	F20	STRIPE, L. BLACK BLUE (SONIC BLUE)	F31	TIRE, RR.	F12
SPRING A, SIDE STAND	F20	STRIPE, L. BLACK RED (METEOR RED)	F31	TIRE, RR.	F12-1
SPRING ASSY., RR. BRAKE RETURN	F18	STRIPE, L. BLACK SILVER (AFFINITY BLACK)	F31-1	TOOL SET	F29
SPRING, BRAKE SHOE	F11	STRIPE, L. BLACK SILVER (RAZOR SILVER)	F31	TOP SET	E19
SPRING, CAM CHAIN TENSIONER	E4	STRIPE, L. BROWN SILVER (GUSTO BROWN)	F31-1	TUBE A, AI ASSY	F16-1
SPRING, CAM PLATE SIDE	E6	STRIPE, L. GREY BLACK (ANCHOR GREY)	F31	TUBE ASSY, 3.5X110	F16-1
SPRING, CARBON BRUSH	E13	STRIPE, L. RED BLACK (LAVA RED)	F31	TUBE B, AI ASSY	F16-1
SPRING, CHANGE FRICTION	E16	STRIPE, L. RED SILVER (INFERNO RED)	F31-1	TUBE C, AIR SUCTION VALVE	F16-1
SPRING, CHANGE SWITCH CONTACT	E17	STRIPE, L. SILVER BLACK (STARLIGHT SILVER)	F31	TUBE FUEL ASSY, 5.3X580	F13
SPRING, CLUTCH	E8	STRIPE, R. BLACK (PHANTOM BLACK)	F31	TUBE, AIR CLEANER CONNECTING	F16
SPRING, CLUTCH	E8-1	STRIPE, R. BLACK BLUE (SONIC BLUE)	F31	TUBE, AIR CLEANER DRAIN	F16
SPRING, FR. FORK	F8	STRIPE, R. BLACK RED (METEOR RED)	F31	TUBE, AIR VENT	E19
SPRING, FRICTION STARTER GEAR	E18	STRIPE, R. BLACK SILVER (AFFINITY BLACK)	F31-1	TUBE, FUEL, 5.3X45	F13
SPRING, GEARSHIFT ARM	E17	STRIPE, R. BLACK SILVER (RAZOR SILVER)	F31	TUBE, OVERFLOW	E19
SPRING, GEARSHIFT DRUM STOPPER	E17	STRIPE, R. BROWN SILVER (GUSTO BROWN)	F31-1	TUBE, TIRE	F12-1
SPRING, GEARSHIFT RETURN	E17	STRIPE, R. GREY BLACK (ANCHOR GREY)	F31	TUBE, TIRE	F12
SPRING, KICK RETURN	E18	STRIPE, R. RED BLACK (LAVA RED)	F31	TUBE, TIRE (70/90-17 M/C)	F10
SPRING, LOCK KEY SETTING	F14	STRIPE, R. RED SILVER (INFERNO RED)	F31-1	TUBE, TIRE (70/90-17 M/C)	F10-1
SPRING, ONE WAY RETAINER	E7	STRIPE, R. SILVER BLACK (STARLIGHT SILVER)	F31	TUBE, VINYL, 11X15X35	F16
SPRING, PAD	F9	SUB CORD, STARTER MOTOR	E13		
SPRING, PRIMARY CLUTC (EXEDY)	E7	SUB GEAR (17T)	E7	<b>(V)</b>	
SPRING, PRIMARY CLUTCH	E7	SUB GEAR (17T) (EXEDY)	E7	VALVE ASSY., AIR SUCTION	F16-1
SPRING, REBOUND	F8	SUB HARNESS, BATTERY	F25	VALVE COMP., FLOAT	E19
SPRING, SEAT LOCK	F14	SUSPENSION, STARTER RELAY	F25	VALVE SET, AIR CUT	E19
SPRING, SIDE FRICTION	E7	SUSPENSION, WINKER RELAY	F2	VALVE SET, THROTTLE	E19
				VALVE, EX.	E3
				VALVE, IN.	E3



**PT Astra Honda Motor**  
**TECHNICAL SERVICE DIVISION**