
Infiniti
Group 1/2/3

Model: 7003

9 - 36 kg

USER MANUAL

1

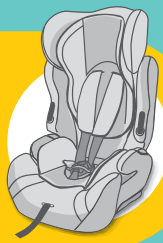


2



3



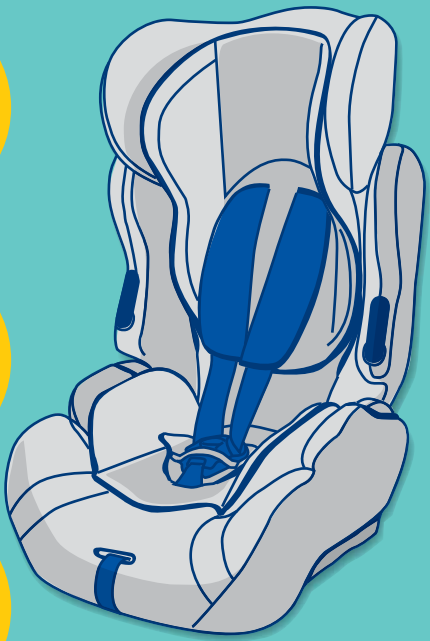

Universal Forward-Facing Restraint System suitable for children with body weight 9 to 36 kg. Approximately for ages 9 months to 12 years.

ADULT ASSEMBLY REQUIRED.

CONTENTS

IMPORTANT **1**

WARNING & SAFETY INSTRUCTIONS **2**

PART LIST & LEGEND **4**

ASSEMBLY INSTRUCTIONS **5**

Group 1 . . . . . **6**
To Loosen the Harness 7
To Adjust the Heights of the Harness Straps 8
To Fit Child Car Seat to the Vehicle Seat 9
To Secure Child 11
To Tighten the Harness 12

Group 2 . . . . . **13**
To Remove the 5-Point Harness 14
To Secure Child 15
To Adjust the Headrest 16

Group 3 . . . . . **17**
To Remove the Backrest 18
To Secure Child 19

CARE & MAINTENANCE **20**
About Harness Buckle 20
To Clean the Harness Buckle 20
To Clean the Plastic Parts 20
Washing Instructions of Fabric Cover 21
To Install the 5-Point Harness 21
To Remove the Fabric Cover 24

WARRANTY **25**
Product Registration

IMPORTANT

Please read all the information contained in this instruction manual carefully before using and during installation of the child car seat.

For future reference, store this instruction manual in the pouch located at the back of the child car seat.

This child car seat has been approved according to the latest European safety standards ECE R44/04 and is suitable for children weighing within the following range per each Group:

Group	Body Weight of Child	Age*
1	9-18 kg	Approx. 9 months - 3 years
2	15-25 kg	Approx. 3 years - 6 years
3	22-36 kg	Approx. 6 years - 12 years

* The age column listed above is for reference only. ALWAYS refer to the body weight of child as the guideline to the correct grouping of car seat to use.

This child car seat applies the UNIVERSAL child restraint system. It is approved in accordance to ECE Regulation R44/04, for general use in vehicles. This child car seat will fit most, but not all vehicle seats.

A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a UNIVERSAL child restraint for this age group.

This child restraint system has been classified as UNIVERSAL under more stringent conditions than those which applied to earlier designs which do not carry this notice.

This child car seat must only be used in a **FORWARD-FACING SEAT** equipped with a **3-POINT SAFETY BELT** that meets the UN/ECE R16 or other equivalent standard.

Before purchase, check to ensure that the child car seat fits properly in your car, as different types of restraint system is used in cars. In case of doubt, please contact your retailer or manufacturer of the restraint system.

WARNING & SAFETY INSTRUCTIONS


Use this child car seat as a FORWARD-FACING SEAT only.

Use this child car seat with a 3-POINT SAFETY BELT.

NEVER USE A 2-POINT SAFETY BELT, as this could cause death or injury in the event of an emergency stop or collision.

Children are safer when properly restrained in vehicle REAR SEAT, rather than vehicle front seat. (according to accident statistics)

DO NOT use this child car seat on vehicle front seat if it is equipped with airbags.

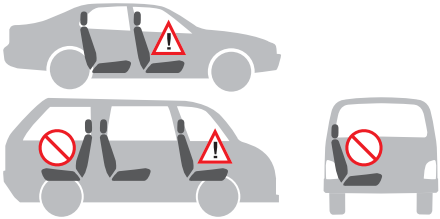

The safety of your child car seat can only be ensured if all instructions in this user manual have been followed correctly and if it has been installed accordingly.

The correct fitting of the seat belt is of vital importance for the safety of your child. Note that seat belt routings are different for each group. NEVER use belt routing other than specified.

DO NOT make any alterations to this child car seat, as this could affect part or overall safety of the seat.

DO NOT leave children alone in a car, even for a short time.

DO NOT replace the fabric cover with any other than the one recommended by manufacturer.

DO NOT use the child car seat without its fabric cover, as the cover contributes to the safety of the seat.

DO NOT use second-hand child car seat.

The Cozi Beebi Infiniti may only be used as a child car seat only and it is not intended for home use.

Instruct your child NOT to play with the belt buckle.

Take short breaks on longer journey to allow your child some freedom of movement.

All foldable rear seats must be locked. The backrests of the vehicle seats must always be in an upright position.

Once the car seat is fitted, make sure no parts can become trapped in the doors or the seat mechanism.

The hard items and the plastic parts of the child car seat must be located and installed properly during everyday use of the vehicle, to avoid being trapped by a movable seat or by a vehicle door.

Make sure that all heavy or sharp-edged objects that could cause injury in case of an accident are secured properly.

Always ensure that the child car seat is secured, even when not in use. A loose child car seat can cause injury to other passengers in the car during emergency stop or accident.

Make sure that the straps holding the restraint to the vehicle should be tight and any straps restraining the child should fit snugly to the child's body. Check to make sure that the straps are not twisted.

All passengers in the vehicle must have their seat belts fastened. Any passenger in the vehicle who are not wearing seat belts may pose danger to the child in the car seat.

All passengers should be aware of how to release the child from the car seat in case of danger or an accident. The car seat should be replaced immediately if it has been subjected to violent shocks in an accident.


Protect the child car seat against intense sunlight when it is not in use. The metal and plastic parts of the car seat may turn extremely hot under the sun and this may burn your child.


It is unavoidable that the use of child car seat may cause indentations or wear marks to certain types of vehicle seat covers.


Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint.

Make sure that the vehicle seatbelt buckle is not resting on the child seat frame. If the seat belt buckle lies across the frame of the child car seat, it will be under pressure and may spring open in an impact. Only seatbelt webbing should be in contact with the frame of the child car seat.

PART LIST & LEGEND

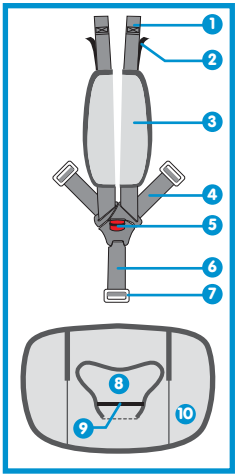


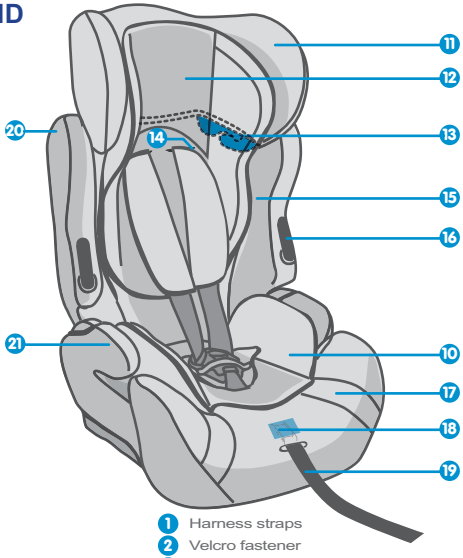

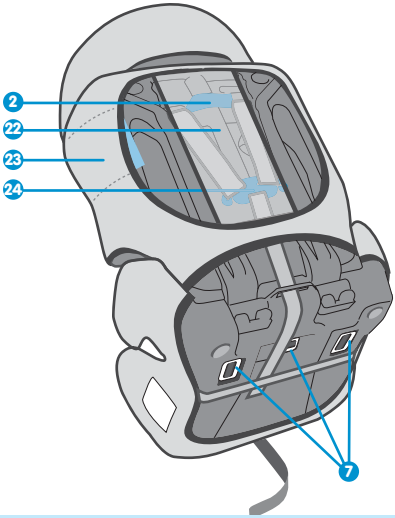


1. Harness straps
2. Velcro fastener
3. Shoulder pads
4. Hip straps
5. Buckle
6. Crotch strap
7. Metal retainer
8. Cushion flap
9. Band
10. Support seat cushion
11. Headrest
12. Support backrest cushion
13. Red belt holder
14. Belt slot
15. Backrest
16. Red belt guide
17. Seat / booster seat
18. Harness adjuster lever
19. Harness adjuster strap
20. Wing
21. Armrest
22. Protective flap
23. Pouch (for user manual)
24. Harness yoke


ASSEMBLY INSTRUCTIONS

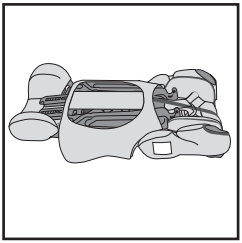


Remove the product from the package.

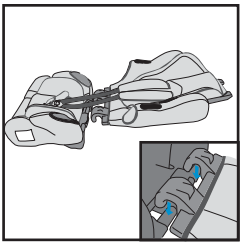

With the parts lying on flat, join the hooks from lower part of backrest to the seat.

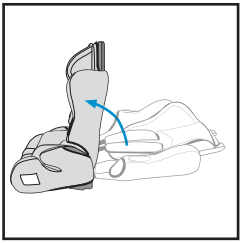


Rotate backrest along hinge of seat.

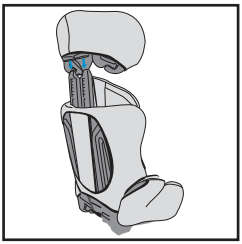

Insert the headrest to the backrest.


Group 1

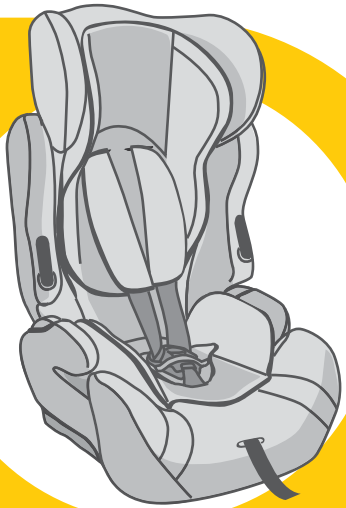

9 kg
to
18 kg


For children with body weight from 9 - 18 kg
5-Point Harness with support backrest & seat cushion

To Loosen the Harness

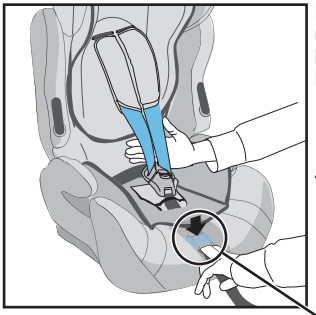


Press the harness adjuster lever (located underneath the cover) and pull both harness straps forward at the same time. **DO NOT** pull from the shoulder pads.

Tip: Insert a finger through the hole of the fabric cover to press.

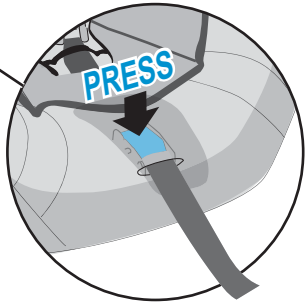


To Adjust the Heights of the Harness Straps (Group 1)

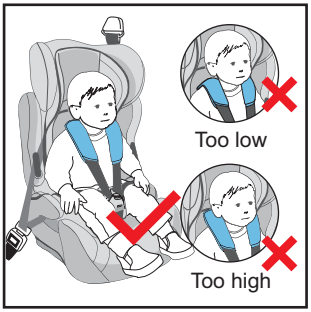

Harness straps should be correctly adjusted for optimal protection to your child.


The harness straps of this child car seat can be adjusted into 3 different height positions, depending on the size of the child. The harness straps must lie at your child's shoulder level or slightly above.

Loosen the harness straps as far as possible. (See "To Loosen the Harness" section. Page 7)

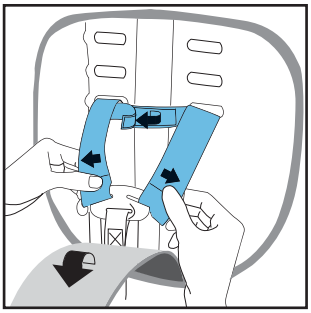

Open the protective flap at the back of the seat. Detach the Velcro fastener and release the harness straps from the harness yoke.

Do not twist the harness straps.

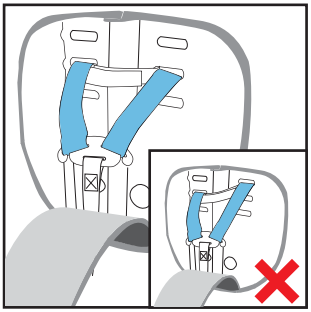


Insert both the Velcro fastener and the harness straps into slots for the correct height position.

Make sure the Velcro pads are fastened together tightly, and the harness straps are returned to the harness yoke. Make sure that both straps are in the same height level.

Return and close the protective flap.


Make sure that the headrest adjuster is in its lowest position.

To Fit Child Car Seat to the Vehicle Seat (Group 1)

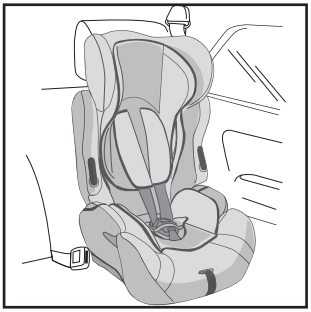



Do not twist the belt in any way during the whole installation procedure.

Place the child car seat **facing forward** on the vehicle rear seat.

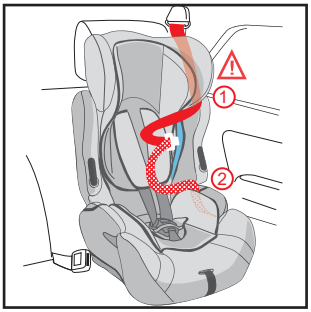


Pull out the whole length of the passenger seat belt such that the diagonal belt is threaded through the gap between headrest and wing of the backseat ① while the lap belt is threaded under the armrest ②.

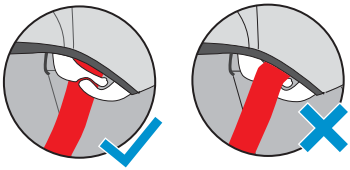

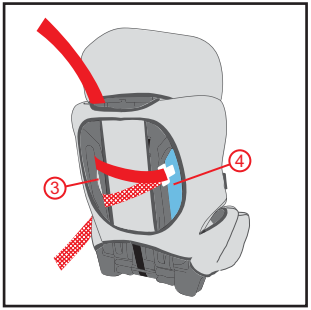


Insert both passenger belts with the seat buckle through the hole of the backrest ③ from one side, enclosing the back and pull out the belts with the seat buckle from the other hole ④ to the front.

Make sure the belts run on top of the protective flap of fabric cover.

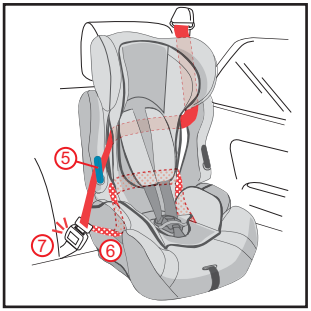

While holding the buckle, tuck in the diagonal belt to the red belt guide ⑤ attached on the other side and thread the lap belt **UNDER** the armrest ⑥ from the same side. Then, fasten the seat belt until you hear an audible “CLICK” ⑦.

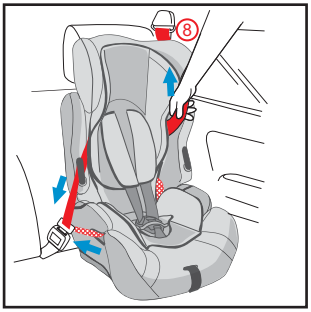

Push the car seat back against the vehicle backrest and simultaneously pull the diagonal belt upwards to tighten ⑧.


Remove any slack in the seat belt.

Check that the child car seat is correctly installed :


The diagonal belt MUST NOT be inserted through the red belt holder on the headrest. The red belt holder is DESIGNED to be used during the next stage – Group 2. For Group 1, it should be passing under the red belt holder and positioned in the gap between the headrest and the wing of backrest.

- The child car seat is securely fastened.
- The vehicle seat belt is tightened up and not twisted.
- The diagonal seat belt runs **between** the headrest and the wing on one side and threaded in the **red belt guide** on the buckle side.
- The lap belt runs **UNDER** the armrest of both sides.


To Secure Child (Group 1)

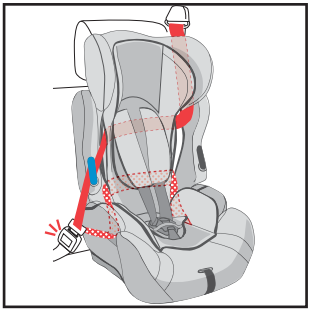

Check that the harness straps are in the correct height position. If not, see “To Adjust the Heights of the Harness Straps” section. (Page 8)

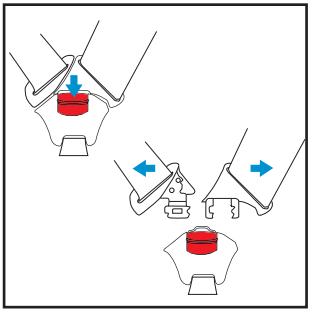


Press red release button on buckle and pull tongues out of buckle.

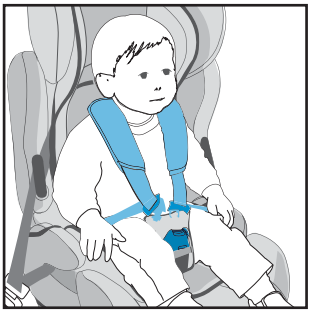

Place your child into the child car seat. Pull the harness straps over the shoulders of your child.

Do not twist or interchange the harness straps.

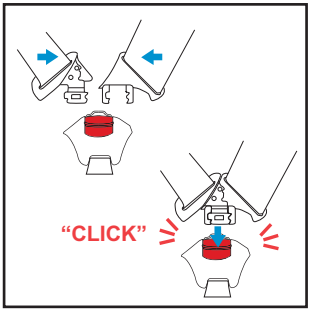


Join the buckle tongues together and insert into the buckle until you hear an audible "CLICK".

Remove any slack by tightening the harness. (See next section "To Tighten the Harness")

Make sure that the hip straps lie as low as possible over your child's hips.

To Tighten the Harness (Group 1)

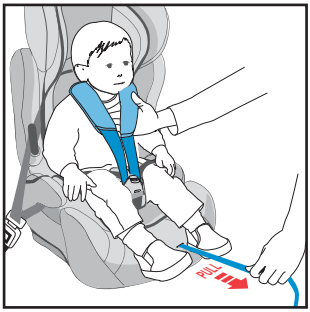

Pull harness straps to remove any slack from the lap section.


Pull the harness adjuster strap until the harness lies flat and close to the child's body.

Important
Check that the harness fits snugly to your child, so that only one or two fingers can fit between the harness and the child's body.

Check that your child is properly secured:

- The straps of the child car seat are fitted snugly.
- The buckle tongues are engaged in the harness buckle.
- The harness straps are adjusted correctly and not twisted.
- The hip straps lie as low as possible over your child's hips.

Group 2

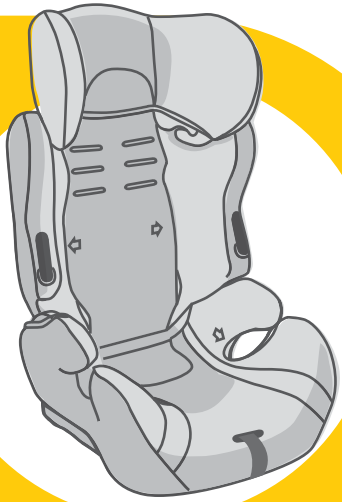


15 kg
to
25 kg

For children with body weight from 15 - 25 kg
With backrest and booster seat

Convert to Group 2 child car seat only when your child exceeded the maximum weight limit

To Remove the 5-Point Harness (Group 2)

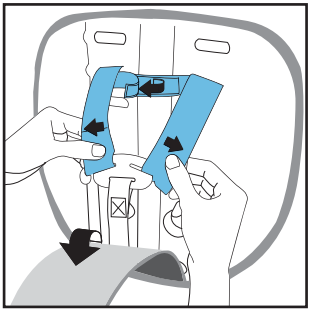


Release the child car seat from the passenger seat belt. Flip over to the back side of the child car seat.

Open the protective flap at the back of seat. Detach the Velcro fastener and release the harness straps from the harness yoke.

Pull these out of the belt slots and release the support backrest cushion from the backrest of the child car seat.

Return and close the protective flap.

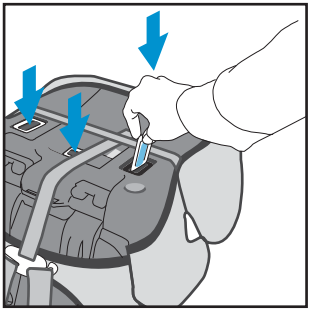

Turn the child car seat over and locate the three metal retainers attached to opposite ends of the crotch strap and hip straps.

Turn the metal retainers so that the short side will pass through the slots to the front. Release all the three metal retainers to detach the crotch strap and hip straps and remove the support seat cushion from the child car seat.




Pull the whole length of harness adjuster strap to tighten. Fold the strap underneath the base.

Store away all dismantled component including the whole set of harness buckle and the cushions. It is obligatory to reinstall them should the car seat need to be re-used as Group 1.

To reinstall, follow the instructions described above in reverse order.

To Secure Child (Group 2)

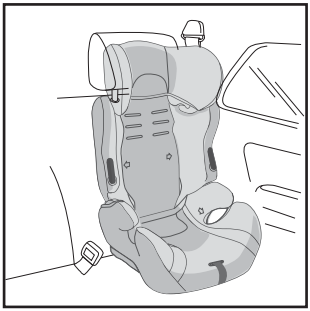



Position the child car seat inside the vehicle rear seat and place the child in the child car seat.



Fasten with the vehicle 3-Point passenger seat belt by first looping the diagonal belt inside the red belt holder located on the lower part of the headrest.

Make sure that the belt is fully looped **inside** this hole and that the belt is not twisted in any way.

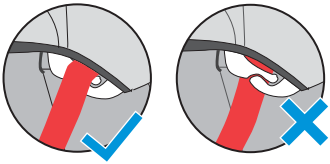

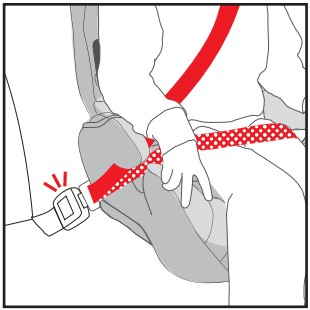


While holding the buckle, pull the diagonal belt over the shoulder of your child, and thread this **under** the armrest of the buckle side. Then thread the lap belt **under** both armrests.

Fasten the seat belt until you hear an audible “CLICK”. Pull the belts tight.

DO NOT twist the seat belt in any way and remove any slack in the harness.

To Adjust the Headrest (Group 2)

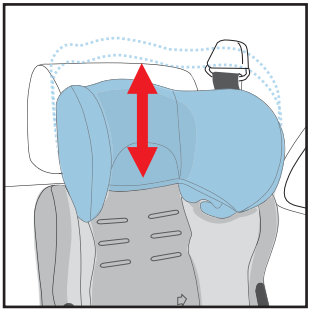


Slide the headrest up or down to the correct position according to the size of your child.



Check that the child is properly secured:

- The diagonal belt is looped **INSIDE** the red belt holder of the headrest on one side and runs **UNDER** the armrest on the buckle side.
- The lap belt runs **UNDER** both armrests.
- The seat belt is tightened up and not twisted.
- The diagonal belt is placed in the middle of the child's shoulder.
- The lap belt should go over the pelvic region, not the stomach.
- The top of the child's head is not higher than the child car seat.

Group 3

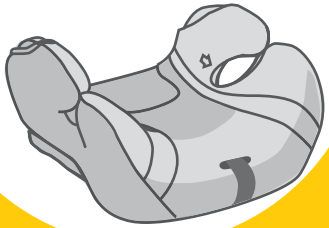


22 kg
to
36 kg

For children with body weight from 22 – 36 kg
Only booster seat


Convert to Group 3 child car seat only when your child exceeded the maximum weight limit, or the top of their head is higher than maximum height of the headrest.

To Remove the Backrest (Group 3)

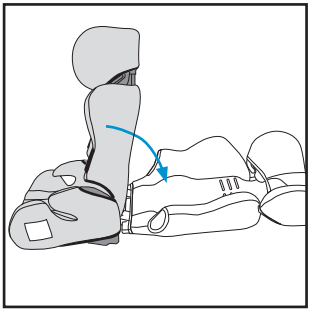

Unfasten the passenger seat belt and remove the child car seat.

Fold down and lay flat the backrest.

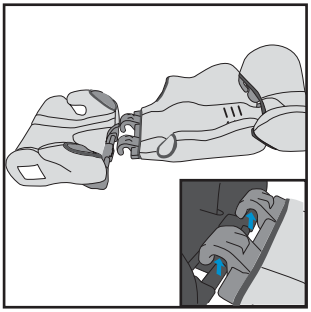

Release the backrest piece from the hinge area to remove.

Store away all dismantled components, as it is obligatory to reinstall them should the car seat need to be re-used as Group 2.


To reinstall, follow the instructions described above in reverse order.

To Secure Child (Group 3)



Place the booster seat on the vehicle passenger seat ensuring it is firmly touching against the vehicle seat.

Place your child on the booster seat.

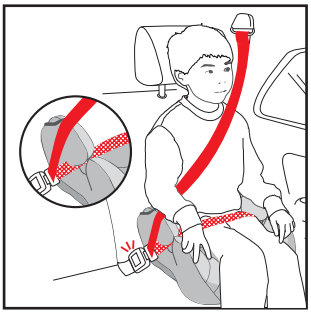

Fasten with the vehicle 3-Point passenger seat belt with the diagonal belt resting on the shoulder of the child and then thread the diagonal belt **over** the armrest on the buckle side.

While holding the buckle, thread the lap belt **under** both armrests.

Then, fasten the seat belt until you hear an audible “CLICK”. Pull the belts tight.

DO NOT twist the belt in any way and remove any slack in harness.

Check that the child car seat is correctly installed.

- The diagonal seat belt should not go too much over the shoulder and it should rest over the shoulder, not the neck.
- The diagonal belt runs **OVER** the armrest on the buckle side.
- The lap belt runs **UNDER** both armrests.
- The lap belt should go over the pelvic region, not the stomach.
- The seat belt is tightened up and not twisted.

CARE & MAINTENANCE

Check regularly to make sure that all important parts are in good working condition. Check that all mechanical parts are in normal operation.

Do not use the child car seat if there are any damages found. Any worn out parts should be replaced before use.

Do not lubricate any parts of the child car seat.

To prevent damage or breakage of this child car seat, make sure it does not become trapped or loaded by heavy baggage, reclinable seats or slamming doors.

To prevent damage to the cover, do not remove the logo or instruction labels sewn to the cover.

Store the child car seat in a safe place when it is not in use. Do not store it near any direct sunlight or direct heat source.

Avoid placing heavy objects on top of the child car seat.

About Harness Buckle

If you encounter any situations below, this could be malfunction of the buckle caused by dirt and dust:

- The buckle tongues no longer lock into the buckle.
- There is no audible “CLICK” when locking the buckle.
- The buckle tongues are difficult to insert into the buckle.
- The buckle tongues are ejected slowly during unfastening of the buckle.
- The buckle is difficult to unfasten unless extreme force is applied.

To Clean the Harness Buckle

Brush away any loose debris using soft bristled brush.
Clean with sponge using warm water and mild soap. Towel dry.
Do not use solvents, harsh cleaning agents or bleach.

To Clean the Plastic Parts

The plastic parts can be cleaned with sponge using soapy water. Do not use solvents or harsh cleaning agents.


Washing Instructions of Fabric Cover




Hand wash using cold water and mild soap.
DO NOT: dry clean, bleach, tumble dry, iron.
Wash inside out.
Line dry away from direct heat or sunlight.

DO NOT use the car seat without the fabric upholstery being in place.

To Install the 5-Point Harness

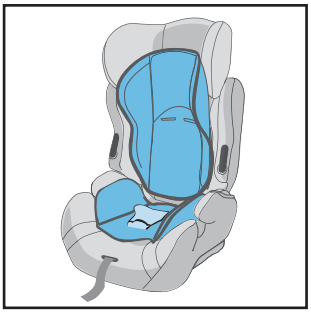

Position the support seat cushion to the seat and the support back cushion to the backrest. Align the holes on cushion to the child car seat.

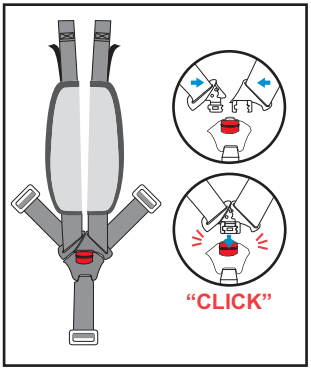


Prepare the 5-Point harness according to this diagram.

Join the buckle tongues and insert to the buckle. Lock until you hear an audible "CLICK".


Straighten all the straps. Make sure they are not twisted.

Loop the shoulder pads through the harness straps. Check that the curve side of the shoulder pads are placed facing outwards with the fabric sides facing up.

Both Velcro fastener straps should be in upright position.

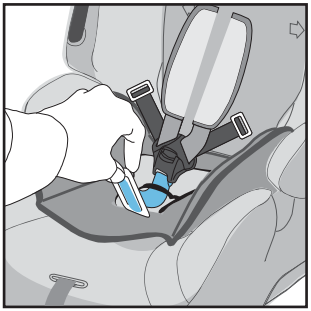


Loop the metal retainer from the crotch strap through the band on the cushion flap and insert with the short side into the holes on the support seat cushion and seat cover, then into the slot of the seat all the way through the bottom. Turn the metal retainer in place to lock in position.

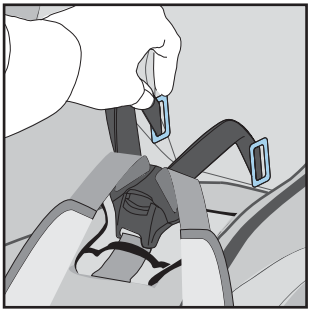


Lift the sides of the support seat cushion and insert the other two metal retainers attached to the hip straps into the holes of the seat cover and the slots on the seat all the way through the bottom. Turn the metal retainers in place to lock in position.

Check that all the three metal retainers are LOCKED in position by pulling the hip straps and the vertical strap of the harness.

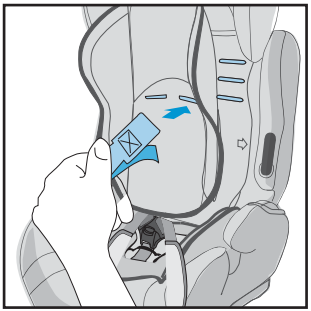


Open the protective flap at the back of seat.

Insert both harness straps with its Velcro fasteners to the holes on the support backrest cushion and through the correct belt slots on the backrest. Make sure that both straps are inserted in the same level.

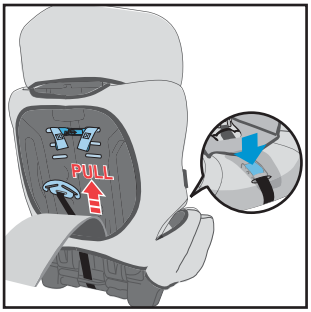


Attach the Velcro fasteners from the back.

Press the harness adjuster level and pull up the harness yoke to loosen.

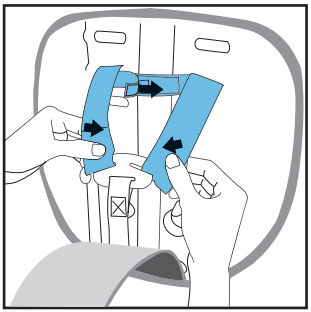

Loop both ends of the harness straps to the harness yoke. Check that these are secured firmly.

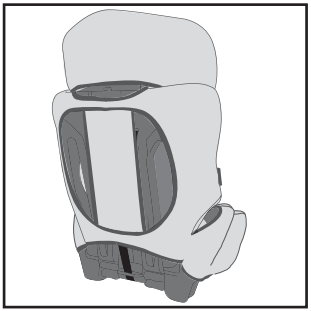


Return and close the protective flap.

DO NOT twist the harness straps.

Please read and follow instructions thoroughly before re-using as Group 1 car seat. (Pages 6-12)


To Remove the Fabic Cover

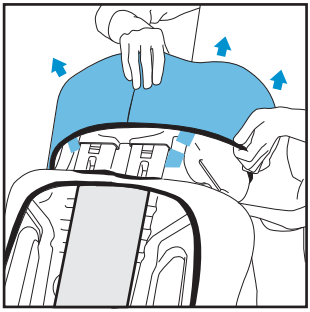

Adjust the headrest to a higher position.

Detach the Velcro fasteners near the base of the headrest.


Remove the headrest cover.

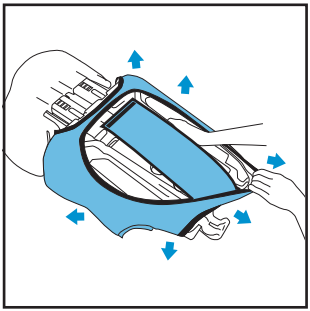

Detach the backrest from the seat in order to remove the cover.

Turn the child car seat to the back. Open the protection flap and detach the Velcro fastener near the top of the backrest.

From the lower edge of the fabric cover, pull and remove from the hinge side. Then, pull the whole cover upward through the headrest side to remove.

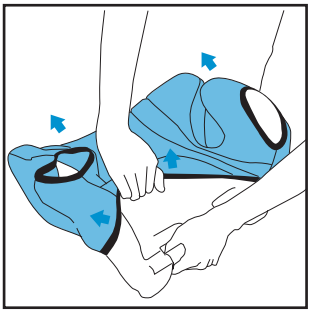

Pull and remove the cover of the seat.

To re-fit the fabric cover, reverse the instructions on “To Remove the Fabric Cover”.

WARRANTY

Our products are covered under warranty to the original purchaser for a period of 24 months for plastic parts, etc. and 12 months for fabric components and other parts susceptible to wear and tear. The warranty period is effective from the date of original purchase and proof of original purchase is required.

It is normal for fabric to discolour from sunlight and to show wear and tear after a long period of use even when used normally. The warranty period for the fabric and other parts susceptible to wear, such as harnesses, is therefore limited to a period of 12 months as of date of purchase.

This warranty is extended only to the original retail purchaser, it is non-transferable and applies only for non-commercial use.

Warranty does not cover when ECE quality mark and approval number have been damaged or removed.

If you have recently purchased this product and found it to be defective in anyway, please contact our Customer Service for assistance.

This LIMITED WARRANTY does not cover any personal injuries, damage to, or, failure of the product or any other losses due to accident, abuse, misuse, alteration, neglect, normal wear and tear, improper assembly, improper fit, improper loads (including passenger weight over the design limits), improper maintenance, unauthorized repairs or use of unauthorized replacement parts not designed for the product.

In no event will Grow'n Up Limited, or the retailer selling this product, be liable for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

PRODUCT REGISTRATION

In order to properly register your child restraint system, you will need to provide the model number, batch number and date of manufacture. This information is permanent located at bottom of the booster seat.

Please go to **www.cozibeebi.com** to register your product.

Model: 7003

E4

ECE R44/04
04443913



CUSTOMER SERVICE

USA and Canada:
service@grow-n-up.com
Toll free hotline:
1-888-GNU-9898

Other countries:
support@grow-n-up.com
www.cozibeebi.com

Cozi Beebi ® is a trademark of Grow'n Up Ltd. © 2010 Grow'n Up Ltd. All rights reserved.
Tsim Sha Tsui East,
Kowloon, Hong Kong.

MADE IN CHINA.