33cc Petrol Backpack Blower

WEBPB33

1938147001

Operator's Manual & Parts List

Please read & understand this manual, paying particular attention to the safety instructions, before use.
The manufacturer reserves the right to change the product specification and livery according to continues product improvements.

3 07 2017

CONTENTS

SAFETY INSTRUCTIONS
IMPORTANT INFORMATION
SPECIFICATIONS
COMPONENTS
ASSEMBLY
OPERATION
MAINTENANCE, CLEANING & STORAGE
TROUBLE SHOOTING
PARTS DIAGRAM & LIST
DECLARATION OF CONFORMITY
WARRANTY

If you require any assistance with regards to the contents or operation of your machine, please contact us:
Tel: 01793 333212
Email: customerservice@handydistribution.co.uk
Monday to Friday 8.00am to 5.30pm (excl. Bank Holidays)

SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

Model	**WEBPB33**
Product No.	**1938147001**
Displacement (cc)	32.6
Blower Max Speed	179mph (288KM/h)
Rated Power(KW/r/min)	0.9/8000
Idle Speed	2800+/-200RPM
Carburetor style	Diaphragm
Fuel:2 Stroke Oil Ratio	25:1 (Mineral Oil)
Fuel Tank Capacity (L)	0.65
Air Volume (m^3/s)	0.2

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

IMPORTANT INFORMATION

WARNING

Read this instruction manual carefully before using the machine. Make sure that you are familiar with the controls. Following these instructions can reduce the risk of fire, shock and personal injury.

WARNING

Under no circumstances may the design of the machine be modified without permission of the manufacturer. Always use original accessories. Non-authorised modifications and/or accessories can result in serious personal injury or the death of the operator or others.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the blades or guards are correctly positioned.

DESIGNED FOR DOMESTIC USE ONLY.

The Webb Backpack Blower is designed for use in private gardens, whose annual use does not generally exceed 50 hours, but not in public facilities, parks or sports grounds and not for agricultural or forestry use.

Compliance with the manual supplied by the manufacturer is a prerequisite for the proper usage of the machine. The operating manual contains servicing & maintenance instructions as well as directions for use.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

SAFETY INSTRUCTIONS

Read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

	Read & understand the operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.		This graphic and when accompanied by **WARNING** or **DANGER,** calls attention to actions which could lead to **SERIOUS INJURY**
	Always wear safety eye & ear protection		**WARNING** Never modify a machine in any way. Incorrect use of a machine can cause **SERIOUS OR FATAL PERSONAL INJURY**
	Always wear safety gloves to protect your hands.		It is advisable to wear a face mask to stop debris from entering your body.
	Petrol is an extremely flammable fuel. Do not smoke or flame near the fuel. Do not fuel a hot engine, fuel may spill and cause a fire.		Hot Surface. Running engines produce heat. Engine parts, especially the exhaust, become extremely hot. Severe thermal burns can occur on contact.
	Risk of Carbon Monoxide Poisoning. Ensure working area is correctly ventilated.		Beware of flying objects. Keep all bystanders, especially children & pets, at least 15m away from the operating area
	Always **TURN OFF THE ENGINE**, ensuring the tool has stopped, before cleaning, removing or adjusting the machine tubes.		Do not expose to rain or damp condition
 **WARNING**	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.	 **DANGER**	Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.
CAUTION	Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.	 **CAUTION**	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
	**This product must not be treated as household waste**. Instead it shall be handed over to the applicable collection point for the recycling of electrical & electronic equipment. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or shop where you purchased the product.		Conforms to all relevant EU Directives


STAY ALERT

Do not operate the machine while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly. Do not use this machine when you are tired or distracted from the job at hand. Be aware of what you are doing at all times. Use common sense.

AVOID DANGEROUS CONDITIONS
Make sure there is adequate surrounding workspace. Cluttered areas invite injuries.
Keep your work area clean with sufficient light. Keep area around the machine clear of obstructions, stones, sticks, wires and other debris or foreign bodies which could cause damage to the machine.
DO NOT SMOKE, whilst using the machine.

INSPECT YOUR MACHINE
Check all bolts, nuts, and screws for tightness before each use, especially those securing guards and drive mechanisms. Vibration during use may cause these to loosen. Replace damaged, missing or failed parts before using. Warning labels carry important information. Replace any missing or damaged warning labels.

DRESS PROPERLY
Do not wear loose clothing, gloves, scarfs, neckties or jewellery (rings, wrist watches), which can be caught in moving parts.
ALWAYS wear protective eye and ear wear. Appropriate safety gardening gloves are also recommended.
Wear protective hair covering to contain long hair, preventing it from getting caught in machinery.
DO NOT use whilst barefoot or wearing open toed footwear. Non-slip heavy duty footwear recommended.

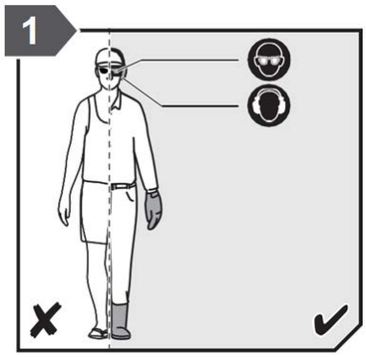

KEEP BYSTANDERS AND CHILDREN AWAY
Keep unauthorised persons or animals a minimum distance of 15 metres away from the mower. Do not allow children to handle, use, or climb on the machine. If approached, turn off machine immediately.

DO NOT OVERREACH
Keep proper footing and balance at all times, particularly if using on slopes. The machine should not be used on steep slopes and always be sure of footing.

AVOID INJURY FROM UNEXPECTED ACCIDENT
Keep hands out of the way of moving parts, particularly the engine and rotating cutting tool.

DO NOT FORCE TOOL
Always work within the rated capacity. Do not use the machine for a purpose for which it was not intended. Always use the correct handles and shoulder straps provided with the machine.

MAINTAIN YOUR MACHINE WITH CARE
Clean the machine immediately after use. Keep the machine clean to ensure it operates to its full and safest performance. When maintaining this machine, only the manufacturer's original replacement parts should be used. The use of non-original manufacturer parts may invalidate your warranty.

STORE IDLE EQUIPMENT
When not in use, the machine should be stored in a dry location. Keep the machine away from children and others not qualified to use it. **DO NOT STORE FUEL IN THE MACHINE**, fuel over 30 days old can become stale and if used, damage the carburetor, which is not covered by the manufacturer's warranty.

COMPONENTS



1. Power Unit	2. Blow Pipe A
3. Blow Pipe B	4. Blow Pipe C
5. Blow Pipe D	6. On/Off Switches
7. Hose	8. Clips x2

ASSEMBLY

Remove the machine and contents from the carton. Be sure the carton is empty before discarding.
If you require any assistance with regards to the contents of the lawnmower contact us:
Tel: 01793 333212
Email: customerservice@webblawnmowers.co.uk
Hours: Monday to Friday 8.30am – 5.30pm (excl. Bank Holidays)


ATTACHING THE TUBES



- Attach the tubes as per the above image.
- The tubes fit to one another, by locating the securing lug and twisting the tube until secure.

ADJUSTING THE CONTROL HANDLE

- Put the unit on your back.
- Loosen the clamp screw.
- Slide the control handle along the pleated hose to the most comfortable position.
- Retighten the clamp screw.

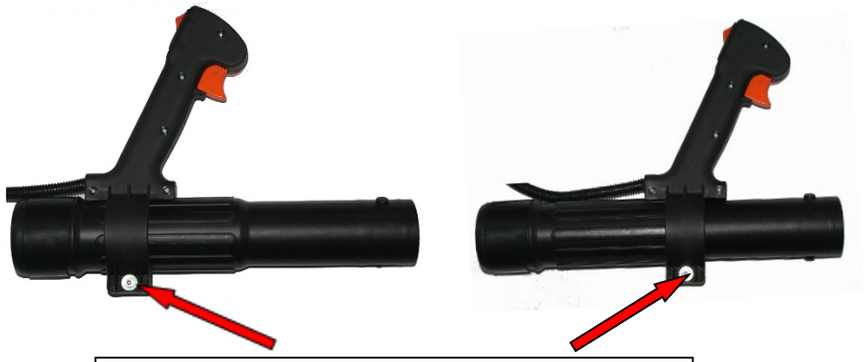

Slide the control handle to chosen position

ADJUSTING THE HARNESS STRAPS

- Pull the end of the straps downward to tighten the harness.



ADJUSTER

- Lift the tabs of the two sliding adjusters
- Adjust the straps so that the back plate is held firmly and comfortably against your back.

OPERATION

DANGER

DANGER ZONE - WITHIN 15 METRES OF USER
RISK ZONE - GREATER THAN 15 METRES OF USER
All model Blowers can throw small stones, metal or small objects as well as material. Do not allow anyone to enter the operating DANGER ZONE with you. The danger zone is an area 15 metres in radius.
Insist that persons in the RISK ZONE beyond the danger zone wear eye protection from thrown objects. If the unit must be used where there are unprotected people, operate at a low throttle speed to reduce the risk of thrown objects. Turn the machine off, if approached by any bystander, child or animal.

GENERAL USE

WARNING

Prior to using the machine, ensure all hardware (bolts, screws & nuts) are securely tightened.

- Operate the trigger with your right hand.
- The trigger increases and decreases the power of the engine to the attachment, increasing the revolution/reciprocation of the blow fan.

WORKING PLAN

- Blow material to a safe collection point.
- Limit the amount of time the product is used continuously to a maximum of 40 minutes per session.
- Leave the machine to rest between sessions for between 10-20 minutes.
- Total amount of work performed per day with the machine, should be limited to 120 minutes maximum.
- Continuous use of the machine can cause "Repetitive Stress Injury (RSI)". If you feel discomfort, redness or swelling of your hands and fingers or any other body part, consult your doctor.
- Check local regulations for sound level & hours of operation constraints.
- Never transport (in a vehicle) the machine, whilst the engine is running.

USING THE BLOWER

- Always be aware of the strength and direction of the air stream.
- Never direct the blower towards period or animals.

FUEL & OIL MIXTURE



Fuel & its vapors are very flammable. Do not use or fuel the machine near a flame, sparks or while smoking. Allow the engine to cool for more than 2 minutes, before re-fueling. Never fuel the machine with the engine running. Fuel the engine at least 3 metres away from your work area. Always fuel your machine outdoors.

- Use good quality unleaded petrol, which contains NO ETHANOL or METHANOL. Use branded 90 octane or higher unleaded petrol, known to be of good quality.
- **Fuel which is older than 30 days old can become stale and cause acid & gum deposits in the fuel system or essential carburetor components. This could result in starting issues which would not be covered by your manufacturer's warranty.**
- Only use 2-stroke air cooled engine oil. DO NOT USE automotive or marine oil.
- Poor quality petrol or engine oil may damage the engine, sealing rings, hoses/pipes and the fuel tank.
- It is recommended that you use a Fuel Mixing Bottle, to ensure the correct fuel mixture is used with your machine. We recommend Handy Parts item HP-120. The fuel mixture should be shaken prior to entering the machine fuel tank.
- Mix only the quantity you require to complete your specific task.

FUEL MIXTURE RATIO - 25:1 (UNLEADED PETROL 25:1 2-STROKE MINERAL OIL)
IF USING SYNTHETIC OR SEMI SYNTHETIC OIL, CONSULT THE OIL MANUFACTURERS INSTRUCTIONS

25:1 FUEL MIXTURE RATIO

Unleaded Petrol – litre	Two-Stroke Mineral Oil - ml
1	40
2	80
3	120
4	160
5	200

- Unscrew the machine fuel cap slowly and fill the fuel tank with your fuel mixture to a maximum of 80% capacity. This will allow for fuel tank expansion.
- Fasten the fuel cap tightly, being careful not to cross-thread. This will also prevent loosening through vibration during use.
- Wipe away any spillage, with an appropriate material.
- If the machine has continued leaks, the product should not be started. Never use the machine with damaged ignition cable or spark plug cap, as there is a risk of sparks.


IMPORTANT
Ensure that any stored petrol/oil mixture is clearly marked in a separate appropriate canister for a maximum of 4-6 weeks.
To keep fuel fresh, we recommend you use *Handy Parts – Sure Start Garden Machinery Fuel Additive* which is available in 250ml bottles, for 25 litres of fuel.

- ✓ **Helps makes machines easier to start**
- ✓ **Extends shelf life of petrol up to 2 years**
- ✓ **Keeps carburetor & engine clean**
- ✓ **Reduces emissions & increases fuel economy**

If the machine is not going to be used for a long period, drain the mixture from the fuel tank, start the engine and drain the carburetor of any remaining fuel. (See Maintenance for further instruction)
Dispose of any unwanted 2-stroke mixture at an authorised recycling point.


ENGINE STARTING & STOPPING PROCEDURE


- Place the machine onto a flat, firm surface.
- Keep the machine clear of any surrounding objects

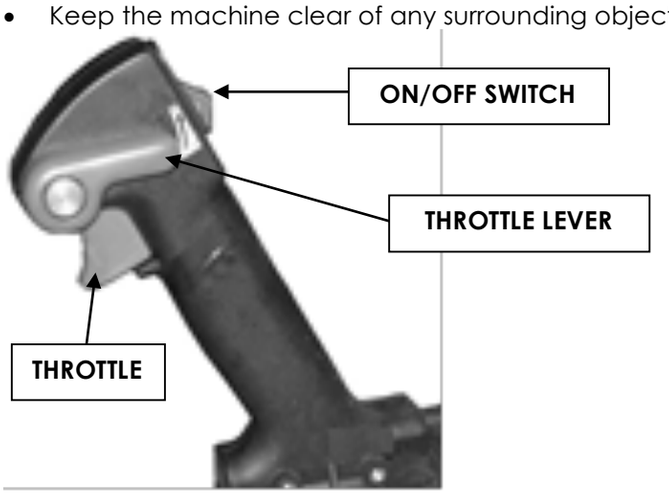

STARTING A COLD ENGINE

1. Place the machine onto a flat, firm surface.
2. Keep the machine clear of any surrounding objects
3. Move the ON/OFF Switch to ON (Uppermost position).
4. Move the Throttle Switch upwards to the Run position
5. Give a gentle push on the primer pump repeatedly (7-10 times) until fuel comes into the primer bulb.

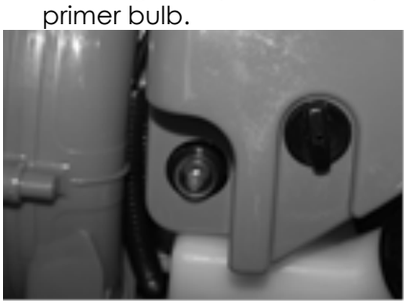

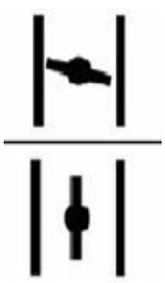

Choke Closed
Cold Start
Position

Choke Open
Warm Start or
Run Position

6. Close the choke
7. Whilst holding the machine down with your left hand, away from the engine, pull the engine recoil starter rope vigorously, until the engine false starts.

(DO NOT LET THE RECOIL STARTER ROPE RETRACT BY ITSELF, FEED THE ROPE BACK INTO THE HOUSING)

8. Open the choke lever (excessive cranking with choke lever up will cause the engine to flood, making it difficult to start.)
9. Pull starter handle until engine starts.
10. When the engine starts, move the Throttle Switch to the Idle position, so the engine settles to the idle speed.
11. Allow engine to warm up for a few minutes before using.

STARTING A WARM ENGINE

If the fuel tank was run dry on previous operation, follow steps 3-7 of cold start procedure.

1. Move the ON/OFF Switch to ON (Uppermost position).
2. Place the Throttle Lever in the Idle position.
3. Whilst holding the machine down with your left hand, away from the engine, pull the engine recoil starter rope vigorously, until the engine starts.

STOPPING THE ENGINE

1. Move the ON/OFF Switch to OFF (Lowest position).

IF THE ENGINE DOES NOT START

1. Repeat the appropriate starting procedures for "warm" or "cold" engine. If the engine still will not start, follow the "Starting a Flooded Engine" procedure (below).

STARTING A FLOODED ENGINE

If you do not open the choke quickly enough once the engine fires, the engine will stop.

1. Set the ON/OFF switch to OFF.
2. Remove the spark plug cap.





3. Unscrew and dry the spark plug
4. Pull the starter rope several times to clear the combustion chamber.
5. Refit the spark plug and reconnect the spark plug cap
6. Move the ON/OFF switch to ON.
7. Open the choke even if the engine is cold
8. Now start the engine

STOPPING THE ENGINE

1. Move the ON/OFF Switch to OFF (Lowest position).

IMPORTANT

ENGINE RUNNING IN

A new machine should not be running at high speed. This avoids unnecessary high loads during the run-in period. As all moving parts should be bedded in during the run-in period. The friction resistances in the engine are greater during this period. The engine develops its maximum power after about 5 to 15 tank fillings.

DURING OPERATION

After a long period of full-throttle operation, allow the engine to run for a while at idle speed so that the heat in the engine can be dissipated by flow of cooling air. This protects engine-mounted components (ignition, carburetor etc.) from thermal overload.

MAINTENANCE, CLEANING & STORAGE

WARNING

Improper maintenance & storage of the machine may void your warranty. Keep the machine clean for better and safer performance.

MAINTENANCE

Before each use, check all nuts & bolts to be sure they are sufficiently tightened.
We recommend only manufacturer original parts are used when maintaining this machine. Failure to do so could invalidate your manufacturer's warranty.
The engine must be switched off, with the spark plug cap removed, before the machine is unassembled, cleaned, serviced or maintained.

ADJUSTING CARBURETOR

Do not adjust carburetor unless necessary. If you have trouble with the carburetor, see your dealer. Improper adjustment may cause engine damage and void warranty.

SPARK PLUG

Check the Spark Plug after every 10-15 hours of use.

- Remove the Spark Plug cap.
- Remove the Spark Plug by turning it anti-clockwise with a Spark Plug Spanner.
- Clean & adjust the electrode gap to 0.6-0.7mm
- If the Spark Plug is visibly damaged, worn or has completed over 100 operating hours, replace immediately.
- Install the new/cleaned Spark Plug to finger tightness, fully tighten with a spanner.

CLEANING


Keep your machine clean.

Thoroughly clean the machine at the end of each use, paying particular attention to cuttings in and around the guard and cutting tool.

AIR FILTER

Accumulated dust in the air filter will reduce engine efficiency, increase fuel consumption and allow abrasive particles to pass in the engine. Remove & clean the air filter regularly to ensure optimum performance.

- Remove the air filter cover, by releasing the securing winged screw from the front of the cover.

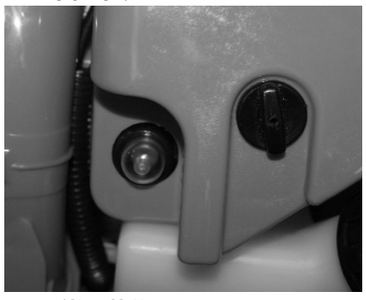

- Lift off the cover.
- Remove the sponge air filter from the housing.
- Tap the filter to remove light surface dust.
- Heavy deposits should be washed out of the Air Filter in soapy water. Allow the filter to dry completely.

FUEL FILTER

- The fuel tank is fitted with a filter. It is situated at the free end of fuel pipe and can be picked out through the fuel filler neck, with a piece of hooked wire or similar.



- Check the fuel filter periodically. Do not allow dust to enter into the fuel tank. A clogged filter will cause difficulty in starting the engine or abnormalities in engine performance.
- When the filter is dirty, replace the filter.
- When the inside of the fuel tank is dirty, it can be cleaned by rinsing the tank out with petrol.

BLOWER TUBES

- It is advisable to remove the Blower tubes from the machine regularly for cleaning.
- Use Soapy water to remove any dirt or grime.

STORAGE

- For years of trouble free service, make sure the machine is clean and dry before storing.
- Before storing, clean the machine thoroughly.
- Store indoors or in a safe, locked protected area during severe weather & winter months.
- **DO NOT STORE** in an enclosed area, where fuel vapors can reach an open hot flame.
- **DO NOT STORE** fuel in the machine. Ensure fuel is removed from the fuel tank and carburetor.
- If storing for an extended period, inspect, clean and repair the machine if necessary. Remove all fuel from the fuel tank. Start the engine, this will remove all fuel from the carburetor and fuel lines. Remove the spark plug, pour a small quantity of 2-stroke oil into the spark plug hole of the cylinder and re-seat spark plug. Store in a clean, dry, dust free area.

DO NOT STORE FUEL FOR LONGER THAN 30 DAYS. FUEL CAN BECOME STALE AND CAUSE DAMAGE TO THE ENGINE CARBURETOR, WHICH IS NOT COVERED BY THE MACHINES MANUFACTURER'S WARRANTY.

TROUBLE SHOOTING

Failures such as a difficulty in starting the engine, irregularity in functions & abnormality in performance can normally be prevented, if careful attention is paid to all operating instructions & maintenance procedures.


Should the engine not function correctly, check the following?

- That the fuel system is in good condition and fuel is flowing to the engine.
- The ignition system is in good condition and the spark plug, sparks correctly.
- Compression of the engine is adequate.

FAILURE TO START

- Correctly follow the starting procedure, not setting the choke lever or priming the engine can cause the engine to not start.
- Dispose of fuel from the tank, particularly if over 30 days old.
- Ensure that fuel is fresh and clean.
- Check fuel filter to ensure it is clean. (Replace filter if necessary).
- Make sure air filter elements are clean.
- Install a new, properly gapped spark plug.
- When there is serious trouble with the unit, do not try to repair it yourself, but have your local approved service dealer inspect it for you.

PARTS DIAGRAM – WEBPB33 ENGINE (1938147001)

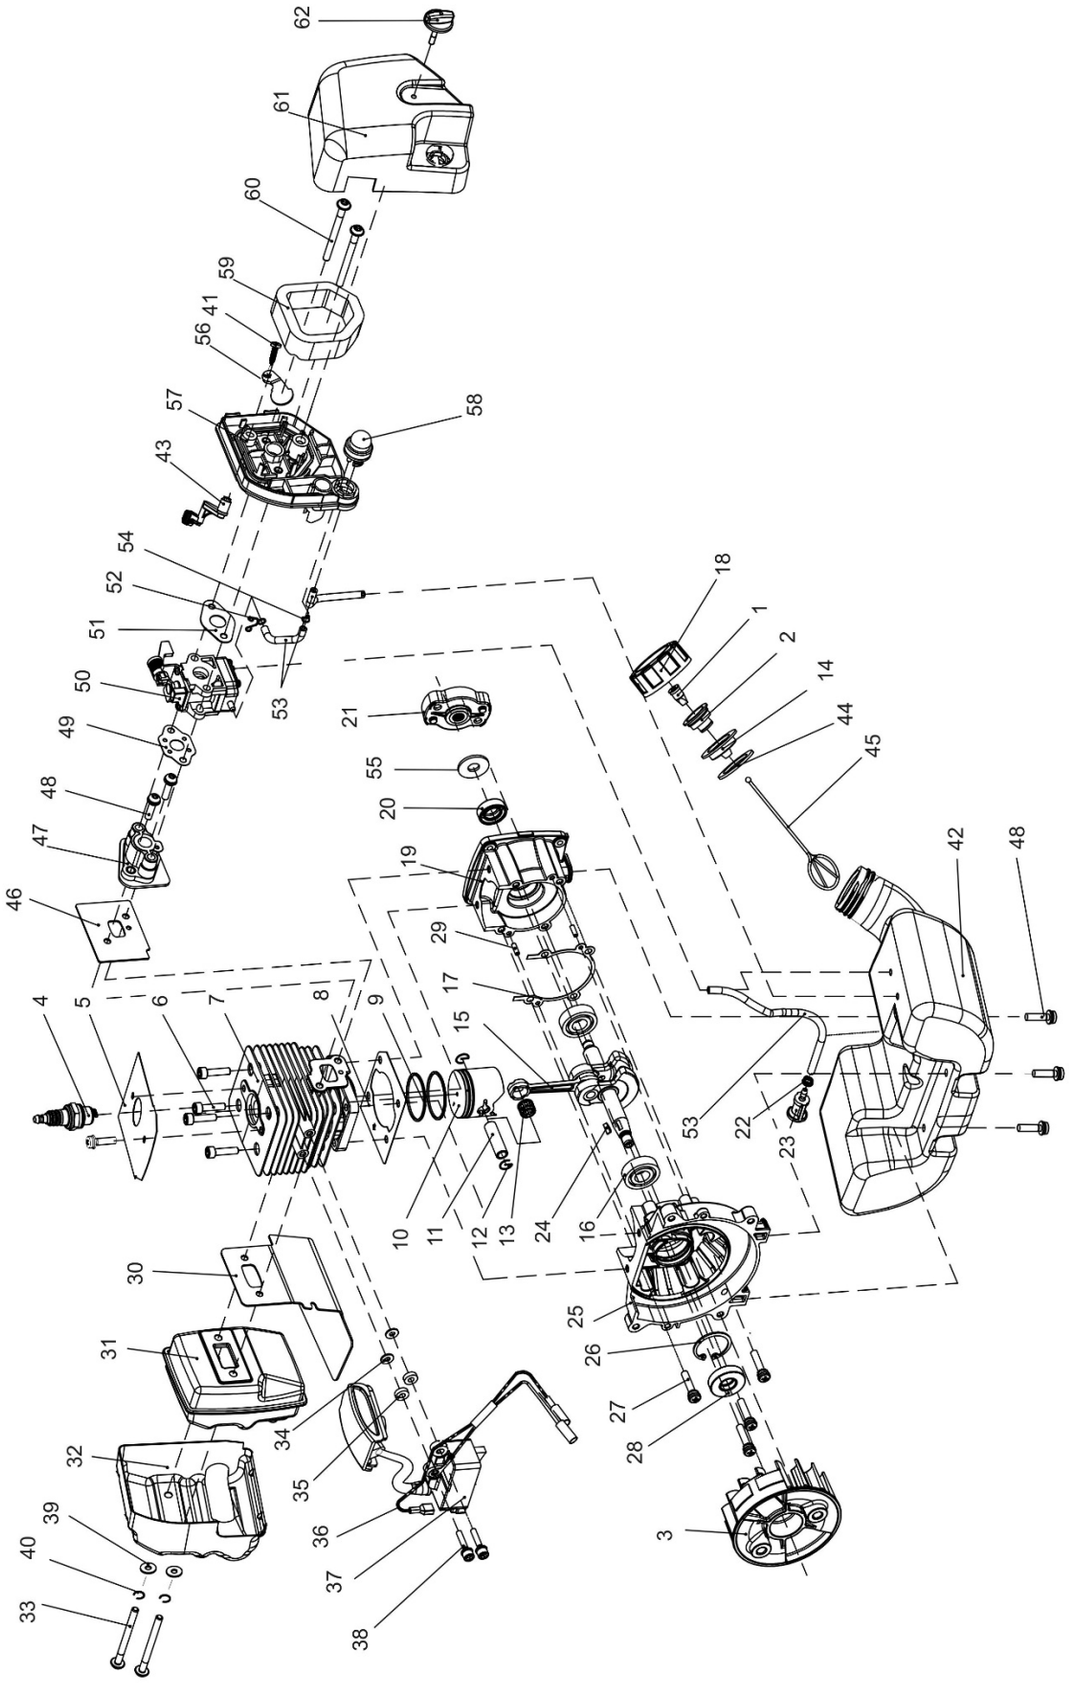


PARTS LIST – WEBPB33 ENGINE (1938147001)

Item No	Part No.	Description	Qty
1	SAXX02080040010	Fuel Cap Valve	1
2	SAXX70030060006	Valve Holder	1
3	SAXX02050030102	Flywheel	1
4		Spark Plug RCJ6Y	1
5	SAXX02020160189	Heat Shield	1
6	WE03010010061	Bolt M5x20	4
7	SAXX70070130002	Cylinder	1
8	SAXX02070010029	Cylinder Gasket	1
9	SAXX02020020017	Piston Ring	2
10	SAXX02010020023	Piston	1
11	SAXX02020010022	Piston Pin	1
12	SAXX02020030005	Snap Ring	2
13	SAXX03090020014	Needle Bearing	1
14	SAXX70030180065	Stopper Holder	1
15	SAXX02020120032	Crankshaft	1
16	WE03090010028	Bearing 6001/P53	2
17	SAXX02070010128	Crankcase Gasket	1
18	SAXX70030060032	Fuel Tank Cap	1
19	SAXX70070050004	Rear Crankcase	1
20	WE03100010009	Oil Seal 12x22x7	1
21	SAXX02050100005	Recoil Pulley Assembly	1
22	SAXX02020040038	Pipe Clip	1
23	WE02050120002	Fuel Filter	1
24	SAXX03070010003	Woodruff Key	1
25	SAXX70070050003	Front Crankcase	1
26	WE03120020003	Circlip	1
27	WE03010010011	Bolt M5x25	4
28	SAXX03100010025	Oil Seal 12x28x7	1
29	SAXX03060010002	Pin B3x10	2
30	SAXX02070010147	Exhaust Gasket	1
31	SAXX02050010004	Exhaust	1

Item No	Part No.	Description	Qty
32	SAXX02050010057	Heat Shield	1
33	SAXX03010010051	Bolt M5x55	2
34	WE03040010007	Washer 4	2
35	WE02070010048	Spacer	2
36	WE02050050181	Wire	1
37	SAXX02050030106	Ignition Coil	1
38	WE03020020013	Bolt M4x20	2
39	WE03040020019	Washer GB97	8
40	WE03050010014	Washer GB93	8
41	SAXX03010040023	Bolt ST3x12	1
42	SAXX70050030005	Fuel Tank	1
43	SAXX70030040030	Choke Handle	1
44	SAXX02070020048	Fuel Tank Cap Gasket	1
45	SAXX70030180064	Fuel Cap Stopper	1
46	SAXX02070010085	Gasket	1
47	WE02110030036	Insulator	1
48	WE03020020012	Bolt M5x20	5
49	WE02070010061	Carburetor Gasket	1
50	SAXX02050020052	Carburetor	1
51	WE02070010099	Air Filter Housing Gasket	1
52	SAXX02020040036	Pipe Clip	1
53	SAXX01040010011	Pipe	3
54	WE03020020025	Screw GB9074.4	2
55	SAXX03040020017	Washer GB97	1
56	WE70030040028	Choke	1
57	SAXX70030040045	Air Filter Case	1
58	WE02050020127	Primer Bulb Assembly	1
59	SAXX02090010003	Air Filter	1
60	WE03020020030	Bolt M5x60	2
61	SAXX70030040091	Air Filter Cover	1
62	SAXX70030180137	Air Filter Cover Screw	1

PARTS DIAGRAM – WEBPB33 MACHINE (1938147001)

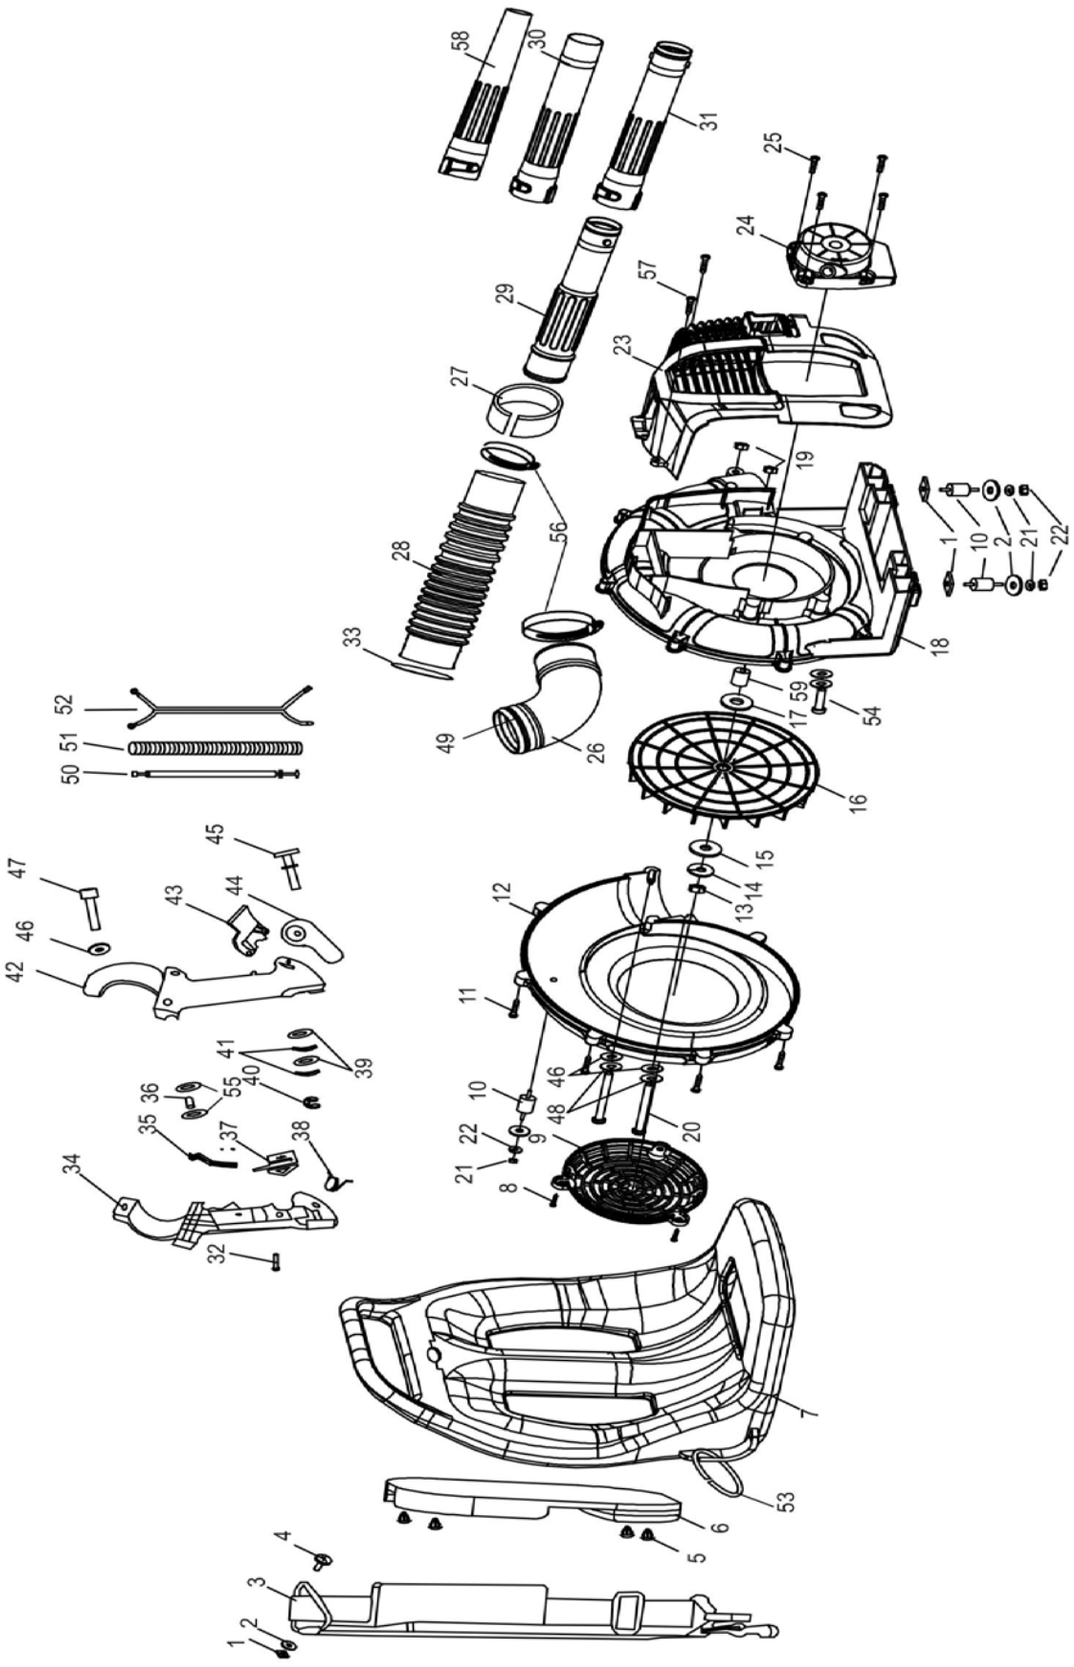

PARTS LIST – WEBPB33 MACHINE (1938147001)

Item No	Part No.	Description	Qty
1	SAXX03030070011	M6 Nut	2
2	SAXX03040010011	Washer 6	3
3	SAXX02050060023	Harness Assembly	1
4	SAXX03010110011	Bolt	2
5	SAXX02110030174	Nylon Clip	4
6	SAXX02050060043	Back Cushion	1
7	SAXX70050020007	Frame	1
8	SAXX03010040041	Screw ST5x16	3
9	SAXX70030030275	Fan Guard	1
10	SAXX02080010016	AV Rubber	3
11	SAXX03010040059	Screw ST5x25	6
12	SAXX70030010269	Rear Impellor Casing	1
13	SAXX03030060004	Nut M8x1.25	1
14	SAXX03050010007	Spring Washer 8	1
15	SAXX03040010014	Washer	1
16	SAXX70030090005	Impellor	1
17	SAXX03040050009	Gasket Washer 26x9x1.25	1
18	SAXX70030010049	Front Impellor Casing	1
19	SAXX03030010013	Nut M5	2
20	SAXX03020020047	Screw M5x50	2
21	SAXX03040050013	Washer	2
22	SAXX03030060002	Nut M6	3
23	SAXX70030030277	Front Engine Cover	1
24	SAXX02050070002	Recoil Assembly	1
25	WE03020020027	Screw M5x16	4
26	SAXX70050010060	Pipe (Elbow)	1
27	SAXX70030180294	Revolving Joint	1
28	SAXX70050010059	Rubber Hose	1
29	SAXX70050010061	Blower Pipe A	1

Item No	Part No.	Description	Qty
30	SAXX70050010062	Blower Pipe B	1
31	SAXX70050010063	Blower Pipe C	1
32	WE03010040029	Screw ST2.8x18	5
33	SAXX02020040031	Cable Clamp	1
34	SAXX70030070215	LH Handle	1
35	SAXX02050050065	Spring Tab	1
36	SAXX70030180154	Spindle	1
37	SAXX70030070097	Stop Switch	1
38	SAXX02020110018	Spring	1
39	WE3040010012	Washer 6	7
40	WE03120030003	Circlip	1
41	SAXX03040050001	Seal	2
42	SAXX70030070260	RH Handle	1
43	SAXX70030070126	Throttle Lever	1
44	SAXX70030070150	Retaining Lever	1
45	SAXX02020160350	Shaft	1
46	WE03040020020	Washer 5A	4
47	WE03010010022	Screw M5x20	1
48	WE03050010014	Washer 5	4
49	WE03110020012	Collar	1
50	SAXX02050040086	Throttle Cable	1
51	SAXX01040030002	Protective Sleeve	1
52	SAXX02050050170	Wire Lead	1
53	SAXX02050060012	Harness Fixing Rings	2
54	SAXX03010010047	Bolt M5x35	4
55	WE03040020012	Washer 4	2
56	SAXX02020040018	Hose Clip	2
57	SAXX03010040073	Screw ST4.2x22	4
58	SAXX70050010064	Blower Pipe Narrow	1
59	SAXX02040030019	Spindle	1

EC DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: 33cc Petrol Back Pack Blower
Model(s): WEBPB33
Product No. 1938147001
Type/Serial No. As per rating label on machine

Complies with the following directives:
Machinery Directive 2006/42/EC
Noise Emission of Outdoor Equipment Directive 2000/14/EC

The conformity assessment procedure followed was in accordance with
EN 15503:2009/A1:2013
EN ISO 12100-2:2003

Guaranteed Sound Power Level: L_{WA} = 111dB(A)
Vibration Level: 3.87m/s²

Notified Body:
TÜV SÜD Product Service GmbH
Addresses:
Zertifizierselle, Ridlerstraße 65, 80339 München, Germany

Authorised signatory and technical file holder
Date: 27/06/2017

Signature: 
Name: Mr Simon Belcher
Position: Managing Director
Company: Handy Distribution Ltd
Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.

CE

NOTES

NOTES

NOTES

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the 2 year conditional manufacturer domestic warranty*.
* Commercial/Professional & Hire users receive a 90 day warranty

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:
Ride On Lawn Tractors
Cylinder Lawnmowers
Petrol Rotary Lawnmowers
Petrol Hand Held Range

Please register your machine using the following pages or at www.webblawnmowers.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:

1



2

1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

1. Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser, is not transferable and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

2. Period of Warranty

2 year conditional warranty from the original date of sale to the first domestic user.
90 days from the original date of sale to the professional/commercial or for hire user.
Engine warranty as per the engine manufacturer's warranty, which will be supplied with the machine.
90 days from the original date of sale for Replacement Spare Parts
All machines' must be serviced within the first 14 months from the original date of purchase, to qualify for a second year parts & labour warranty, details of the service must be recorded in the service record within this manual.
A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear and in normal use, will need replacement or adjustment.
These items are chargeable after 90 days of ownership.

Filters
Tyres / Wheels
Drive chains and belts
Brake & clutch friction components
Control cable & starter cords
Fluids & lubricants
Spark plugs
Blades (Lawnmowers & Brushcutters)
Cutter bars (Hedgecutters)
Drive & clutch cable surfaces
Nylon Lines (Line Trimmers)
Carburettor cleaning
Bearings
Bushes
Electric cable
Grass collectors

3. Not covered by this warranty

(a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
(b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operators manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
(c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.
(d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.
(e) The warranty policy is non-transferable and is only applicable to the original purchaser.

4. Disclaimer

(a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
(b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
(c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

5. General

(a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
(b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
(c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.
It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.
If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.
Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.
Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded.
If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.
Always store fuel away from direct sunlight, in a dark, cool environment.

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.
PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.

12 Months

Date

24 Months

Date

36 Months

Date

Service Record

48 Months

Date

60 Months

Date

72 Months

Date

84 Months

Date

96 Months

Date

108 Months

Date

120 Months

Date

132 Months

Date

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

Product Information (* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname	

*House Number		*House Name	
*Address 1			
*Address 2			
*Town			
*County			
*Postcode			

Home Tel		Mobile Tel	
Email			

Age	18 to 25		26 to 35		36 to 45		46 to 60		61 to 80		81 & over	

*Dealer Stamp (Complete Address)

*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

*Usage	Domestic Use		Commercial/Professional/Hire Use	

Webb Lawnmowers privacy commitment to machine owners: Thank you for completing this form. The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy. From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers, technical improvements or just opinions, which may be used for marketing, research or analysis purposes.

If you DO NOT wish to be contacted by either of the following methods, please tick the relevant box POST ☐ TELEPHONE ☐

If you would like us to contact you be Email, please tick this box ☐

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb Lawnmowers
Murdock Road
Dorcan
Swindon
Wiltshire
SN3 5HY