
Fasttrak Serial Linux Driver 1.2.0.14
Red-Hat Linux 7.2 Installation Guide

1. Input “install parameter “

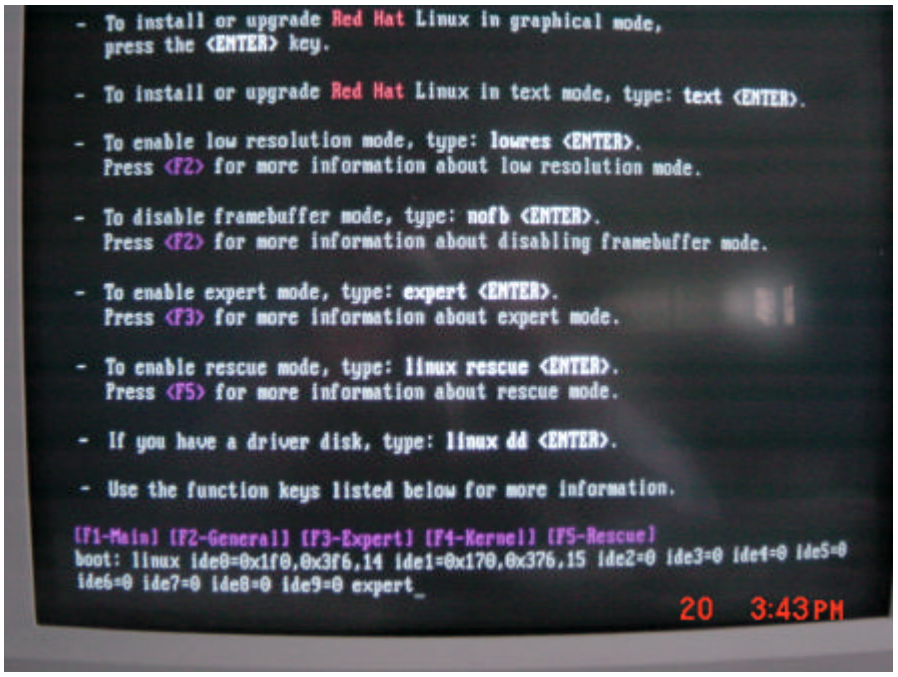

Please key-in :


Linux ide0=0x1f0,0x3f6,14 ide1=0x170,0x376,15 ide2=0 ide3=0 ide4=0 ide5=0 ide6=0 ide7=0 ide8=0 ide9=0 expert

2. Install Red-Hat 7.2 driver from Diskette.



Please insert Promise Fasttrak Serial Red-Hat 7.2 driver diskette. And click “yes”.


3. Boot Loader Configuration Menu

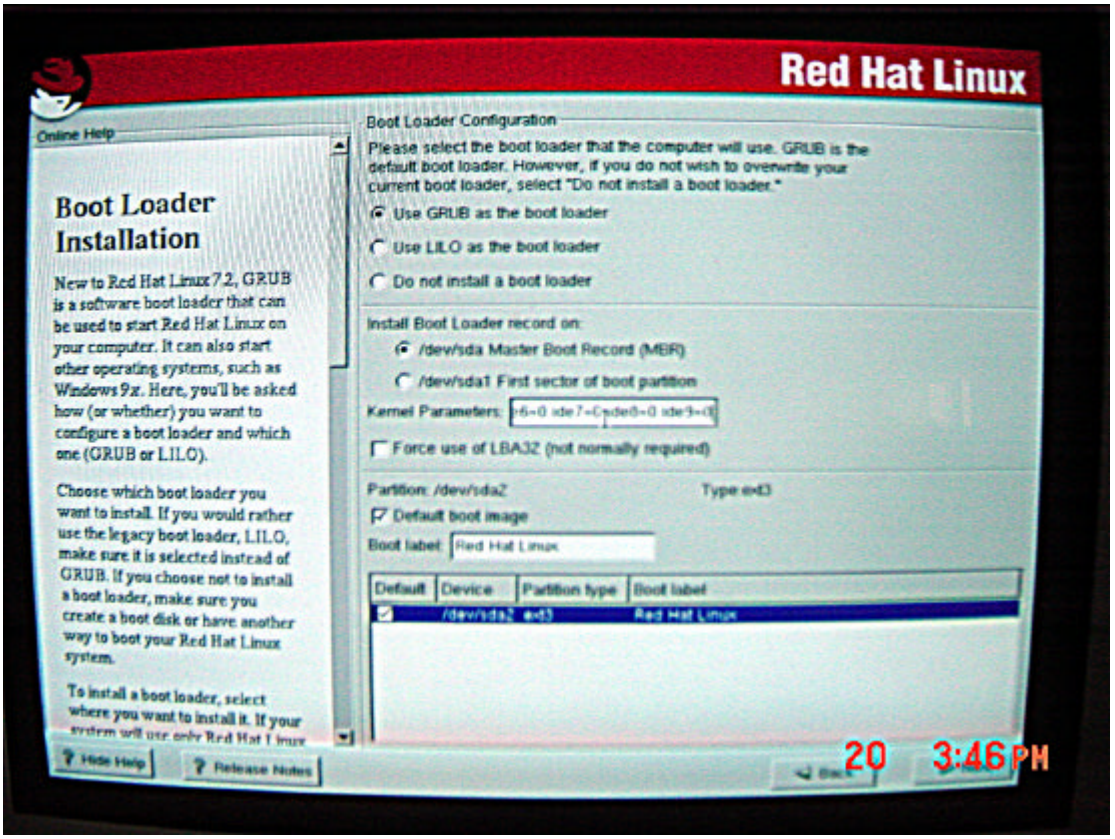

In “kernel Parameters”, please input :

Ide0=0x1f0,0x3f6,14 ide1=0x170,0x376,15 ide2=0 ide3=0 ide4=0 ide5=0 ide6=0 ide7=0 ide8=0 ide9=0

4.Add Initial Ramdisk for FastTrak Series

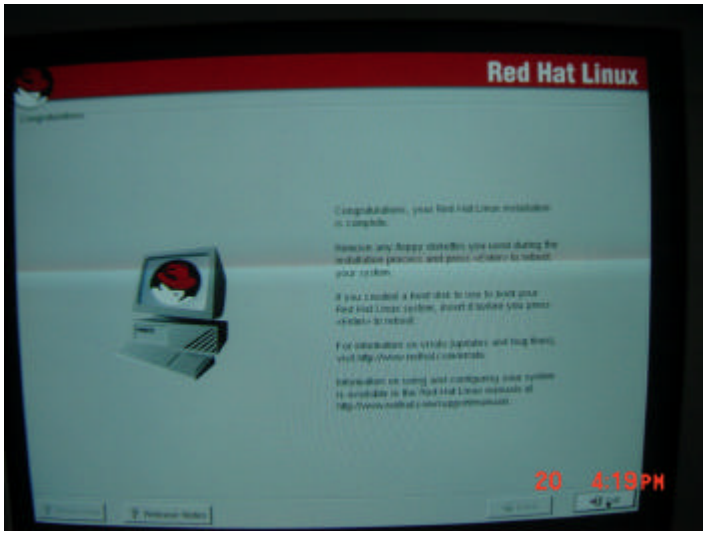

-When you see the screen as below, please press ctrl-alt-F2


-Input

#mount /dev/fd0 /mnt/floppy *

#cd /mnt/floppy

#./setup-ft

* If you could not mount floppy by this command, please use #mount –t vfat /dev/fd0 /mnt/floppy.

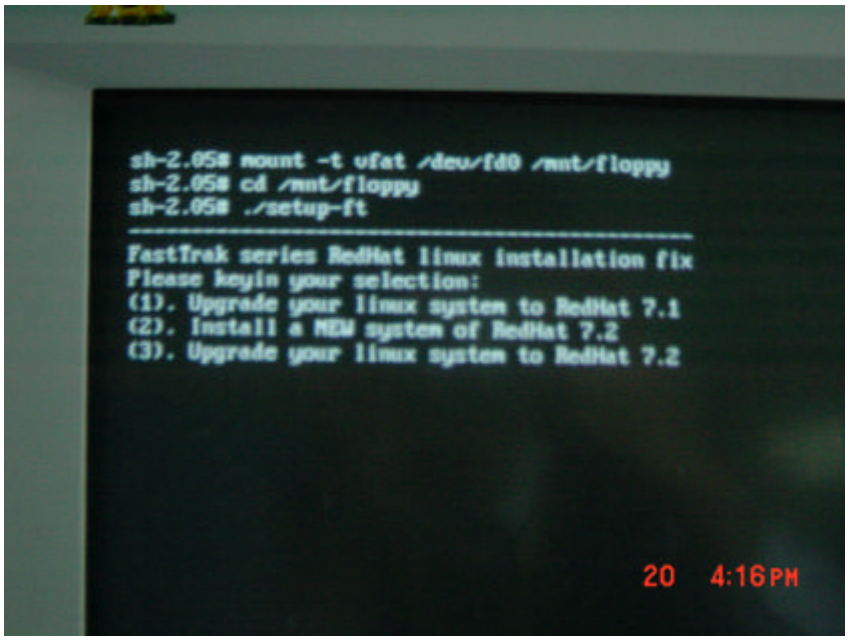

Input "2" for new system. Then, you will see "Fasttrak ….. successful." Then, please press "ctrl-alt-F7". Then choice "exit".

Then, you have installed Red-Hat 7.2.