

DIEBOLD SHANGHAI

Shanghai Diebold Security Equipment Co.,Ltd.

Thank you for choosing Shanghai Diebold the security container with electronic combination lock. In order for you to use this product well, please read this Use' s Manual carefully before using this product.

This is a new generation of the security container with electronic combination lock series developed meticulously by Shanghai Diebold with succinct appearance and reliable structure. Patented bolts and their locking mechanism make the container have a super anti-attack ability.

Shanghai Diebold Security Equipment Co. , Ltd. (SDSEC) is a joint venture with foreign partner, the world famous multinational corporation——Diebold, Inc. , and is licensed to use the Diebold patents and the world famous trademark—— **DIEBOLD** . For over one hundred years, Diebold has been the world market leader in security products and financial equipment industry.

SDSEC regards high-tech, high standard and high quality as its basis, and excellent service and good reputation as its root.

**DIEBOLD**

First Time Operation

- ☐ In accordance with Fig5 on P.6, turn the disk board on the panel counter-clockwise and remove it, Then the override key hole can be found, insert the override key into its hole and turn it counter-clockwise, and turn down the knob counter-clockwise to open the door.
- ☐ Take out 4 AA batteries from inside of the box. Locate the battery compartment on the back of the door. Remove the cover as per Figure 3 in Page 3. Install the batteries into the compartment as per polarity marks indicated inside the compartment and replace the cover.

To download our English User's Manual, please visit our website: www.diebold.cn



CONTENTS

Graphic illustration for the security container with electronic combination lock	2
Key and Knob.....	3
Panel and Battery Compartment	3
Operations	4
To Operate for the First Time	4
To Open	4
To Close	4
To Program Your User Code	5
To Replace the Batteries	5
To Open in Emergency	6
To Present Information	7
To Bolt Down the Container	7
Electrical Parameters	8
List of Accessories	8
Customer Support	9
Maintenance Guarantee	10



GRAPHIC ILLUSTRATION FOR
THE SECURITY CONTAINER WITH ELECTRONIC COMBINATION LOCK

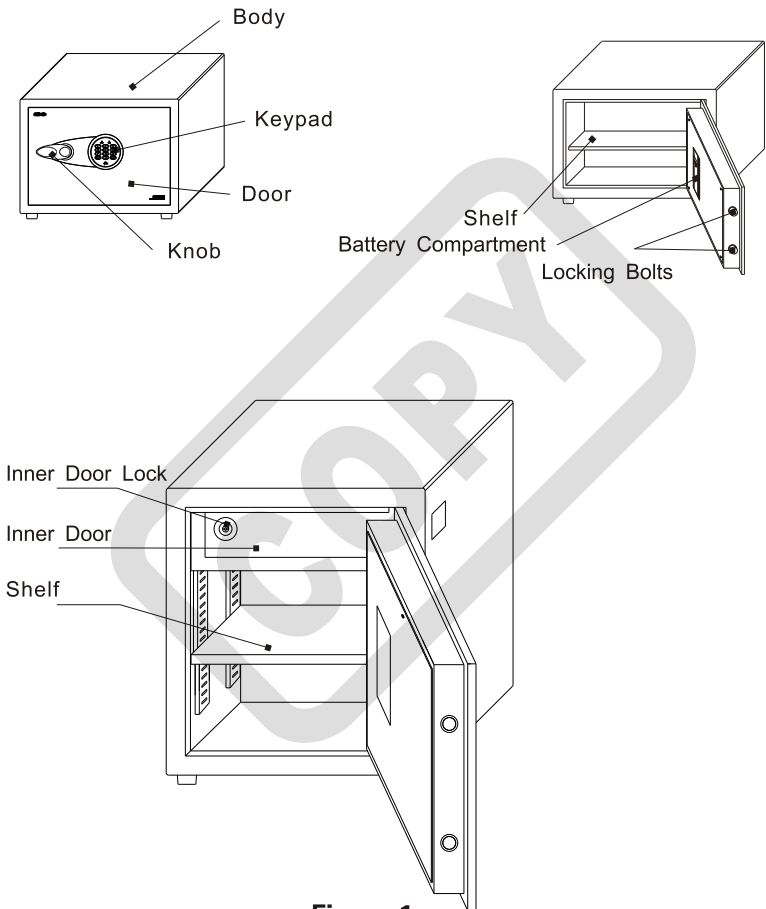


Figure 1

KEYS KNOB

Keys	Description
	Override Key
	Knob

PANEL AND BATTERY COMPARTMENT

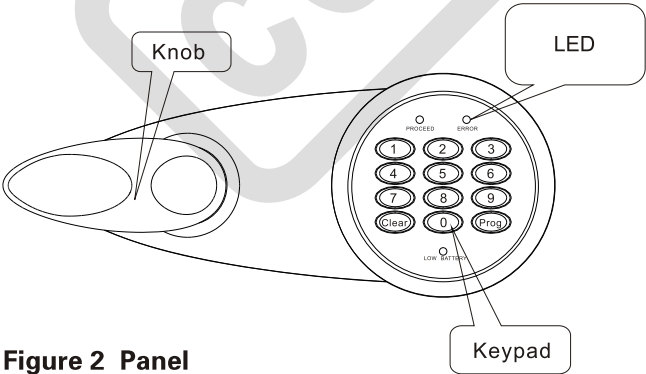


Figure 2 Panel

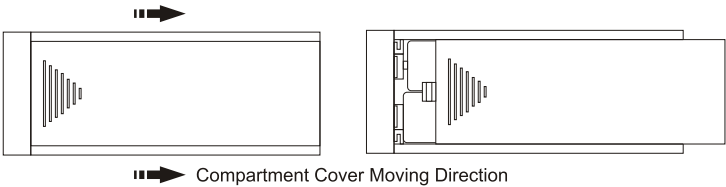


Figure 3 Removing the Compartment Cover



TO OPERATE

FOR THE FIRST TIME

When you first use this product, please open the door according to page 6 “TO OPEN IN EMERGENCY” first, take out 4AA batteries from inside of the compartment, according to page 5 “TO REPLACE THE BATTERIES” place the new batteries.

TO OPEN

1. Enter your combination
(enter the factory code “1. 5. 9. 0. 0” for the first unlocking) ;
2. When the green LED lights up , turn the knob counterclockwise “” within 5 seconds and open the door.



The factory code “1. 5. 9. 0. 0.” is only used for the first peration, please set your new combination (see “TO PROGRAM YOUR USER CODE” on page 5) after the first operation.

The interval between two button pressing operations must be within 20's, otherwise this operation will be invalid.

TO CLOSE

Close the door, turn the knob clockwise “” to lock the container

TO PROGRAMME YOUR USER CODE

1. Open the door according to the procedure for open on page 4;
2. Press the red setting button inside the door (see Figure 4), the green LED lights up and you can programme your new code.
3. Enter your new code (5 digits), the green LED goes out.

Your new code has been set successfully.



Figure 4



After programming code, try the new code several times according to “TO OPEN” procedure, then, close the door.

TO REPLACE THE BATTERIES

If the red LED flashes, you should replace the low batteries immediately.

REPLACING METHOD:

Remove the compartment cover in “Compartment cover moving direction” shown in Figure 3 and the old batteries, then, place new ones into the compartment correctly and replace the compartment cover.



Reminding

If this product will not be used for a long time, you'd better remove the batteries from it, and replace the batteries when it is used again. your programming code will not be lost.



TO OPEN IN EMERGENCY

The override key can be used to open the container in emergency.

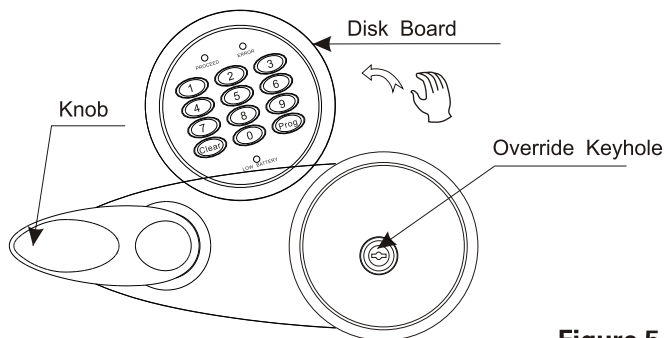


Figure 5

turn the disk board counterclockwise “↶” and remove it, Then the override key hole can be found, insert the override key into its hole and turn it counterclockwise “↶”, and turn down the knob counterclockwise “↶” to open the door.

▲ Note:

*The override keys will be used in emergency.
Please keep them in a safe place. Don't place them
in this product.*



TO PRESENT INFORMATION



If you provide the following information to service people, you will get quicker assistance:

- ☐ Product Serial Number (See label on the right side of product)
- ☐ Product Model
- ☐ Purchase Invoice of Product
- ☐ Maintenance Guarantee

TO BOLT DOWN THE CONTAINER

Place the container where it will be installed. Mark the locations of the bolt-down holes. Move aside the container and drill the holes in the marked locations. Put and tighten the bolt-down bolts into the holes. Remove the nuts and washers. Replace the container where it will be installed and align the bolt-down holes. Install and tighten the washers and the nuts from inside the container.



ELECTRIC PARAMETERS

1. Work power: 4 pieces of 1.5V/AA batteries;
2. Voltage limit: $\pm 10\text{VDC}$;
3. Operation voltage range: $4\text{V}\sim 7\text{V}$;
4. Current during sleep: $\angle 2\mu\text{A}$.

LIST OF ACCESSORY

- | | |
|---|---|
| ☐ User's Manual | 1 piece |
| ☐ Override Key | 2 pieces |
| ☐ Conformity Certificate | 1 piece |
| ☐ AA batteries | 4 pieces |
| ☐ Bolt-down hardware | 2 Sets |
| ☐ Inner Door Key | 2 pieces (only for the container with stainless steel inner door) |



CUSTOMER SUPPORT

HOW TO OBTAIN ASSISTANCE



If you have any question that this User's Manual can't answer when using this product, please take one of the following approaches to obtain assistance.

- ☐ To call SDSEC Technical Advisory Service at

86-21-6480 9355

- ☐ To send questions through SDSEC's fax response system to get product specifications.

Fax: 021-6480 1238
021-6480 3291
021-5480 4063

- ☐ To contact our local dealers or distributors.

- ☐ To visit our website:

[Http://www.diebold.cn](http://www.diebold.cn)



MAINTENANCE GUARANTEE

- This product is guaranteed for one year from the date when it is purchased.
- This guarantee only applies to the product quality problems occurring under normal operating conditions except man-made damages (e. g. damages incurred from improper operation or carelessness), damages incurred from assemble or disassemble, repair and improper installation without permission from our company, and damages incurred from force majeure.
- The original invoice that is issued when this product is purchased must be presented when guaranteed maintenance service is provided.

Maintenance Record				
Calling Date	Service Date	Trouble&Cause	Action&Result	Serviceman



TO AFFIX THE INVOICE



Please affix the invoice (or copy)

for this product in this place in order

to present it to our customer support

personnel and get assistance without

delay.



MEMO

