

Tango4 泛光灯

MVP483

Mounting instruction 安装说明

Tango4-PI02



Type number 产品型号	Lamp 光源	Symmetrical 对称	Asymmetrical 非对称	WB 宽角	NB 窄角	ta	Indoor 室内	Outdoor 室外	V/ Hz 电压/频率		
MVP483	2xSON-T 400	✓	✗	✓	✗	45°C	✓	✓	220V~/230V~/240V~/50Hz, 220V~/60Hz	1.5	16.4
	2xSON-T 600	✓	✗	✓	✗	45°C	✓	✓	220V~/230V~/240V~/50Hz, 220V~/60Hz	1.5	16.4
	SON-T 1000	✓	✓	✓	✓	45°C	✓	✓	220V~/230V~/240V~/50Hz, 220V~/60Hz	1.5	16
	2xHPI-T 400	✓	✗	✓	✗	45°C	✓	✓	220V~/230V~/240V~/50Hz, 220V~/60Hz	1.5	16.4
	HPI-T 1000	✓	✓	✓	✓	45°C	✓	✓	220V~/230V~/240V~/50Hz, 220V~/60Hz	1.5	16

V/ Hz 电压/频率	Lamp 光源	Ballast 镇流器		Ignitor 触发器				Capacitor 电容
		LE	Ultratech	LE	MAX igniting distance 最大触发距离	Ultratech	MAX igniting distance 最大触发距离	
220V~/ 50Hz	SON-T 1000W	BSN 1000L300I	HPS-1K0-ALCC+C	SN56	40m	UZZT 6010 BI	30m	100uF, 250V
	SON-T 400W	BSN 400L300ITS	-	SN58	20m	-	-	50uF, 250V
	SON-T 600W	BSN 600L300ITS	HPSA600-ALBC	SN58	20m	UZZT 6010 BI	30m	60uF, 250V
	HPI-T 1000W	BSN 1000L300I	MHA1K0-ALBC+C	SN56	40m	UZZP 9005 BI	>100m	60uF, 250V
	HPI-T 400W	BHL 400L200	-	SI51	>100m	-	-	30uF, 250V
230V~/ 50Hz	SON-T 1000W	BSN 1000L302I	HPS-1K0-AMBD(C)	SN56	40m	UZZT 6010 BI	30m	100uF, 250V
	SON-T 400W	BSN 400L407ITS	-	SN58	20m	-	-	45uF, 250V
	SON-T 600W	BSN 600L407ITS	HPSA600-AMBC	SN58	20m	UZZT 6010 BI	30m	60uF, 250V
	HPI-T 1000W	BHL 1000L202	MHA1K0-AMAC(C)	SI52	>100m	UZZP 9005 BI	>100m	65uF, 250V
	HPI-T 400W	BHL 400L202	-	SI51	>100m	-	-	30uF, 250V
240V~/ 50Hz	SON-T 1000W	-	HPS-1K0-ANED	-	-	UZZT 6010 BI	30m	100uF, 250V
	SON-T 400W	BSN 400L407ITS	-	SN58	20m	-	-	45uF, 250V
	SON-T 600W	BSN 600L407ITS	HPSA600-ANAC	SN58	20m	UZZT 6010 BI	30m	60uF, 250V
	HPI-T 1000W	-	MHA1K0-ANAD	-	-	UZZP 9005 BI	>100m	65uF, 250V
	HPI-T 400W	BHL 400L204	-	SI51	>100m	-	-	30uF, 250V
220V~/ 60Hz	SON-T 1000W	-	HPS-1K0XALCD+C	-	-	UZZT 6010 BI	30m	65uF, 250V
	SON-T 400W	-	-	-	-	-	-	-
	SON-T 600W	-	-	-	-	-	-	-
	HPI-T 1000W	-	MHA1K0XALAD+C	-	-	UZZP 9005 BI	>100m	55uF, 250V
	HPI-T 400W	-	-	-	-	-	-	-

1. Suggest to use electrical components in form or equivalent type.
建议使用表格内电器或同等规格的电器。

2. Except MHN-FC lamp, no gear in the luminaire.
除了MHN-FC lamp, 灯具内不含电器。

3. Use the gear from same supplier.
同一厂家的电器配合使用。



1. When use in seaside, ensure the distance is above 3km between the luminaire and coast.
当使用在海边环境时, 要保证灯具和海岸线距离大于3公里。

2. Please make sure the product will be inaccessible after installation.
请确保灯具在安装后不会被触及到。




3. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEC60364-7-714 regulations or the national requirements.
灯具应由有资格的电工安装, 接线要符合IEC60364-7-714标准或国家标准。

4. Do not switch on without installing lamp.
未安装光源时请勿通电。



Philips Lighting Luminaires (Shanghai) Co., Ltd.
Address: No. 2688, Huyi Road, Jiading, Shanghai, China
Postalcode: 201801

飞利浦灯具(上海)有限公司
地址: 中国上海市嘉定区马陆镇沪宜公路2688号
邮编: 201801


PHILIPS

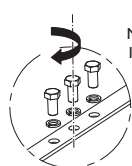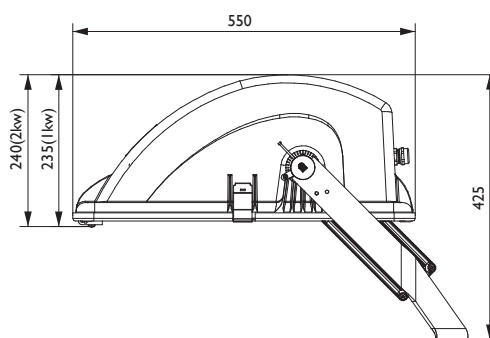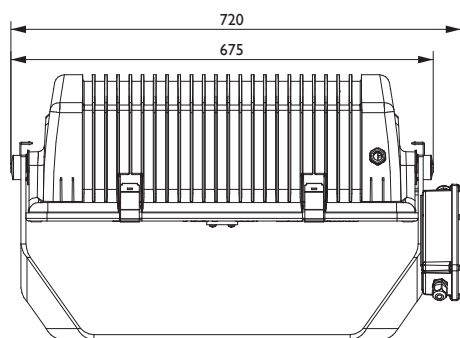


M20(3×)
130N.m

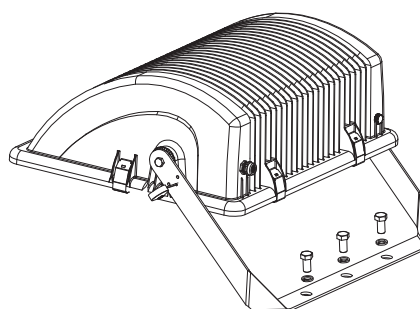

Installation preparation 安装准备

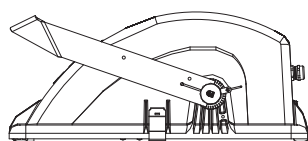


Unscrew the M10 bolt before mounting the luminaire.
安装灯具前，旋松M10螺栓。

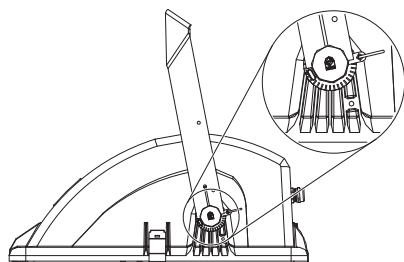


Turn the mounting BKT till appear stopper in the scale dish and overrun the position, take out the plastic part with metal ring.
转动支架直到越过刻度盘的止位，去掉带金属环的塑料件。


Installation conditions 安装条件

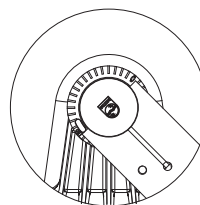



Aiming object through a dial and scale in mounting bracket
通过刻度盘和支架上的刻度瞄准目标

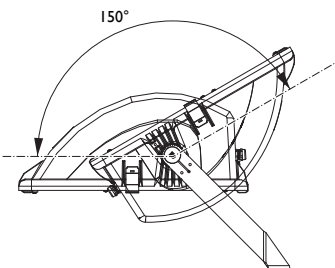

1KW/ 2×400W/ 2×600W :
Allowed installing angel is 0°~150°
允许的安裝角度是0°~150°

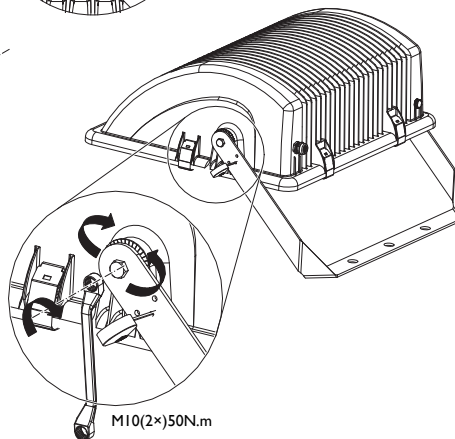


Open the luminaire 打开灯具

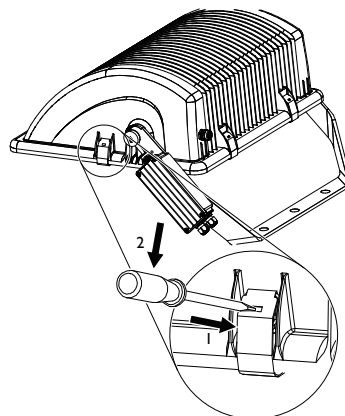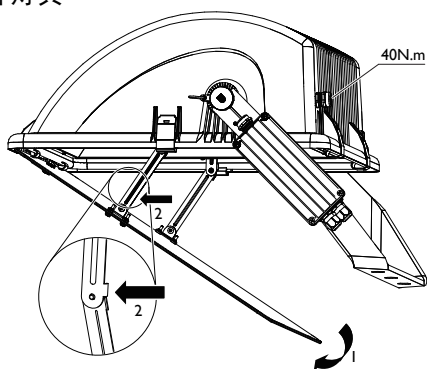


1. Before opening the glass, ensure all 6 clips opened.
打开玻璃时，确保六个搭扣都已经打开。
2. Ensure the supply power shut off before installing the luminaire or replacing the lamp.
为了您的安全，请在安装或更换光源前切断主电源。

Conection (HPI/SON lamp)
接线 (HPI / SON光源)

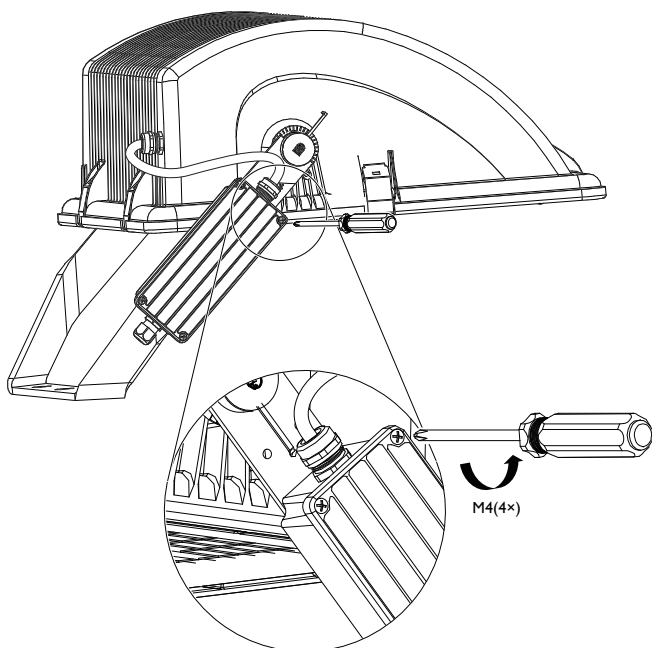


Ensure the supply power shut off before installing the luminaire or replacing the lamp.
为了您的安全, 请在安装或更换光源前切断主电源。

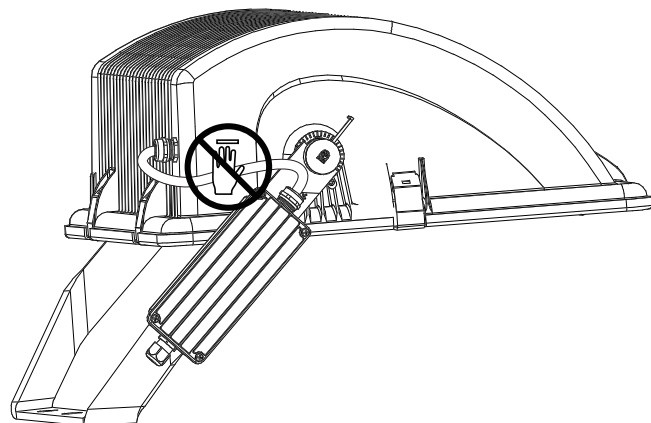


1. Correct connection for polarities.
正确的极性连接。
2. Do not pull the soft metal tube.
禁止拉拽金属软管。

1×SON-T/HPI-T

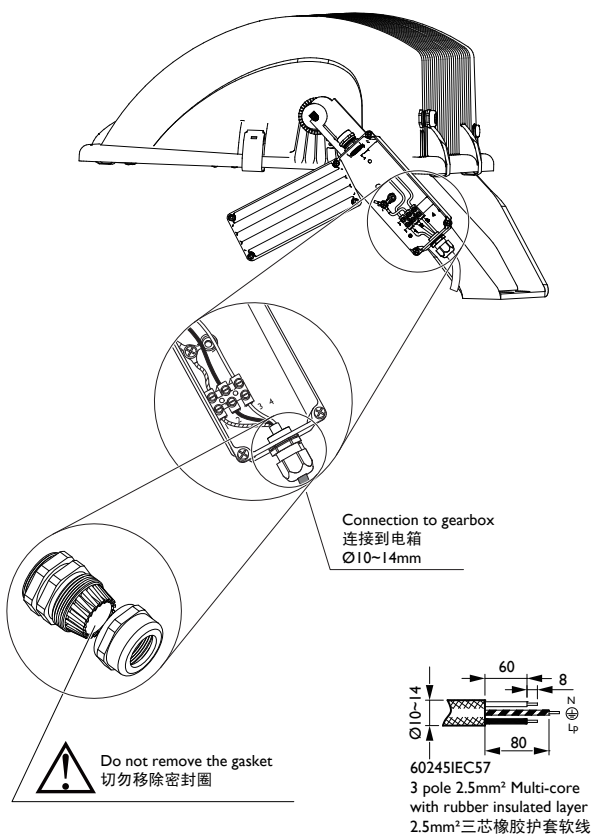


2×SON-T/HPI-T

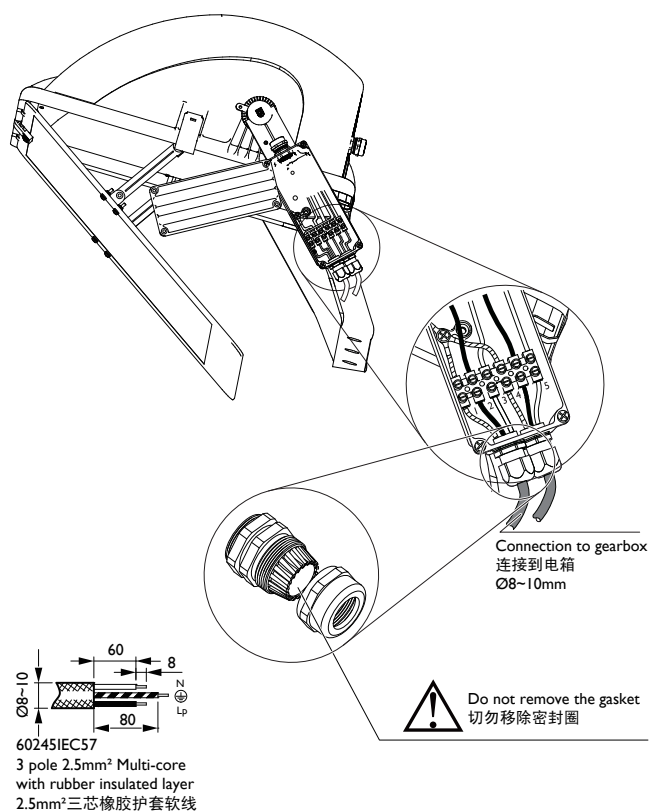


Lamp replace
更换光源

For SON-T and HPI-T

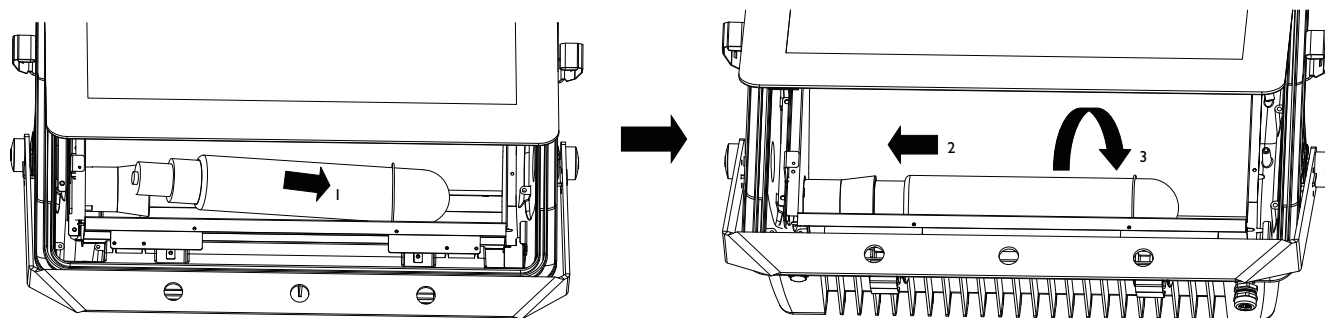

Close the luminaire
闭合灯具

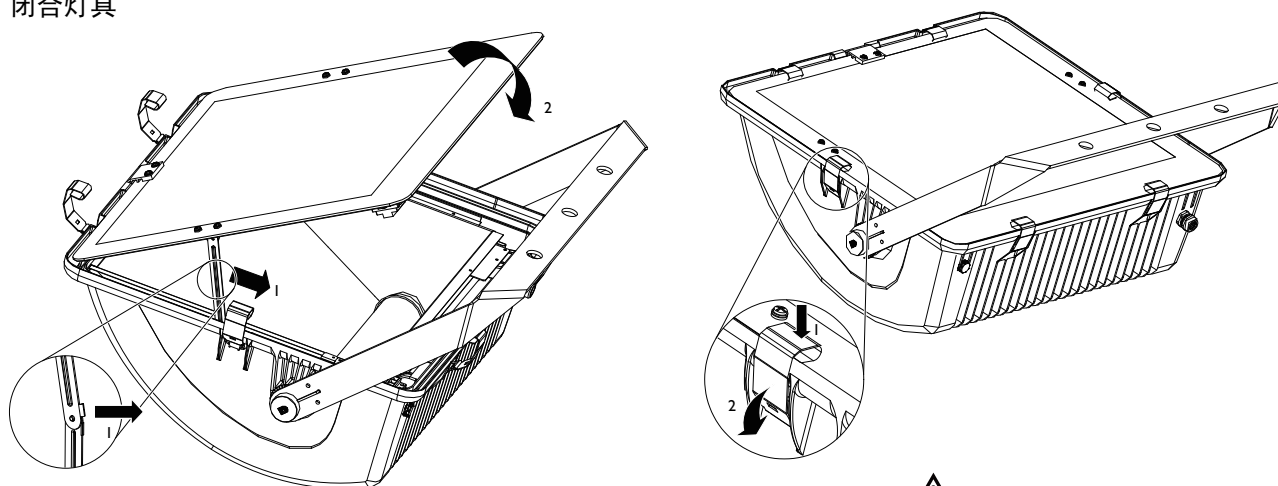

When close the luminaire, ensure all 6 clips fastened.
闭合玻璃时，请确保六个搭扣都已扣紧。