


Structure of the Data Strings : Stx(Hex 00~~FE) Data(ASCII 0~9; A~Z) Etx(Hex 0D)

Example: String (Hex) = 01 41 32 2D 33 2E 34 0D Show A2-3.4 (01=Stx(Address); 0D=Etx)

* If Display Address = FF (Hex); then Data string do not need Stx., Example: 41 32 2D 33 Show A2-3.

* If Data String Stx = FF(Hex), then every Display will be show this string at the same time.

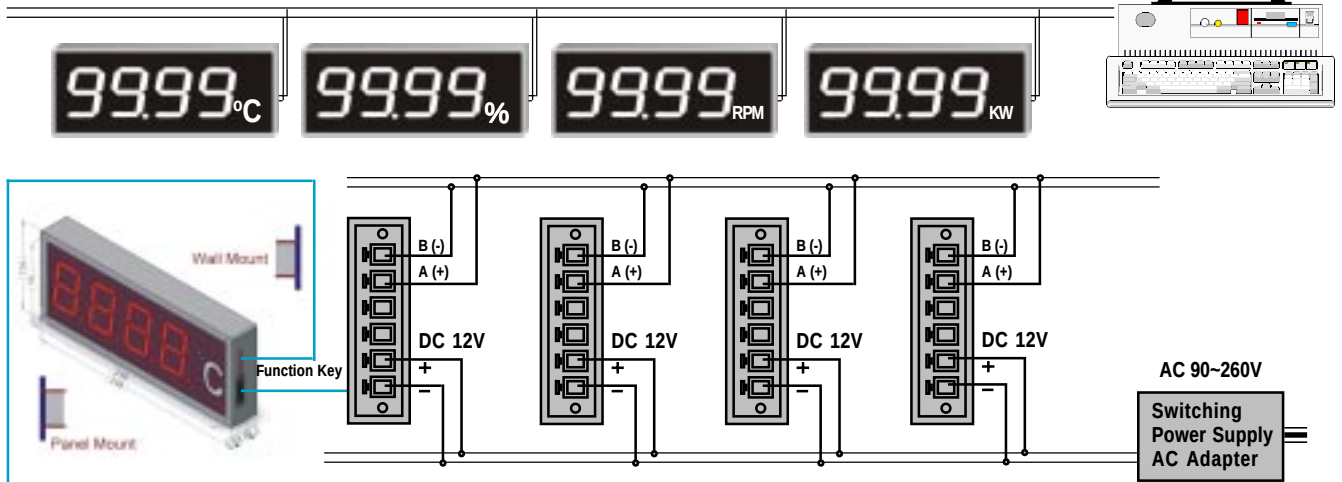

FUN

Press this key for show every function's value,(Adr/bud).

Press this key and hold more than 5 seconds then release the key, Into function preset, In Adr (Address) or bud (Baud_Rate).

▶

Press this key for shift right of flash-digit (which one you can change data), In function preset active.

▲

Press this key for increase 1 of flash-digit (which one you can change data), In function preset active.

R

Press this key to quit from for function browse.

In function preset active, Press this key to save new setting value.

① FUN ▶ ▲ R

2.345

When the value was changed,
you have to press R-key to save new value.

FUN ▶ ▲ R

2.345

In normal press this key show every function, when press once will change to show next function value.

① FUN ▶ ▲ R

Adr

1-1 FUN ▶ ▲ R

press 5 seconds, release

1-2 FUN ▶ ▲ R

press 5 seconds, release

1-3 FUN ▶ ▲ R

press 5 seconds, release

② FUN ▶ ▲ R

00

Adr (Address 00~FF)

2-1 FUN ▶ ▲ R

press 5 seconds, release

2-2 FUN ▶ ▲ R

press 5 seconds, release

2-3 FUN ▶ ▲ R

press 5 seconds, release

③ FUN ▶ ▲ R

bud

bud (Baud_Rate 2400~19200)

2-1 FUN ▶ ▲ R

press 5 seconds, release

2-2 FUN ▶ ▲ R

press 5 seconds, release

2-3 FUN ▶ ▲ R

press 5 seconds, release

④ FUN ▶ ▲ R

9.6

bud (Baud_Rate 2400~19200)

2-1 FUN ▶ ▲ R

press 5 seconds, release

2-2 FUN ▶ ▲ R

press 5 seconds, release

2-3 FUN ▶ ▲ R

press 5 seconds, release

Press FUN-key once return normal (Show Present Value).

Flash and waiting for change

Baud from 9.600 changeto 19,200 bps

Baud from 19.200 changeto 2,400 bps

Data Code of Numeric and Alphabet

Numeric 0 ~ 9 (Hex 30~39)	0	1	2	3	4	5	6	7	8	9			
Alphabet A ~ M (Hex 41~4D)	A	B	C	D	E	F	G	H	I	J	K	L	M
Alphabet N ~ Z (Hex 4E~5A)	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
Symbols (, , ~ , . Hex 28, 29, 2d, 2E	(	)	,	.									