



CAUTIONS



To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.

INSPECT YOUR MODEL BEFORE OPERATION.

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.
- Make sure no one else is using the same radio frequency as you are using.

AFTER OPERATION OF YOUR R/C MODEL

- Turn off receiver first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

VORSICHT!



Um Verletzungen an Personen und/oder Sachschäden zu vermeiden, sollten alle ferngesteuerten Modelle sorgfältig und verantwortungsbewusst bedient werden, wie nachfolgend beschrieben.

Wählen Sie den richtigen Platz zum Fahren

- Fahren Sie niemals auf öffentlichen Straßen. Dies könnte Verkehrsunfälle, Personen schäden oder Sachschäden verursachen.
- Fahren Sie niemals in der Nähe von anderen Personen oder Tieren.
- Fahren Sie niemals auf belebten Straßen.
- Fahren Sie nie in der Nähe von Wohnhäusern oder Krankenhäusern. Der Lärm könnte andere Personen stören.
- Fahren Sie niemals in Innenräumen. Dort könnte etwas beschädigt werden.

Überprüfen Sie Ihr Modell, bevor Sie es in Betrieb nehmen.

- Gehen Sie sicher, dass alle Schrauben und Muttern festgezogen sind. Verwenden Sie überall dort Schrauben-Sicherungslack, wo Metallschrauben in ein Metallgewinde greifen, besonders bei den Motorhaltern.
- Um Störungen zu vermeiden, benutzen Sie immer voll geladene Akkus in Ihrem Sender und Empfänger.
- Bevor Sie den Motor starten, sollten Sie immer die Funktion der Bremse und des Gashebels testen.
- Gehen Sie sicher, dass niemand mit der gleichen Frequenz fährt wie Sie.

Nach Betrieb des RC Modells:

- Zuerst den Empfänger abdrehen, dann den Sender abdrehen um unkontrolliertes Durchgehen zu vermeiden.
- Seien Sie vorsichtig mit gebrauchten Akkus, sie können nach dem Gebrauch heiß sein.
- Ersetzen Sie Akkus/Batterien die beschädigt sind oder schadhafte Kabel aufweisen, sie können Kurzschlüsse oder Feuer verursachen.
- Halten Sie Ihr Fahrzeug sauber und entfernen Sie Schmutz und Schmierfett, damit erhöhen Sie die Lebensdauer Ihres Modells.

PRECAUTIONS



Afin d'éviter toutes blessures corporelles et/ou dommages environnants, veuillez procéder en toute responsabilité comme indiqué ci-dessous

Choisir le lieu adéquat pour faire rouler votre modèle.

- Ne jamais rouler dans les rues ou sur les routes ouvertes au public. Ceci peut provoquer de graves accidents.
- Ne jamais rouler près de personnes ou d'animaux.
- Pour éviter les blessures, ne pas rouler dans des espaces confinés.
- Ne jamais rouler où le bruit peut déranger, comme aux abords des hôpitaux ou des quartiers résidentiels.
- Ne jamais rouler à l'intérieur: les gaz d'échappement sont nocifs.

Contrôler votre modèle avant chaque utilisation.

- Vérifier que les vis et les écrous sont bien serrés. Il est très fortement conseillé d'utiliser du frein filet pour bloquer les vis qui sont en contact avec du métal et tout particulièrement les vis du moteur.
- Toujours utiliser des batteries bien chargées pour l'émission et la réception.
- Toujours vérifier les freins et la commande des gaz avant de démarrer.
- Vérifier qu'aucune autre personne n'utilise votre fréquence radio.

Après l'Opération De Votre Modèle de R/C

- Le virage du récepteur premier, alors virage de l'émetteur, ceci empêchera des fugitifs.
- Faire attention en contrôlant des piles, ils auront chaud après avoir couru.
- Remplacer n'importe quelles piles qui ont été cabossées ou a éraillé des fils, les court-circuits peuvent causer le feu.
- Être sûr de garder votre modèle de R/C nettoie et libère de terre et la graisse supplémentaires, ceci augmentera la vie.

Equipment needed / Benötigtes Zubehör / Equipement nécessaire

Radio Gear / Fernsteueranlage / Equipement Radio

Radio control system

• You will need a 2-Channel radio system with one servo, receiver, an electronic speed control with an ON/OFF switch.

Fernsteueranlage


• Sie werden ein 2-kanal Radio System mit einem Servo, Empfänger, eine elektronische Geschwindigkeitssteuerung mit einem Netzschalter brauchen.

Ensemble radiocommande


• Vous aurez besoin d'un système de radio de 2 Chaînes avec un servo, le récepteur, un contrôle de vitesse électronique avec un interrupteur (on-off).

- 8AA Alkaline Dry Batteries.
- 8 St. AA Trockenbatterien.
- 8 piles type R6 pour votre radio commande.

8x

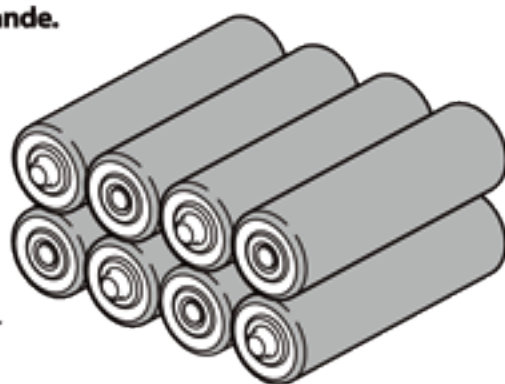


Stick Type
Steueknüppel-Typ
Type manches

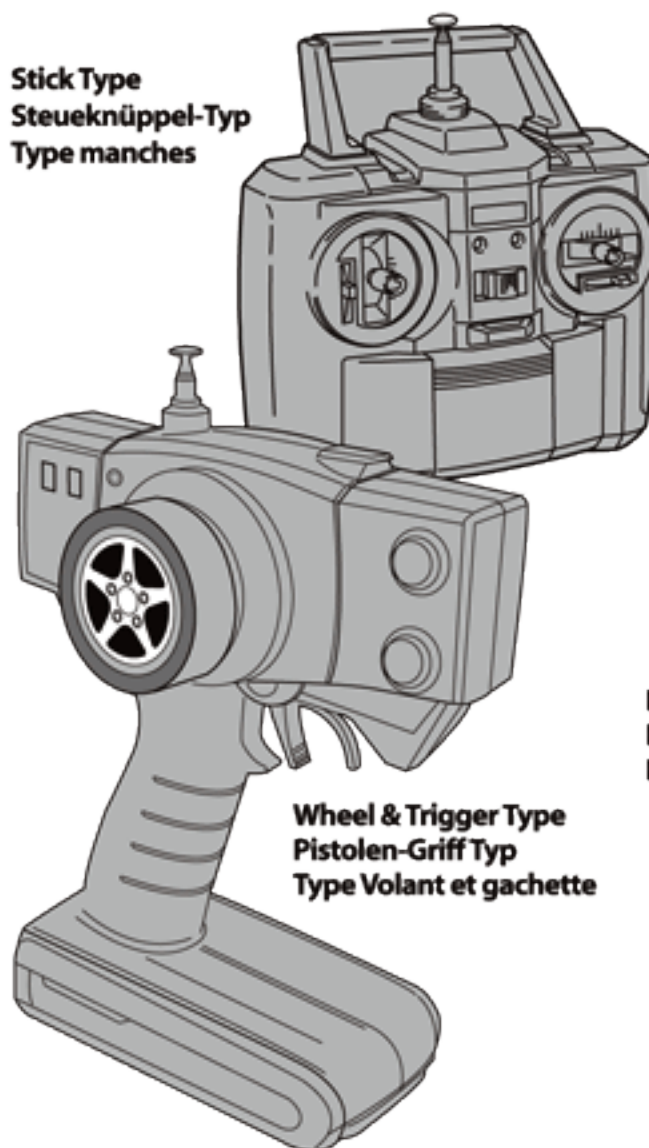

Wheel & Trigger Type
Pistolen-Griff Typ
Type Volant et gachette

Electronic Speed Control
Elektrischer Fahrtenregler
Contrôleur de Vitesse électronique

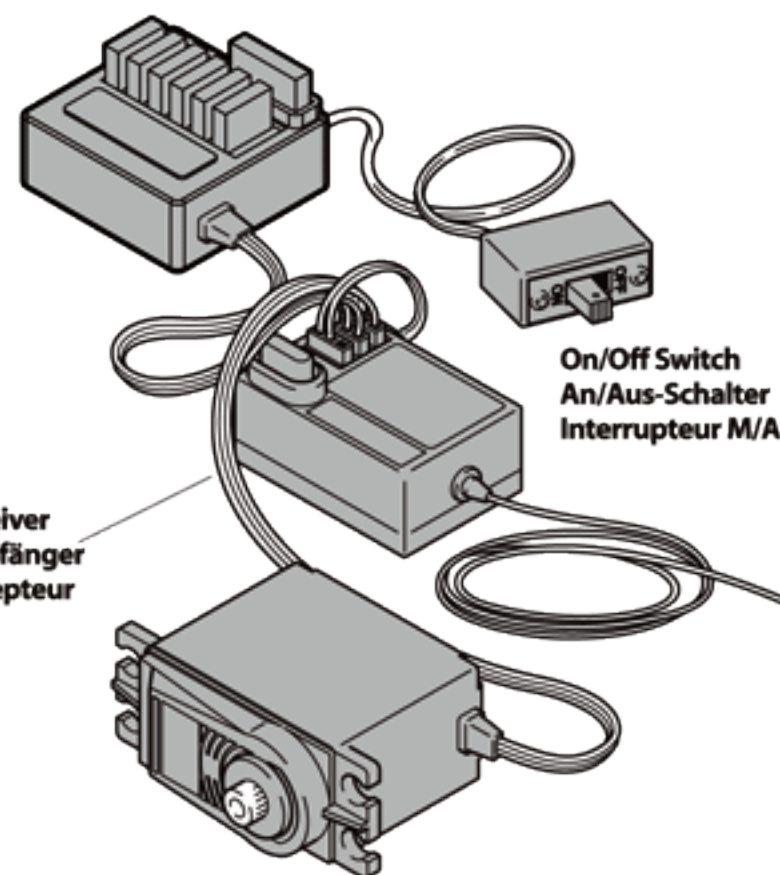


Receiver
Empfänger
Récepteur

On/Off Switch
An/Aus-Schalter
Interrupteur M/A

Steering servo
Lenkservo
Servo de direction

Motor / Motoren / Moteur


540 Size - 55T

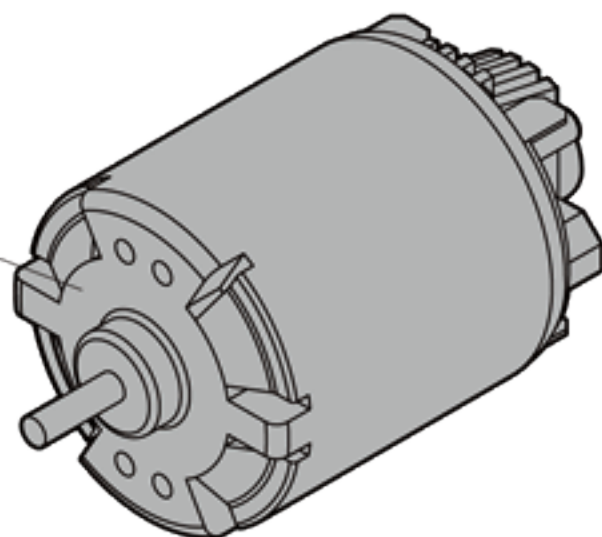


Battery / Akku / Batterie

Battery / Akku / Batterie


7.2V

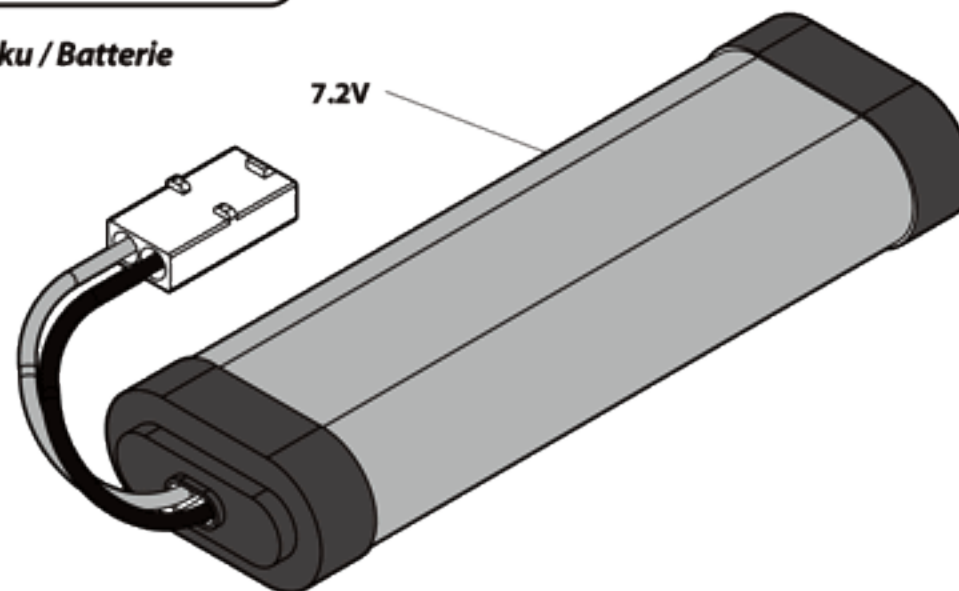


Tools Recommended / Benötigte Werkzeuge / Outillage

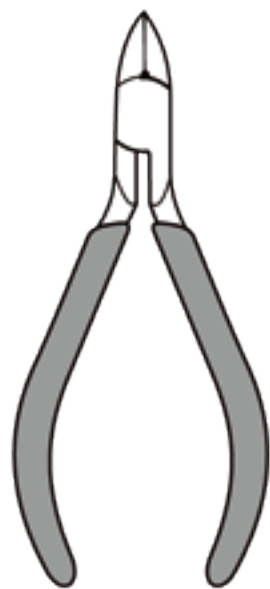

Side cutter
Seitenschneider
Pinces coupantes

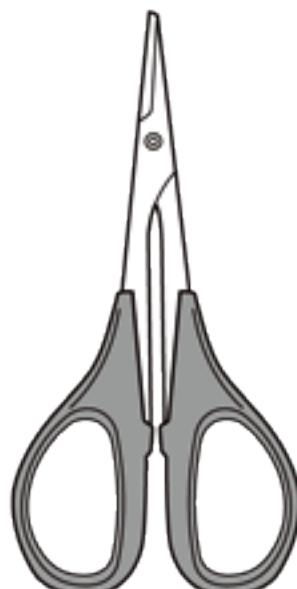

Curved scissors
Schere
Ciseaux

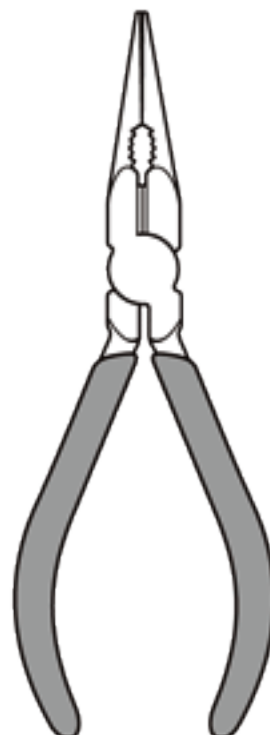

Long nose pliers
Flachzange
Pinces à bords longs



Modeling knife
Modelliermesser
Couteau de modélisme



AX30146 x2
Shock Shaft 3x50mm




AX30162 x2
Pin 1.5x8mm




AXA30163 x6
Pin 2x10mm



AX30190 x1
Shaft 5x18




AX30198 x1
Drive gear Shaft 5x53.5

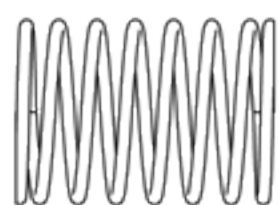


AX30200 x4
Spring 14.5x20mm




AX30207 x4
Spring 14.5x40mm

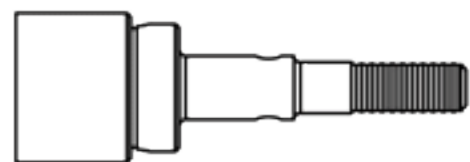


AX30366 x2
Axle 5x35mm

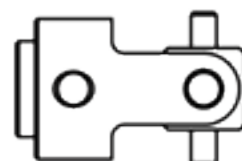

AX30380 x4
Metal Driveshaft Yoke

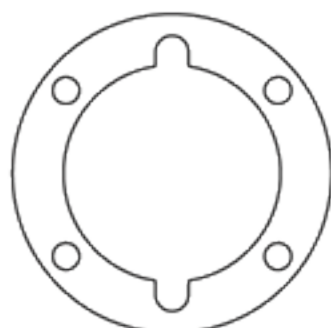

AX30385 x2
Diff Gasket 16x25x0.5mm

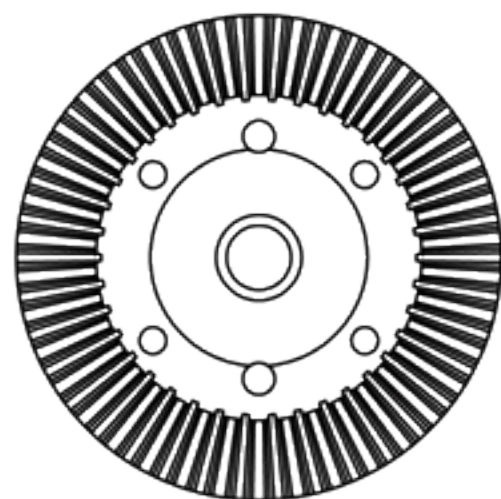


AX30392 x2
38T Bevel Gear




AX30393 x2
13T Bevel Gear




AX30394 x1
20T Drive Gear

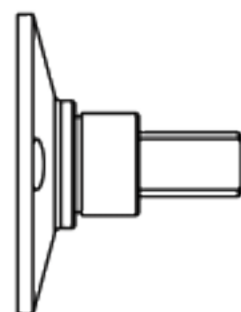


AX30404 x2
Outdrive Shaft




AX30405 x2
Input Shaft 5x28mm

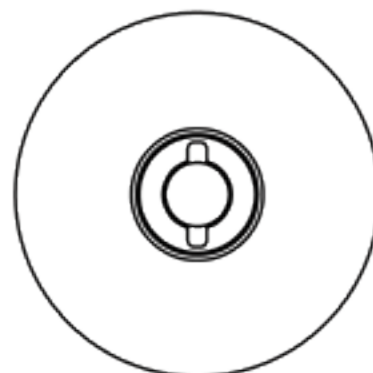

AX30410 x1
Inner Slipper Plate

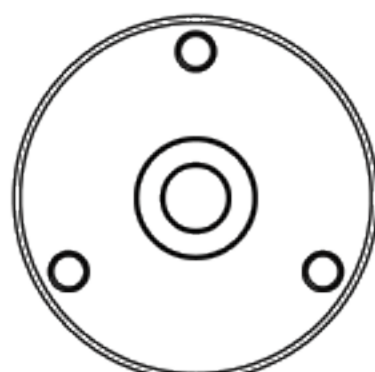


AX30411 x1
Outer Slipper Plate

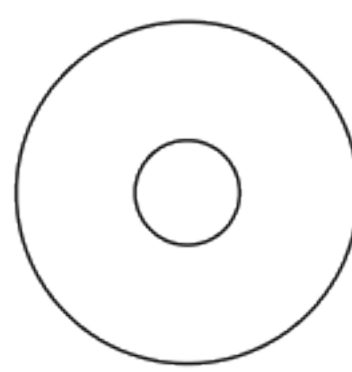

AX30412 x1
Slipper Pad 27x8x1mm




AX30498 x1
Transmission Spacer

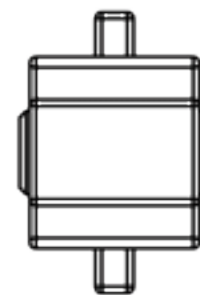

AX30500 x2
Heavy Duty Locker



AX30516 x3
6x106mm




AX30518 x2
6x98mm




AX30413 x1
Spring 8.5x12




AX30427 x4
12mm Aluminum Hub

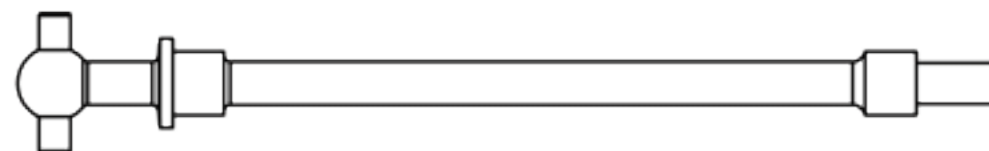

AX30420 x2
Solid Axle Dogbone 6x74mm




AX30421 x2
Solid Axle Dogbone 6x104.5mm

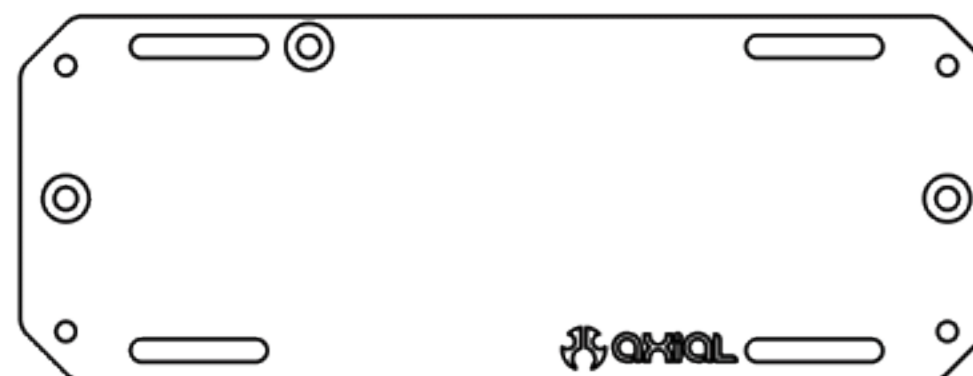


AX30450 x4
Flange Pipe 3x4.5x5.5

AX30483 x1
AX10 Scorpion Battery Tray

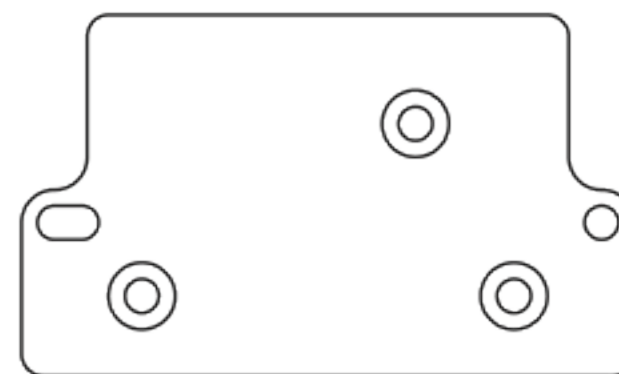


AX30485 x1
AX10 Scorpion Servo Plate

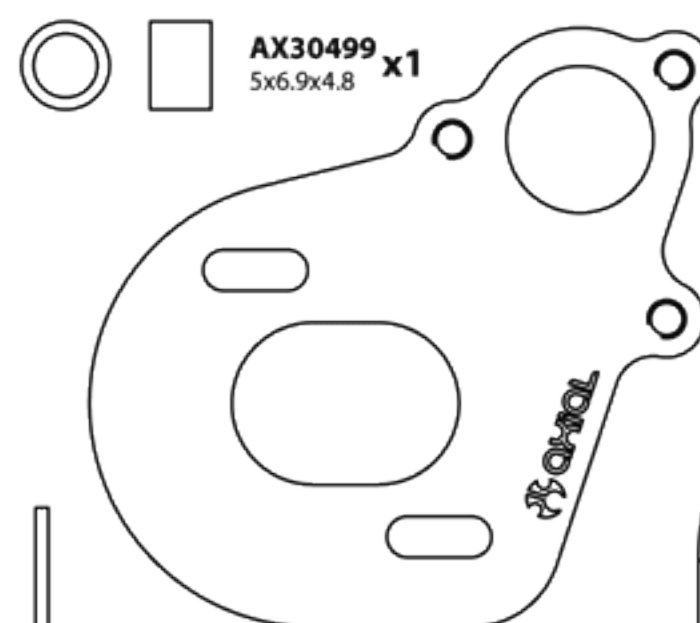


AX30491 x1
AX10 Scorpion Motor Plate




AX30517 x1
6x33mm

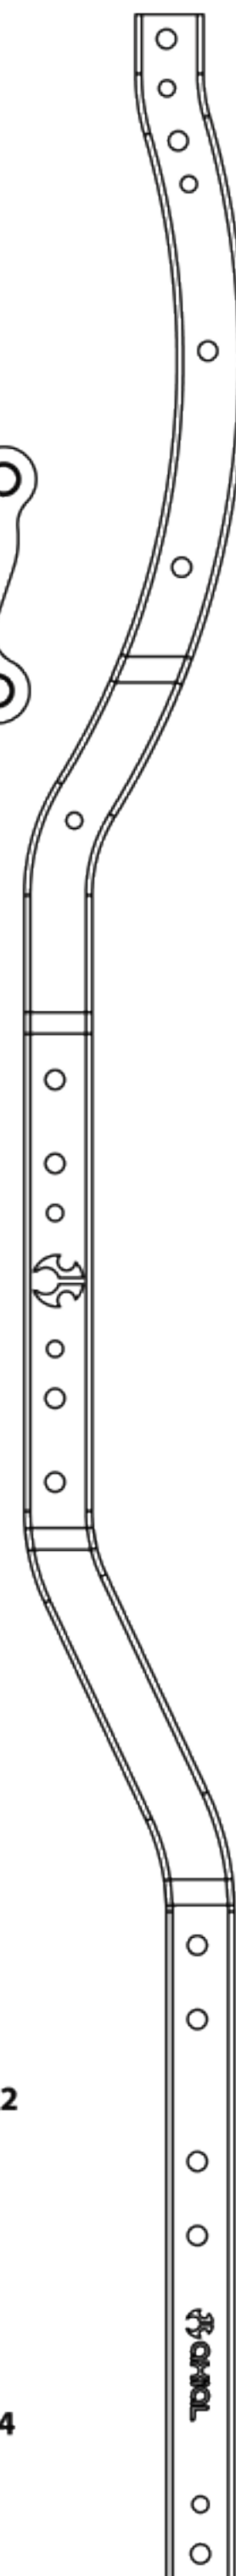

AX30502 x2
SCX10 Chassis Rail

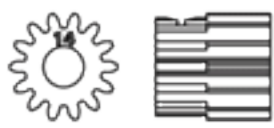


AX30572
Pinion 48DP 14T **x1**

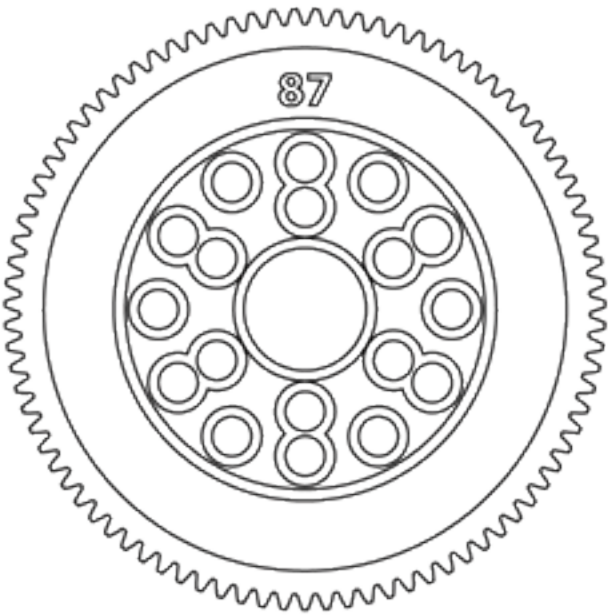

AX30672
Spur 48DP 87T **x1**



AXA013
M2x6mm **x31**



AXA015
M2x10mm **x68**



AXA083
M3x6mm **x5**



AXA085
M3x10mm **x4**




AXA087
M3x16mm **x8**



AXA088
M3x20mm **x1**




AXA089
M3x25mm **x8**




AXA1040
M3 Thin Hex Nut **x4**



AX1045
M4 Nylon Lock Nut **x5**




AXA1053
M3 Nylon Locking Hex Nut **x13**



AXA1059
6mm Body Clip **x8**



AXA1070
Washer 3x6x0.5mm **x5**



AXA1071
Washer 4x8x0.5mm **x1**




AXA1091
Washer 5x10x0.5mm **x1**



AXA1105
Cone Washer 3x6.9x2 **x1**



AXA1163
O-Ring 7x1mm **x4**




AXA1179
O-Ring 2.5x1.5mm **x10**



AXA1218
Bearing 5x10x4mm **x4**




AXA1221
Bearing 5x11x4mm **x10**

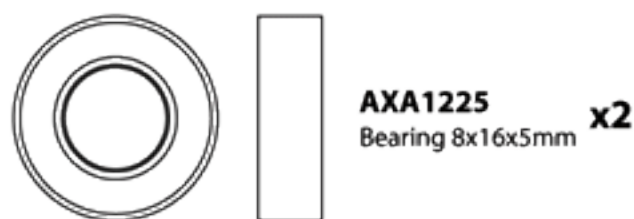

AXA1225
Bearing 8x16x5mm **x2**



AXA1230
Bearing 10x15x4mm **x6**



AXA1280
M3x10mm **x4**



AXA1327
7.5x6mm **x4**



AXA1358
Shock Damper 3x7x8 **x4**



AXA1392
E2 e-clip **x8**



AXA1393
E2.5 e-clip **x2**




AXA1414
6x2x3mm **x1**




AXA1416
6x4x3mm **x4**



AXA1421
7x20mm Post - Grey **x1**




AXA1429
7x60mm Post **x4**



AXA176
M3x2.5x13mm Screw Shaft **x6**



AXA180
M3x3mm Set Screw **x9**



AXA186
3x16mm Set Screw **x21**




AXA117
M3x15mm Hex Socket Button Head **x1**



AXA118
M3x18mm Hex Socket Button Head **x2**



AXA119
M3x20mm Hex Socket Button Head **x4**

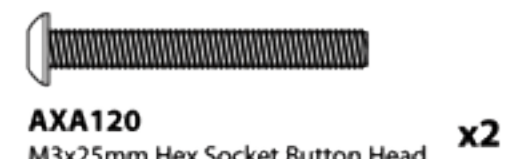

AXA120
M3x25mm Hex Socket Button Head **x2**



AXA144
M3x8mm Hex Socket Flat Head **x1**



AXA1260
M2.5x12mm Hex Socket Tapping Flat Head **x2**



AXA463
M3x6mm Hex Socket Tapping Flat Head **x1**



AXA464
M3x8mm Hex Socket Tapping Flat Head **x15**



AXA465
M3x10mm Hex Socket Tapping Flat Head **x3**




AXA466
M3x12mm Hex Socket Tapping Flat Head **x4**



AXA468
M3x18mm Hex Socket Tapping Flat Head **x2**



AXA469
M3x20mm Hex Socket Tapping Flat Head **x4**

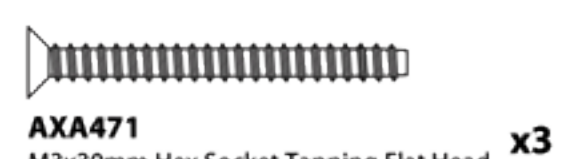

AXA471
M3x30mm Hex Socket Tapping Flat Head **x3**



AXA433
M3x6mm Hex Socket Tapping Button Head **x17**




AXA434
M3x8mm Hex Socket Tapping Button Head **x8**



AXA435
M3x10mm Hex Socket Tapping Button Head **x12**



AXA438
M3x18mm Hex Socket Tapping Button Head **x4**

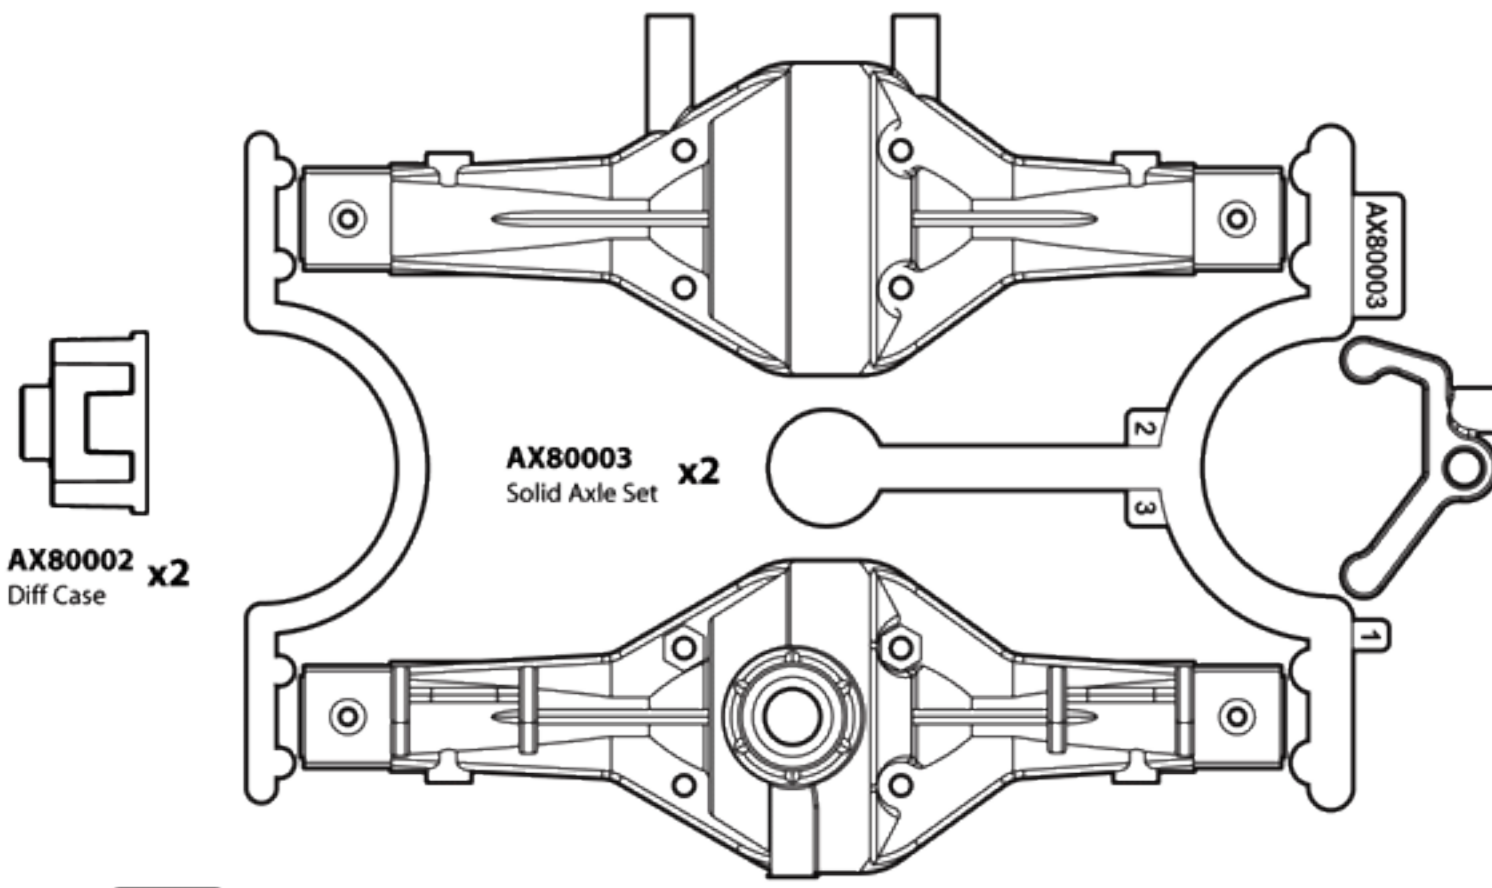


AX80003
Solid Axle Set **x2**




AX80002
Diff Case **x2**




AX80004
Hub Set **x1**

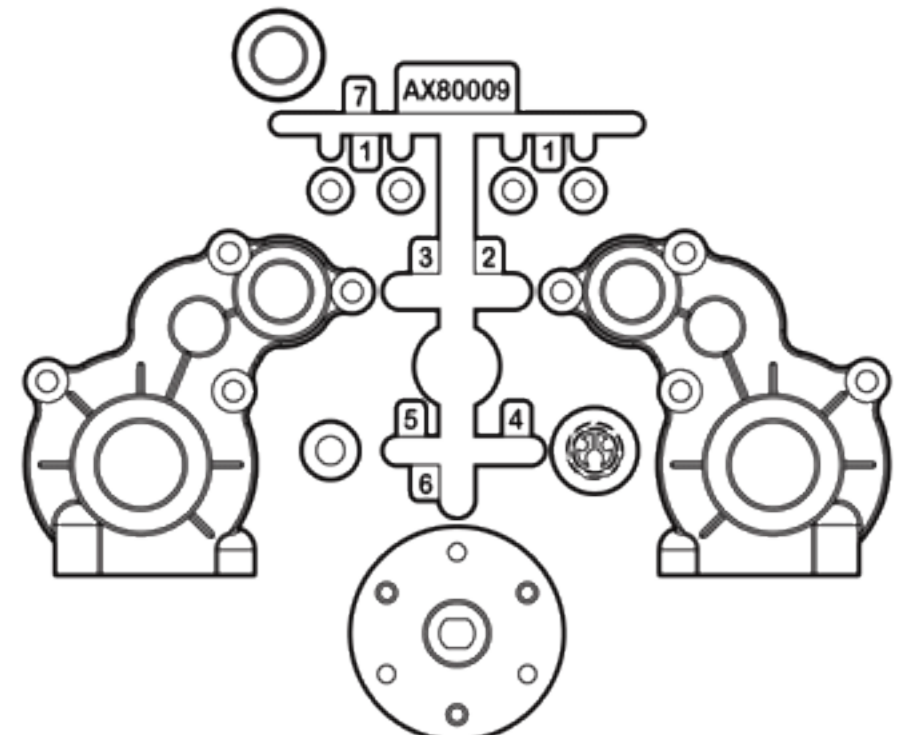


AX80009
Transmission Set **x1**

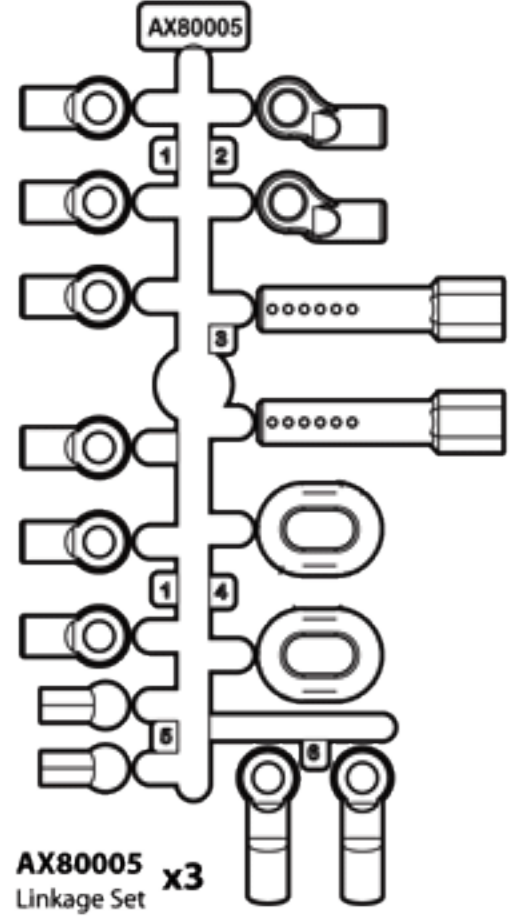


AX80005
Linkage Set **x3**

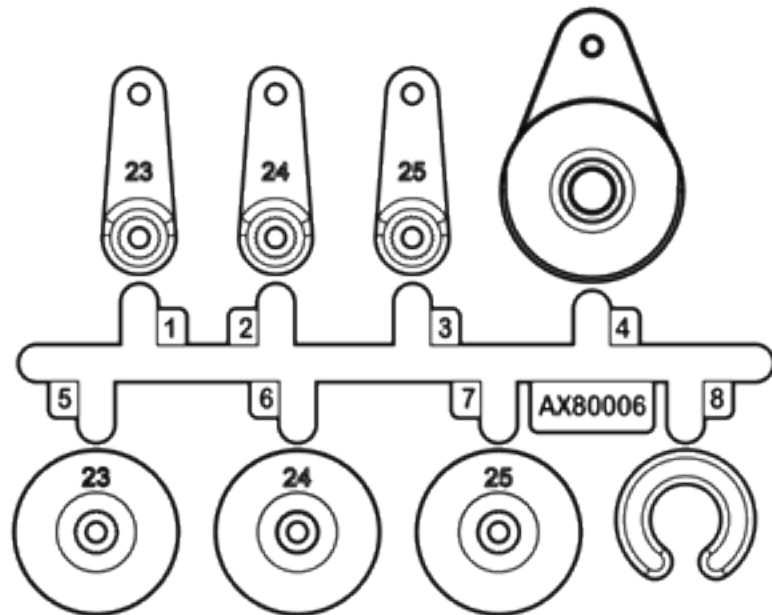


AX80006
Servo Set **x1**

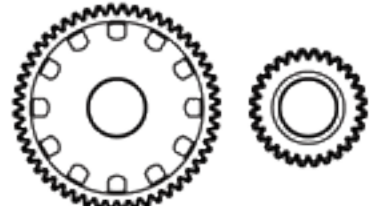


AX80010
Gear Set **x1**

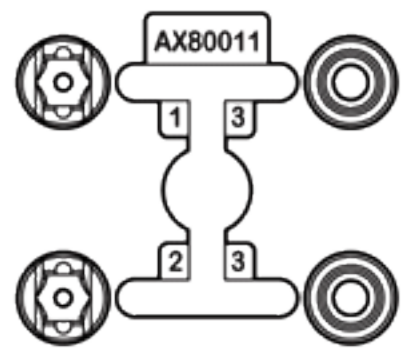


AX80011
Drive Shaft Set **x2**

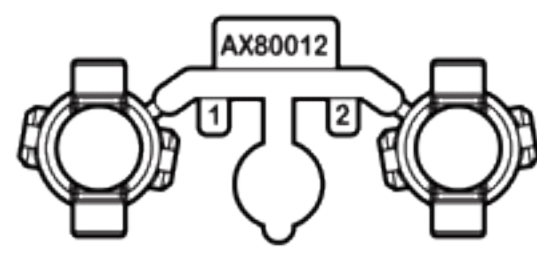


AX80012
C Hub Carrier **x1**

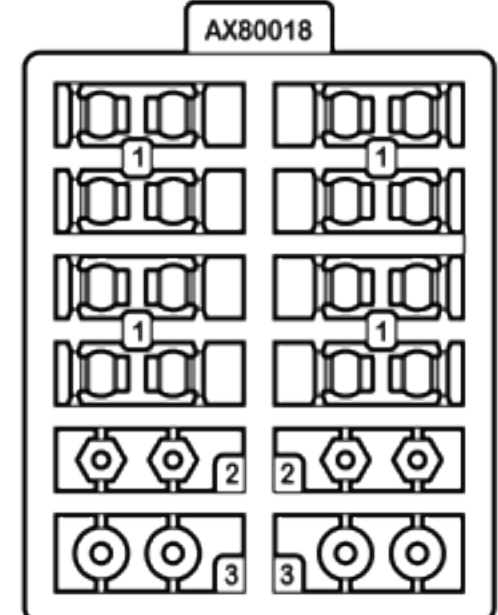


AX80018
Hardware Parts Tree **x2**

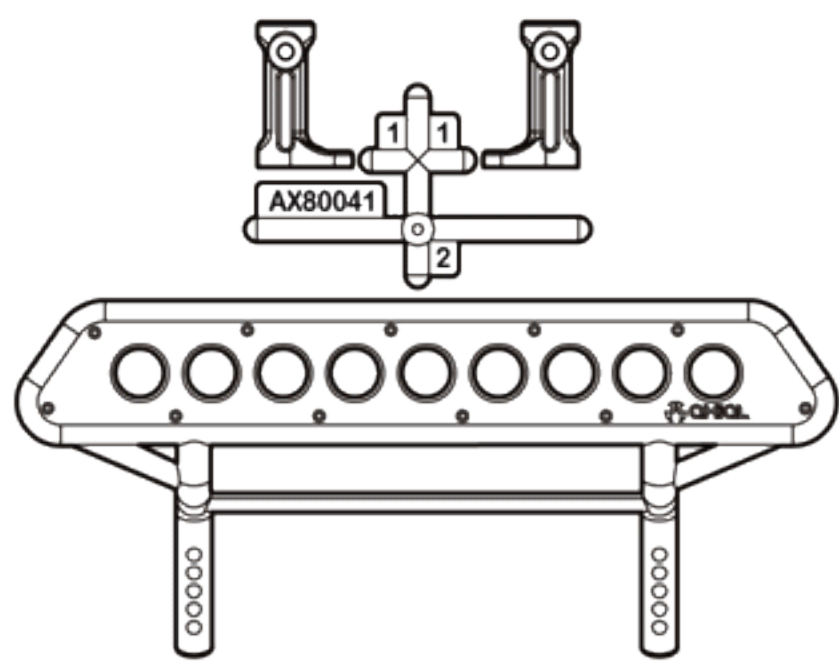


AX80041
1/10th Scale Rock Rails Set **x2**

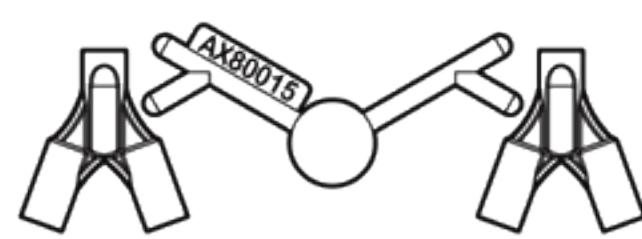


AX80015
3 Link Connector **x1**

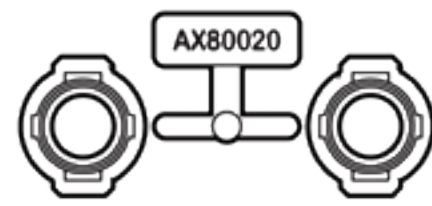


AX80020
Straight Axle Adapter Parts Tree **x1**

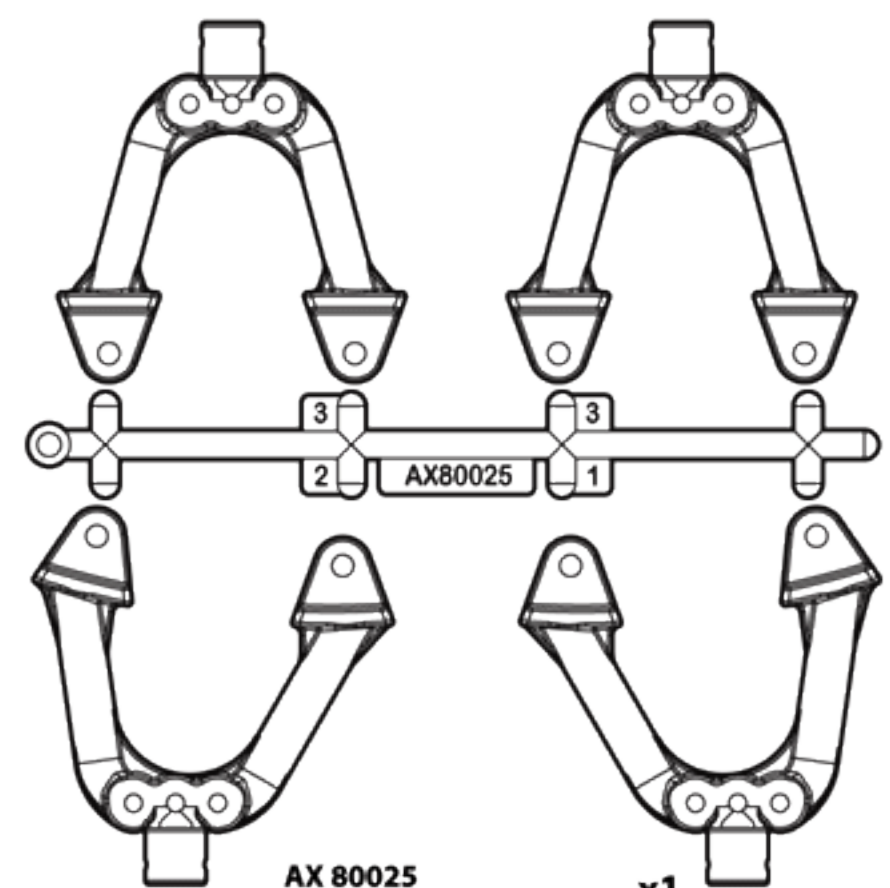



AX80025
SCX10 Shock Hoops Parts Tree **x1**

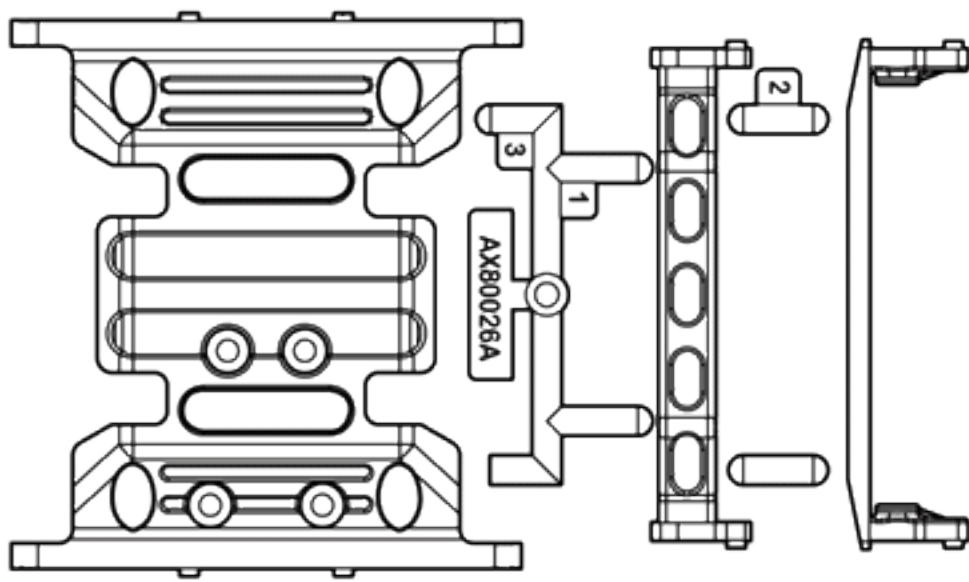


AX80026A
SCX10 Frame Brace Set **x1**

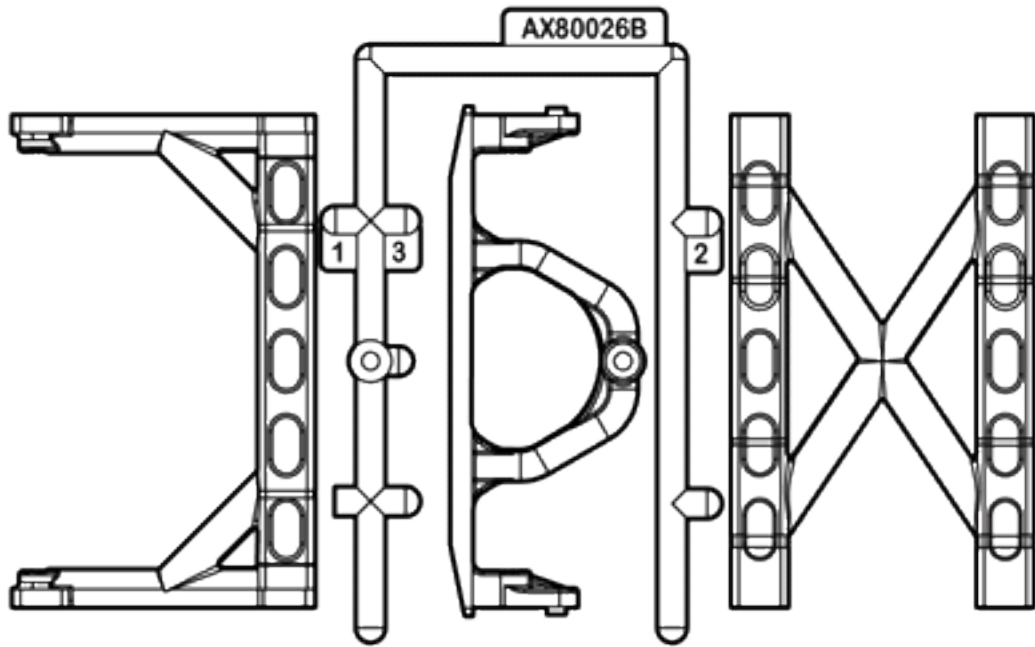


AX80026B
SCX10 Frame Brace Set **x1**

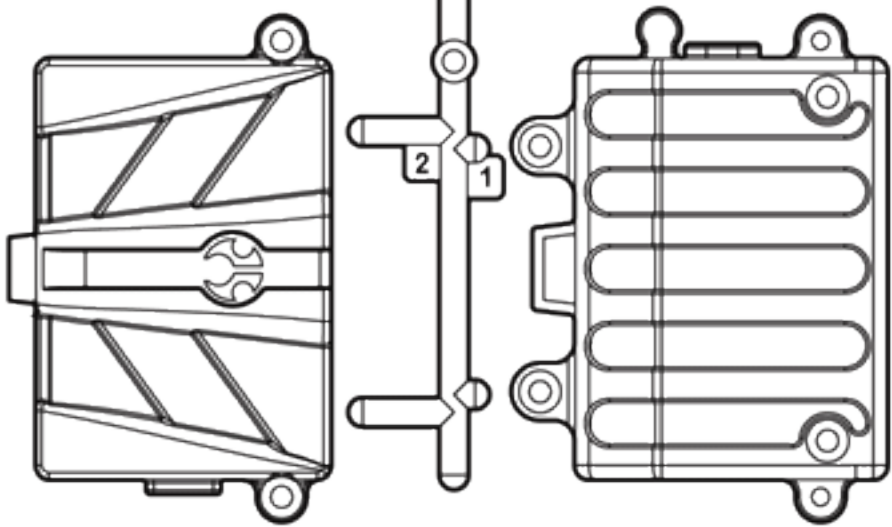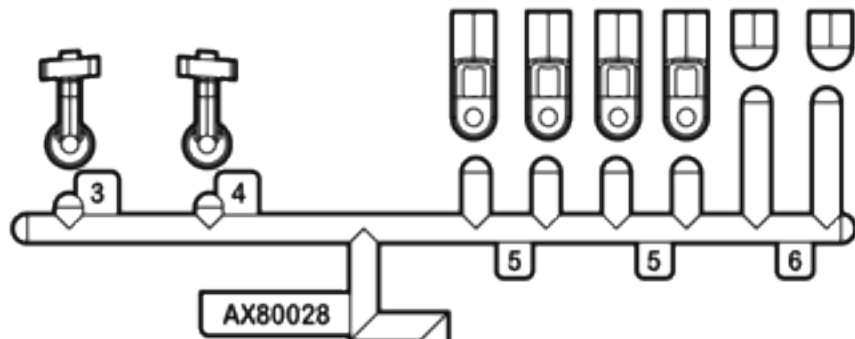


AX80028
SCX10 Radio Box Parts Tree **x1**

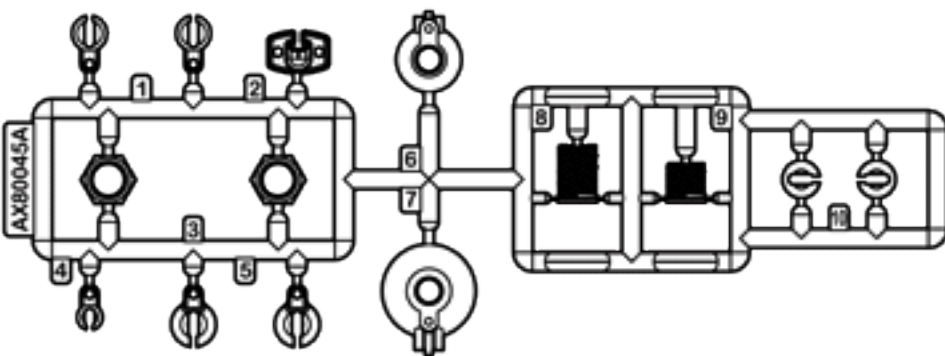


AX80045A
LED Light Holder Set **x2**

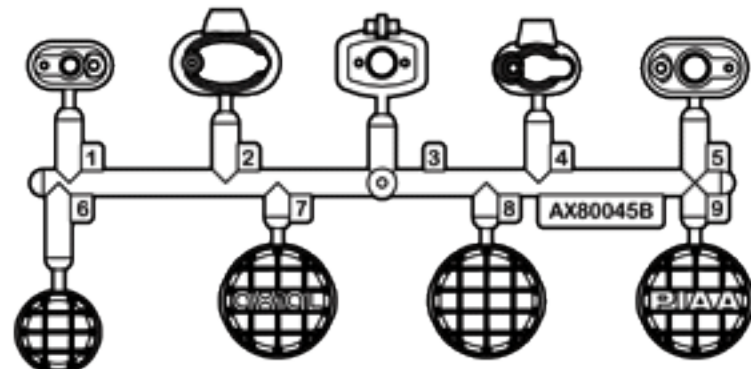


AX80045B
LED Light Holder Set **x2**

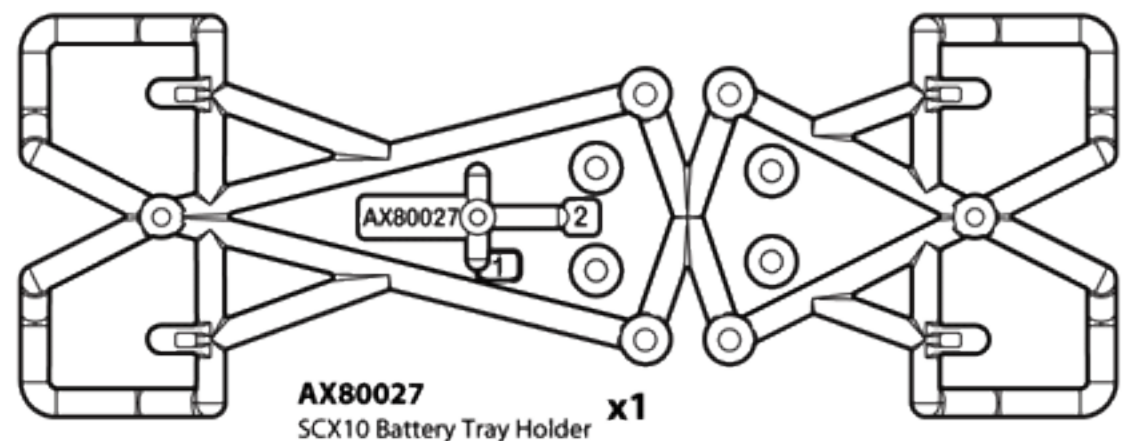


AX80027
SCX10 Battery Tray Holder **x1**

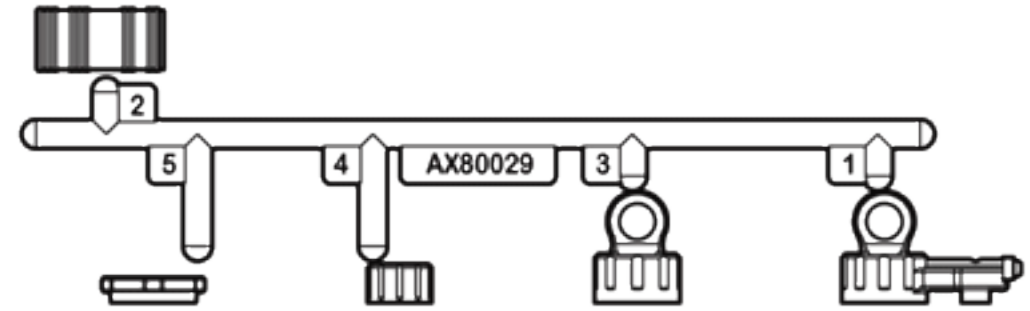


AX80029
Shock Cap Parts Tree **x4**

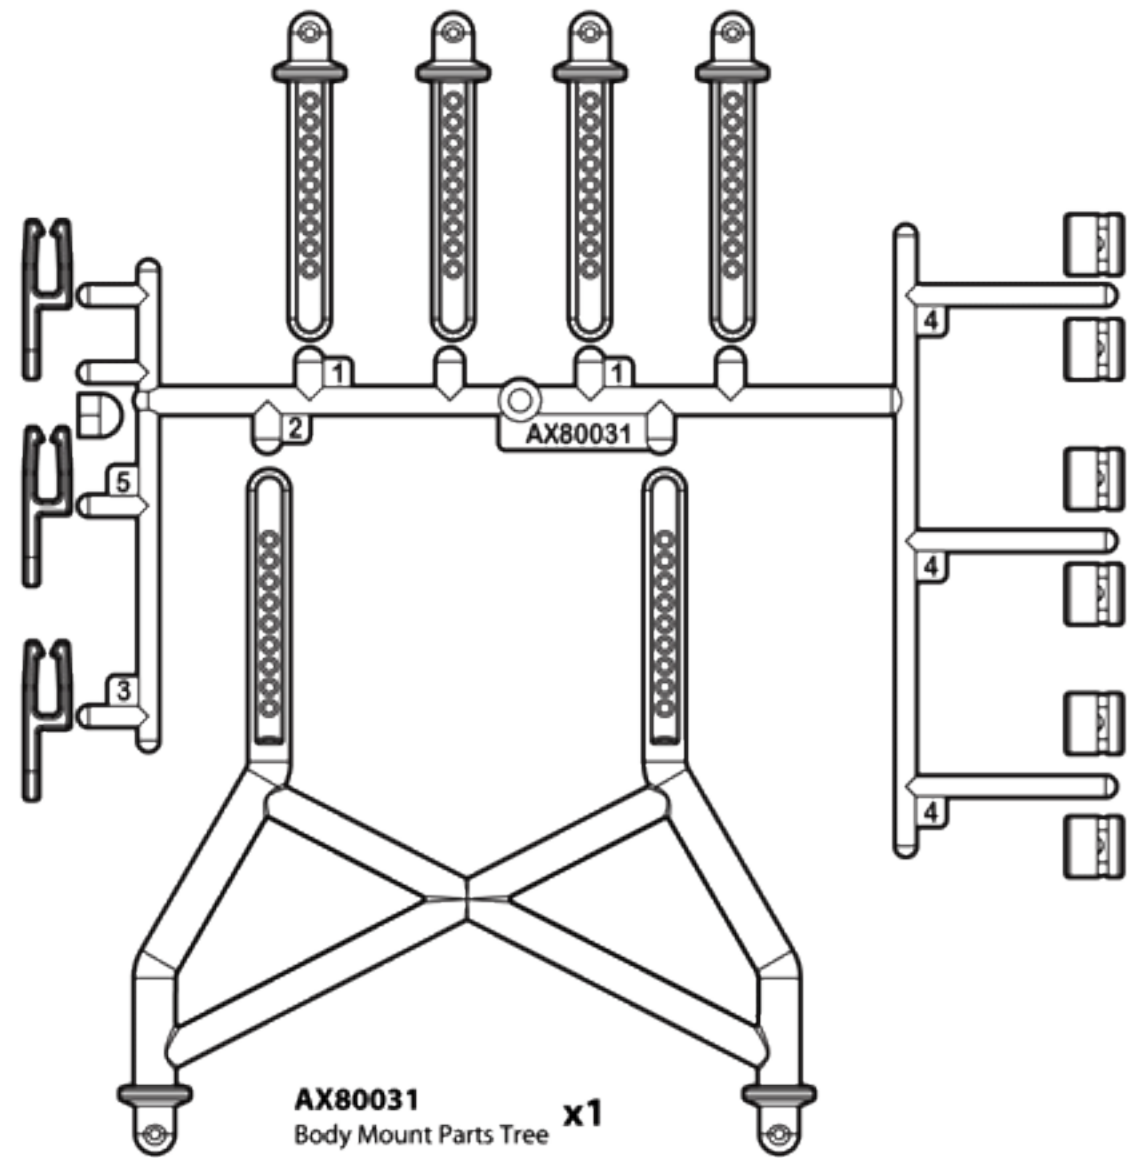


AX80031
Body Mount Parts Tree **x1**

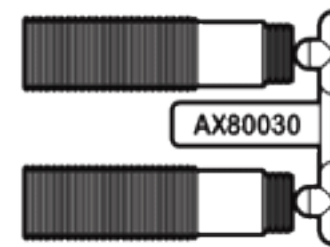


AX80030
61-90 Shock Body Set **x2**

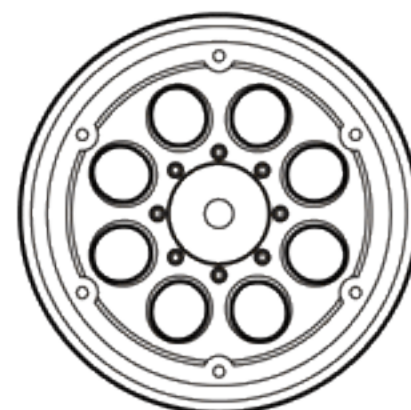


AX80088
1.9 8 Hole Beadlocks (Satin Chrome) **x4**

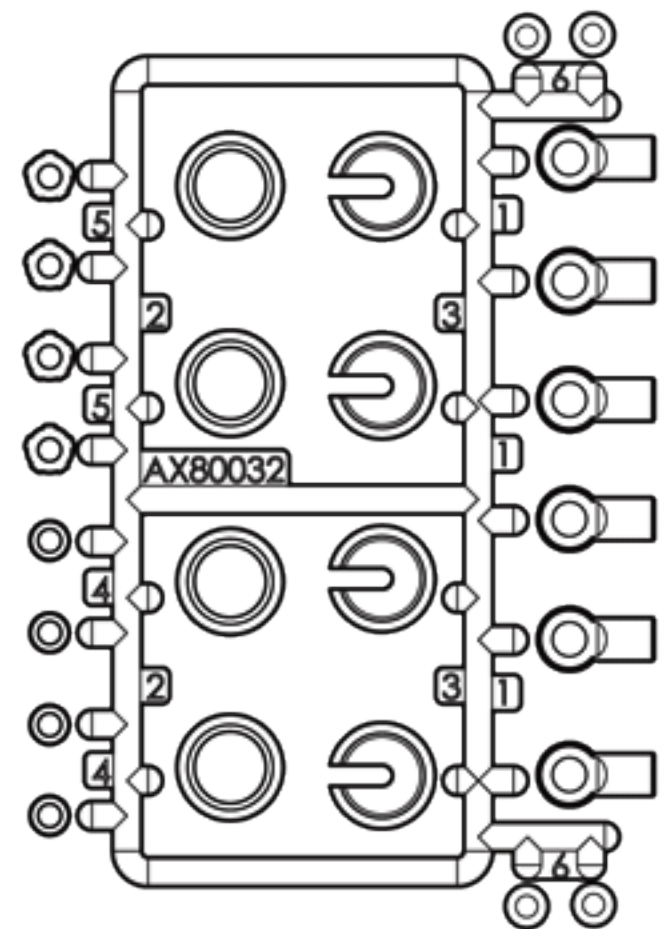


AX80032
Shock Parts **x1**

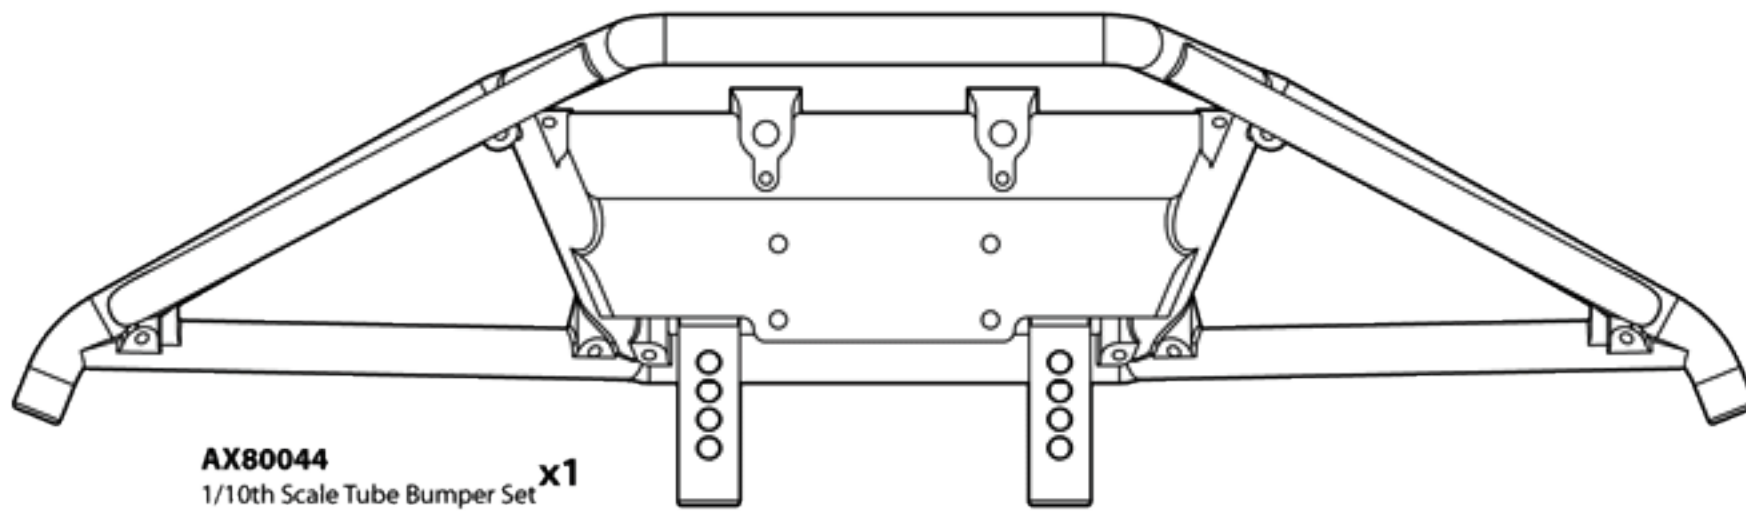

AX80044
1/10th Scale Tube Bumper Set **x1**

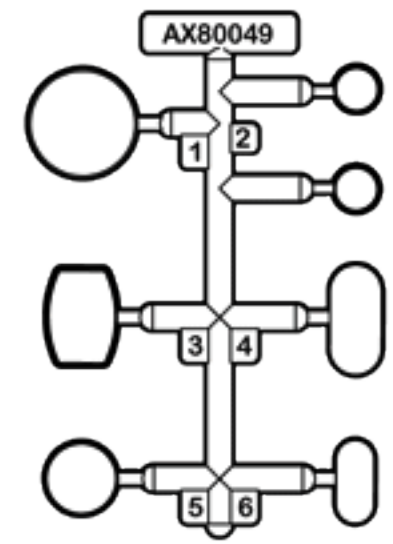


AX80049
LED Lens Set - Clear **x2**

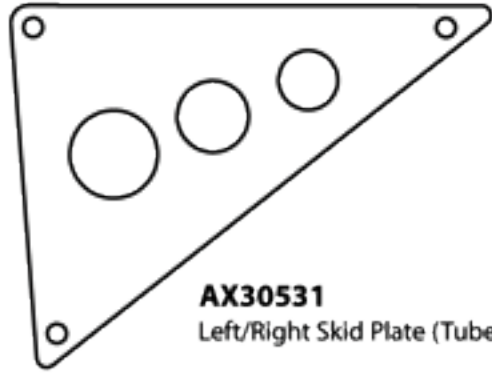


AX30531
Left/Right Skid Plate (Tube Style Bumper) **x2**




AX30530
Front Skid Plate (Tube Style Bumper) **x1**

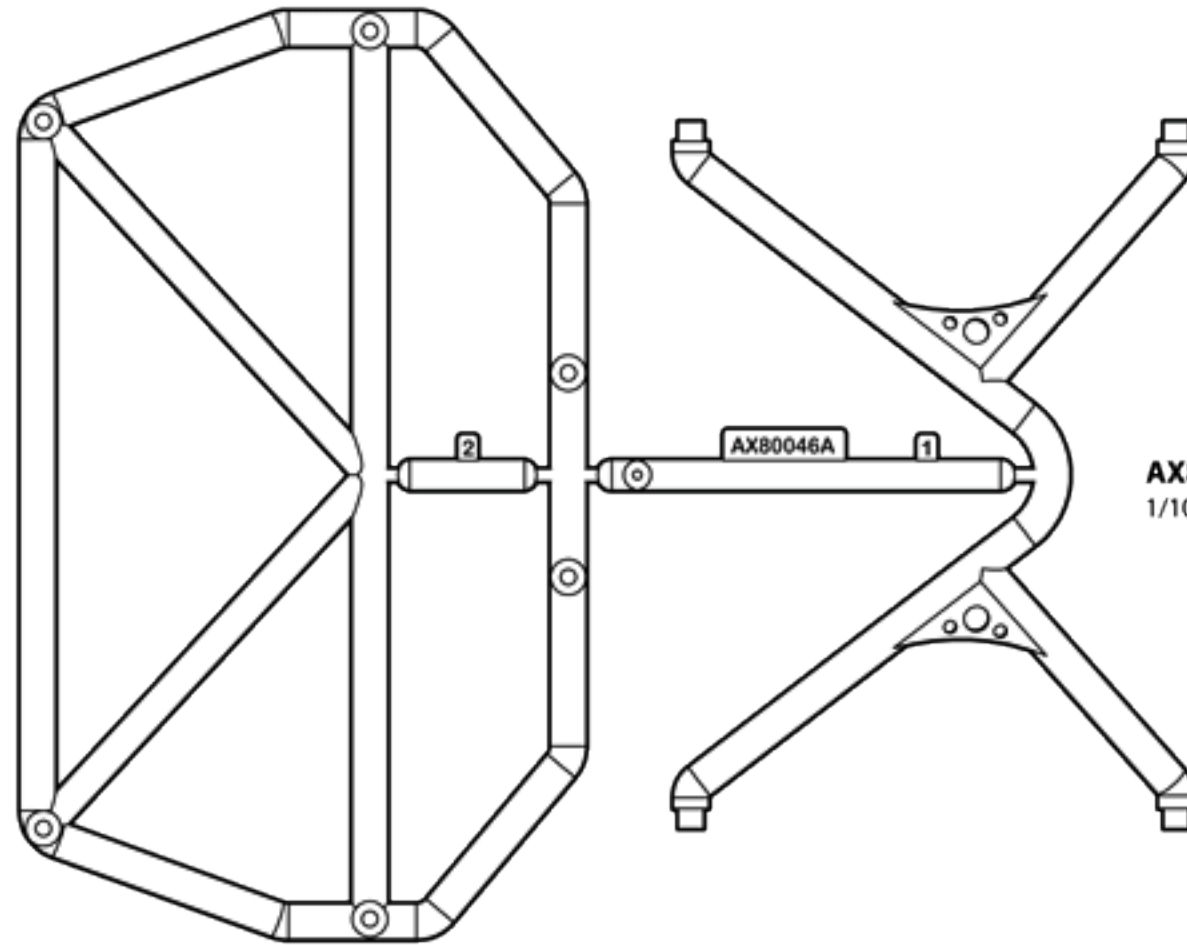


AX80046A
1/10th Scale Truggy Bed Set **x1**

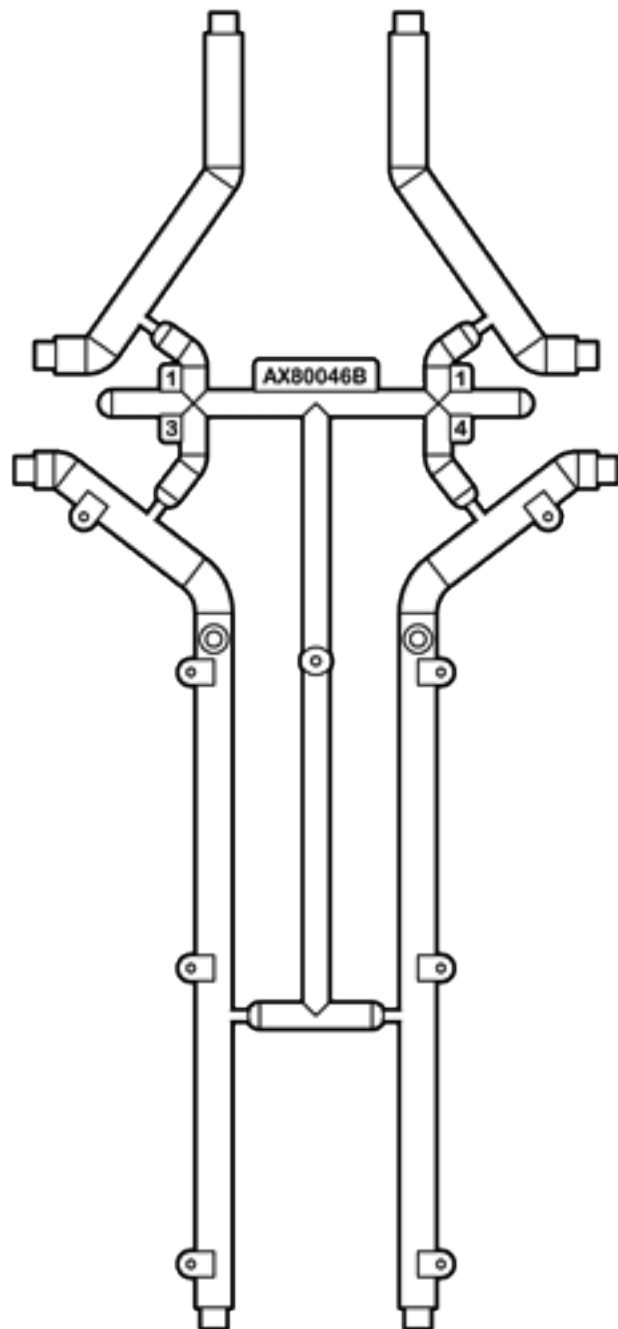


AX80046B
1/10th Scale Truggy Bed Set **x1**

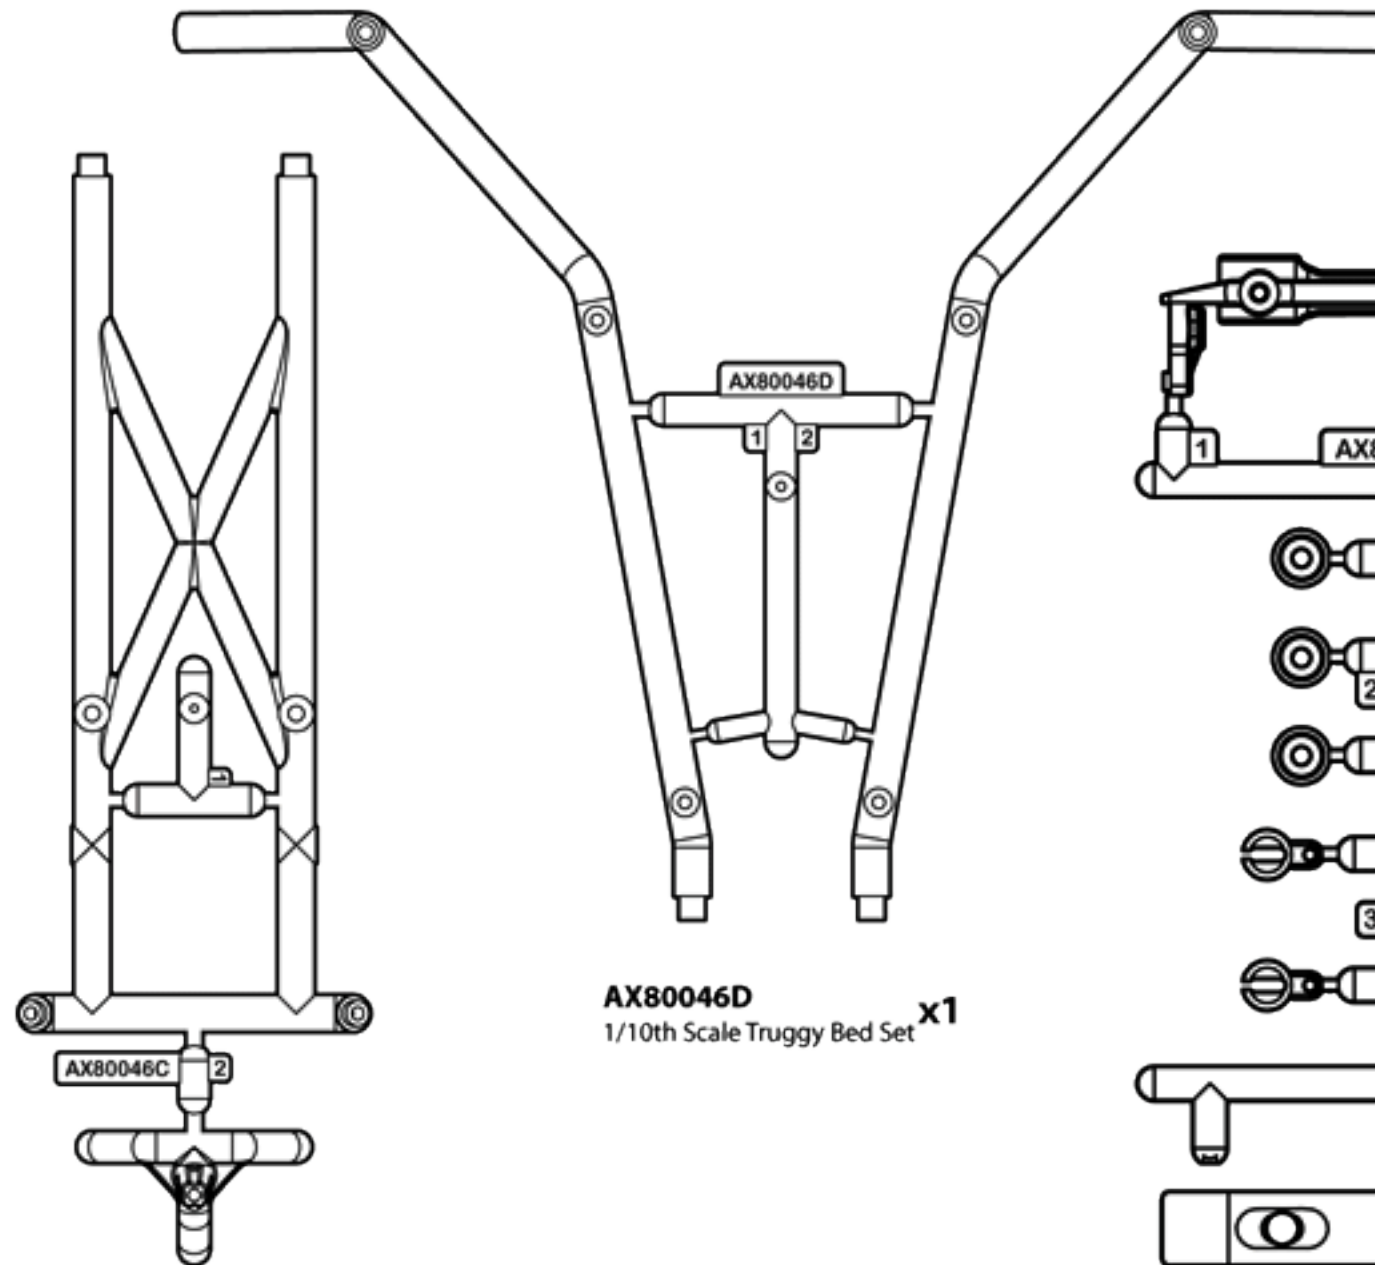

AX80046C
1/10th Scale Truggy Bed Set **x1**

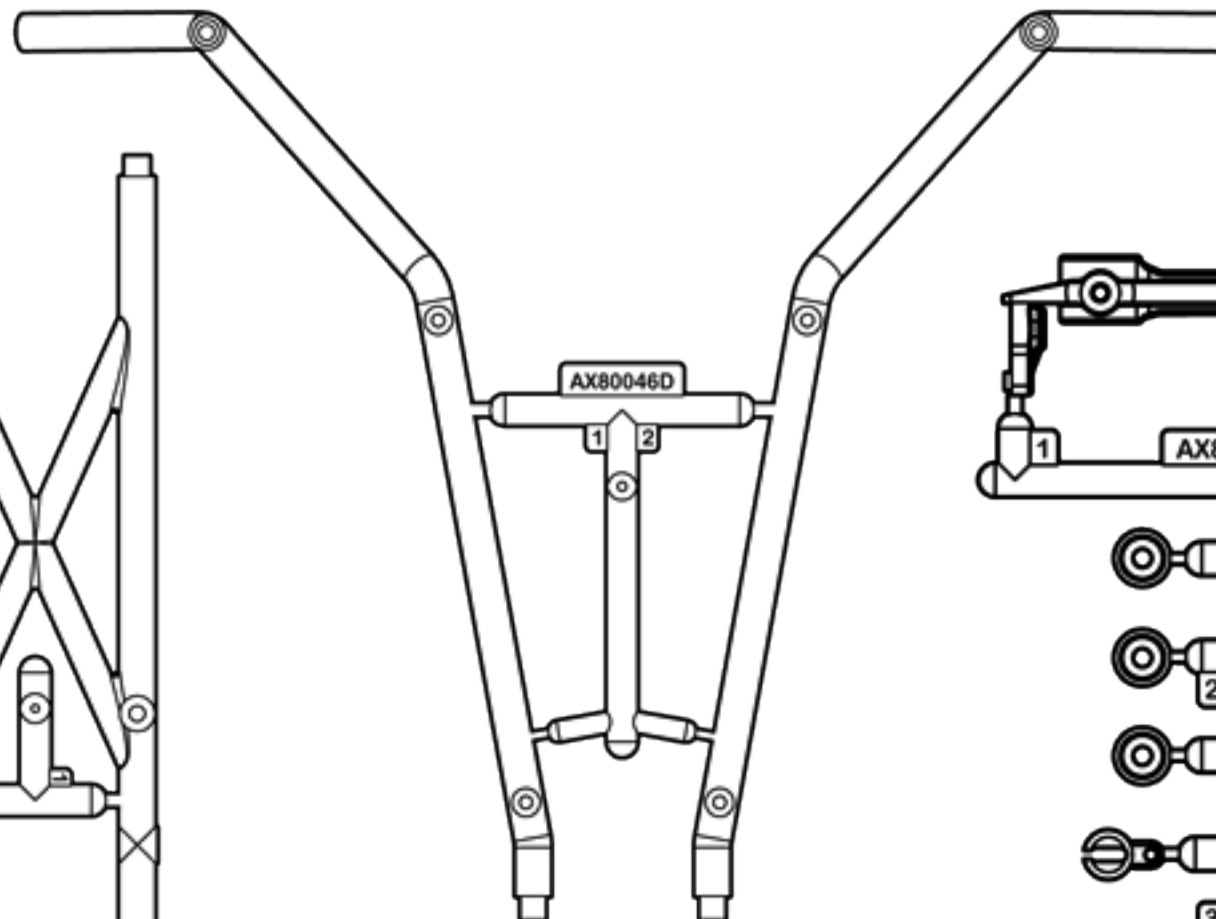

AX80046D
1/10th Scale Truggy Bed Set **x1**

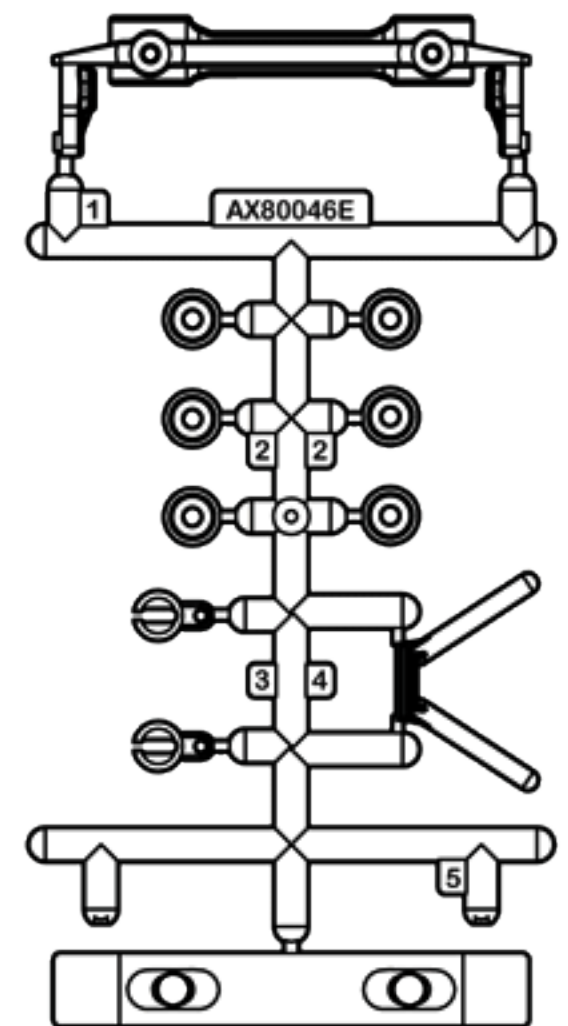

AX80046E
1/10th Scale Truggy Bed Set **x1**

A**Open Bag A****1**

AX30405
Input Shaft 5x28mm **x1**




AX30163
Pin 2x10mm **x1**




AXA1393
E2.5 e-clip **x1**



AX30393
13T Bevel Gear **x1**

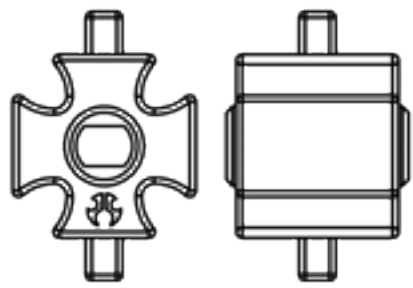

AX30500
Heavy Duty Lovker **x1**

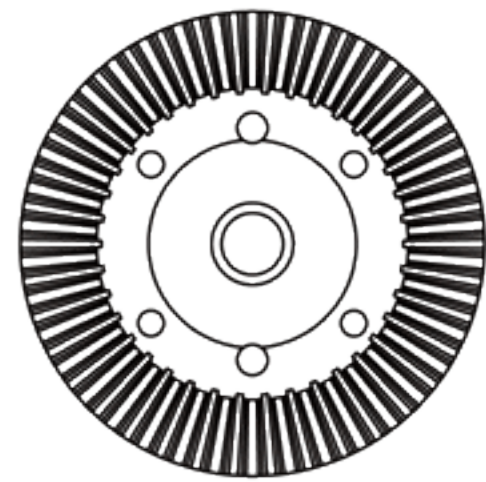

AX30392
38T Bevel Gear **x1**




AXA015
M2x10mm **x4**



AXA1230
Bearing 10x15x4mm **x2**



AXA1221
Bearing 5x11x4mm **x2**

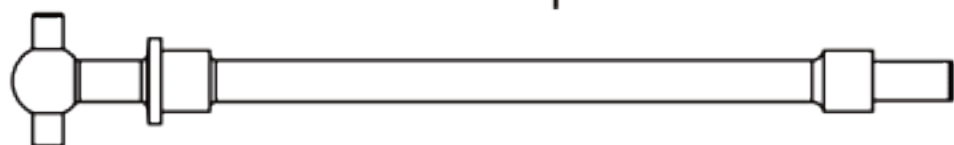

AX30420
Solid Axle Dogbone 6x74mm **x2**

Option Parts

AX30464
AX10 Scorpion Universal Joint

AXA1393


AX30163

AX30393

AX30405

Option Parts

AX30395
Heavy Duty Bevel Gear Set

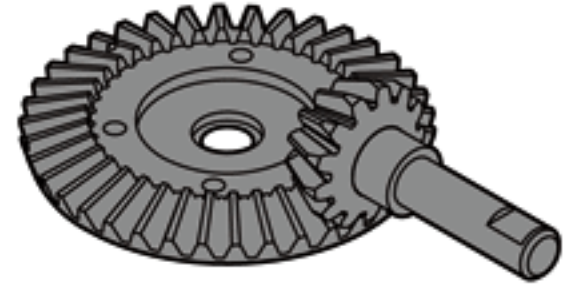**2**AX80002 **1**

AX30500

AX30385

AX30392

AXA015

AXA1230



AXA1221

AX30420



AX30420

AXA1230

AXA1221

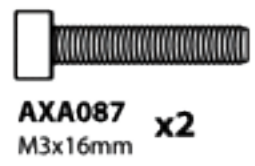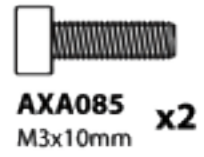


3

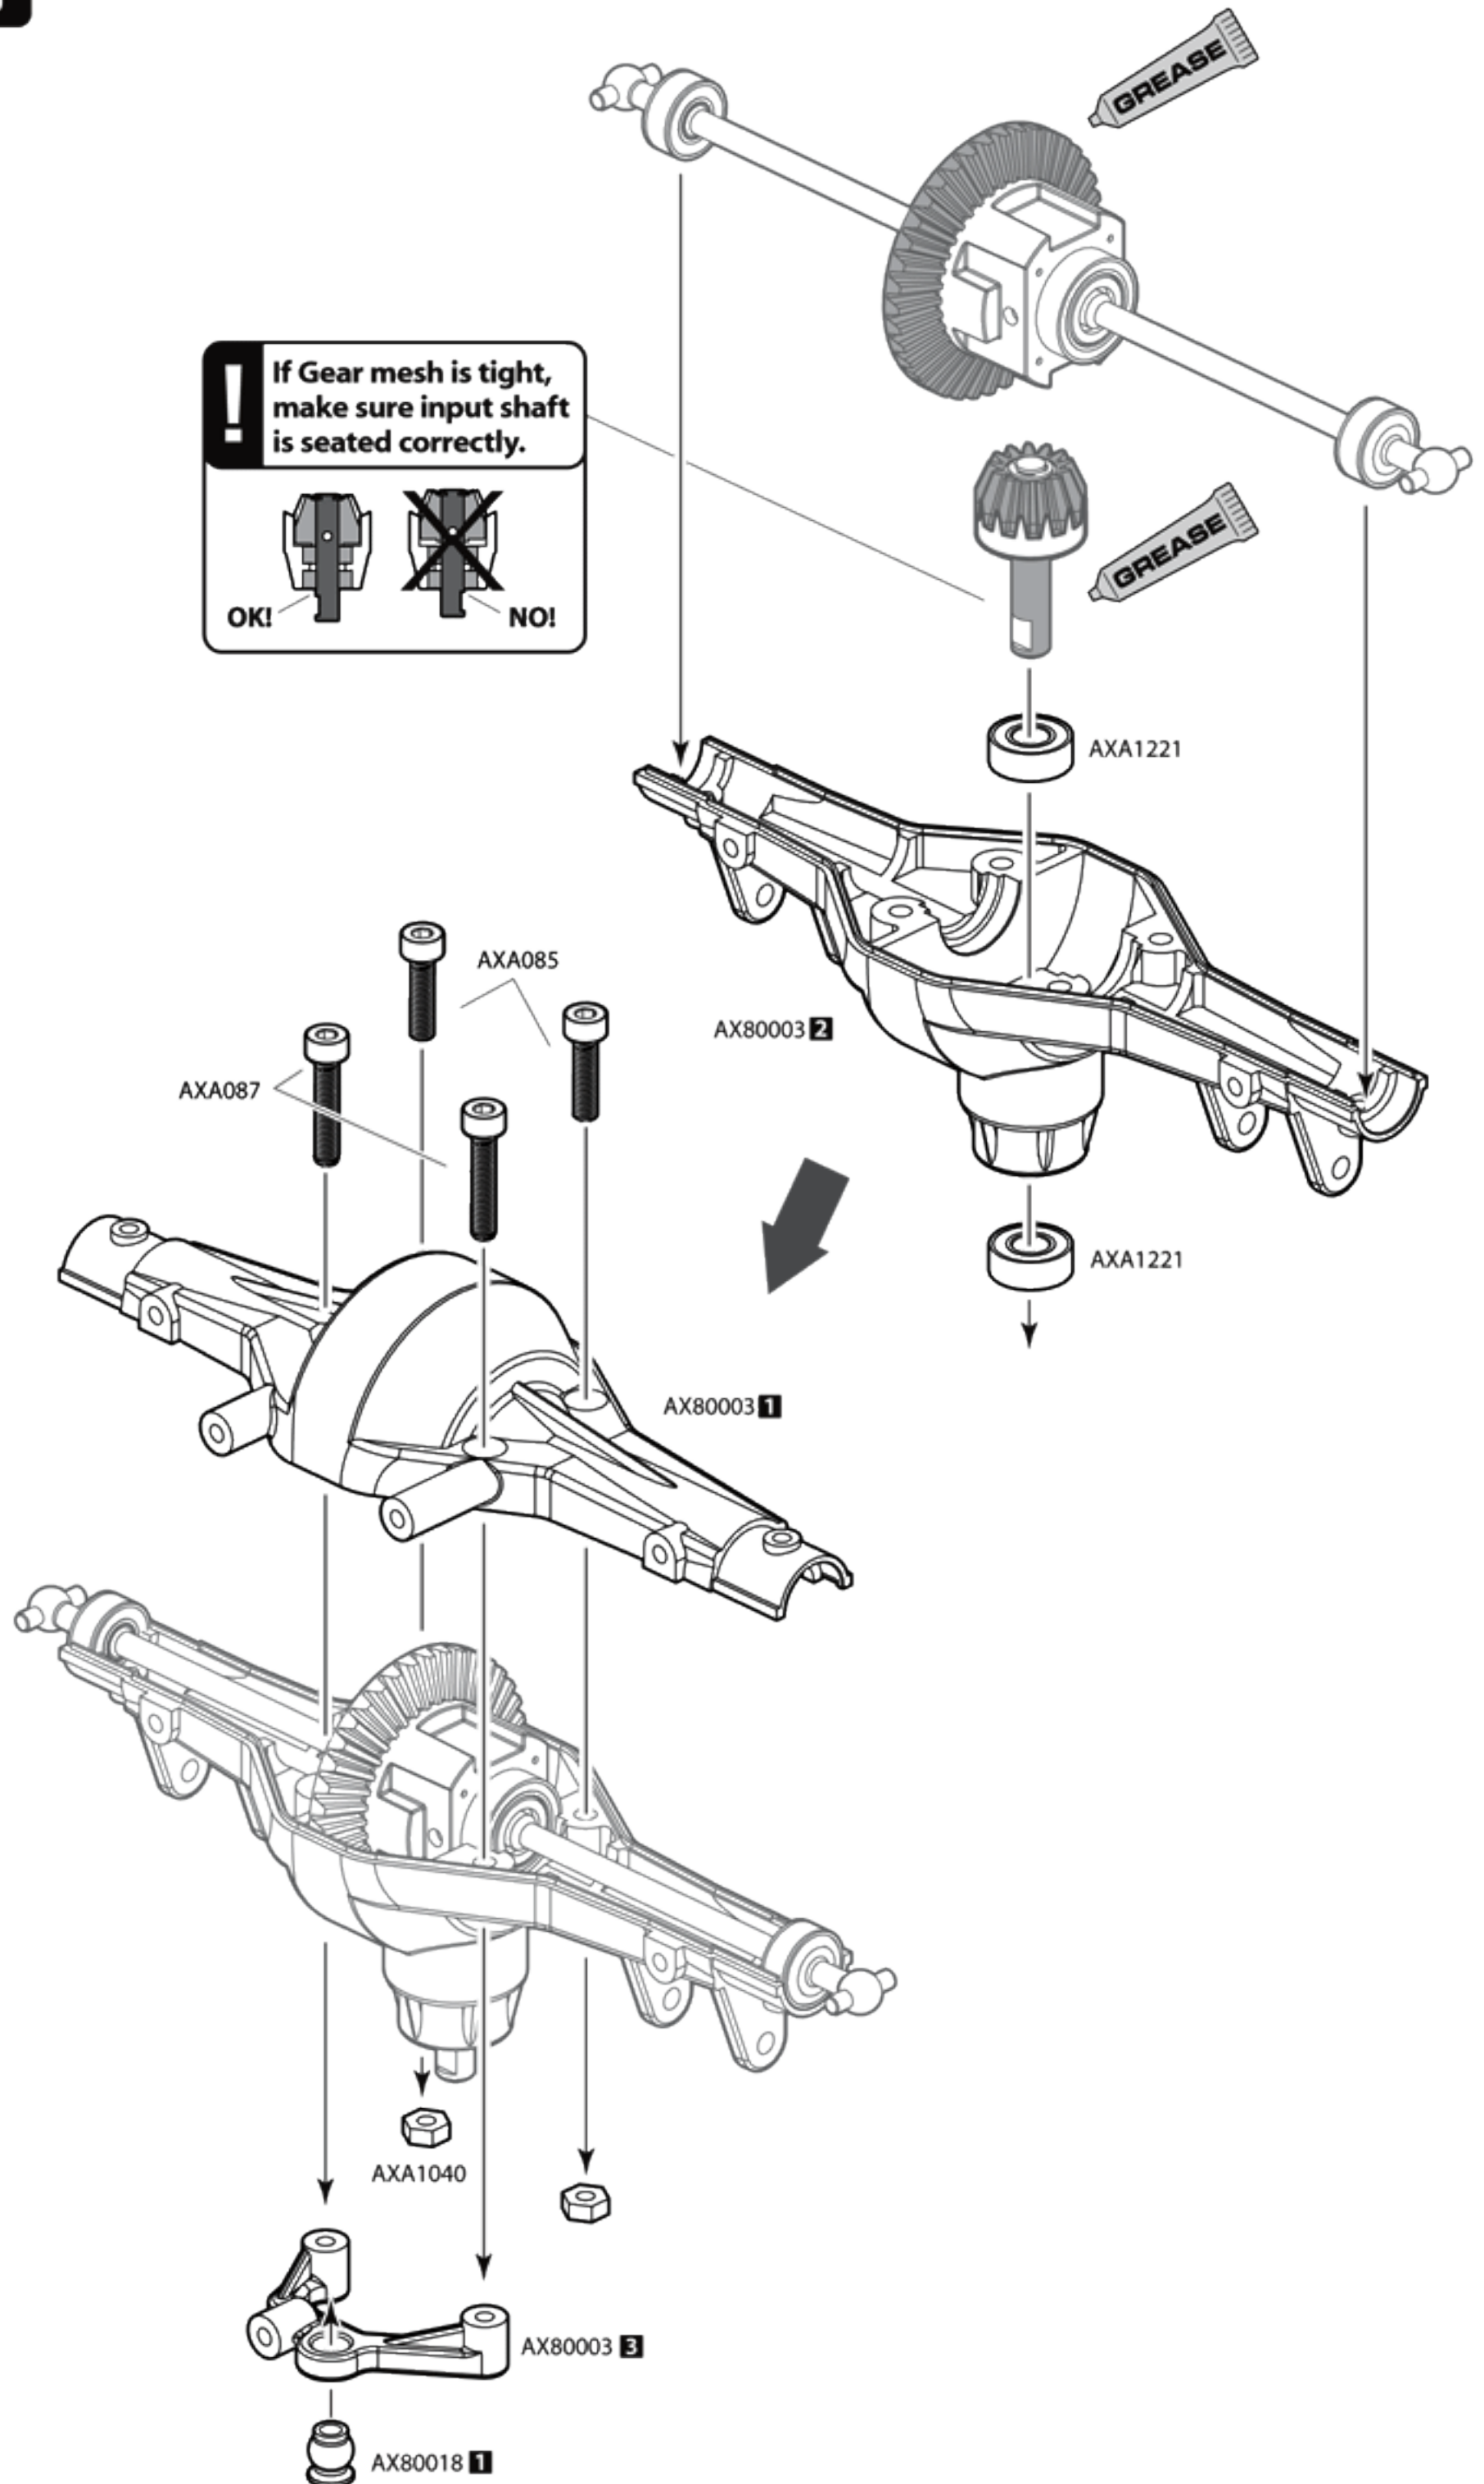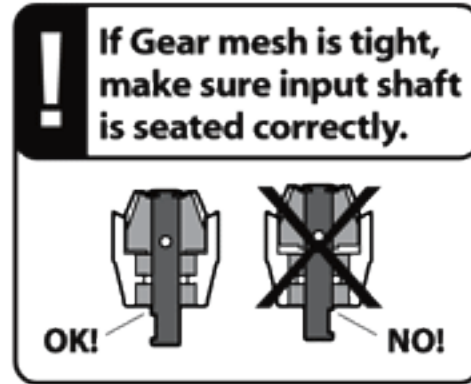



AXA433
M3x6mm Tapping Button Head **x4**

4

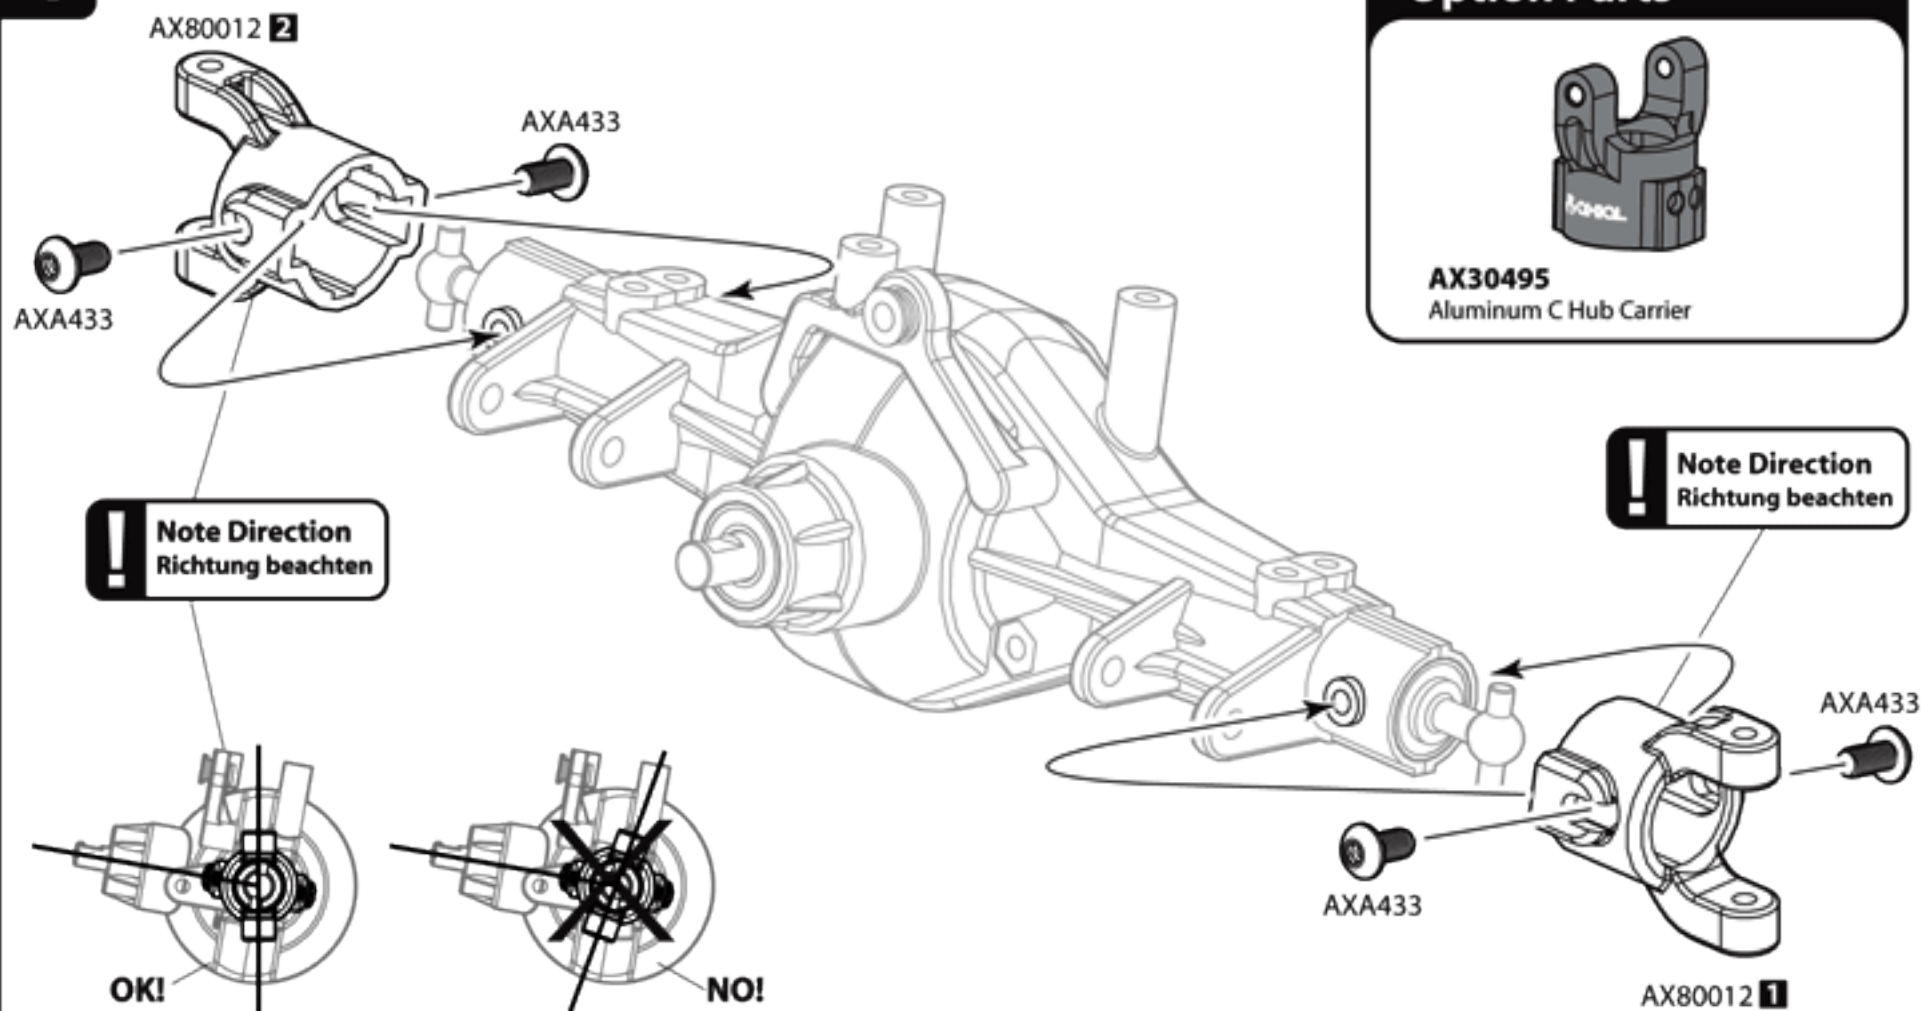

AX30450
Flange Pipe 3x4.5x5.5 **x4**




AXA435
M3x10mm Tapping Button Head **x4**



AXA1221
Bearing 5x11x4mm **x2**




AXA1230
Bearing 10x15x4mm **x2**

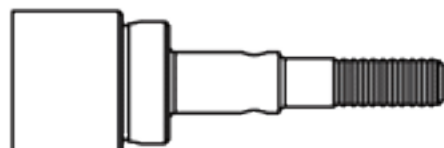

AX30366
Axle 5x35mm **x2**

5

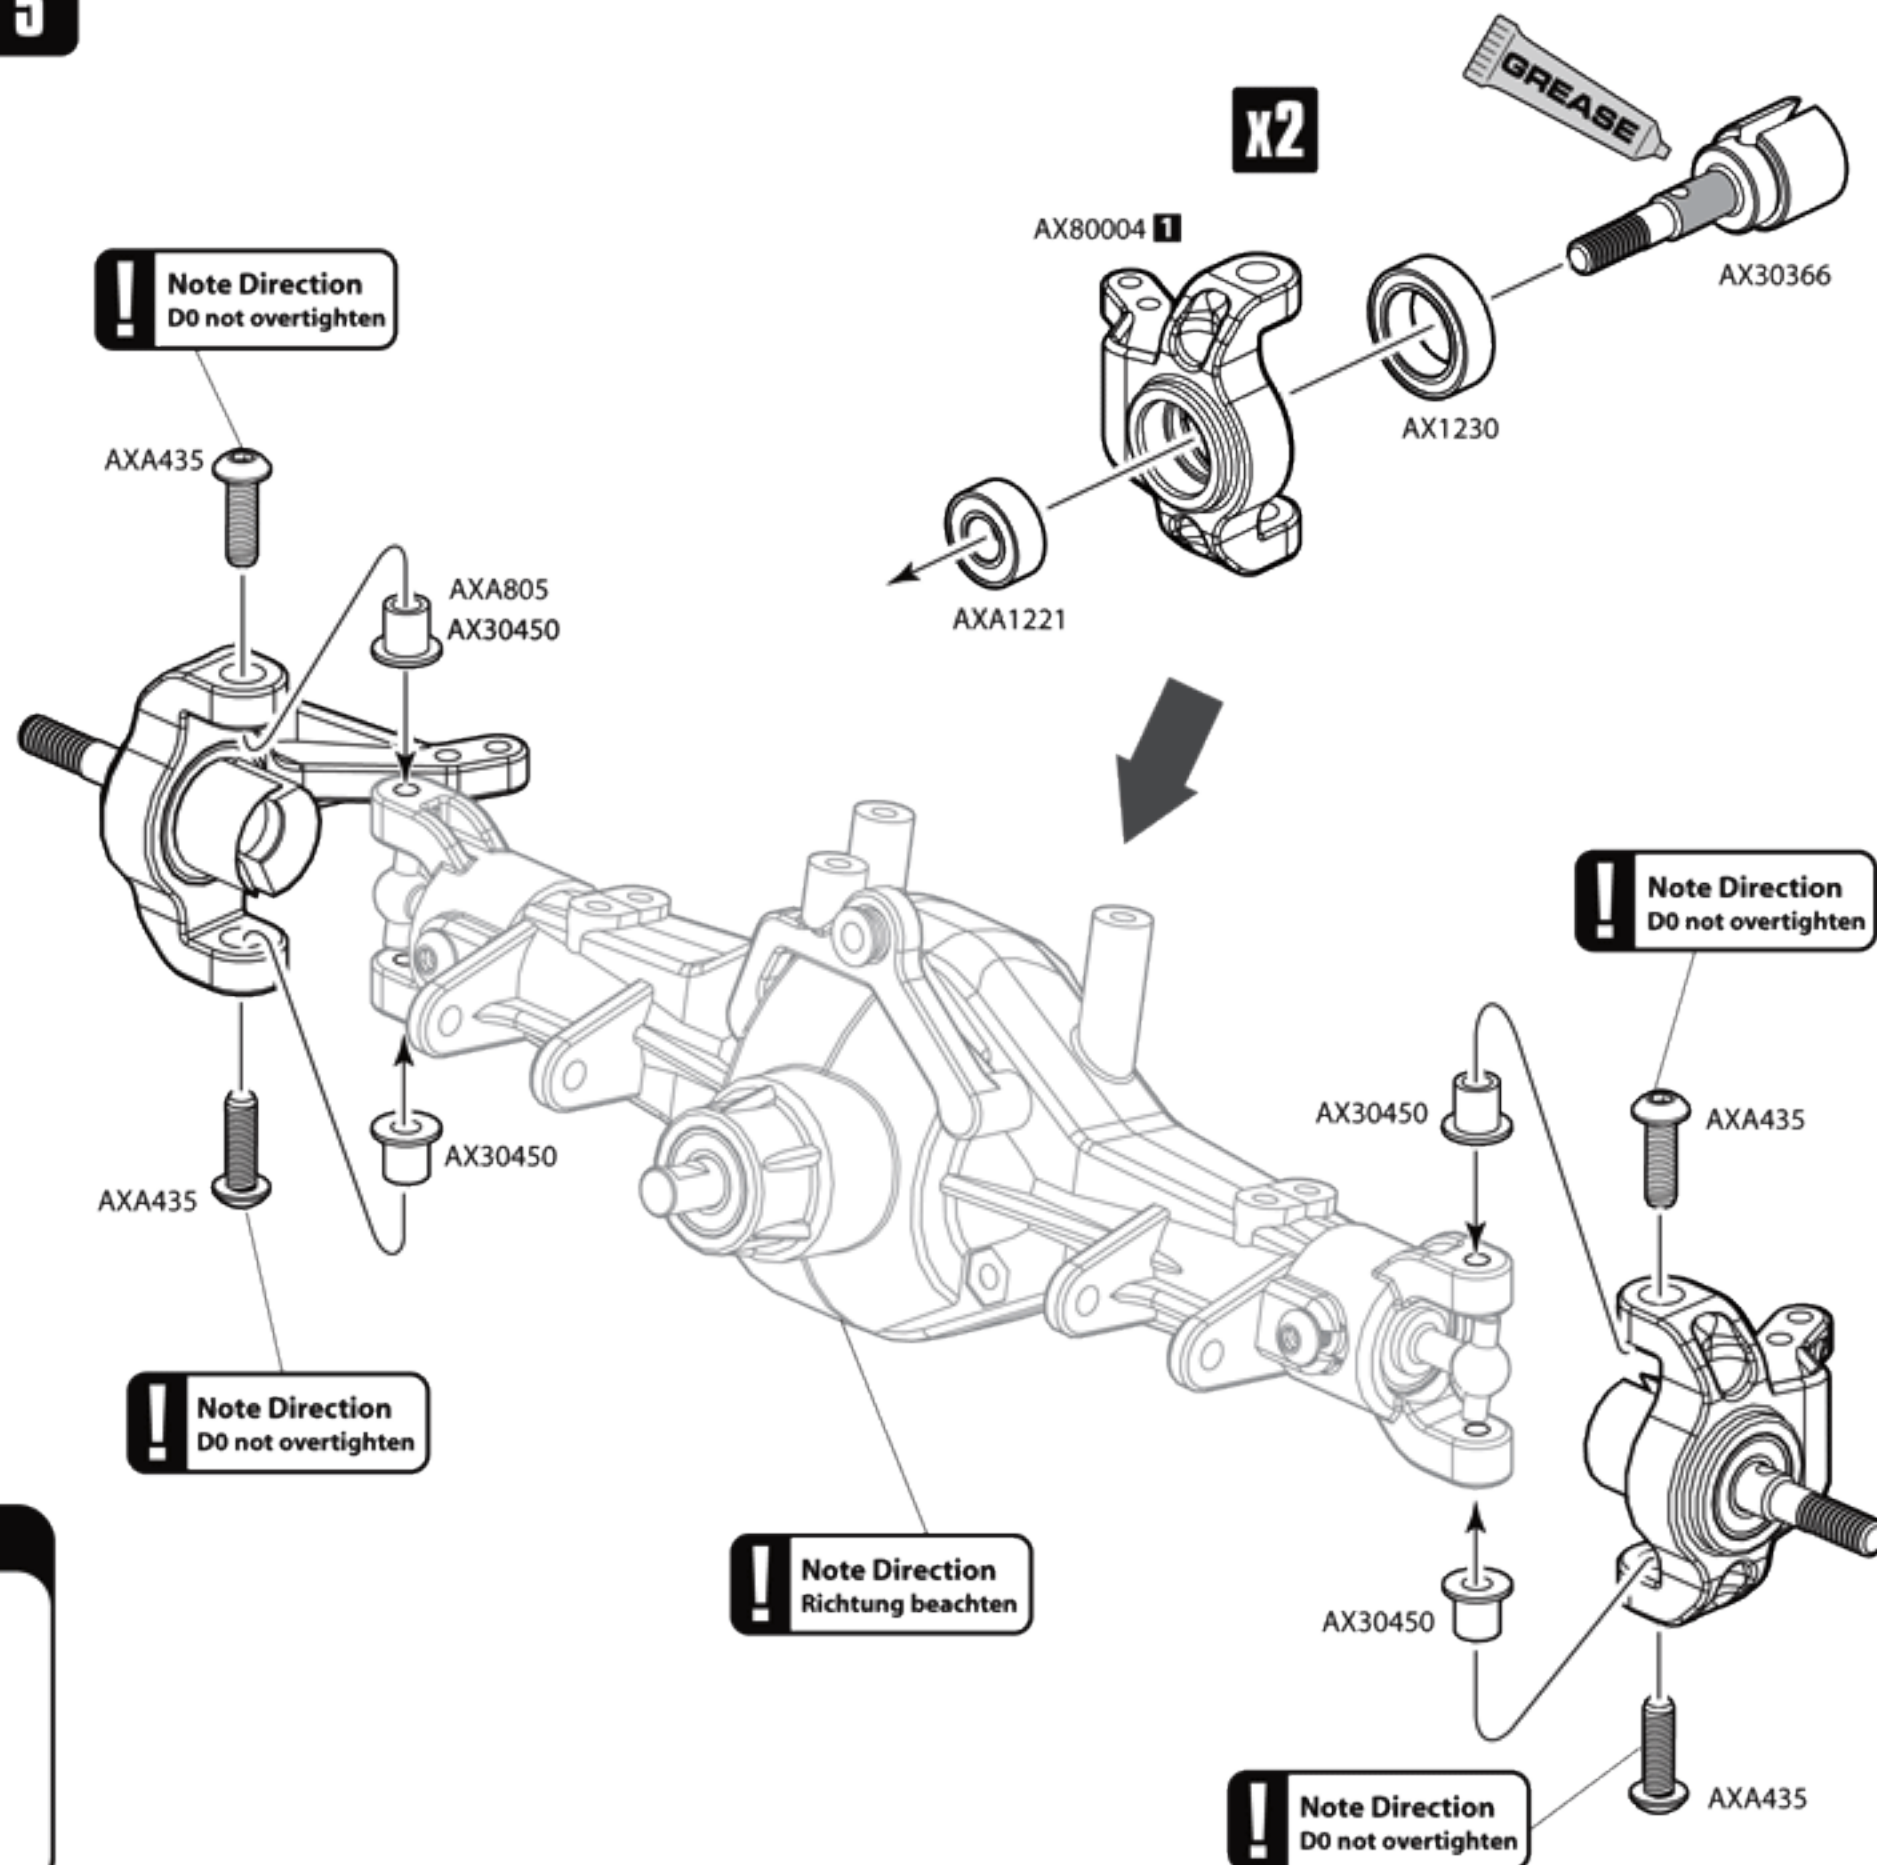





AX30405
Input Shaft 5x28mm **x1**




AX30163
IPin 2x10mm **x1**




AXA1393
E2.5 e-clip **x1**

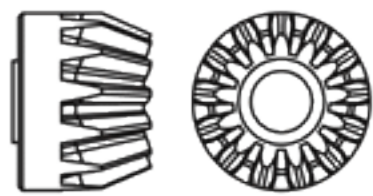


AX30393
13T Bevel Gear **x1**

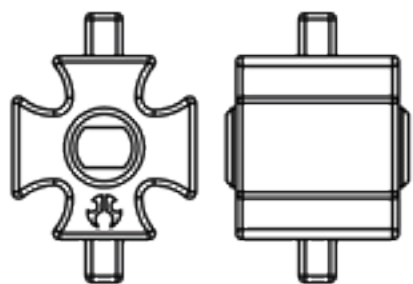

AX30500
Heavy Duty Lovker **x1**

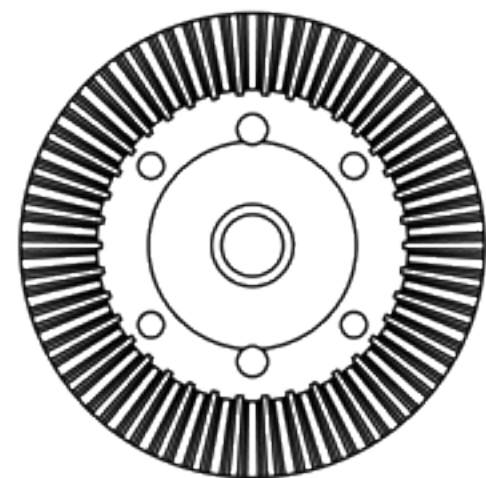

AX30392
38T Bevel Gear **x1**




AXA015
M2x10mm **x4**



AXA1230
Bearing 10x15x4mm **x2**




AXA1221
Bearing 5x11x4mm **x2**




AX30421
Solid Axle Dogbone 6x104.5mm **x2**

6

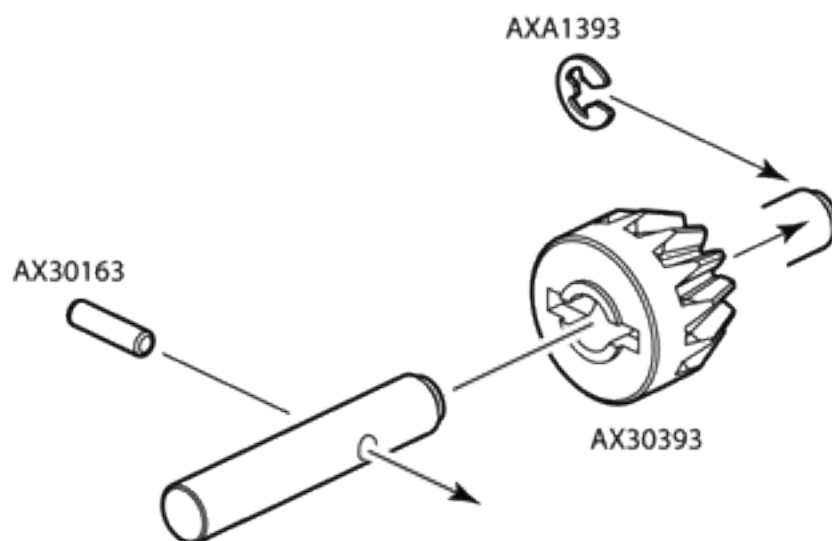



Option Parts


AX30395
Heavy Duty Bevel Gear Set

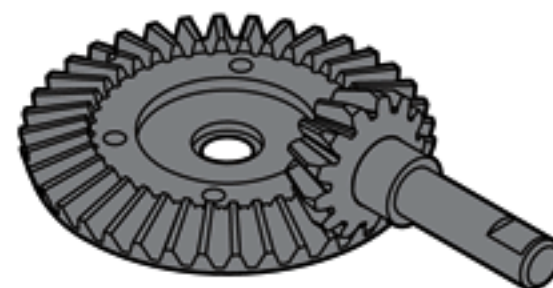



7

AX80002 **1**

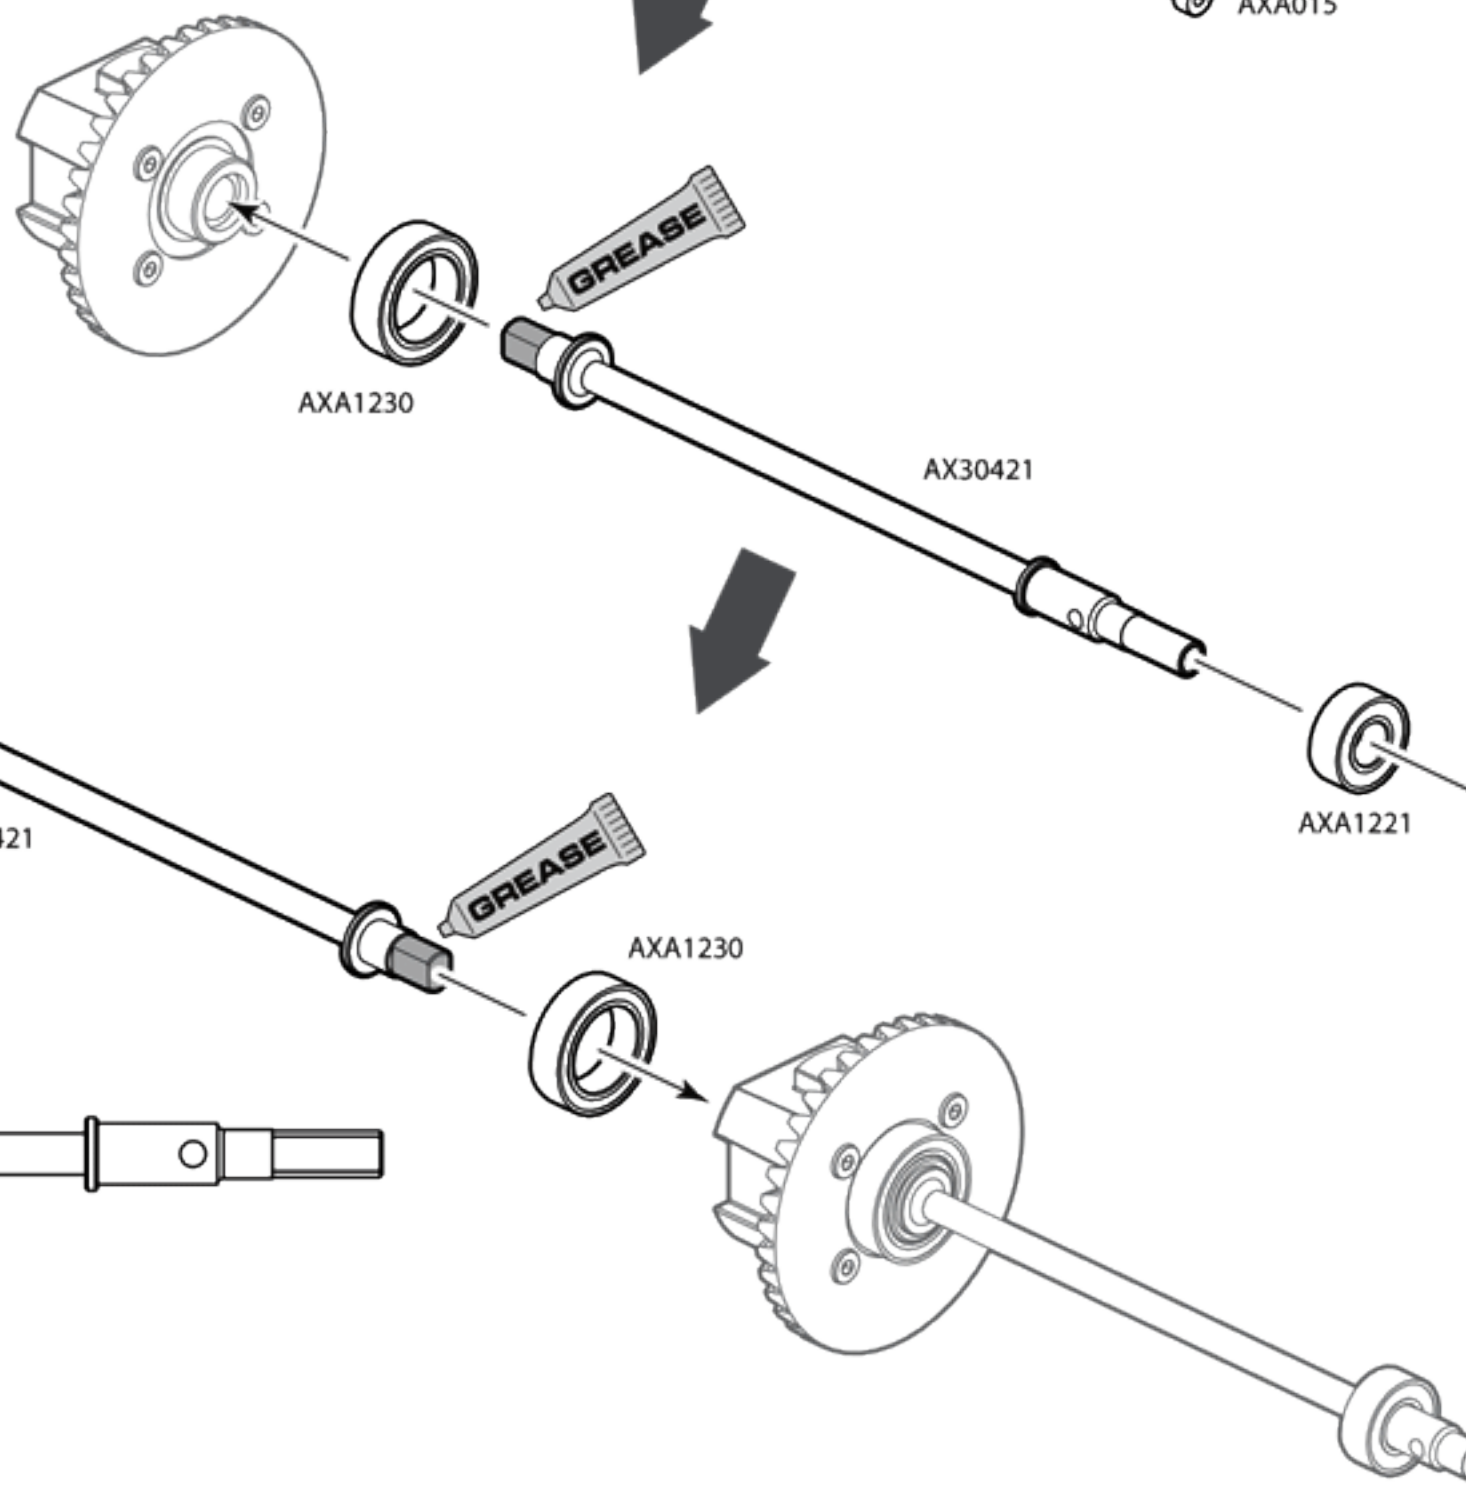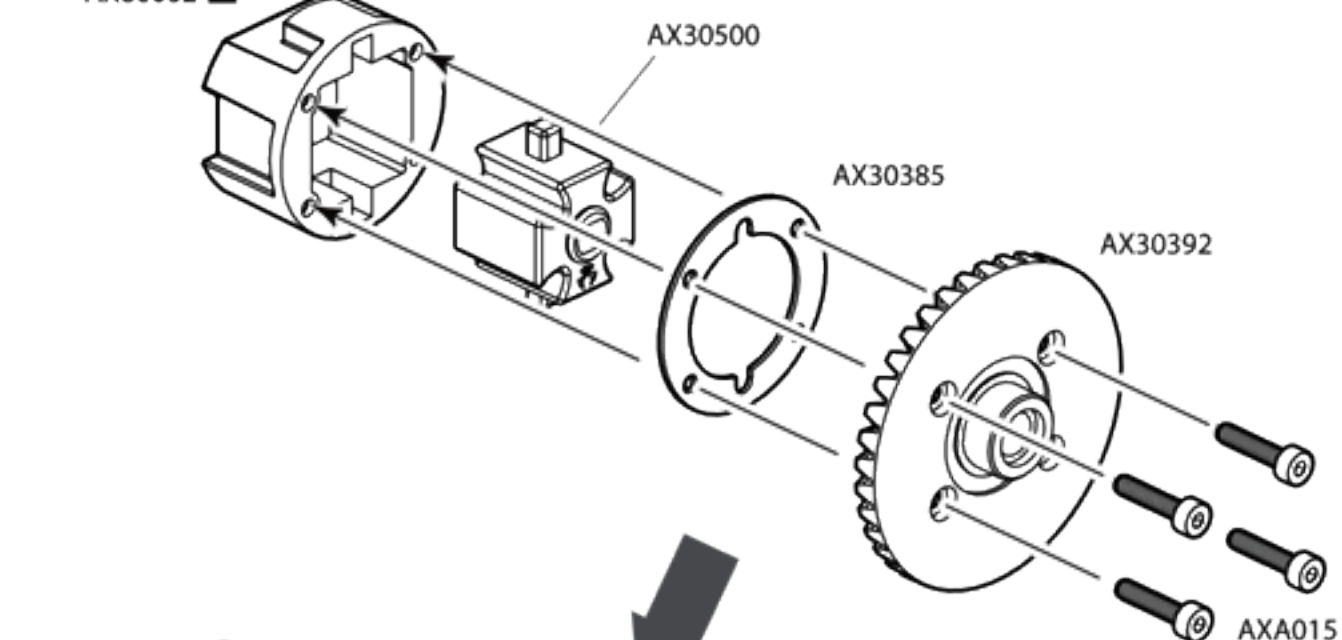

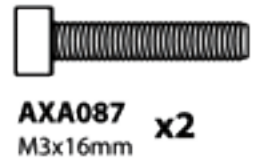


8

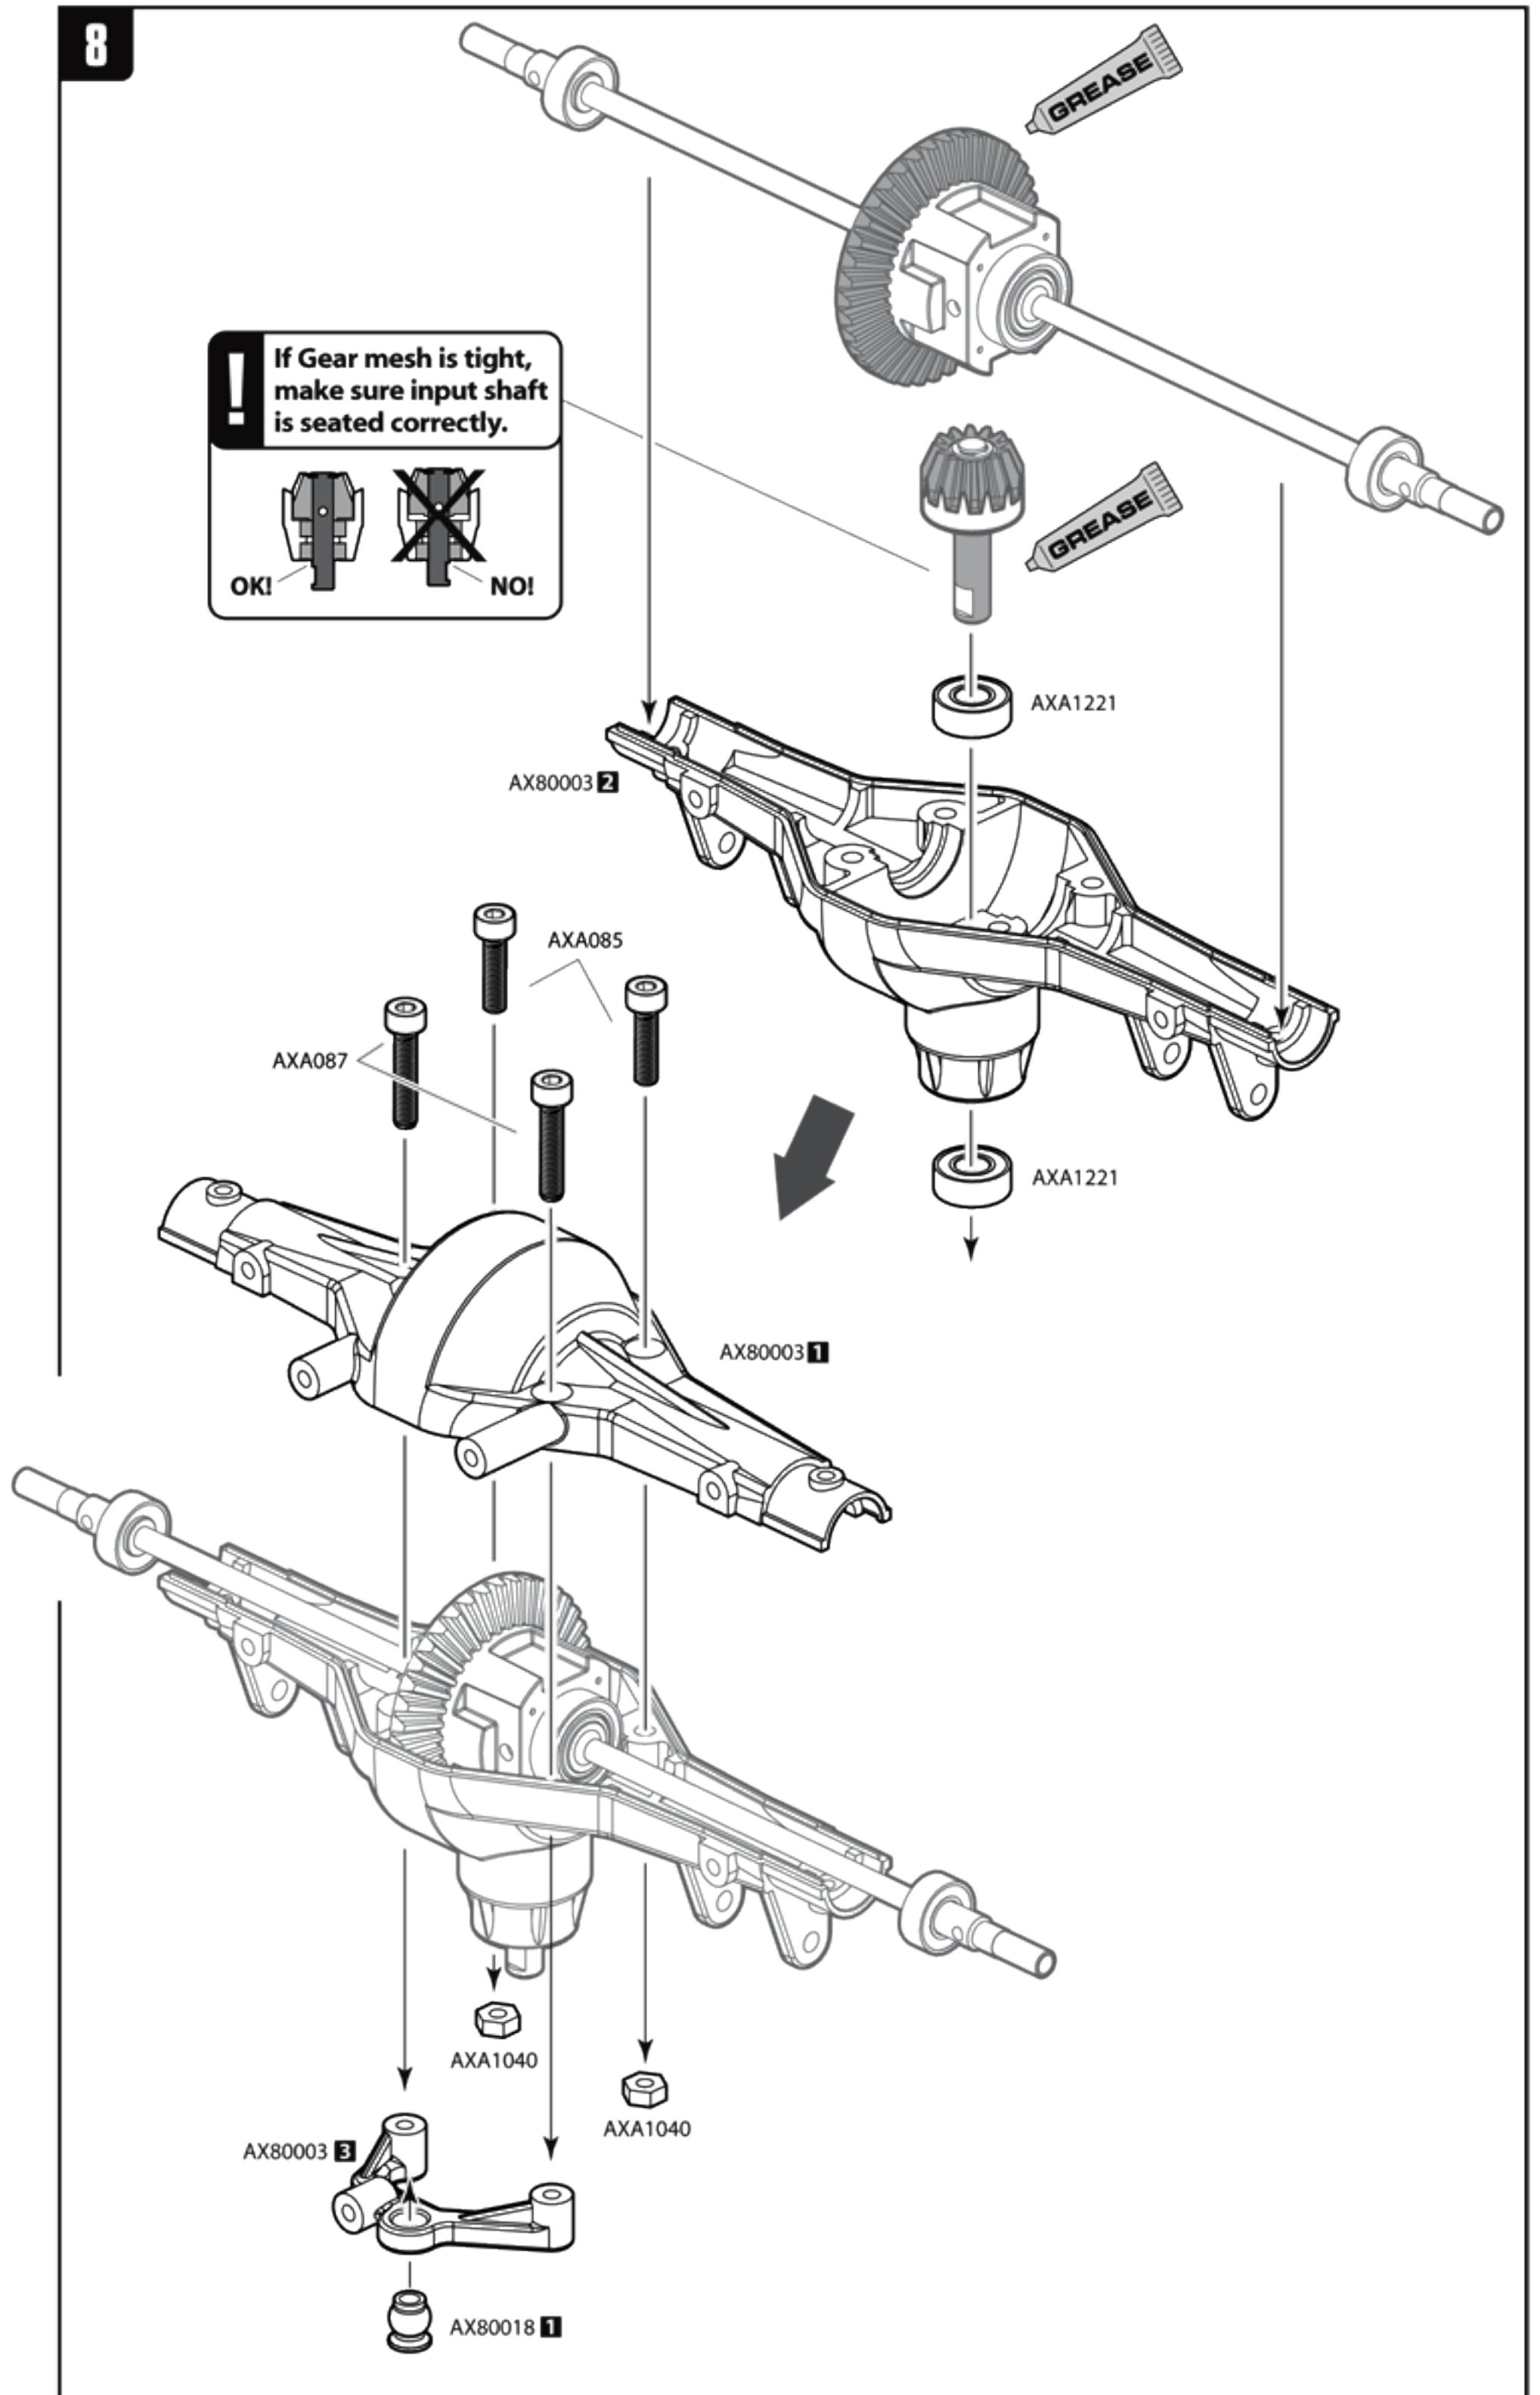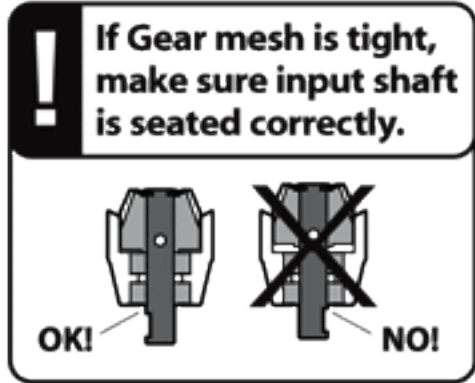




AXA433
M3x6mm Hex Socket Tapping Button Head **x4**

9

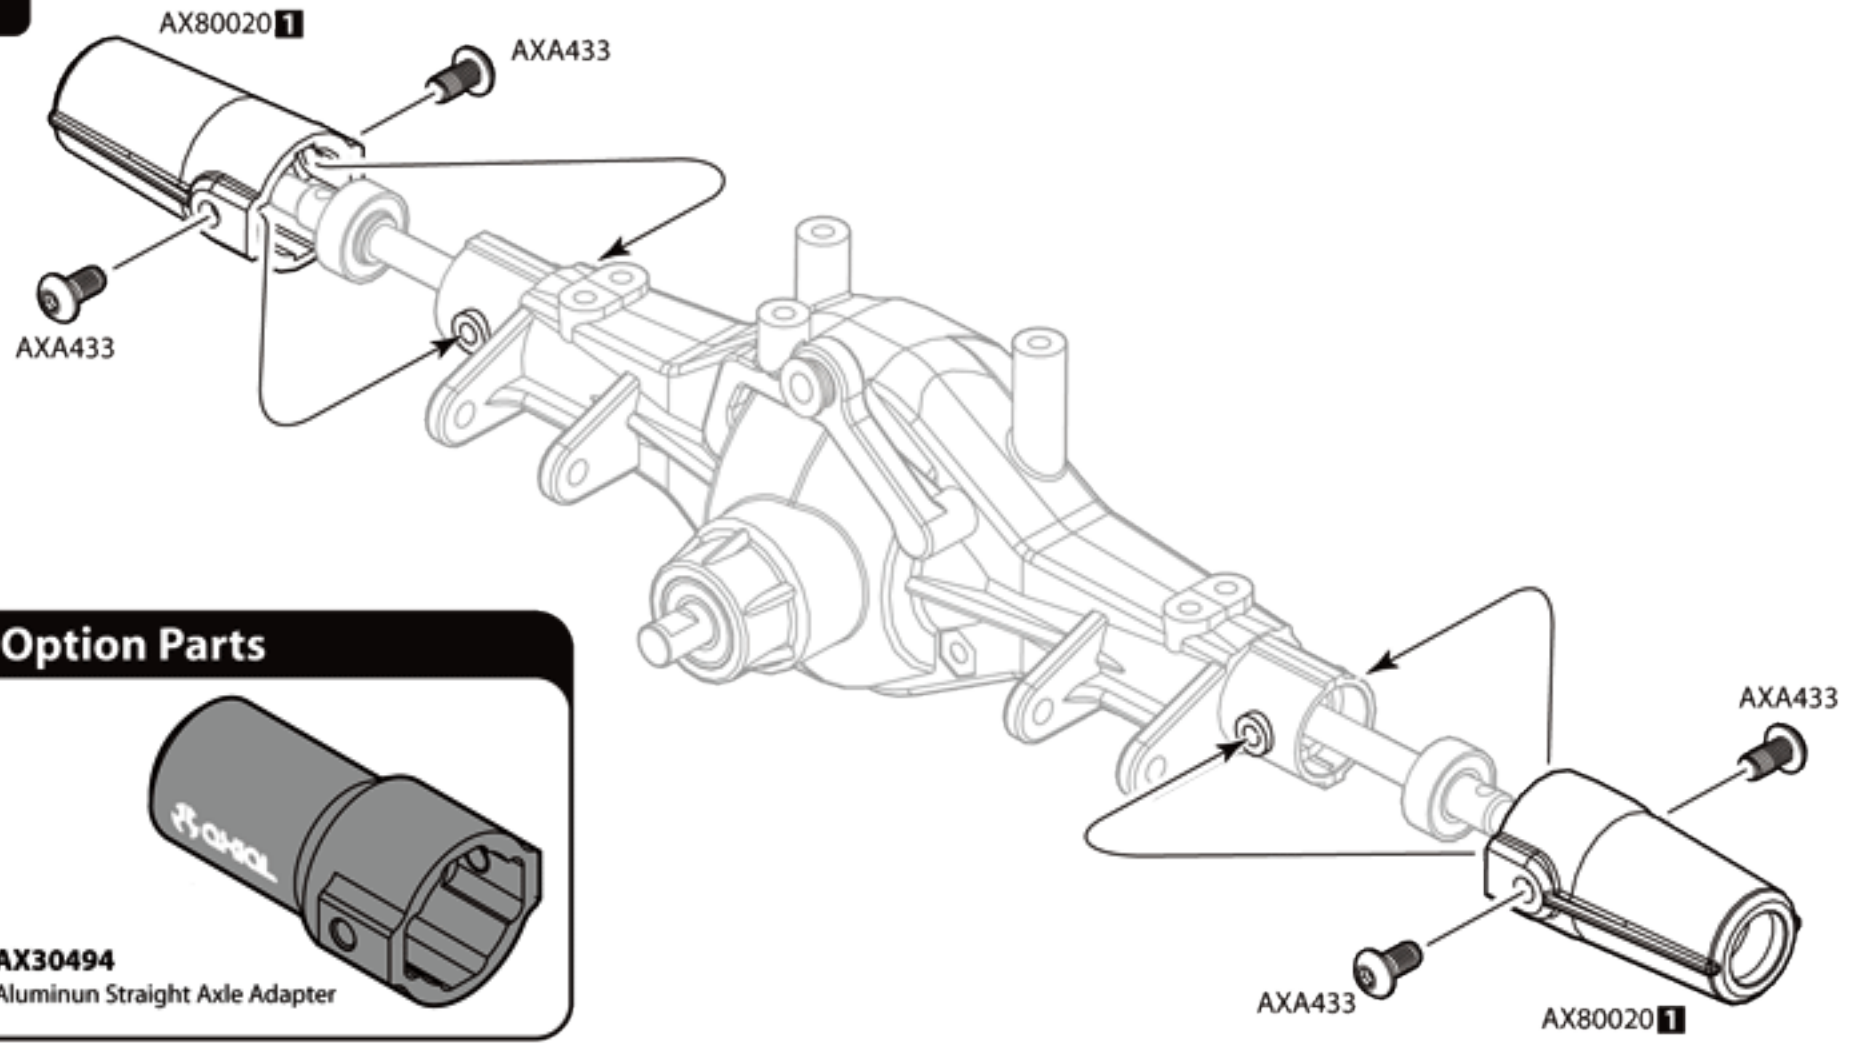

B

Open Bag B

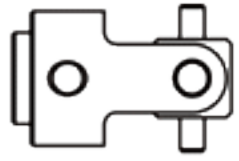

AX30380
Metal Driveshaft Yoke **x4**

Option Parts



AX30501
Driveshaft ring w/setscrews

Option Parts



AX30115
10mm Aluminum Preload Collar



AXA1392 **x8**
E2 e-clip



AXA1179 **x8**
O-Ring 2.5x1.5mm




AXA1358 **x4**
Shock Damper 3x7x8




AX30146 **x4**
Shock Shaft 3x50mm


10

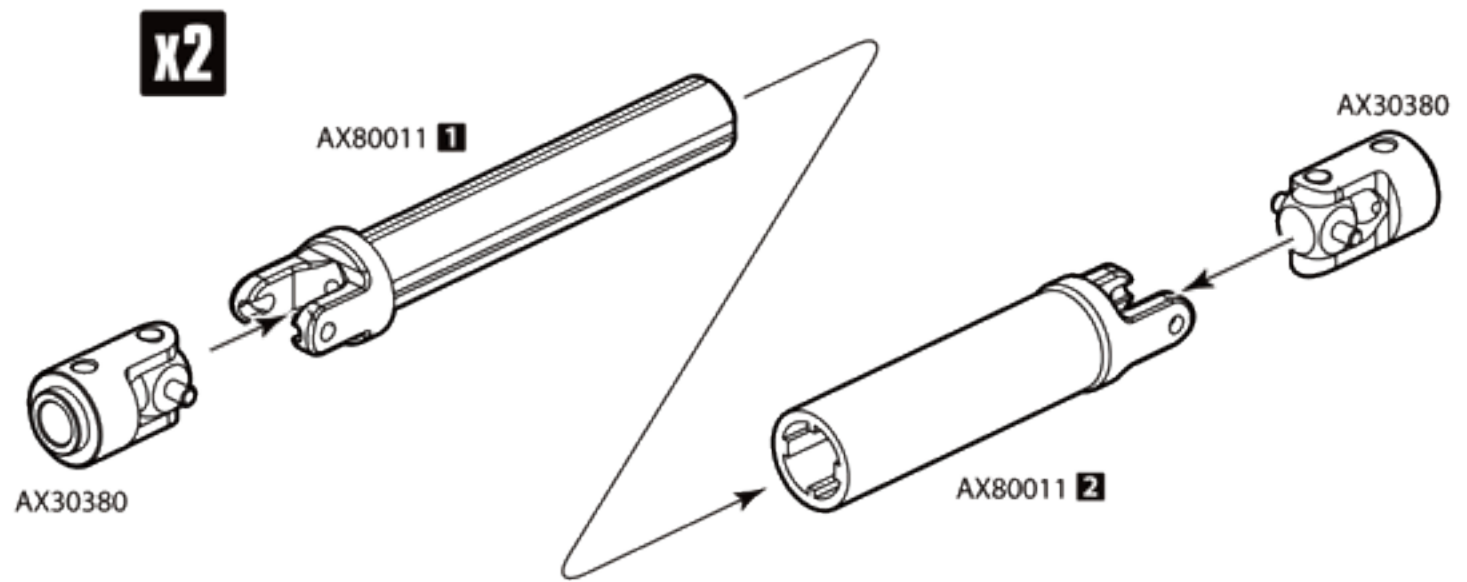

11

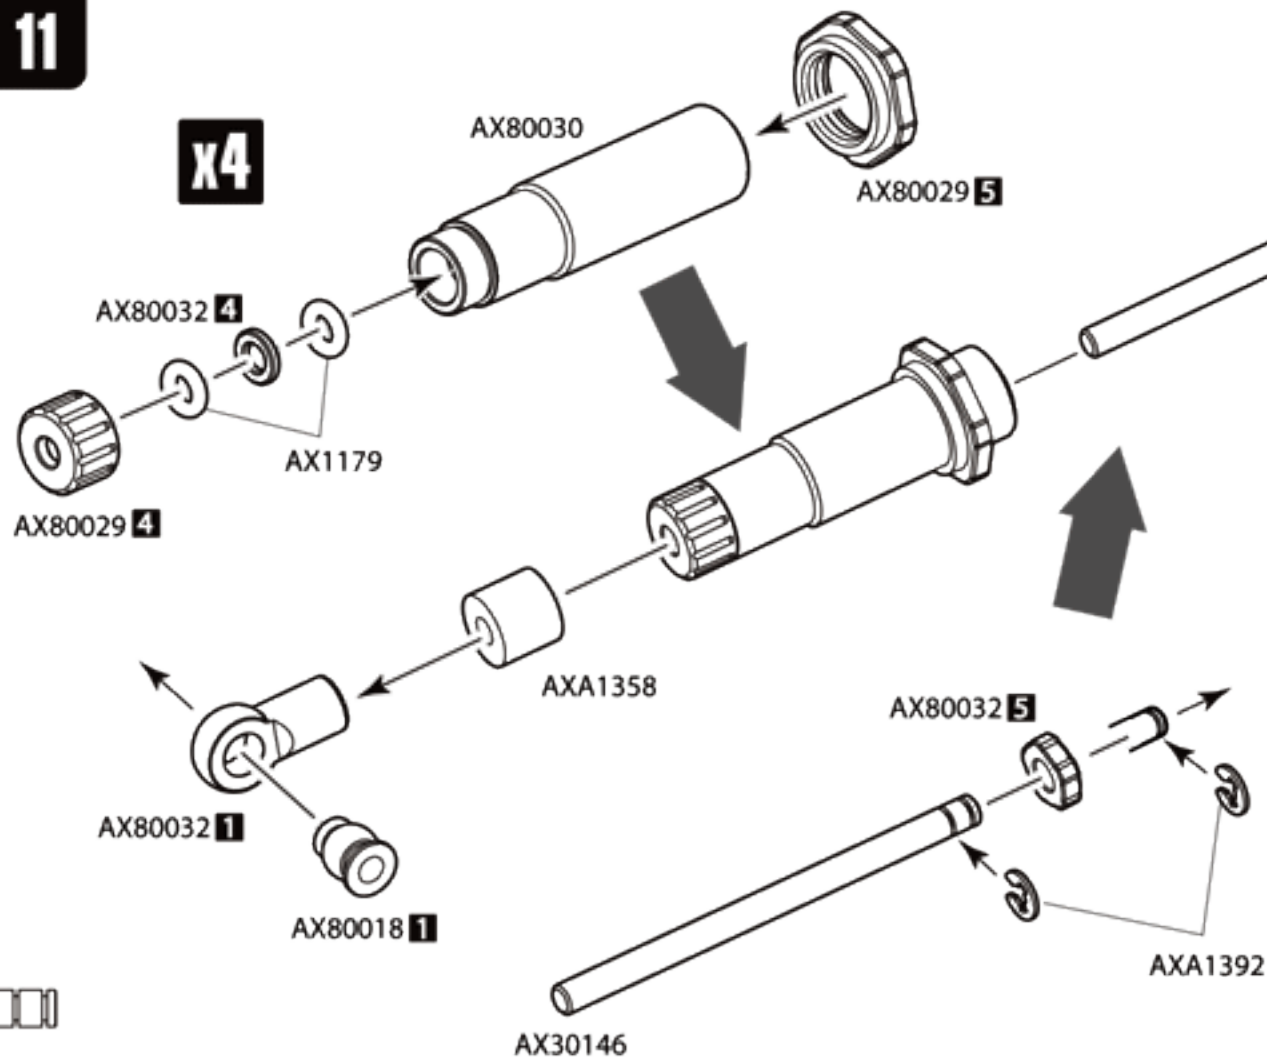


Option Parts

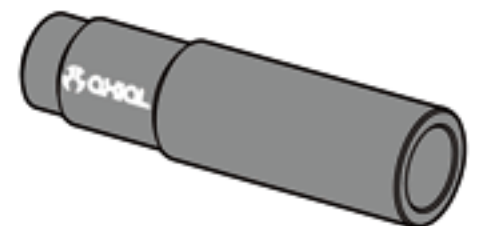

AX30117
Aluminum Shock Body 10x38mm



12

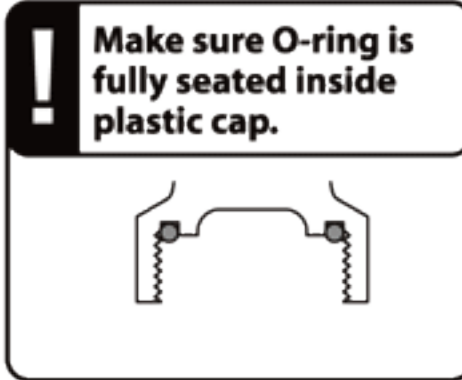

x4

Shock Oil

AX80029 **2**

AX80029 **1**

AXA1163

AXA013

Wipe off excess oil with a rag
Überschuss mit einem Tuch entfernen.

72.5mm

Move the shaft up and down slowly to remove all air bubbles.

Den Kolben langsam senken und wieder anheben, damit alle Luftblasen entfernt werden.

Option Parts




AX30114
Aluminum Shock Reservoir-SCX10

13



AX30207
Spring 14.5x40mm **x4**

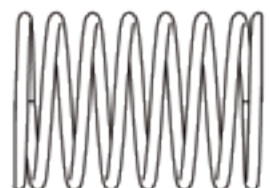

AX30200
Spring 14.5x20mm **x4**

x4

AX80018 **1**

AX30200

AX80032 **2**

AX30207

AX80032 **3**

Option Parts



Spring

AX30205 12.5x40mm 2.7 lbs/in - Super Soft (Red)
AX30206 12.5x40mm 3.6 lbs/in - Soft (White)
AX30207 12.5x40mm 4.08 lbs/in - Medium (Green)
AX30208 12.5x40mm 5.44 lbs/in - Firm (Yellow)
AX30209 12.5x40mm 6.81 lbs/in - Super Firm (Blue)



Spring


AX30200 12.5x20mm 3.6 lbs/in - Super Soft (Red)
AX30201 12.5x20mm 4.32 lbs/in - Soft (White)
AX30202 12.5x20mm 5.44 lbs/in - Medium (Green)
AX30203 12.5x20mm 6.53 lbs/in - Firm (Yellow)
AX30204 12.5x20mm 7.95 lbs/in - Super Firm (Blue)

C

Open Bag C



AXA186
3x16mm Set Screw **x8**

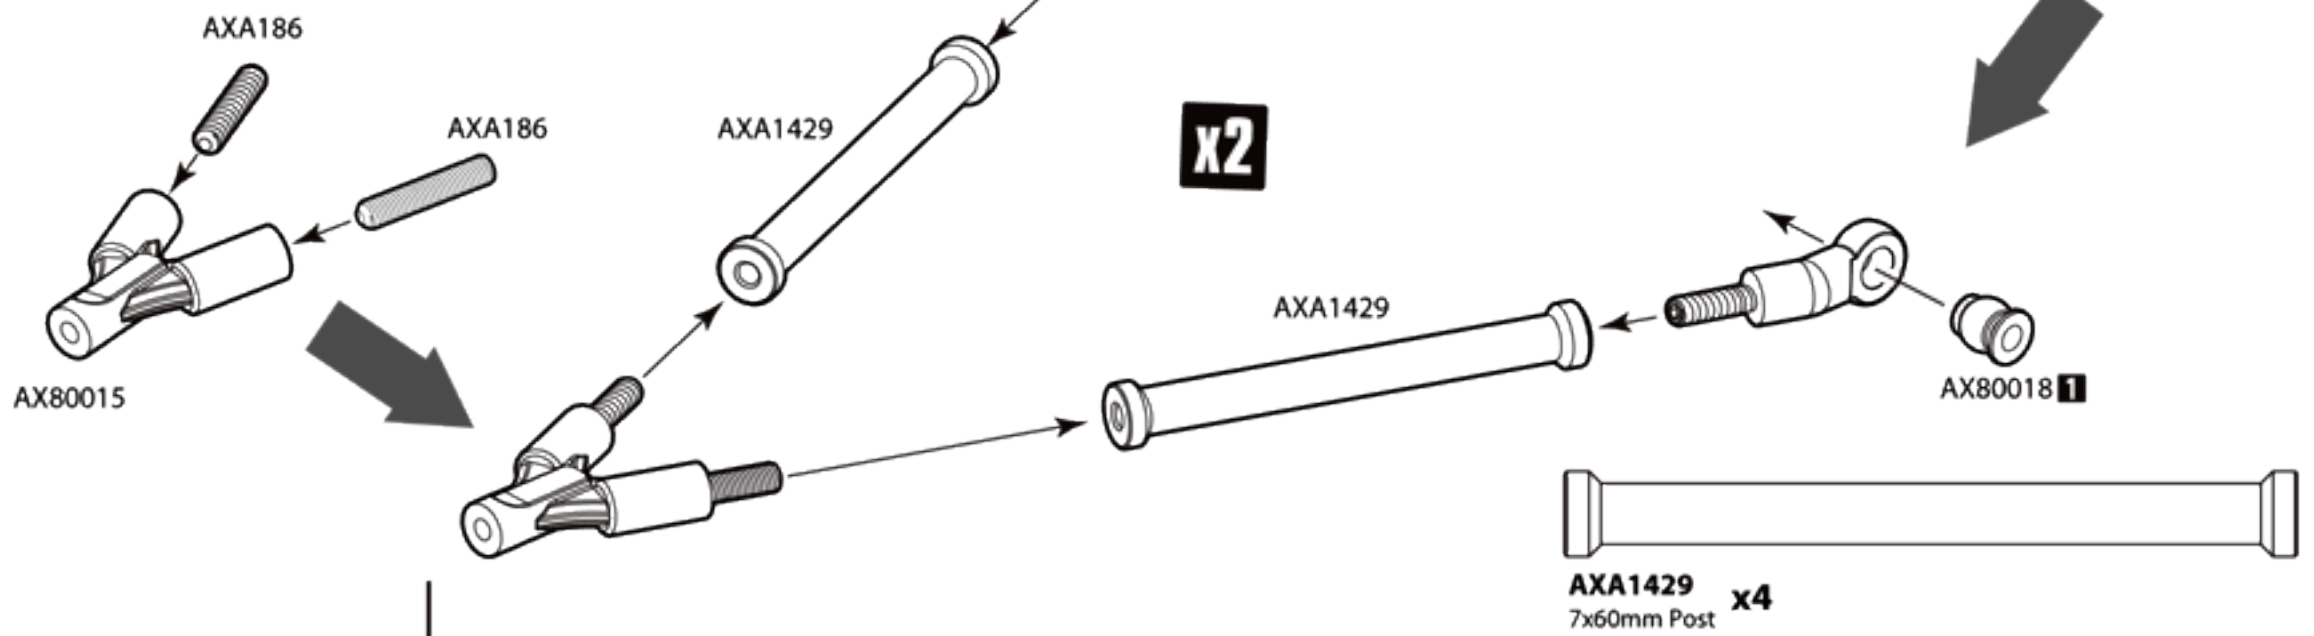



AXA1327
7.5x6mm **x1**



AXA180
M3x3mm Set Screw **x1**



AXA120
M3x25mm Hex Socket Button Head **x1**

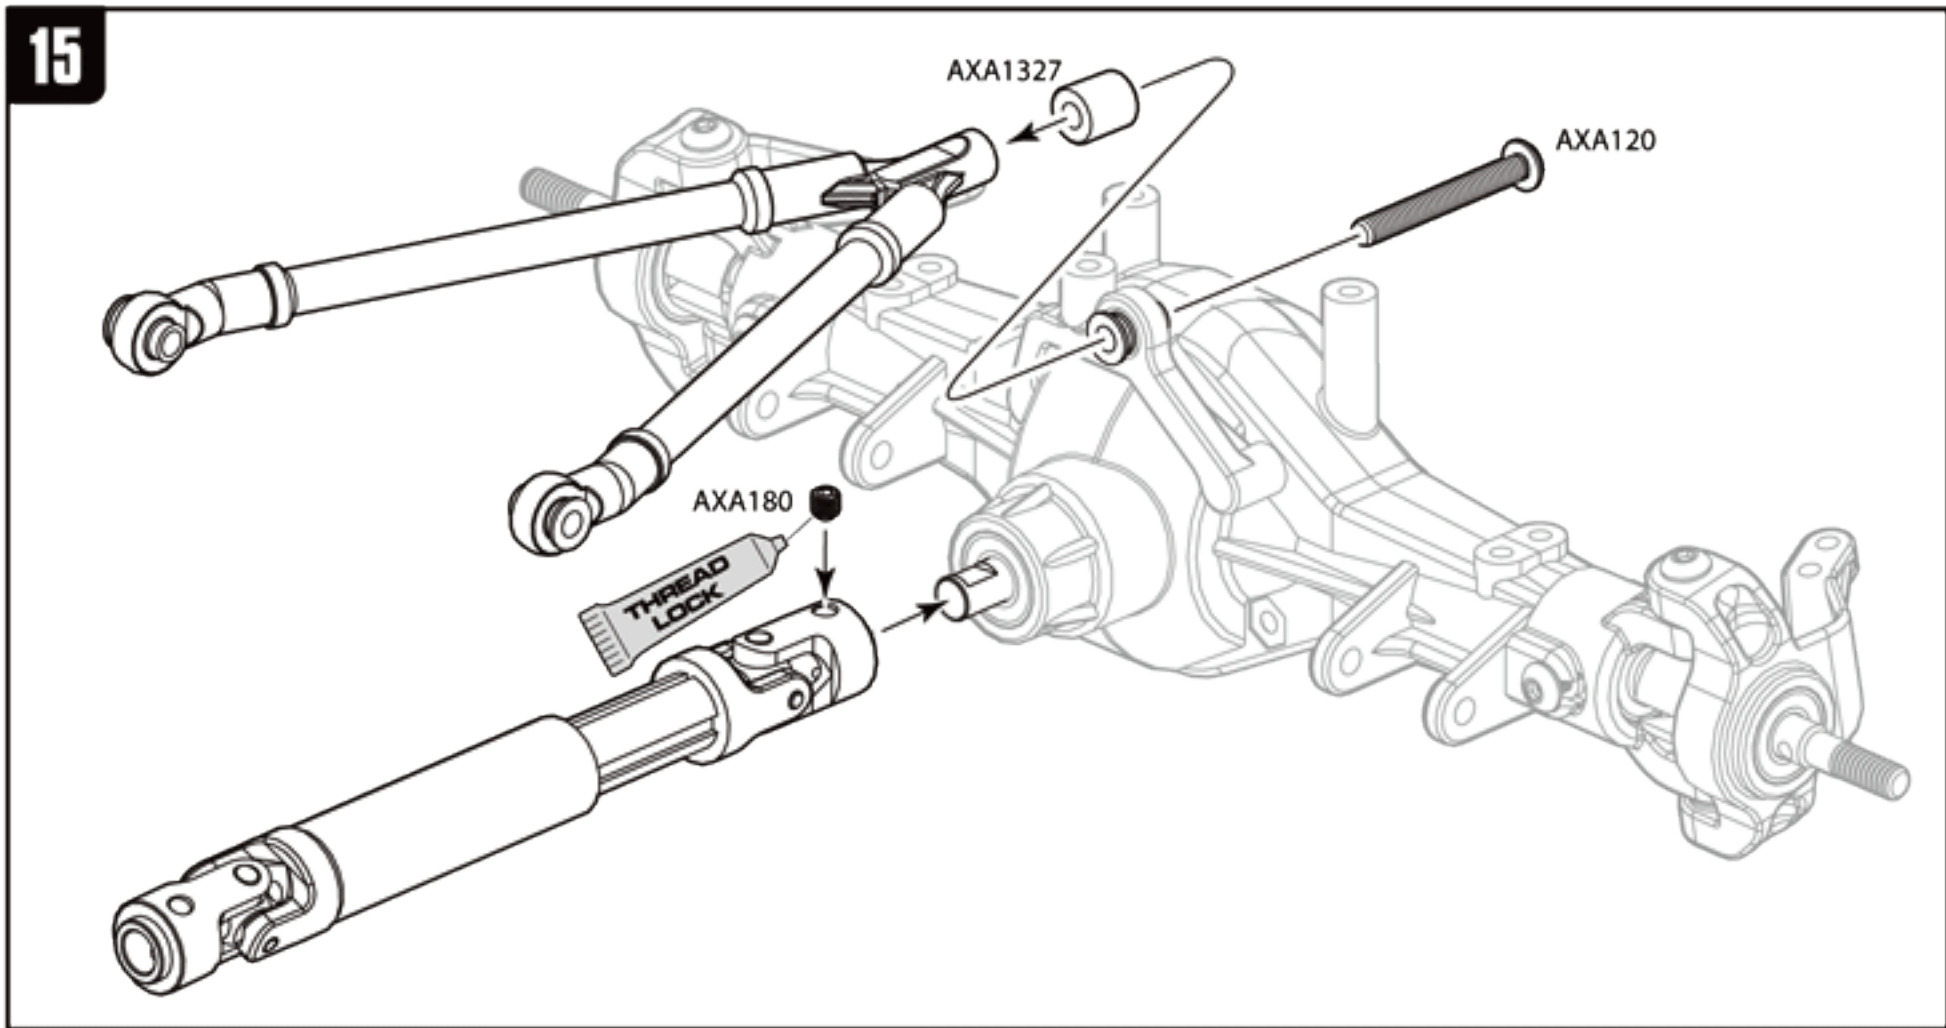


AXA1421
7x20mm Post - Grey **x1**



AXA180
M3x3mm Set Screw **x1**



AXA118
M3x18mm Hex Socket Button Head **x1**

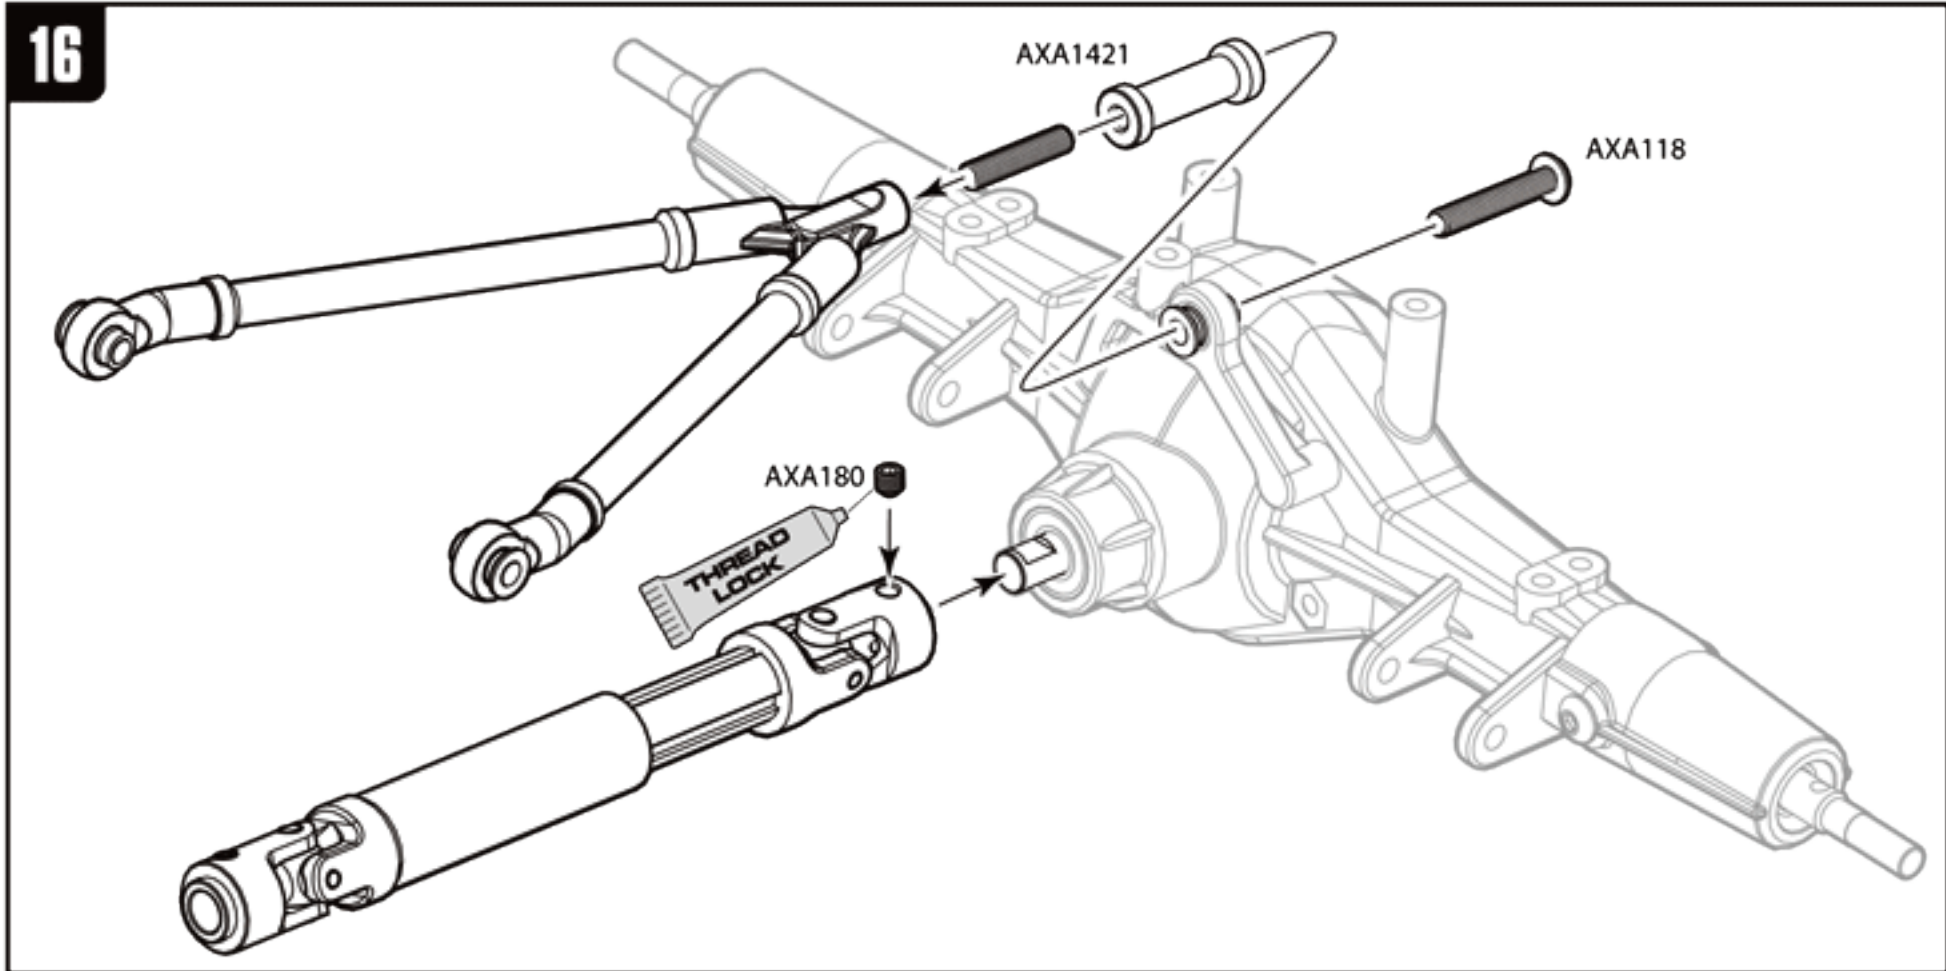



AXA089 x2
M3x25mm



AXA186 x4
3x16mm Set Screw



AXA1053 x2
M3 Nylon Locking Hex Nut



AX80032 1
AX80018 1

17

x2

AX30518

AXA089

AXA089

AXA1053

AXA1053

AXA089



AX30518 x2
Threaded Aluminum Pipe 6x98mm




AXA089 x2
M3x25mm



AXA186 x4
3x16mm Set Screw



AXA1053 x2
M3 Nylon Locking Hex Nut

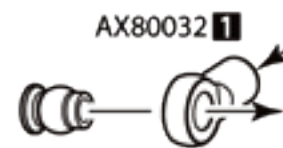

AX80032 1
AX80018 1

18

x2

AX30516

AXA089

AXA089

AXA1053


AXA1053

AXA089



AX30516 x2
Threaded Aluminum Pipe 6x106mm


19

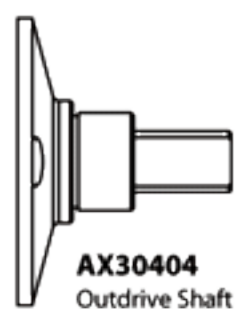

AX30404
Outdrive Shaft **x2**




AXA013
M2x6mm **x3**

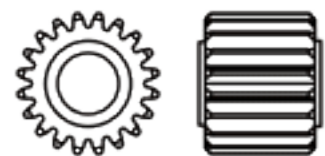

AX30394
20T Drive Gear **x1**



AX30162
Pin 1.5x8mm **x1**



AX30198
Drive gear Shaft 5x53.5 **x1**



AXA1218
Bearing 5x10x4mm **x4**



AXA1225
Bearing 8x16x5mm **x2**





AX30190
Shaft 5x18mm **x1**



AXA088
M3x20mm **x1**



AXA1053
M3 Nylon Locking Hex Nut **x1**

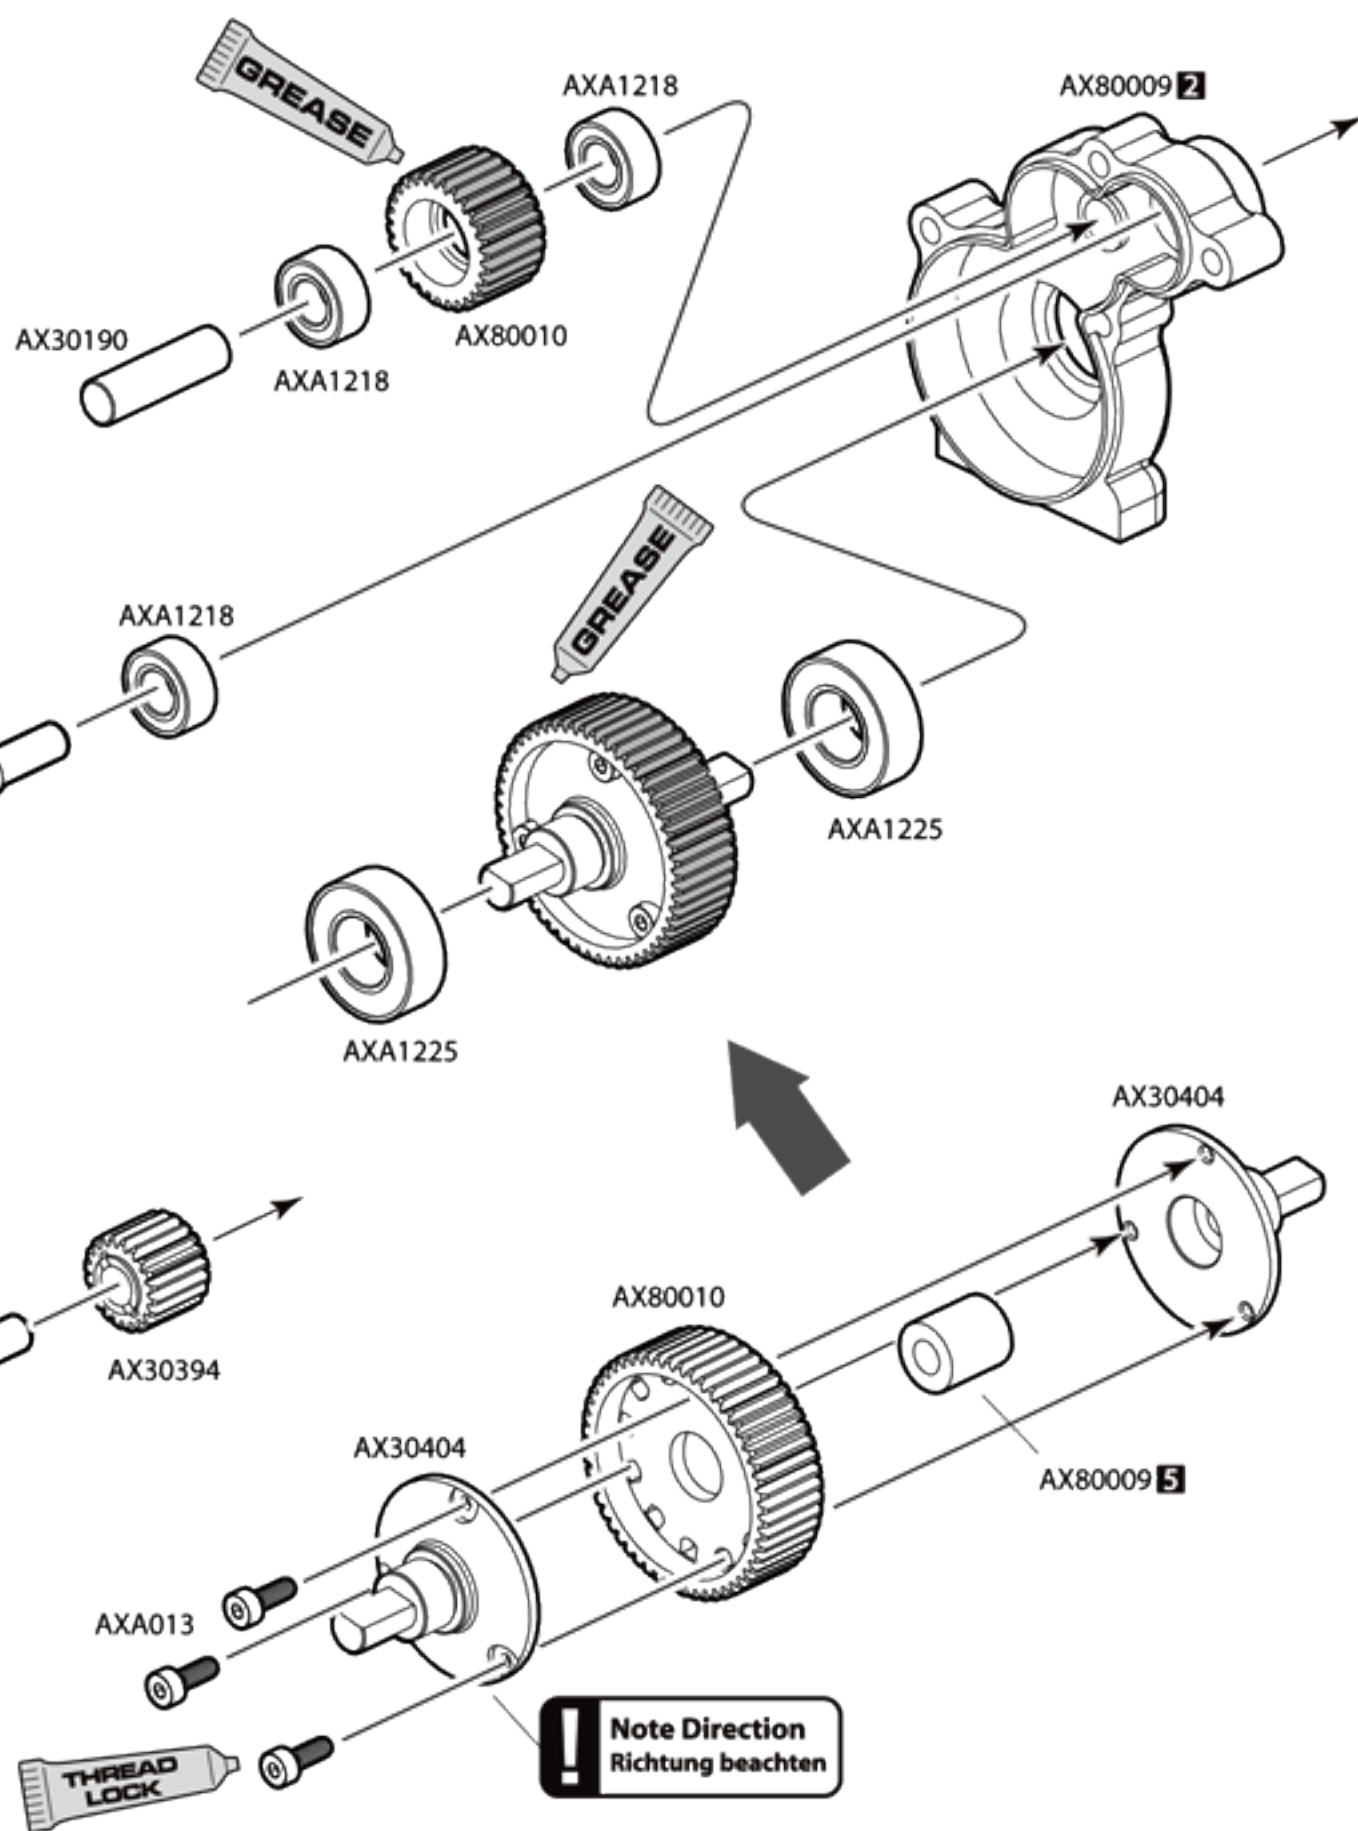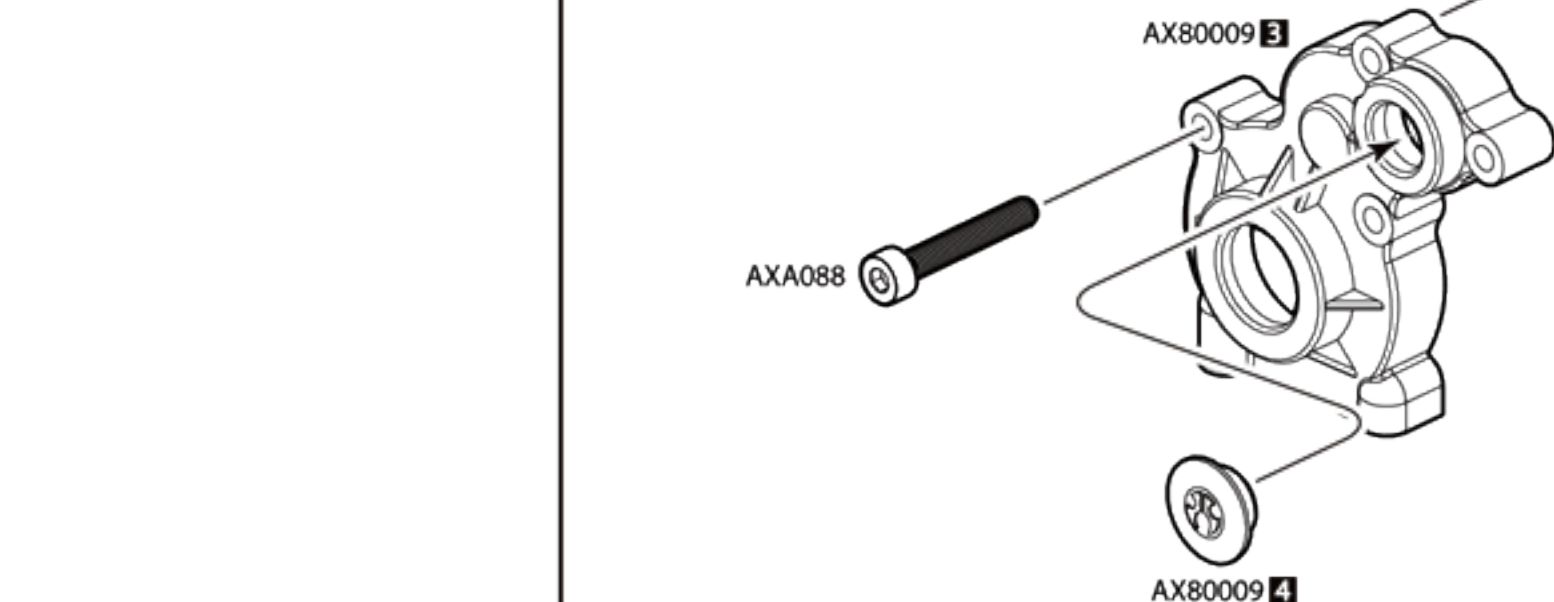

! Note Direction
Richtung beachten



20




AXA088
M3x20mm **x1**



AXA1053
M3 Nylon Locking Hex Nut **x1**

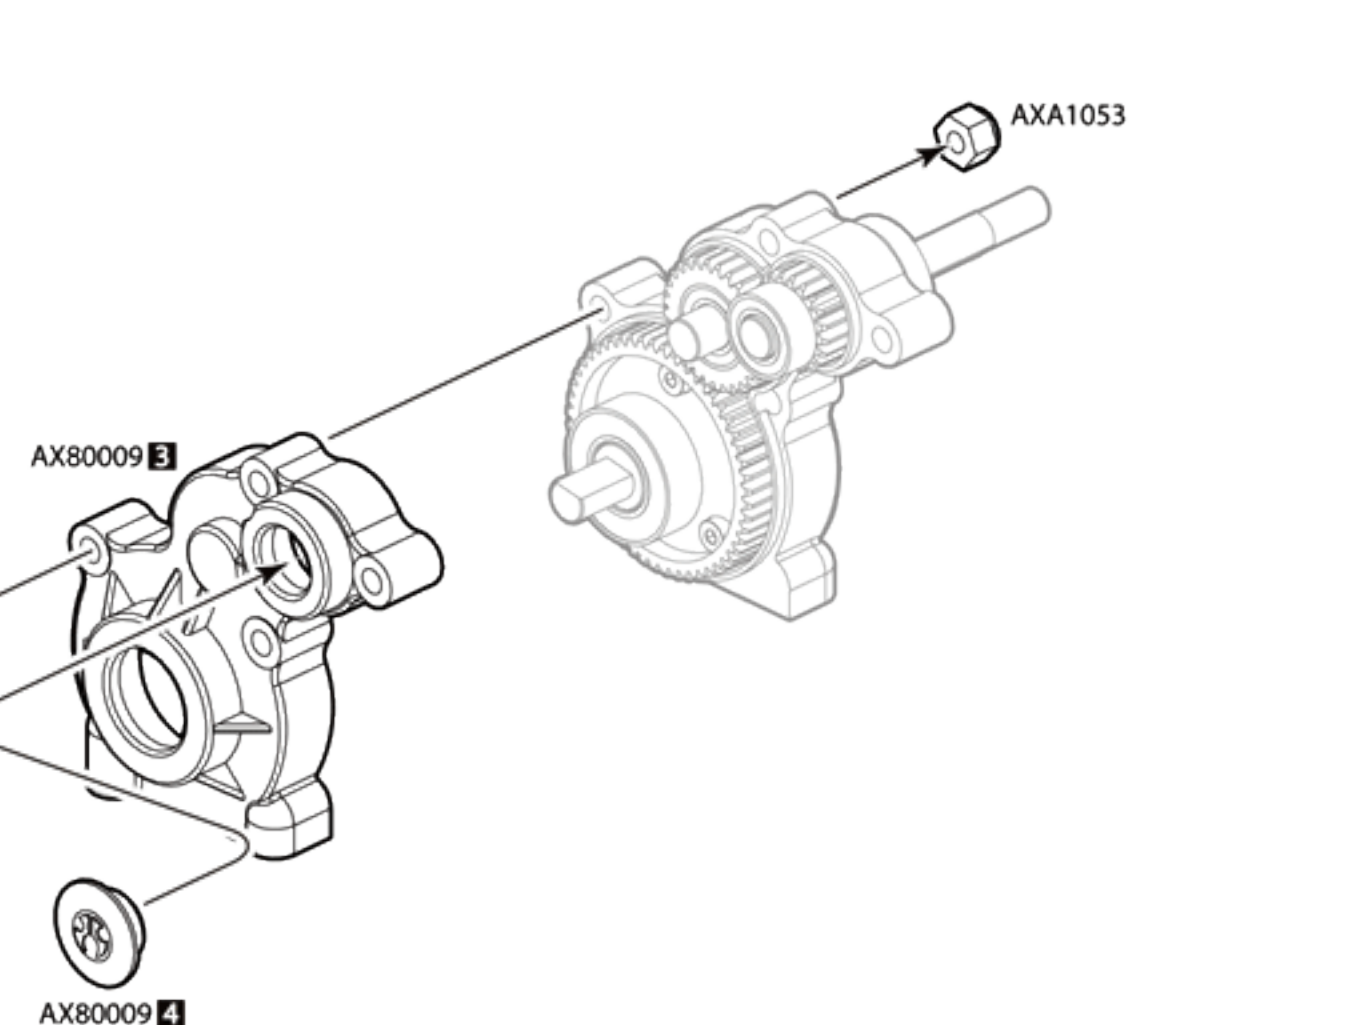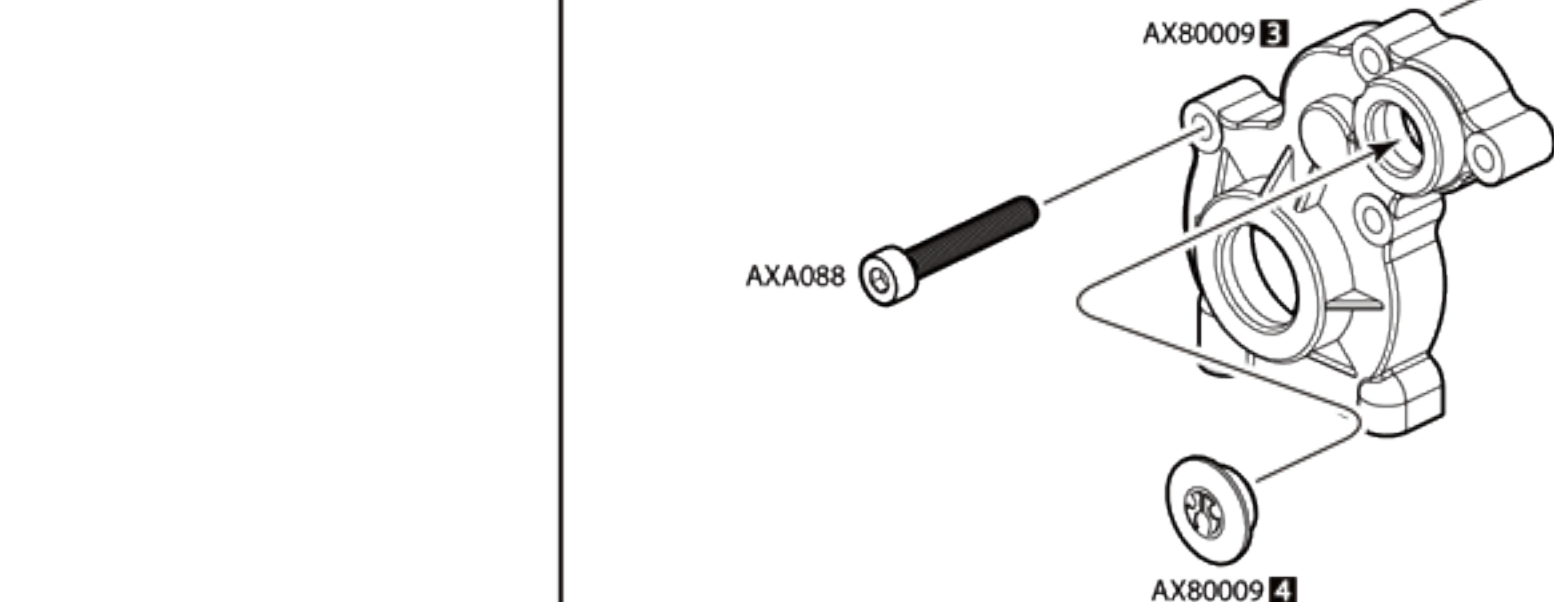


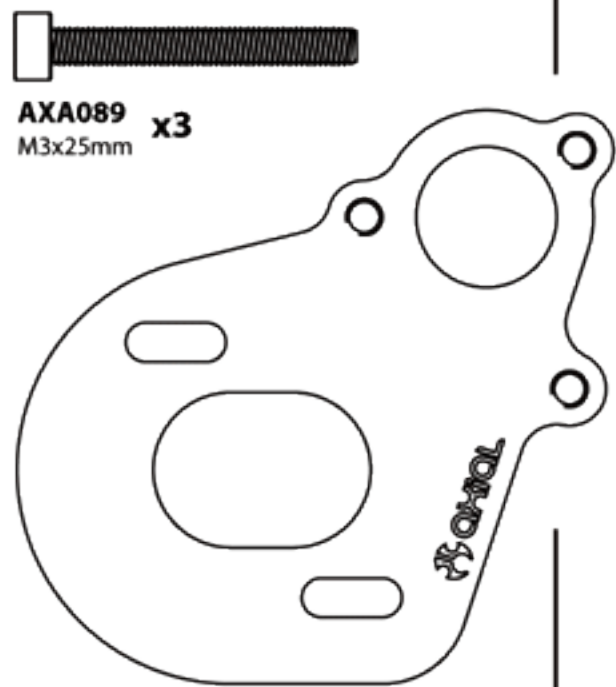

AXA089

M3x25mm


x3

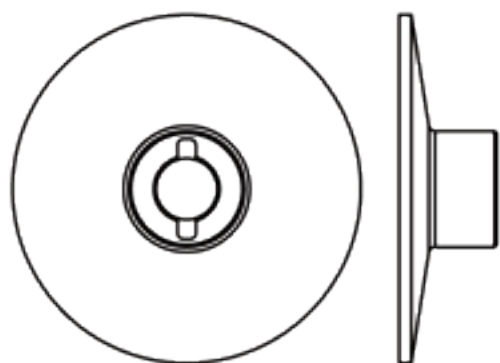

AX30491

AX10 Scorpion Motor Plate


x1

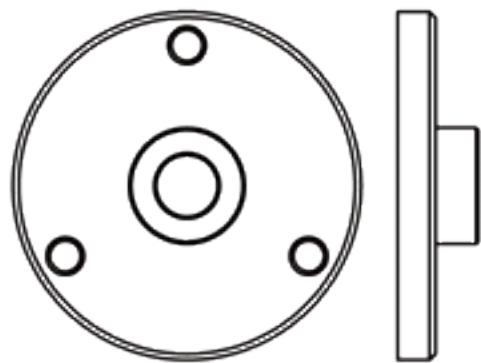

AX30410

Inner Slipper Plate

x1

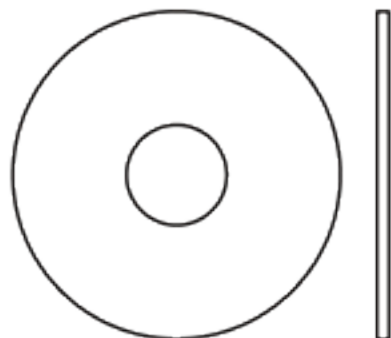

AX30411

Outer Slipper Plate

x1



AX30412

Slipper Pad 27x8x1mm

x1



AX30413

Spring 8.5x12

x1



AX30162

Pin 1.5x8mm

x1



AX1045

M4 Nylon Lock Nut

x1

AXA1070

Washer 3x6x0.5

x3

AXA1071


Washer 4x8x0.5mm

x1

AXA1091

Washer 5x10x0.5mm

x1

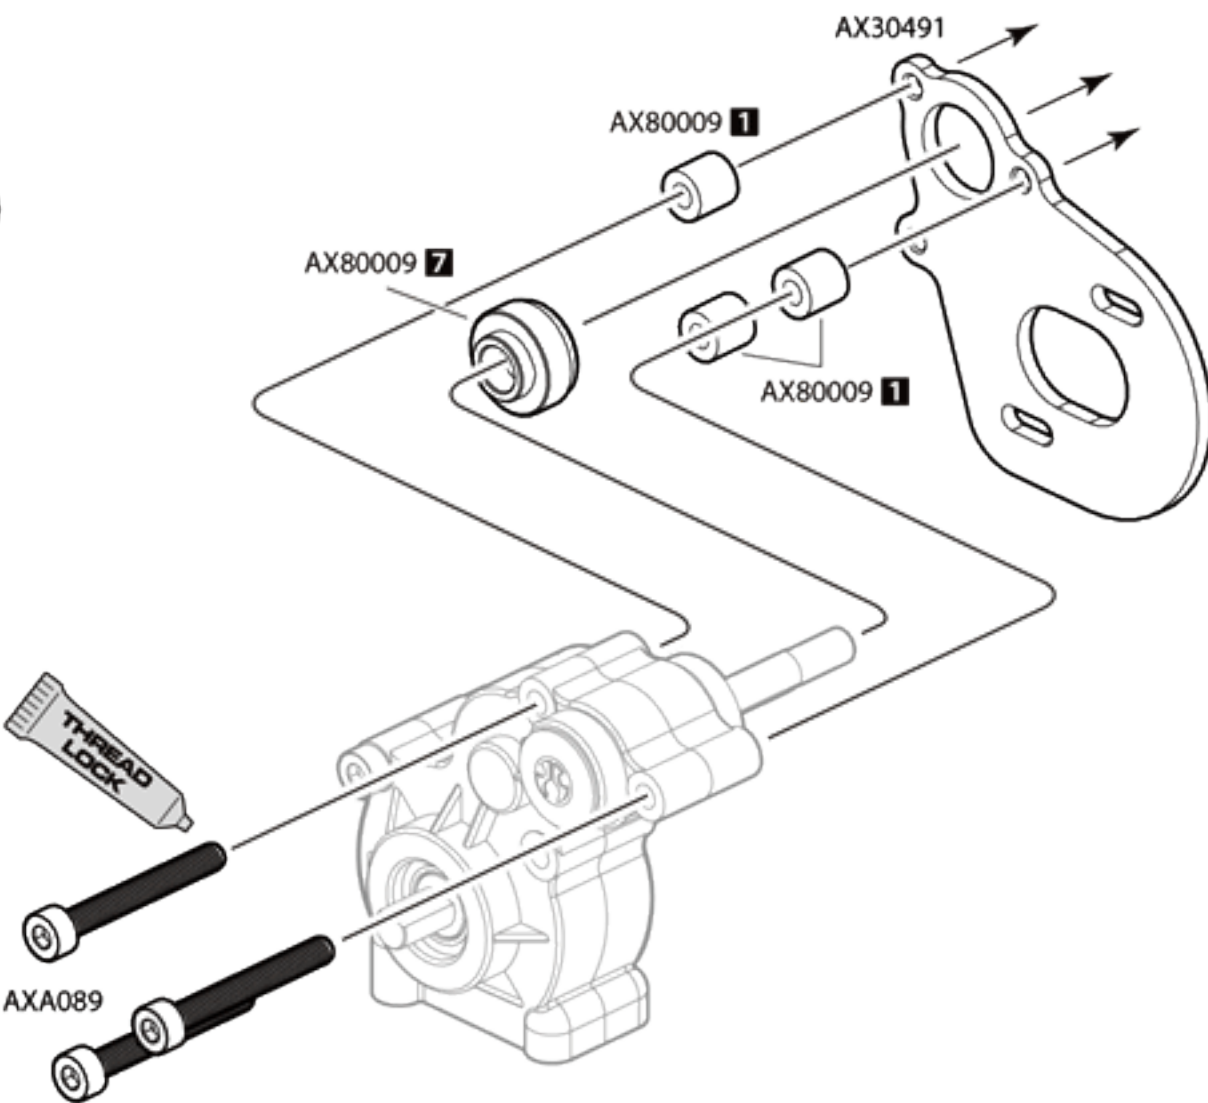

Option Parts

AX30482

AX10 Scorpion Motor Plate



AXA1327

7.5x6mm Spacer

x3





AX30499

Transmission Spacer

x1



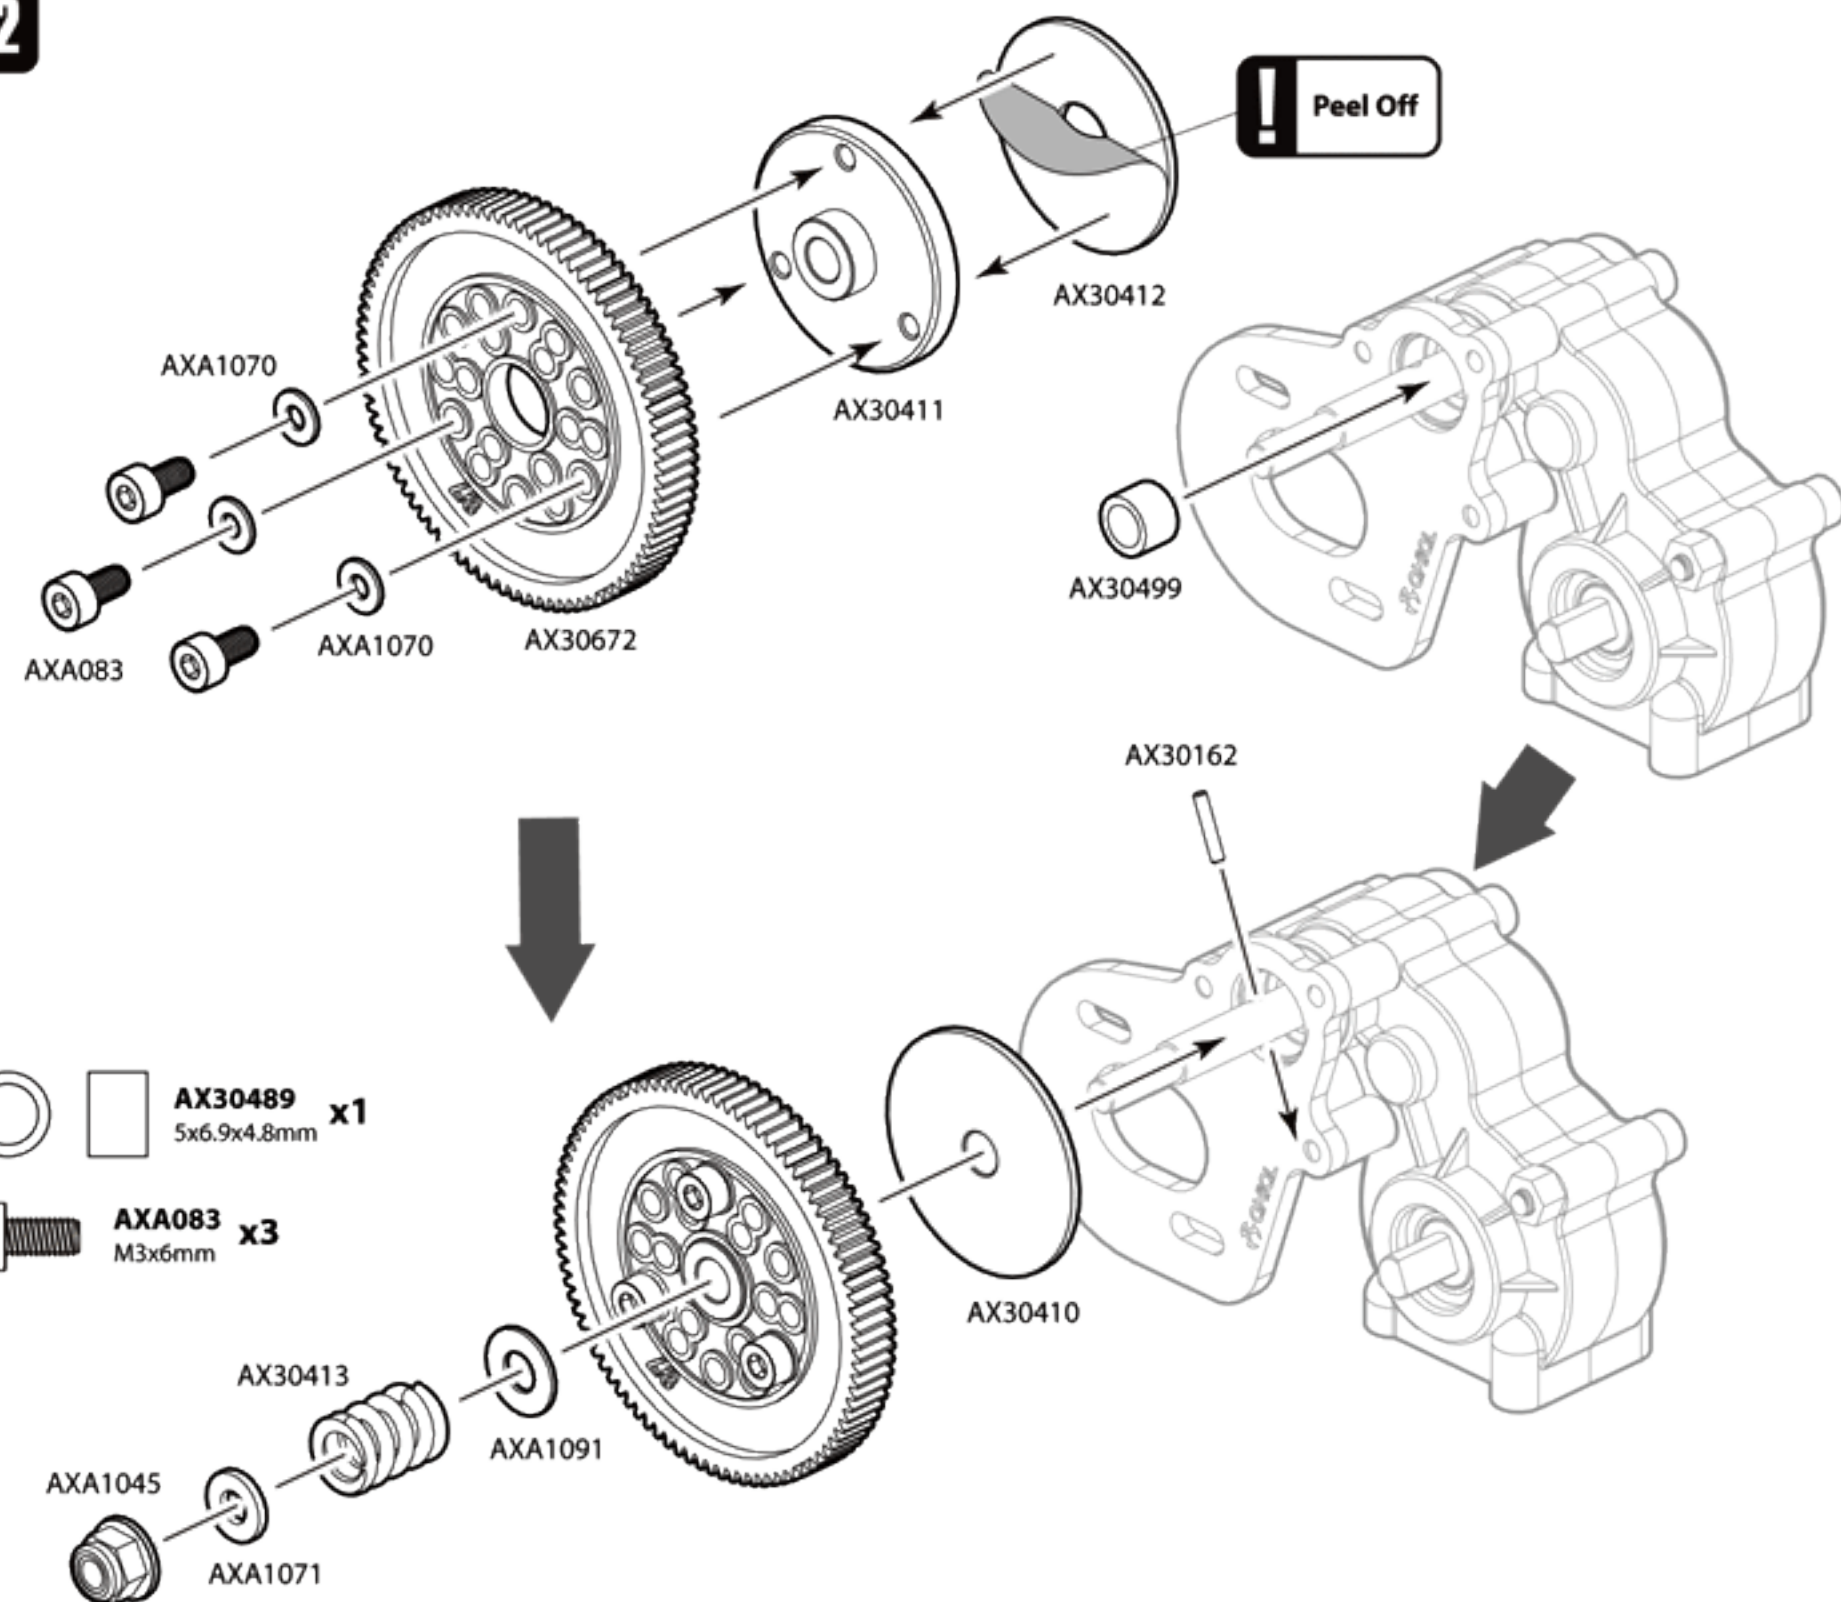

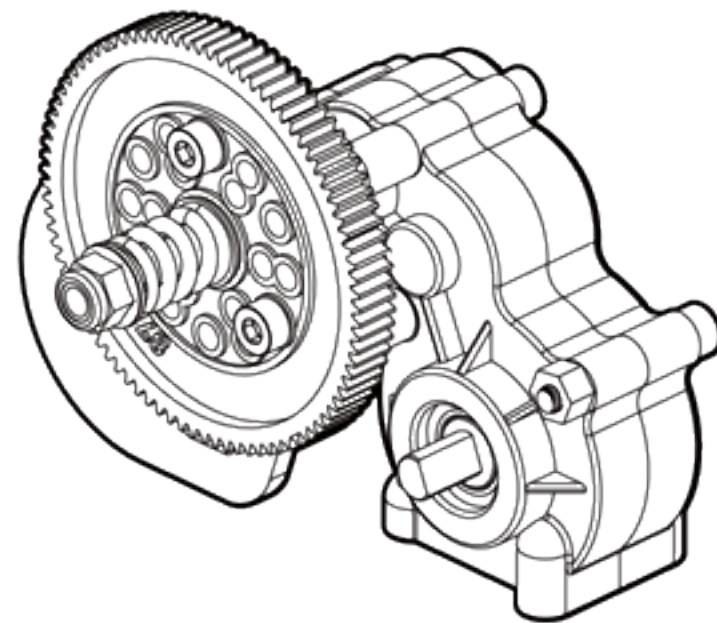

Slipper Clutch Setup

To set the slipper clutch, tighten the nut (⌚ Clockwise) until it stops then loosen it 2 turns (⌚ Counter clockwise). The spur gear should slip when firm pressure is applied. Do not overtighten the slipper clutch, damage may occur to the drivetrain.

Testing the slipper clutch

1. Hold the tires
2. Use your fingers to rotate the spur gear


Note: The spur gear should slip when firm pressure is applied. If it does not slip, loosen the nut in 1/2 turn increments



AXA466
M3x12mm Hex Socket Tapping Flat Head **x2**



AXA465
M3x10mm Hex Socket Tapping Flat Head **x2**

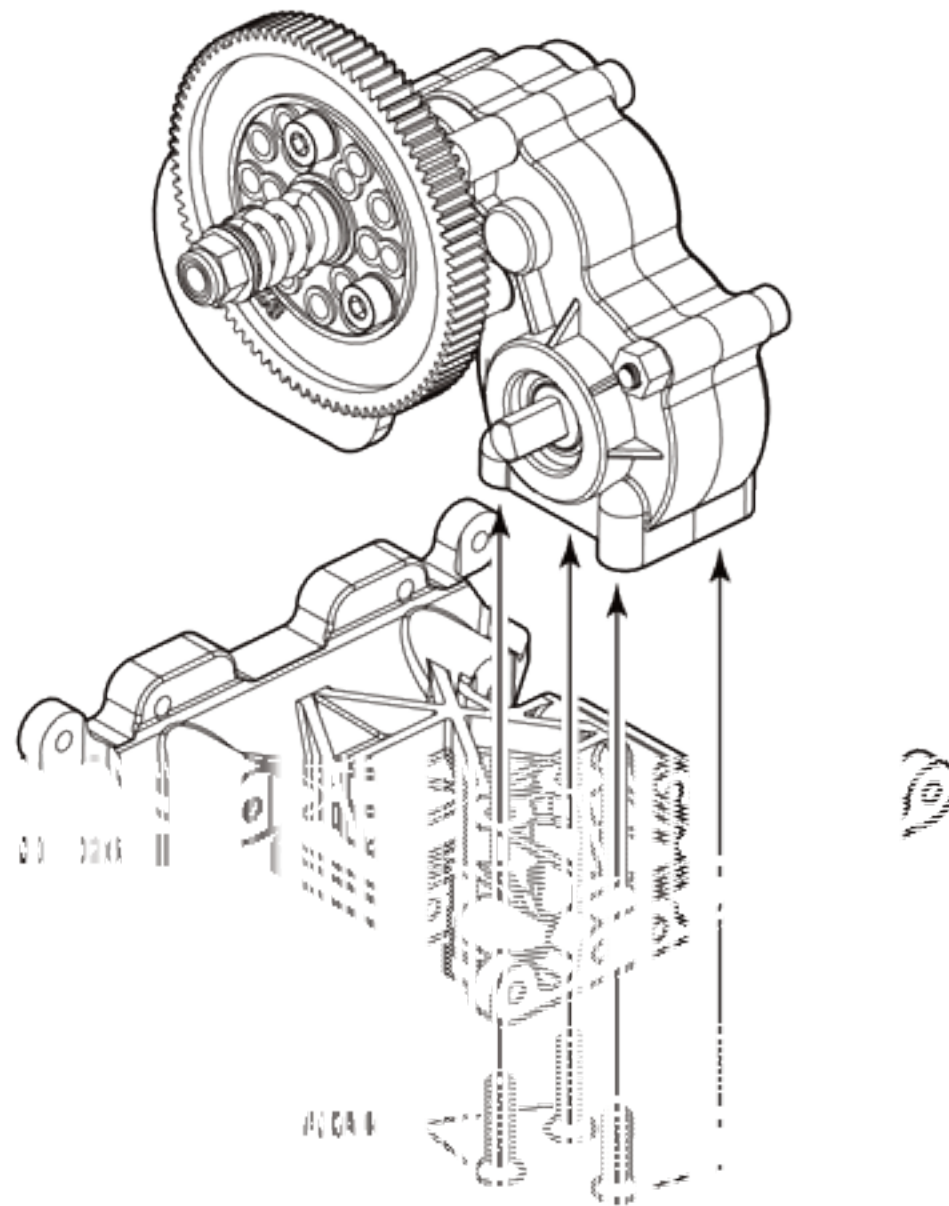


AXA1070
Washer 3x6x0.5mm **x2**



AXA1070
Washer 3x6x0.5mm **x2**




AXA1070
Washer 3x6x0.5mm **x2**

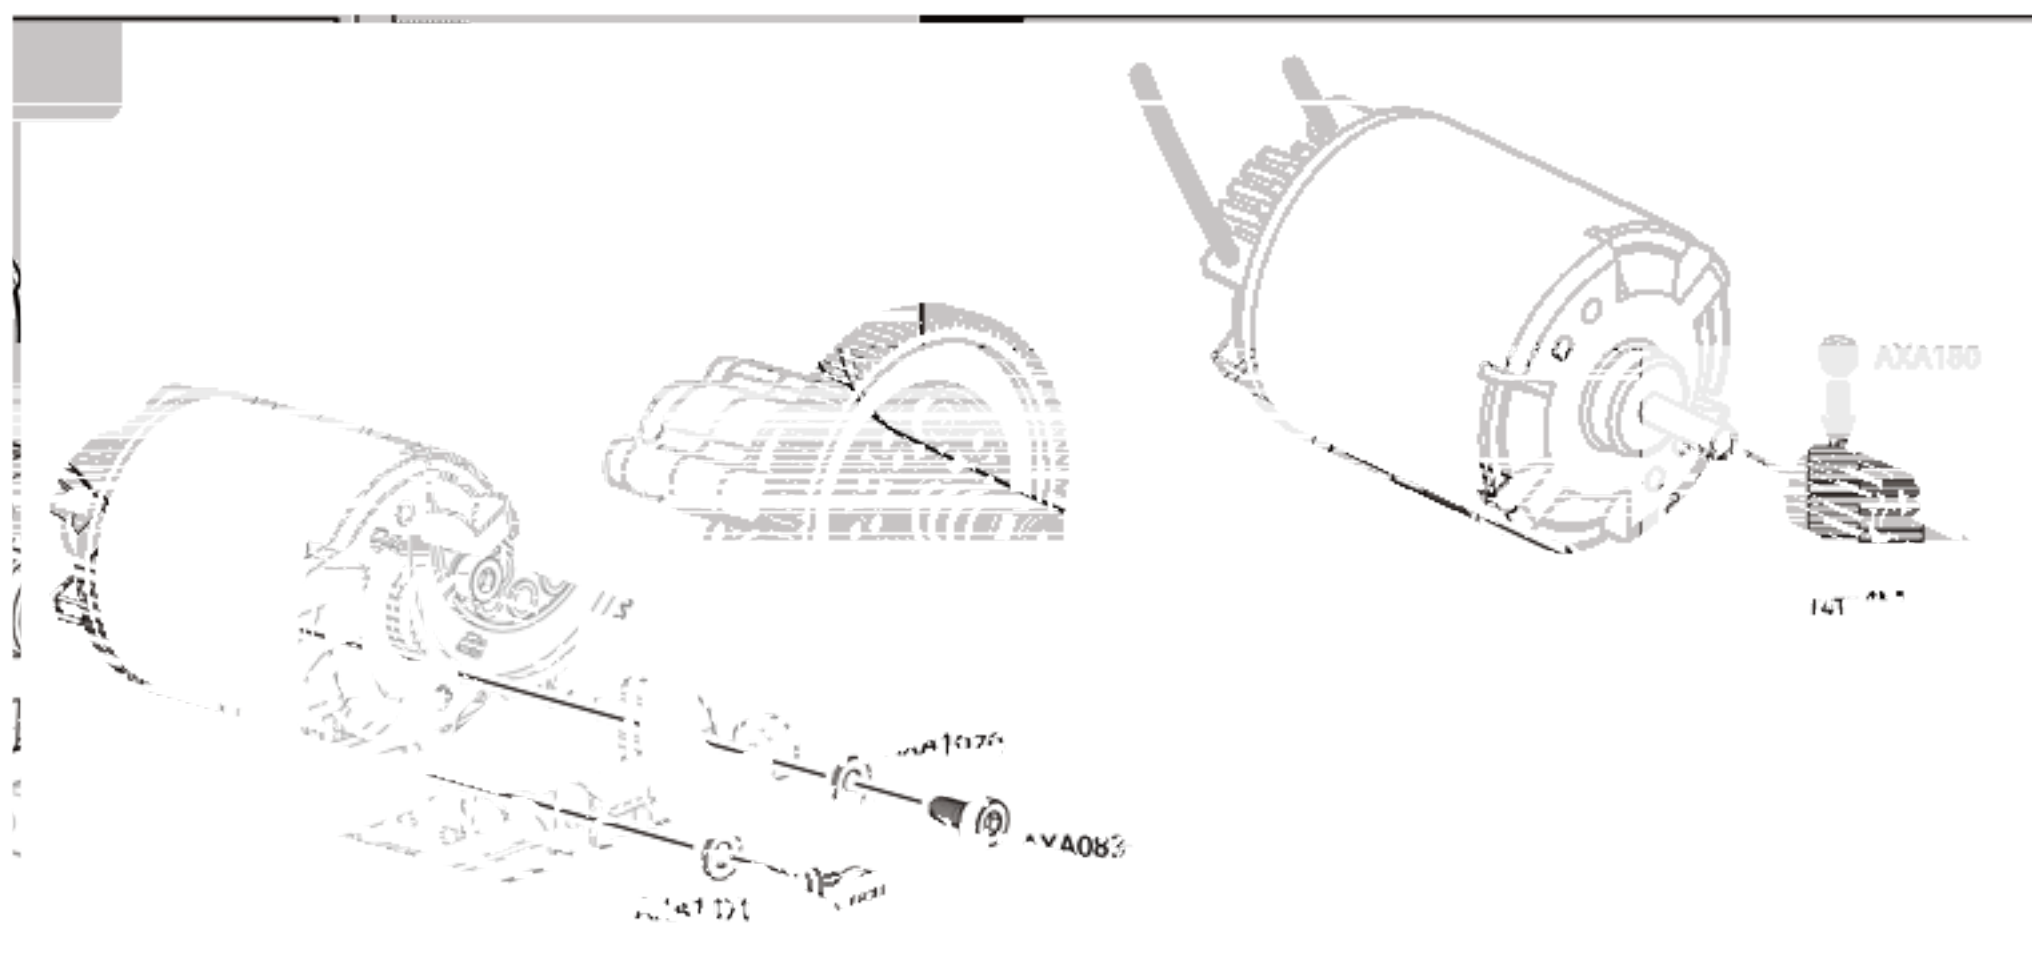





AXA434
M3x8mm Hex Socket Tapping Button Head **x2**

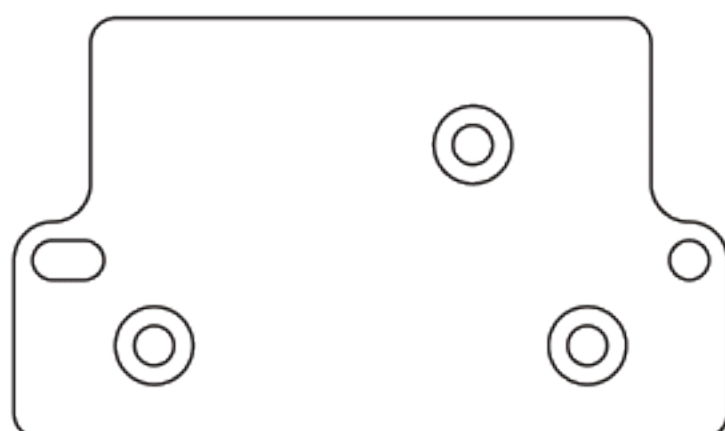

AX30485
AX10 Scorpion Servo Plate **x1**


! Note Direction
Richtung beachten

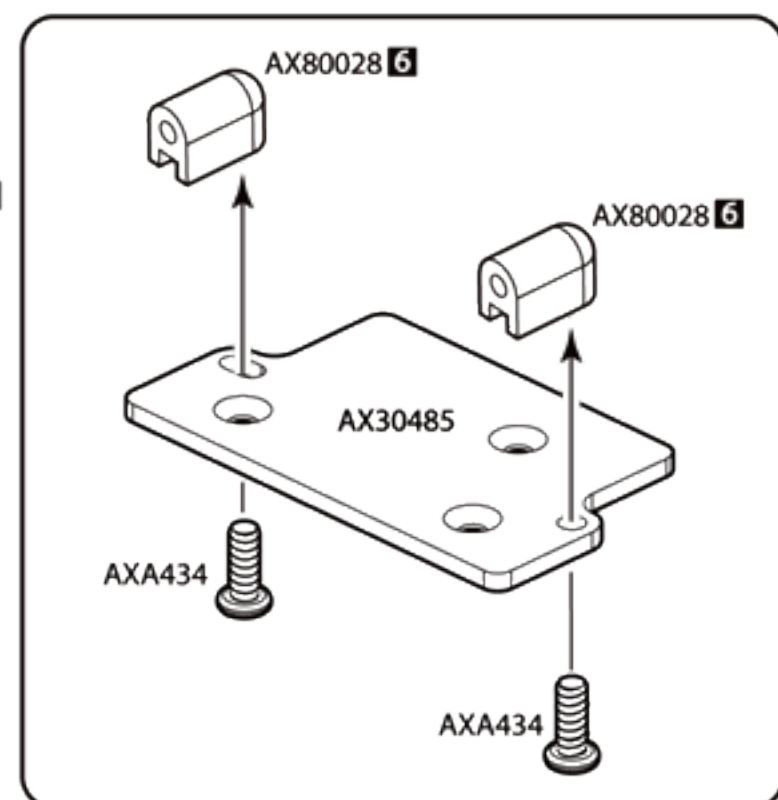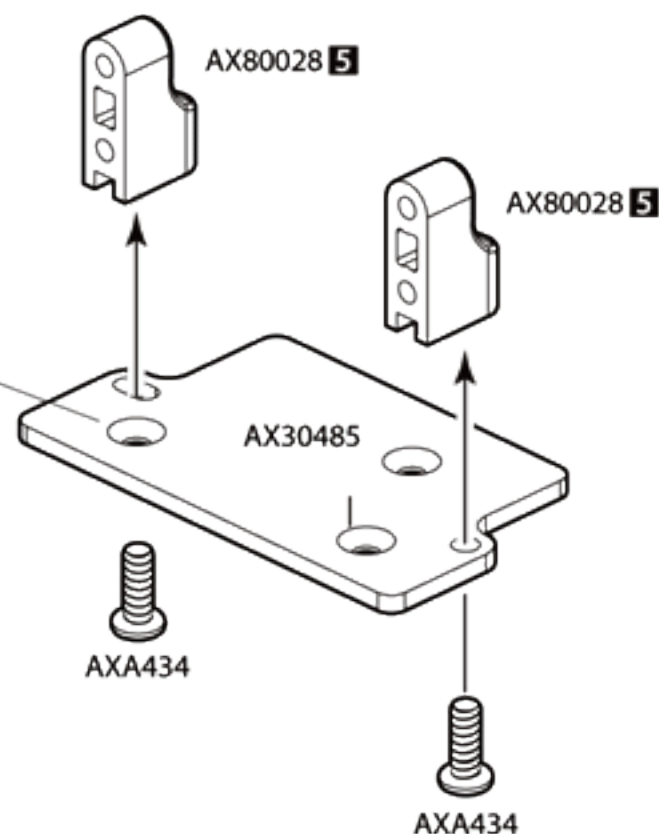

AXA466
M3x12mm Hex Socket Tapping Flat Head **x2**



AXA464
M3x8mm Hex Socket Tapping Flat Head **x1**

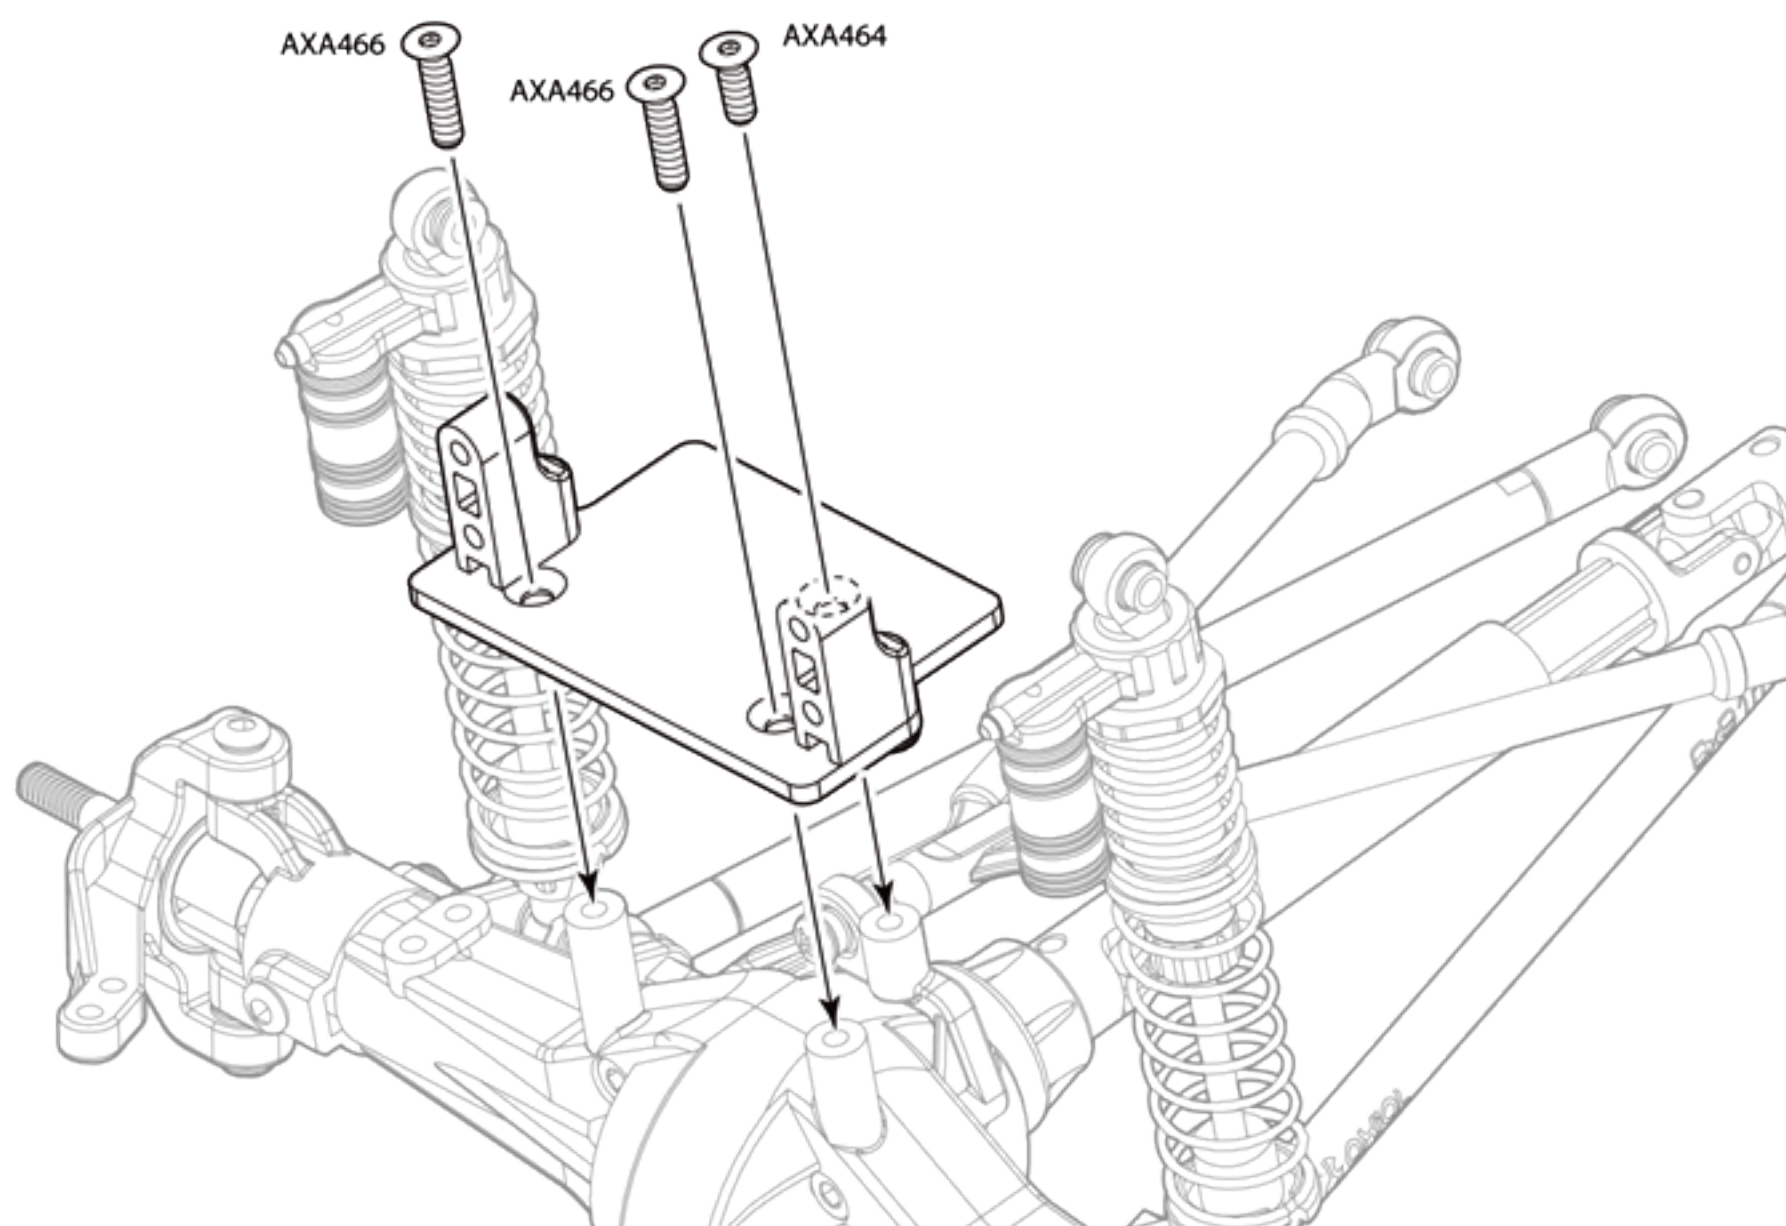


AXA144
M3x8mm Hex Socket Flat Head **x1**



AXA1105
Cone Washer 3x6.9x2 **x1**

Install when servo
is in neutral position.

Bei Montage auf
Neutralstellung achten.

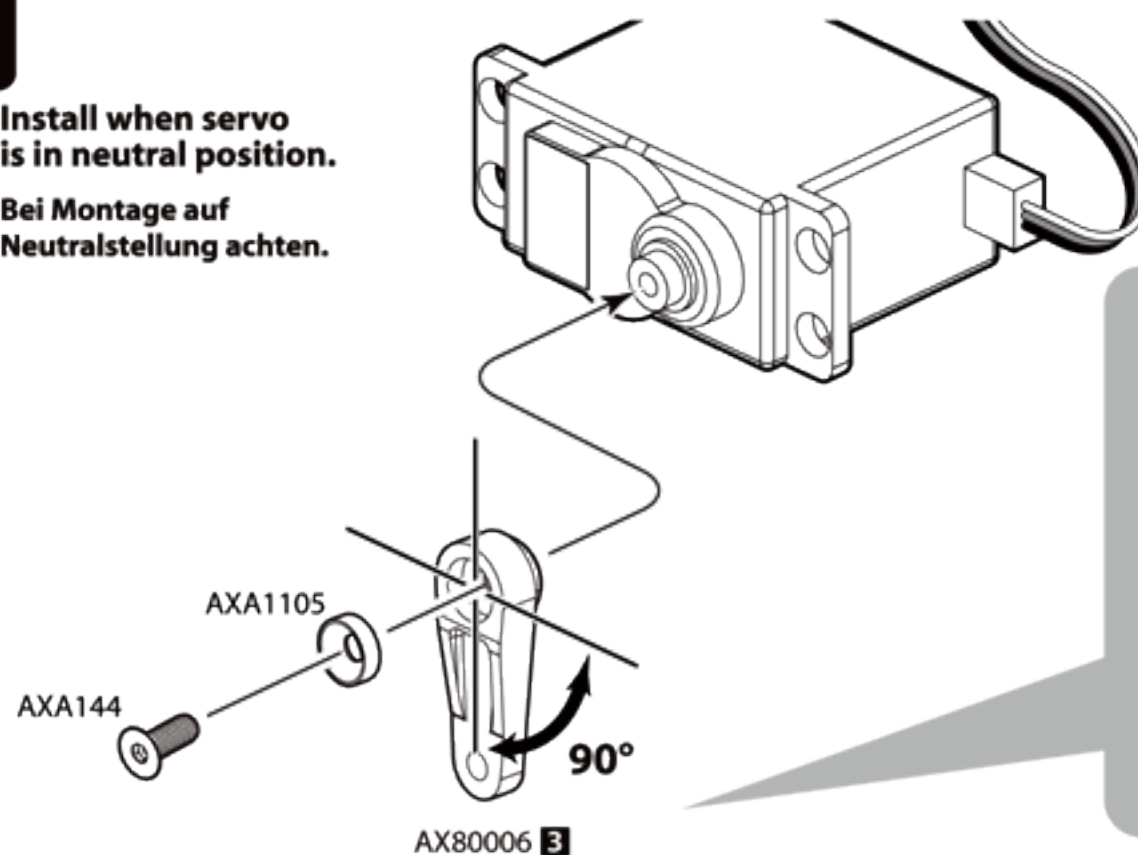

AX80006 **7**
23 **Airtronics / JR / KO**

AX80006 **6**
24 **Hitec**

AX80006 **5**
25 **Futaba**



AXA1280 x4
M3x10mm

29

AXA1280

AXA1280




AXA186 x4
3x16mm Set Screw



AX30517 x1
6x33mm

30

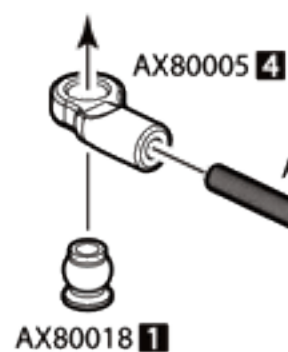


AX80005 4

AXA186

AX80018 1

AX30516

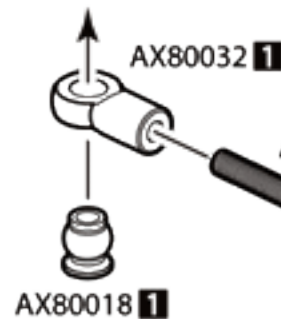

AX80032 1

AXA186

AX80018 1

AX30517

AXA186

AX80018 1

AX80032 1

AXA186

AX80018 1



6x106mm

AX30516 x1
6x106mm



AXA117 x1
M3x15mm Hex Socket Button Head



AXA118 x1
M3x18mm Hex Socket Button Head



AXA120 x1
M3x25mm Hex Socket Button Head



AXA1414 x1
6x2x3mm



AXA1053 x3
M3 Nylon Locking Hex Nut

31

AXA118

AXA117

AXA1053

AXA120

AXA1053

AXA1414

AXA1053


6x106mm




AXA433 x8
M3x6mm Hex Socket Tapping Button Head



AXA464 x10
M3x8mm Hex Socket Tapping Flat Head

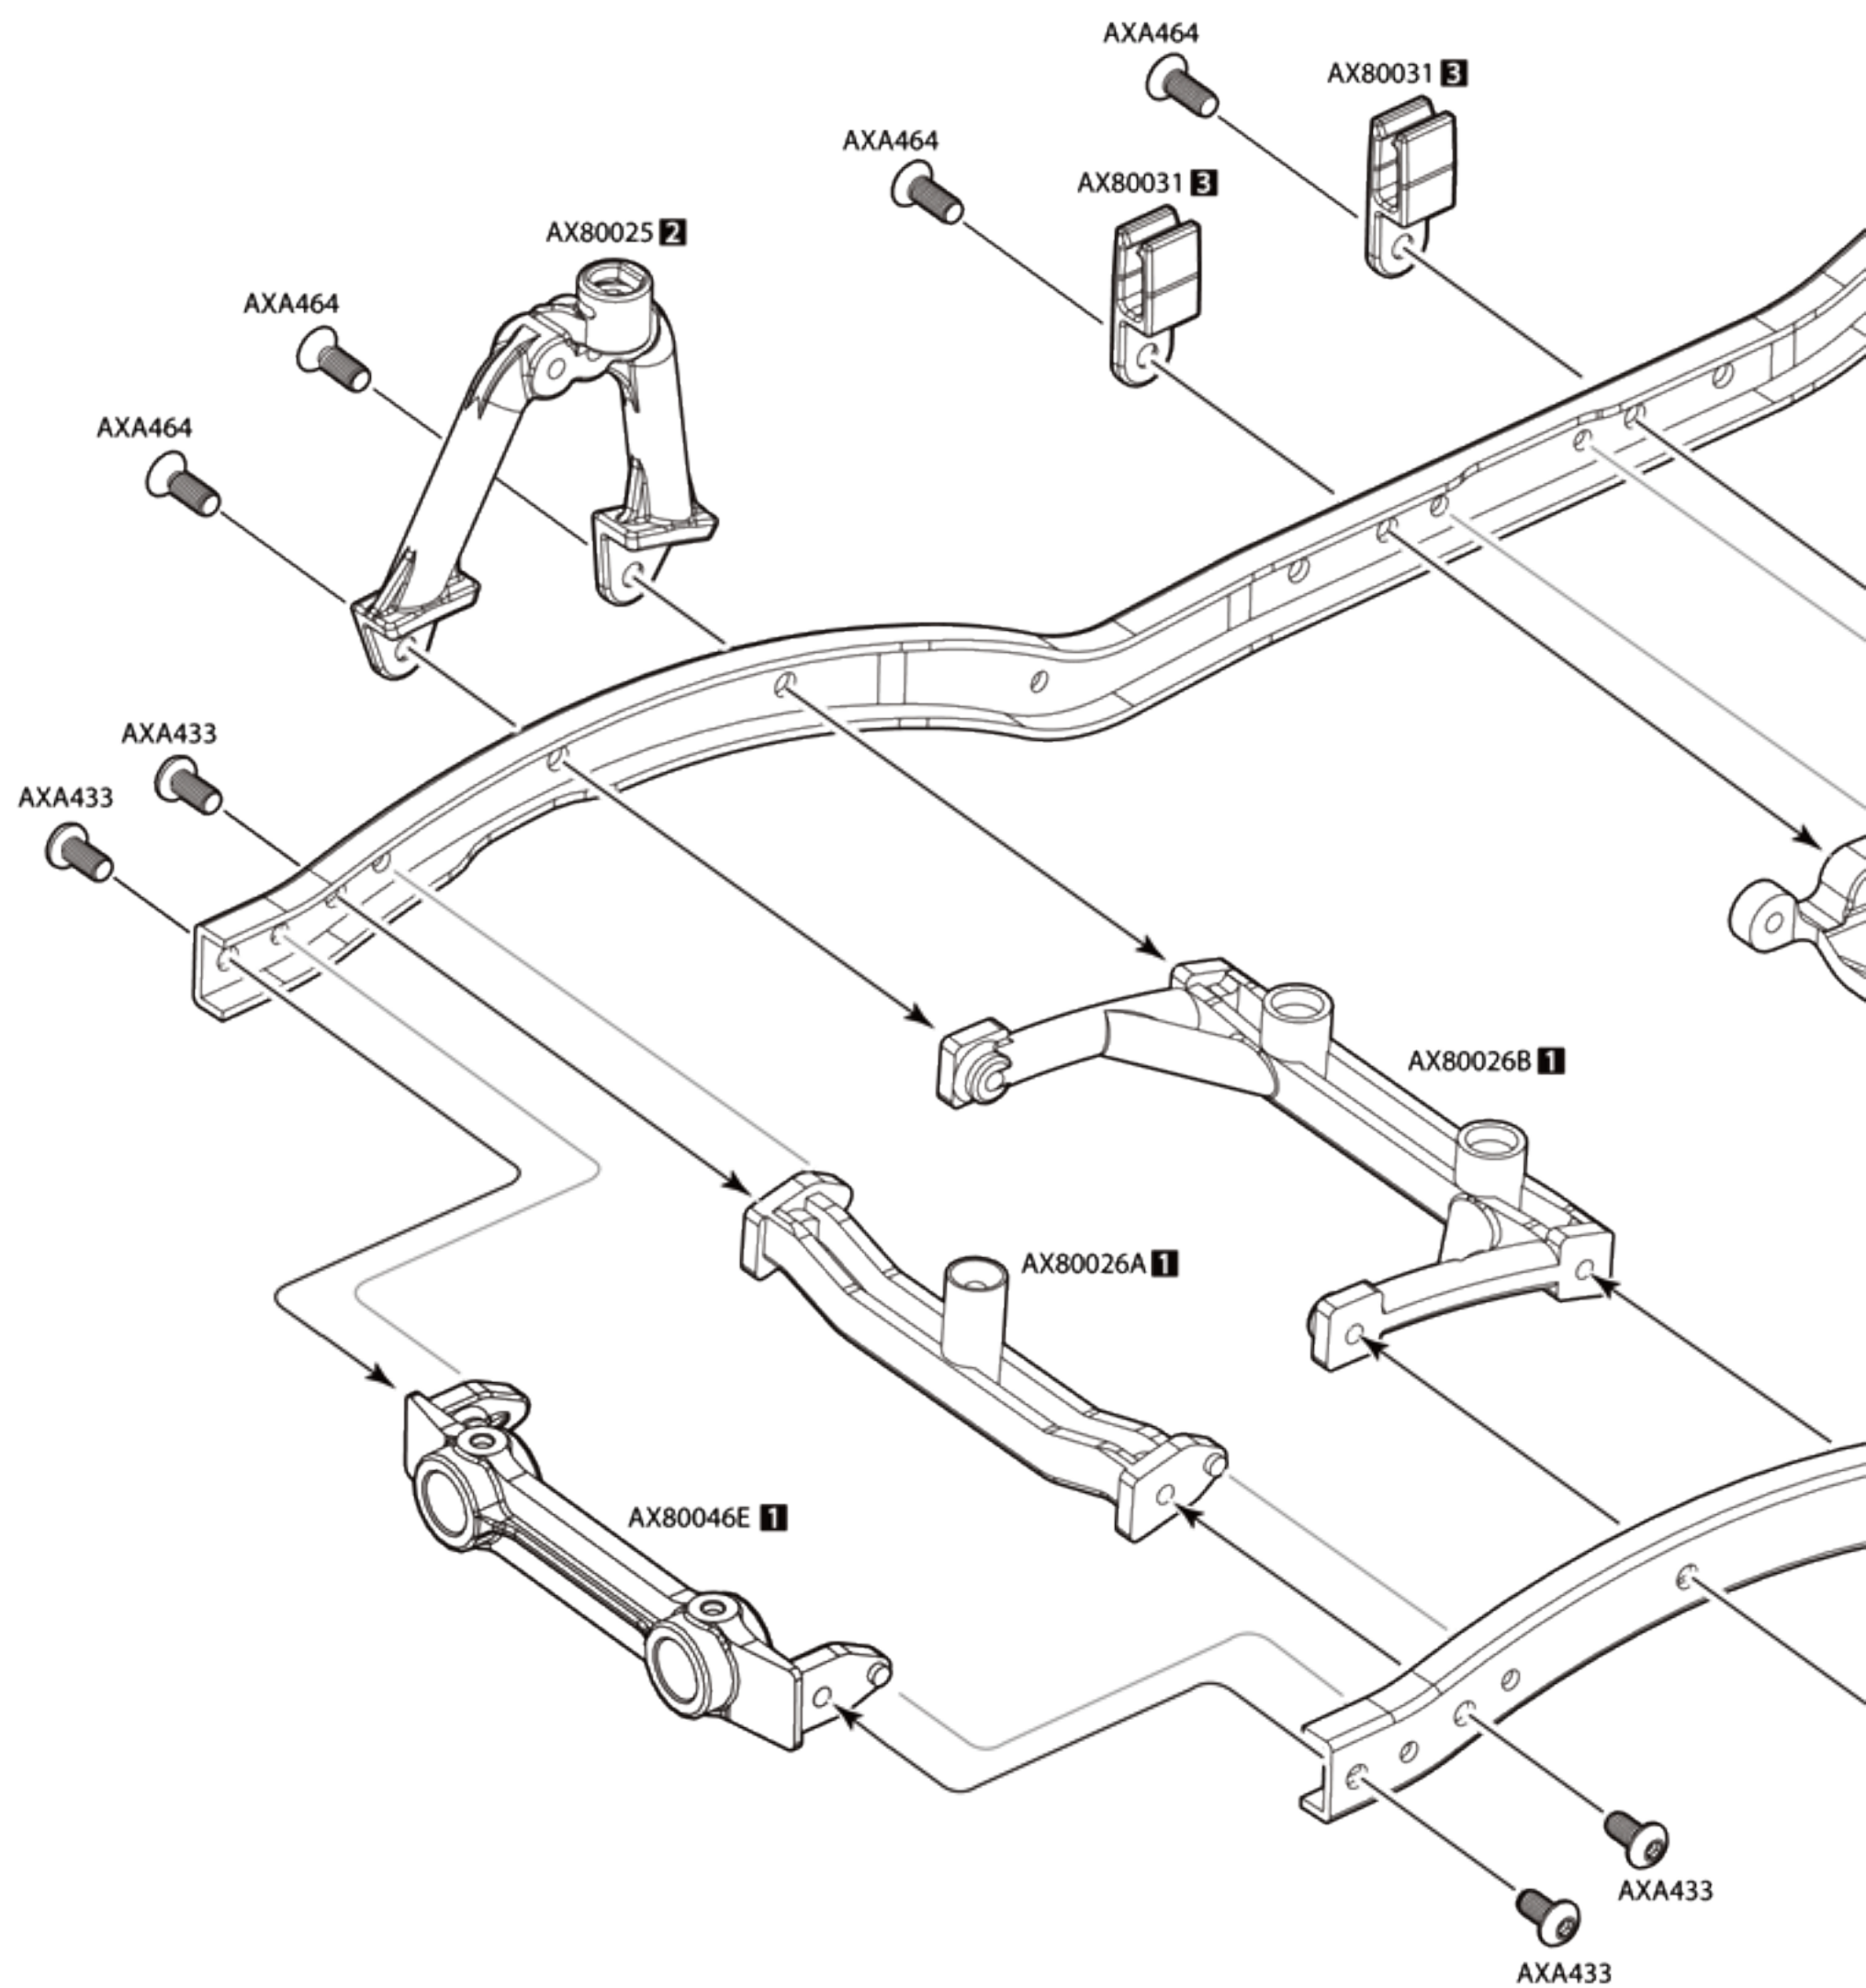

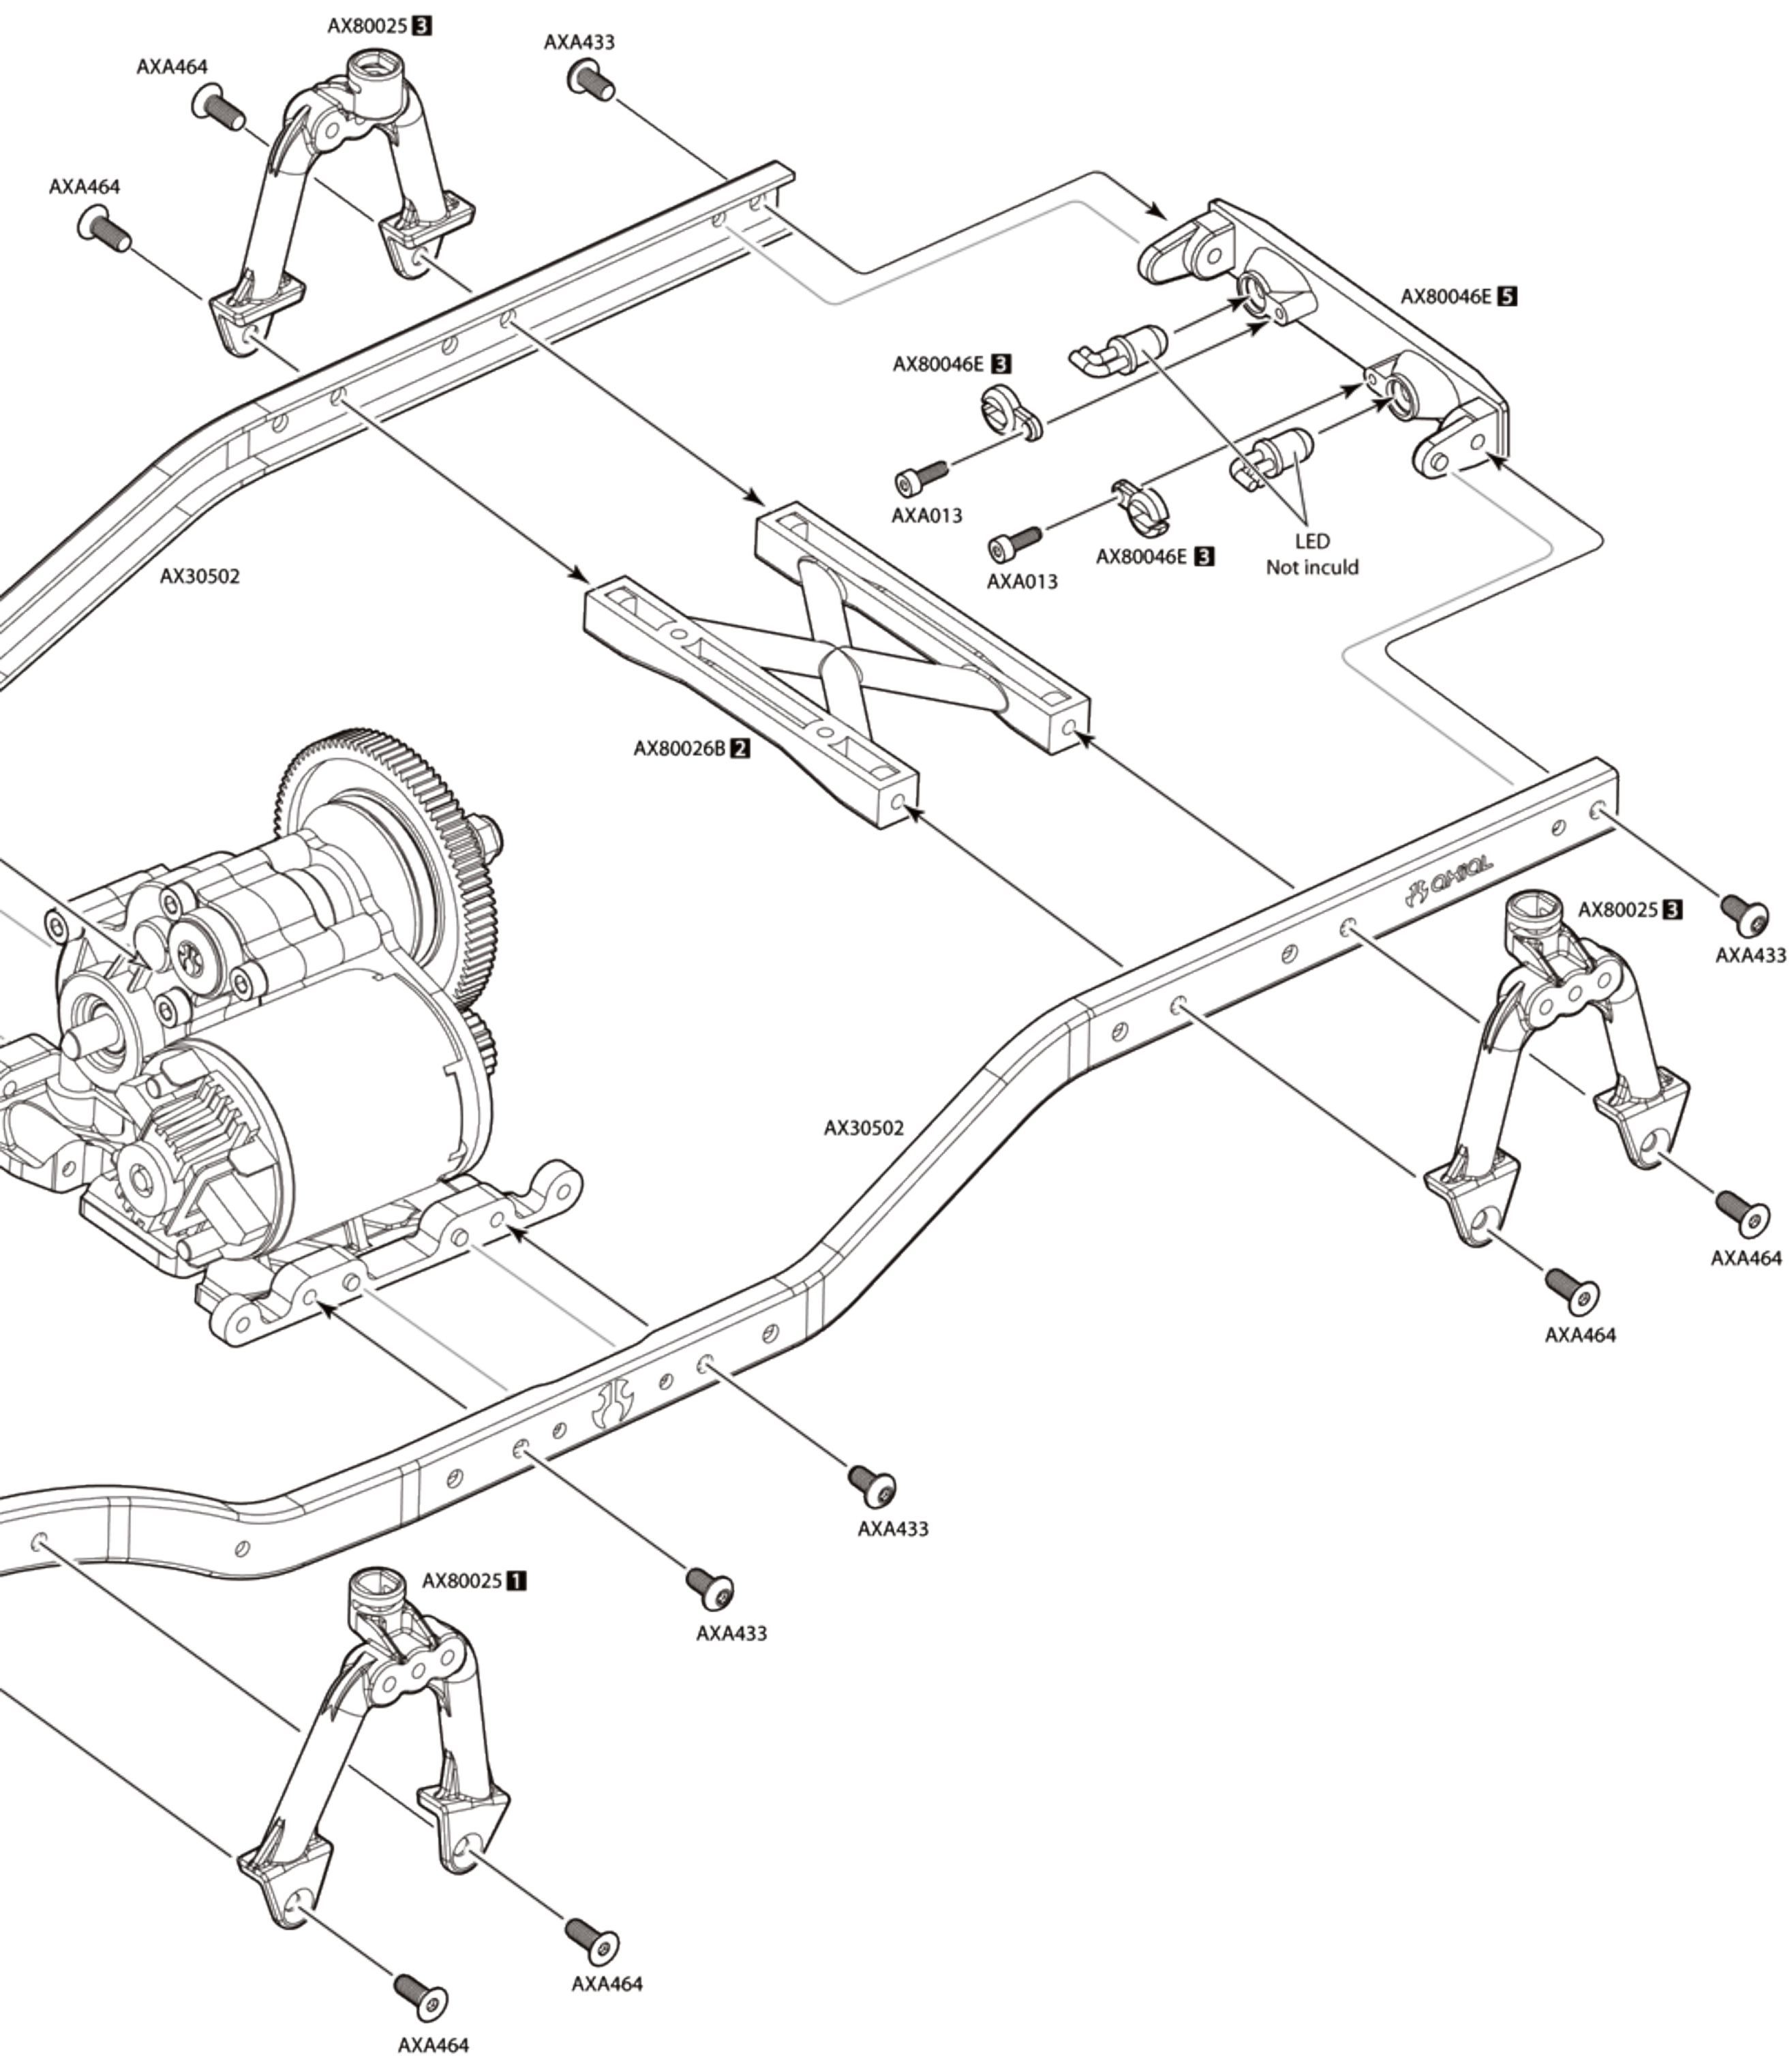

33



AXA119
M3x20mm Hex Socket Button Head **x2**




AXA087
M3x16mm Cap Head **x2**



AXA1053
M3 Nylon Lock Nut **x2**



AXA180
M3x3mm Set Screw **x1**

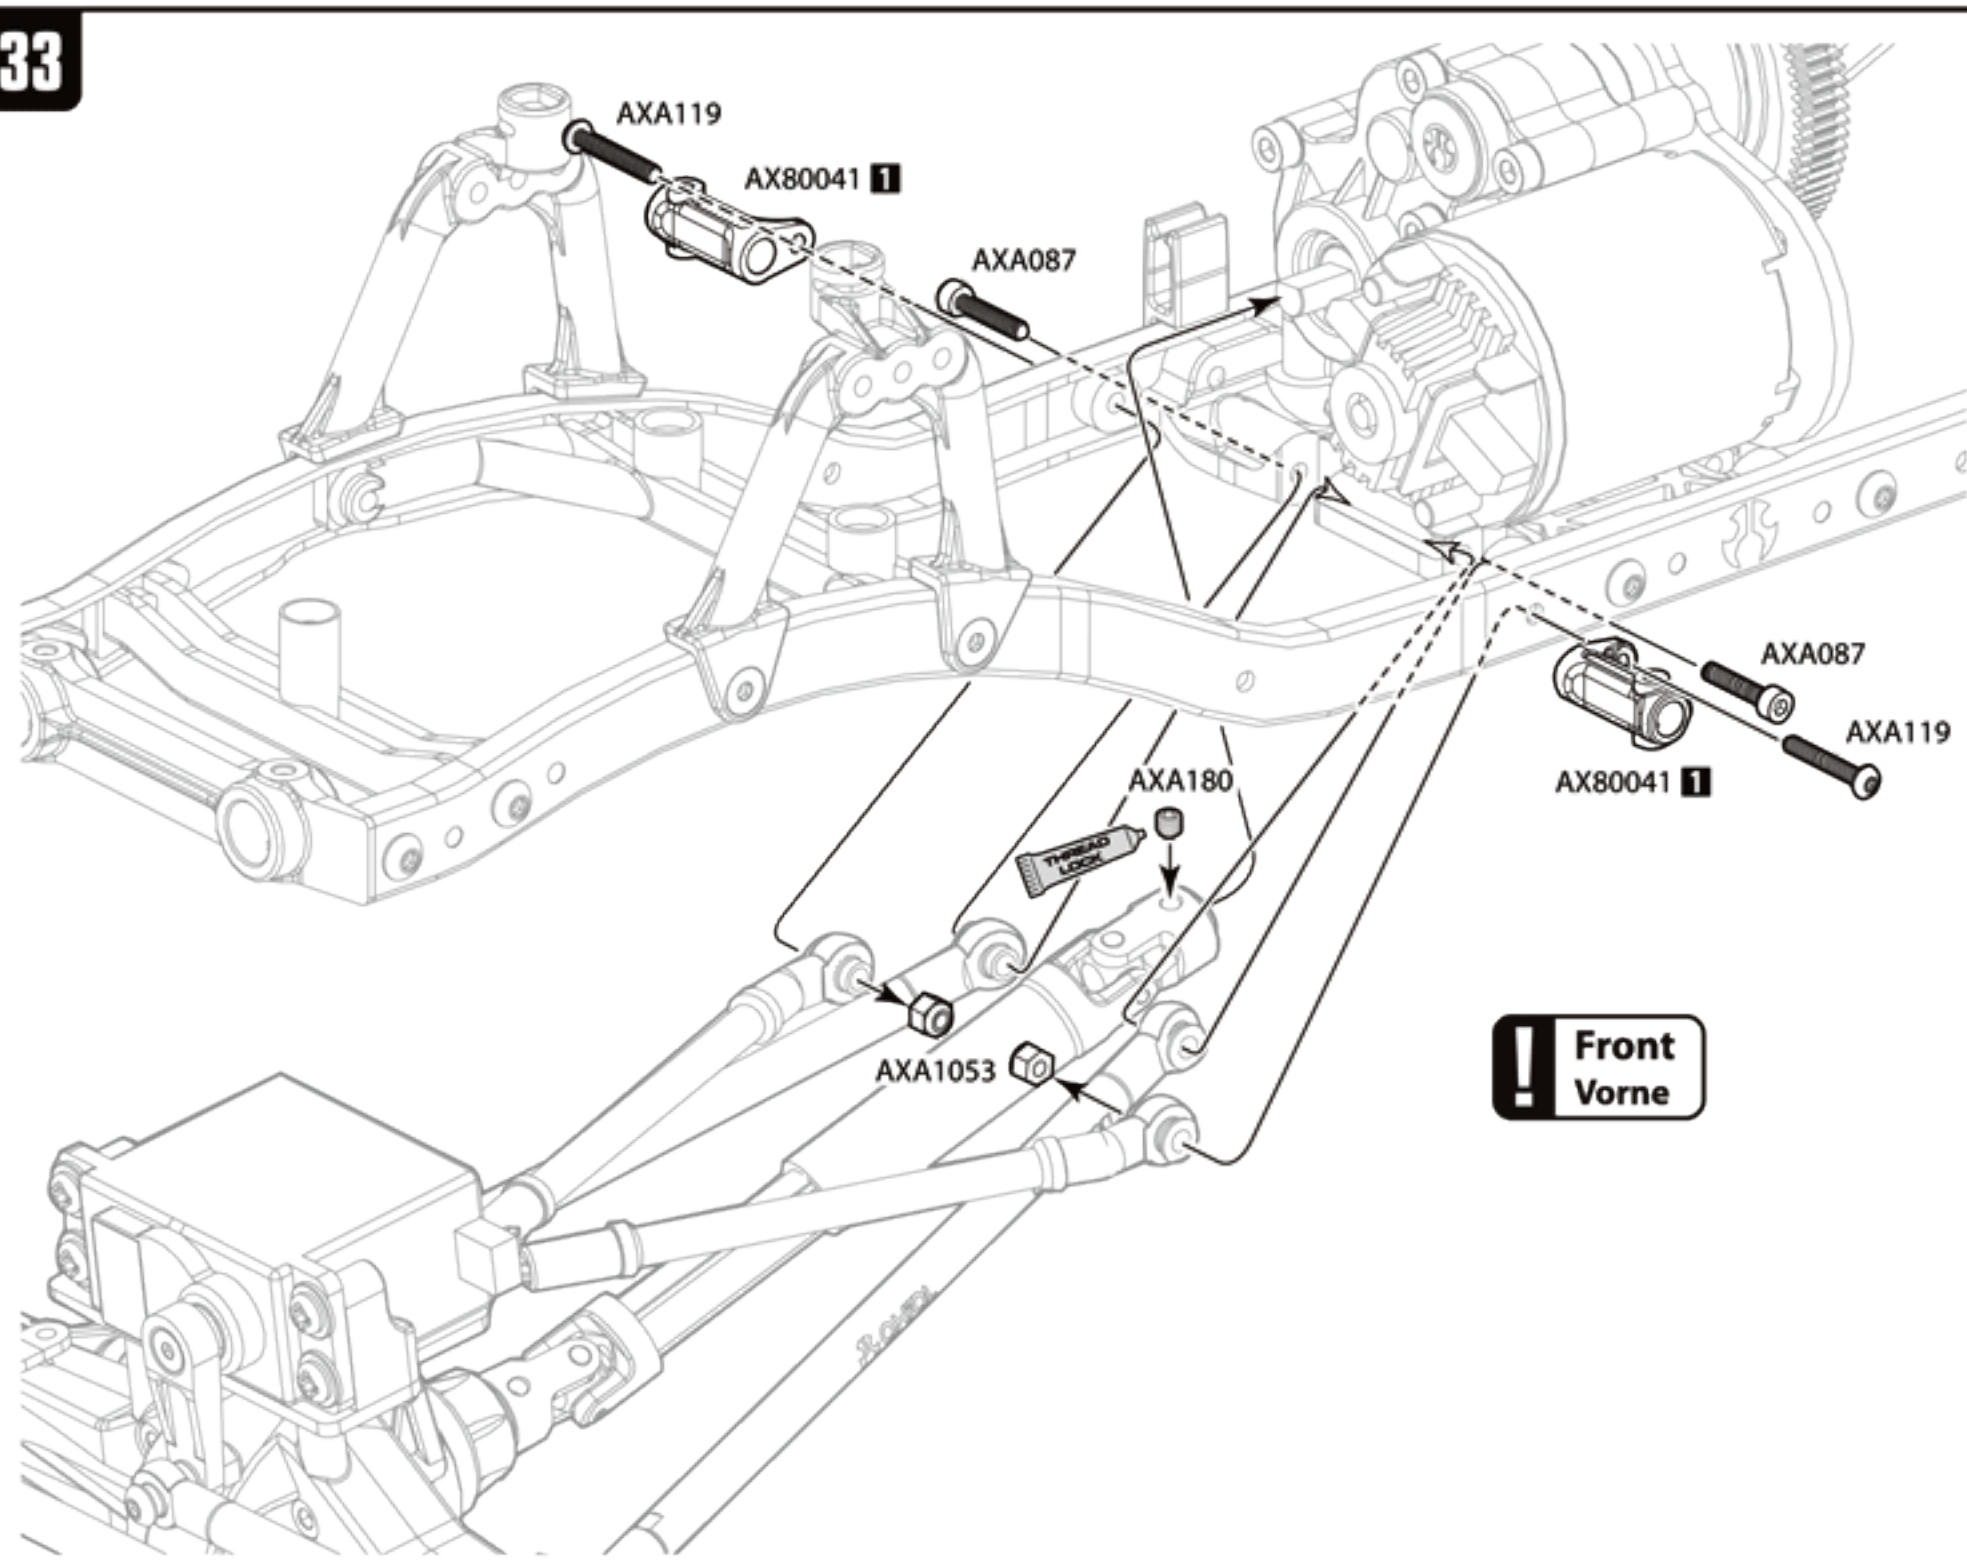

34



AXA119
M3x20mm Hex Socket Button Head **x2**




AXA087
M3x16mm Cap Head **x2**



AXA1053
M3 Nylon Lock Nut **x2**



AXA180
M3x3mm Set Screw **x1**

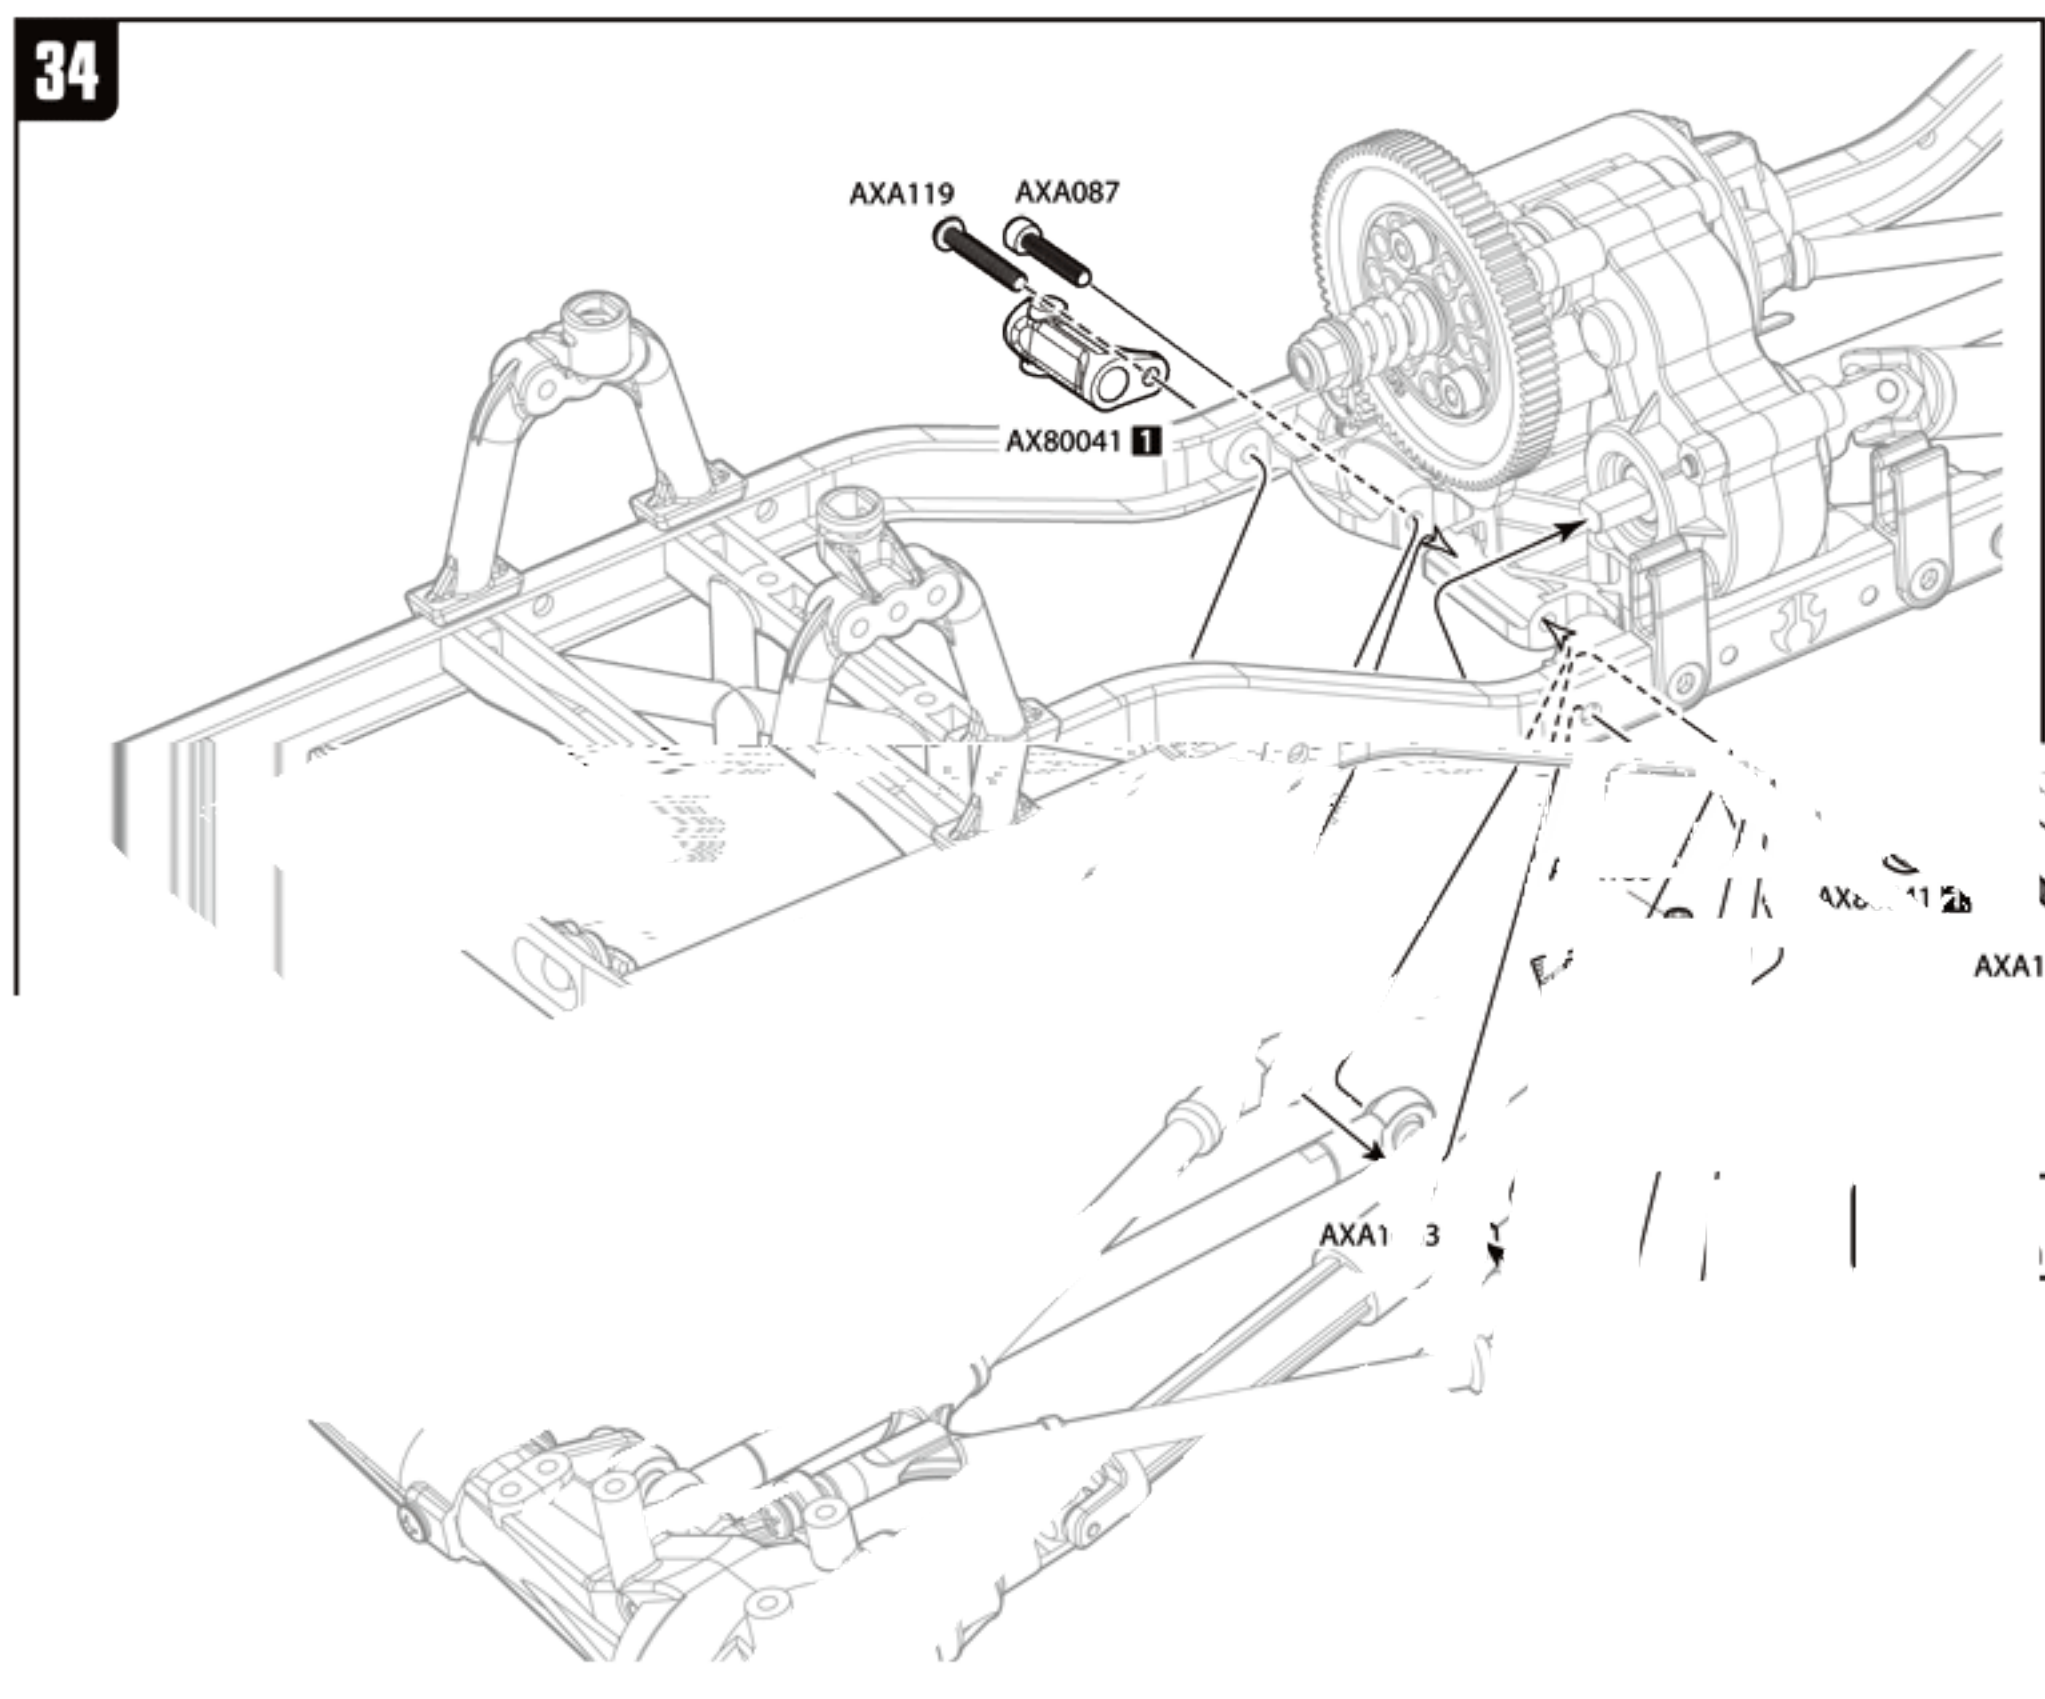




AXA438
M3x18mm Tapping Button Head **x2**



AXA1416 **x2**
6x4x3mm

35

**! Front
Vorne**

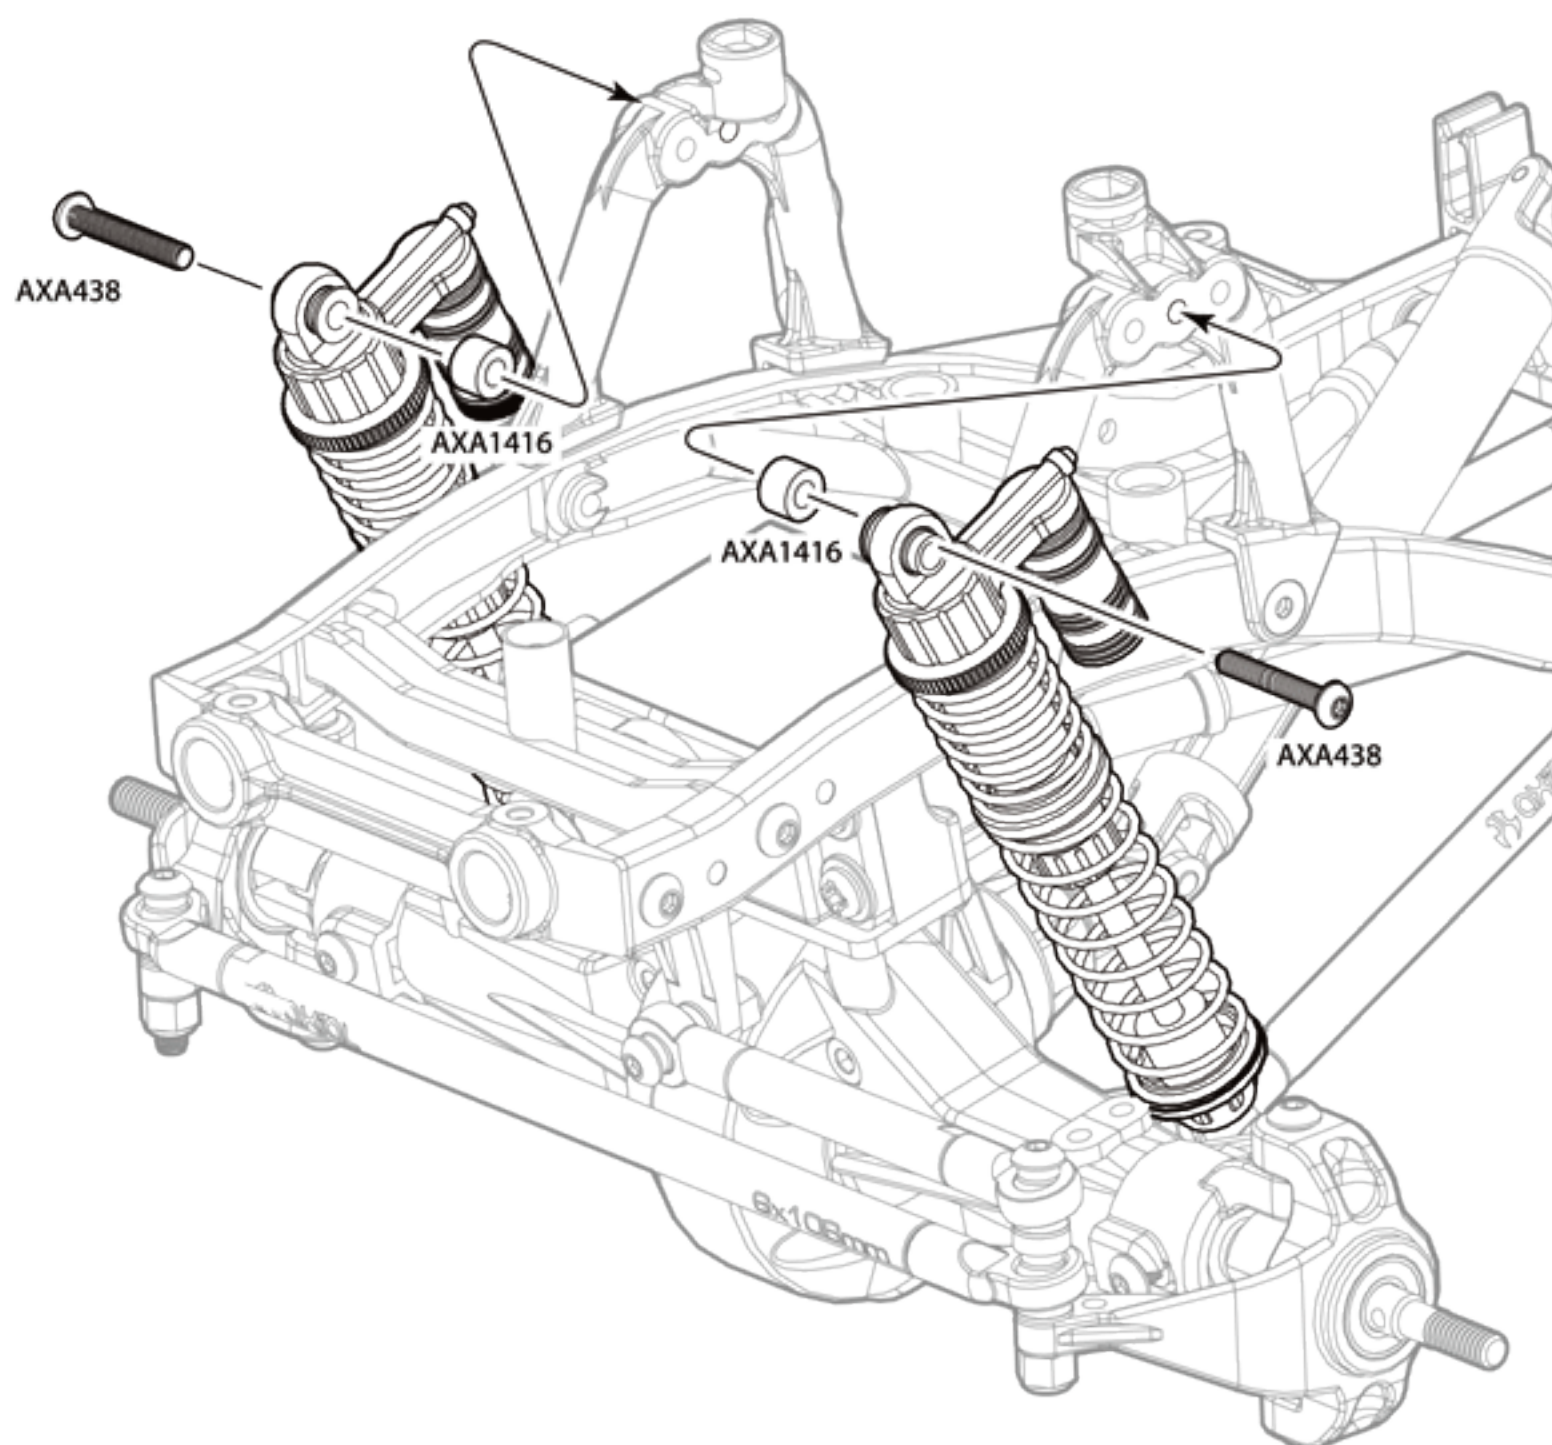


AXA438
M3x18mm Tapping Button Head **x2**



AXA1416 **x2**
6x4x3mm

36


**! Rear
Hinten**

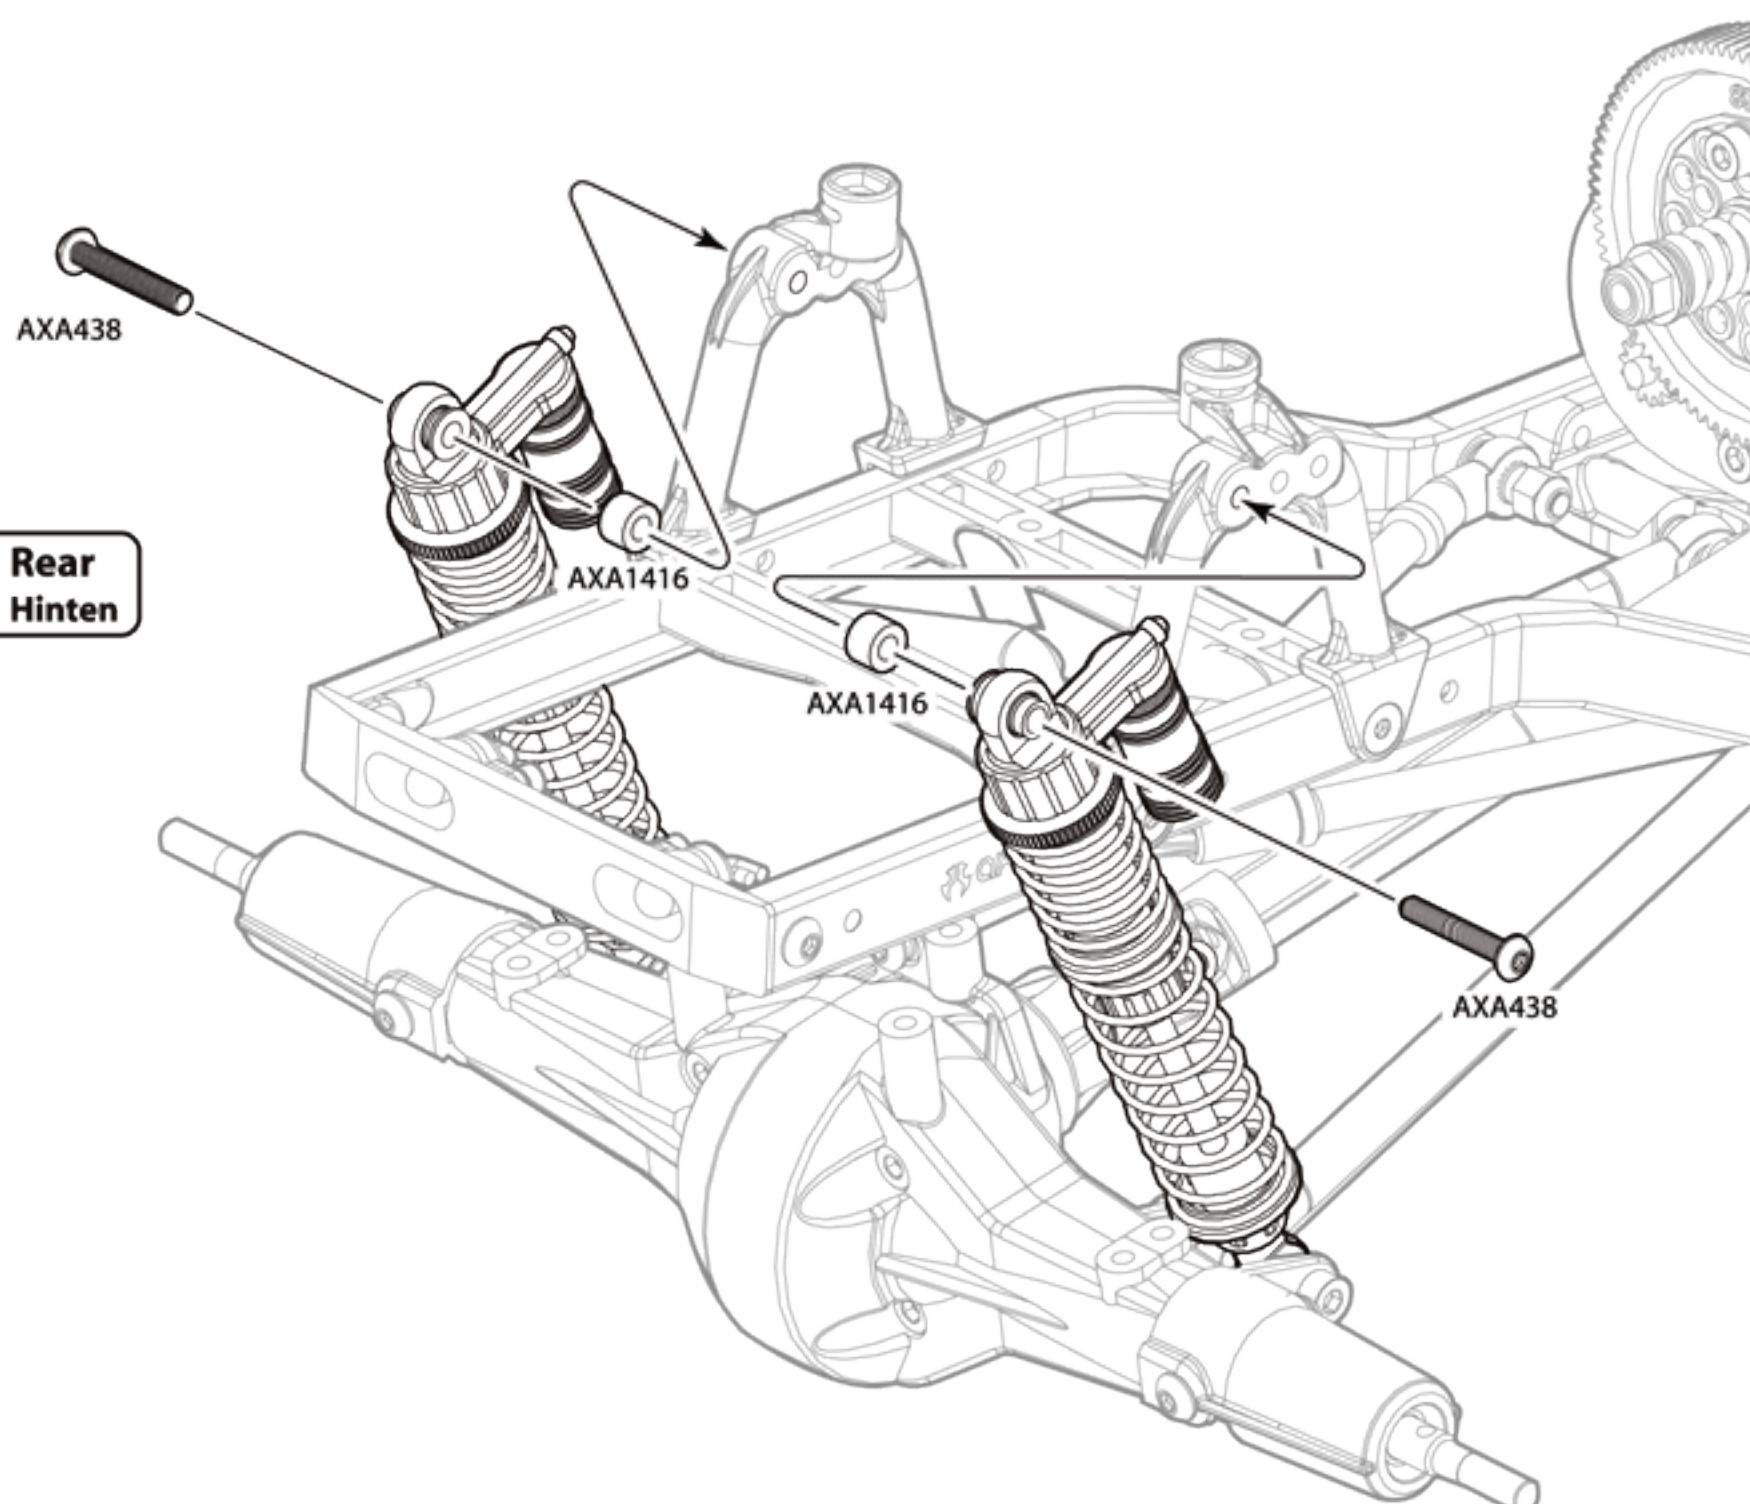




AXA464
M3x8mm Tapping Flat Head **x4**

37

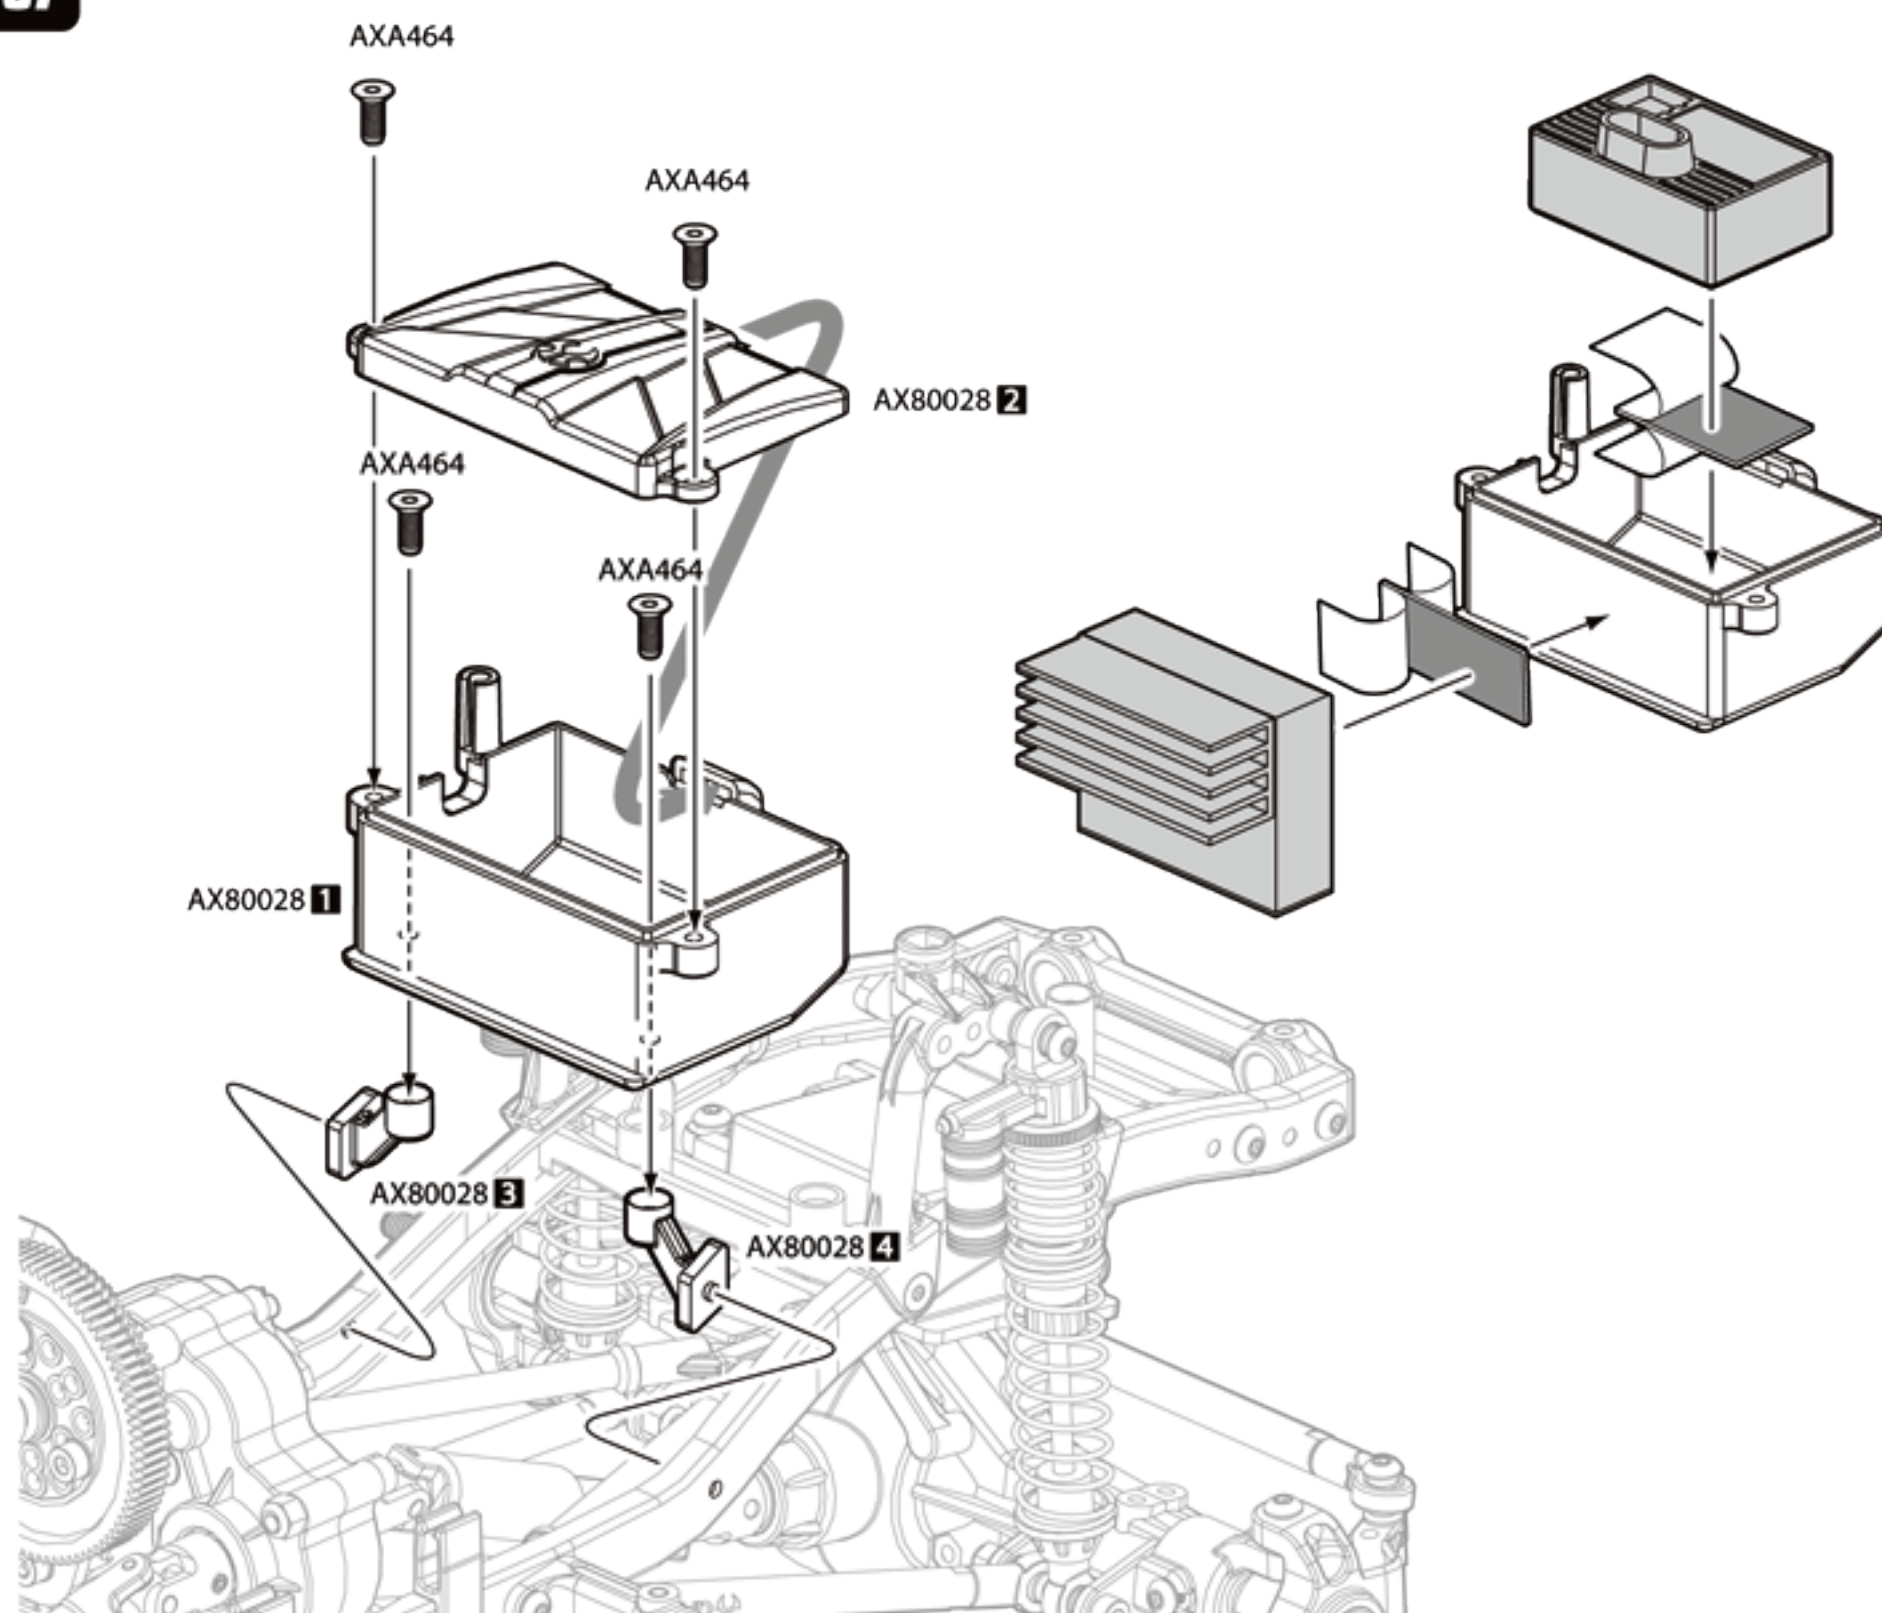

AXA176
M3x2.5x13mm Screw Shaft **x4**

38

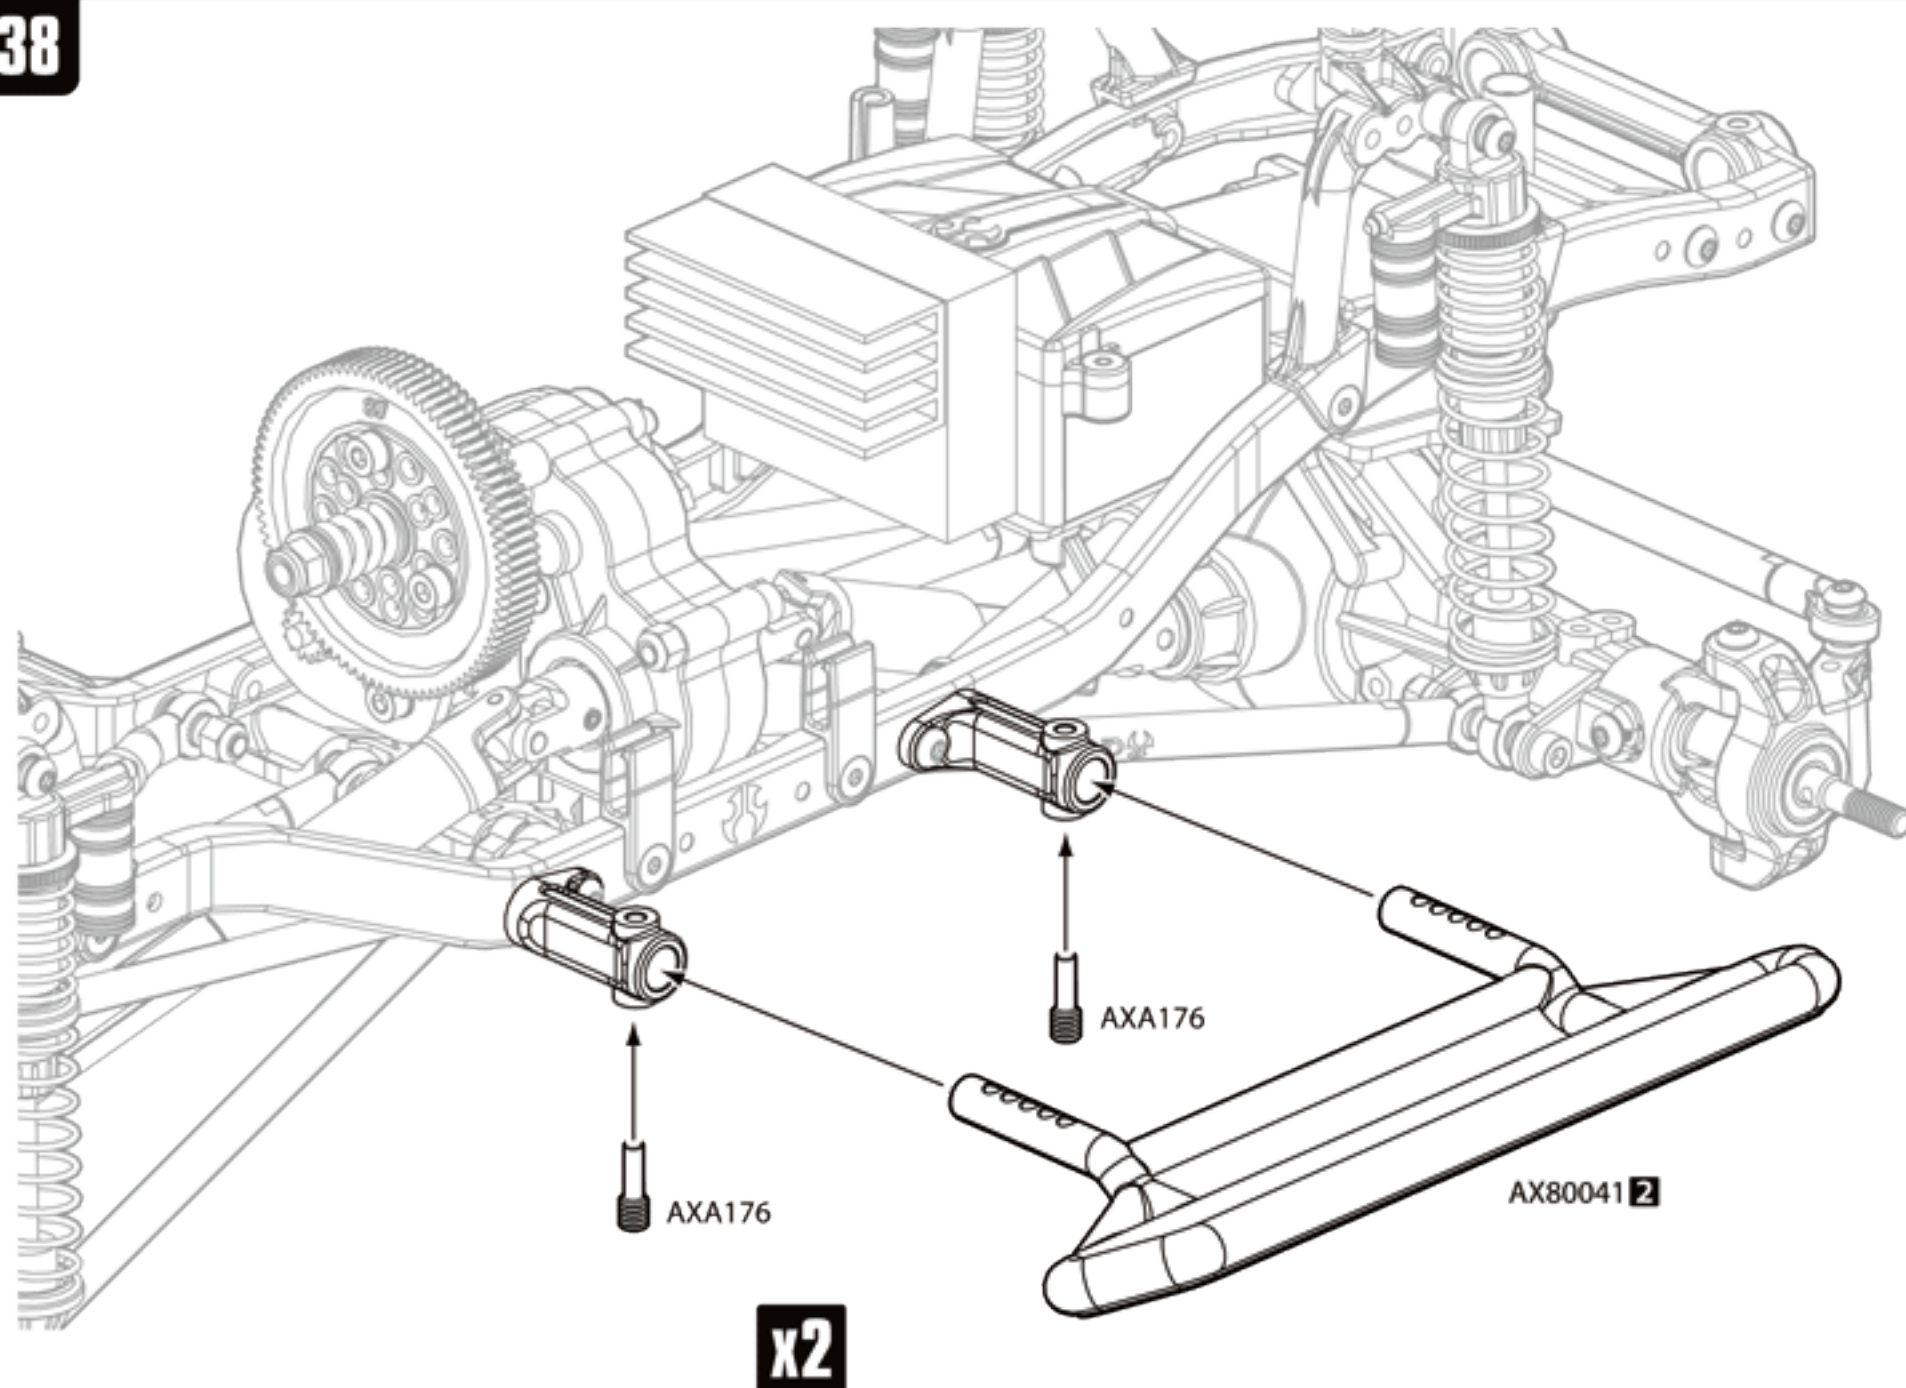





AXA463
M3x6mm Hex Socket Tapping Flat Head **x1**



AXA471
M3x30mm Hex Socket Tapping Flat Head **x3**

39

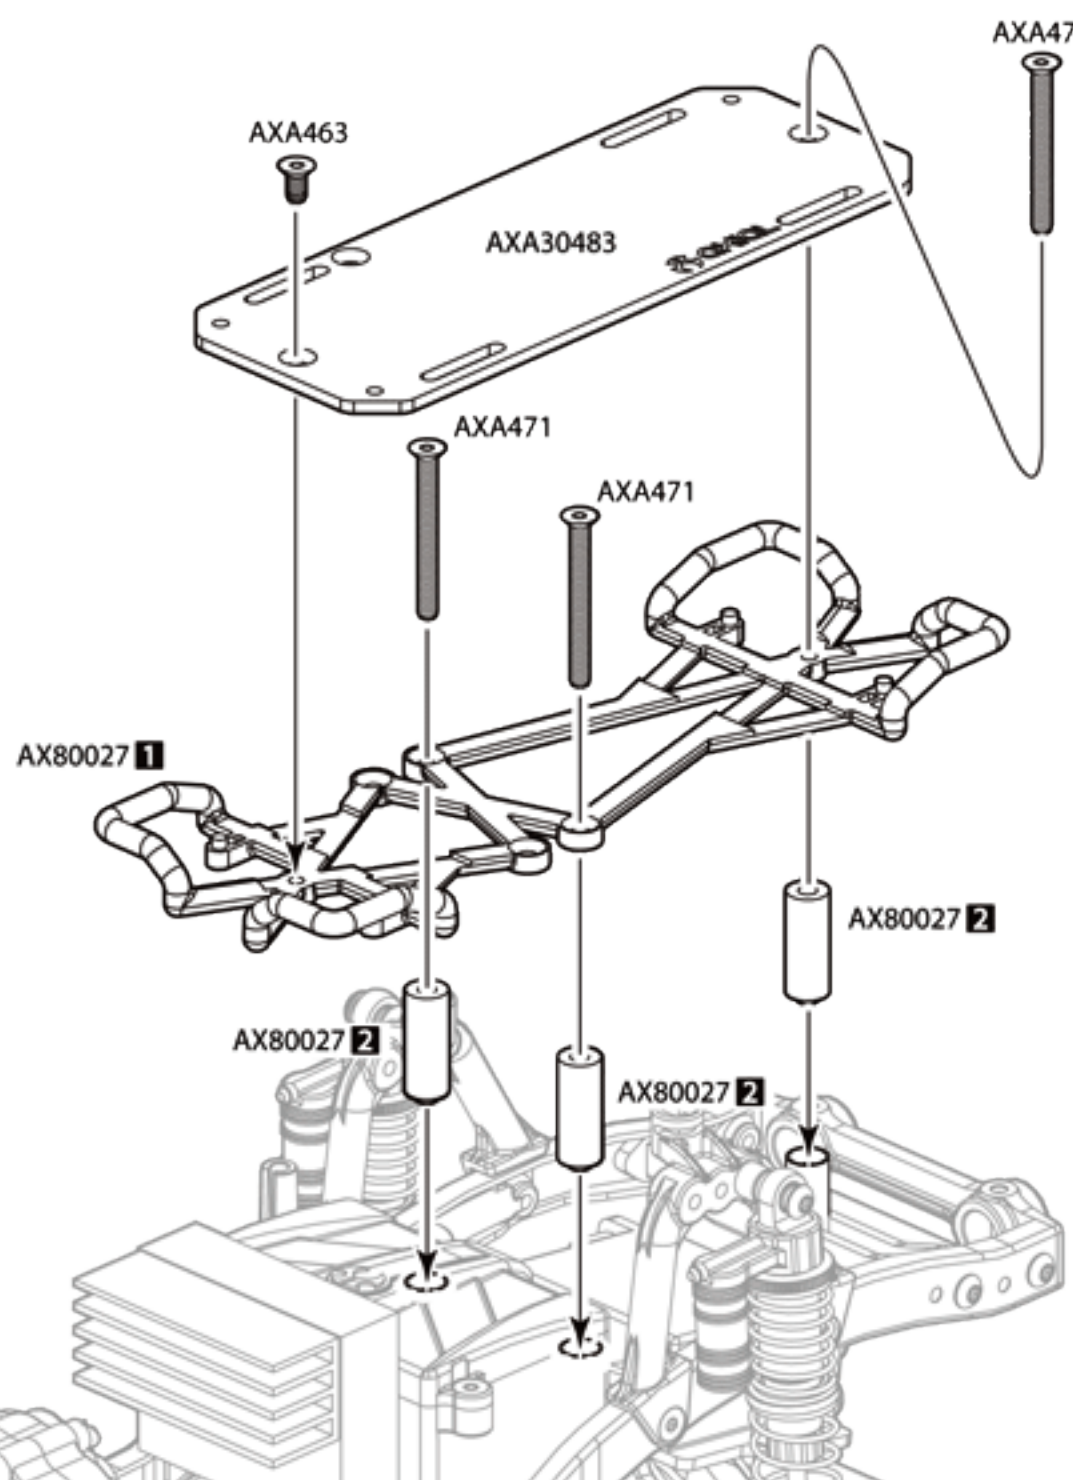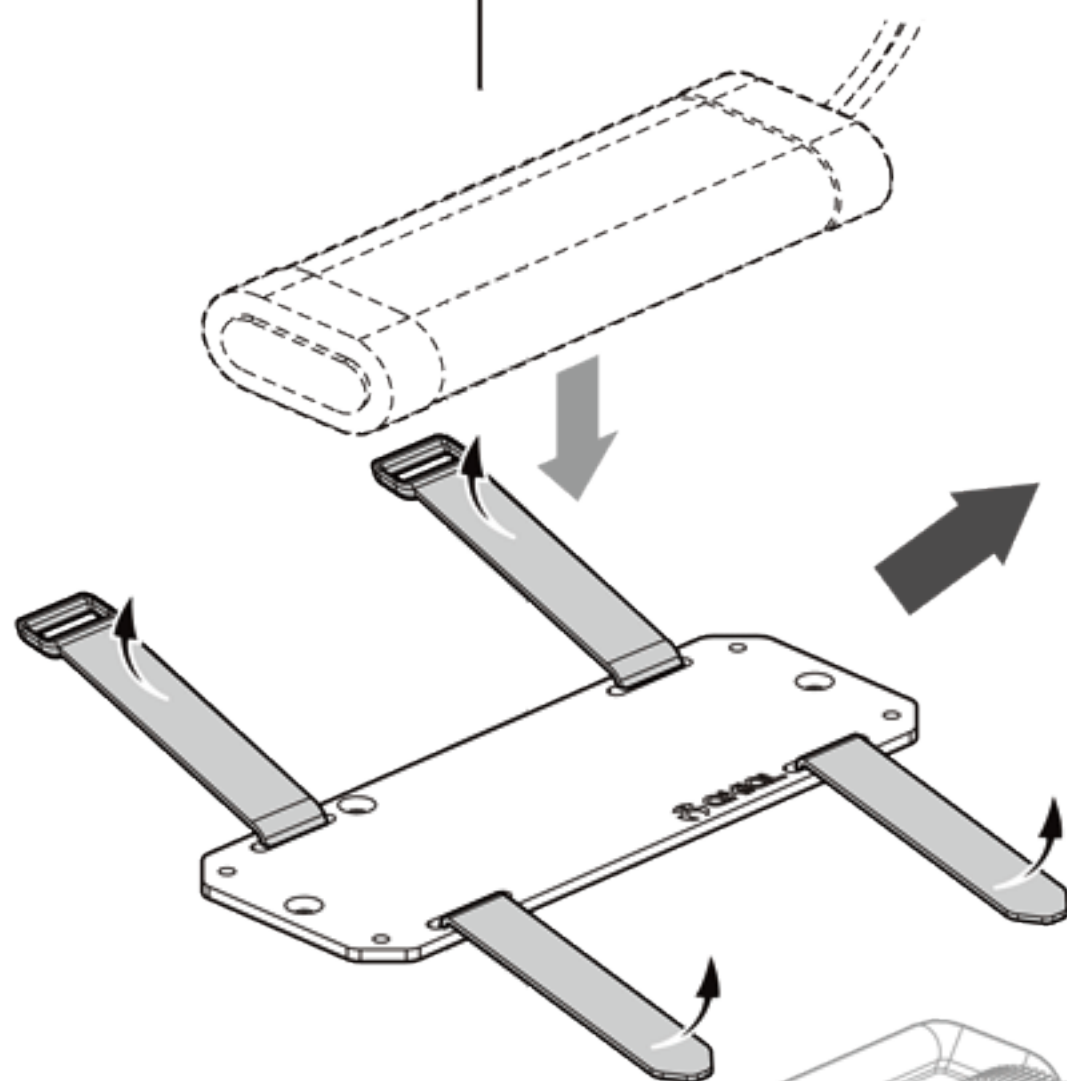

Optional LED Light Holder Set




AXA434
M3x8mm Tapping Button Head



AXA013
M2x6mm

40

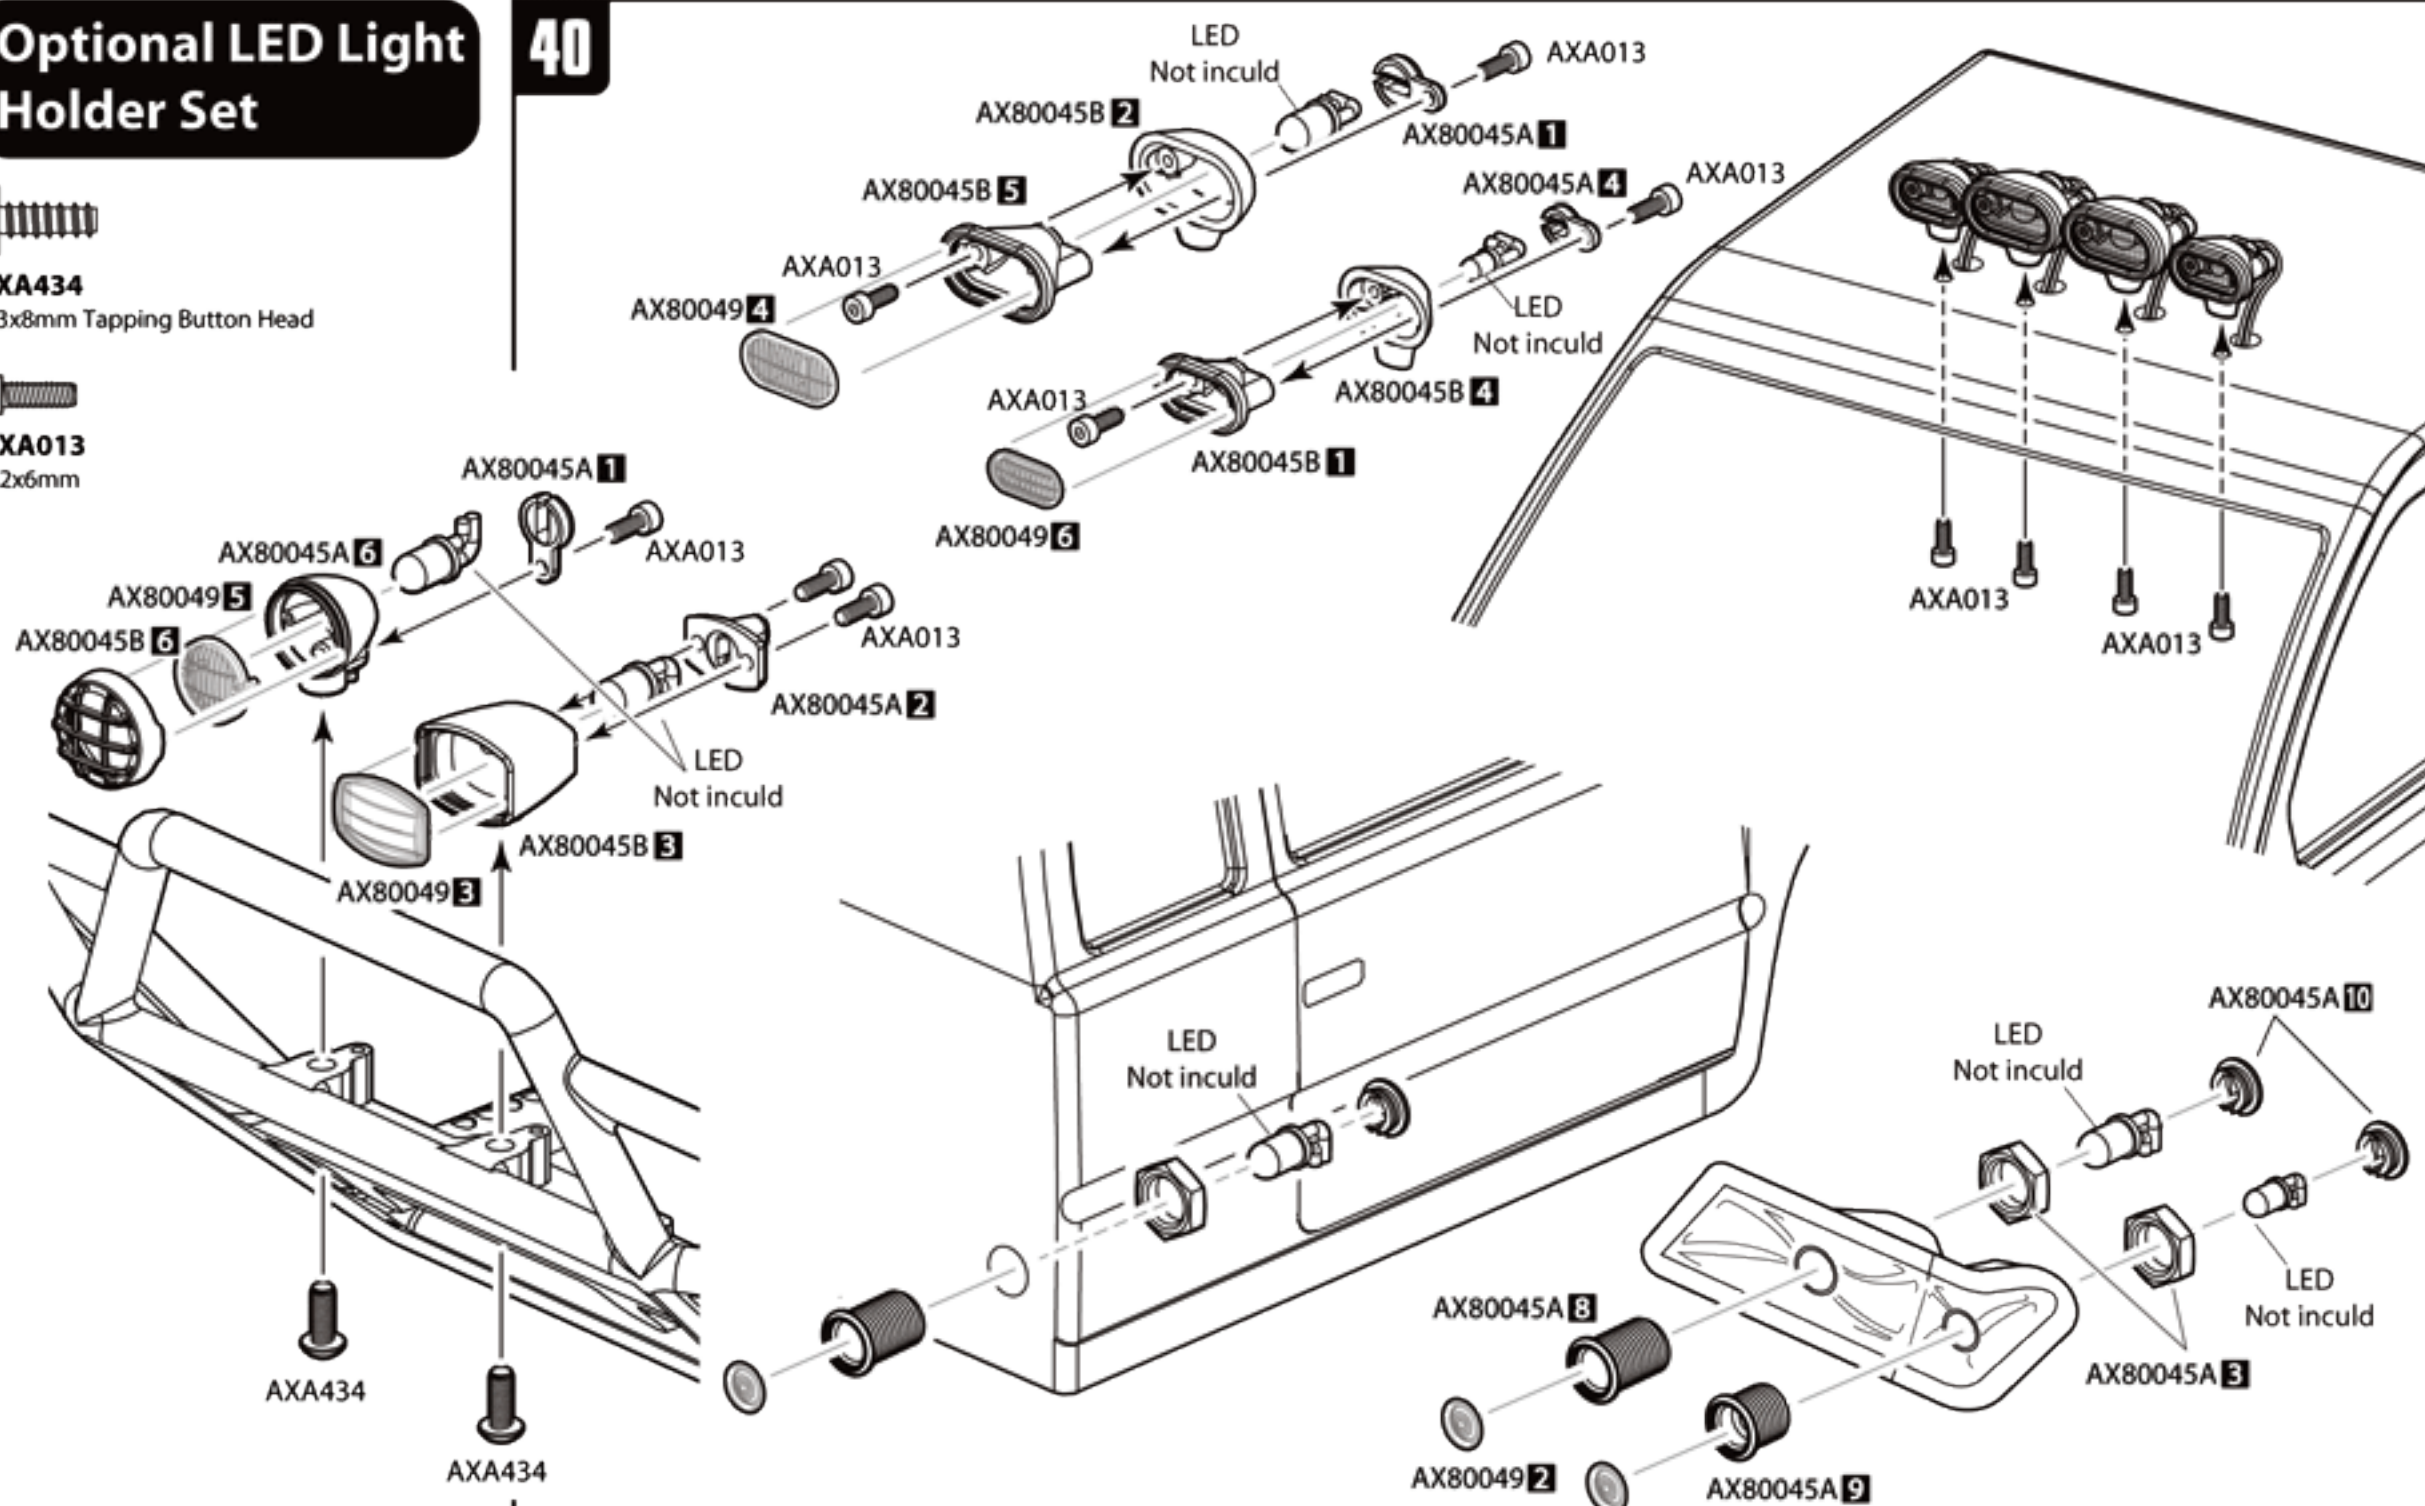




AXA435
M3x10mm Tapping Button Head **x2**




AXA013 **x2**
M2x6mm

41

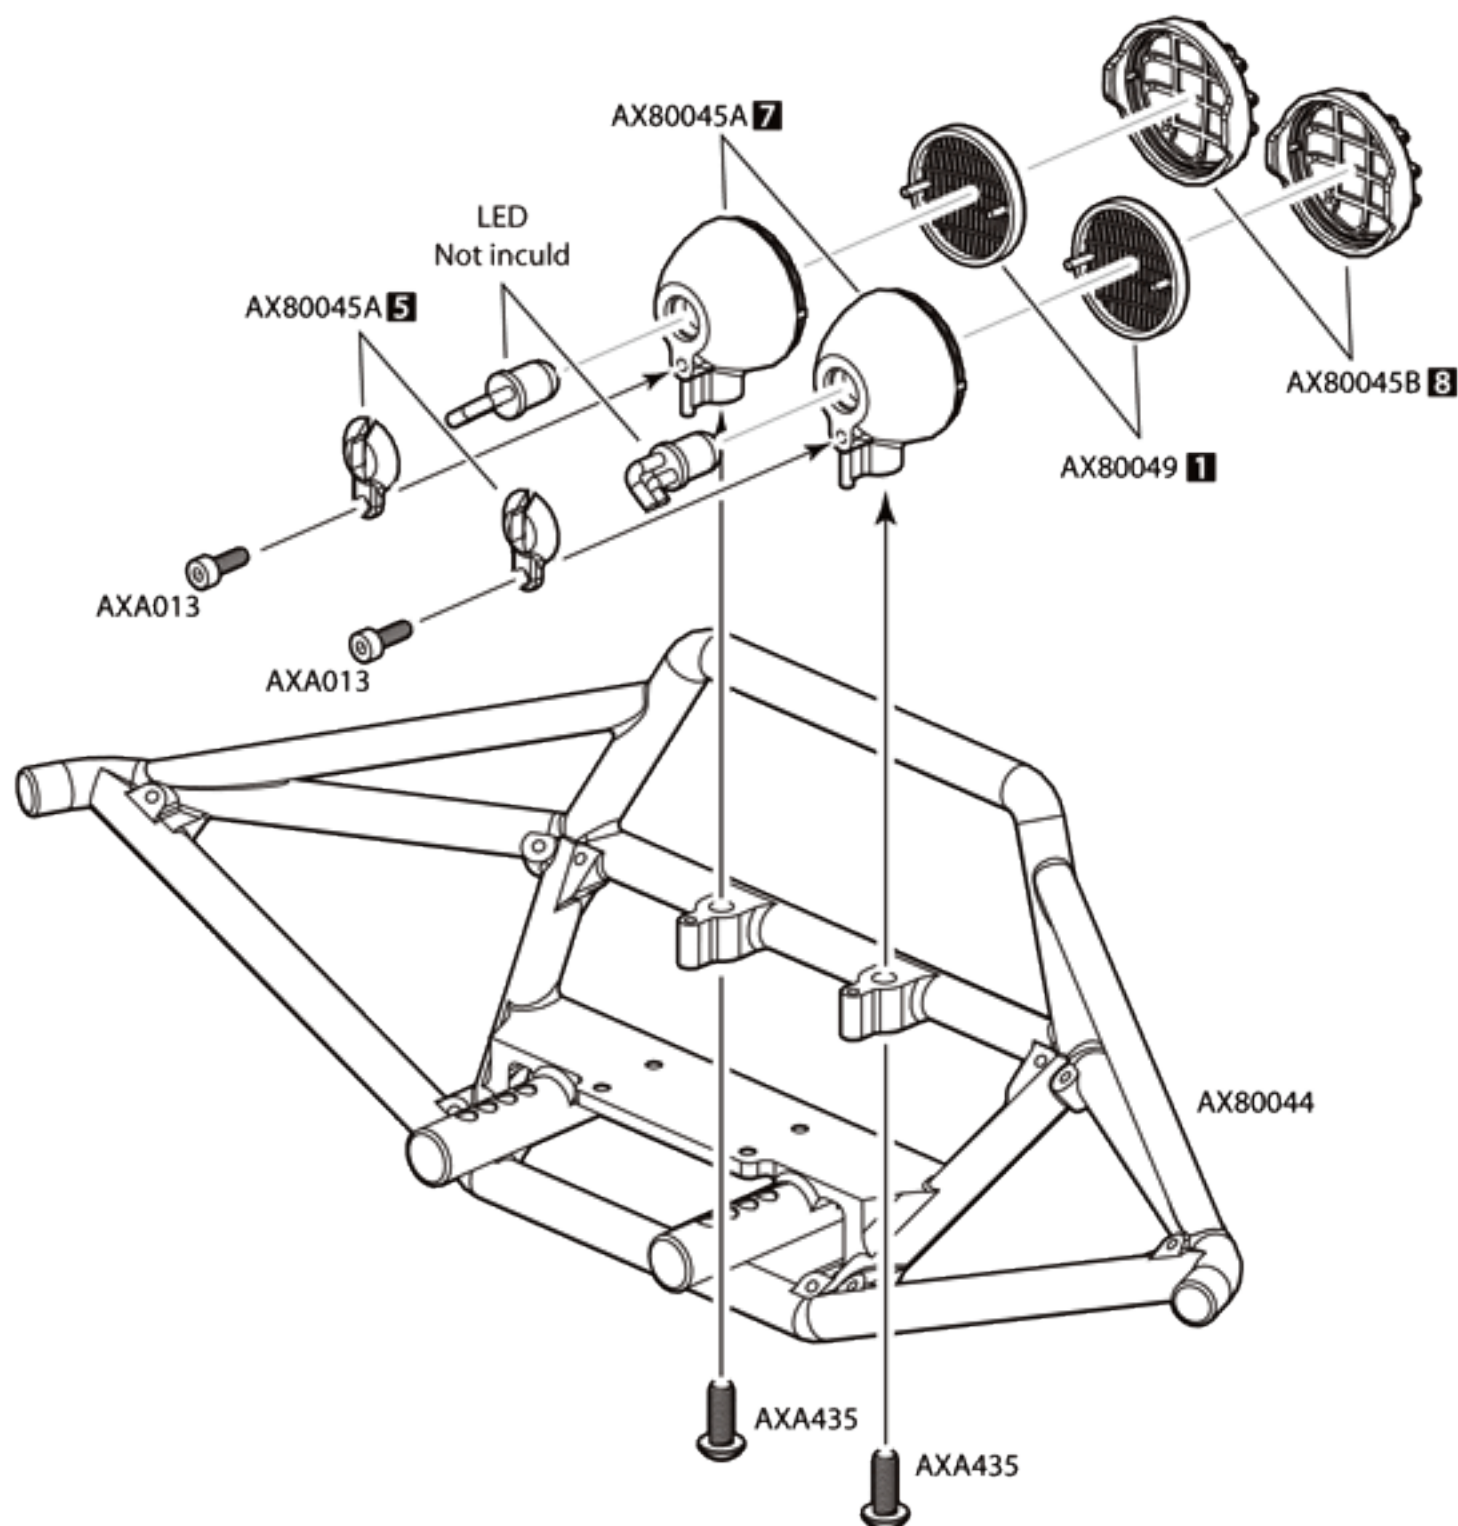

AXA013 **x10**
M2x6mm


42

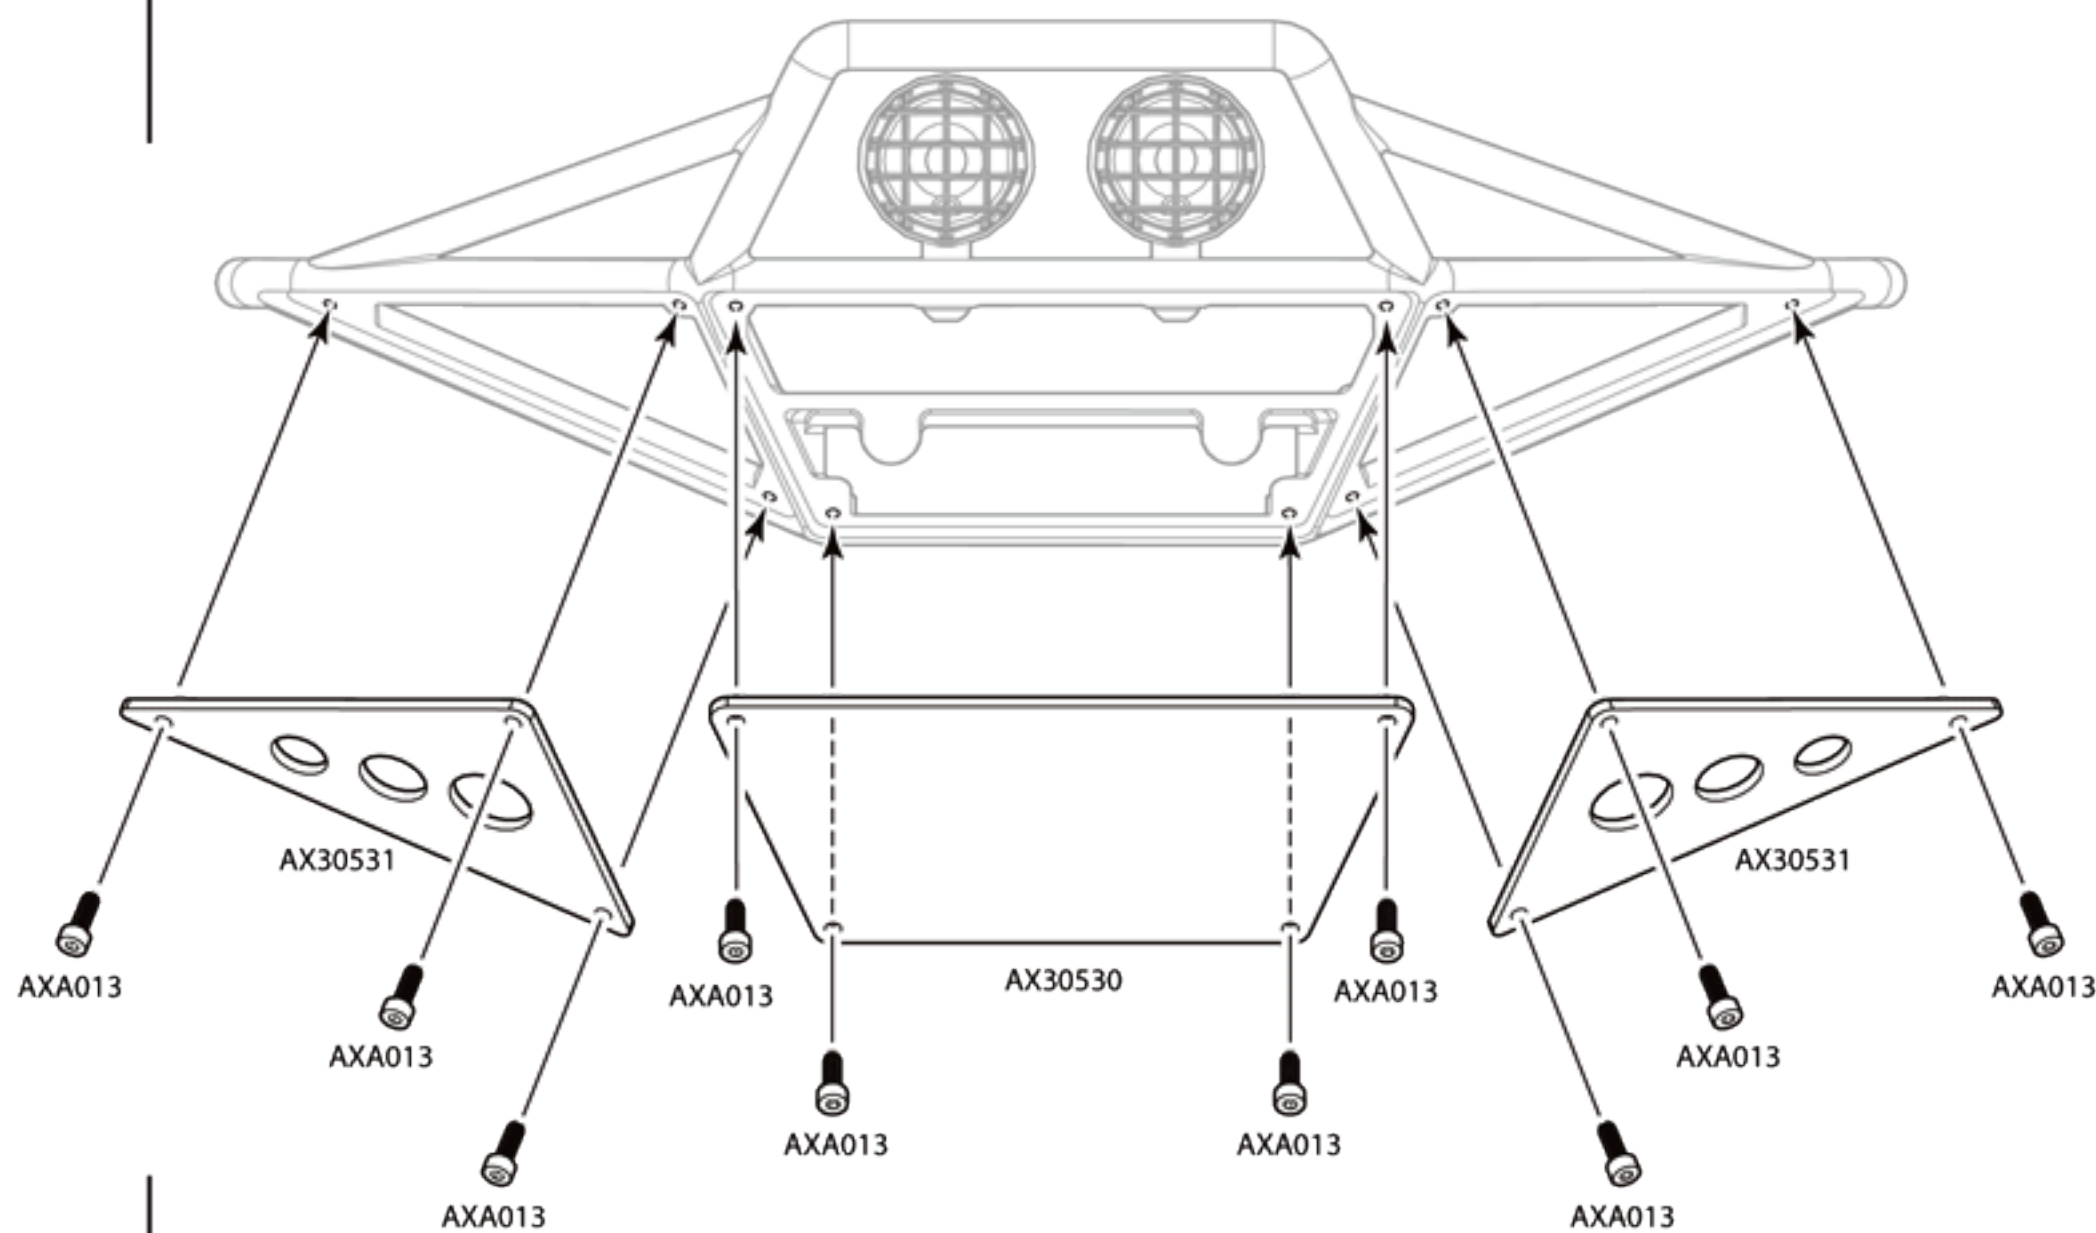

43

Window Mask


Mask

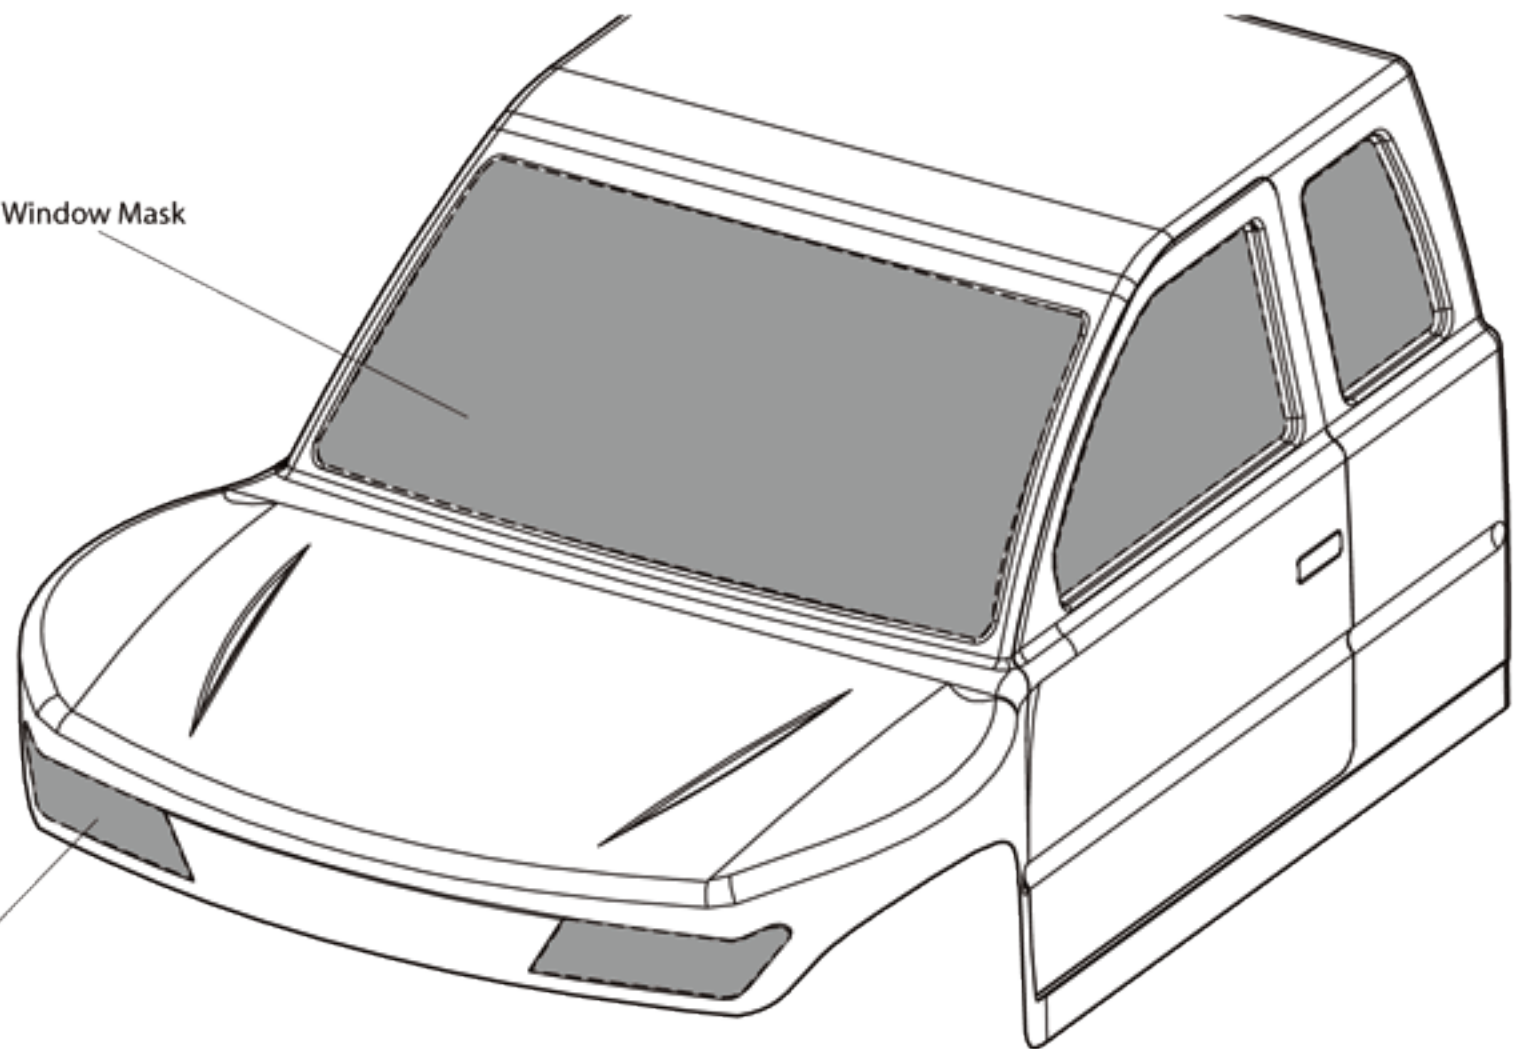

44

PAINT

PAINT

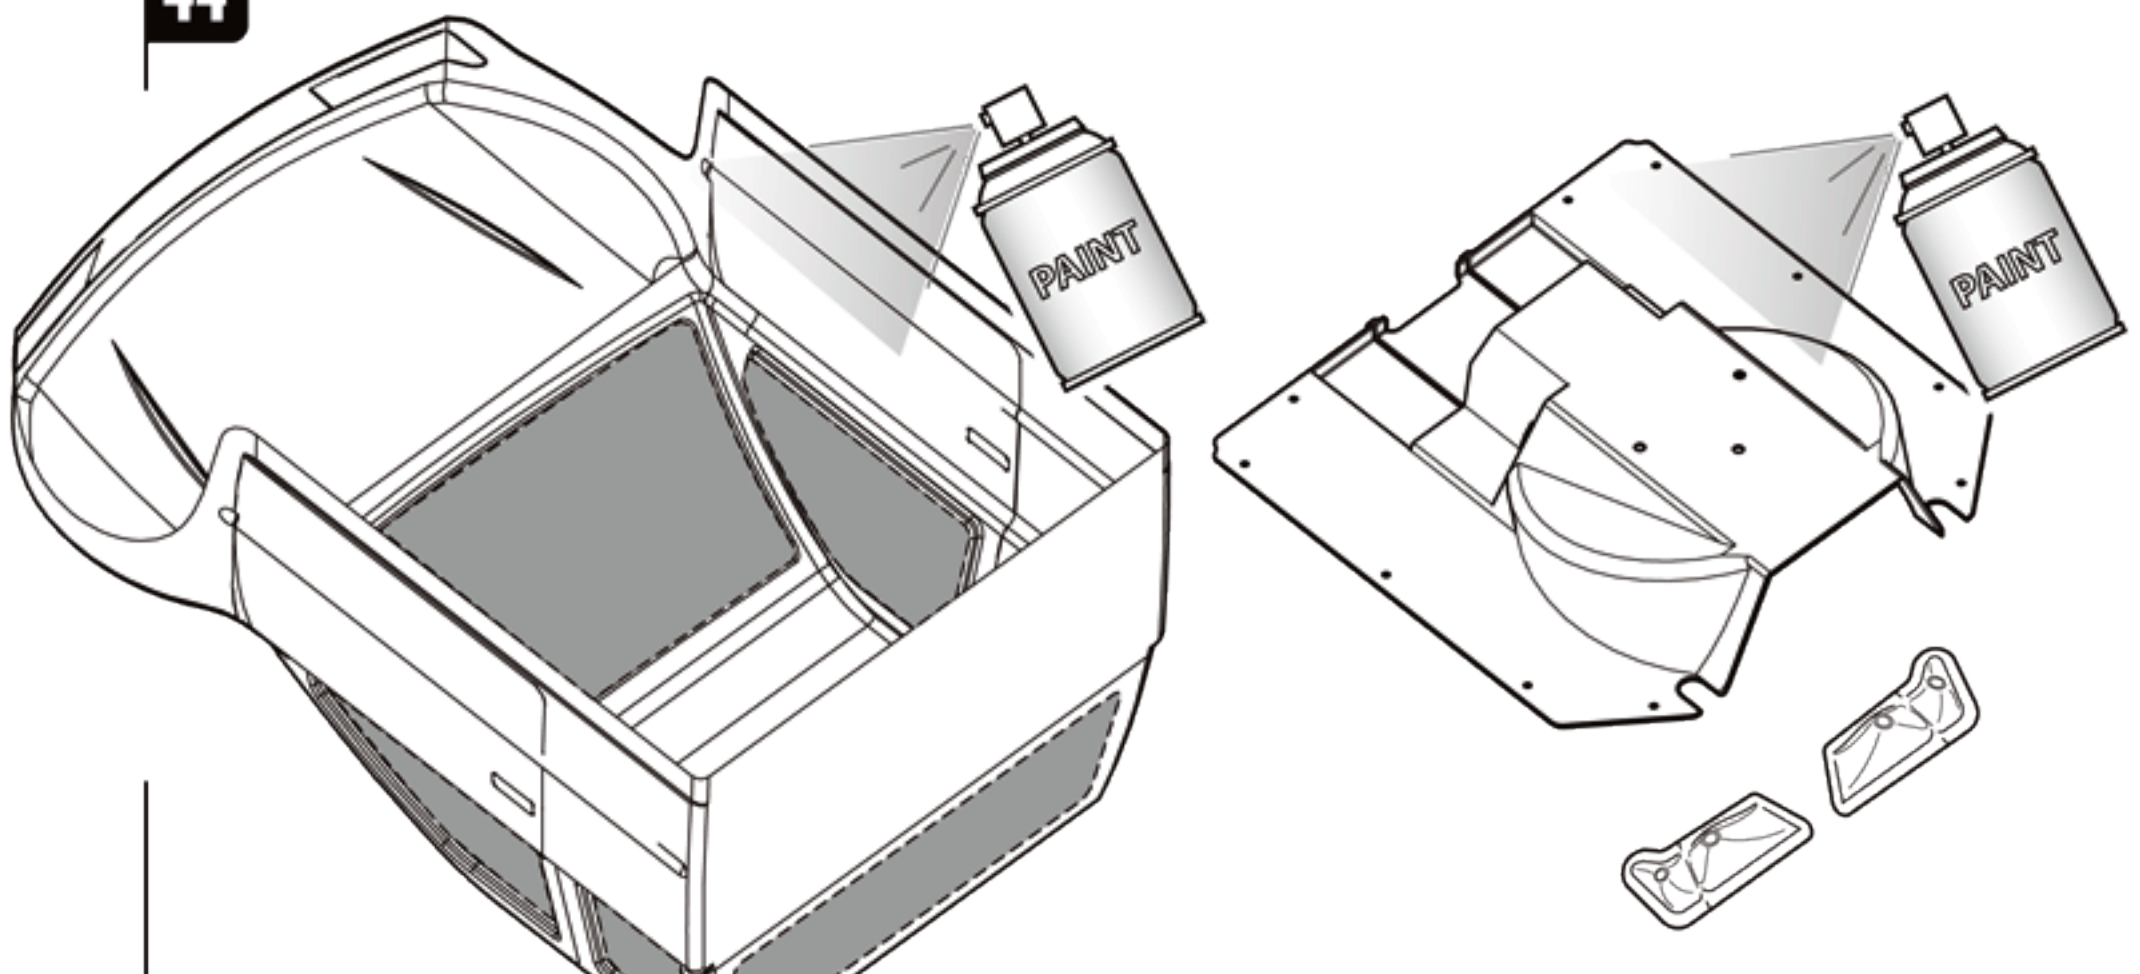


45

LED
*Not included

LED
*Not included


Double side tape
*Not included

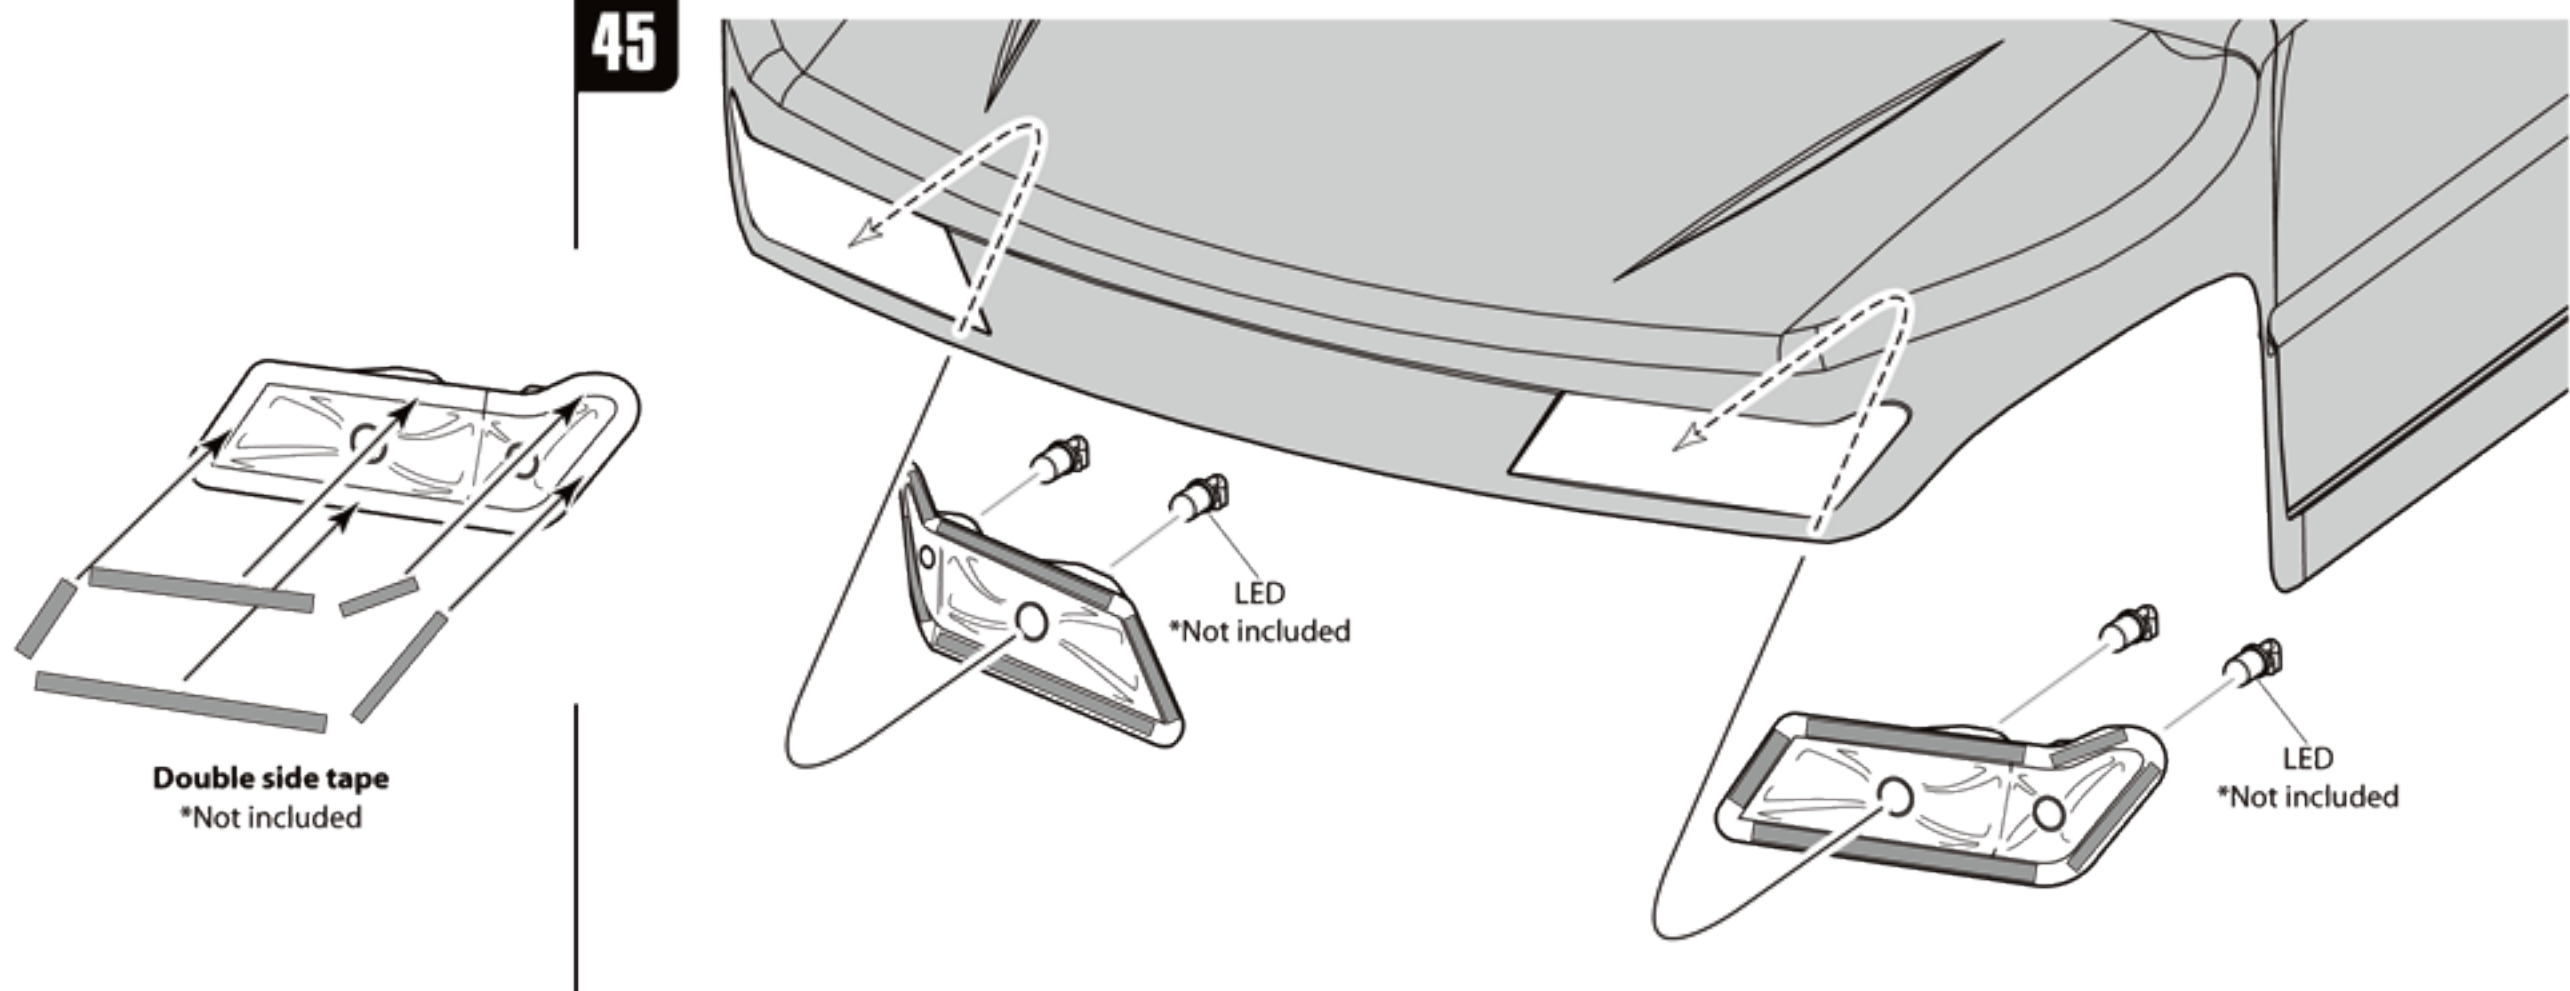



AXA434
M3x8mm Tapping Button Head **x4**

46

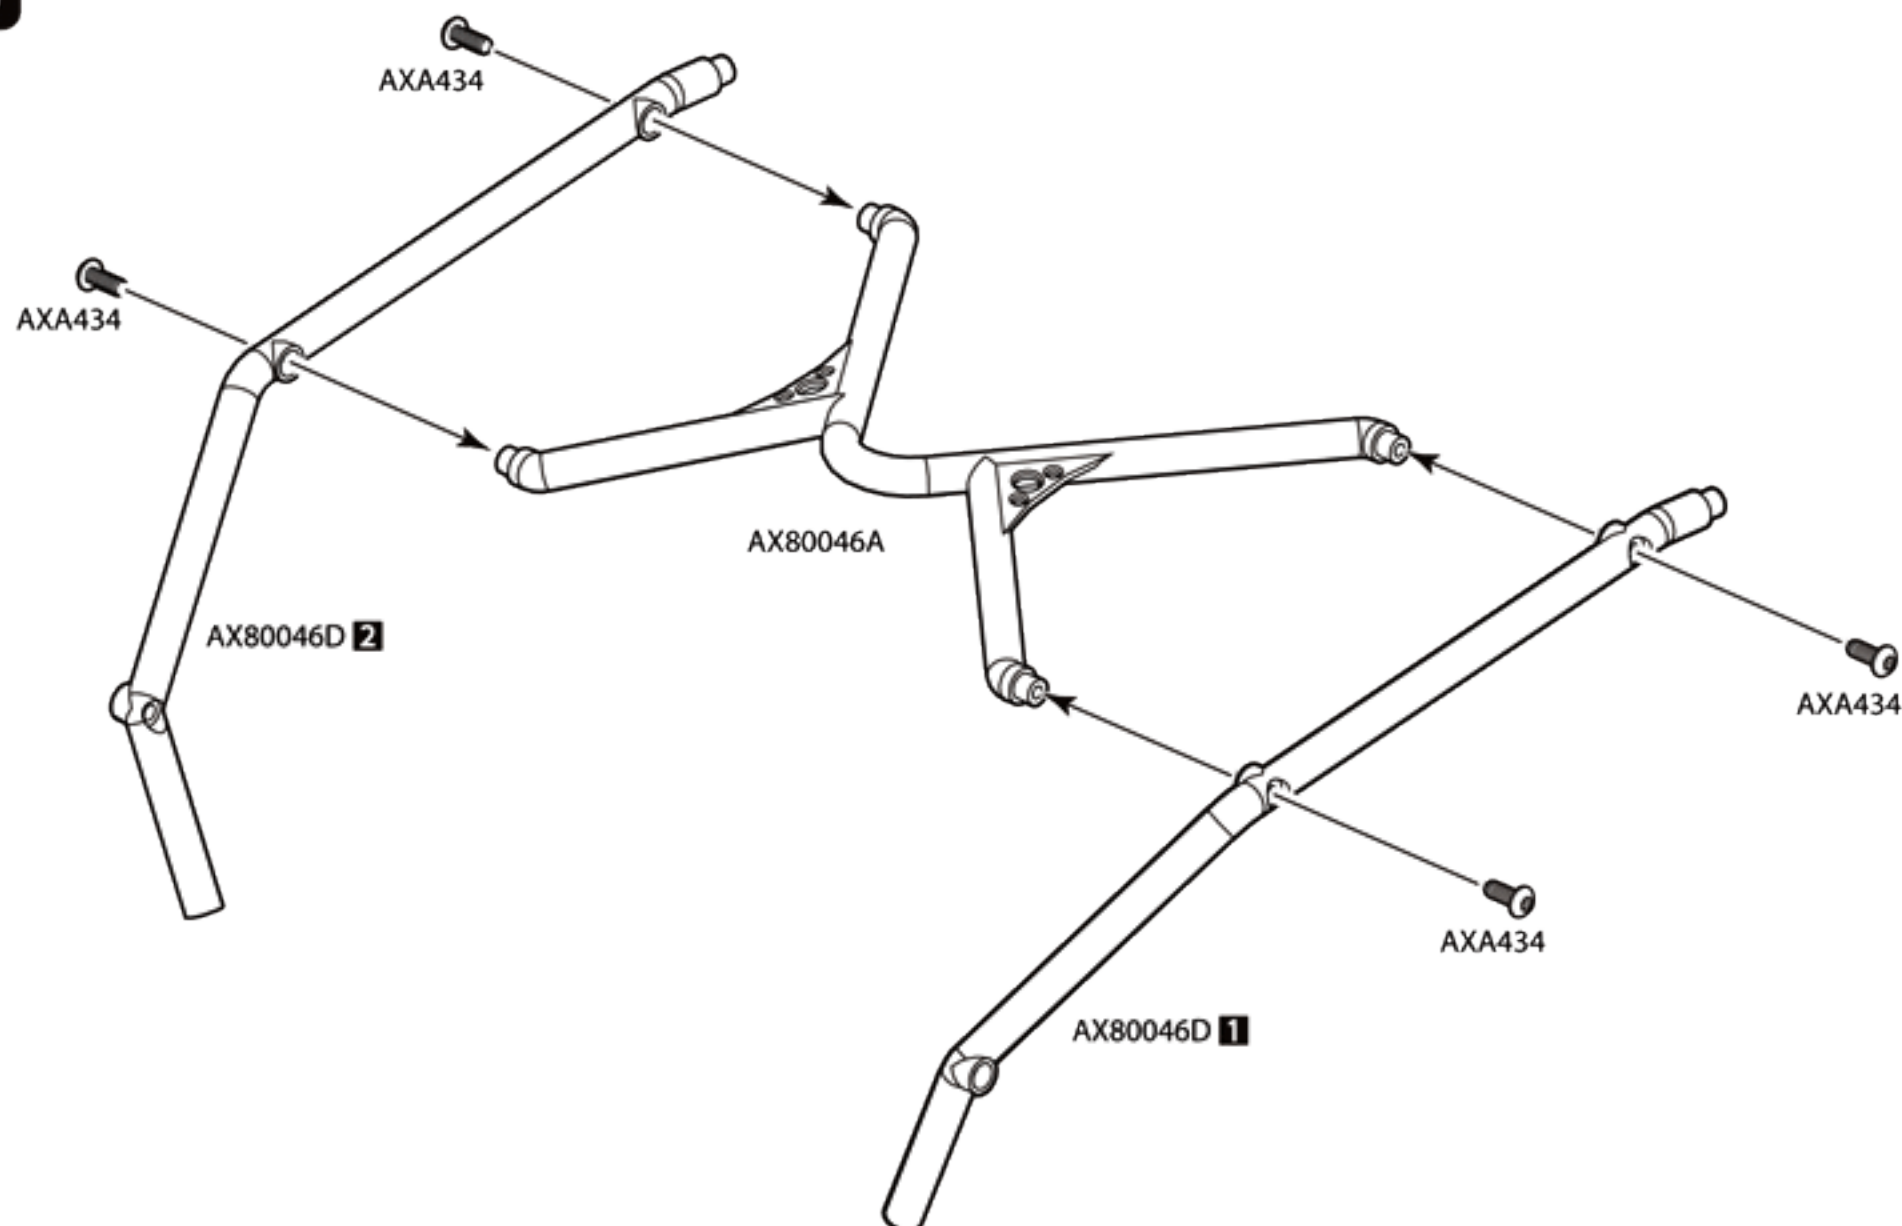

AXA434
M3x8mm Tapping Button Head **x2**




AXA435
M3x10mm Tapping Button Head **x4**



AXA1260
M2.5x12mm Tapping Flat Head **x2**


47

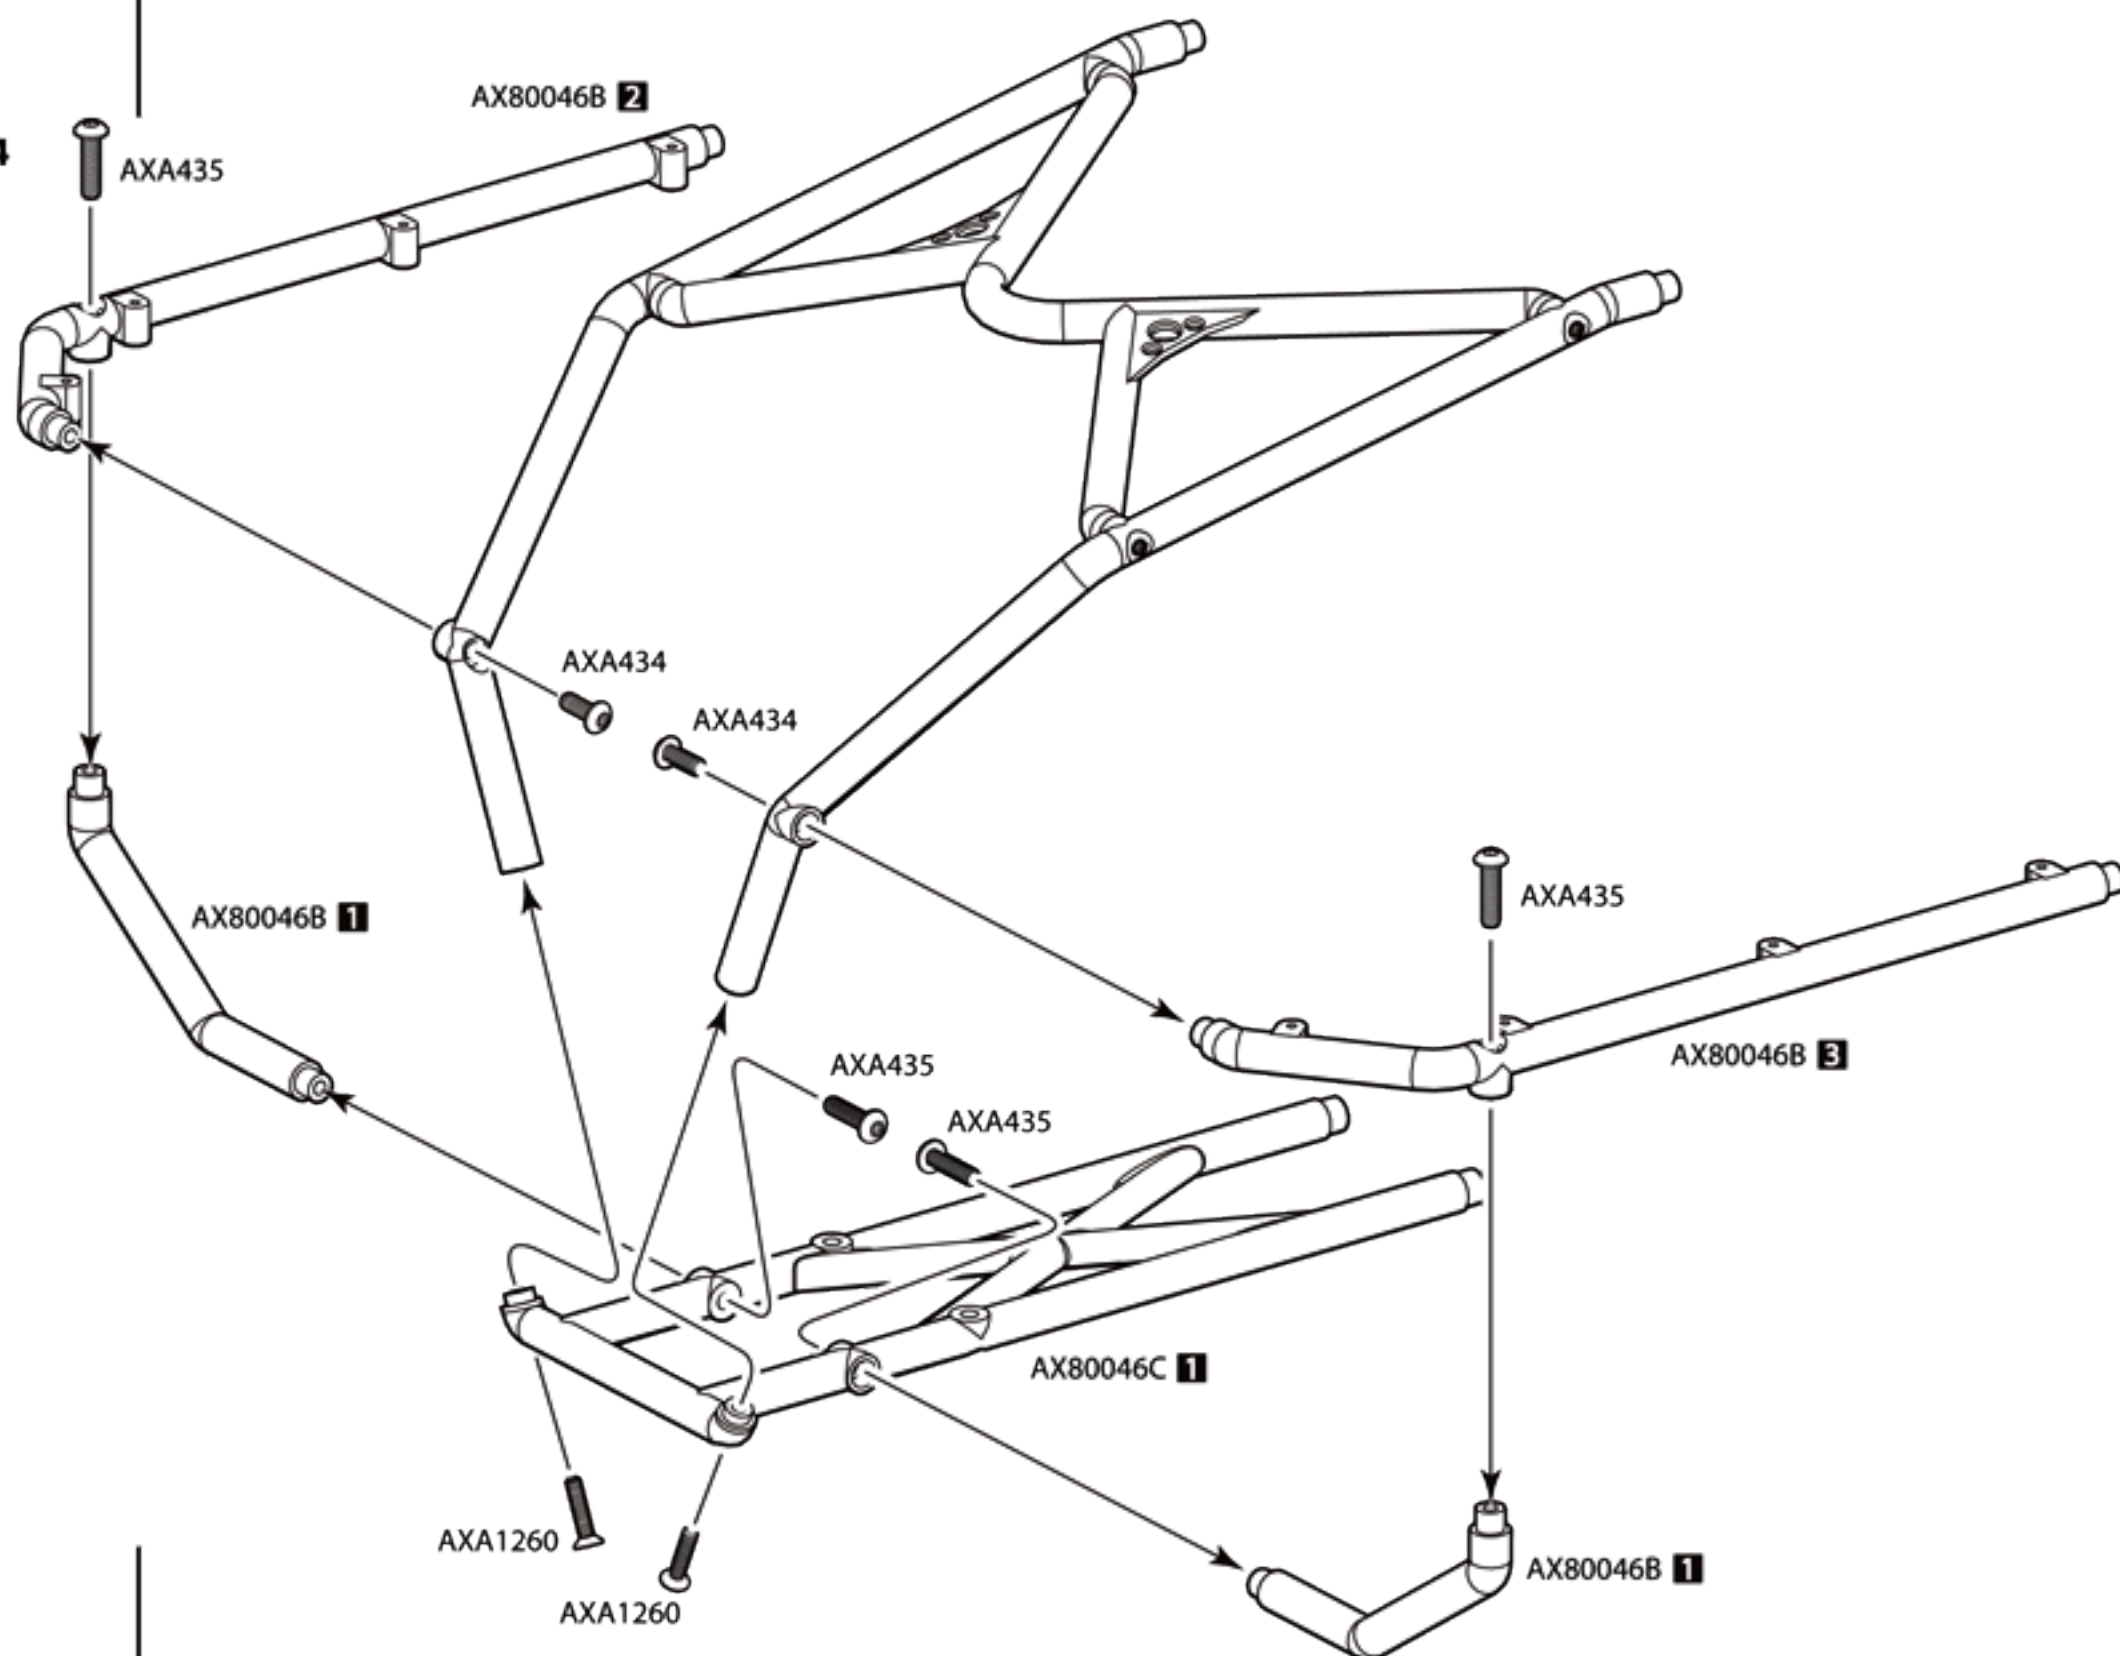




AXA013 x8
M2x6mm

48

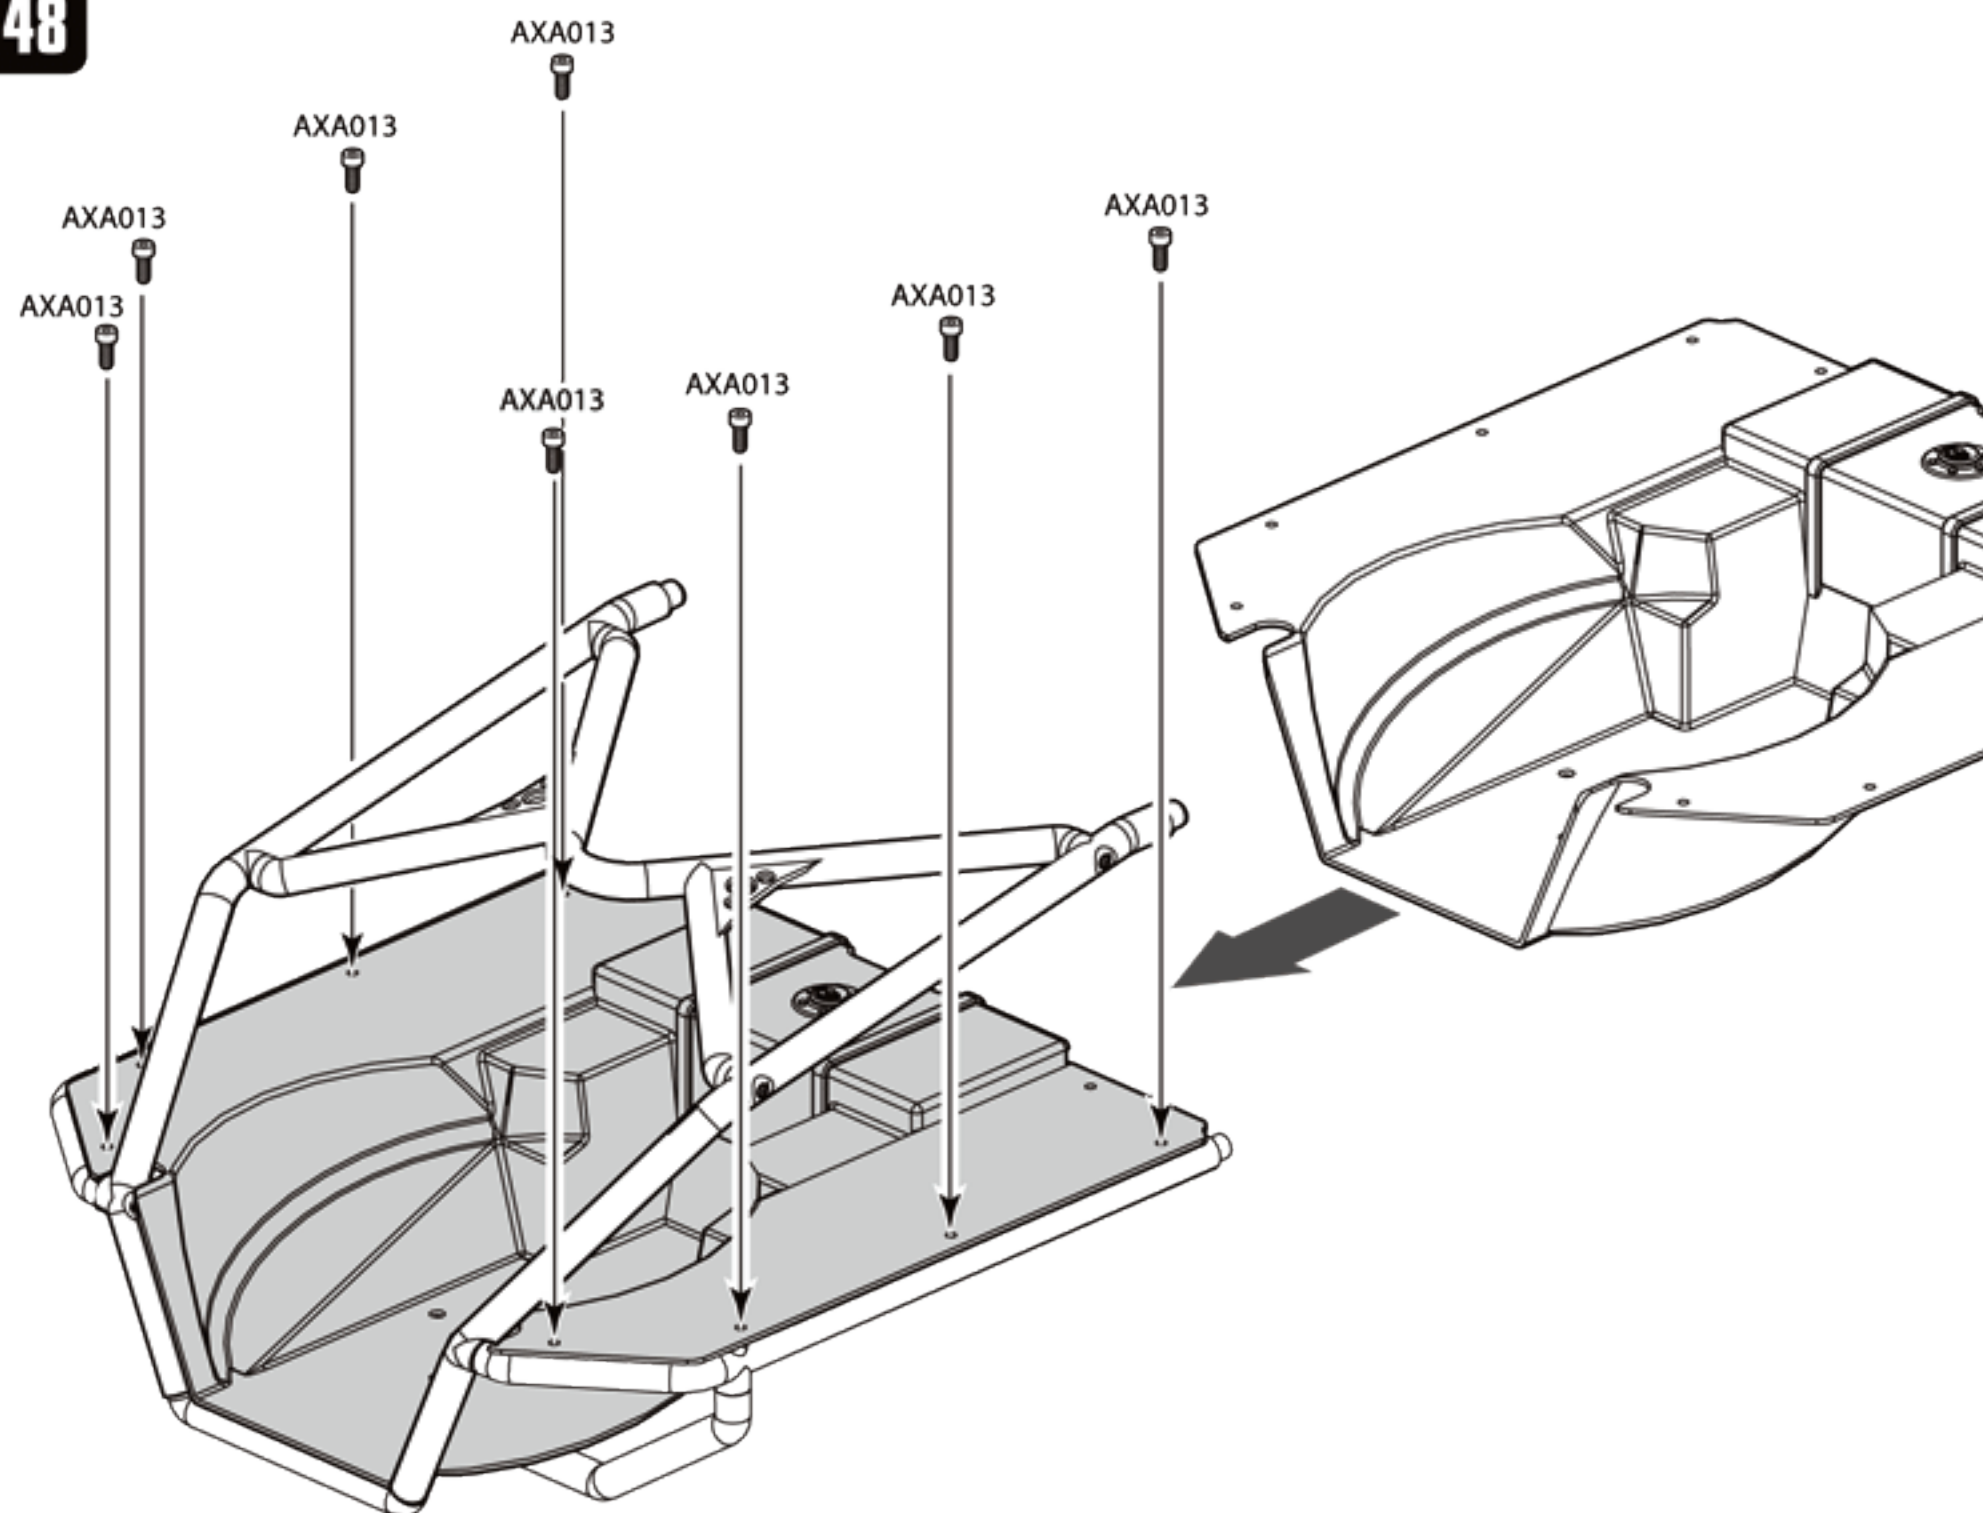

AXA013 x2
M2x6mm

49

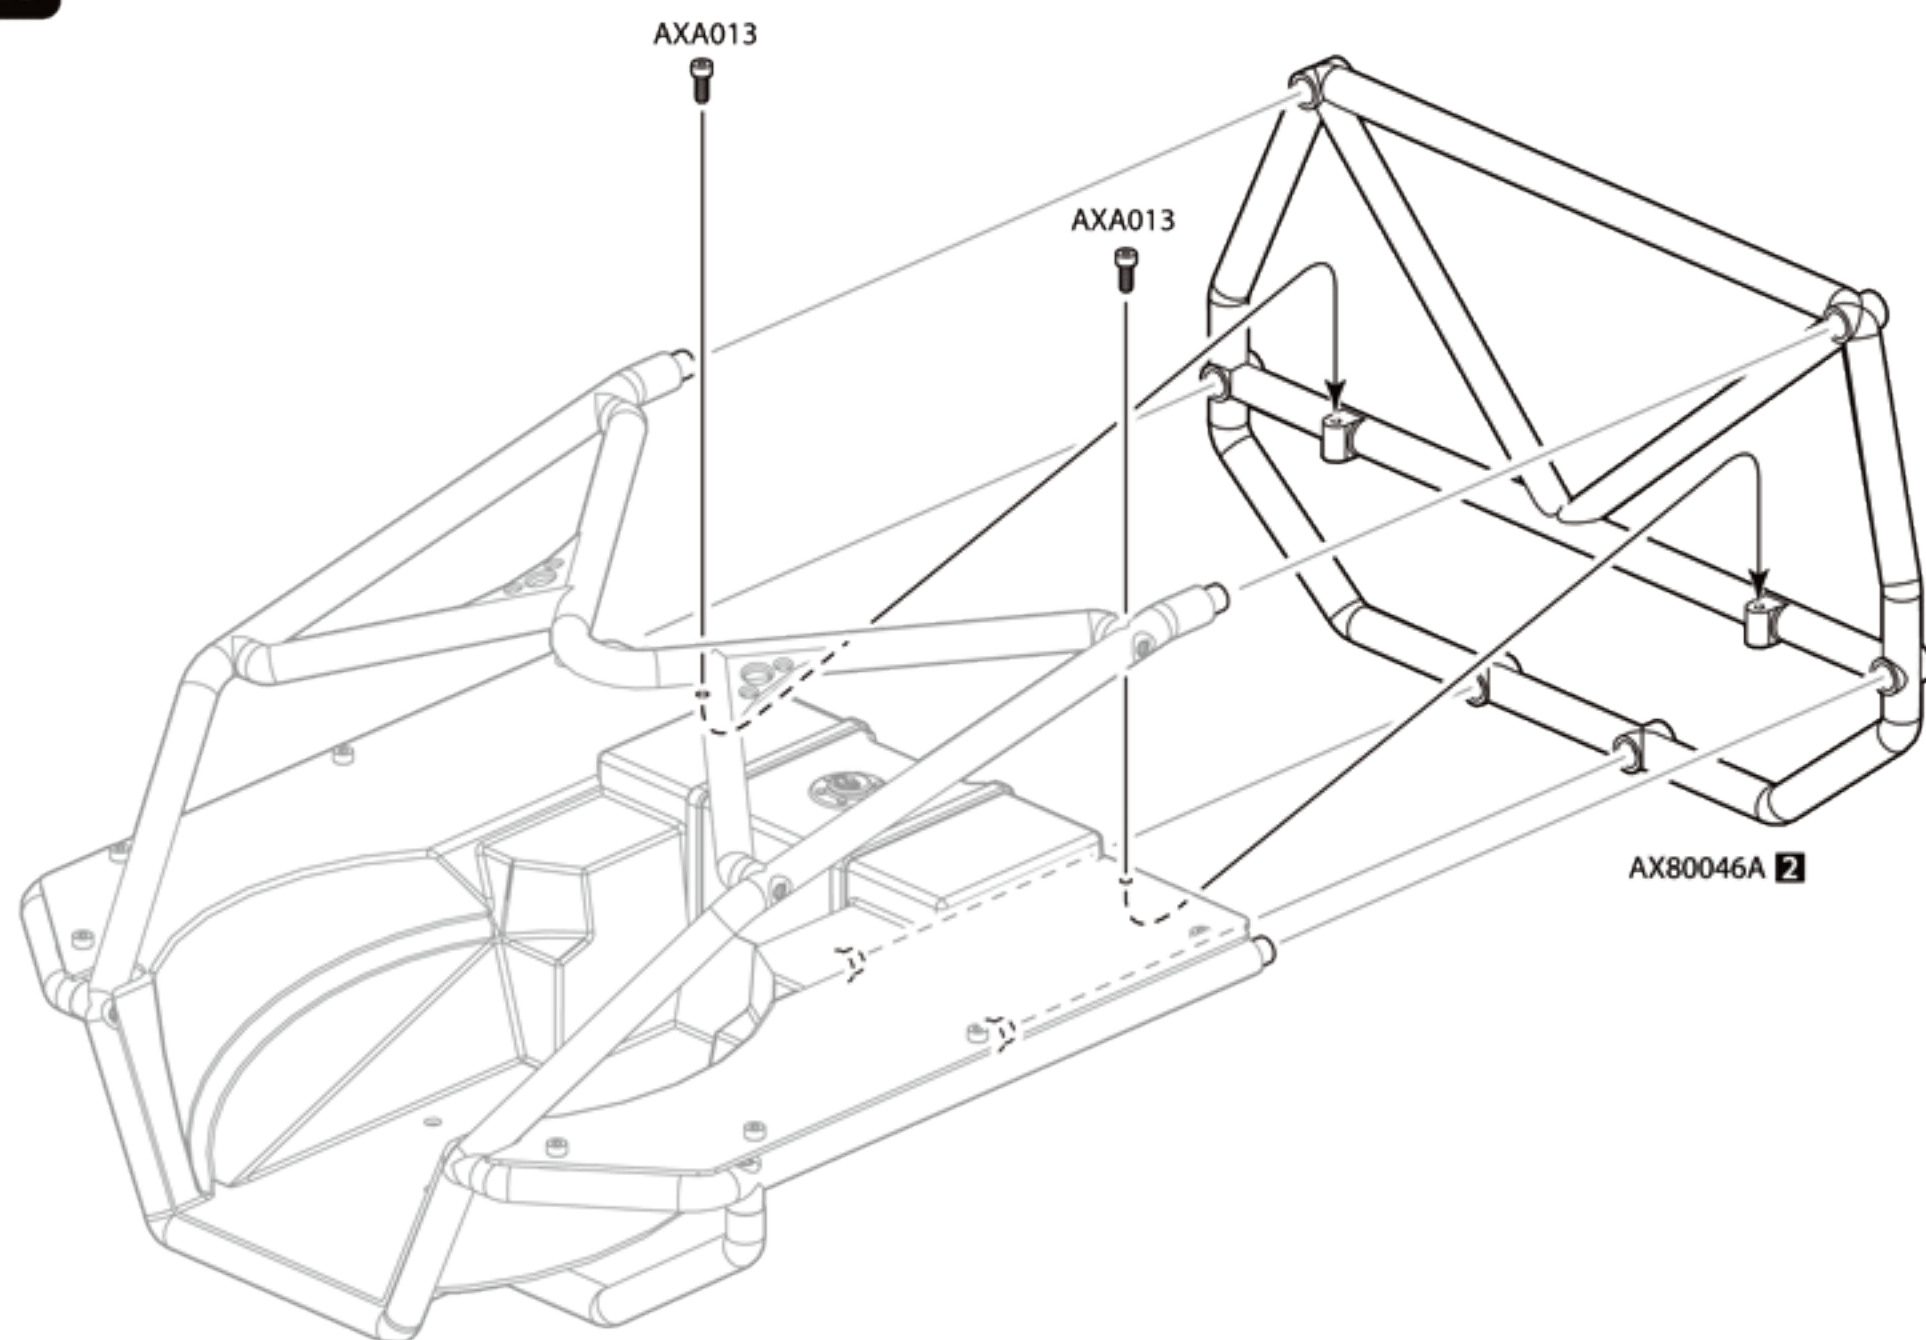




AXA433
M3x6mm Tapping Button Head **x1**



AXA435
M3x10mm Tapping Button Head **x2**




AXA089
M3x25mm Cap Head **x1**

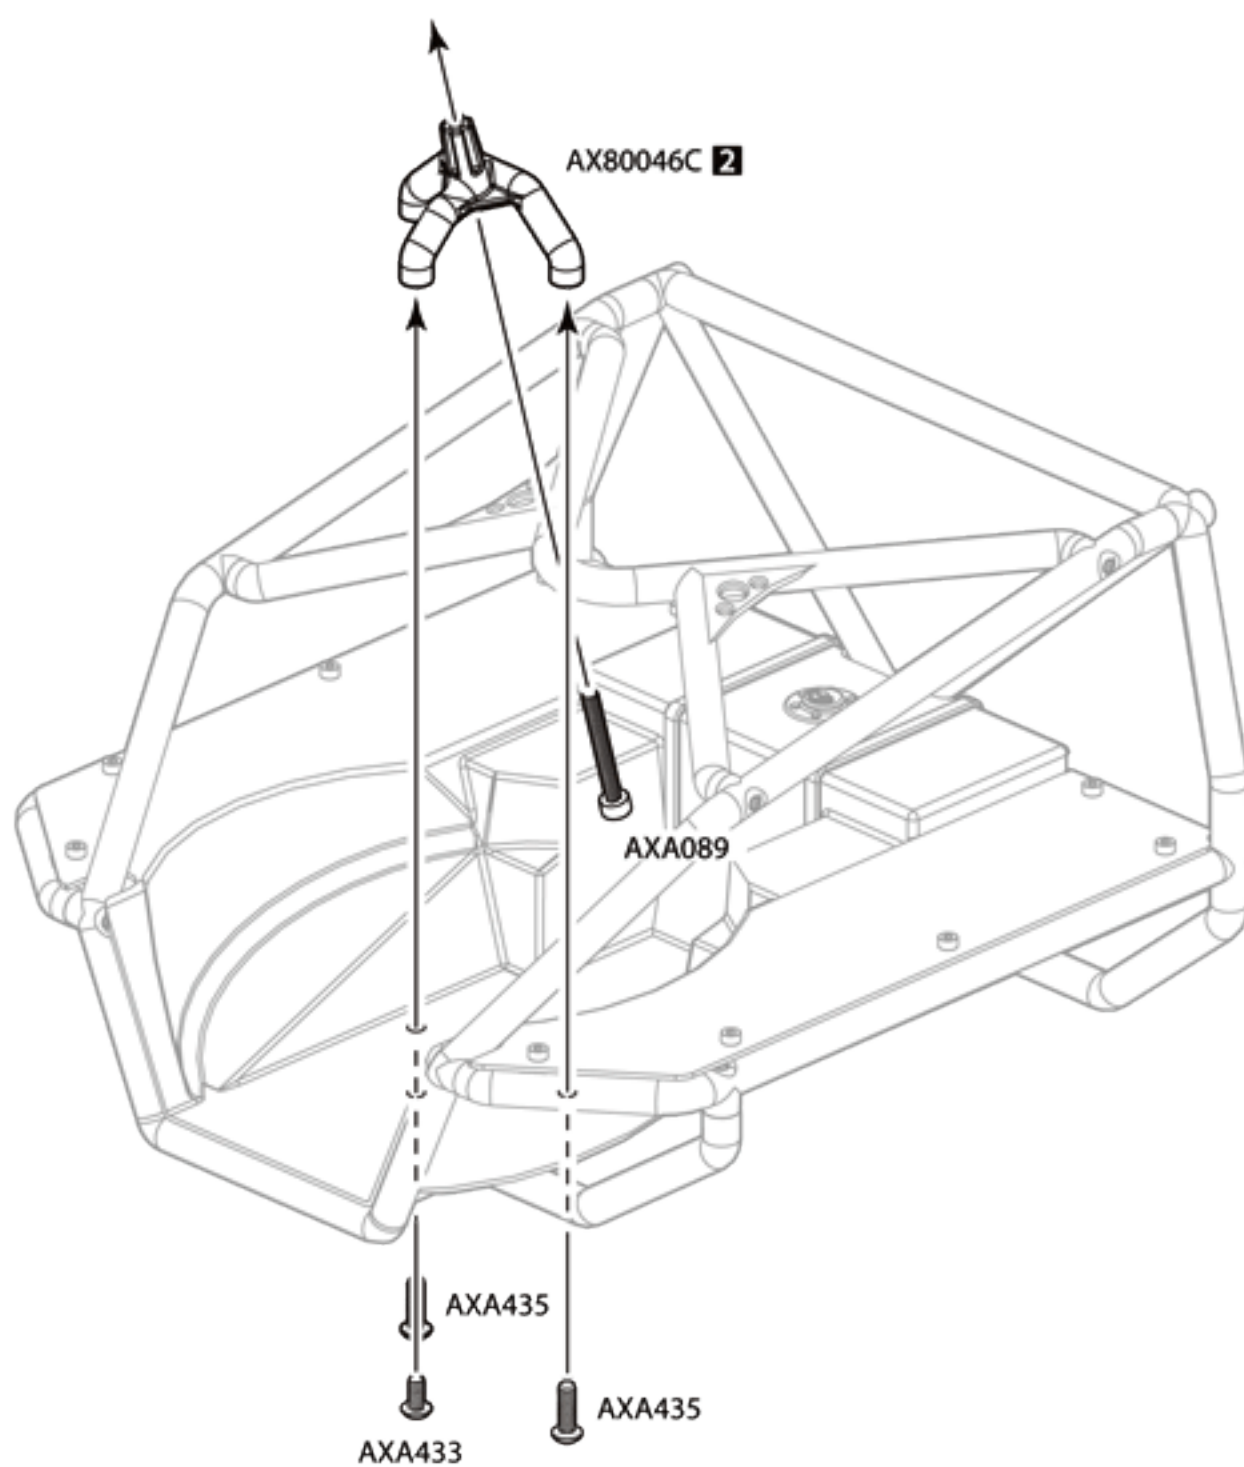

AXA468
M3x18mm Tapping Flat Head **x6**




AXA1179
O-Ring 2.5x1.5mm **x2**

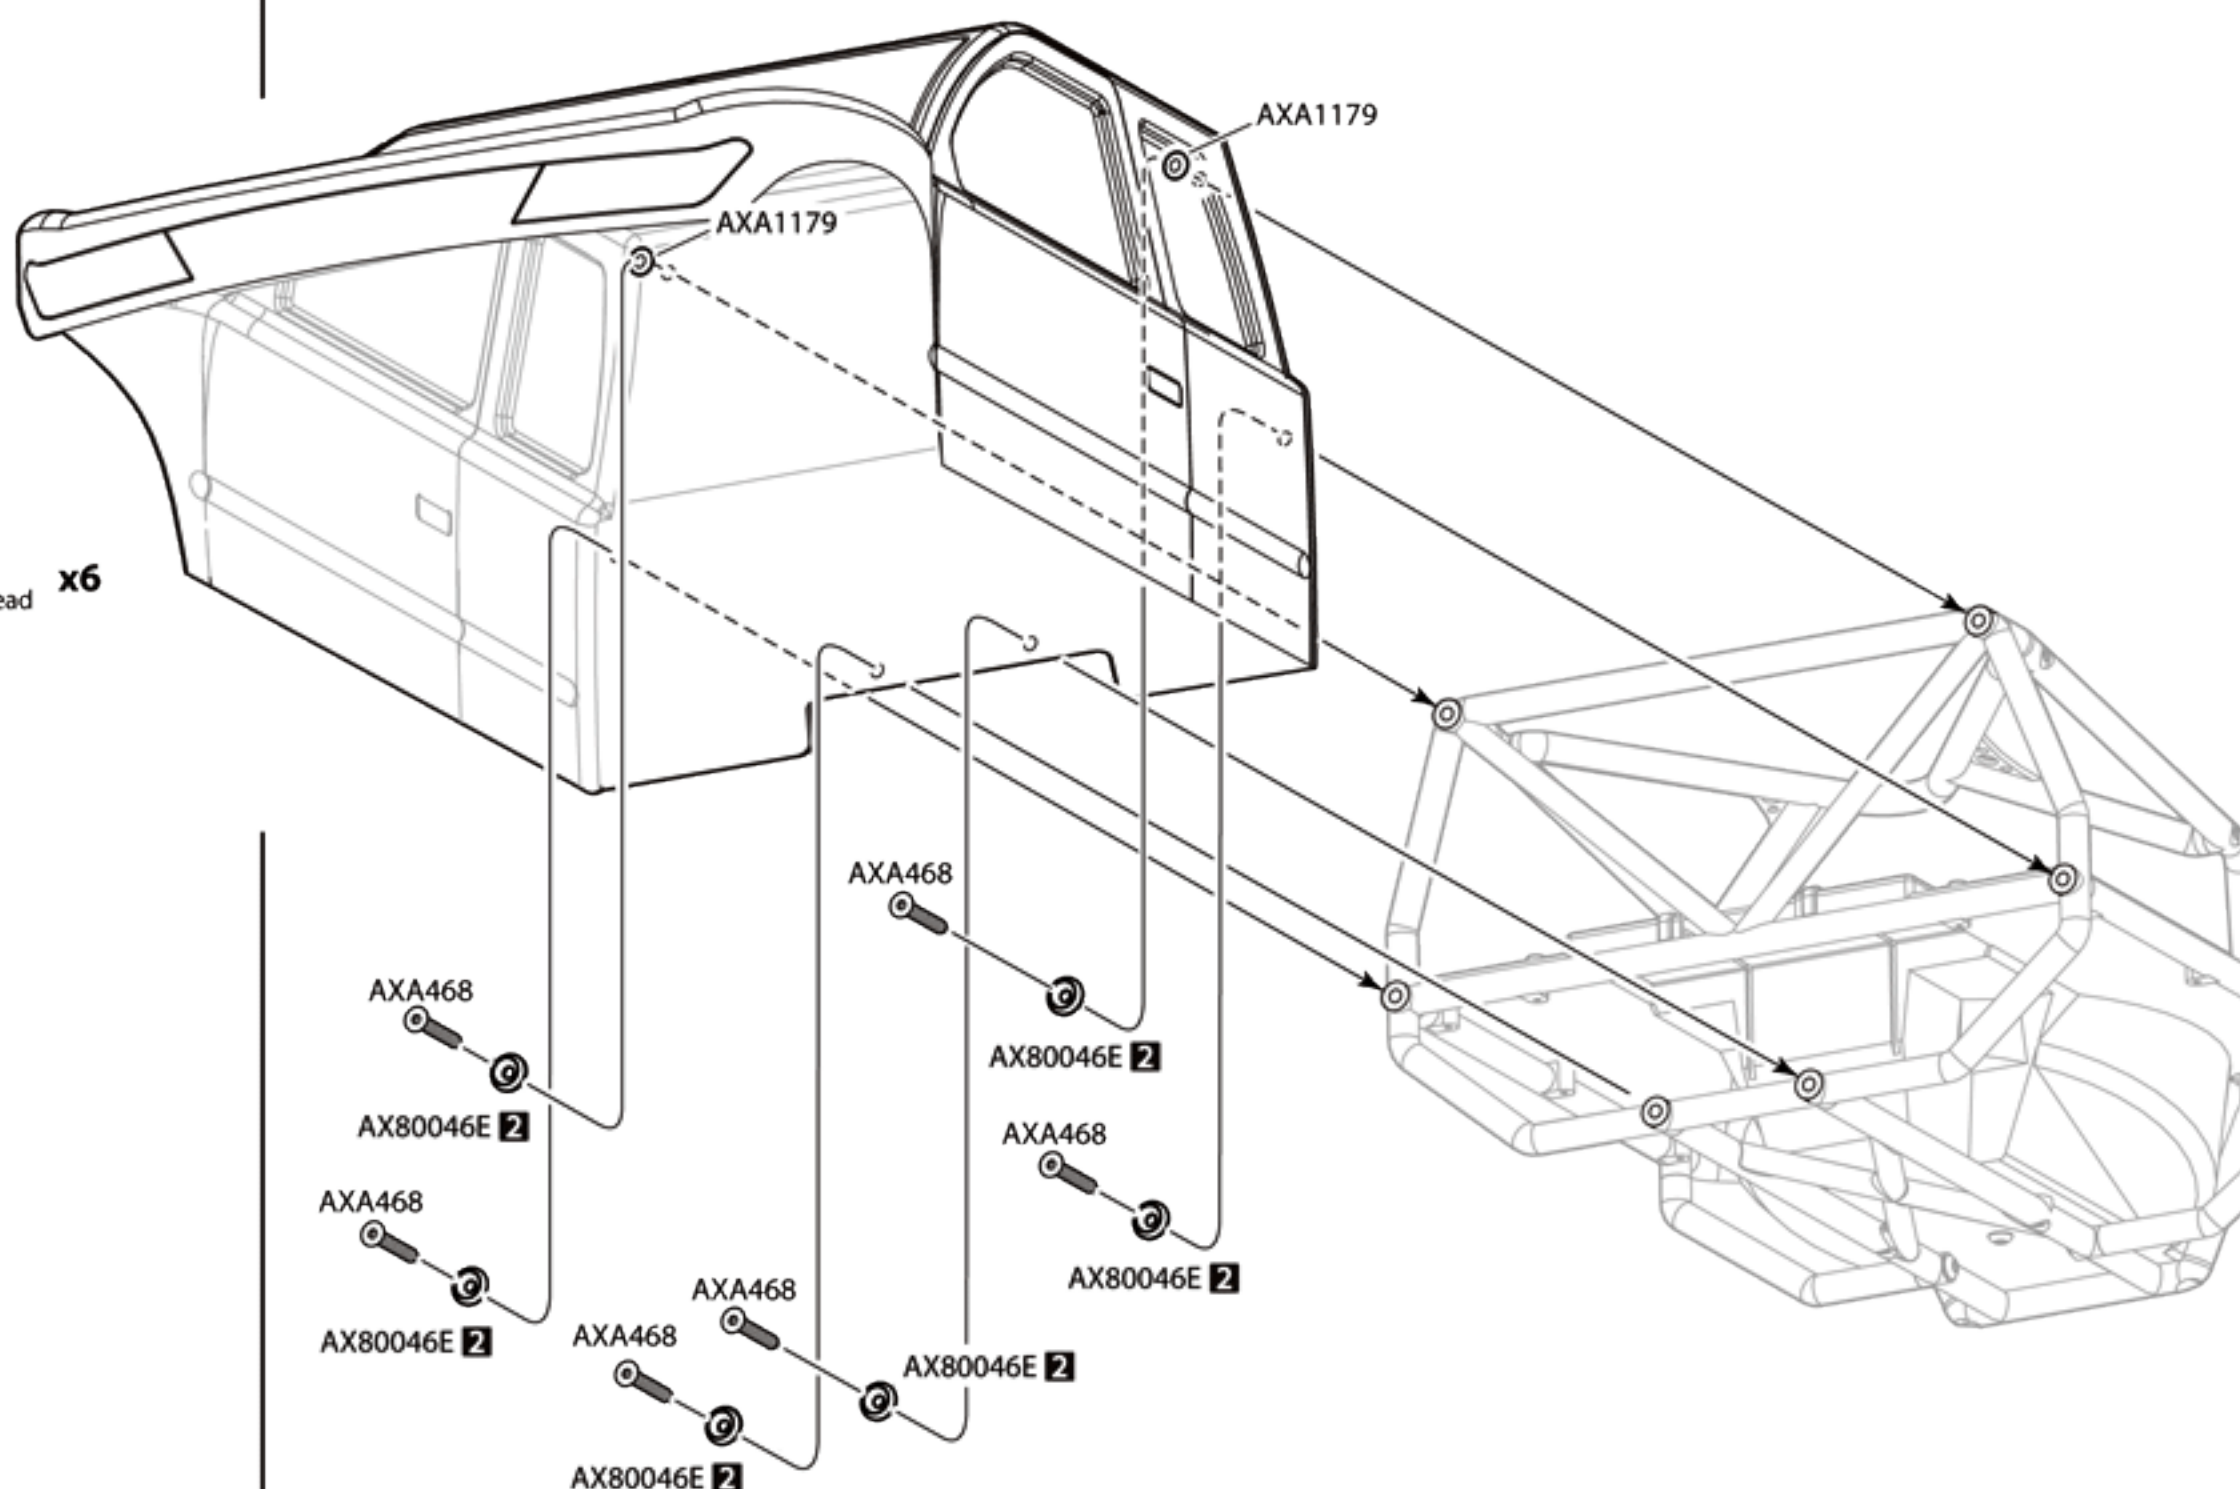




AXA176
M3x2.5x13mm Screw Shaft **x2**

52

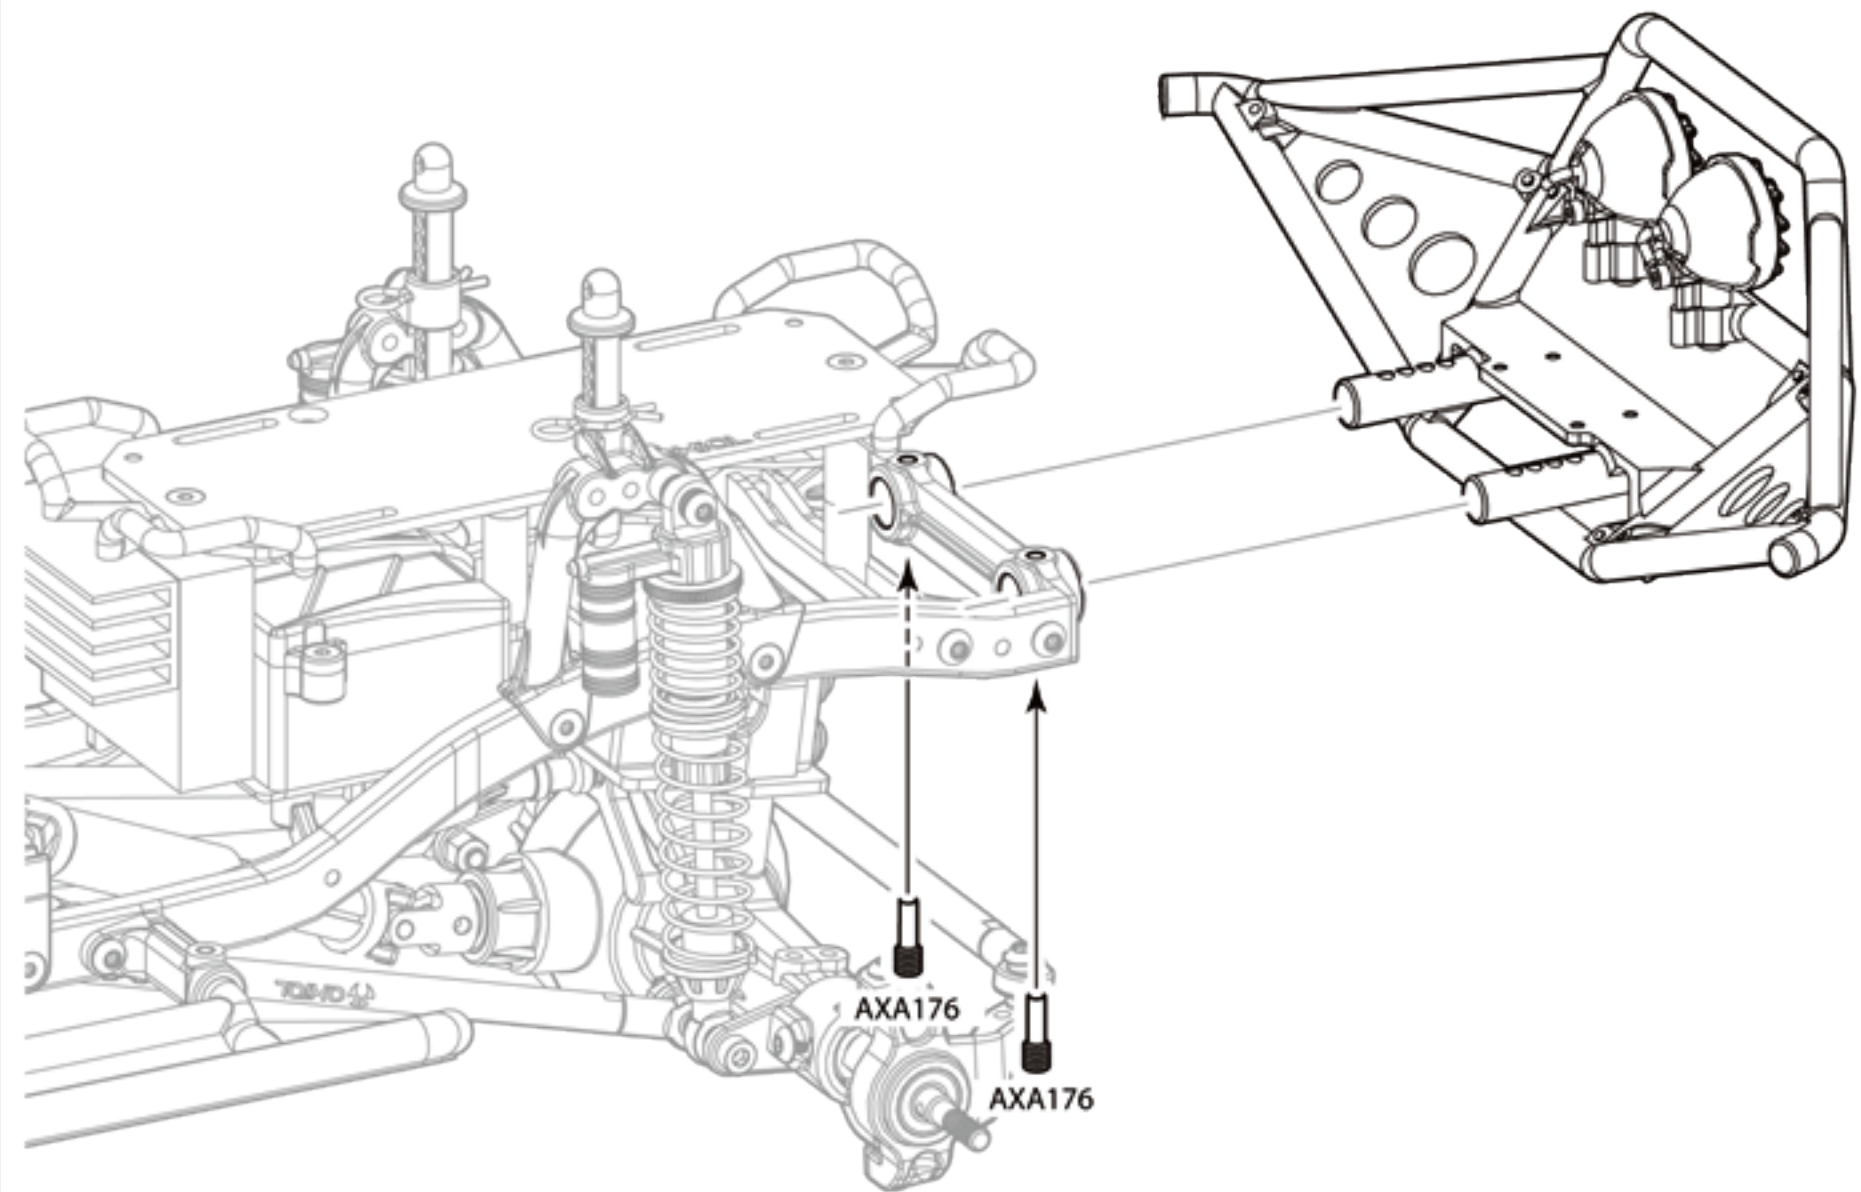


AXA015
M2x10mm Cap Head **x60**


53

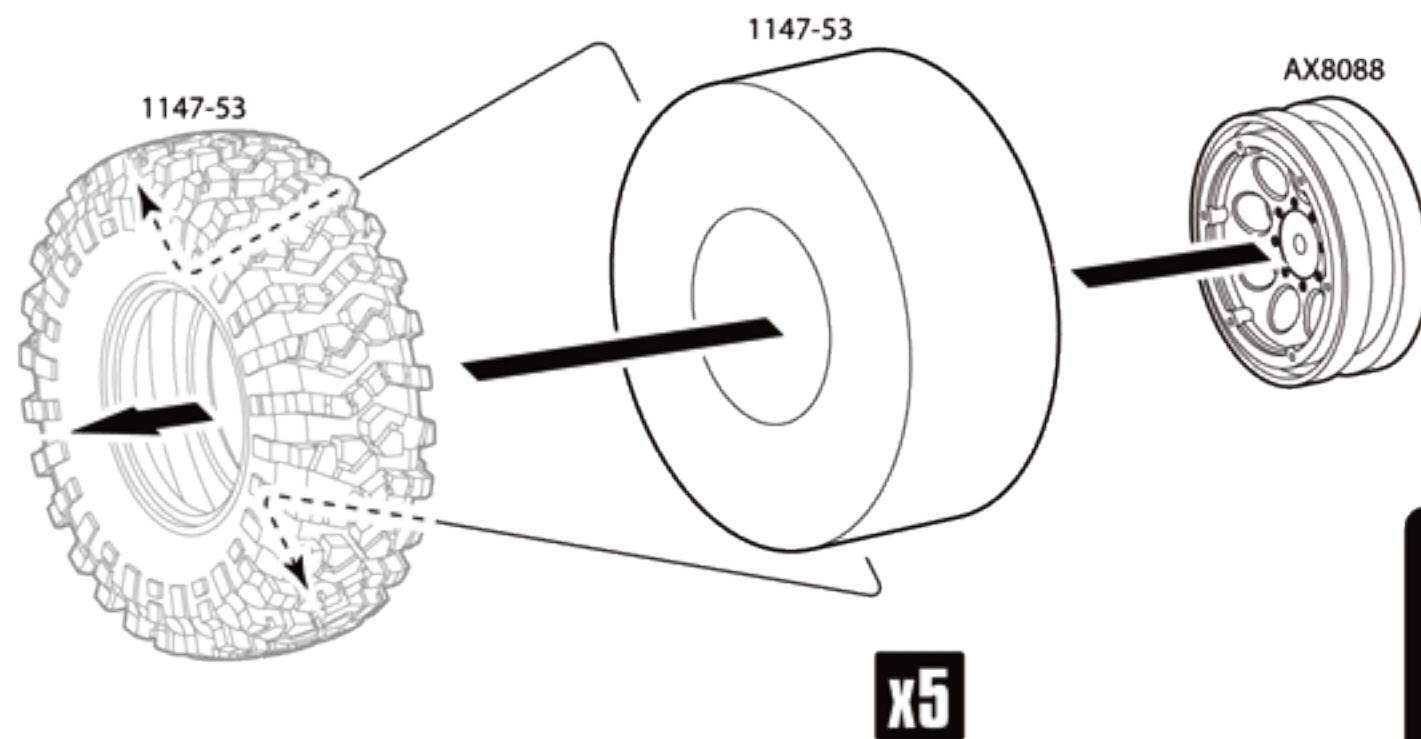

! Make sure tire bead seats properly and beadlock ring sit flush.
Auf richtigen Sitz achten

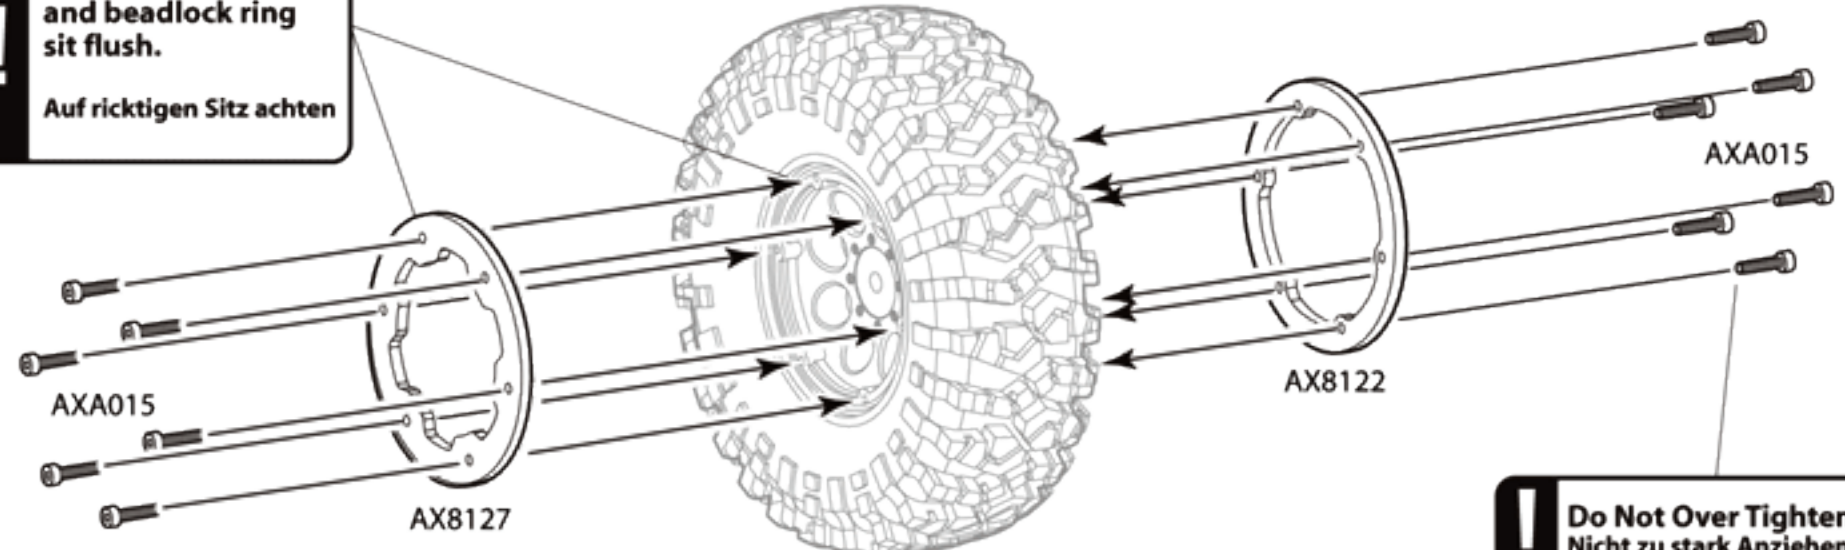


! Tighten all screws in a star pattern as shown
Die schrauben wie gezeigt anziehen

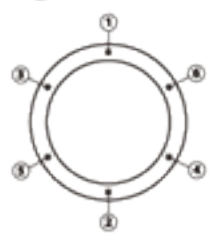

! Do Not Over Tighten
Nicht zu stark Anziehen



AXA1053 **x1**
M3 Nyion Lock Nut

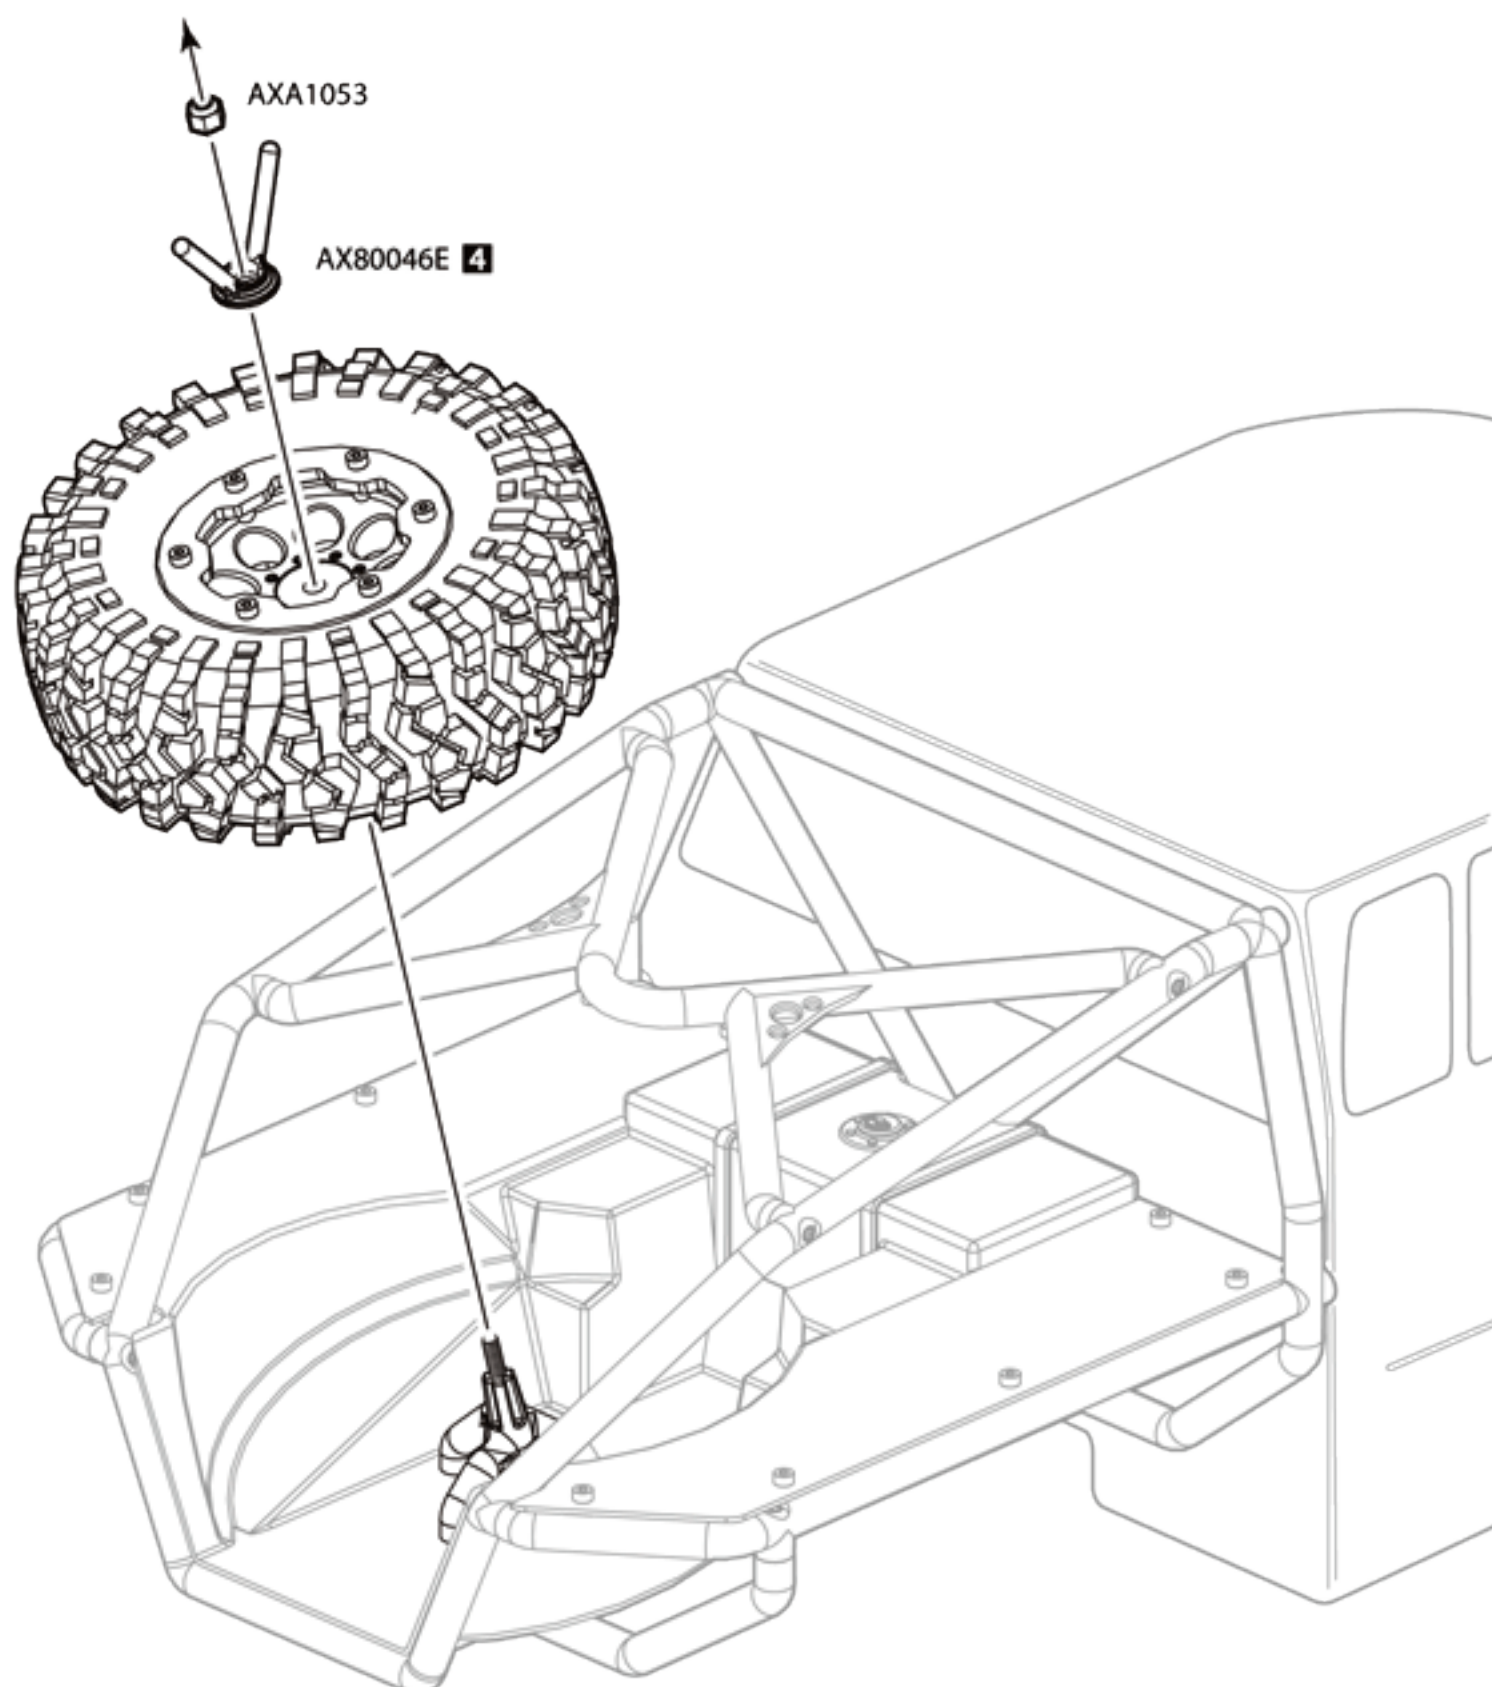


AXA180 **x4**
M3x3mm Set Screw



AX30163 **x4**
Pin 2.0x10




AXA1045 **x4**
M4 Nylon Lock Nut

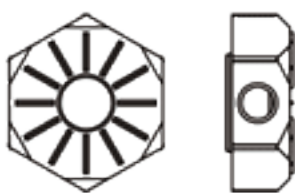

AX30427 x4
12mm Aluminum Hub


55

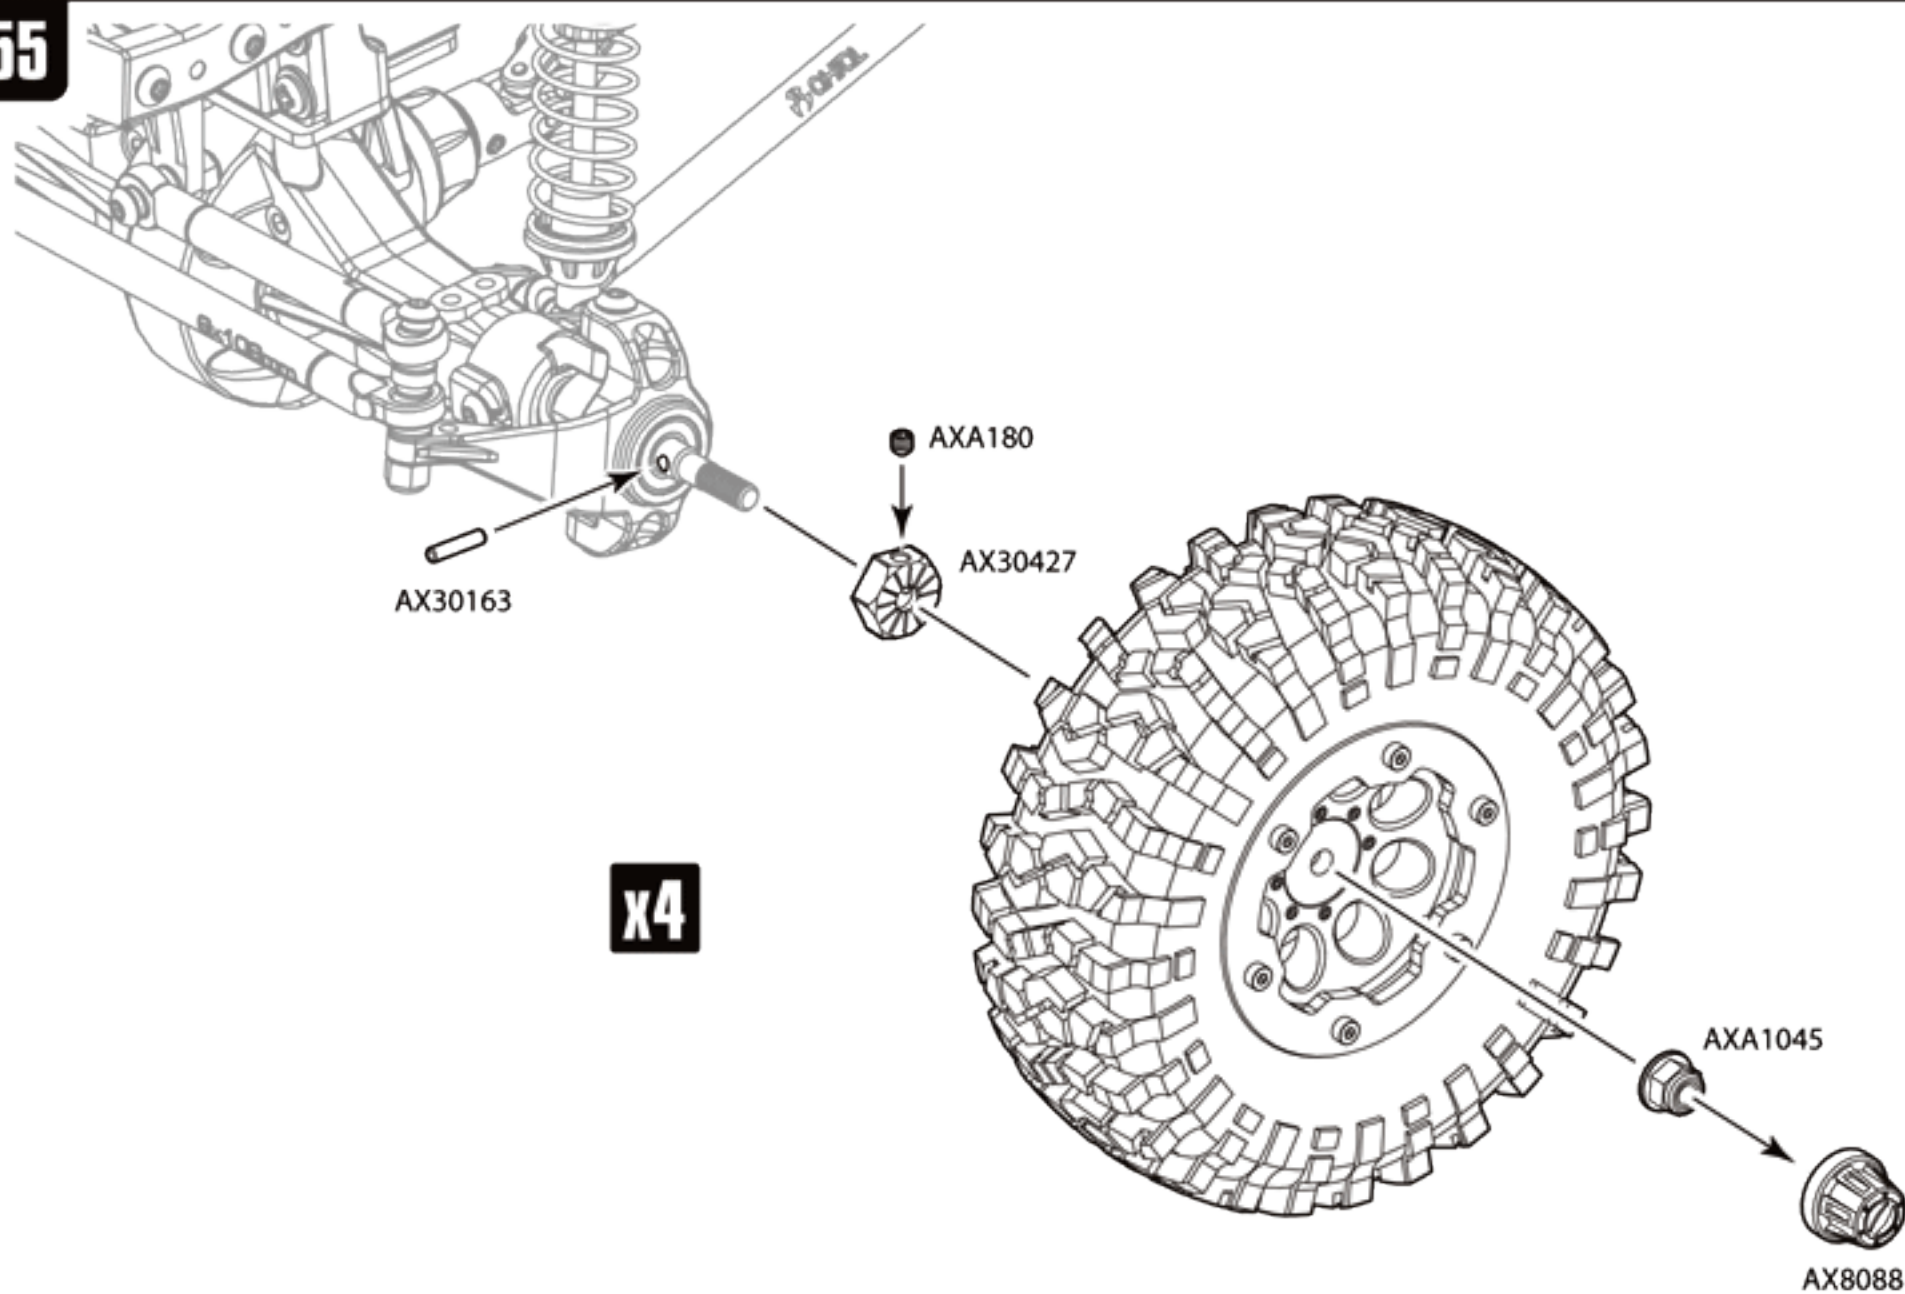





AXA1059
6mm Body clip **x8**

56

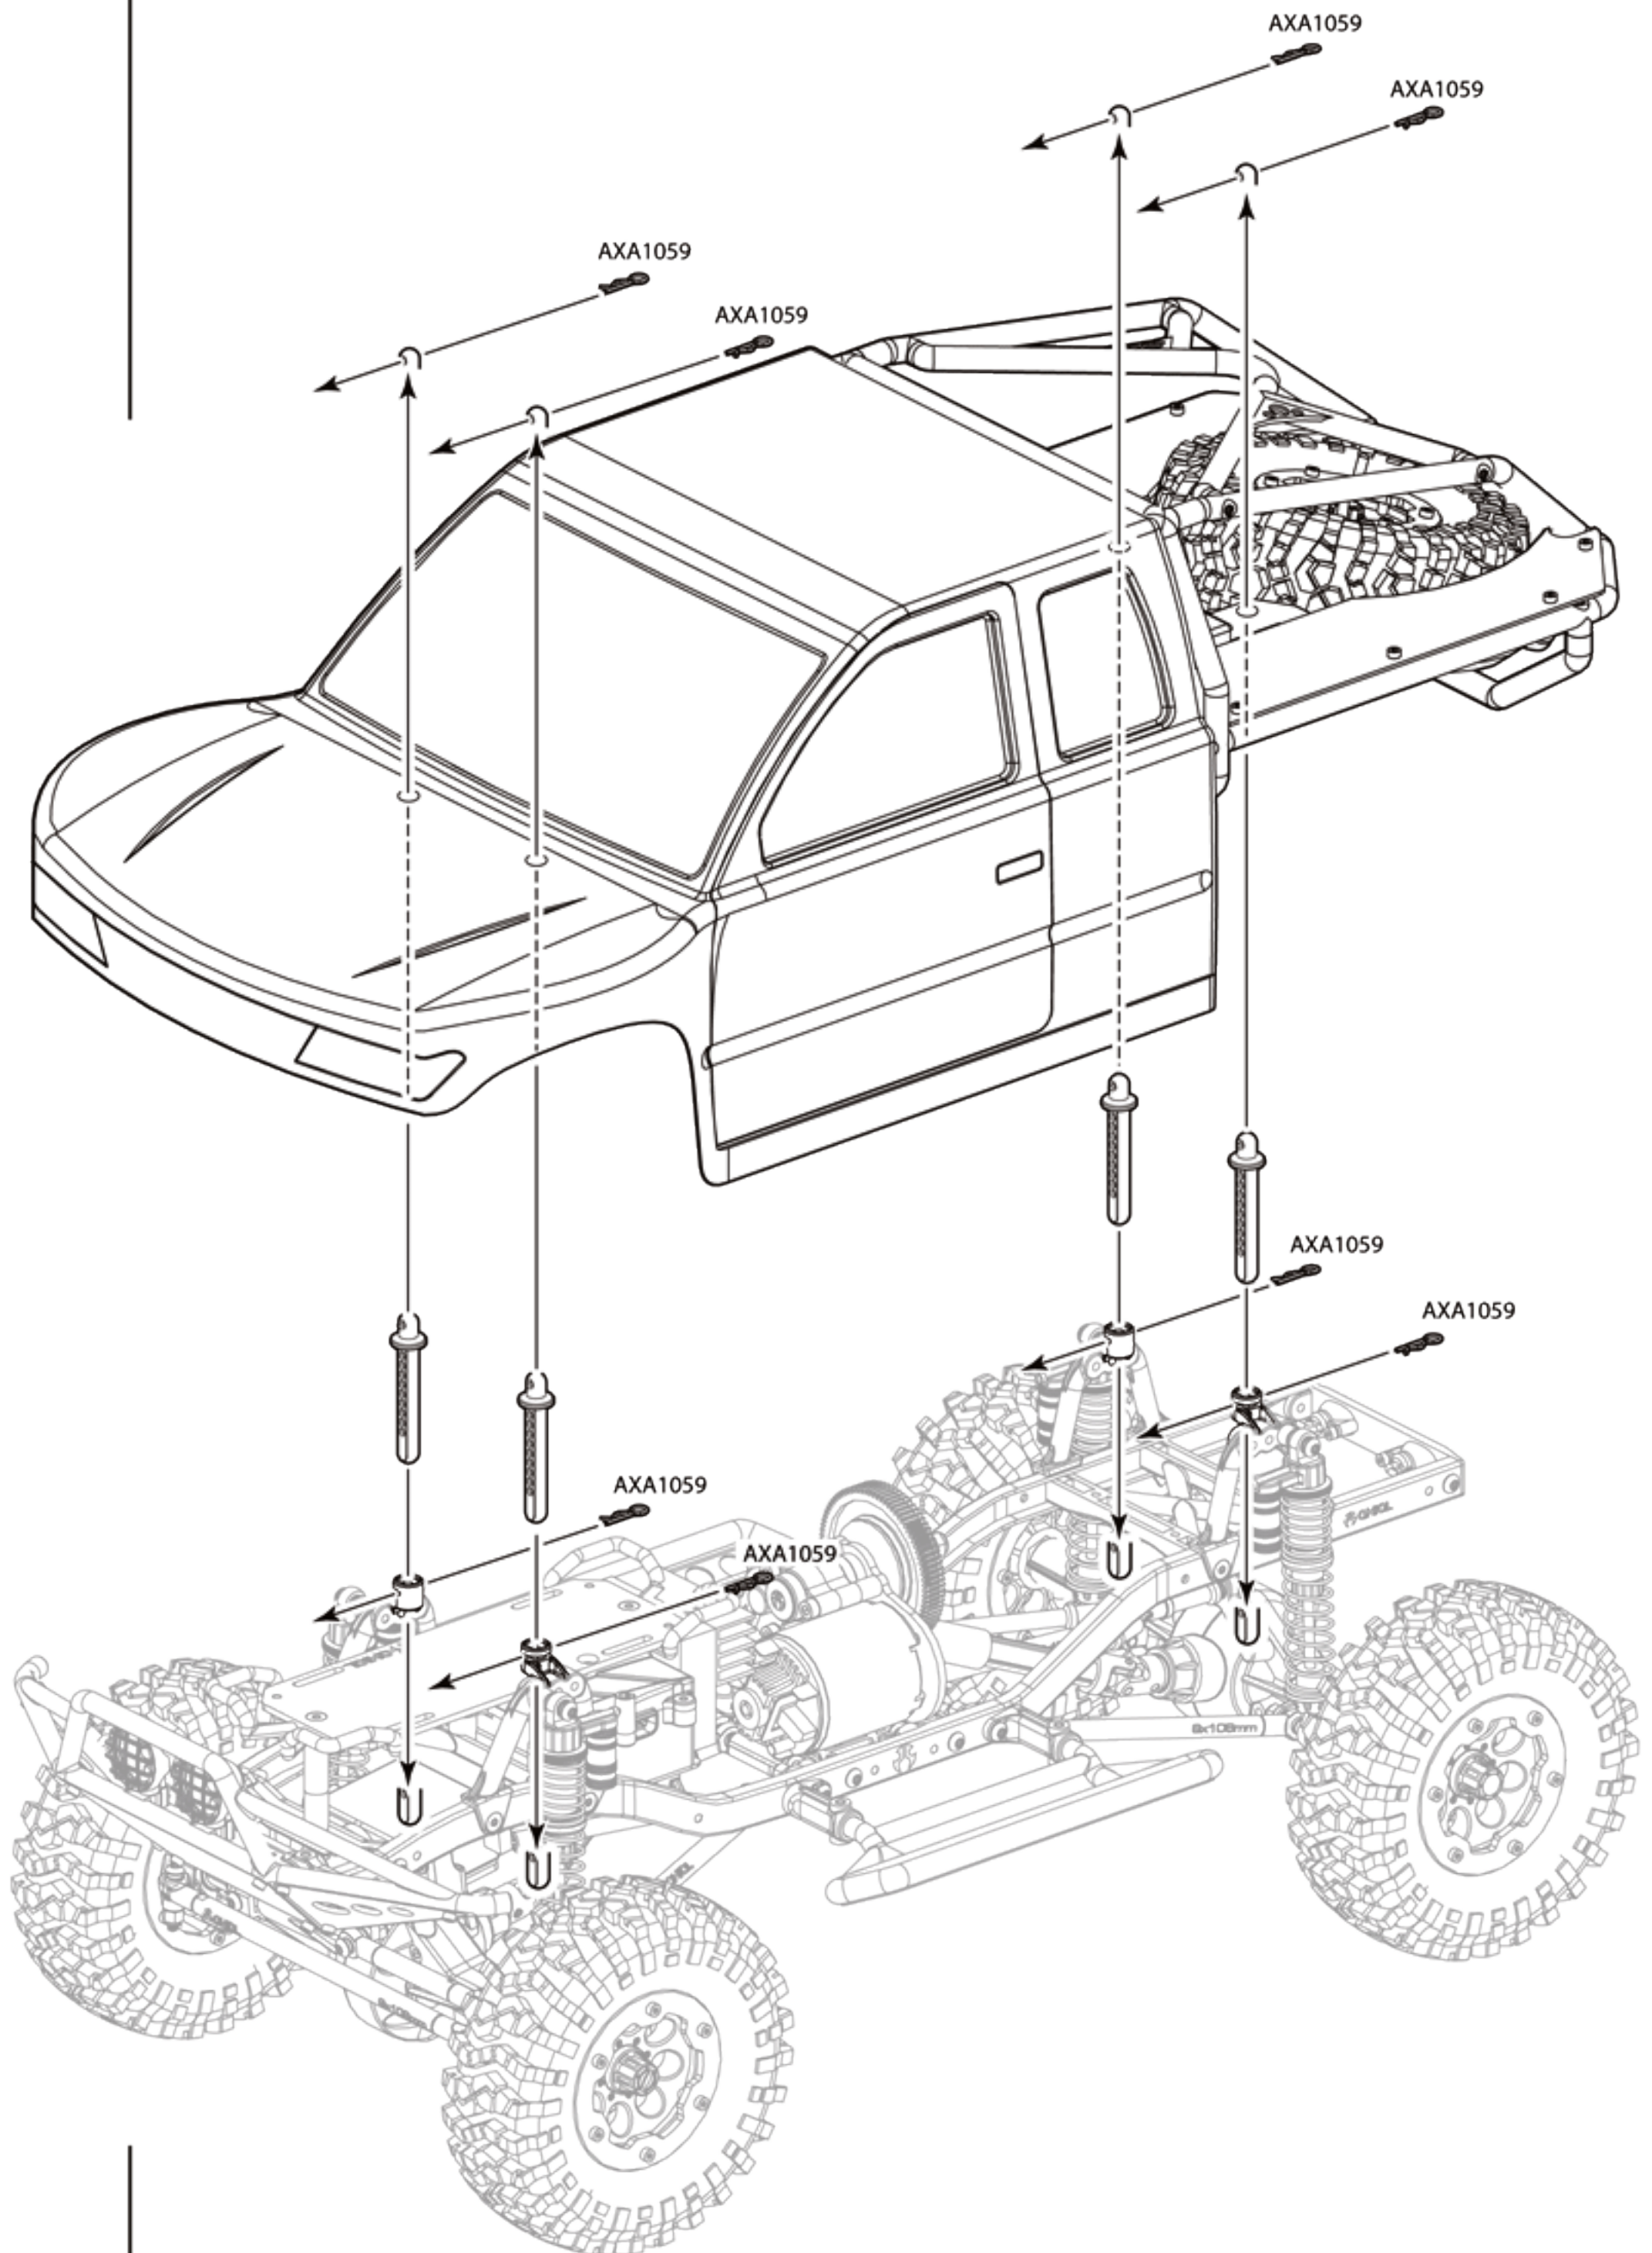



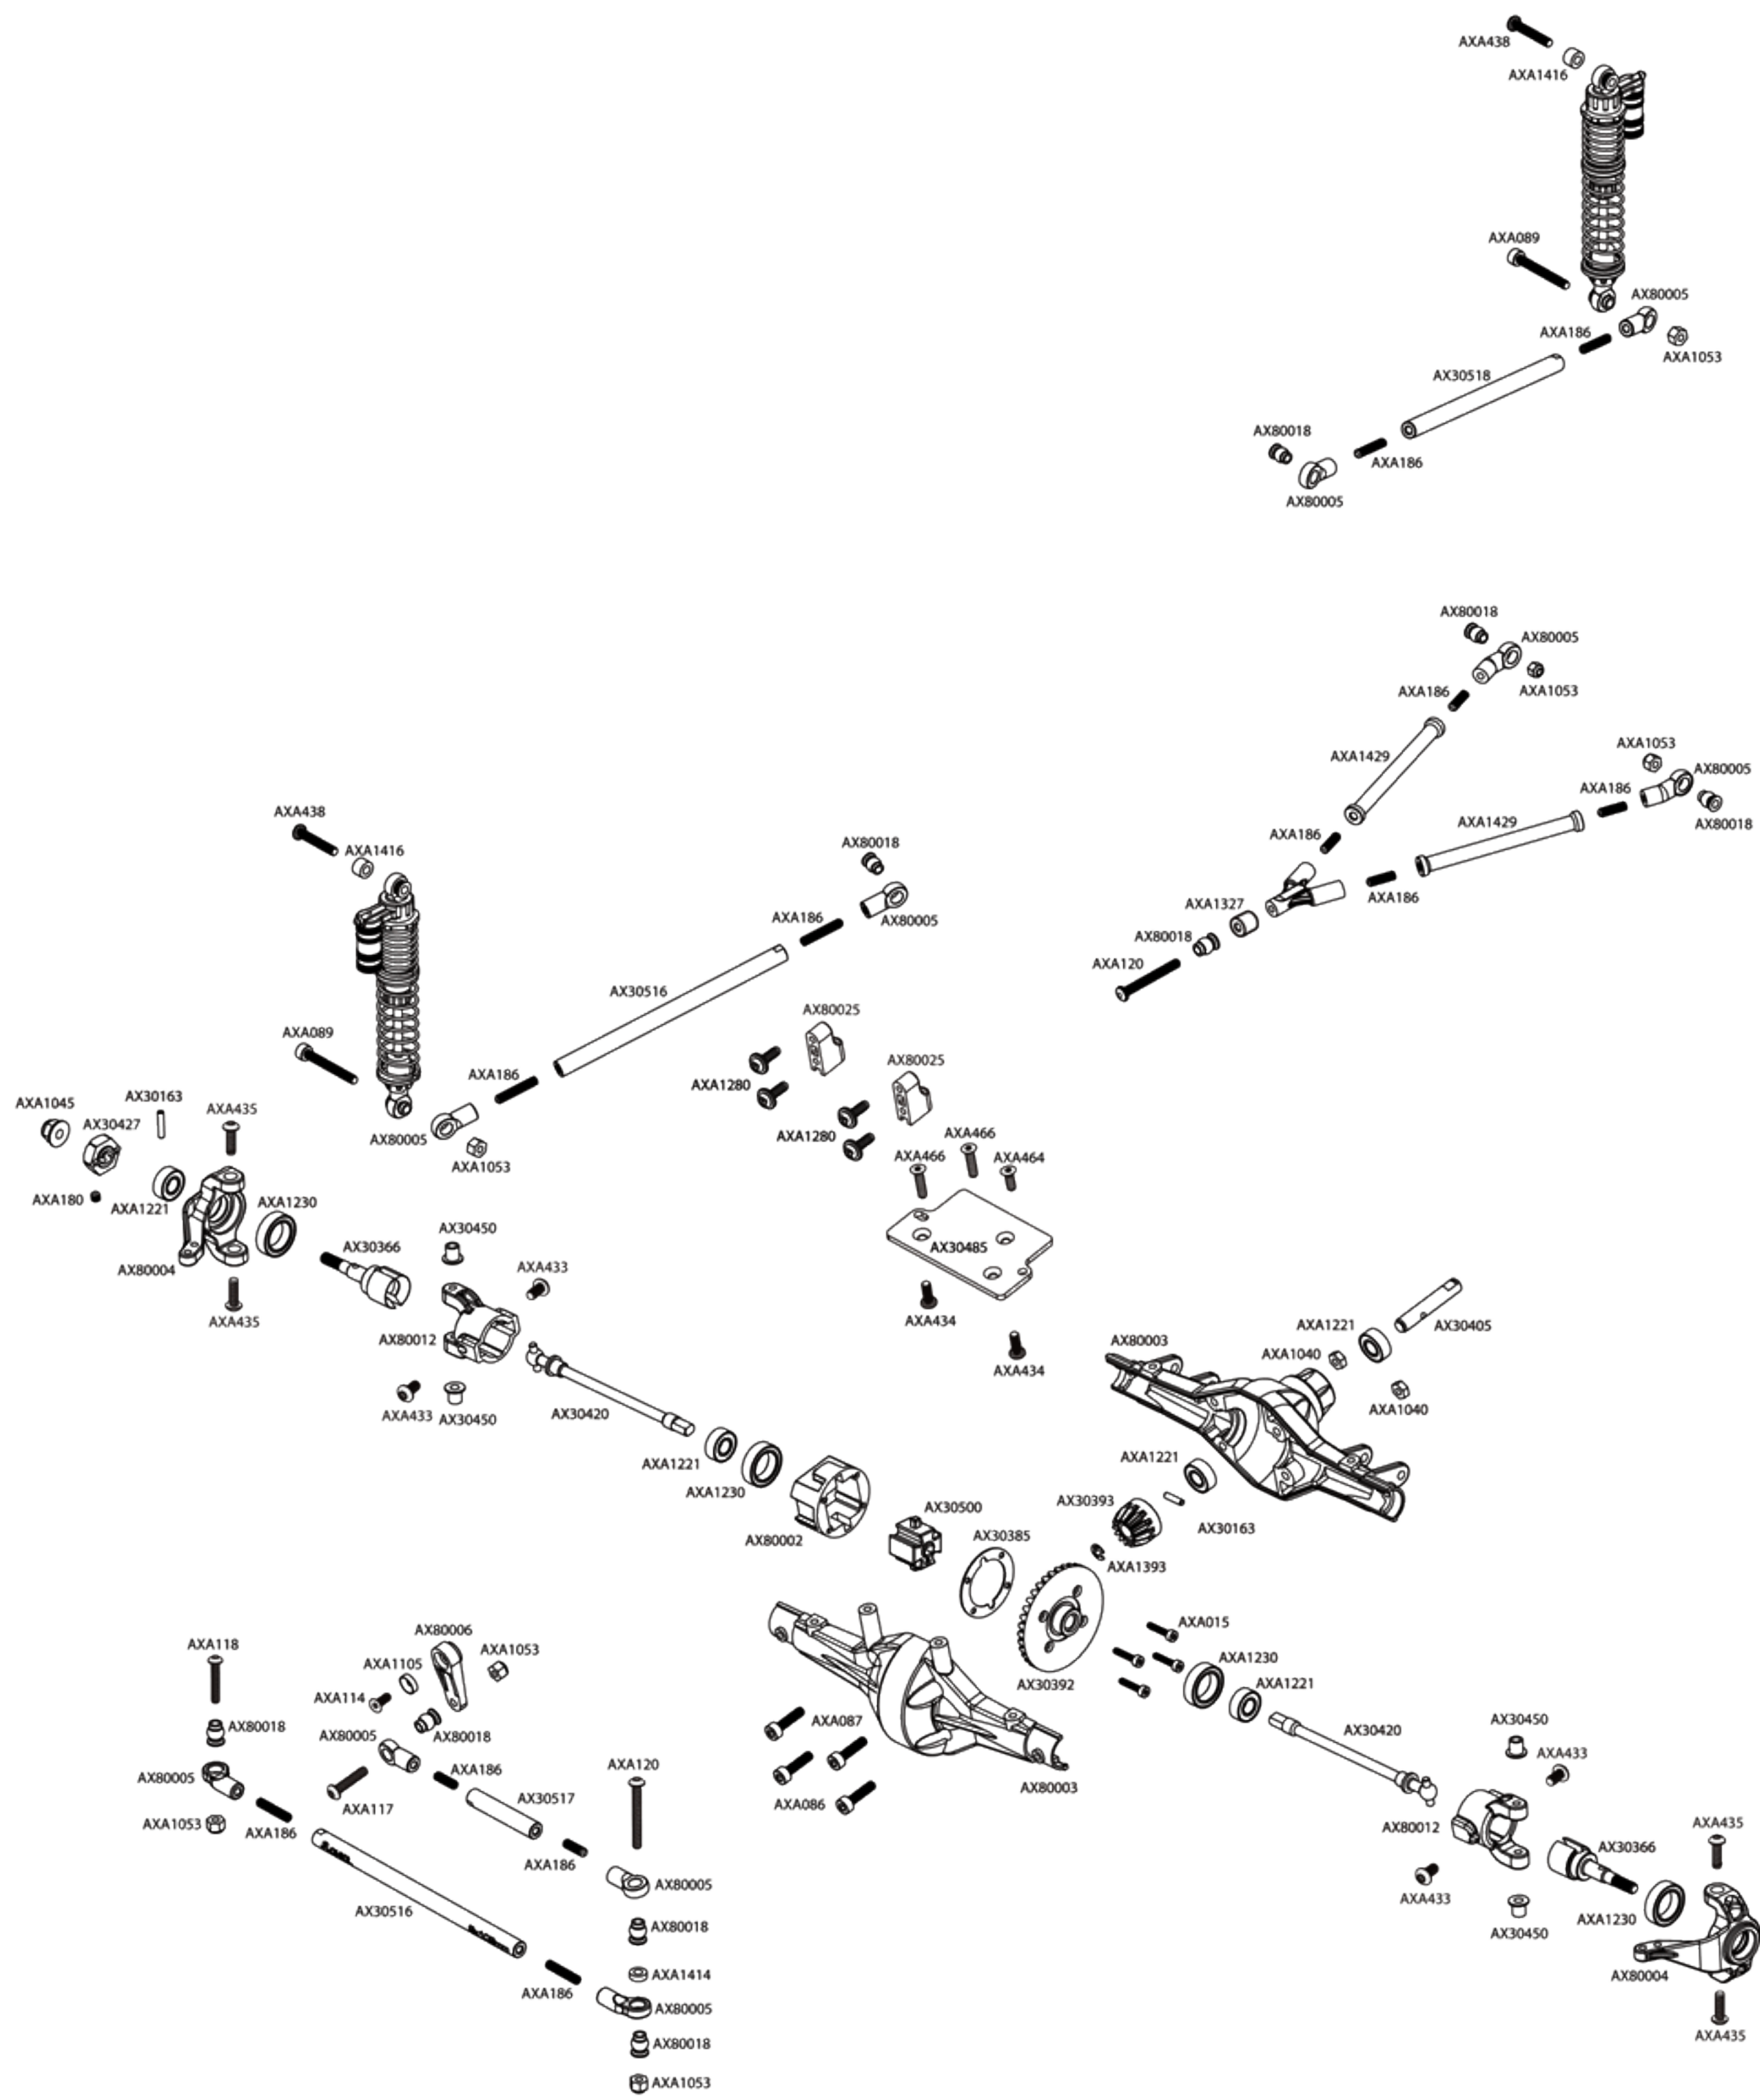

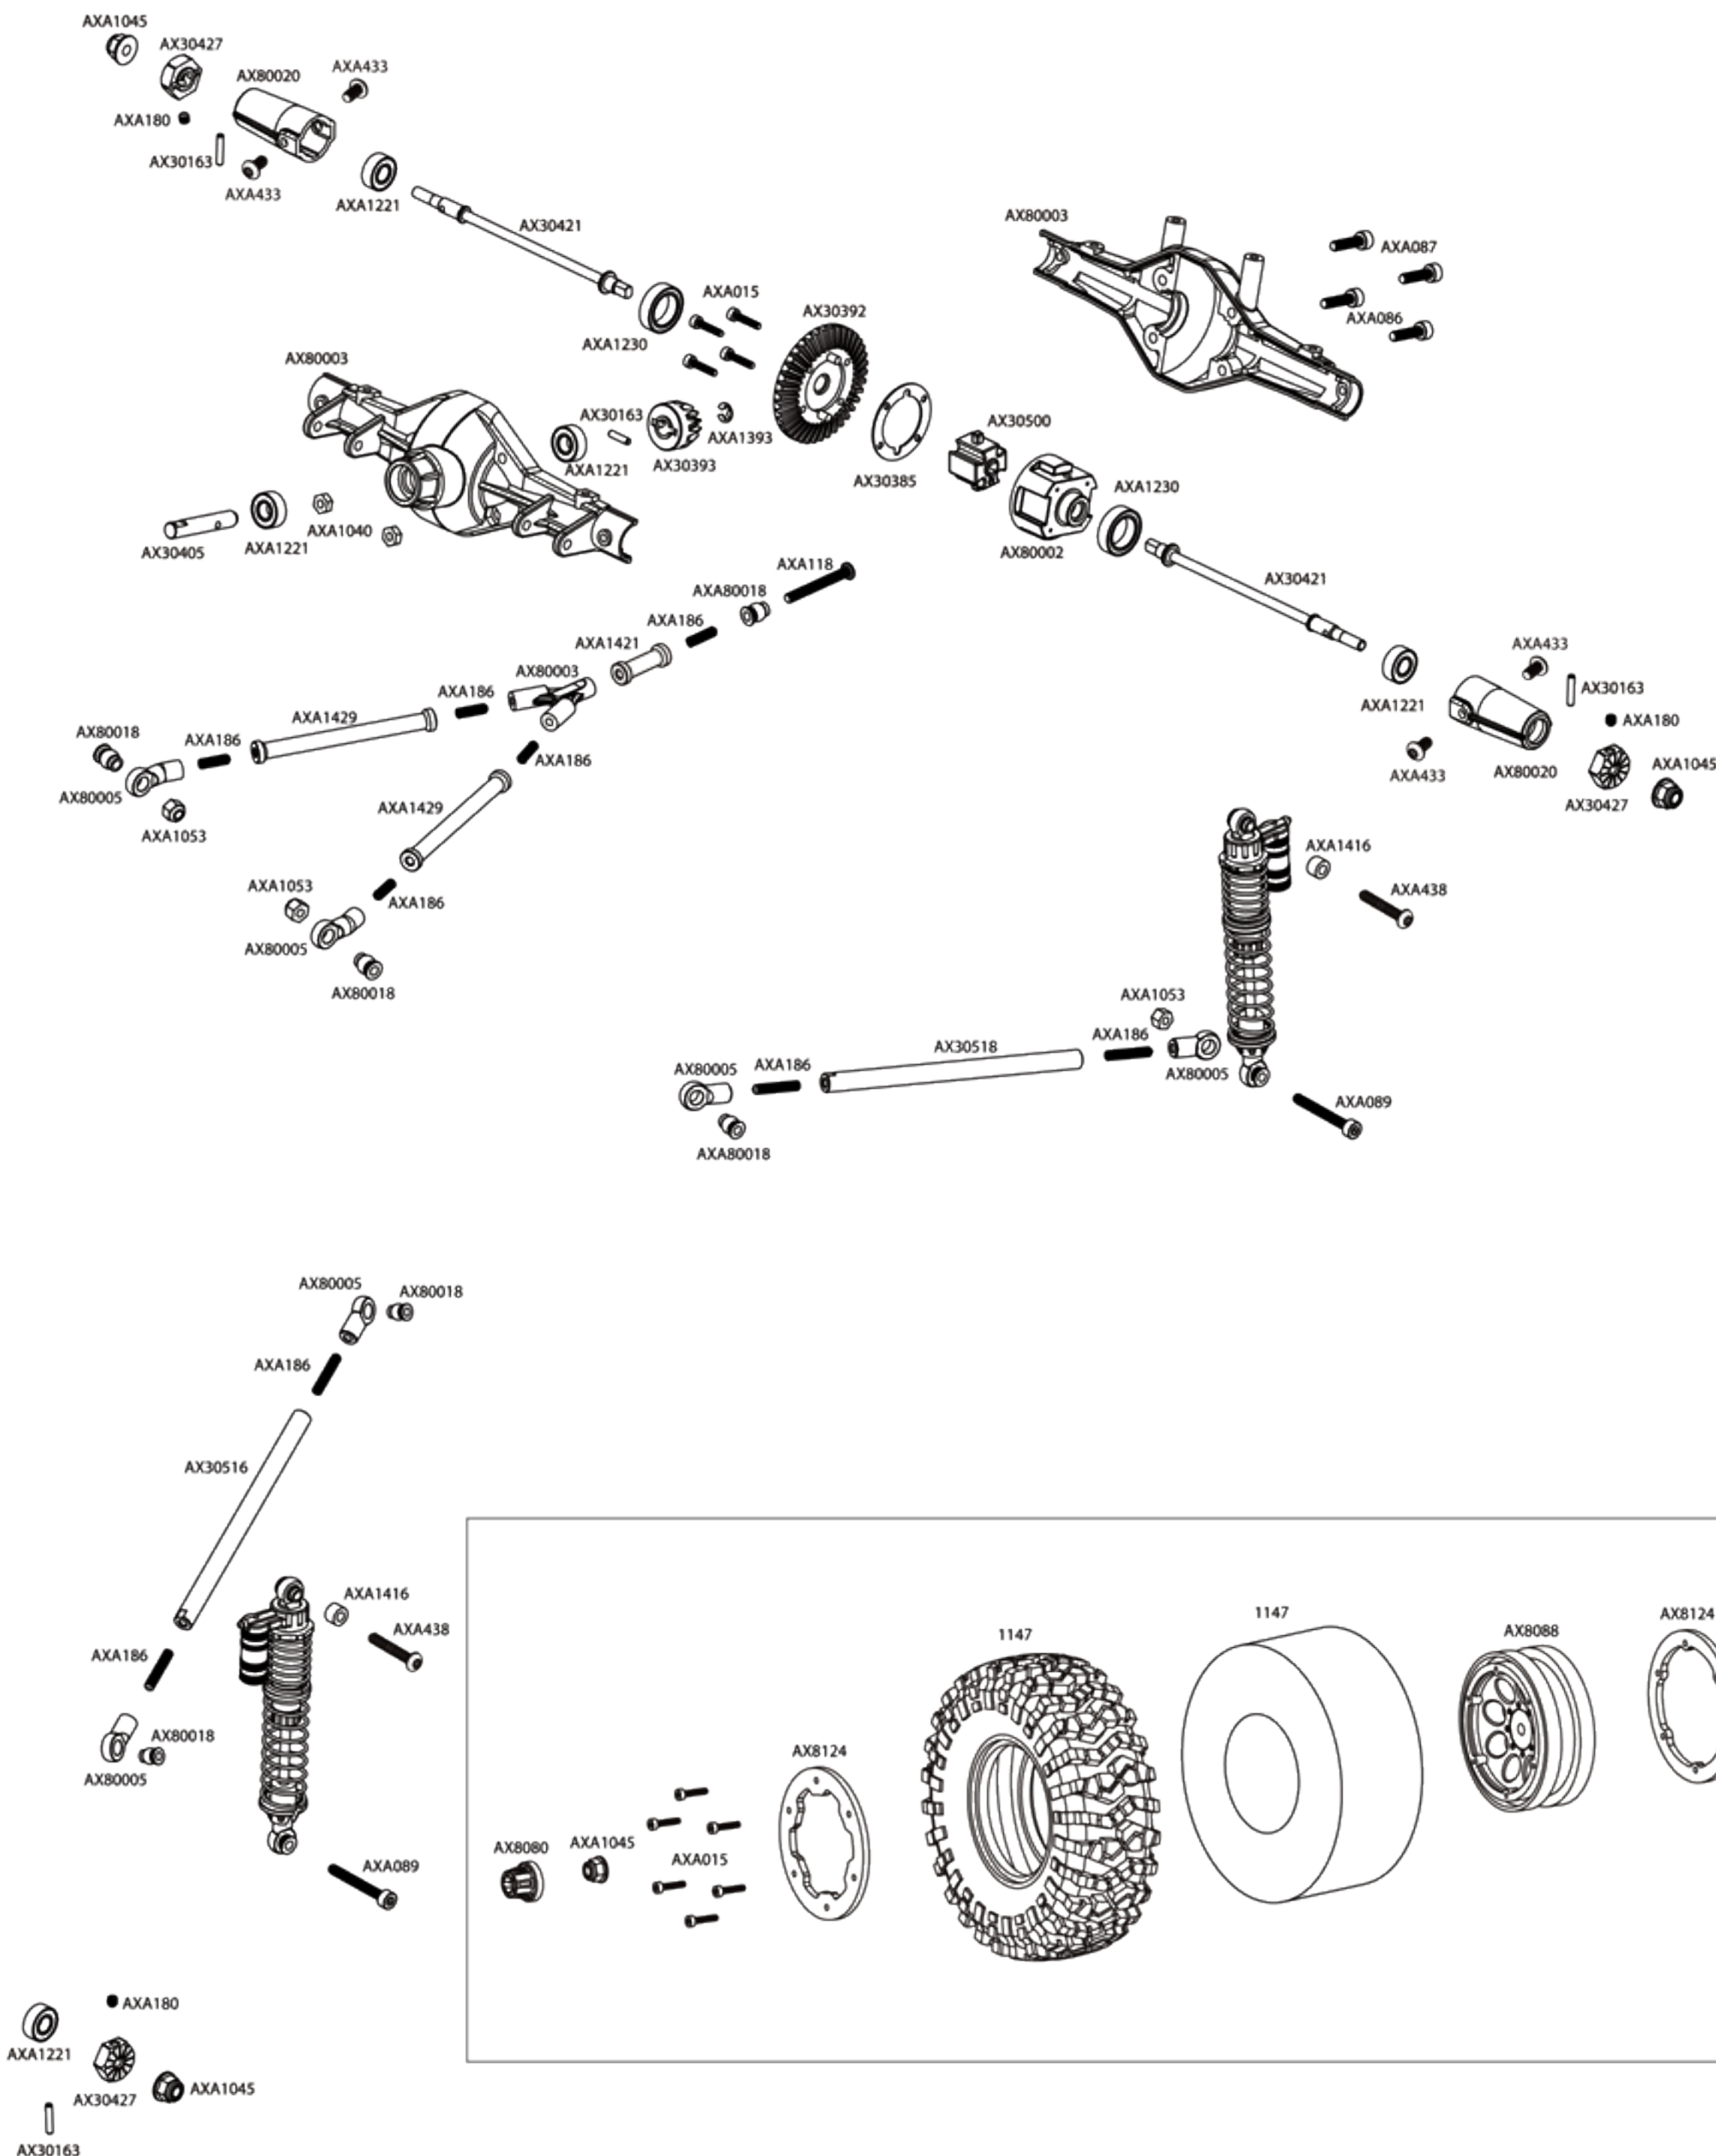


Batteries / Batterien

Optional Battery Mounting

The standard 7.2V stick pack can be mounted on the battery/radio tray as shown in the instructions. However this is not the most ideal mounting place for competitive rock crawling since it places most of the weight higher in the chassis. You can also use smaller packs (LiPo, Lithium Ion, receiver packs, etc.) that offer a much lower weight. Ideally you want the bulk of the weight to be over the front axle. If you plan on competing or simply want to improve the performance of your AX10 Scorpion it is recommended to relocate your batteries over the front axle. You can mount the battery pack on top of the steering servo using Velcro, plastic zip ties, or strapping tape. You can also mount the battery pack using the optional AX10 Scorpion Battery/Servo Plate (AX30486) as shown.

Optionale Akkubefestigung

Der normale 7,2V Stick Pack kann wie beschrieben auf die Elektronik Grundplatte montiert werden. Diese Position ist nicht der idealste Ort, da das Gewicht höher als das Chassis ist. Sie können auch kleinere Packs verwenden (LiPo, Lithium Ion, Empfängerpacks...) die leichter sind. Im Idealfall kommt das Gewicht über die Vorderachse. Wenn Sie ein Rennen mitfahren, oder die Leistung Ihres Wagens optimieren wollen wird empfohlen, die Akkus über die Vorderachse zu montieren. Sie können den Akkupack auf dem Lenkservo mit Klettverschluss, Kabelbinder oder Klebeband montieren. Sie können auch den Akku mit dem Option Part AX30486 nach Bedarf montieren.

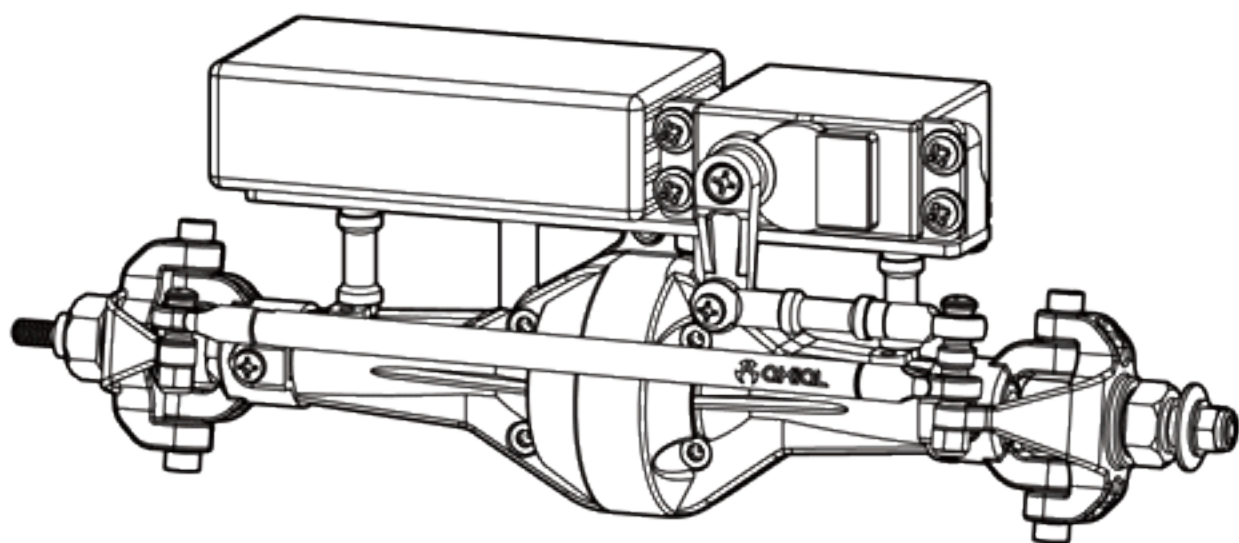

visit www.maxamps.com for a complete selection of batteries and chargers specifically for the AX10 Scorpion.

Wheels - Tires / Räder - Ermüdet

The AX10 Scorpion is set up to be competitive right out of the box, however terrain, weather and driving style all affect the performance of the chassis. You can fine tune performance of your AX10 Scorpion by adding weight, trimming the inner foam, and tuning your tires.

Der AX10 Skorpion ist konstruiert, um aus der Schachtel konkurrenzfähig zu sein, jedoch beeinflussen Gelände, Wetter und Fahrstil die Leistung vom Chassis. Sie können die Leistung Ihres AX10 Skorpion durch hinzufügen von Gewichten, Trimmen der Reifeneinlage und der Reifenabstimmung einstellen.

Adding Weight / Addiergewicht

You can add weight to the front axle to improve traction. Most users will use stick on wheel weights that fit inside the tire and mount to the wheel, but you can also use Airsoft pellets or BB's. You will have to experiment to determine how much weight to add.

Sie können an der Vorderachse Gewicht hinzufügen um die Traktion zu verbessern. Die meisten Fahrer verwenden Aufsteckbare Rädergewichte die innerhalb des Reifens montiert werden, Sie können aber auch Airsoft Kugeln oder BB's verwenden. Sie werden experimentieren müssen, um zu bestimmen, wieviel Gewicht Sie hinzufügen müssen.




Tire Flex / Reifen Flex


You can adjust the amount of tire flex you get by trimming your inner foam. Visit www.rccrawler.com to see all the choices you have before trimming your inner foams.

Sie können die Eigenschaften des Reifens durch trimmen der Reifeneinlage ändern. Besuchen Sie www.rccrawler.com, um Möglichkeiten für diese Änderung zu sehen, bevor Sie die Einlage bearbeiten.

Standard

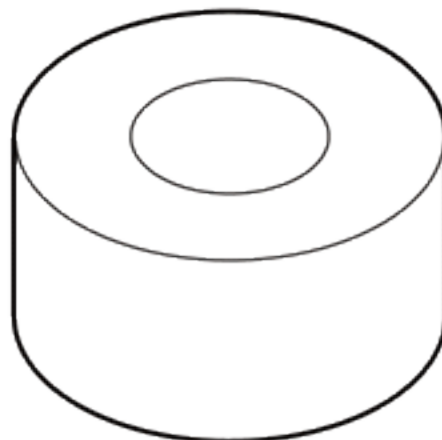

Trimmed

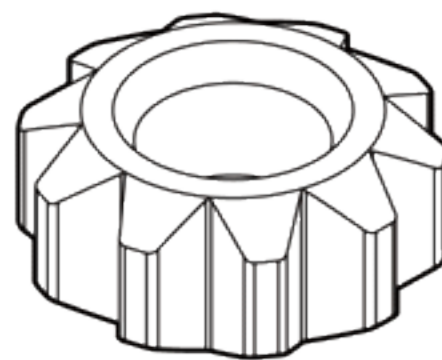

Shock Absorbers / Dämpfer

Proper building, maintenance, and tuning of your shocks will enhance the performance of your AX10 Scorpion. Be sure to inspect the shocks regularly for any sign of wear or damage and replace parts as needed. Tune your shocks to enhance the performance of your AX10 Scorpion using the tips provided below.

Ordnungsgemäßer Zusammenbau, Wartung und Abstimmung der Dämpfer wird die Leistung Ihres AX10 Skorpion erhöhen. Prüfen Sie unbedingt regelmäßig die Dämpfer auf Verschleiß und ersetzen Sie die nötigen Teile. Stimmen Sie Ihre Dämpfer ab wie untenstehend beschrieben, um die Leistung des Wagens zu erhöhen.



Shock Oil / Dämpferöl

Thinner / Dünner	Thicker / Dicker
Softer damping More traction Quicker weight transfer Weichere Dämpfung Mehr Griff Schnellere gewichtsverlagerung	Stiffer damping Slower chassis weight transfer Reacts slower to input Härtere Dämpfung Langsamere Gewichtsverlagerung Auto reagiert langsamer auf Steuerbefehle



Shock Spring / Dämpferfeder / Ressort d'amortisseur


Softer / Weicher More Chassis Roll Mehr rollbewegung des chassis	↕	Soft
Less Chassis Roll Weniger rollbewegung des chassis Moins de roulis du châssis		Firm

Gear Ratio / Getriebeübersetzung

Use this equation to calculate the final drive ratio.
Final Drive Gear Ratio = 1 / ((pinion/Spur) X .13)

Mit dieser Gleichung können Sie die Gesamtübersetzung berechnen.
Gesamtübersetzung = 1 / ((pinion/Spur) X .13)

Slower - More Torque
Langsamer - Mehr Kraft

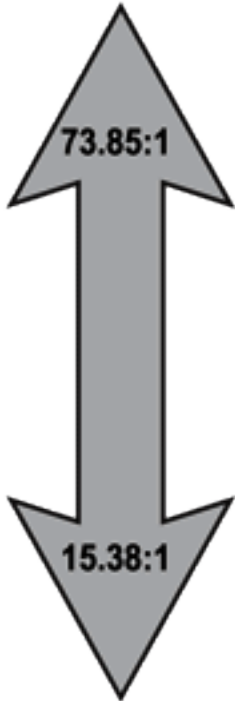

Faster - Less Torque
Schneller - Weniger Kraft

		48 Pitch									
		Spur									
		70	72	75	78	81	85	87	90	93	96
Pinion	10								69.23	71.54	73.85
	11								62.94	65.03	67.13
	12							55.77	57.69	59.62	61.54
	13							51.48	53.25	55.03	56.80
	14						46.70	47.80	49.45	51.10	52.75
	15						43.59	44.62	46.15	47.69	49.23
	16						40.87	44.62	43.27	44.71	46.15
	17						36.32	39.37	40.72	42.08	43.44
	18					34.62	34.41	37.18	38.46	39.74	41.03
	19					32.79	34.41	35.22	36.44	37.65	38.87
	20					31.15	32.69	33.46	34.62	35.77	36.92
	21				28.57	29.67	31.14	31.87	32.97	34.07	35.16
	22				27.27	28.32	29.72	30.42	31.47	32.52	33.57
	23				26.09	27.09	28.43	29.10	30.10	31.10	32.11
	24			24.04	25.00	25.96	27.24	27.88	28.85	29.81	30.77
	25			23.08	24.00	24.92	26.15	26.77	27.69	28.62	29.54
	26			22.19	23.08	23.96	25.15	25.74	26.63	27.51	28.40
	27		20.51	21.37	22.22	23.08	24.22	24.79	25.64	26.50	27.35
	28		19.78	20.60	21.43	22.25	23.35	23.90	24.73	25.55	26.37
	29	18.57	19.10	19.89	20.69	21.49	22.55	23.08	23.87	24.67	25.46
	30	17.95	18.46	19.23	20.00	20.77	21.79	22.31	23.08	23.85	24.62
	31	17.37	17.87	18.61	19.35	20.10	21.09	21.59	22.33	23.08	23.82
	32	16.83	17.31	18.03	18.75	19.47	20.43	20.91	21.63	22.36	23.08
	33	16.32	16.78	17.48	18.18	18.88	19.81	20.28	20.98	21.68	22.38
	34	15.84	16.29	16.97	17.65	18.33	19.23	19.68	20.36	21.04	21.72
	35	15.38	15.82	16.48	17.14	17.80	18.68	19.12	19.78	20.44	21.10

Parts List

Part #	Description	Part #	Description
AX30031	Antenna	AX80044	Axial SCX10 Tube Bumper Parts Tree
AX30041	Velcro Strap 15x160mm	AX80045	LED Light Holder Set A
AX30146	Shock Shaft 3x50 (2pcs)	AX80046	1/10th Scale Truggy Bed Set
AX30162	Pin 1.5x8mm (6pcs.)	AX80049	LED Lens Set - Clear
AX30163	Pin 2.0x10 (6pcs.)	AX8088	1.9 8 Hole Beadlocks (Satin Chrome)
AX30190	Shaft 5x18 (2pcs.)	AX8122	Axial 1.9 Beadlock Ring - Grey (2pcs)
AX30198	Slipper Drive gear Shaft 5x53.5	AX8127	Axial 1.9 Rock Beadlock Ring - Grey (2pcs)
AX30200	Spring 12.5x20mm 3.6 lbs/in - Super Soft (Red)	AXA013	M2x6mm Cap Head (Black Oxide)
AX30207	Spring 12.5x40mm 4.08 lbs/in - Medium (Green)	AXA015	M2x10mm Cap Head (Black Oxide)
AX30366	Axle 5x35mm	AXA083	M3x6mm Cap Head (Black Oxide)
AX30380	Metal Driveshaft Yoke Set (2pcs)	AXA085	M3x10mm Cap Head (Black Oxide)
AX30385	Diff Gasket 16x25x0.5mm (2pcs)	AXA087	M3x16mm Cap Head (Black Oxide)
AX30392	Bevel Gear Set (38/13)	AXA088	M3x20mm Cap Head (Black Oxide)
AX30394	20T Drive Gear	AXA089	M3x25mm Cap Head (Black Oxide)
AX30404	Outdrive Shaft (2pcs)	AXA1040	M3 Thin Hex Nut (BLACK)
AX30405	Input Shaft 5x28mm (2pcs)	AXA1045	M4 Nylon Lock Nut (Black)
AX30410	Inner Slipper Plate	AXA1053	M3 Nylon Locking Hex Nut (BLACK)
AX30411	Outer Slipper Plate	AXA1059	6mm Body clip (Black)
AX30412	Slipper pad 27x8x1mm	AXA1070	Washer 3x6x0.5
AX30413	Slipper spring 8.5x12 165 lbs/in - Black (2pcs)	AXA1071	Washer 4x8x0.5mm
AX30420	Solid Axle Dogbone 6x74mm	AXA1091	Washer 5x10x.5 (Black) (10pcs)
AX30421	Straight Axle 6x104.50mm (2pcs)	AXA1105	Cone Washer 3x6.9x2mm
AX30427	Axial Narrow 12mm Aluminum Hub - Black (4pcs)	AXA1163	O-Ring 7x1mm
AX30450	Flange Pipe 3x4.5x5.5 (4pcs.)	AXA117	M3x15mm Hex Socket Button Head (Black) (10pcs)
AX30483	AX10 Scorpion Radio Plate	AXA1179	O-Ring 2.5x1.5mm (10pcs)
AX30485	AX10 Scorpion Servo Plate	AXA118	M3x18mm Hex Socket Button Head - Black (10pcs)
AX30491	AX10 RTR Motor Plate	AXA119	M3x20mm Hex Socket Button Head (Black) (10pcs)
AX30499	Transmission Spacer 5x6.9x4.8mm - Grey (2pcs)	AXA120	M3x25mm Hex Socket Button Head (Black) (10pcs)
AX30500	Heavy Duty Locker (2pcs)	AXA1218	Bearing 5x10x4mm
AX30502	SCX10 Chassis Rail Set (2pcs)	AXA1221	Bearing 5x11x4mm
AX30516	Threaded Aluminum Pipe 6x106mm - Grey (2 pcs.)	AXA1225	Bearing 8x16x5mm
AX30517	Threaded Aluminum Pipe 6x33mm - Grey (2pcs.)	AXA1230	Bearing 10x15x4mm
AX30518	Threaded Aluminum Pipe 6x98mm - Grey (2pcs.)	AXA1280	M3x10mm Servo Flange Screw
AX30530	Front Skid Plates - Tube Style Bumper - Silver Aluminum (3pcs)	AXA1327	7.5x6mm Spacer - Grey (6pcs)
AX30572	Pinion 48DP 14T	AXA1358	Shock Damper 3x7x8 (10pcs)
AX30672	Spur 48DP 87T	AXA1392	E2 e-clip (10pcs)
AX80002	Diff Case -Small	AXA1393	E2.5 e-clip (10pcs)
AX80003	Solid Axle Set	AXA1414	2x6mm Spacer - Grey
AX80004	Hub Set	AXA1416	4x6mm Spacer - Grey
AX80005	Linkage Set	AXA1421	7x20mm Post - Grey (2pcs)
AX80006	Servo Set	AXA1429	7x60mm Post - Grey (2pcs)
AX80009	Transmission Set	AXA144	M3x8mm Hex Socket Flat Head (Black) (10pcs)
AX80010	Gear Set	AXA176	Screw Shaft M3x2.5x13mm (10pcs)
AX80011	Drive Shaft Set	AXA180	M3x3mm Set Screw (Black Oxide) (10pcs)
AX80012	C Hub Carrier Set	AXA186	M3x16mm Set Screw (Black Oxide)
AX80015	3 Link Connector	AXA1260	M2.5x12mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80018	Hardware Parts Tree	AXA433	M3x6mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80020	Straight Axle Adapter Parts Tree	AXA434	M3x8mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80025	SCX10 Shock Hoops Parts Tree	AXA435	M3x10mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80026	SCX10 Frame Brace Set	AXA436	M3x12mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80027	SCX10 Battery Tray Holder	AXA438	M3x18mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80028	SCX10 Radio Box Parts Tree	AXA441	M3x30mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80029	Shock Cap Parts Tree	AXA463	M3x6mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80030	61-90 Shock Body Set	AXA464	M3x8mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80031	Body Mount Parts Tree	AXA465	M3x10mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80032	Shock Parts		
AX80041	1/10th Scale Rock Rails Set (2pcs)		

Part #	Description	Part #	Description
AX4025R	Axial Trail Honcho Truck Body - .040" uncut (Clear) - Body Only	AX8089	Axial 1.9 8 Hole Beadlocks - Black Chrome (2pcs)
AX24004	Axial 27T Electric Motor	AX8119	Axial 1.9 Beadlock Ring - Green (2pcs)
AX24007	Axial 55T Electric Motor	AX8120	Axial 1.9 Beadlock Ring - Blue (2pcs)
AX24250	AE-1 Forward/Reverse ESC	AX8121	Axial 1.9 Beadlock Ring - Red (2pcs)
AX24251	Axial NVS - Night Visions System	AX8122	Axial 1.9 Beadlock Ring - Grey (2pcs)
AX24252	Axial Double LED Light String (White LED)	AX8123	Axial 1.9 Beadlock Ring - Orange (2pcs)
AX24253	Axial Double LED Light String (Red LED)	AX8124	Axial 1.9 Rock Beadlock Ring -Green (2pcs)
AX24254	Axial Double LED Light String (Orange LED)	AX8125	Axial 1.9 Rock Beadlock - Blue (2pcs)
AX24255	Axial Single LED Light String (White LED)	AX8126	Axial 1.9 Rock Beadlock Ring - Red (2pcs)
AX24256	Axial 5 LED Light String (White LED)	AX8127	Axial 1.9 Rock Beadlock Ring - Grey (2pcs)
AX24257	Simple LED Controller w/LED lights (4 white and 2 Red)	AX8128	Axial 1.9 Rock Beadlock Ring - Orange (2pcs)
AX30200	Spring 12.5x20mm 3.6 lbs/in - Super Soft (Red) - (2pcs)	AXA091	M3x30mm Cap Head - Black (10pcs)
AX30201	Spring 12.5x20mm 4.32 lbs/in - Soft (White) - (2pcs)	AXA1105	Cone Washer 3x6.9x2mm - Grey (6pcs)
AX30202	Spring 12.5x20mm 5.44 lbs/in - Medium (Green) - (2pcs)	AXA1163	M3x12mm Hex Socket Button Head - Black (10pcs)
AX30203	Spring 12.5x20mm 6.53 lbs/in - Firm (Yellow) - (2pcs)	AXA118	M3x18mm Hex Socket Button Head - Black (10pcs)
AX30204	Spring 12.5x20mm 7.95 lbs/in- Super Firm (Blue) - (2pcs)	AXA1331	Flanged Ball 3x5.8x7mm (6pcs)
AX30205	Spring 12.5x40mm 2.7 lbs/in - Super Soft (Red) - (2pcs)	AXA1412	0.5x6mm Spacer - Grey (6pcs)
AX30206	Spring 12.5x40mm 3.6 lbs/in - Soft (White) - (2pcs)	AXA1413	1x6mm Spacer - Grey (6pcs)
AX30207	Spring 12.5x40mm 4.08 lbs/in - Medium (Green) - (2pcs)	AXA1414	2x6mm Spacer - Grey (6pcs)
AX30208	Spring 12.5x40mm 5.44 lbs/in - Firm (Yellow) - (2pcs)	AXA1415	3x6mm Spacer - Grey (6pcs)
AX30209	Spring 12.5x40mm 6.81 lbs/in- Super Firm (Blue) - (2pcs)	AXA1416	4x6mm Spacer - Grey (6pcs)
AX30395	Heavy Duty Bevel Gear Set	AXA1417	5x6mm Spacer - Grey (6pcs)
AX30460	AX10 Scorpion Universal Joint Axle (2pcs)	AXA1418	6x6mm Spacer - Grey (6pcs)
AX30461	AX10 Scorpion Universal Joint Axle Shaft (2pcs)	AXA1419	7x10mm Post - Grey (2pcs)
AX30462	AX10 Scorpion Universal Joint Rebuild kit (2pcs)	AXA1420	7x15mm Post - Grey (2pcs)
AX30464	AX10 Scorpion Universal Set (2pcs)	AXA1421	7x20mm Post - Grey (2pcs)
AX30490	AX10 Scorpion Outrunner Motor Plate	AXA1422	7x25mm Post - Grey (2pcs)
AX30492	AX10 Scorpion Rear Steer Kit	AXA1423	7x30mm Post - Grey (2pcs)
AX30494	Aluminum Rear Axle Lockout (2pcs)	AXA1424	7x35mm Post - Grey (2pcs)
AX30495	Aluminum C Hub Carrier - Black (2pcs)	AXA1425	7x40mm Post - Grey (2pcs)
AX30496	Aluminum Knuckle - Black (2pcs)	AXA1426	7x45mm Post - Grey (2pcs)
AX30578	Pinion 48DP 20 T	AXA1427	7x50mm Post - Grey (2pcs)
AX4000	Axial War Wagon Truck Body .060 Pre-Cut Clear	AXA1428	7x55mm Post - Grey (2pcs)
AX4001	Axial Baja Buzzard Truck Body .060 Pre-Cut Clear	AXA1429	7x60mm Post - Grey (2pcs)
AX4002	Axial Diablo Truck Body .060 Pre-Cut Clear	AXA1430	7x65mm Post - Grey (2pcs)
AX4004	B-17 Betty Truck Body (Clear)	AXA1431	7x70mm Post - Grey (2pcs)
AX4007	B-17 Betty Truck Body .040"-uncut (Clear)	AXA176	Screw Shaft M3x2.5x13mm (10pcs)
AX4008	Axial Baja Buzzard Truck Body - .040" (Clear)	AXA443	M3x6mm Tapping Hex Socket Button Head - Black (10pcs)
AX4010	Axial Dingo Truck Body - .040" uncut (Clear)	AXA669	M3x20mm Binder Head - Black (10pcs)
AX4010R	Axial Dingo Truck Body - .040" uncut (Clear) - Body Only	Pro-Line Tires and Memory Foam	
AX4014	Axial XC-1 Rock Crawler Body - .040" (clear)	1157	Pro-Line 1.9 Tire - M2 Compound
AX4016	34 Rat Rod Truck (Clear)		
AX4017	Axial Baja Buzzard Truck Body - .040" (Pre-printed) - Green		
AX4018	Axial Baja Buzzard Truck Body - .040" (Pre-printed) - Orange		
AX4019	Axial Baja Buzzard Truck Body - .040" (Pre-printed) - Blue		
AX4023	Axial Body Stiffeners		
AX80039A	1/10th Scale Front Plate Bumper Set		
AX80039B	1/10th Scale Rear Plate Bumper Set		
AX80040	1/10th Scale Fender Flare Set		
AX80041	1/10th Scale Rock Rails Set		
AX80042	1/10th Scale Roll Cage		
AX80043	SCX10 RTR Links Parts Tree		
AX8078	Axial Hub Cover Set - White (4pcs)		
AX8079	Axial Hub Cover Set - Black (4pcs)		
AX8080	Axial Hub Cover Set - Satin Chrome (4pcs)		
AX8081	Axial Hub Cover Set - Black Chrome (4pcs)		
AX8087	Axial 1.9 8 Hole Beadlocks - Black (2pcs)		
AX8088	Axial 1.9 8 Hole Beadlocks - Satin Chrome (2pcs)		

Warranty Info

Axial Limited Warranty (USA)

Your Axial product is warranted to be free of defects in materials and workmanship when new. This warranty does not cover damages due to normal wear and tear, user's failure to perform routine maintenance, user error of assembly or installation, user modifications, addition of aftermarket parts or option parts. This warranty lasts as long as the original purchaser owns the product, and is not transferable (Verified by dated itemized sales receipt). In the event of a defect under this warranty, Axial will, at our discretion, repair or replace the product, provided our inspection indicates that an original defect exists. Axial reserves the right to replace any product which is no longer available with a product of comparable value and function. If Axial determines the repair is not covered under warranty guidelines, there could be a charge applied for the repair and return shipping charges.

International Customers Warranty

Please return product to the dealer where the purchase was made. If your Axial product purchase was made through an on-line retailer, any warranty issues must be taken care of by that retailer. Axial assumes no responsibility for Axial products sold internationally by on-line retailers.

Service

If you need service on your Axial product here are some simple steps to follow when sending in product in for Warranty/ Repair.

STEP 1:

Contact Axial Customer Service at 949-600-8642 Ext: 206 to receive a Return Merchandise Number (RMA#). **Note:** Axial requires the RMA# to be placed on the return merchandise box when shipped to Axial.

STEP 2:

Please write a short note explaining the issue you experienced with the product.

STEP 3:

Include your return address with a daytime phone number and /or e-mail address.


STEP 4:

Please include a Money Order in the amount \$10.00 made payable to Axial for return shipping costs although If product is found to be under Axial Warranty coverage, the \$10.00 will be refunded to you.


PLEASE NOTE: Tuning issues are not covered under the Axial Warranty and shipping fee's do apply.

Please allow 5-10 working days for product to be returned. Axial ships using United Postal Service Priority mail or UPS Ground. Any expedited shipping must be arranged and prepaid by customer. Axial will not be responsible for lost or damaged packages.


Option Parts

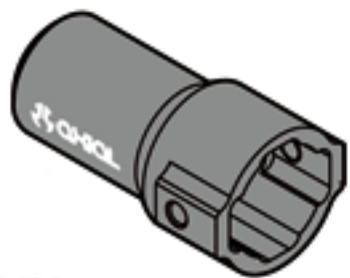

AX30494
Aluminum Straight Axle Adapter

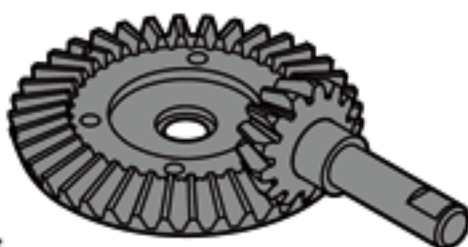

AX30395
Heavy Duty Bevel Gear Set

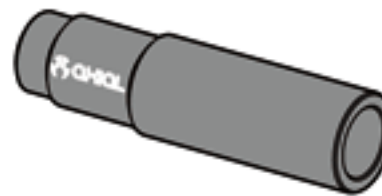

AX30117
Aluminum Shock Body 10x38mm



AX30114
Aluminum Shock Reservoir-SCX10




AX30501
Driveshaft ring w/setscrews



AX30495
Aluminum C Hub Carrier



AX30115
10mm Aluminum Preload Collar

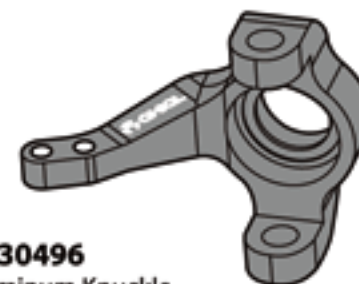

AX30496
Aluminum Knuckle



AX30482
AX10 Scorpion Motor Plate



Spring

AX30205 12.5x40mm 2.7 lbs/in - Super Soft (Red)
AX30206 12.5x40mm 3.6 lbs/in - Soft (White)
AX30207 12.5x40mm 4.08 lbs/in - Medium (Green)
AX30208 12.5x40mm 5.44 lbs/in - Firm (Yellow)
AX30209 12.5x40mm 6.81 lbs/in - Super Firm (Blue)



Spring

AX30200 12.5x20mm 3.6 lbs/in - Super Soft (Red)
AX30201 12.5x20mm 4.32 lbs/in - Soft (White)
AX30202 12.5x20mm 5.44 lbs/in - Medium (Green)
AX30203 12.5x20mm 6.53 lbs/in - Firm (Yellow)
AX30204 12.5x20mm 7.95 lbs/in - Super Firm (Blue)



AX30464
AX10 Scorpion Universal Joint



AX30484
Transmission Spacer **x1**



AXA1307
7.5x6mm Spacer **x3**



Axial



EVERYBODY NEEDS CLOTHES

MODEL "EXPENSIVE COOKIE" (ALTERED "CREST" SHIRT NOT AVAILABLE)
SIZES FROM SML TO XXL

T-SHIRTS, HATS, BEANIES, AND MORE....

Visit www.axialracing.com
for sizes and more info