

櫻花殺菌消毒碗櫃 Sakura dish dryer and sterilizer

承蒙您購買櫻花產品,非常感謝。


- ■使用前請閱讀本安裝・使用說明書,並正確地使用。
- ■保證卡從商店取回之際,請務必確認是否寫下必要之事項。
- ■因製品改良,可能會使機器本體規格與說明書之内容不同,請事先瞭解之。
- ■請妥善保存本使用說明書,這對不瞭解及發生異常時有幫助。 F74-0485-00

目 錄

1.部品名稱	1
2.安裝前的準備與確認	2
3.安裝方法	4
4.紙巾架的安裝/碗盤架的安裝/啓動確認	5
5.使用方法	6
6.使用注意事項/清潔保養	7
7.異常處理	8
8.性能規格表	9

部品名稱

型號: Q-7562S / Q-7560W

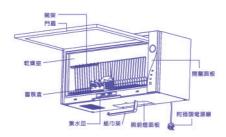

■附屬零件:

名 稱	數量	名 稱	數量
華司 ⑤	6 個	吊鐵固定板 🔧	2 塊
安裝施工圖 三三	1 張	滑軌固定板	2 片
紙巾架 💙	1 件	附 件 包	1包
L型吊鐵 🛇	2 塊		


*選購之配件包,為擺放桌上安裝使用。包含4個腳座及4支螺絲及 1片上蓋板(僅Q-7560W適用)。

安裝前的準備與確認

1.安裝位置:

- (1)殺菌消毒碗櫃應盡可能安裝在鋅盆 上方。(如圖A)
- (2)安裝時務必遠離氣體爐具(如氣體 爐、熱水爐等)及電器(如電暖爐、 電塘爐等) 15公分以上 (如面B)。
- 2.安裝位置的強度與平面度:
 - 安裝前請先確認安裝位置(吊櫃、騰 壁)的強度與平面度。若安裝位置不 牢固會有崩塌的危險。此外平面度若 不獨也會造成歪斜,同時門會產生離 隊、高低不同等情形。(如屬C)

機體淨重	19kg 以下	21kg以下
安裝位置 強度標準	40kg以上	50kg以上

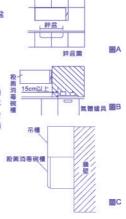

3.配線工程:

- (1)電力配線:
 - 請領有合格執照之水電技術人員施工。
 - ●將雷源插座安裝龍沂機器1.2公尺以内之位置。
 - ●電源開客時將會有5安培的電流通過,所以在配線時須注意其電線線徑大小。

安裝前的準備與確認

(2)接地配線工程:

為防止漏電之意外事故,按照現場 狀況,請選擇以下所列其中一種方 式作演堂的接地。

- ●當電源插座附有接地端子時。
- ●使用接地棒。(如圖D)
- ●機器安裝在有水氣和濕氣多的地 方,以機器本體為基準,依照規




定施工方式進行接地工程。另外請在有水氣的地方安裝漏電斷路器。 (3)接地工程須注意以下事項:

- ●不可將接地線連接於燃氣管、電話線及避雷針的接地回路上:或者 連接於漏電斷路器及其他電器的接地適路。
- ●使用附有接地端子之插座時,請確認接地電阻抗值在100以下。

安裝方法

1.壁掛式安裝方法:

- (1)在騰壁上適當位置,依安裝施工園指示,圓孔留下記號,並續4個ダ1/43 (如置E)。
- (2)取塑膠栓及自攻螺絲,將吊鐵固定板 鎖固於牆上。
- (3)將機器掛入固定板,再將扁圓頭螺絲 鎖入固定板上即可(如圖F)。
- 2. 頂掛式安裝方法:
 - * 按裝前請先確認樹櫃材質若不是實心 ,請勿按裝其上。
 - (1)將安裝施工圖由下往上貼於櫥櫃下, 對準櫥櫃之前緣,依圖上指示之圓孔 做下記號並鑽6個圓孔(如圖G)。
 - (2)取4支M5之螺絲套入華司後,鎖入左 右滑軌固定板内,請勿鎖緊,約鎖入 5-6mm即可(如圖H)。
 - (3)將烘碗機對準滑軌固定板,並往內推至與櫥櫃面齊後,再將螺絲鎖緊。
 - (4)最後,再取2支M5之螺絲套入華司後 ,由櫥櫃上方鎖入滑軌固定板内即完 成(如置 1)。
 - 3.擺放桌上安裝方式:(僅Q-7560 W)請用 附件包內之腳墊,鎖固於烘碗機部,鎖 緊即可,並將上蓋板放置於烘碗機上方 鎖緊即可。(如圖J)



紙巾架的安裝/碗盤架的安裝/啓動確認

紙巾架的安裝

 請將紙巾架依所示位置安裝好,並以螺絲 鎖緊於消毒碗櫃上。

碗盤架的安裝

1. 將筷子盒、碗架等附件依規定安裝。

啓動確認

 請將插頭插入220V插座,確認時間 計時是否顯示,烘乾操作是否正常。

使用方法

1.開闢門的方法:

此殺菌消毒碗櫃門為上級式,開啓時先將手放 置於門把手處,向上教開至完全水平後再向內 推入。關於時時先拉出至完全水平後再向下慢

- 慢關閉。(如圖J)
- *注意:在關閉時請在門完全拉出後再向下關 上,否則極易造成故障。(如圖K)




餐具清洗完畢之後,請徹底將水分瀝乾,並且 將碗盤照順序放置妥當。

- 3.按鍵功能操作說明:
- O-7562S / Q-7560W

(1)開/開鍵:

控制機器殺國/供乾之開與關,當按下開/關鍵 客動電源,按鍵顯示紅色且供乾,時間設定 預設在第一段60分鐘。

- (2)「照明鍵」:
 - 控制偿息单值。
- (3)03奧氧指示燈:
- 臭氧啓動時,藍色指示燈會閃爍。
- (4)運轉時間鍵:
- 可選擇烘乾時間,操作顧序為
 - 60分鐘(按鍵顯示紅色) → 45分鐘(按鍵顯示綠色) → 30分鐘(按鍵顯示藍色), 循環操作。
- 4.烘乾(臭氧)及殺菌時間設定方法:
- Q-7562S / Q-7560W
- (1)烘乾時間有三段—60分鐘/45分鐘/30分鐘可供選擇,隨餐具數量、放置方式及氣溫等不同而有所不同。
- (2)當按下開/關鍵,烘乾時間設定後,機器開始作動:同時,時間指示燈會亮,臭氣 指示燈亦會閃爍。
- (3)三段烘乾時間中前10分鐘為臭氣殺菌操作時間,10分鐘後臭氣操作完畢,該指示煜不再閃煙,機能已動感動電熱供吃系統,待設定時間到達,電熱供乾殺菌完畢,機裁自由職權,時間指示增亦會檢查





使用注意事項/清潔保養

使用注意事項

- 1. 請勿在殺菌消毒碗櫃機下方使用加熱器 具(如氣體爐、電爐等),而機體內熱風 出口亦不得堵塞或者沾到水,否則權易 造成機器故障或供較不良等情形。
- 2.當機器進行殺菌或烘乾時,請勿將門 打開,若有必要,請關機靜待10分鐘 後再打開門。
- 3.耐熱度欠佳之塑膠類餐具以及厚度不均的玻璃杯不要放入烘乾(種易導致餐具發生變形、變質)。
- 4.放置餐具時,餐具之間最好排列整齊 ,由小至大的方向排列,才容易供乾



- 5.請機底的清除餐具上的菜渣及油污,若餐具沒有清除乾淨,仍留有油污 就放入消毒碗櫃內,會使得機內有異味產生,無論任何餐具一定要清洗 乾淨,才可放入機內。
- 6.請勿把超過14公斤以上之重物放入消毒碗櫃中,以至造成櫥櫃崩塌的危險。
- 7.本消毒碗櫃除用來烘乾餐具之外,並不設計用來作為其他烘乾之用途。
- 8.長期不使用消毒碗櫃時,請拔去電源線。
- 9.積存於集水器的水在達到滿水線之前就要倒掉。
- 10.使用過程中微量之臭氧洩漏是正常的,請遠離避至過量吸入。

清潔保養

- 1.禁止使用含有甲苯、酒精、強酸鹼等成份之清潔劑,否則極易傷及機體表面烤漆,而影響整體之美觀性。正確之清洗方式為使用中性的清潔劑來清洗。
- 2.本機門板為塑膠材料,當沾有油污時應使用中性清潔劑來清洗擦乾。

異常處理

- 1.使用中發現異常狀況時,請關閉電源並聯絡代理商。
- 2.處理異常狀況時,請將電源關閉。

狀 況	可能原因	處理方式	
	停電、插頭沒插	檢查電源或插頭	
無電源	機器故障(保險絲燒毀)	聯絡代理商	
J.11.	電源線損壞	電源線損壞時,必須由合格的人員更換,	
	■ 点示 积K 1元 ARE	以避免危險	
	餐具太多、太濕	烘乾時間加長或重覆烘乾	
無法烘乾	電熱器故障(沒有熱風)		
/殺菌	臭氧產生器故障	聯絡代理商	
7 4X IIII	紫外線燈管故障		
	啓動器故障		
時間無法	按鍵開關故障	聯絡代理商	
設定	微電腦故障	聯絡代理商	
ux ~-	電路異常	關掉電源立即聯絡代理商	
有異味	殺菌消毒碗櫃内部不潔	使用抹布擦拭,清潔内部	
	集水器内水已滿	將水倒掉	
内部積水	排水口堵塞	清潔排水口	
滴水	集水器内水已滿	將水倒掉	
噪音大	風扇摩打不良	聯絡代理商	

性能規格表

*注意: 以下列之殺菌消毒碗櫃規格不得以任何形式修改,若違 反此頂規定而造成損害,本公司將不負任何責任。

機型	겓	Q-7562S	Q-7560W	
外型尺寸		800×332×400mm	600×332×400	
淨	重	17kg	10kg	
内壁物料		不能	調	
網架物	勿料	不能	調	
	風標	C)	
製工 製		C)	
		Х	(
	奈米銀	0	X	
烘乾時間 60/45/30 分鐘三段			罐三段設定	
時間調	示	X		
超溫切斷		80°C		
照明		9W PL燈		
電壓		220V		
最大額定功率 270W (瓦)		(瓦)		


Content

1.	Parts Identification	10
2.	Preparation and confirmation before installation	11
3.	Installation method	13
4.	Installation of the paper towel rack / Installation of the utensil rack /	
	Operation checking	14
5.	Operation instruction.	15
6.	Safety caution.	17
7.	Cleaning and maintenance	18
8.	Trouble Shooting.	19
9	Specification	20

Thanks you for purchasing Sakura products.

Please read the installation and instruction manual carefully before operation. Please fill in all necessary information on the warranty card and send it back to us. Please understand that the specification of the actual product may be different from the description in the user manual due to continuous product improvement. Please keep this user manual properly it will help while there is exception problem.

Parts Identification

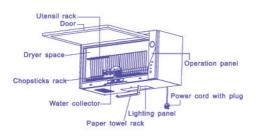

■ Accessories:

Descriptions	Quantity	Descriptions	Quantity
Washer	6pcs	Hanger holder	2pcs
Installation guide	1pcs	Slide holder	2pcs
Paper towel rack	1pcs	Accessories pack	1 pack
L-shape hanger 💫	2pcs		

^{*}Optional accessories are for free standing installation, including 4 foots and 4 screws and one piece of upper cover plate. (Q-7560W only)

Preparation and confirmation before installation

- 1. Installation position:
 - (1) The sterilizer should be installed above the basin (refer to diagram A) (2) The sterilizer should be installed away from gas cookers, gas water heaters or electrical appliances with minimum 15cm distance (refer to diagram B)
- 2.Strength and flatness of the installation position :

installation position:
Confirm the strength and flatness of
the installation position before
installing the sterilizer (upper
kitchen cabinet, wall). The sterilizer
may collapse if the installation
position is not strong enough. Also,
the sterilizer may be slanted or there
may be gaps between the doors, if
the installation position is not flat
enough. (refer to diagram C)

	Basindiag	ram	Diagran	n A
Sterilizer 150	m Above		Diagran	
Upper ki cabinet	tchen		1/,	
Steril	zer	. w	all	

Diagram C

Sterilizer Net Weight Below 19kg Below 21kg Standard strength of the Installation position Above 40kg Above 50kg

3. Wire installation:

(1) Electric wiring:

- The electric wiring installation should be carried out by qualified technicians.
- The electricity extension socket should be installed within 1.2 meter of the sterilizer
- There will be 5 AMP electric current passing the wires when the sterilizer is powered on. Please pay attention to the diameter of the wires.

Preparation and confirmation before installation Installation Method


Sterilizer

High humidity -

(2) Earthing connection:


In order to prevent electricity leakage, please use the following method for appropriate earthing connection:

- When the electricity socket has earthing terminal, please connect to the socket for earthing connection.
- Use earthing wire (refer to diagram D)



(3) Please beware of the followings while carrying out the earthing connection:

- The earthing wire should not be connected to the earthing circuit of the gas pipe, telephone line or lightning rod. Also, it should not be connected to the circuit breaker and earthing circuit of other electric appliances.
- While using the socket with earthing terminal, please make sure the impedance of the earthing connection is below 10Ω.
- 1. Wall-mounted installation method:
- (1) Mark on appropriate position on the wall according to the installation guide. Drill 4 holes with diameter of 1/4 inches. (refer to diagram E)
- (2) Use the plastic plugs and screws to fix the hanger holder on the wall.
- (3) Put the sterilizer onto the hanger holder. Fix it with round head screws. (Refer to diagram F)



30cm Above

Diagram D

Earthing




Installation Method

Installation method for mounting under the kitchen cabinet

*Check if the kitchen cabinet material is solid or not. If it is not solid, please do not install the sterilizer on it.

- (1) Place the installation guide onto the bottom of the kitchen cabinet, aligning with the front edge. Mark and drill 6 holes according to the installation guide (Refer to diagram G)
- (2) Place washer onto 4 pieces of M5 screws, put the screws into the left and right slide holders. Do not completely fasten them. Fasten them into the kitchen cabinet by 5 -6mm. (Refer to diagram H)
- (3) Insert the sterilizer to the slide holders and push it against the wall. Completely fasten the screws while the sterilizer is aligned with the front edge of the kitchen cabinet.
- (4) Finally, place washer onto 2 pieces of M5 screws and fasten them into the slide holder from the top of the kitchen cabinet. (Refer to diagram I).



Sterilizer



*The optional accessories for this free standing installation, including 4 foots and one piece of upper cover plate.

Take out 4 foots from the accessories bag and fasten them into the bottom of the sterilizer and put the upper cover plate on the top of sterilizer and fasten it.



Diagram I

Installation of the paper towel rack / Installation of the utensil rack / Operation checking

Installation of the paper towel rack

Please install the paper towel rack according to the specified location, and fix it on the sterilizer by screws.

Installation of the utensil rack

Install the chopstick rack and utensil rack according to specified location.

Operation checking

Put the plug into the 220V socket, check if there is any display on the timer and if the operation is normal.

Operation instruction

1. Opening / Closing the door:

To open the door, lift up the door using the bottom door handle, until it is completely horizontal to the sterilizer, then push the door inside the sterilizer.

To close the door, pull out the door until it is completely horizontal to the sterilizer, then slowly put down the door.(Refer to diagram J)

Caution: Pull out the door completely before closing it, or it will easily cause damages. (Refer to diagram K)



Completely dry the utensils after cleaning them. Then, put the utensils in the sterilizer in order.





(1) ON / OFF button:

For controlling the power on / off of the sterilizer. While pressing the ON / OFF button to operate the sterilizer, the button will be shown red and warming function will be started. The default duration is set at 60 minutes.

(2) Lighting button:

For controlling the on / off of the sterilizer lamp.

(3) O3 ozone light indicator:

While ozone sterilizing is operated, the light indicator will blink in blue.

(4) Operating duration button

It could be used to select the warming duration.

The circulating order for the duration will be 60 minutes (Red shown on the button) → 45 minutes (Green shown on the button)

→ 30 minutes (Blue shown on the button), in a circulation ordering method.





Operation instruction

- 4. Setting the warming (Ozone) and sterilizing duration:
- Q-7562S / Q-7560W
- (1) There are three warming duration for selection (60 minutes / 45 minutes /30 minutes). The duration will be different depending on the number of utensils, storing order and temperature.
- (2) After pressing the ON/OFF button and setting the warming duration, the sterilizer will start to operate. The duration light indicator will be turned on and the ozone light indicator will be blinked.
- (3) In the 3 warming duration periods, the first 10-minute is the ozone sterilization. After that, the ozone sterilization will stop and the light indicator will not blink. The sterilizer will automatically start the electrical warming system. While the preset time is reached, the electrical warming and sterilizing will stop and the sterilizer will turn off automatically. The operation duration indicator will turn off as well.

Safety Caution

Safety Caution

- Do not use any heating equipment (e.g. Gas cooker, electrical oven) underneath the sterilizer. The ventilation outlet should not be stuck or in contact with water, or the sterilizer will easily be damaged.
- 2.Do not open the door while the sterilizer is operating. If necessary, turn off the sterilizer and wait for 10 minutes before opening the door.
- Plastic utensils with low heat-resistance or glasses with uneven thickness should not be put in the sterilizer, or they will easily be deformed.
- The utensils should be stored in the sterilizer in ascending order for easy warming.
- Please clean the utensils completely before storing them in the sterilizer or peculiar smell will be generated.
- 6.Do not store objects with weight over 14 kg in the sterilizer to avoid collapse.
- The sterilizer should not be used for any other purposes apart from sterilizing the utensils.
- If the sterilizer will be left idle for a long period, please unplug the power cord from the socket.
- The water stored in the water collector should be clear before reaching the "Full" line.
- It is normal for a little ozone leakage during operation. Please stay away from the sterilizer to avoid excessive intake.



Cleaning and maintenance

- Do not use alcoholic, alkaline or corrosive detergent to clean the sterilizer, or it will damage the sterilizer surface. Use neutral detergent to clean the surface of the sterilizer.
- The door of the sterilizer is made of acrylic material. Use neutral detergent to clean the door if it is greasy.

Trouble Shooting

- If there are any exceptional problems while operating the sterilizer, please turn it off and contact your dealer for assistance.
- 2. Please turn off the sterilizer while fixing the problems.

Problems	Possible reasons	Remedies	
	Interruption of power supply or the socket is unplugged	Check the power supply and the socket	
No power supply	The sterilizer is malfunction (Fuse burnt)	Contact your dealer for assistance	
	Power cord is damaged	The power cord should be replaced by qualified technicians to avoid danger	
	Too many utensils or the utensils are too wet	Prolong the warming / sterilizing duration or repeat the warming operation	
Cannot operate the warming / sterilizing function	The electrical radiator is malfunction (No warm air)	Contact your dealer for assistance	
	The ozone generator is malfunction		
	The ultra-violet light is malfunction		
	The initiator is malfunction		
	The ON / OFF button is malfunction	Contact your dealer for assistance	
Time could not be set	The micro-computer is malfunction		
Time dealer not be det	Circuit malfunction	Turn off the sterilizer and contact your dealer immediately	
Peculiar smell	Insanitary inside the sterilizer	Clean the inside of the sterilizer by soft rag	
reculiar smell	The water collector is full	Clear the water collector	
Water trapped inside the sterilizer	The scupper is stuck	Clear the scupper	
Water dripped from the sterilizer	The water collector is full	Clear the water collector	
Noisy	The fan motor is malfunction	Contact your dealer for assistance	

Specification

* The following specification should not be amended by any means.
We will not be liable for any damages resulting from the amendment.

Specification		Q-7562S	Q-7560W
Dimensions		800×332×400mm	800X332X400mm
Net Weight		17kg	10Kg
Inner cavity material		Stainless steel	
Utensil rack materia	al	Stainless steel	
	Warm air	0	
01	Ozone	0	
Sterilizing method	Ultra-violet	Х	
	Nanotech	0	×
Warming duration		60/45/30	
Time display		X	
Overheat protection temperature		80°C	
Lighting		9W	
Voltage		220V	
Maximum output power		270W	

總代理:安力貿易有限公司 Sole Agent: Energy Trading Co., Ltd.

地址:香港九龍彌敦道 469-471號 新光商業大廈十三字樓 Address:13/F, Sunbeam Commercial Building,

469-471, Nathan Road, Kowloon, H.K. Tel: (852)2300-1210

Fax: (852)2300-1210

客戶服務熱線:(852)2667-6662

Customer Service Hotline: (852)2667-6662

Website:www.sakuraliving.com.hk