SEAMCOM
Nahtlose Telekommunikation

MOTOTRBO™

DM4400e
DM4401e
DM4600e
DM4601e






Parts List

MOTOROLA SOLUTIONS

- DM4000e Radio
- DM4400e / DM4401e Numeric Display Control Head
- DM4600e / DM4601e Color Display Control Head

DM4000e Radio

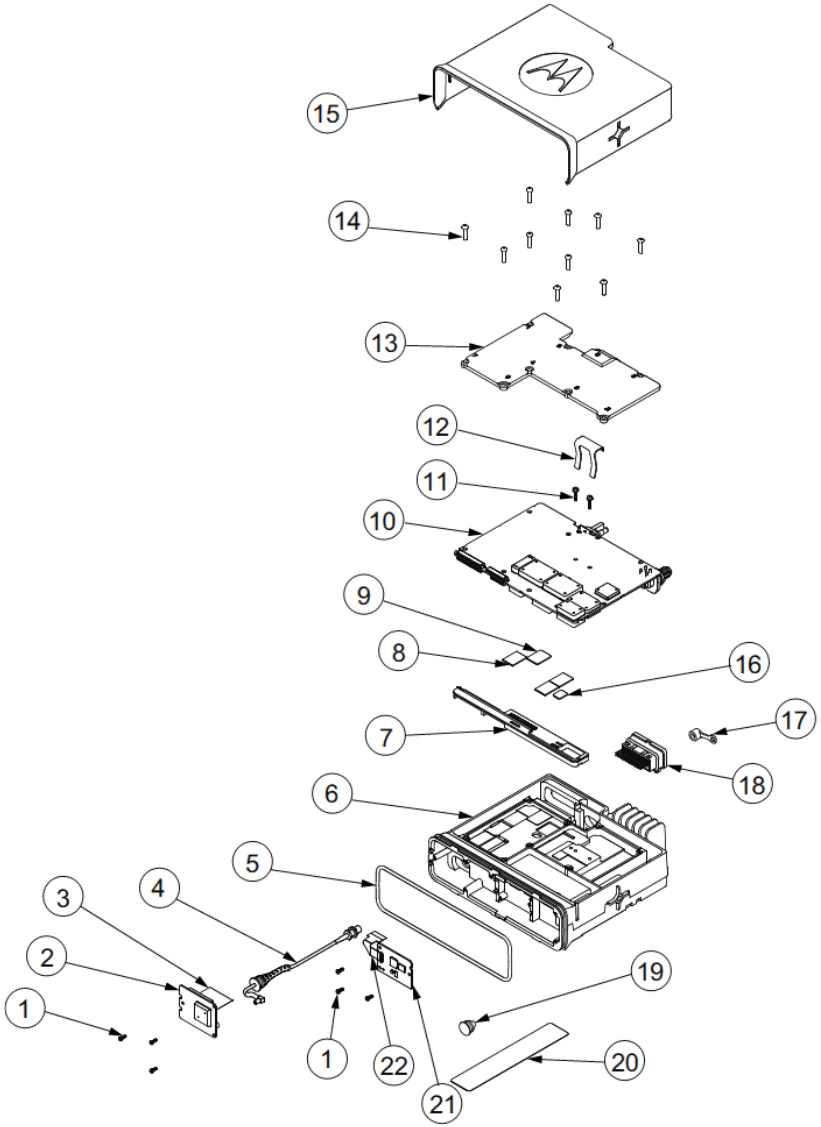


DM4000e Radio

Item	Description	Part Number
1	Screw - M2x0.4x6mm (Bluetooth/GNSS And/Or Option Board Only)	0310909E03
2	Bluetooth/Wi-Fi/GNSS Expansion Board	PMLN7252_S*
3	Flex, Expansion Board (Bluetooth/GNSS Only)	Included in PMLN7252_S
4	GNSS Cable Assembly	Included in PMLN7252_S
5	O-Ring, Control Head	3216200H01
6	Chassis, Die Cast	27009303003
7	Acoustic Plug	32012172001
8	Thermal Pad, Regulator (QTY:3)	75012018001
9	Thermal Pad, Audio PA	75012059001
10	PCB, Transceiver	See Section 1.5 to 1.11 to identify proper board in the Basic Service Manual
11	Screw - M2.5x0.45x12mm with Washer	3012037001
12	Clip, DC Retention	42009281001
13	Main Shield, Die Cast	26009377001
14	Screw - M3x0.5x13mm	0310943J12
15	Main Cover and Gasket Assembly	15012083001
16	Thermal Pad, Final Driver	75012058002
17	GNSS Dust Cap	3216338H01
18	Accessory Connector	42009282001
19	GNSS Plug	32009445001
20	GNSS Nameplate	54012193001
21	Generic Option Board Connect Plus Option Board MPT Option Board	PMLN7324_S ** PMLN7395_S ** PMLN7394_S **
22	Flex, Option Board	84012231001

* Includes:
- Item No. 1 (Screw - M2x0.4x6mm)
- Item No. 2 (Bluetooth/Wi-Fi/GNSS Expansion Board)
- Item No. 3 (Flex, Expansion Board)
- Item No. 4 (GNSS Cable Assembly)
- Item No. 17 (GNSS Dust Cap)
- Item No. 20 (GNSS Nameplate)

** Includes:
- Item No. 1 (Screw - M2x0.4x6mm)
- Item No. 21 (Generic Option Board/Connect Plus Option Board/MPT Option Board)
- Item No. 22 (Flex, Option Board)


DM4400e / DM4401e Numeric Display Control Head

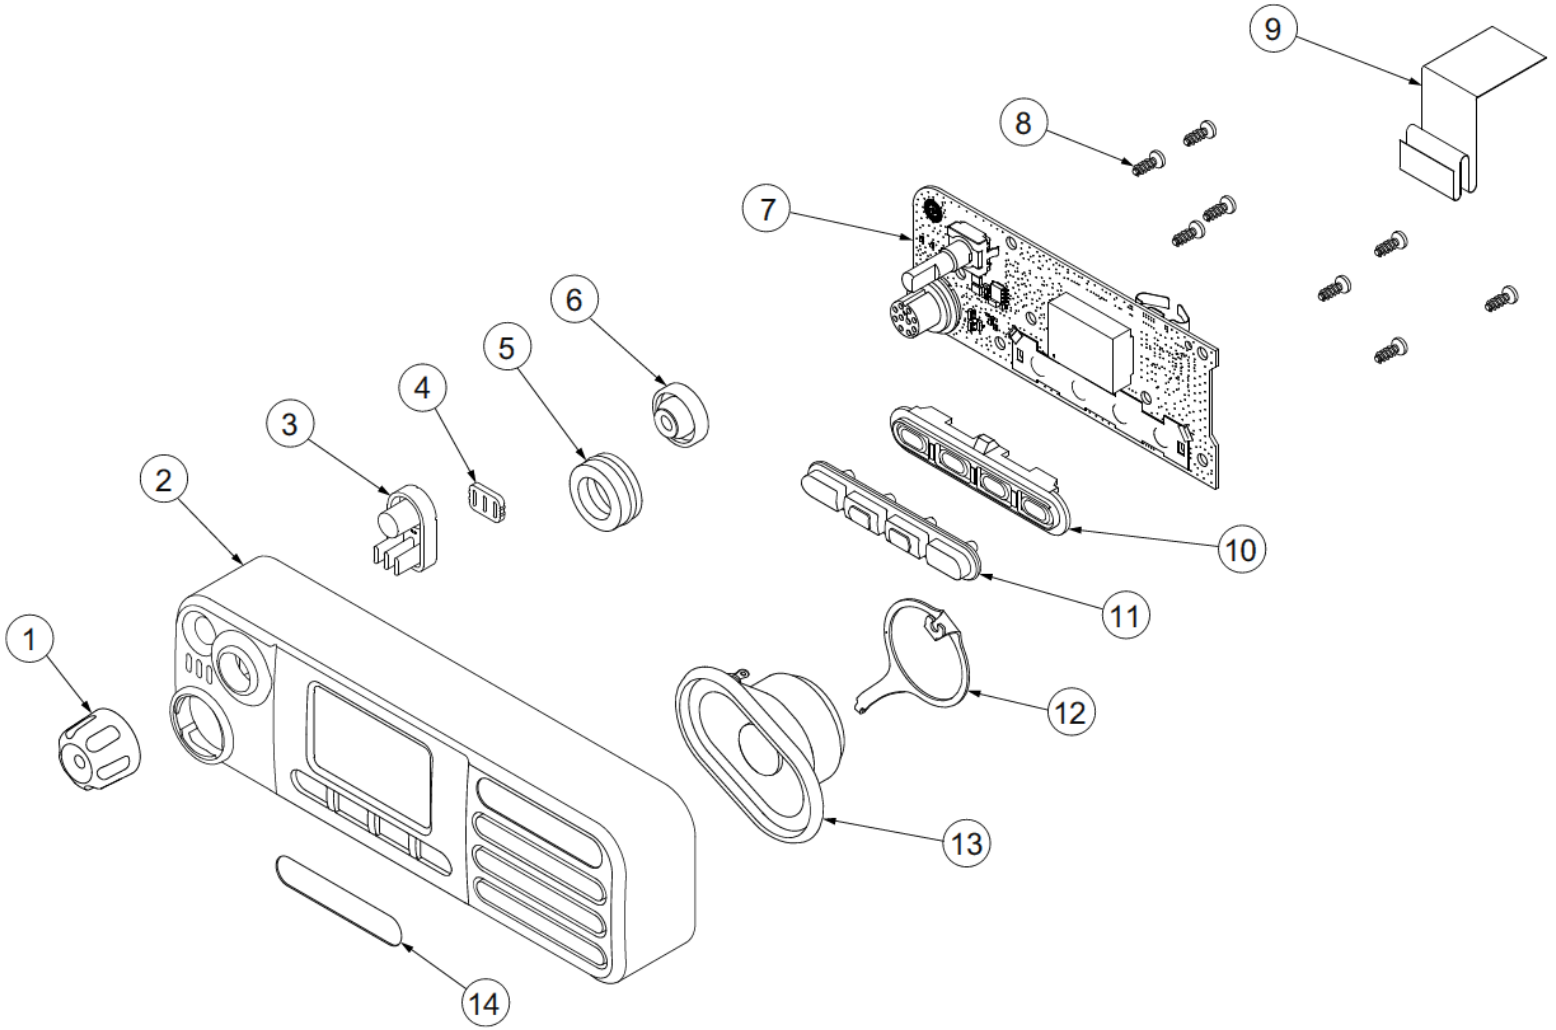

DM4400e / DM4401e Numeric Display Control Head

Item	Description	Part Number
1	Volume/Channel Knob Assembly	36012018001
2	Housing Assembly	0104045J48
3	Power Button	38012007001
4	Light Barrier, Power Button	7012020001
5	Mic Jack Seal	3264133H01
6	Volume Encoder Seal	32012140001
7	PCB Assembly	0104056J59
8	Screw - K30x1.34x8mm	0371370L01
9	Control Head Flex Cable	30012045002
10	Keypad Frame	42012025001
11	Keypad	75012060001
12	Speaker Retainer	42012030001
13	Speaker	5015134H02
14	Nameplate Front Label for DM4400e Nameplate Front Label for DM4401e	33012017023 33012017022

DM4600e / DM4601e Color Display Control Head

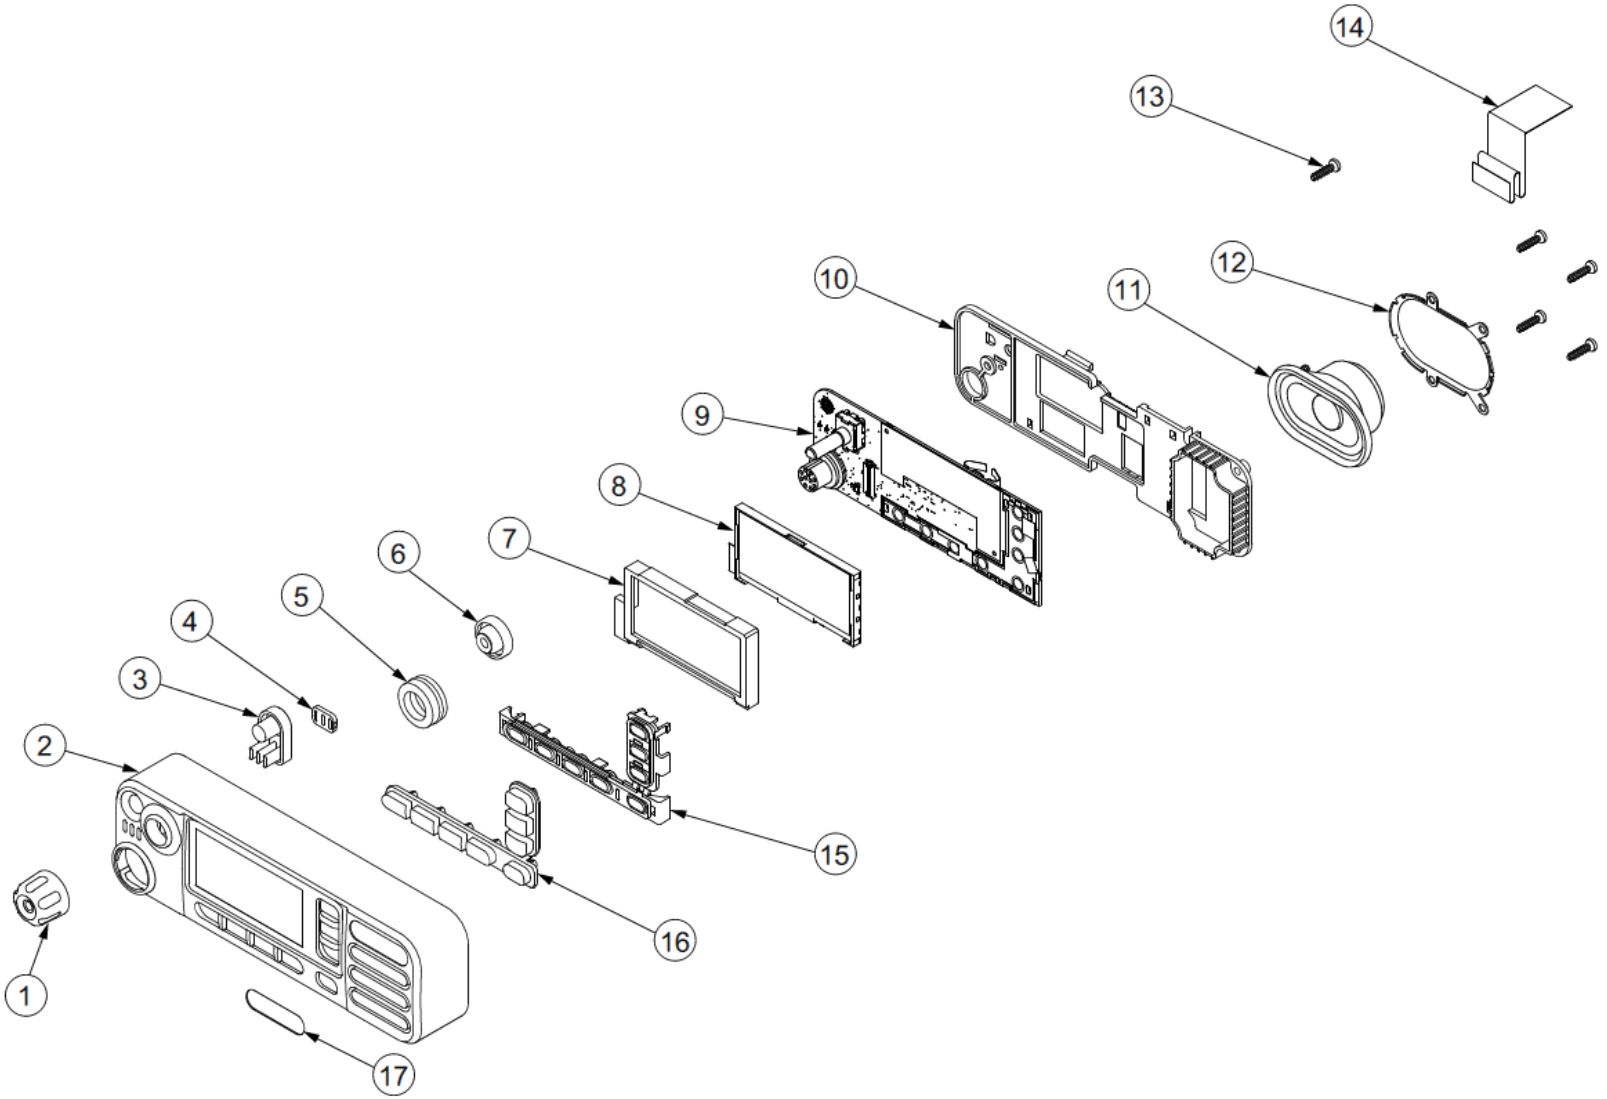

DM4600e / DM4601e Color Display Control Head

Item	Description	Part Number
1	Volume/Channel Knob Assembly	36012018001
2	Housing Assembly	0104045J47
3	Power Button	38012007001
4	Light Barrier, Power Button	7012020001
5	Mic Jack Seal	3264133H01
6	Volume Encoder Seal	32012140001
7	Colour Display Pad Gasket	32012094001
8	Colour Display	72012017001
9	PCB Assembly	0104056J39
10	PCB Retainer	42012024001
11	Speaker	5015134H02
12	Speaker Retainer	42012023001
13	Screw - K30x1.2x12mm	3012038001
14	Control Head Flex Cable	30012045002
15	Keypad Frame	42012026001
16	Keypad	75012061001
17	Nameplate Front Label for DM4600e Nameplate Front Label for DM4601e	33012017025 33012017024