



Oculus Go operation manual

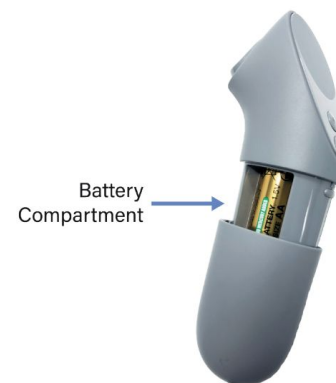

1. Package contents and controls overview

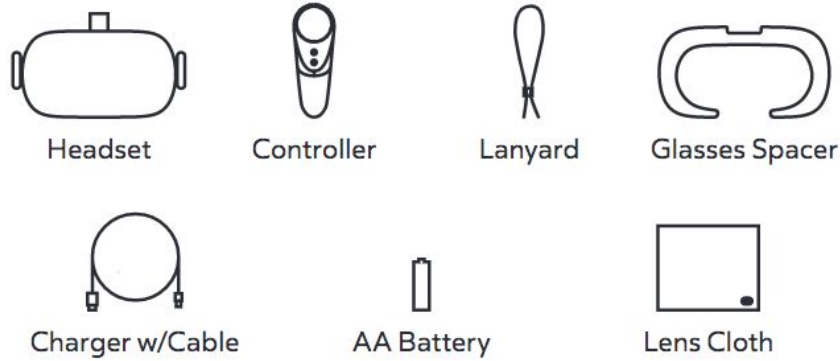

2. Charging

- 1) Plug in the supplied micro USB cable and connect to a computer or USB charger.



- 2) Refer to the below table to get the battery status **while the headset is plugged in**:

Green	Solid	Battery is Charging (Above 95%)
Orange	Solid	Battery is Charging (Below 95%)

3. Before use

- 1) Ensure the headset is charged
- 2) Install the eyeglasses spacer if needed. You can try the headset on without the spacer first if your vision is close to perfect.
 - 2.1) The following link provides a step-by-step guide on installing the eyeglasses spacer: <https://youtu.be/YA5U8MbkUrE>
- 3) Wipe the lenses with provided lens cloth.
- 4) Ensure the controller contains the AA battery and the lanyard is attached.

4. Operation

- 1) Put the headset on adjusting the straps as necessary – it should fit comfortably and shouldn't apply too much pressure on your face and head.
 - 2) Press the power button until the Oculus appear on the screen.
 - 3) If prompted, long-press the oculus/menu button on the controller to recenter the screen. (The system can give a warning of low controller battery charge in which case the AA battery should be replaced).
- 3.1) Controller use:

Oculus/menu button - short press brings up the menu bar, long press recenters the menu in the direction the controller is pointing to

Back button - returns to the previous menu

Trigger button - equivalent to ok/enter command (eg. press a button in program)

Touchpad - used for scrolling (up/down/left/right)



- 4) Once at the home screen, adjust your view by slowly moving the headset up/down and left/right until the image is clear.
- 5) The headset display can go to sleep (if taken off for example) – short press the power button to turn the display back on. Alternatively a sensor inside the headset reactivates it every time it's put on.


- 6) The headset has built in speaker system - volume can be adjusted using the volume button located on the top of the headset.
- 7) Headphones can be used if needed – the headphone jack inlet is located next to the micro USB port.

4.1 Light indicator meanings (*while in operation*)

COLOR	STATE	MEANING
Red	Solid	Low Battery (Less than 15%)
White	Solid	Screen is On
White	Blinking	Oculus Go is Rebooting
Orange	Solid	Headset is Starting Up

5. Connecting to Wi-Fi

Wi-Fi connection is required to operate the headset, navigate to **Settings** then **Wi-Fi** to choose a network:

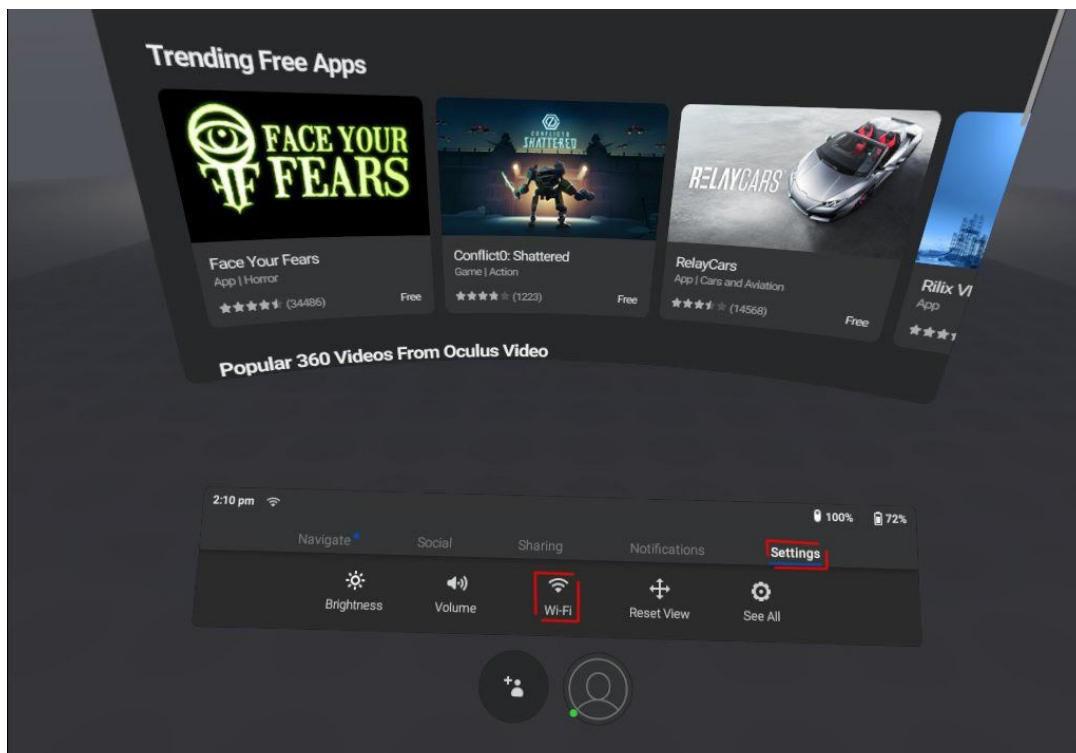

The following parameters should be used **when connecting to AirYorkPLUS** Wi-Fi:

EAP method: PEAP

Phase 2 authentication: None

CA certificate: Use system certificate

Domain: yorku.ca

Identity: your yorku user name **excluding** @my.yorku.ca


Anonymous identity: *skip*

Password: your yorku password


Advanced: *skip*

6. 360 video file transfer

- 1) File transfer is **only available on Windows machines**.
- 2) **When powered on** plug the headset into a Windows PC using the USB cable.
- 3) The headset will show a prompt requesting to allow access to data – press **Allow**. If no prompt shown disconnect the cable from the computer and plug it in again.

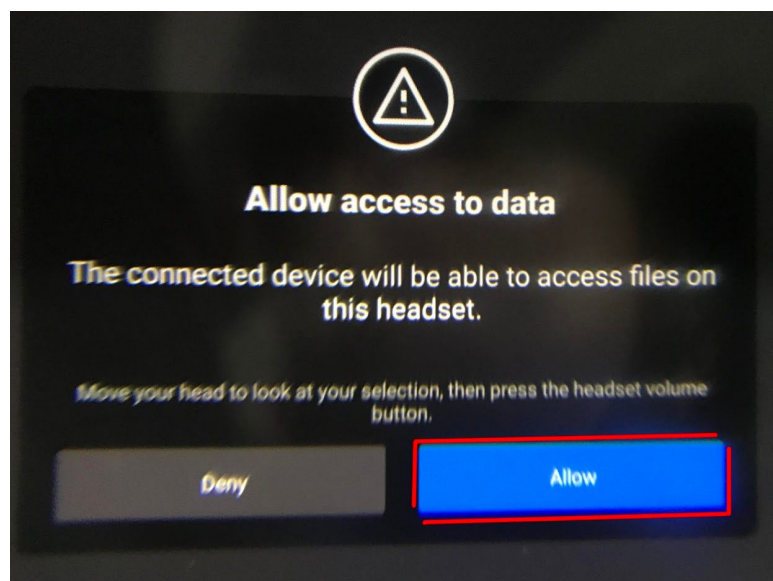


- 4) The headset will now show on the computer as an external drive with subfolders under the name 'VR-Headset'.

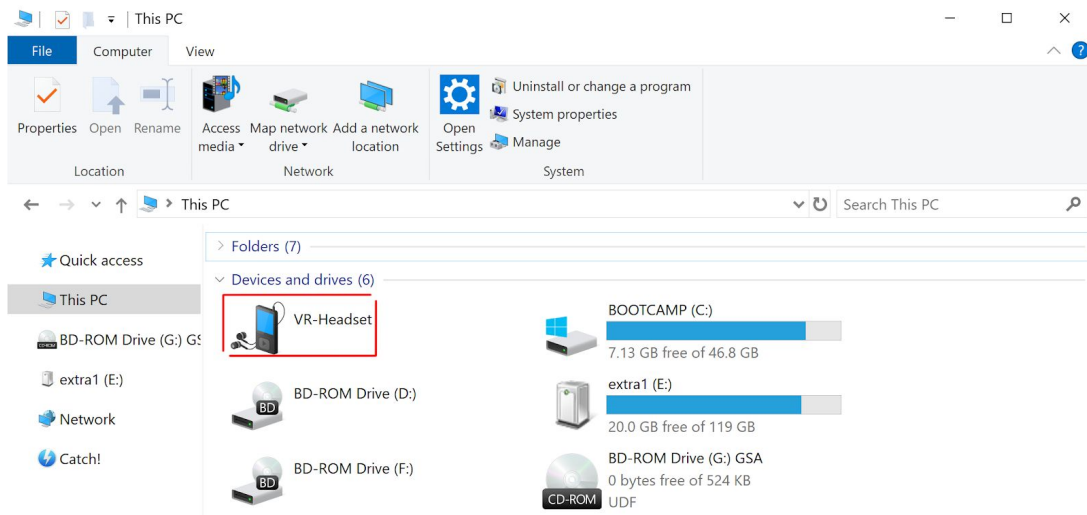

- 5) Navigate to *VR-Headset / Internal shared storage / Movies*.
 6) Paste 360 video files to the directory.
 7) The files are now available for viewing on the headset.

7. Watching 360 video


- 1) Select **Library** on the menu bar on the bottom (*you can access the menu bar from any place in the system by pressing the oculus/menu button on the controller. Select submenu **Navigate** to access options such as Home, Library etc.*).
- 2) Open **Oculus Gallery** application. (see the image on the next page)

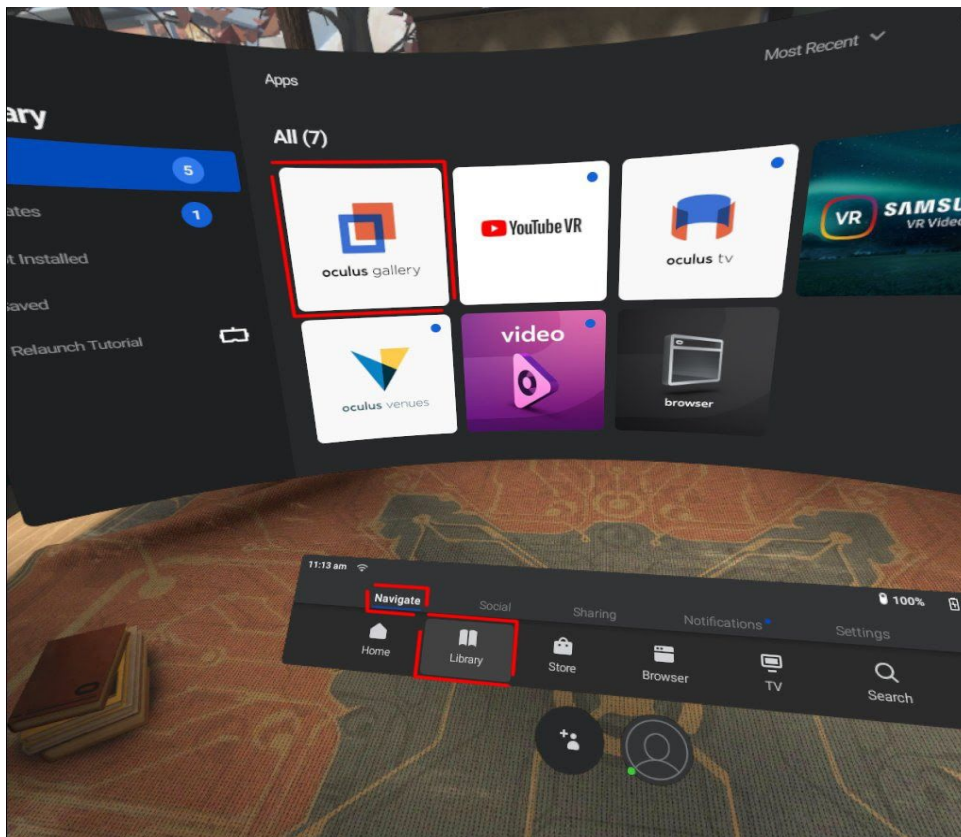

3) Select **Internal Storage** to open device's media file storage



4) Transferred videos are shown here. **Click on a video** to start playback.

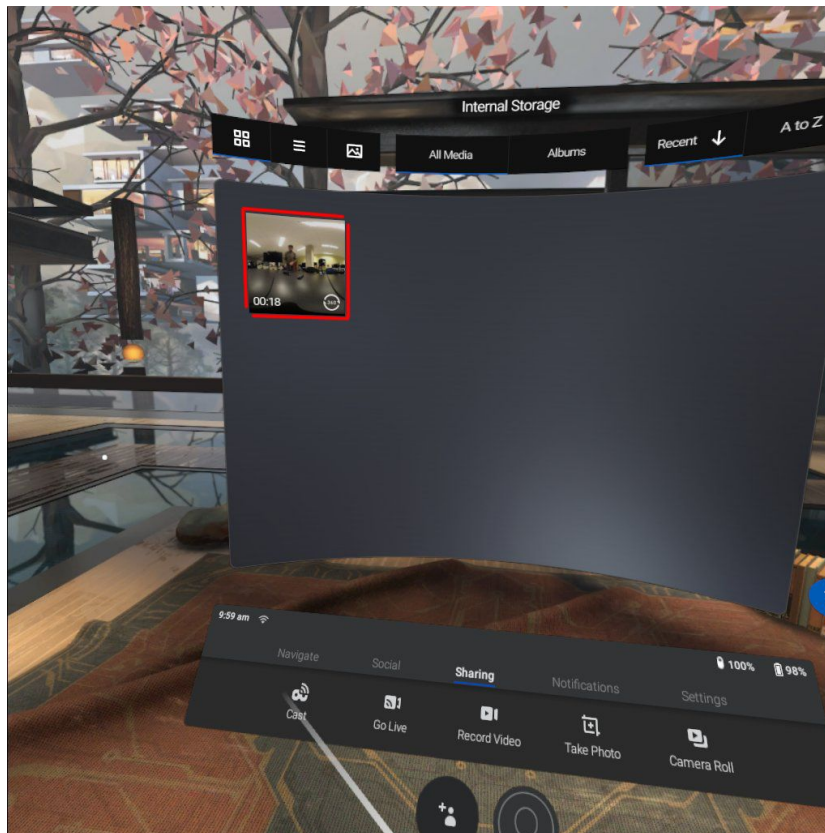

5) The video will start.

5.1) (Optional) Sometimes the video can be presented in 2D flat screen format - press the **2D button** on the playback menu bar, then press **360 button**:





8. Safety instructions from the manufacturer

The full list of health and safety instructions can be found at https://www.oculus.com/legal/health-and-safety-warnings/?locale=en_US